

**OCAS-DRI-DBS-19-19
NEW CAR ASSESSMENT PROGRAM
DYNAMIC BRAKE SUPPORT SYSTEM CONFIRMATION TEST**

2019 Subaru Crosstrek Hybrid

DYNAMIC RESEARCH, INC.

355 Van Ness Avenue
Torrance, California 90501



12 December 2019

Final Report

Prepared Under Contract No.: DTNH22-14-D-00333

**U. S. DEPARTMENT OF TRANSPORTATION
National Highway Traffic Safety Administration
Office of Crash Avoidance Standards
1200 New Jersey Avenue, SE
West Building, 4th Floor (NRM-200)
Washington, DC 20590**

Prepared for the Department of Transportation, National Highway Traffic Safety Administration, under Contract No. DTNH22-14-D-00333.

This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings, and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturer's names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products of manufacturers.

Prepared By: J. Lenkeit and J. Robel
Technical Director Test Engineer
Date: 12 December 2019

1. Report No. OCAS-DRI-DBS-19-19	2. Government Accession No.	3. Recipient's Catalog No.	
4. Title and Subtitle Final Report of Dynamic Brake Support System Testing of a 2019 Subaru Crosstrek Hybrid.		5. Report Date 12 December 2019	
		6. Performing Organization Code DRI	
7. Author(s) J. Lenkeit, Technical Director J. Robel, Test Engineer		8. Performing Organization Report No. DRI-TM-18-142	
9. Performing Organization Name and Address Dynamic Research, Inc. 355 Van Ness Ave, STE 200 Torrance, CA 90501		10. Work Unit No.	
		11. Contract or Grant No. DTNH22-14-D-00333	
12. Sponsoring Agency Name and Address U.S. Department of Transportation National Highway Traffic Safety Administration Office of Crash Avoidance Standards 1200 New Jersey Avenue, SE, West Building, 4th Floor (NRM-200) Washington, D.C. 20590		13. Type of Report and Period Covered Final Test Report May - December 2019	
		14. Sponsoring Agency Code NRM-200	
15. Supplementary Notes			
16. Abstract These tests were conducted on the subject 2019 Subaru Crosstrek Hybrid in accordance with the specifications of the Office of Crash Avoidance Standards most current Test Procedure in docket NHTSA-2015-0006-0026; DYNAMIC BRAKE SUPPORT PERFORMANCE EVALUATION CONFIRMATION TEST FOR THE NEW CAR ASSESSMENT PROGRAM, October 2015. The vehicle passed the requirements of the test for all four DBS test scenarios.			
17. Key Words Dynamic Brake Support, DBS, AEB, New Car Assessment Program, NCAP		18. Distribution Statement Copies of this report are available from the following: NHTSA Technical Reference Division National Highway Traffic Safety Administration 1200 New Jersey Avenue, SE Washington, D.C. 20590	
19. Security Classif. (of this report) Unclassified	20. Security Classif. (of this page) Unclassified	21. No. of Pages 184	22. Price

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
I. OVERVIEW AND TEST SUMMARY	1
II. DATA SHEETS	2
A. Data Sheet 1: Test Results Summary	3
B. Data Sheet 2: Vehicle Data	4
C. Data Sheet 3: Test Conditions	6
D. Data Sheet 4: Dynamic Brake Support System Operation.....	8
III. TEST PROCEDURES.....	16
A. Test Procedure Overview.....	16
B. General Information.....	21
C. Principal Other Vehicle.....	24
D. Foundation Brake System Characterization.....	25
E. Brake Control.....	26
F. Instrumentation.....	27
Appendix A Photographs	A-1
Appendix B Excerpts from Owner's Manual.....	B-1
Appendix C Run Logs	C-1
Appendix D Brake Characterization.....	D-1
Appendix E Time Histories.....	E-1

Section I OVERVIEW AND TEST SUMMARY

Dynamic Brake Support (DBS) systems are a subset of Automatic Emergency Braking (AEB) systems. DBS systems are designed to avoid or mitigate consequences of rear-end crashes by automatically applying supplemental braking on the subject vehicle when the system determines that the braking applied by the driver is insufficient to avoid a collision.

DBS systems intervene in driving situations where a rear-end collision is expected to be unavoidable unless additional braking is realized. Since DBS interventions are designed to occur late in the pre-crash timeline, and the driver has already initiated crash-avoidance braking, DBS systems are not required to alert the driver that a DBS intervention has occurred. In addition to sensors monitoring vehicle operating conditions, such as speed, brake application, etc., DBS systems employ RADAR, LIDAR, and/or vision-based sensors capable of detecting surrounding vehicles in traffic. Algorithms in the system's Central Processing Unit (CPU) use this information to continuously monitor the likelihood of a rear-end crash, and command additional braking as needed to avoid or mitigate such a crash.

The method prescribed by the National Highway Traffic Safety Administration (NHTSA) to evaluate DBS performance on the test track involves three longitudinal, rear-end type crash configurations and a false positive test. In the rear-end scenarios, a subject vehicle (SV) approaches a stopped, slower-moving, or decelerating principal other vehicle (POV) in the same lane of travel. For these tests, the POV is a strikeable object with the characteristics of a compact passenger car. The fourth scenario is used to evaluate the propensity of a DBS system to inappropriately activate in a non-critical driving scenario that does not present a safety risk to the SV occupant(s).

The purpose of the testing reported herein was to objectively quantify the performance of a Dynamic Brake Support system installed on a 2019 Subaru Crosstrek Hybrid. This test to assess Dynamic Brake Support systems is sponsored by the National Highway Traffic Safety Administration under Contract No. DTNH22-14-D-00333 with the New Car Assessment Program (NCAP).

Section II
DATA SHEETS

DYNAMIC BRAKE SUPPORT SYSTEM
DATA SHEET 1: TEST RESULTS SUMMARY

(Page 1 of 1)

2019 Subaru Crosstrek Hybrid

SUMMARY RESULTS

VIN: JF2GTDEC5KH3xxxx

Test Date: 6/4/2019

**Test 1 - Subject Vehicle Encounters
Stopped Principal Other Vehicle**

SV 25 mph: Pass

**Test 2 - Subject Vehicle Encounters
Slower Principal Other Vehicle**

SV 25 mph POV 10 mph: Pass

SV 45 mph POV 20 mph: Pass

**Test 3 - Subject Vehicle Encounters
Decelerating Principal Other Vehicle**

SV 35 mph POV 35 mph: Pass

**Test 4 - Subject Vehicle Encounters
Steel Trench Plate**

SV 25 mph: Pass

SV 45 mph: Pass

Overall: Pass

Notes:

DYNAMIC BRAKE SUPPORT SYSTEM

DATA SHEET 2: VEHICLE DATA

(Page 1 of 2)

2019 Subaru Crosstrek Hybrid

TEST VEHICLE INFORMATION

VIN: JF2GTDEC5KH3xxxx

Body Style: SUV

Color: Crystal Black Silica

Date Received: 5/20/2019

Odometer Reading: 156 mi

Engine: 2 L Opposed 4

Transmission: CVT

Final Drive: AWD

Is the vehicle equipped with:

ABS	<u>X</u>	Yes	<u> </u>	No
Adaptive Cruise Control	<u>X</u>	Yes	<u> </u>	No
Collision Mitigating Brake System	<u>X</u>	Yes	<u> </u>	No

DATA FROM VEHICLE'S CERTIFICATON LABEL

Vehicle manufactured by: SUBARU CORPORATION

Date of manufacture: 02/19

DATA FROM TIRE PLACARD:

Tires size as stated on Tire Placard: Front: 225/55R18

Rear: 225/55R18

Recommended cold tire pressure: Front: 250 kPa (36 psi)

Rear: 240 kPa (35 psi)

DYNAMIC BRAKE SUPPORT SYSTEM

DATA SHEET 2: VEHICLE DATA

(Page 2 of 2)

2019 Subaru Crosstrek Hybrid

TIRES

Tire manufacturer and model: Falken Ziex ZE001 A/S

Front tire size: 225/55R18

Rear tire size: 225/55R18

VEHICLE ACCEPTANCE

Verify the following before accepting the vehicle:

- All options listed on the “window sticker” are present on the test vehicle.
- Tires and wheel rims are the same as listed.
- There are no dents or other interior or exterior flaws.
- The vehicle has been properly prepared and is in running condition.
- Verify that spare tire, jack, lug wrench, and tool kit (if applicable) is located in the vehicle cargo area.

DYNAMIC BRAKE SUPPORT SYSTEM

DATA SHEET 3: TEST CONDITIONS

(Page 1 of 2)

2019 Subaru Crosstrek Hybrid

GENERAL INFORMATION

Test date: 6/4/2019

AMBIENT CONDITIONS

Air temperature: 32.8 C (91 F)

Wind speed: 0.0 m/s (0.0 mph)

X Windspeed \leq 10 m/s (22 mph)

X Tests were not performed during periods of inclement weather. This includes, but is not limited to, rain, snow, hail, fog, smoke, or ash.

X Tests were conducted during daylight hours with good atmospheric visibility (defined as an absence of fog and the ability to see clearly for more than 5000 meters). The tests were not conducted with the vehicle oriented into the sun during very low sun angle conditions, where the sun is oriented 15 degrees or less from horizontal, and camera "washout" or system inoperability results.

VEHICLE PREPARATION

Verify the following:

All non consumable fluids at 100 % capacity : X

Fuel tank is full: X

Tire pressures are set to manufacturer's recommended cold tire pressure: X

Front: 250 kPa (36 psi)

Rear: 240 kPa (35 psi)

DYNAMIC BRAKE SUPPORT SYSTEM

DATA SHEET 3: TEST CONDITIONS

(Page 2 of 2)

2019 Subaru Crosstrek Hybrid

WEIGHT

Weight of vehicle as tested including driver and instrumentation

Left Front: 519.4 kg (1145 lb)

Right Front 467.2 kg (1030 lb)

Left Rear 425.0 kg (937 lb)

Right Rear 420.0 kg (926 lb)

Total: 1831.6 kg (4038 lb)

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 1 of 8)

2019 Subaru Crosstrek Hybrid

Name of the DBS option, option package, etc. Pre-Collision Braking System
System setting used for test (if applicable): Default - There are no optional settings.

Brake application mode used for test: Hybrid control

What is the minimum vehicle speed at which the DBS system becomes active?

1 mph (Per manufacturer supplied information)

What is the maximum vehicle speed at which the DBS system functions?

100 mph (Per manufacturer supplied information)

Does the vehicle system require an initialization sequence/procedure?

Yes. Initialization procedure requires to drive the vehicle on a public road for about an hour, with the following conditions: dry road surfaces, daylight hours, public road with both left and right lane markings, traffic exists, keeping a comfortable distance from lead vehicles and maintaining posted speed limits.

Will the system deactivate due to repeated AEB activations, impacts or near-misses?

Yes, it will not operate after AEB activating 3 times in one driving cycle. Restart the engine to reactivate.

How is the Forward Collision Warning presented to the driver? Warning light*
(Check all that apply) Buzzer or audible alarm
 Vibration
 Other

* The nature and brightness of the visual alert (see Figure A16) was such that the sensor used to detect the visual alerts was unable to reliably detect the onset of the visual alert.

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 2 of 8)

2019 Subaru Crosstrek Hybrid

Describe the method by which the driver is alerted. For example, if the warning is a light, where is it located, its color, size, words or symbol, does it flash on and off, etc. If it is a sound, describe if it is a constant beep or a repeated beep. If it is a vibration, describe where it is felt (e.g., pedals, steering wheel), the dominant frequency (and possibly magnitude), the type of warning (light, audible, vibration, or combination), etc.

The alerts are staged depending on the urgency of the situation.

Following Distance Warning:

When the system determines that there is a risk of collision, a buzzer sounds repeated short beeps and the indicators on the combination meter display illuminate to warn the driver. The Following Distance Warning operates when Adaptive Cruise Control is not set. When the driver depresses the brake pedal to decelerate and achieves a suitable following distance, the warning is canceled.

First Braking and Warning:

When the system determines that there is a high risk of collision with an obstacle in front, a buzzer sounds repeated short beeps and the indicators on the combination meter display illuminate to warn the driver. Braking control may be activated and in some situations, the engine output may also be controlled. If the system determines that the amount of evasive action (braking, steering, etc.) taken by the driver has reduced the risk of collision, braking activation is canceled.

Secondary Braking and Warning:

If the system then determines that the risk of collision is extremely high, the buzzer changes to a continuous beeping sound and stronger braking control is activated. Despite any evasive action taken by the driver, if the system subsequently determines that a collision is unavoidable, braking and engine output are controlled by the system.

Apply Brake message

Even after the vehicle has stopped, depress the brake pedal. Until the brake pedal is depressed, a message appears and stays in the warning screen area of the combination meter display for approximately 2 minutes. A single continuous beep sounds while the message is displayed.

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 4 of 8)

2019 Subaru Crosstrek Hybrid

- Even if the obstacle is a motorcycle, bicycle or pedestrian, depending on the brightness of the surroundings as well as the relative movement, and aspect or angle of the object, there may be cases when the system cannot detect it.
- When the system determines that operation by the driver (based on accelerator pedal operation, braking, steering wheel angle, etc.) is intended as evasive action
- Vehicle maintenance status (brake systems, tire wear, tire pressure, whether a temporary spare tire is being used, etc.)
- When towing a trailer or another vehicle, etc.
- When the brakes are cold due to outside temperature being low or just after starting the engine.
- When the brakes are overheated on downhill grades (braking performance is reduced)
- When driving in rain or after washing the vehicle (the brakes are wet and braking performance is reduced)
- Recognition conditions of the stereo camera. In particular, the function may be unable to stop the vehicle or may not activate in the following cases.
 - Bad weather (for example heavy rain, a blizzard or thick fog)
 - When visibility is poor due to sand, smoke or water vapor blowing in the wind, or when the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic
 - When driving at night or in a tunnel without the headlights on
 - When driving at night or in a tunnel when there is a vehicle in front that does not have its taillights on
 - When approaching a motorcycle, bicycle or pedestrian at night
 - When ambient light is poor in the evening or early morning
 - When a vehicle, motorcycle, bicycle or pedestrian is outside the area illuminated by the headlights
 - When affected by strong light from the front (for example, sunlight at dawn, sunset or headlight beams, etc.)
 - When the windshield has become fogged, scratched, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected.
 - When fluid has not been fully wiped off the windshield during or after washer use

(continued next page)

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 5 of 8)

2019 Subaru Crosstrek Hybrid

- When the target cannot be correctly recognized because the stereo camera's view is obstructed by water droplets from rain or the window washer, or by the wiper blades.
- When the stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle)
- When the rear aspect of the vehicle in front is low, small or irregular (the system may recognize another part of the vehicle as its rear and will determine operation from that)
 - When there is an empty truck or trailer with no rear and/or side panels on the cargo bed
 - With vehicles that have cargo protruding from their back ends
 - With non-standard shaped vehicles (vehicle transporters or vehicles with a sidecar fitted, etc.)
 - When the height of the vehicle is low, etc.
- When there is a wall, etc. in front of a stopped vehicle
- When there is another object near the vehicle
- When a vehicle, etc. has its side facing you.
- With vehicles that are backing up or with oncoming vehicles, etc.
- When the size and height of an obstacle is smaller than the limitations of the stereo camera's recognition capability
 - With small animals or children, etc.
 - With pedestrians who are sitting or lying down
- When the detected object is a fence or wall, etc. with a uniform pattern (a striped pattern or brick pattern, etc.)
- When there is a wall or door made of glass or a mirror in front
- When the vehicle in front suddenly swerves, accelerates, or decelerates.
- When a vehicle, motorcycle, bicycle or pedestrian suddenly cuts in from the side or suddenly runs in front of you.
- When you suddenly change lanes and your vehicle is immediately behind an obstacle

(continued next page)

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 6 of 8)

2019 Subaru Crosstrek Hybrid

- When there is a vehicle, motorcycle, bicycle or pedestrian in a location close to your vehicle's bumper
- When the speed difference between your vehicle and an obstacle is 4 MPH (5 km/h) or less (As braking is performed once the obstacle is in close proximity to your vehicle, depending on the shape and size of the obstacle, there may be some cases when the obstacle is outside the range of the camera's field of view.)
- When driving on sharp curves, steep uphill grades or steep downhill grades
- When driving on a bumpy or unpaved road
- When there are changes in brightness, such as at a tunnel entrance or exit

The system may not operate correctly under the conditions listed below. When these conditions occur, turn off the Pre-Collision Braking System.

- The tire pressure is not correct.
- The temporary spare tire is installed.
- Tires that are unevenly worn or tires with uneven wear patterns are installed.
- Tires that are the wrong size are installed.
- A flat tire has been fixed temporarily with a tire repair kit.
- The suspension has been modified (including a genuine SUBARU suspension that has been modified).
- An object that obstructs the stereo camera's view is installed on the vehicle.
- The headlights are dirty or they have snow and ice or dirt on them. (Objects are not correctly illuminated and are difficult to detect.)
- The optical axes are not aligned correctly. (Objects are not correctly illuminated and are difficult to detect.)
- The lights including headlights and fog lights have been modified.
- Vehicle operation has become unstable due to an accident or malfunction.
- The brake system warning light is illuminated in red.
- A heavy cargo is loaded onto or inside the vehicle.
- The maximum number of occupants is exceeded.
- The combination meter is not operating properly; such as when the lights do not illuminate, the beeps do not sound, the display is different from when it is normal, etc.

(continued next page)

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 7 of 8)

2019 Subaru Crosstrek Hybrid

In the following situations, turn off the Pre-Collision Braking System. Otherwise the Pre-Collision Braking System may activate unexpectedly.

- When the vehicle is being towed
- When loading the vehicle onto a carrier
- When a chassis dynamometer, free-rollers or similar equipment is used
- When a mechanic lifts up the vehicle, starts the engine and spins the wheels freely
- When passing hanging banners, flags or branches, or when thick/tall vegetation is contacting the vehicle
- When driving on a race track
- When using a drive-through car wash

- The Pre-Collision Braking System may activate in the following situations.
 - When passing through an automatic gate (opening and shutting)
 - When driving close to the vehicle in front
 - When driving in a location where the grade of the road changes rapidly
 - When visibility is poor due to sand, smoke or water vapor blowing in the wind, or when the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic
 - When passing through clouds of steam or smoke, etc.
 - When driving in adverse weather, such as heavy snow or snowstorms
 - When the exhaust gas emitted by the vehicle in front is clearly visible in cold weather, etc.
 - When there is an obstacle on a curve or intersection
 - When narrowly passing a vehicle or an object
 - When stopping very close to a wall or a vehicle in front
 - When passing through water spray from road sprinklers or snow clearing sprinklers on the road.
- If there is cargo or installed accessories, etc. that are protruding beyond the edge of the front bumper, the vehicle's length will increase and the system may not be able to prevent a collision.

(continued next page)

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 8 of 8)

2019 Subaru Crosstrek Hybrid

In the following conditions, the possibility that system may not be able to detect a pedestrian as an object is particularly high.

- When pedestrians are walking in a group
- When a pedestrian is next to a wall or other obstacle
- When a pedestrian is using an umbrella
- When a pedestrian is wearing clothes that are a similar color to the surrounding environment
- When a pedestrian is carrying bulky luggage
- When a pedestrian is bent over, crouching down or lying down
- When a pedestrian is in a dark location
- When a pedestrian suddenly crosses in front of you from the side or suddenly runs in front of you

Notes:

Section III TEST PROCEDURES

A. TEST PROCEDURE OVERVIEW

Four test scenarios were used, as follows:

- Test 1. Subject Vehicle (SV) Encounters Stopped Principal Other Vehicle (POV)
- Test 2. Subject Vehicle Encounters Slower Principal Other Vehicle
- Test 3. Subject Vehicle Encounters Decelerating Principal Other Vehicle
- Test 4. Subject Vehicle Encounters Steel Trench Plate

An overview of each of the test procedures follows.

1. TEST 1 – SUBJECT VEHICLE ENCOUNTERS STOPPED PRINCIPAL OTHER VEHICLE ON A STRAIGHT ROAD

This test evaluates the ability of the DBS system to detect and respond to a stopped lead vehicle in the immediate forward path of the SV, as depicted in Figure 1.

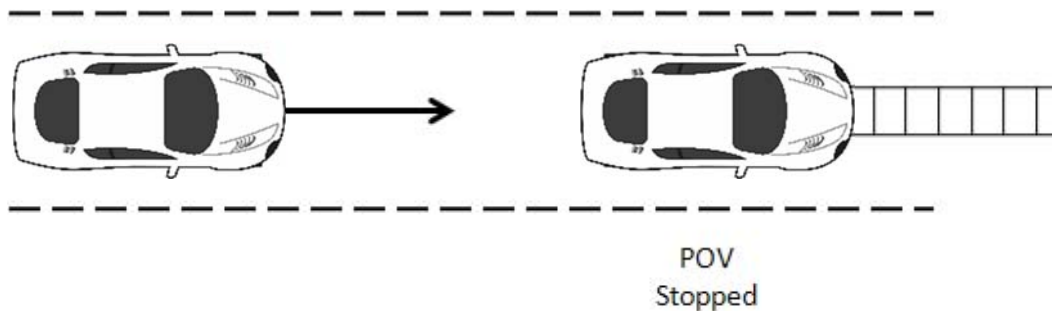


Figure 1. Depiction of Test 1

a. Procedure

The POV was parked in the center of a travel lane, with its longitudinal axis oriented parallel to the roadway edge and facing the same direction as the SV so that the SV approaches the rear of the POV.

The SV ignition was cycled prior to each test run. The SV was driven at a nominal speed of 25 mph (40.2 kph) in the center of the lane of travel, toward the parked POV. The SV throttle pedal was released within 500 ms after t_{FCW} , i.e., within 500 ms of the

FCW alert. The SV brakes were applied at TTC = 1.1 seconds (SV-to-POV distance of 40 ft (12 m)). The test concluded when either:

- The SV came into contact with the POV or
- The SV came to a stop before making contact with the POV.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The SV speed could not deviate from the nominal speed by more than 1.0 mph (1.6 kph) during an interval defined by a Time to Collision (TTC) = 5.1 seconds to t_{FCW} . For this test, TTC = 5.1 seconds is taken to occur at an SV-to-POV distance of 187 ft (57 m).

Table 1. Nominal Stopped POV DBS Test Choreography

Test Speeds		SV Speed Held Constant		SV Throttle Fully Released By		SV Brake Application Onset (for each application magnitude)	
SV	POV	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway
25 mph (40.2 kph)	0	5.1 → t_{FCW}	187 ft (57 m) → t_{FCW}	Within 500 ms of FCW1 onset	Varies	1.1	40 ft (12 m)

b. Criteria

The performance requirement for this series of tests is that there be no SV-POV impact for at least five of the seven valid test trials.

2. TEST 2 – SUBJECT VEHICLE ENCOUNTERS SLOWER PRINCIPAL OTHER VEHICLE

This test evaluates the ability of the DBS system to detect and respond to a slower-moving lead vehicle traveling at a constant speed in the immediate forward path of the SV, as depicted in Figure 2.

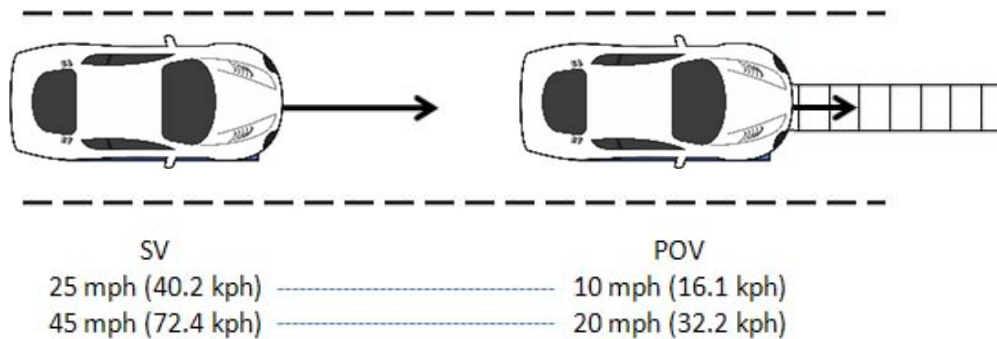


Figure 2. Depiction of Test 2

a. Procedure

The SV ignition was cycled prior to each test run. The tests were conducted two ways. In the first, the POV was driven at a constant 10.0 mph (16.1 kph) in the center of the lane of travel while the SV was driven at 25.0 mph (40.2 kph), in the center lane of travel, toward the slower-moving POV. In the second, the POV was driven at a constant 20.0 mph (32.2 kph) in the center of the lane of travel while the SV was driven at 45.0 mph (72.4 kph), in the center lane of travel, toward the slower-moving POV. In both cases, the SV throttle pedal was released within 500 ms after t_{FCW} , i.e., within 500 ms of the FCW alert. The SV brakes were applied at $TTC = 1.0$ seconds, assumed to be SV-to-POV distance of 22 ft (7 m) for an SV speed of 25 mph and 37 ft (11 m) for an SV speed of 45 mph.

The test concluded when either:

- The SV came into contact with the POV or
- 1 second after the speed of the SV became less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than ± 1 ft (0.3 m) during the validity period.
- The SV speed could not deviate more than ± 1.0 mph (± 1.6 kph) during an interval defined by $TTC = 5.0$ seconds to t_{FCW} .
- The POV speed could not deviate more than ± 1.0 mph (± 1.6 kph) during the validity period.

Table 2. Nominal Slower Moving POV DBS Test Choreography

Test Speeds		SV Speed Held Constant		SV Throttle Fully Released By		SV Brake Application Onset (for each application magnitude)	
SV	POV	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway
25 mph (40 kph)	10 mph (16 kph)	5.0 → t_{FCW}	110 ft (34 m) → t_{FCW}	Within 500 ms of FCW1 onset	Varies	1.0	22 ft (7 m)
45 mph (72 kph)	20 mph (32 kph)	5.0 → t_{FCW}	183 ft (56 m) → t_{FCW}	Within 500 ms of FCW1 onset	Varies	1.0	37 ft (11 m)

b. Criteria

The performance requirement for this series of tests is that there be no SV-POV impact for at least five of the seven valid test trials.

3. TEST 3 – SUBJECT VEHICLE ENCOUNTERS DECELERATING PRINCIPAL OTHER VEHICLE

This test evaluates the ability of the DBS system to detect and respond to a lead vehicle slowing with a constant deceleration in the immediate forward path of the SV as depicted in Figure 3. Should the SV foundation brake system be unable to prevent an SV-to-POV impact for a given test condition, the DBS system should automatically provide supplementary braking capable of preventing an SV-to-POV collision.

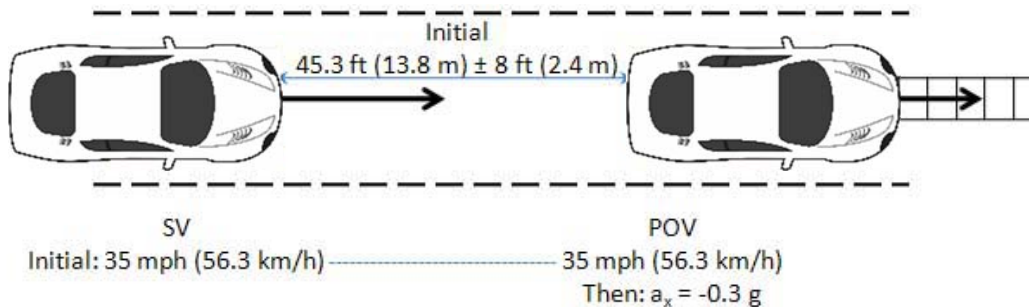


Figure 3. Depiction of Test 3 with POV Decelerating

a. Procedure

The SV ignition was cycled prior to each test run. For this scenario both the POV and SV were driven at a constant 35.0 mph (56.3 kph) in the center of the lane, with headway of 45 ft (14 m) \pm 8 ft (2.4 m). Once these conditions were met, the POV tow vehicle brakes were applied to achieve 0.3 \pm 0.03 g. The SV throttle pedal was released within 500 ms of t_{FCW} , and the SV brakes were applied when TTC was 1.4 seconds (31.5 ft (9.6 m)).

The test concluded when either:

- The SV came into contact with the POV or
- 1 second after the velocity of the SV became less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than \pm 1 ft (0.3 m) during the validity period.
- The headway between the SV and POV must have been constant from the onset of the applicable validity period to the onset of POV braking.
- The SV and POV speed could not deviate more than \pm 1.0 mph (1.6 kph) during an interval defined by the onset of the validity period to the onset of POV braking.
- The average POV deceleration could not deviate by more than \pm 0.03 g from the nominal 0.3 g deceleration during the interval beginning at 1.5 seconds after the onset of POV braking and ending either 250 ms prior to the POV coming to a stop or the SV coming into contact with the POV.

Table 3. Nominal Decelerating POV DBS Test Choreography

Test Speeds		SV Speed Held Constant		SV Throttle Fully Released By		SV Brake Application Onset (for each application magnitude)	
SV	POV	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway
35 mph (56 kph)	35 mph (56 kph)	3.0 seconds prior to POV braking $\rightarrow t_{FCW}$	45 ft (14 m) $\rightarrow t_{FCW}$	Within 500 ms of FCW1 onset	Varies	1.4	32 ft (10 m)

b. Criteria

The performance requirement for this series of tests is that no SV-POV contact occurs for at least five of the seven valid test trials.

4. TEST 4 – FALSE POSITIVE SUPPRESSION

The false positive suppression test series evaluates the ability of a DBS system to differentiate a steel trench plate (STP) from an object presenting a genuine safety risk to the SV. Although the STP is large and metallic, it is designed to be driven over without risk of injury to the driver or damage to the SV. Therefore, in this scenario, the automatic braking available from DBS is not necessary and should be suppressed. The test condition is nearly equivalent to that previously defined for Test 1, the stopped POV condition, but with an STP in the SV forward path in lieu of a POV.

a. Procedure

This test was conducted at two speeds, 25 mph (40.2 kph) and 45 mph (72.4 kph). The SV was driven directly towards, and over, the STP, which was positioned in the center of a travel lane, with its longest sides parallel to the road edge. The SV was driven at constant speed in the center of the lane toward the STP. If the SV did not present an FCW alert during the approach to the STP by $TTC = 2.1$ s, the SV driver initiated release of the throttle pedal at $TTC = 2.1$ s and the throttle pedal was fully released within 500 ms of $TTC = 2.1$ s. The SV brakes were applied at TTC of 1.1 seconds, assumed to be 40 ft (12.3 m) from the edge of the STP at 25 mph or 73 ft (22.1 m) at 45 mph. The test concluded when the front most part of the SV reached a vertical plane defined by the edge of the STP first encountered by the SV.

b. Criteria

In order to pass the False Positive test series, the magnitude of the SV deceleration reduction attributable to DBS intervention must have been less than or equal to 1.25 times the average of the deceleration experienced by the baseline command from the braking actuator for at least five of seven valid test trials.

B. GENERAL INFORMATION

1. t_{FCW}

The time at which the Forward Collision Warning (FCW) activation flag indicates that the system has issued an alert to the SV driver is designated as t_{FCW} . FCW alerts are typically haptic, visual, or audible, and the onset of the alert is determined by post-processing the test data.

For systems that implement audible or haptic alerts, part of the pre-test instrumentation verification process is to determine the tonal frequency of the audible warning or the vibration frequency of the tactile warning through use of the PSD (Power Spectral Density) function in Matlab. This is accomplished in order to identify the center frequency around which a band-pass filter is applied to subsequent audible or tactile warning data so that the beginning of such warnings can be programmatically determined. The bandpass filter used for these warning signal types is a phaseless, forward-reverse pass, elliptical (Cauer) digital filter, with filter parameters as listed in Table 4.

Table 4. Audible and Tactile Warning Filter Parameters

Warning Type	Filter Order	Peak-to-Peak Ripple	Minimum Stop Band Attenuation	Pass-Band Frequency Range
Audible	5 th	3 dB	60 dB	Identified Center Frequency \pm 5%
Tactile	5 th	3 dB	60 dB	Identified Center Frequency \pm 20%

2. General Validity Criteria

In addition to any validity criteria described above for the individual test scenarios, for an individual trial to be valid, it must have met the following criteria throughout the test:

- The SV driver seatbelt was latched.
- If any load had been placed on the SV front passenger seat (e.g., for instrumentation), the vehicle's front passenger seatbelt was latched.
- The SV was driven at the nominal speed in the center of the travel lane, toward the POV or STP.
- The driver used the least amount of steering input necessary to maintain SV position in the center of the travel lane during the validity period; use of abrupt steering inputs or corrections was avoided.
- The yaw rate of the SV did not exceed ± 1.0 deg/s from the onset of the validity period to the instant SV deceleration exceeded 0.25 g.
- The SV driver did not apply any force to the brake pedal during the applicable validity period. All braking shall be performed by the programmable brake controller.
- The lateral distance between the centerline of the SV and the centerline of the POV or STP did not deviate more than ± 1 ft (0.3 m) during the applicable validity period.

3. Validity Period

The valid test interval began:

- Test 1: When the SV-to-POV TTC = 5.1 seconds
- Test 2: When the SV-to-POV TTC = 5.0 seconds
- Test 3: 3 seconds before the onset of POV braking
- Test 4: 2 seconds prior to the SV throttle pedal being released

The valid test interval ended:

- Test 1: When either of the following occurred:
 - The SV came in contact with the POV (SV-to-POV contact was assessed by using GPS-based range data or by measurement of direct contact sensor output); or
 - The SV came to a stop before making contact with the POV.
- Test 2: When either of the following occurred:
 - The SV came into contact with the POV; or
 - 1 second after the velocity of the SV became less than or equal to that of the POV.
- Test 3: When either of the following occurred:
 - The SV came in contact with the POV; or
 - 1 second after minimum SV-to-POV range occurred.
- Test 4: When the SV stopped.

4. Static Instrumentation Calibration

To assist in resolving uncertain test data, static calibration data was collected prior to each of the test series.

For Tests 1, 2, and 3, the SV, POV, and POV moving platform and tow vehicle were centered in the same travel lane with the same orientation (i.e., facing the same direction). For Test 4, the SV and STP were centered in the same travel lane.

For Tests 1, 2, and 3, the SV was positioned such that it just contacted a vertical plane defining the rearmost location of the POV. For Test 4, the front-most location of the SV was positioned such that it just reached a vertical plane defined by the leading edge of the STP first encountered by the SV (i.e., just before it is driven onto the STP). This is the “zero position.”

The zero position was documented prior to, and immediately after, conduct of each test series.

If the zero position reported by the data acquisition system was found to differ by more than ± 2 in (± 5 cm) from that measured during collection of the pre-test static calibration data file, the pre-test longitudinal offset was adjusted to output zero and another pre-test static calibration data file was collected. If the zero position reported by the data acquisition system was found to differ by more than ± 2 in (± 5 cm) from that measured during collection of the post-test static calibration data file, the test trials performed between collection of that post-test static calibration data file and the last valid pre-test static calibration data file were repeated.

Static data files were collected prior to, and immediately after, conduct each of the test series. The pre-test static files were reviewed prior to test conduct to confirm that all data channels were operational and were properly configured.

5. Number of Trials

A target total of seven (7) valid trials were performed for each scenario. In cases where the test driver performed more than seven trials, the first seven trials satisfying all test tolerances were used to assess the SV performance.

6. Transmission

All trials were performed with SV automatic transmissions in “Drive” or with manual transmissions in the highest gear capable of sustaining the desired test speed. Manual transmission clutches remained engaged during all maneuvers. The brake lights of the POV were not illuminated.

C. PRINCIPAL OTHER VEHICLE

DBS testing requires a POV that realistically represents typical vehicles, does not suffer damage or cause damage to a test vehicle in the event of collision, and can be accurately positioned and moved during the tests. The tests reported herein made use of the NHTSA developed Strikeable Surrogate Vehicle (SSV).

This SSV system was designed specifically for common rear-end crash scenarios which AEB systems address. The key elements of the SSV system are:

- POV element, whose requirements are to:
 - Provide an accurate representation of a real vehicle to DBS sensors, including cameras and radar.
 - Be resistant to damage and inflict little or no damage to the SV as a result of repeated SV-to-POV impacts.

- POV delivery system, whose requirements are to:
 - Accurately control the nominal POV speed up to 35 mph (56 kph).
 - Accurately control the lateral position of the POV within the travel lane.
 - Allow the POV to move away from the SV after an impact occurs.

The key components of the SSV system are:

- A POV shell which is a visually and dimensionally accurate representation of a passenger car.
- A slider and load frame assembly to which the shell is attached.
- A two-rail track on which the slider operates.
- A road-based lateral restraint track.
- A tow vehicle.

Operationally, the POV shell is attached to the slider and load frame, which includes rollers that allow the entire assembly to move longitudinally along the guide rail. The guide rail is coupled to a tow vehicle and guided by the lateral restraint track secured to the test track surface. The rail includes a provision for restraining the shell and roller assembly in the rearward direction. In operation, the shell and roller assembly engages the rail assembly through detents to prevent relative motion during run-up to test speeds and minor deceleration of the tow vehicle. The combination of rearward stops and forward motion detents allows the test conditions, such as relative POV-SV headway distance and speed etc., to be achieved and adjusted as needed in the preliminary part of a test. If during the test, the SV strikes the rear of the POV shell, the detents are overcome and the entire shell/roller assembly moves forward in a two-stage manner along the rail and away from the SV. The forward end of the rail has a soft stop to restrain forward motion of the shell/roller assembly. After impacting the SSV, the SV driver uses the steering wheel to maintain SV position in the center of the travel lane, thereby straddling the two-rail track. The SV driver must manually apply the SV brakes after impact. The SSV system is shown in Figures A6 through A8 and a detailed description can be found in the NHTSA report: NHTSA'S STRIKEABLE SURROGATE VEHICLE PRELIMINARY DESIGN + OVERVIEW, May 2013.

D. FOUNDATION BRAKE SYSTEM CHARACTERIZATION

Data collected and analyzed from a series of pre-test braking runs were used to objectively quantify the response of the vehicle's foundation brake system without the contribution of DBS. The results of these analyses were used to determine the brake pedal input magnitudes needed for the main tests.

This characterization was accomplished by recording longitudinal acceleration and brake pedal force and travel data for a variety of braking runs. For three initial brake characterization runs, the vehicle was driven at 45 mph, and the brakes were applied at a rate of 1 inch/sec up to the brake input level needed for at least 0.7 g. Linear regressions were performed on the data from each run to determine the linear vehicle deceleration response as a function of both applied brake pedal force and brake pedal travel. The brake input force or displacement level needed to achieve a vehicle deceleration of 0.4 g was determined from the average of the three runs. Using the 0.4 g brake input force or displacement level found from the three initial runs, subsequent runs were performed at 25 mph, 35 mph, and 45 mph, with the brakes applied at a rate of 10 inch/sec to the determined 0.4 g brake input force or displacement level. For each of the three test speeds, if the average calculated deceleration level was found to be within 0.4 ± 0.025 g, the resulting force or displacement was recorded and used. If the average calculated deceleration level exceeded this tolerance, the brake input force or displacement levels were adjusted and retested until the desired magnitude was realized. Prior to each braking event, the brake pad temperatures were required to be in the range of 149° - 212°F.

E. BRAKE CONTROL

1. Subject Vehicle programmable brake controller

To achieve accurate, repeatable, and reproducible SV brake pedal inputs, a programmable brake controller was used for all brake applications. The controller has the capability to operate in one of two user-selectable, closed-loop, control modes:

- Constant pedal displacement. By maintaining constant actuator stroke, the position of the vehicle's brake pedal remains fixed for the duration of the input. To achieve this, the brake controller modulates application force.
- Hybrid control. Hybrid control uses position-based control to command the initial brake application rate and actuator position, then changes to force-based control to command a reduction of applied force to a predetermined force. This force is maintained until the end of the braking maneuver by allowing the brake controller to modulate actuator displacement.

2. Subject Vehicle brake parameters

- Each test run began with the brake pedal in its natural resting position, with no preload or position offset.
- The onset of the brake application was considered to occur when the brake actuator had applied 2.5 lbf (11 N) of force to the brake pedal.
- The magnitude of the brake application was that needed to produce 0.4 g deceleration, as determined in the foundation brake characterization.

- The SV brake application rate was between 9 to 11 in/s (229 to 279 mm/s), where the application rate is defined as the slope of a linear regression line applied to brake pedal position data over a range from 25% to 75% of the commanded input magnitude.

3. POV Automatic Braking System

The POV was equipped with an automatic braking system, which was used in Test Type 3. The braking system consisted of the following components:

- Electronically controlled linear actuator, mounted on the seat rail and attached to the brake pedal. The actuator can be programmed for control of stroke and rate.
- PC module programmed for control of the stroke and rate of the linear actuator.
- Switch to activate actuator.

F. INSTRUMENTATION

Table 5 lists the sensors, signal conditioning, and data acquisition equipment used for these tests.

TABLE 5. TEST INSTRUMENTATION AND EQUIPMENT

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Tire Pressure Gauge	Vehicle Tire Pressure	0-100 psi 0-690 kPa	< 1% error between 20 and	Omega DPG8001	17042707002	By: DRI Date: 6/21/2018 Due: 6/21/2019
Platform Scales	Vehicle Total, Wheel, and Axle Load	1200 lb/platform 5338 N/	0.5% of applied load	Intercomp SWI	1110M206352	By: DRI Date: 1/3/2019 Due: 1/3/2020
Linear (string) encoder	Throttle pedal travel	10 in 254 mm	0.1 in 2.54 mm	UniMeasure LX-EP	45040532	By: DRI Date: 5/22/2019 Due: 5/22/2020
Load Cell	Force applied to brake pedal					By: DRI
		0 - 250 lb 0 -1112 N	0.1% FS	Honeywell 41A	1464391	Date: 8/28/2018 Due: 8/28/2019
		0-250 lb 1112 N	0.05% FS	Stellar Technology PNC700	1607338	Date: 8/28/2018 Due: 8/28/2019
Differential Global Positioning System	Position, Velocity	Latitude: ±90 deg Longitude: ±180 deg Altitude: 0-18 km Velocity: 0-1000 knots	Horizontal Position: ±1 cm Vertical Position: ±2 cm Velocity: 0.05 kph	Trimble GPS Receiver, 5700 (base station and in-vehicle)	00440100989	NA

TABLE 5. TEST INSTRUMENTATION AND EQUIPMENT (continued)

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Multi-Axis Inertial Sensing System	Position; Longitudinal, Lateral, and Vertical Accels;	Accels $\pm 10g$, Angular Rat	Accels .01g, Angular Rate	Oxford Inertial +	2182	By: Oxford Technical Solutions
	Lateral, Longitudinal and Vertical Velocities;					Date: 10/16/2017 Due: 10/16/2019
	Roll, Pitch, Yaw Rates; Roll, Pitch, Yaw Angles					Date: 4/11/2018 Due: 4/11/2020
Real-Time Calculation of Position and Velocity Relative to Lane Markings (LDW) and POV (FCW)	Distance and Velocity to lane markings (LDW) and POV (FCW)	Lateral Lane Dist: ± 30 m Lateral Lane Velocity: ± 20 m/sec Longitudinal Range to POV: ± 200 m Longitudinal Range Rate: ± 50 m/sec	Lateral Distance to Lane Marking: ± 2 cm Lateral Velocity to Lane Marking: ± 0.02 m/sec Longitudinal Range: ± 3 cm Longitudinal Range Rate: ± 0.02 m/sec	Oxford Technical Solutions (OXTS), RT-Range	97	NA
Microphone	Sound (to measure time at alert)	Frequency Response: 80 Hz – 20 kHz	Signal-to-noise: 64 dB, 1 kHz at 1 Pa	Audio-Technica AT899	NA	NA
Light Sensor	Light intensity (to measure time at alert)	Spectral Bandwidth: 440-800 nm	Rise time < 10 msec	DRI designed and developed Light Sensor	NA	NA
Accelerometer	Acceleration (to measure time at alert)	$\pm 5g$	$\leq 3\%$ of full range	Silicon Designs, 2210-005	NA	NA

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Coordinate Measurement Machine	Inertial Sensing System Coordinates	0-8 ft 0-2.4 m	±.0020 in. ±.051 mm (Single point articulation accuracy)	Faro Arm, Fusion	UO8-05-08-06636	By: DRI Date: 1/2/2019 Due: 1/2/2020
Type	Description			Mfr, Model	Serial Number	
Data Acquisition System	Data acquisition is achieved using a dSPACE MicroAutoBox II. Data from the Oxford IMU, including Longitudinal, Lateral, and Vertical Acceleration, Roll, Yaw, and Pitch Rate, Forward and Lateral Velocity, Roll and Pitch Angle are sent over Ethernet to the MicroAutoBox. The Oxford IMUs are calibrated per the manufacturer's recommended schedule (listed above).			dSPACE Micro-Autobox II 1401/1513		
				Base Board	549068	
				I/O Board	588523	

APPENDIX A

Photographs

LIST OF FIGURES

	Page
Figure A1. Front View of Subject Vehicle.....	A-3
Figure A2. Rear View of Subject Vehicle.....	A-4
Figure A3. Window Sticker (Monroney Label)	A-5
Figure A4. Vehicle Certification Label.....	A-6
Figure A5. Tire Placard.....	A-7
Figure A6. Rear View of Principal Other Vehicle (SSV).....	A-8
Figure A7. Load Frame/Slider of SSV.....	A-9
Figure A8. Two-Rail Track and Road-Based Lateral Restraint Track.....	A-10
Figure A9. Steel Trench Plate.....	A-11
Figure A10. DGPS, Inertial Measurement Unit and MicroAutoBox Installed in Subject Vehicle.....	A-12
Figure A11. Sensors for Detecting Auditory Alerts.....	A-13
Figure A12. Sensor for Detecting Visual Alerts.....	A-14
Figure A13. Computer Installed in Subject Vehicle.....	A-15
Figure A14. Brake Actuator Installed in Subject Vehicle.....	A-16
Figure A15. Brake Actuator Installed in POV System.....	A-17
Figure A16. AEB Visual Alert.....	A-18
Figure A17. AEB On/Off Switch.....	A-19
Figure A18. AEB Off Indicator.....	A-20



Figure A1. Front View of Subject Vehicle



Figure A2. Rear View of Subject Vehicle

CROSSTREK HYBRID

VIN: JF2GTDEC5KH30
 Model/Code: 2019 SUBARU CROSSTREK HYBRID/KPH
 Port/Assembly: HUENEME
 Deliver by/Carrier: TRUCK / 456



GOVERNMENT 5-STAR SAFETY RATINGS

Overall Vehicle Score Not Rated		
Based on the combined ratings of frontal, side and rollover. Should ONLY be compared to other vehicles of similar size and weight.		
Frontal Crash	Driver Passenger	Not Rated Not Rated
Based on the risk of injury in a frontal impact. Should ONLY be compared to other vehicles of similar size and weight.		
Side Crash	Front seat Rear seat	Not Rated Not Rated
Based on the risk of injury in a side impact.		
Rollover		Not Rated
Based on the risk of rollover in a single-vehicle crash.		

Star ratings range from 1 to 5 stars (★★★★★) with 5 being the highest.
 Source: National Highway Traffic Safety Administration (NHTSA)
www.safercar.gov or 1-888-327-4236

Protect Your Investment!

Subaru Added Security™
 The Only Extended Service Agreement Backed By Subaru

- Protection designed to fit your driving needs, up to 10 years/100,000 miles of coverage
- Maintenance plans also available
- We use Genuine Subaru replacement parts - only the best
- We use technicians trained by Subaru - those who know your vehicle best
- Towing, rental and trip interruption benefits available
- Transferable to the next owner!

Ask your sales representative for more details.
 Accept nothing less than Added Security®

STANDARD EQUIPMENT

- SAFETY**
- Symmetrical All-Wheel Drive (AWD)
 - Vehicle Dynamics Control (VDC)
 - EyeSight Driver-Assist System w/ High Beam Assist (HBA)
 - Reverse Automatic Braking System (RAB)
 - Subaru Advanced Frontal Airbag System
 - Driver's Side Knee Airbag
 - Side-Curtain Airbags w/ Rollover Sensor
 - Front Seat Side-Impact Airbags
 - Whiplash Protection Front Seats
 - 4-Wheel Anti-Lock (ABS) Disc Brakes w/ Brake Assist
 - Flat Tire Repair Kit
 - Brake Override System
 - Blind Spot Detection with Rear Cross-Traffic Alert
 - Pedestrian Alert System
 - LED Daytime Running Lights (DRL)
- PERFORMANCE AND EXTERIOR**
- 2.0L Boxer Engine w/ Subaru StarDrive Electric Vehicle Technology
 - CVT with SI-DRIVE and X-MODE
 - Lithium Ion Hybrid Battery
 - 120V Hybrid Battery Charging Cable with Storage Case
 - 18" Aluminum-Alloy Wheels
 - Electric Power-Assisted Steering
 - Body-Color Folding Exterior Mirrors w/ Turn Signals
 - LED Fog Lights
 - LED Steering Responsive Headlights

OPTIONAL EQUIPMENT AND OTHER ITEMS


Manufacturer's Suggested Retail Price	\$34,995.00
Exterior Color: Crystal Black Silica	
Full Tank of Gas	INCLD
Standard Option: 01	
Footwell Illumination Kit	\$213.00
Wheel Lock Kit	\$81.00
Cargo Net - Hybrid	\$61.00

EPA DOT Fuel Economy and Environment

Fuel Economy: Small SUVs range from 19 to 37 MPG. The best vehicle rates 136 MPGe.



 You save \$2,250
 in fuel costs over 5 years compared to the average new vehicle.



Actual results will vary for many reasons, including driving conditions and how you drive and maintain your vehicle. The average new vehicle gets 27 MPG and costs \$7,000 to fuel over 5 years. Cost estimates are based on 15,000 miles per year at \$2.55 per gallon and \$0.19 per kW-hr. This is a dual fueled automobile. MPG is miles per gasoline gallon equivalent. Vehicle emissions are a significant cause of climate change and smog.

fuelconomy.gov
 Calculate personalized estimates and compare vehicles

PARTS CONTENT INFORMATION FOR THIS VEHICLE:
 FOR VEHICLES IN THIS CARLINE: FINAL ASSEMBLY POINT: Hueneme
 U.S./CANADIAN PARTS CONTENT: 5% COUNTRY OF ORIGIN:
 MAJOR SOURCES OF FOREIGN PARTS: ENGINE: JAPAN
 CONTENT: JAPAN: 90% TRANSMISSION: JAPAN
 Note: Parts content does not include final assembly, distribution, or other non-parts costs.

- COMFORT, CONVENIENCE & INTERIOR**
- Air Conditioning with Remote Climate Control
 - SUBARU STARLINK Safety Plus & Security Plus - 10 Years Free
 - 8.0" STARLINK Multimedia Audio System
 - STARLINK Smartphone Connectivity
 - USB Port with iPod & iPhone Connectivity
 - HD Radio & SiriusXM Satellite Radio w/ 4-Months Free
 - Tilt/Telescopic Steering Wheel w/Bluetooth & Audio Switches
 - Leather-Wrapped Steering Wheel & Shifter
 - Power Door Locks and Dual Power Mirrors
 - Keyless Access with Push-Button Start
 - Power Windows w/ Driver's and Front Passenger's Auto Up/Down
 - 60/40 Split Fold-Down Rear Seatback
 - Color Multi-Function Display
 - Leather-Trimmed Upholstery
 - 6-Way Power Driver's Seat
 - Automatic On/Off Headlights
 - All-Weather Package w/Heated Front Seats
- LIMITED WARRANTY/ROADSIDE ASSISTANCE**
- 3 Years / 36,000 Miles Basic
 - 5 Years / 60,000 Miles Powertrain
 - 5 Yrs/Unlimited Mileage Rust Perforation
 - Up to 10 Yr / 150K Mile Hybrid Battery
 - 3 Yrs / 36,000 24/7 Roadside Assistance
 - See Owner Info Kit&Warranty For Details

Destination and Delivery \$975.00
 Total Suggested Retail Price \$36,325.00

*Fuel is a registered trademark of Agip Inc. Hammerhead is a registered trademark of Hammer International Products, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. TomTom is a registered trademark of TomTom International B.V. Corporation. TORSEN is a registered trademark of JTEC Torren North America Inc.

Figure A3. Window Sticker (Monroney Label)

MFD BY SUBARU CORPORATION

MFD IN 02/19

GVWR/PNBV: 4901 LB (2223KG)

GAWR/PNBE:FRONT- 2410 LB (1093KG) WITH 225/55R18 98H TIRES,
18X7J RIMS AT 250 KPA (36 PSI) COLD

GAWR/PNBE:REAR - 2491 LB (1130KG) WITH 225/55R18 98H TIRES,
18X7J RIMS AT 240 KPA (35 PSI) COLD

THIS VEHICLE CONFORMS TO ALL APPLICABLE FEDERAL MOTOR
VEHICLE SAFETY AND THEFT PREVENTION STANDARDS IN EFFECT ON
THE DATE OF MANUFACTURE SHOWN ABOVE.

VIN: JF2GTDEC5KH30



TYPE:MPV/VTUM

ICES/NMB-002

Figure A4. Vehicle Certification Label



TIRE AND LOADING INFORMATION RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT

SEATING CAPACITY : TOTAL 5 FRONT 2 REAR 3
NOMBRE DE PLACES : TOTAL 5 AVANT 2 ARRIÈRE 3

The combined weight of occupants and cargo should never exceed 408kg or 900lbs.
Le poids total des occupants et du chargement ne doit jamais dépasser 408kg ou 900lb.

TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS À FROID
FRONT AVANT	225/55R18	250KPA, 36PSI
REAR ARRIÈRE	225/55R18	240KPA, 35PSI
SPARE DE SECOURS	NONE	NONE

SEE OWNER'S
MANUAL FOR
ADDITIONAL
INFORMATION

VOIR LE MANUEL
DE L'USAGER
POUR PLUS DE
RENSEIGNEMENTS

HU

Figure A5. Tire Placard



Figure A6. Rear View of Principal Other Vehicle (SSV)



Figure A7. Load Frame/Slider of SSV

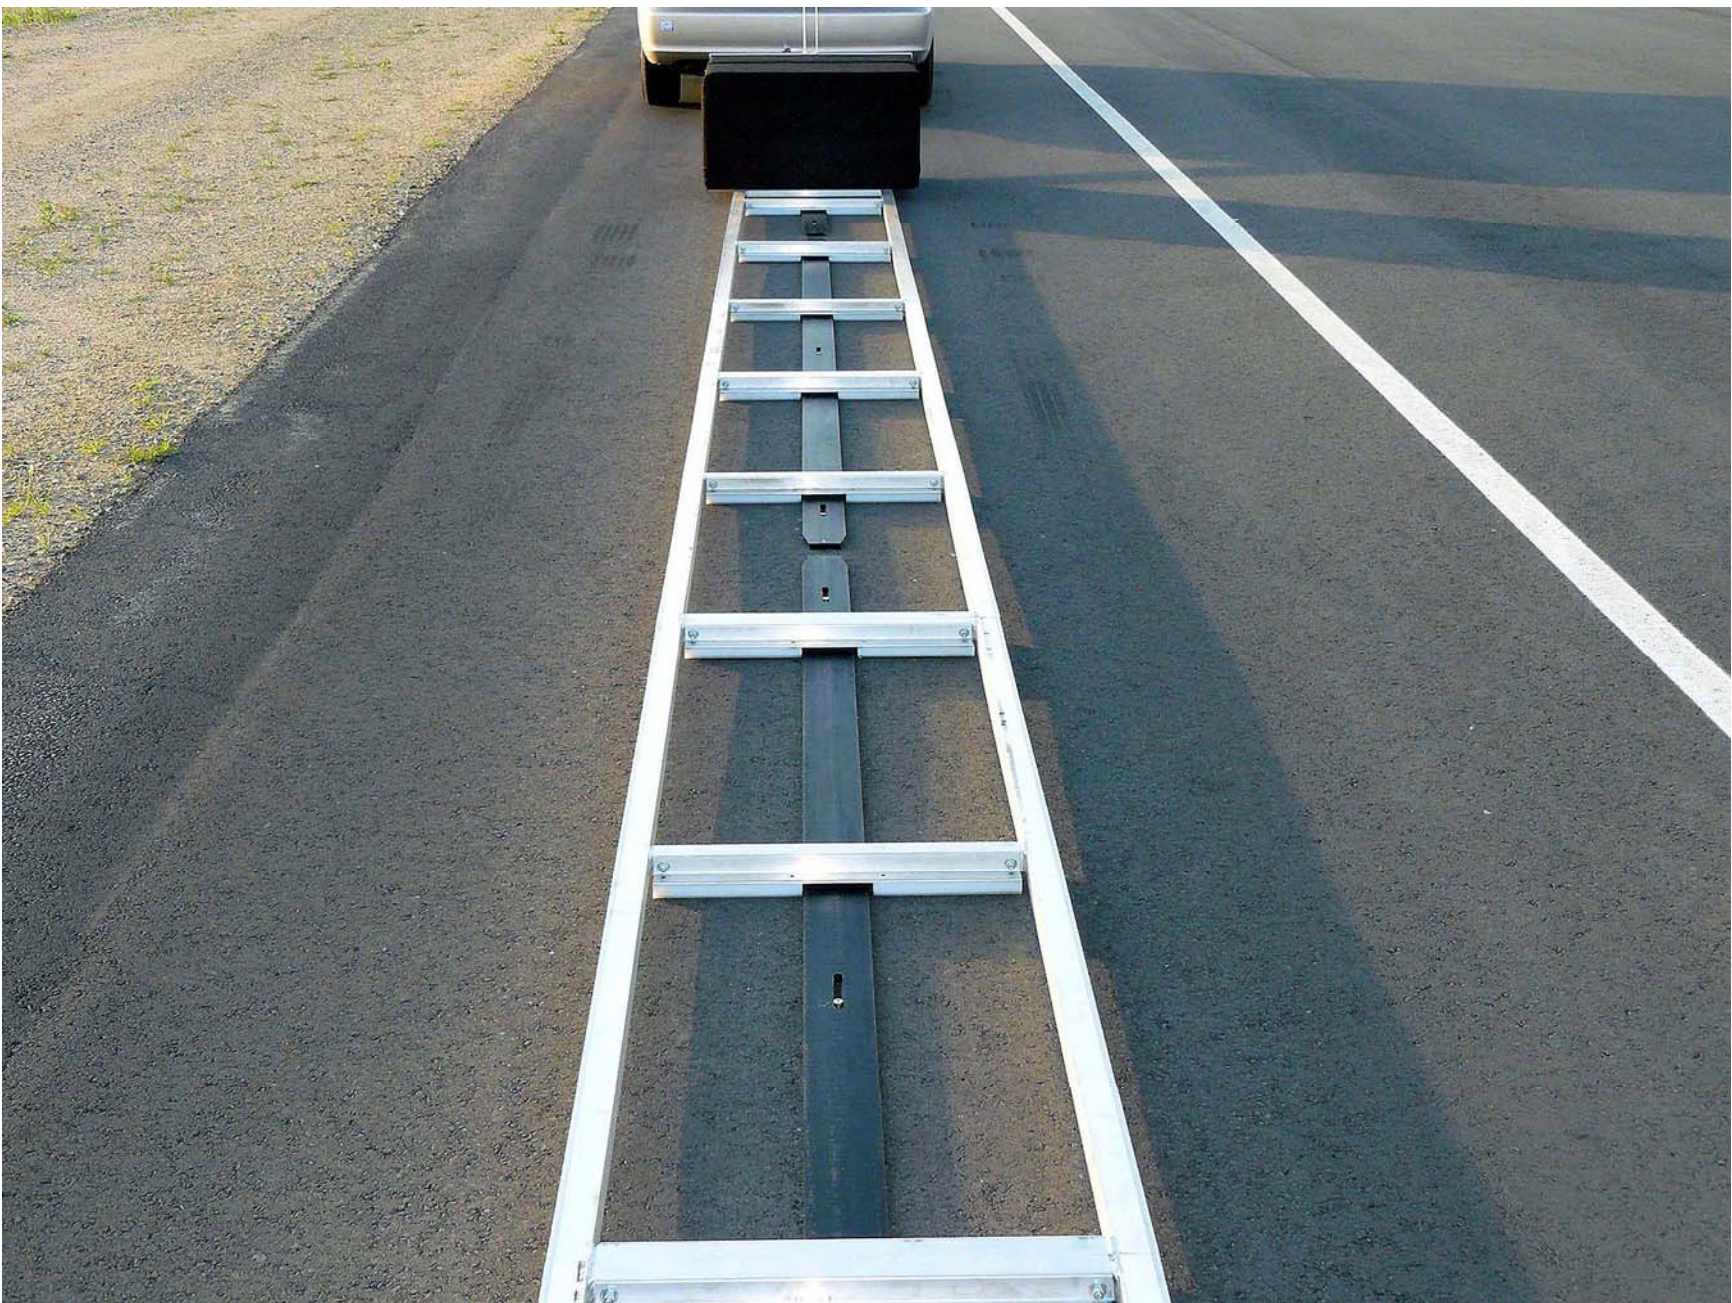


Figure A8. Two-Rail Track and Road-Based Lateral Restraint Track



Figure A9. Steel Trench Plate



Figure A10. DGPS, Inertial Measurement Unit and MicroAutoBox Installed in Subject Vehicle



Figure A11. Sensors for Detecting Auditory Alerts



Figure A12. Sensor for Detecting Visual Alerts



Figure A13. Computer Installed in Subject Vehicle



Figure A14. Brake Actuator Installed in Subject Vehicle



Figure A15. Brake Actuator Installed in POV System



Figure A16. AEB Visual Alert



Figure A17. AEB On/Off Switch



Figure A18. AEB Off Indicator

APPENDIX B

Excerpts from Owner's Manual

EyeSight Functions

EyeSight includes the following functions.

■ Pre-Collision Braking System

This function uses a following distance warning feature to warn the driver to take evasive action when there is the possibility of a collision with a vehicle or obstacle in front of you. If the driver does not take evasive action, the brakes are applied automatically to help reduce vehicle collision damage or, if possible, help prevent a collision.

⇒ Refer to page 26.

■ Adaptive Cruise Control

This function maintains the set vehicle speed and when there is a vehicle in front in the same traffic lane, it follows the speed of the vehicle in front up to the maximum of the set vehicle speed.

⇒ Refer to page 41.

■ Lane Keep Assist

This function helps suppress lane drifting by detecting lane markings (e.g., white lines) on highways and roads, and by assisting steering operation.

⇒ Refer to page 67.

■ Pre-Collision Throttle Management

This function reduces accidental forward movement caused by the select lever being placed in the wrong position or the accelerator pedal being accidentally depressed, or depressed too strongly.

⇒ Refer to page 77.

■ Lane Departure Warning

This function warns the driver when the vehicle is about to drift off the road.


⇒ Refer to page 83.

■ Lane Sway Warning

This function warns the driver when it detects vehicle drifting caused by driver fatigue, failure to concentrate on the road, inattention, strong crosswinds or other factors.

⇒ Refer to page 87.

Instrument panel display layout

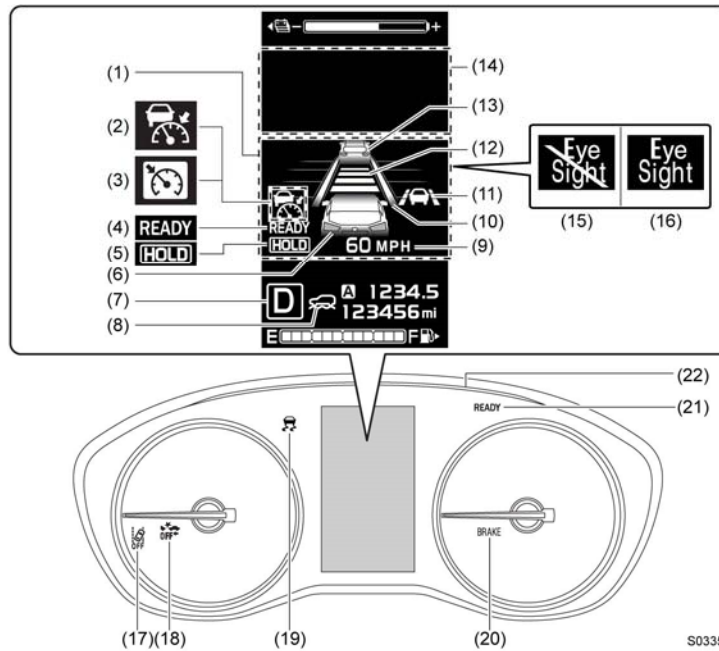



* Display units can be changed in the Screen Settings. For details, refer to the Owner's Manual for your vehicle.

- | | |
|---|---|
| (1) EyeSight display area | (13) Lead vehicle indicator |
| (2) Adaptive Cruise Control indicator | (14) Warning screen area |
| (3) Conventional Cruise Control indicator | (15) EyeSight temporary stop indicator (white) |
| (4) READY indicator | (16) EyeSight warning indicator (yellow) |
| (5) HOLD indicator | (17) Lane Departure Warning OFF indicator light |
| (6) Your vehicle indicator | (18) Pre-Collision Braking System OFF indicator light |
| (7) Select lever indicator | (19) Vehicle Dynamics Control warning light |
| (8) X-MODE indicator | (20) Brake system warning light |
| (9) Set vehicle speed display | (21) Hybrid READY indicator |
| (10) Lane indicator | (22) Driver Assist indicator |
| (11) Lane Keep Assist indicator | |
| (12) Following distance setting indicator | |


■ EyeSight warning indicator (yellow)

- This indicator illuminates or flashes when a malfunction occurs in the EyeSight system.
- When it is illuminated or flashing, none of the EyeSight functions can be used (including Adaptive Cruise Control and the Pre-Collision Braking System, etc.).
⇒ Refer to page 107.

■ EyeSight temporary stop indicator (white)

- This indicator illuminates when the EyeSight system is temporarily stopped.
- When the ignition switch is placed in the ON position, it will illuminate if the  (CRUISE) switch or  (Lane Keep Assist) switch is set to ON within approximately 7 seconds of the hybrid system starting. It turns off when approximately 7 seconds have elapsed since the hybrid system started.
- When it is illuminated, none of the EyeSight functions can be used except for Conventional Cruise Control.
⇒ Refer to page 108.

■ X-MODE indicator

-  (X-MODE indicator) illuminates when the X-MODE is ON.
⇒ Refer to the vehicle Owner's Manual for details.


■ Lane Departure Warning OFF indicator light

- This indicator illuminates when the Lane Departure Warning and Lane Sway Warning are off.
- It also illuminates when the ignition switch is turned to the ON position. Approximately 7 seconds after the hybrid system starts, the Lane Departure Warning OFF indicator light will turn off or remain illuminated depending on the current status (ON or OFF).
⇒ Refer to page 86.

■ Pre-Collision Braking System OFF indicator light

- Illuminates when the Pre-Collision Braking System and Pre-Collision Throttle Management are off.
- It also illuminates when the ignition switch is turned to the ON position, and then turns off approximately 7 seconds after the hybrid system starts.
⇒ Refer to page 40.

■ Lane indicator

- This indicator illuminates in gray when the  (Lane Keep Assist) switch is pressed. When the Lane Keep Assist is operational or operating, this indicator illuminates in white.
⇒ Refer to page 72.

■  (Lane Keep Assist) switch


Switches Lane Keep Assist on/off.
⇒ Refer to page 72.

■ ▲ switch/▼ switch

These switches are used in the following situations.

- When switching the screen displayed on the combination meter display.
- When changing the Warning Volume settings, etc.

⇒ Refer to page 110.

■  (Info)/SET switch

This switch is used in the following situations.

- When displaying the message that appeared in the warning screen area again.

⇒ Refer to page 112.

- When changing the Warning Volume settings, etc.

⇒ Refer to page 110.


■  (Pre-Collision Braking System OFF) switch

Press and hold this switch for approximately 2 seconds or longer to turn off the Pre-Collision Braking System and Pre-Collision Throttle Management.

When these functions are off, the Pre-Collision Braking System OFF indicator light on the instrument panel illuminates.


Press and hold the switch again to turn on the Pre-Collision Braking System and Pre-Collision Throttle Management. This turns off the Pre-Collision Braking System OFF indicator light.

⇒ Refer to page 39.

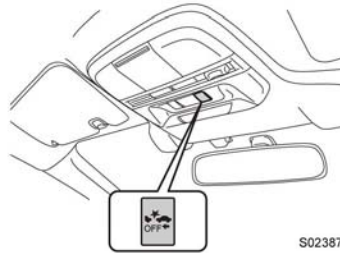

S02387

■ Multi-function display

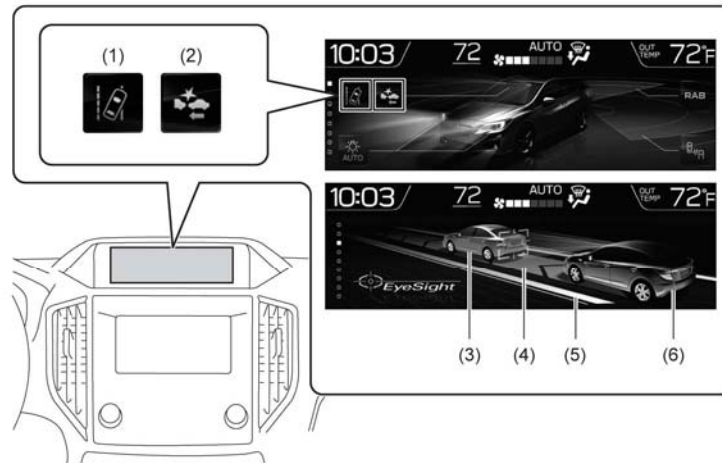

S03410

- | | |
|--|--------------------------------|
| (1) Lane Departure/Sway Warning indicator | (4) Lane indicator |
| (2) Pre-Collision Braking System indicator | (5) Road line indicator |
| (3) Lead vehicle indicator | (6) Your own vehicle indicator |

● Lane Departure/Sway Warning indicator

This indicator illuminates when the Lane Departure Warning and Lane Sway Warning are ON.

● Pre-Collision Braking System indicator

This indicator illuminates when the Pre-Collision Braking System is ON.

● Lead vehicle indicator

When the Adaptive Cruise Control is ON, and a vehicle is in front of you, the lead vehicle indicator is displayed. The lead vehicle indicator displays an image of the distance between your vehicle and the vehicle in front of you.

Pre-Collision Braking System

When there is the risk of a rear-end collision with an obstacle in front, the EyeSight system helps to prevent or minimize a collision by warning the driver. If the driver still does not take evasive action to avoid a collision, the brakes can be automatically applied just before the collision in order to reduce impact damage, or if possible, prevent the collision. If the driver takes evasive action to avoid a collision, Pre-Collision Braking Assist will operate in order to help the driver to prevent or minimize the collision.

This system can be effective not only with direct rear-end collisions, but also with offset rear-end collisions. This function can be activated when the select lever is in the **D**, **N** or **B** positions.

WARNING

- Never use the Pre-Collision Braking System and Pre-Collision Braking Assist to stop your car or avoid a collision under ordinary conditions. These functions cannot prevent collisions under all conditions. If the driver relies only on the Pre-Collision Braking System for Brake operation, collisions may occur.
- When a warning is activated, pay attention to the front of the vehicle and its surroundings, and operate the brake pedal and/or take other actions if necessary.
- The EyeSight Pre-Collision Braking System is primarily designed to prevent rear-end collisions with other vehicles when possible or to minimize damage and injuries in the event of a collision. In addition to other vehicles, things such as motorbikes, bicycles and pedestrians can also be treated as obstacles. However, there may be cases when detection is not possible depending on a variety of conditions². For example, when a vehicle is viewed from the side, oncoming vehicle, vehicles approaching in reverse, small animals or children, or walls or doors are not likely to be detected.
- The Pre-Collision Braking System will operate at the point when it determines that a collision cannot be avoided and is designed to apply strong braking force just before a collision. The result of this varies depending on a variety of conditions². Because of this, performance of this function will not always be the same.
- When the Pre-Collision Braking System is activated, it will continue to operate even if the accelerator pedal is partially depressed. However, it will be canceled if the accelerator pedal is suddenly or fully depressed.
- If the driver depresses the brake pedal or turns the steering wheel, the system may determine that this constitutes evasive action by the driver, and the automatic braking control may not activate in order to allow the driver full control.

- When the difference in speed with the obstacle in front is the following figure^{*1} or more, it may not be possible to avoid a collision. Even if the speed difference is the following figure^{*1} or less, in cases such as when another vehicle cuts in front of you, or in other cases depending on visibility, the condition of road surface and other factors^{*2}, the function may be unable to stop the vehicle or may not activate. Pre-Collision Braking Assist also may not activate depending on the conditions^{*2} listed below.

*1: For vehicles: approximately 30 MPH (50 km/h),
For pedestrians: approximately 21 MPH (35 km/h)

*2: Conditions in which the Pre-Collision Braking System cannot detect obstacles:

- Distance to obstacle in front of you, speed difference, proximity conditions, lateral displacement (the amount of offset)
- Vehicle conditions (amount of load, number of occupants, etc.)
- Road conditions (grade, slipperiness, shape, bumps, etc.)
- When visibility ahead is poor (rain, snow, fog or smoke, etc.)
- When the detected object is something other than a vehicle, motorcycle, bicycle or pedestrian
 - A domestic animal or other animal (a dog or deer, etc.)
 - A guardrail, telephone pole, tree, fence or wall, etc.
- Even if the obstacle is a motorcycle, bicycle or pedestrian, depending on the brightness of the surroundings as well as the relative movement, and aspect or angle of the object, there may be cases when the system cannot detect it.
- When the system determines that operation by the driver (based on accelerator pedal operation, braking, steering wheel angle, etc.) is intended as evasive action
- Vehicle maintenance status (brake systems, tire wear, tire pressure, whether a temporary spare tire is being used, etc.)
- When towing a trailer or another vehicle, etc.
- When the brakes are cold due to outside temperature being low or just after starting the hybrid system.
- When the brakes are overheated on downhill grades (braking performance is reduced)
- When driving in rain or after washing the vehicle (the brakes are wet and braking performance is reduced)

 
Continued on next page ⇒

⇒ Continued from previous page

- Recognition conditions of the stereo camera


In particular, the function may be unable to stop the vehicle or may not activate in the following cases.

- Bad weather (for example heavy rain, a blizzard or thick fog)
- When visibility is poor due to sand, smoke or water vapor blowing in the wind, or when the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic
- When driving at night or in a tunnel without the headlights on
- When driving at night or in a tunnel when there is a vehicle in front that does not have its taillights on
- When approaching a motorcycle, bicycle or pedestrian at night
- When ambient light is poor in the evening or early morning
- When a vehicle, motorcycle, bicycle or pedestrian is outside the area illuminated by the headlights
- When affected by strong light from the front (for example, sunlight at dawn, sunset or headlight beams, etc.)
- When the windshield has become fogged, scratched, or snow, dirt, dust or frost has adhered to it, or it is otherwise affected.
- When fluid has not been fully wiped off the windshield during or after washer use
- When the target cannot be correctly recognized because the stereo camera's view is obstructed by water droplets from rain or the window washer, or by the wiper blades.
- When the stereo camera's field of view is obstructed (for example by a canoe on the roof of the vehicle)
- When the rear aspect of the vehicle in front is low, small or irregular (the system may recognize another part of the vehicle as its rear and will determine operation from that)
 - When there is an empty truck or trailer with no rear and/or side panels on the cargo bed
 - With vehicles that have cargo protruding from their back ends
 - With non-standard shaped vehicles (vehicle transporters or vehicles with a sidecar fitted, etc.)
 - When the height of the vehicle is low, etc.
- When there is a wall, etc. in front of a stopped vehicle
- When there is another object near the vehicle



S02133

- When a vehicle, etc. has its side facing you.
- With vehicles that are backing up or with oncoming vehicles, etc.
- When the size and height of an obstacle is smaller than the limitations of the stereo camera's recognition capability
 - With small animals or children, etc.
 - With pedestrians who are sitting or lying down
- When the detected object is a fence or wall, etc. with a uniform pattern (a striped pattern or brick pattern, etc.)
- When there is a wall or door made of glass or a mirror in front
- When the vehicle in front suddenly swerves, accelerates, or decelerates.
- When a vehicle, motorcycle, bicycle or pedestrian suddenly cuts in from the side or suddenly runs in front of you.
- When you suddenly change lanes and your vehicle is immediately behind an obstacle
- When there is a vehicle, motorcycle, bicycle or pedestrian in a location close to your vehicle's bumper
- When the speed difference between your vehicle and an obstacle is 4 MPH (5 km/h) or less (As braking is performed once the obstacle is in close proximity to your vehicle, depending on the shape and size of the obstacle, there may be some cases when the obstacle is outside the range of the camera's field of view.)
- When driving on sharp curves, steep uphill grades or steep downhill grades
- When driving on a bumpy or unpaved road
- When there are changes in brightness, such as at a tunnel entrance or exit
- Do not test Pre-Collision Braking System on its own. It may operate improperly and cause an accident.

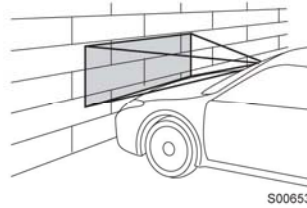

Continued on next page ⇒


Pre-Collision Braking System

⇒ Continued from previous page


- The system may not operate correctly under the conditions listed below. When these conditions occur, turn off the Pre-Collision Braking System.
 - The tire pressure is not correct.*1
 - The temporary spare tire is installed.*1
 - Tires that are unevenly worn or tires with uneven wear patterns are installed.*1
 - Tires that are the wrong size are installed.*1
 - A flat tire has been fixed temporarily with a tire repair kit.
 - The suspension has been modified (including a genuine SUBARU suspension that has been modified).
 - An object that obstructs the stereo camera's view is installed on the vehicle.
 - The headlights are dirty or they have snow and ice or dirt on them. (Objects are not correctly illuminated and are difficult to detect.)
 - The optical axes are not aligned correctly. (Objects are not correctly illuminated and are difficult to detect.)
 - The lights including headlights and fog lights have been modified.
 - Vehicle operation has become unstable due to an accident or malfunction.
 - The brake system warning light is illuminated in red.*2
 - A heavy cargo is loaded onto or inside the vehicle.
 - The maximum number of occupants is exceeded.
 - The combination meter is not operating properly; such as when the lights do not illuminate, the beeps do not sound, the display is different from when it is normal, etc.*3
- *1: The wheels and tires have functions that are critically important. Be sure to use the correct ones. For details, refer to the Owner's Manual for your vehicle.
- *2: If the brake system warning light does not turn off, immediately pull the vehicle over in a safe place and contact a SUBARU dealer to have the system inspected. For details, refer to the Owner's Manual for your vehicle.
- *3: For details about the combination meter, refer to the Owner's Manual for your vehicle.

CAUTION

- In the following situations, turn off the Pre-Collision Braking System. Otherwise the Pre-Collision Braking System may activate unexpectedly.
 - When the vehicle is being towed
 - When loading the vehicle onto a carrier
 - When a chassis dynamometer, free-rollers or similar equipment is used
 - When a mechanic lifts up the vehicle, starts the hybrid system and spins the wheels freely
 - When passing hanging banners, flags or branches, or when thick/tall vegetation is contacting the vehicle
 - When driving on a race track
 - When using a drive-through car wash

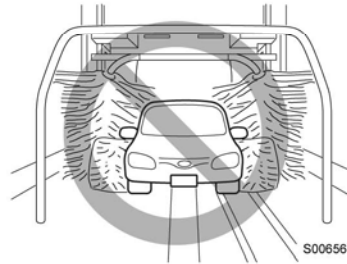

- The Pre-Collision Braking System may activate in the following situations. Therefore concentrate on safe driving.
 - When passing through an automatic gate (opening and shutting)
 - When driving close to the vehicle in front
 - When driving in a location where the grade of the road changes rapidly

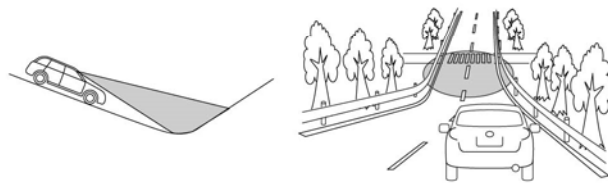


- When visibility is poor due to sand, smoke or water vapor blowing in the wind, or when the front vision is obscured due to water splashes, snow, dirt or dust stir up generated by the vehicle in front or oncoming traffic

Continued on next page ⇒

Pre-Collision Braking System


⇒ Continued from previous page

- When passing through clouds of steam or smoke, etc.
- When driving in adverse weather, such as heavy snow or snowstorms
- When the exhaust gas emitted by the vehicle in front is clearly visible in cold weather, etc.

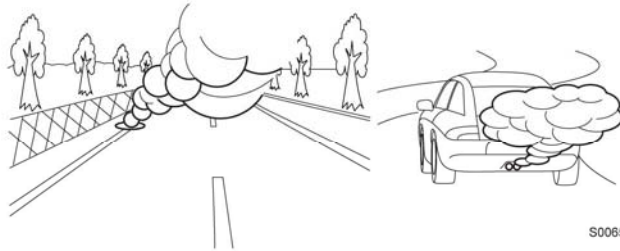

S00652

- When there is an obstacle on a curve or intersection
- When narrowly passing a vehicle or an object
- When stopping very close to a wall or a vehicle in front
- When passing through water spray from road sprinklers or snow clearing sprinklers on the road.

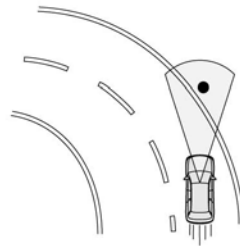

S02669



S02636

- If there is cargo or installed accessories, etc. that are protruding beyond the edge of the front bumper, the vehicle's length will increase and the system may not be able to prevent a collision.

- If the driver operates the brake pedal during automatic braking, the pedal may feel stiff; however, this is normal. By depressing the brake pedal further you can apply more braking force.



NOTE

Some unusual noises may be audible during automatic braking. This is caused by the braking control and is normal.

■ Detection of pedestrians

The EyeSight system can also detect pedestrians. The EyeSight system detects pedestrians from their size, shape and movement. The system detects a pedestrian when the contour of the head and shoulders are clear.



S02846

WARNING

The EyeSight system's Pre-Collision Braking function also identifies pedestrians as obstacles. However, depending on the conditions, there may be cases when the system cannot detect a pedestrian. In the following conditions, the possibility that the system may not be able to detect a pedestrian as an object is particularly high.

- When pedestrians are walking in a group
- When a pedestrian is next to a wall or other obstacle
- When a pedestrian is using an umbrella
- When a pedestrian is wearing clothes that are a similar color to the surrounding environment
- When a pedestrian is carrying bulky luggage
- When a pedestrian is bent over, crouching down or lying down
- When a pedestrian is in a dark location
- When a pedestrian suddenly crosses in front of you from the side or suddenly runs in front of you

Pre-Collision Braking System operation

When there is an obstacle in front of you during driving, the system activates in the following sequence in order to warn the driver, activate braking control, and activate the brake lights.

Following Distance Warning:

When the system determines that there is a risk of collision, a buzzer sounds repeated short beeps and the indicators on the combination meter display illuminate to warn the driver.

The Following Distance Warning operates when Adaptive Cruise Control is not set.

When the driver depresses the brake pedal to decelerate and achieves a suitable following distance, the warning is canceled.

First Braking and Warning:

When the system determines that there is a high risk of collision with an obstacle in front, a buzzer sounds repeated short beeps and the indicators on the combination meter display illuminate to warn the driver. Braking control may be activated and in some situations, the hybrid system output may also be controlled. If the system determines that the amount of evasive action (braking, steering, etc.) taken by the driver has reduced the risk of collision, braking activation is canceled.

Secondary Braking and Warning:

If the system then determines that the risk of collision is extremely high, the buzzer changes to a continuous beeping sound and stronger braking control is activated. Despite any evasive action taken by the driver, if the system subsequently determines that a collision is unavoidable, braking and hybrid system output are controlled by the system.


Apply Brake message


Even after the vehicle has stopped, depress the brake pedal. Until the brake pedal is depressed, a message appears and stays in the warning screen area of the combination meter display for approximately 2 minutes. A single continuous beep sounds while the message is displayed.



S02552

Pre-Collision Braking System

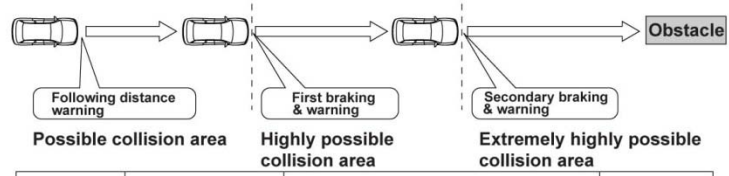

Operating system	Strength of Automatic Braking	Indication on the combination meter display	Warning buzzer type
Following distance warning	No brake control		Repeated short beeps
First braking	Moderate		Repeated short beeps
Secondary braking	Strong		Continuous beep

S03171

**NOTE**

- To release the brake control after the vehicle has come to a stop through Pre-Collision Braking System, perform the following.
 - Depress the brake pedal.
 - Depress the accelerator pedal (except when the select lever is in the **[N]** position).
 - Shift the select lever into the **[P]** position.
- After stopping with secondary braking, in the following cases, brake control will be released and the electronic parking brake will be applied. (For details about how to release the electronic parking brake, refer to the Owner's Manual for your vehicle.)
 - When approximately 2 minutes have elapsed since stopping and the brake pedal is not depressed.
 - When any door (except the rear gate) is opened.
 - When EyeSight is temporarily stopped.
 - The driver's seatbelt is unfastened.
- Neither first braking nor secondary braking will operate in the following cases.
 - When the vehicle speed is approximately 1 MPH (1 km/h) or less (When the select lever is in the **[N]** position and your vehicle speed is approximately 2 MPH (4 km/h) or less) or 100 MPH (160 km/h) or more
 - When Vehicle Dynamics Control is active
- If the system detects the brake lights of the vehicle in front, your vehicle will start decelerating earlier than if it does not.
- There are some cases where the first braking is applied for a longer period of time. One of the reasons for this is due to a large speed difference with an obstacle in front. In those cases, stronger or weaker braking control may be activated.

Pre-Collision Braking Assist operation

When the Pre-Collision Braking System is activated (when the system determines that there is a high risk of collision with an obstacle in front), if the driver depresses the brake pedal, the system determines that this is emergency braking and activates braking assist automatically.

CAUTION

If the driver depresses the brake pedal while following distance warning is activated, the Pre-Collision Braking Assist will not work. The vehicle decelerates with the normal braking force operated by the driver.


NOTE

- Pre-Collision Braking Assist function does not operate when the vehicle speed is approximately 7 MPH (10 km/h) or less or 100 MPH (160 km/h) or more.
- For information about the brake assist function, refer to the Owner's Manual for your vehicle.

Turning off the Pre-Collision Braking System

Press and hold the Pre-Collision Braking System OFF switch for approximately 2 seconds or longer to turn off the Pre-Collision Braking System (including Pre-Collision Braking Assist). When 1 short beep sound emits, this control is turned off and the Pre-Collision Braking System OFF indicator light on the instrument panel illuminates.

To turn the control back on, press and hold the Pre-Collision Braking System OFF switch for approximately 2 seconds or longer again. When this control is turned on, the Pre-Collision Braking System OFF indicator light turns off.

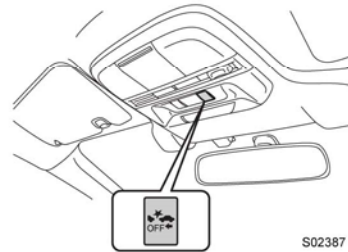

NOTE


- When the Pre-Collision Braking System is turned off, the Pre-Collision Throttle Management Control function is also turned off.
- Even when the Pre-Collision Braking System is turned off, if the ignition switch is turned off and the hybrid system is then restarted, the Pre-Collision Braking System will be turned on. The system default setting when the vehicle is restarted is "ON".

■ Pre-Collision Braking System OFF indicator light

This indicator light illuminates when the ignition switch is turned to the ON position, and remains illuminated for approximately 7 seconds after the hybrid system starts. It turns on when the Pre-Collision Braking System is turned off.

It also illuminates under the following conditions.

- When the EyeSight system has a malfunction.
⇒ Refer to page 107.
- When the EyeSight system has stopped temporarily.
⇒ Refer to page 108.

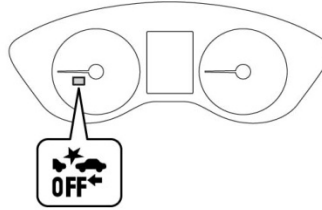

S02407



NOTE

When the Pre-Collision Braking System OFF indicator light is turned on, the Pre-Collision Braking System (including the Pre-Collision Braking Assist function) does not operate.

 **CAUTION**

- When shifting the select lever to the [N] or [B] position, Adaptive Cruise Control will be automatically canceled. Do not shift the lever to the [N] position unless in an emergency. Otherwise the engine brake may not operate, which could cause an accident.
- When a vehicle stops, if an automatic cancellation is performed by the system before starting the stay-stopped function (⇒ refer to page 58), the electronic parking brake will not operate.

 **NOTE**

- If the EyeSight operation has temporarily stopped, the Pre-Collision Braking System OFF indicator light and Lane Departure Warning OFF indicator light illuminate, and the EyeSight temporary stop indicator is displayed on the combination meter display.
⇒ Refer to page 108.
- If EyeSight is malfunctioning, the EyeSight warning indicator is displayed on the combination meter display, and the Pre-Collision Braking System OFF indicator light and Lane Departure Warning OFF indicator light will also illuminate. If this occurs, stop the vehicle in a safe location and then turn off the hybrid system and restart it. If the indicators remain illuminated after restarting the hybrid system, Adaptive Cruise Control cannot be used. This will not interfere with ordinary driving; however the system should be inspected by a SUBARU dealer as soon as possible.
⇒ Refer to page 107.
- When the operation of Adaptive Cruise Control has been automatically canceled, perform the Adaptive Cruise Control setting operation again after the condition that caused the cancellation has been corrected. If the Adaptive Cruise Control function cannot be activated even after the condition has been corrected, EyeSight may be malfunctioning. This will not interfere with ordinary driving; however contact a SUBARU dealer and have the system inspected.

Driver Assist indicator

The operating status of the EyeSight system is indicated at the top of the combination meter.


This allows the driver to remain aware of warnings and displayed information without taking their eyes off the surrounding driving environment.

The LED indicators can be set to ON/OFF. Refer to "Customizing functions" for setting details.

⇒ Refer to page 110.

Driver Assist indicator operation

To inform the driver of the operation condition of EyeSight while driving, the LED indicators illuminate or flash at the top of the combination meter.

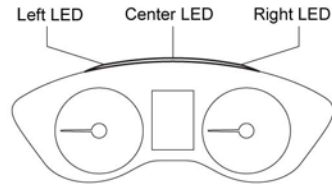

S03365

Display	Condition
Red indicators flash simultaneously (3 indicators)	The Following Distance Warning, Pre-Collision Braking System (first braking or secondary braking), Obstacle Detected Warning or Pre-Collision Throttle Management is operating.
Yellow indicator flashes (one side)	The Lane Departure Warning (The side where the vehicle has left its lane flashes, and the side that has not left its lane illuminates.) is operating.
Yellow indicators flash (alternately)	Lane Sway Warning is operating.
Yellow indicators flash simultaneously	Steering wheel operation could not be detected for a certain period of time.
Green indicator illuminates	A vehicle is detected ahead while Adaptive Cruise Control is operating.

List of buzzer sounds

Buzzer sound	Status	Reference page
Single continuous beep	Pre-Collision Braking System: Secondary Braking is active.	⇒ Refer to page 35.
1 short beep and 1 long beep	Adaptive Cruise Control or Conventional Cruise Control is canceled automatically.	⇒ Refer to pages 62 and 102.
	The stay-stopped function is canceled and the electronic parking brake is automatically applied.	⇒ Refer to page 60.
	Lane Keep Assist is canceled automatically.	⇒ Refer to page 75.
Repeated short beeps	Pre-Collision Braking System: First Braking is active.	⇒ Refer to page 35.
	Pre-Collision Braking System: The following distance warning is active.	
	The "Obstacle Detected" warning from Adaptive Cruise Control is active.	⇒ Refer to page 65.
	Pre-Collision Throttle Management is active.	⇒ Refer to page 77.
3 short beeps	The Lane Departure Warning is active.	⇒ Refer to page 83.
	The Lane Sway Warning is active.	⇒ Refer to page 87.
5 intermittent beeps, 1 short beep and 1 long beep	The stay-stopped function of Adaptive Cruise Control continued for 2 minutes and the electronic parking brake was automatically applied.	⇒ Refer to page 60.
3 short beeps and 1 long beep	Pre-Collision Braking System: Just before the automatic brake is slowly released by the system after the vehicle is stopped by the pre-collision braking.	⇒ Refer to page 26.
	Adaptive Cruise Control System: Just before the automatic brake is released by the system after the vehicle is stopped by the Adaptive Cruise Control System. Adaptive Cruise Control System will stop the vehicle according to the lead vehicle stops.	⇒ Refer to page 41.

List of buzzer sounds


Buzzer sound	Status	Reference page
1 short beep	Either of the following occurred while Adaptive Cruise Control was set. - A vehicle in front is detected*. - A vehicle in front is no longer detected*.	⇒ Refer to page 51.
	The cruise control mode (Adaptive Cruise Control ↔ Conventional Cruise Control) is changed.	⇒ Refer to pages 96 and 98.
	EyeSight is malfunctioning.	⇒ Refer to pages 107 and 108.
	EyeSight operation is temporarily stopped.	
	Pre-Collision Braking System and Pre-Collision Throttle Management are turned on/off.	⇒ Refer to pages 39 and 82.
The Lane Departure Warning and the Lane Sway Warning are turned on/off.	⇒ Refer to pages 85 and 89.	
Two-tone beep	Lead Vehicle Start Alert is active*.	⇒ Refer to page 90.


*: The buzzer that indicates when a lead vehicle is detected or when it is no longer detected (Lead Vehicle Acquisition Sound), as well as the Lead Vehicle Start Alert can be turned on or off.
⇒ Refer to page 110.


EyeSight malfunction and temporary stop

If a malfunction is detected in the EyeSight system, the indicators in the instrument panel and the combination meter display inform the driver of the malfunction. Check the displayed contents and take the appropriate action.

■ Malfunction (including position/angle misalignment of stereo camera)

The buzzer sounds 1 short beep and the EyeSight warning indicator  (yellow) flashes or illuminates. At the same time, the Pre-Collision Braking System OFF indicator light and the Lane Departure Warning OFF indicator light will illuminate. A message will also be displayed on the combination meter display.

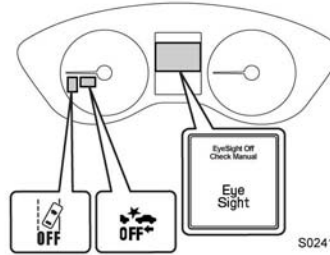


Displayed screen	Cause	Action
 S03005	An EyeSight malfunction or position/angle misalignment of stereo camera has occurred.	Inspection and adjustment is necessary. Contact your SUBARU dealer.

NOTE


- If the EyeSight warning indicator illuminates or flashes, stop the vehicle in a safe location, turn off the hybrid system, and then restart it.
- If the indicator continues illuminating or flashing even after the hybrid system has been restarted, the EyeSight system has a malfunction. In this case, all EyeSight functions will be stopped. Normal driving will still be possible. However, contact a SUBARU dealer for an inspection.
- If the EyeSight warning indicator illuminates or flashes, the RAB system will not operate.

■ Temporary stop



The buzzer will sound one short beep, and the EyeSight temporary stop indicator  (white), Pre-Collision Braking System OFF indicator light and Lane Departure Warning OFF indicator light will illuminate at the same time.

A message will also be displayed on the combination meter display.

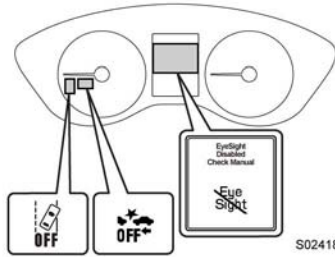






When the cause has been resolved, temporary stop will be canceled and the EyeSight system will automatically restart.



 S02418

Displayed screen	Cause	Action
 <p>S02996</p>	It is difficult for the stereo camera to detect objects in front <ul style="list-style-type: none"> • The windshield is dirty or fogged up • Poor weather conditions • Strong light from the front 	<ul style="list-style-type: none"> • Clean the windshield. • In poor weather conditions or if there is strong light from the front, the EyeSight system will restart once you have driven your vehicle for a period of time and the conditions affecting the system have improved. If the system does not restart, even after the conditions have improved and a period of time has elapsed, contact your SUBARU dealer for an inspection.
 <p>S02997</p>	In low or high temperatures	The system will restart once the temperature is within the operational range of the EyeSight system. If the system does not restart, even when the temperature inside the vehicle is within the operational range, contact your SUBARU dealer for an inspection.

  ■ Message screen list (precautions and notices)

Item	Displayed screen	i mark	Reference page
Pre-Collision Braking System		None	⇒ Refer to page 35.
The "Obstacle Detected" warning	 S02999	None	⇒ Refer to page 65.
Pre-Collision Throttle Management		None	⇒ Refer to page 77.
Apply Brake	 S03000	None	⇒ Refer to page 35.
Lane Departure Warning	 S03002	None	⇒ Refer to page 83.
Lane Sway Warning	 S03003	None	⇒ Refer to page 87.
Lead Vehicle Start Alert	 S03004	None	⇒ Refer to page 90.
Steering operation is not detected by Lane Keep Assist	 S03001	None	⇒ Refer to page 75.
Adaptive Cruise Control/Conventional Cruise Control automatic cancellation (when the grade of the road is very steep)	 S02425	None	⇒ Refer to pages 62 and 102.

APPENDIX C

Run Log

Subject Vehicle: **2019 Subaru Crosstrek Hybrid**

Test Date: **6/4/2019**

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
1-14	Brake characterization and confirmation						See Appendix D
	Static Run						
15	Stopped POV	N					brake force activation
16		Y	2.78	2.51	0.91	Pass	
17		N					brake force activation
18		Y	2.81	3.05	0.87	Pass	CIB activation before actuator
19		Y	2.66	2.90	0.85	Pass	
20		Y	2.89	2.95	0.88	Pass	
21		Y	2.87	4.67	0.84	Pass	
22		Y	2.86	2.79	0.80	Pass	
23		Y	2.70	2.80	0.92	Pass	
24	Static Run						

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
25	Slower POV, 25 vs 10	Y	2.53	6.64	0.93	Pass	
26		Y	2.44	5.42	0.87	Pass	
27		Y	2.47	6.46	0.92	Pass	
28		Y	2.38	4.32	0.76	Pass	
29		N					Lat Offset
30		Y	2.46	5.78	0.82	Pass	
31		Y	2.41	5.55	0.96	Pass	
32		Y	2.52	6.28	0.91	Pass	
33	Static run						
34	Slower POV, 45 vs 20	Y	3.06	5.14	0.80	Pass	
35		N					Lat Offset
36		Y	3.12	5.47	0.79	Pass	CIB activation before DBS brake
37		Y	3.26	5.88	0.89	Pass	

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
38		N					SV & POV Speed
39		Y	3.03	4.92	0.85	Pass	CIB activation before DBS brake
40		Y	2.95	4.70	0.79	Pass	
41		N					SV Speed
42		Y	3.05	12.32	0.98	Pass	CIB activation before DBS brake
43		Y	2.96	8.64	0.89	Pass	CIB activation before DBS brake
44	Static run						
45	Braking POV, 35	N					SV Speed, Early brake release
46		N					Brake force not zeroed
47		Y	1.87	6.32	0.86	Pass	
48		Y	1.87	6.86	0.81	Pass	
49		N					POV Braking
50		Y	2.03	8.48	0.84	Pass	
51		N					SV Speed, POV Braking
52		N					POV Braking

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
53		Y	1.99	9.45	0.96	Pass	
54		Y	1.86	6.96	0.82	Pass	
55		N					SV Speed, POV Braking
56		Y	2.10	13.20	0.94	Pass	
57		Y	2.00	8.83	0.86	Pass	
58	Static run						
59	STP - Static run						
60	Baseline, 25	Y			0.48		
61		Y			0.50		
62		Y			0.48		
63		N					brake force
64		Y			0.47		
65		Y			0.47		
66		Y			0.48		

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
67		Y			0.47		
68	STP - Static run						
69	Baseline, 45	N					Avg decel low
70		Y			0.47		changed brake force to 11.3lbf
71		Y			0.46		
72		Y			0.45		
73		Y			0.49		
74		N					Brake force
75		Y			0.48		
76		Y			0.49		
77		Y			0.47		
78	STP - Static run						
79	STP False Positive, 25	Y			0.48	Pass	

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
80		Y			0.49	Pass	
81		Y			0.49	Pass	
82		Y			0.51	Pass	
83		Y			0.48	Pass	
84		Y			0.51	Pass	
85		Y			0.51	Pass	
86	STP - Static run						
87	STP False Positive, 45	Y			0.44	Pass	
88		Y			0.48	Pass	
89		N					Throttle release
90		Y			0.45	Pass	
91		N					Lat Offset, Throttle Release
92		Y			0.48	Pass	
93		Y			0.52	Pass	

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
94		N					Lat Offset, Throttle Release
95		Y			0.56	Pass	
96		N					Late throttle
97	STP - Static run						

APPENDIX D

Brake Characterization

DBS Initial Brake Characterization				
Run Number	Stroke at 0.4 g (in)	Force at 0.4 g (lb)	Slope	Intercept
1	2.157219	14.99539	0.656665	0.400666
2	2.16993	15.26208	0.593771	0.477455
3	2.165192	14.83913	0.569131	0.510128

DBS Brake Characterization Confirmation								
Run	DBS Mode	Speed	Valid Run	Average Decel. (g)	0.4 g Stroke Value (in)	0.4 g Force Value (lb)	Stroke/Force Calculator (in)	Notes
4	Displacement	35		0.483	2.16		1.79	
5		35		0.367	1.90		2.07	
6		35		0.412	2.00		1.94	
7		25		0.416	2.00		1.92	
8		45		0.416	2.00		1.92	
9	Hybrid	35		0.552		15.03	10.89	
10		35		0.495		13.00	10.51	
11		35		0.436		11.00	10.09	

DBS Brake Characterization Confirmation

Run	DBS Mode	Speed	Valid Run	Average Decel. (g)	0.4 g Stroke Value (in)	0.4 g Force Value (lb)	Stroke/Force Calculator (in)	Notes
12		35		0.406		10.00	9.85	
13		25		0.406		10.00	9.85	
14		45		0.396		10.00	10.10	

Appendix E

TIME HISTORY PLOTS

LIST OF FIGURES

	Page
Figure E1. Example Time History for Stopped POV, Passing	11
Figure E2. Example Time History for Slower POV 25 vs. 10, Passing	12
Figure E3. Example Time History for Slower POV 45 vs. 20, Passing	13
Figure E4. Example Time History for Braking POV 35, Passing	14
Figure E5. Example Time History for False Positive Baseline 25, Passing.....	15
Figure E6. Example Time History for False Positive Baseline 45, Passing.....	16
Figure E7. Example Time History for False Positive Steel Plate 25, Passing	17
Figure E8. Example Time History for False Positive Steel Plate 45, Passing	18
Figure E9. Example Time History for DBS Brake Characterization, Passing	19
Figure E10. Example Time History Displaying Various Invalid Criteria.....	20
Figure E11. Example Time History Displaying Various Invalid Criteria.....	21
Figure E12. Example Time History for a Failed Run.....	22
Figure E13. Time History for DBS Run 16, SV Encounters Stopped POV	23
Figure E14. Time History for DBS Run 18, SV Encounters Stopped POV	24
Figure E15. Time History for DBS Run 19, SV Encounters Stopped POV	25
Figure E16. Time History for DBS Run 20, SV Encounters Stopped POV	26
Figure E17. Time History for DBS Run 21, SV Encounters Stopped POV	27
Figure E18. Time History for DBS Run 22, SV Encounters Stopped POV	28
Figure E19. Time History for DBS Run 23, SV Encounters Stopped POV	29
Figure E20. Time History for DBS Run 25, SV Encounters Slower POV, SV 25 mph, POV 10 mph.....	30
Figure E21. Time History for DBS Run 26, SV Encounters Slower POV, SV 25 mph, POV 10 mph.....	31
Figure E22. Time History for DBS Run 27, SV Encounters Slower POV, SV 25 mph, POV 10 mph.....	32
Figure E23. Time History for DBS Run 28, SV Encounters Slower POV, SV 25 mph, POV 10 mph.....	33
Figure E24. Time History for DBS Run 30, SV Encounters Slower POV, SV 25 mph, POV 10 mph.....	34
Figure E25. Time History for DBS Run 31, SV Encounters Slower POV, SV 25 mph, POV 10 mph.....	35
Figure E26. Time History for DBS Run 32, SV Encounters Slower POV, SV 25 mph, POV 10 mph.....	36
Figure E27. Time History for DBS Run 34, SV Encounters Slower POV, SV 45 mph, POV 20 mph.....	37

Figure E28. Time History for DBS Run 36, SV Encounters Slower POV, SV 45 mph, POV 20 mph.....	38
Figure E29. Time History for DBS Run 37, SV Encounters Slower POV, SV 45 mph, POV 20 mph.....	39
Figure E30. Time History for DBS Run 39, SV Encounters Slower POV, SV 45 mph, POV 20 mph.....	40
Figure E31. Time History for DBS Run 40, SV Encounters Slower POV, SV 45 mph, POV 20 mph.....	41
Figure E32. Time History for DBS Run 42, SV Encounters Slower POV, SV 45 mph, POV 20 mph.....	42
Figure E33. Time History for DBS Run 43, SV Encounters Slower POV, SV 45 mph, POV 20 mph.....	43
Figure E34. Time History for DBS Run 47, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	44
Figure E35. Time History for DBS Run 48, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	45
Figure E36. Time History for DBS Run 50, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	46
Figure E37. Time History for DBS Run 53, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	47
Figure E38. Time History for DBS Run 54, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	48
Figure E39. Time History for DBS Run 56, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	49
Figure E40. Time History for DBS Run 57, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	50
Figure E41. Time History for DBS Run 60, False Positive Baseline, SV 25 mph.....	51
Figure E42. Time History for DBS Run 61, False Positive Baseline, SV 25 mph.....	52
Figure E43. Time History for DBS Run 62, False Positive Baseline, SV 25 mph.....	53
Figure E44. Time History for DBS Run 64, False Positive Baseline, SV 25 mph.....	54
Figure E45. Time History for DBS Run 65, False Positive Baseline, SV 25 mph.....	55
Figure E46. Time History for DBS Run 66, False Positive Baseline, SV 25 mph.....	56
Figure E47. Time History for DBS Run 67, False Positive Baseline, SV 25 mph.....	57
Figure E48. Time History for DBS Run 70, False Positive Baseline, SV 45 mph.....	58
Figure E49. Time History for DBS Run 71, False Positive Baseline, SV 45 mph.....	59
Figure E50. Time History for DBS Run 72, False Positive Baseline, SV 45 mph.....	60
Figure E51. Time History for DBS Run 73, False Positive Baseline, SV 45 mph.....	61
Figure E52. Time History for DBS Run 75, False Positive Baseline, SV 45 mph.....	62
Figure E53. Time History for DBS Run 76, False Positive Baseline, SV 45 mph.....	63

Figure E54.	Time History for DBS Run 77, False Positive Baseline, SV 45 mph.....	64
Figure E55.	Time History for DBS Run 79, SV Encounters Steel Trench Plate, SV 25 mph	65
Figure E56.	Time History for DBS Run 80, SV Encounters Steel Trench Plate, SV 25 mph	66
Figure E57.	Time History for DBS Run 81, SV Encounters Steel Trench Plate, SV 25 mph	67
Figure E58.	Time History for DBS Run 82, SV Encounters Steel Trench Plate, SV 25 mph	68
Figure E59.	Time History for DBS Run 83, SV Encounters Steel Trench Plate, SV 25 mph	69
Figure E60.	Time History for DBS Run 84, SV Encounters Steel Trench Plate, SV 25 mph	70
Figure E61.	Time History for DBS Run 85, SV Encounters Steel Trench Plate, SV 25 mph	71
Figure E62.	Time History for DBS Run 87, SV Encounters Steel Trench Plate, SV 45 mph	72
Figure E63.	Time History for DBS Run 88, SV Encounters Steel Trench Plate, SV 45 mph	73
Figure E64.	Time History for DBS Run 90, SV Encounters Steel Trench Plate, SV 45 mph	74
Figure E65.	Time History for DBS Run 92, SV Encounters Steel Trench Plate, SV 45 mph	75
Figure E66.	Time History for DBS Run 93, SV Encounters Steel Trench Plate, SV 45 mph	76
Figure E67.	Time History for DBS Run 95, SV Encounters Steel Trench Plate, SV 45 mph	77
Figure E68.	Time History for DBS Run 1, Brake Characterization Initial	78
Figure E69.	Time History for DBS Run 2, Brake Characterization Initial	79
Figure E70.	Time History for DBS Run 3, Brake Characterization Initial	80
Figure E71.	Time History for DBS Run 4, Brake Characterization Determination 35 mph	81
Figure E72.	Time History for DBS Run 5, Brake Characterization Determination 35 mph	82
Figure E73.	Time History for DBS Run 6, Brake Characterization Determination 35 mph	83
Figure E74.	Time History for DBS Run 9, Brake Characterization Determination 35 mph	84
Figure E75.	Time History for DBS Run 10, Brake Characterization Determination 35 mph	85

Figure E76. Time History for DBS Run 11, Brake Characterization Determination 35 mph	86
Figure E77. Time History for DBS Run 12, Brake Characterization Determination 35 mph	87
Figure E78. Time History for DBS Run 7, Brake Characterization Determination 25 mph	88
Figure E79. Time History for DBS Run 13, Brake Characterization Determination 25 mph	89
Figure E80. Time History for DBS Run 8, Brake Characterization Determination 45 mph	90
Figure E81. Time History for DBS Run 14, Brake Characterization Determination 45 mph	91

Description of Time History Plots

A set of time history plots is provided for each valid run in the test series. Each set of plots comprises time varying data from both the Subject Vehicle (SV) and the Principal Other Vehicle (POV), as well as pass/fail envelopes and thresholds. The following is a description of data types shown in the time history plots, as well as a description of the color code indicating to which vehicle the data pertain.

Time History Plot Description

Each time history plot consists of data relevant to the test type under consideration, and therefore the data channels plotted vary according to test type. The test types (shown in the plot titles) include:

- Stopped POV (SV at 25 mph)
- Slower POV, 25/10 (SV at 25 mph, POV at 10 mph)
- Slower POV, 45/20 (SV at 45 mph, POV at 20 mph)
- Braking POV 35 mph (Both vehicles at 35 mph with 13.8 m gap, POV brakes at 0.3 g)
- False Positive Baseline 25 mph (Baseline run at 25 mph)
- False Positive Baseline 45 mph (Baseline run at 45 mph)
- False Positive STP 25 mph (Steel trench plate run over at 25 mph)
- False Positive STP 45 mph (Steel trench plate run over at 45 mph)
- DBS Brake Characterization, Initial
- DBS Brake Characterization Determination

Time history figures include the following sub-plots:

- FCW Warning – Displays the Forward Collision Warning alert (which can be audible, visual, or haptic). Depending on the type of FCW alert or instrumentation used to measure the alert, this can be any combination of the following:
 - Filtered, rectified, and normalized sound signal. The vertical scale is 0 to 1.
 - Filtered, rectified, and normalized acceleration (i.e., haptic alert, such as steering wheel vibration). The vertical scale is 0 to 1.
 - Normalized light sensor signal. The vertical scale is 0 to 1.

As only the audible or haptic alert is perceptible by the driver during a test run, the earliest of either of these alerts is used to define the onset of the FCW alert. A vertical black bar on the plot indicates the TTC (sec) at the first moment of the warning issued by the FCW system. The FCW TTC is displayed to the right of the subplot in green.

- Headway (ft) – Longitudinal separation between the frontmost point of the Subject Vehicle and the rearmost point of the Strikeable Surrogate Vehicle (SSV) towed by the Principal Other Vehicle. The minimum headway during the run is displayed to the right of the subplot.
- SV/POV Speed (mph) – Speed of the Subject Vehicle and the Principal Other Vehicle (if any). For DBS tests, in the case of an impact, the speed reduction experienced by the Subject Vehicle up until the moment of impact is displayed to the right of the subplot.
- Yaw Rate (deg/sec) – Yaw rate of the Subject Vehicle and Principal Other Vehicle (if any).
- Lateral Offset (ft) – Lateral offset within the lane of the Subject Vehicle to the center of the lane of travel. Note that for tests involving the Strikeable Surrogate Vehicle (SSV), the associated lateral restraint track is defined to be the center of the lane of travel. If testing is done with a different POV which does not have a lateral restraint track, lateral offset is defined to be the lateral offset between the SV and POV.
- Ax (g) – Longitudinal acceleration of the Subject Vehicle and Principal Other Vehicle (if any). The peak value of Ax for the SV is shown on the subplot.
- Pedal Position (in) – Position of the accelerator pedal and brake pedal.
- Brake Force (lb) – Force on the brake pedal as applied by the DBS controller. The TTC at the onset of the brake by the DBS controller is shown on the subplot. Additionally, the average force at the brake pedal while the DBS controller is active is displayed.

Note that the minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then "RTK Fixed OR LESS!!" is displayed in red.

Envelopes and Thresholds

Some of the time history plot figures contain either green or yellow envelopes and/or black threshold lines. These envelopes and thresholds are used to programmatically and visually determine the validity of a given test run. Envelope and threshold exceedances are indicated with either red shading or red asterisks, and red text is placed to the right side of the plot indicating the type of exceedance. Such exceedances indicate either that the test was invalid or that the requirements of the test were not met (i.e., failure of the AEB system).

For plots with green envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope boundaries at any time within the envelope. Exceedances of a green envelope are indicated by red shading in the area between the measured time-varying data and the envelope boundaries.

For plots with yellow envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope at the beginning (left edge of the boundary) and/or end (right edge), but may exceed the boundary during the time between the left and right edges. Exceedances at the left or right extent of a yellow envelope are indicated by red asterisks.

For the headway plot, a dashed black threshold line indicating a relative headway of zero is given. If no impact occurs, a green circle is displayed at the moment of minimum distance. If impact occurs, a red asterisk is displayed at the moment of impact.

For the plot indicating the A_x , if the scenario is an AEB brake to stop scenario, a vertical dashed black line is displayed for all plots indicating the moment of first POV braking. The yellow envelope in this case is relevant to the POV braking only. The left edge of the envelope is at 1.5 seconds after the first POV braking. A solid black threshold line extends horizontally 0.5 seconds to the left of the envelope. This threshold line represents the time during which the A_x of the Principal Other Vehicle must first achieve 0.27g (the upper edge of the envelope). A green circle or red asterisk is displayed at the moment the POV brake level achieves 0.27g. A green circle indicates that the test was valid (the threshold was crossed during the appropriate interval) and a red asterisk indicates that the test was invalid (the threshold was crossed out of the appropriate interval).

For the pedal position plot, a thick black bar appears on the brake pedal position data over the DBS controller brake onset period to signify the time over which the brake application rate is determined. The calculated brake application rate is also displayed on the figure.

For the brake force plot, a dashed black threshold line indicating a brake force of 2.5 lbs is given. For the time period where the DBS controller is active, the brake force at the pedal must not fall below this 2.5 lb threshold. Exceedances of this threshold are indicated by red shading in the area between the measured time-varying data and the dashed threshold line. The yellow envelope in this case is used only to visualize the target average brake force necessary for the test to be valid.

Color Codes

Color codes have been adopted to easily identify which data correspond to which vehicle, as well as to indicate the types of envelopes and thresholds used in the plots.

Color codes can be broken into four categories:

1. Time-varying data
2. Validation envelopes and thresholds
3. Individual data points
4. Text

1. Time-varying data color codes:

- Blue = Subject Vehicle data
- Magenta = Principal Other Vehicle data
- Brown = Relative data between SV and POV (i.e., TTC, lateral offset and headway distance)

2. Validation envelope and threshold color codes:

- Green envelope = time varying data must be within the envelope at all times in order to be valid
- Yellow envelope = time varying data must be within limits at left and/or right ends
- Black threshold (Solid) = time varying data must cross this threshold in the time period shown in order to be valid

- Black threshold (Dashed) = for reference only – this can include warning level thresholds, TTC thresholds, and acceleration thresholds

3. Individual data point color codes:

- Green circle = passing or valid value at a given moment in time
- Red asterisk = failing or invalid value at a given moment in time

4. Text color codes:

- Green = passing or valid value
- Red = failing or invalid value

Examples of valid or passing time history plots for each test type (including passing, failing, and invalid runs) are shown in Figure E1 through E12. Figures E1 through E8 show passing runs for each of the 8 test types. Figure E9 shows an example of a passing brake characterization run. Figures E10 and E11 show examples of invalid runs. Figure E12 shows an example of a valid test that failed the DBS requirements.

Time history data plots for the tests of the vehicle under consideration herein are provided beginning with Figure E13.

Notes: For this vehicle, the CIB system typically intervened before the DBS actuator. This is indicated by the increase in deceleration, beyond coastdown level, and a slight increase in brake pedal force prior to the brake actuator firing. The increase in deceleration is indicative of CIB activation and it is likely that CIB activation caused the brake pedal either stiffen up a bit moved or move slightly, which creates the slight rise in the brake force that you see correspond to the onset of the SV deceleration.

Furthermore, As the NHTSA requirement for considering the brake robot to be “on” is only 2.5 lbs, the post processor looks for the first time the brake force rises above 2.5 lbs. Because the CIB activation is causing some change near the brake pedal, in some cases (such as the ones with the red asterisks: Runs 18, 36, 39,42, and 43) the change is enough to push the force just over 2.5 lbs, while in other cases (one where a green dot is still shown in the correct location) the change was not enough to push the force just over 2.5lbs and the 2.5 lbs threshold was only crossed when the DBS actuator fired.

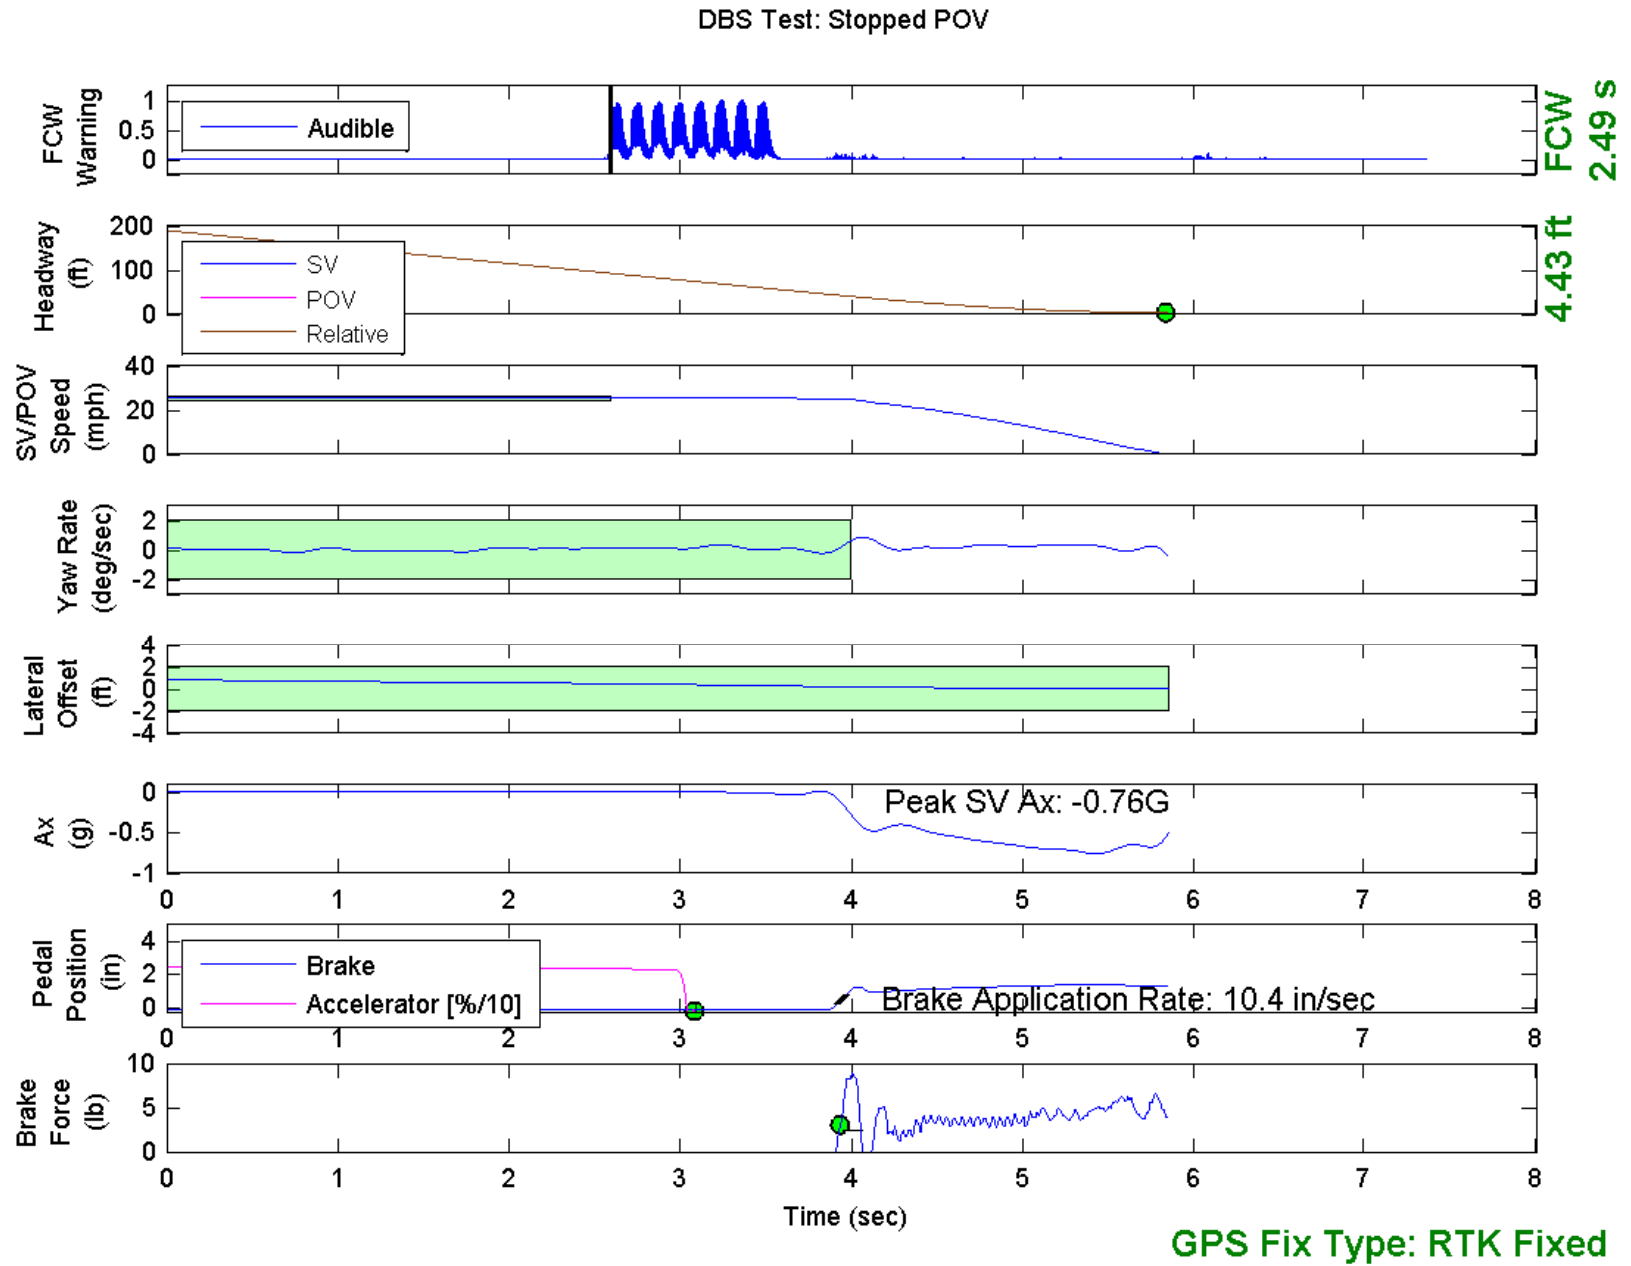


Figure E1. Example Time History for Stopped POV, Passing

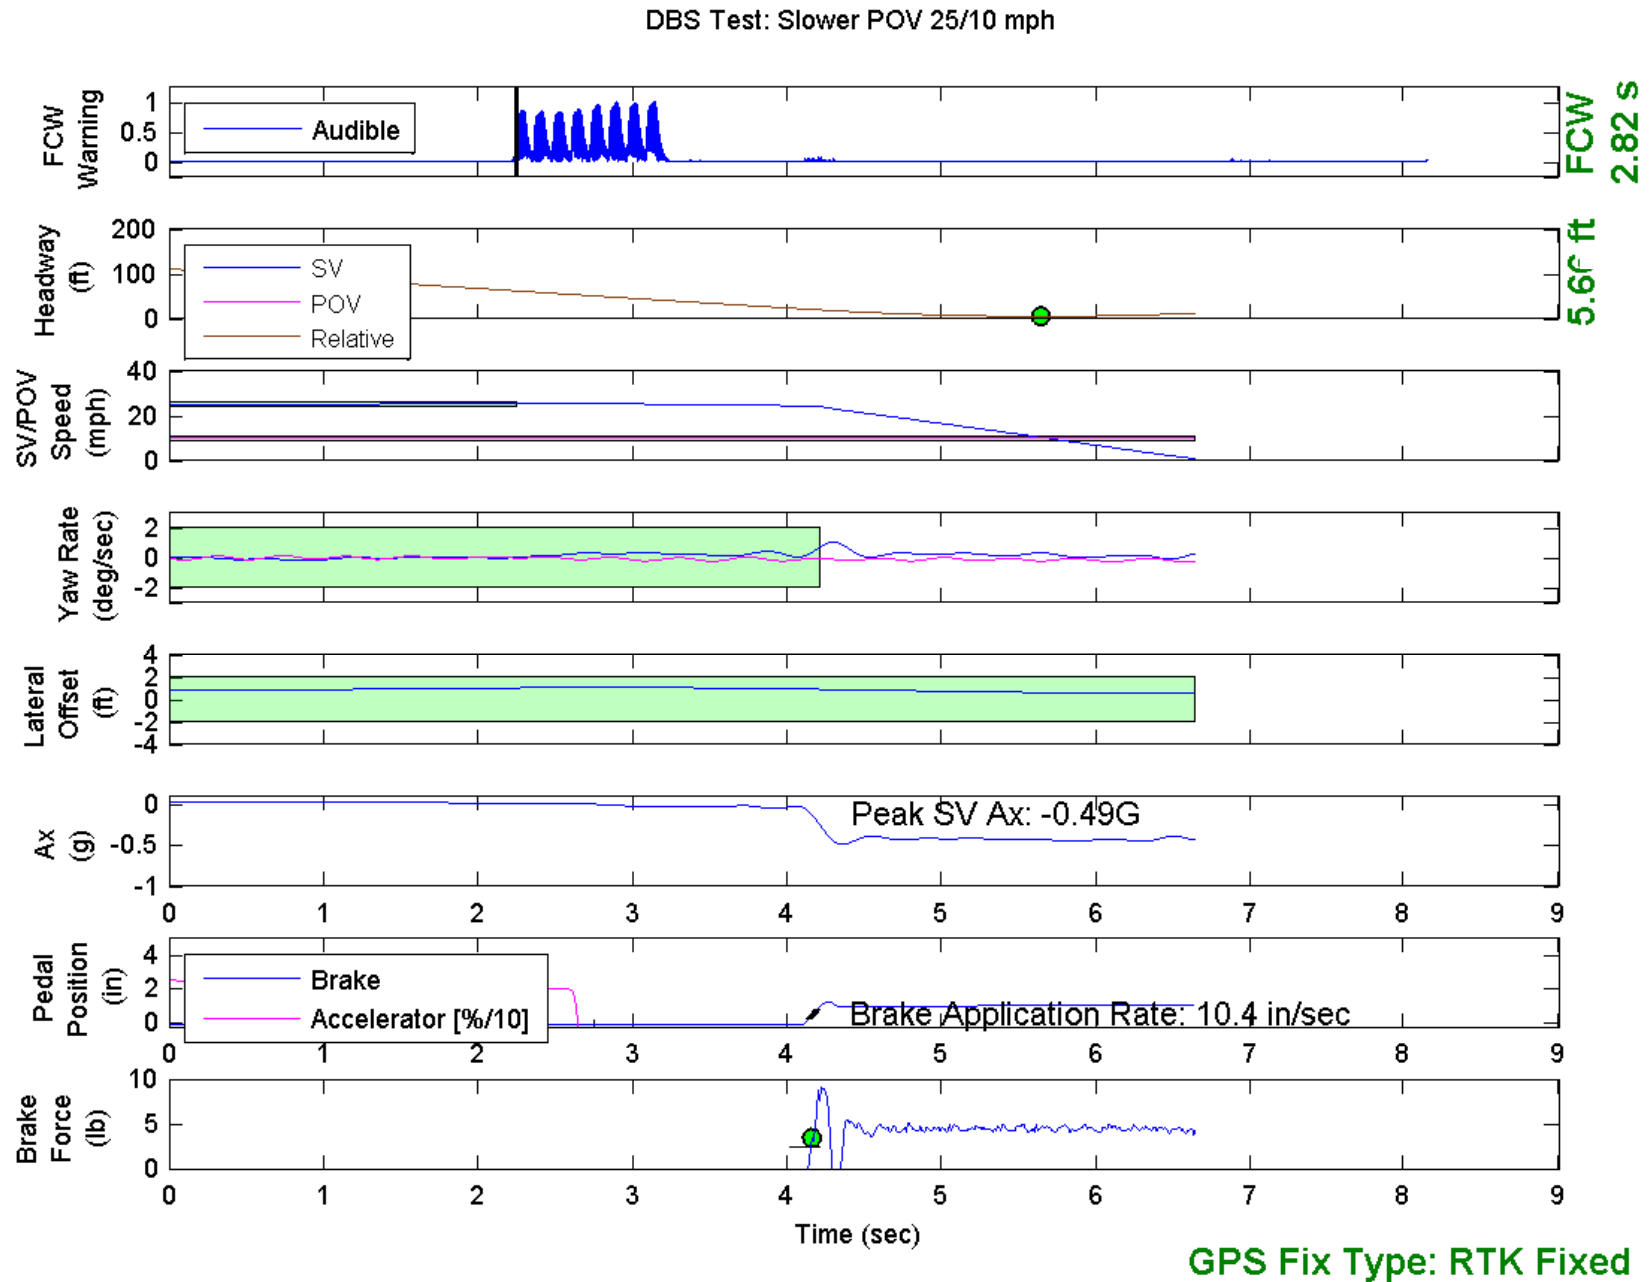


Figure E2. Example Time History for Slower POV 25 vs. 10, Passing

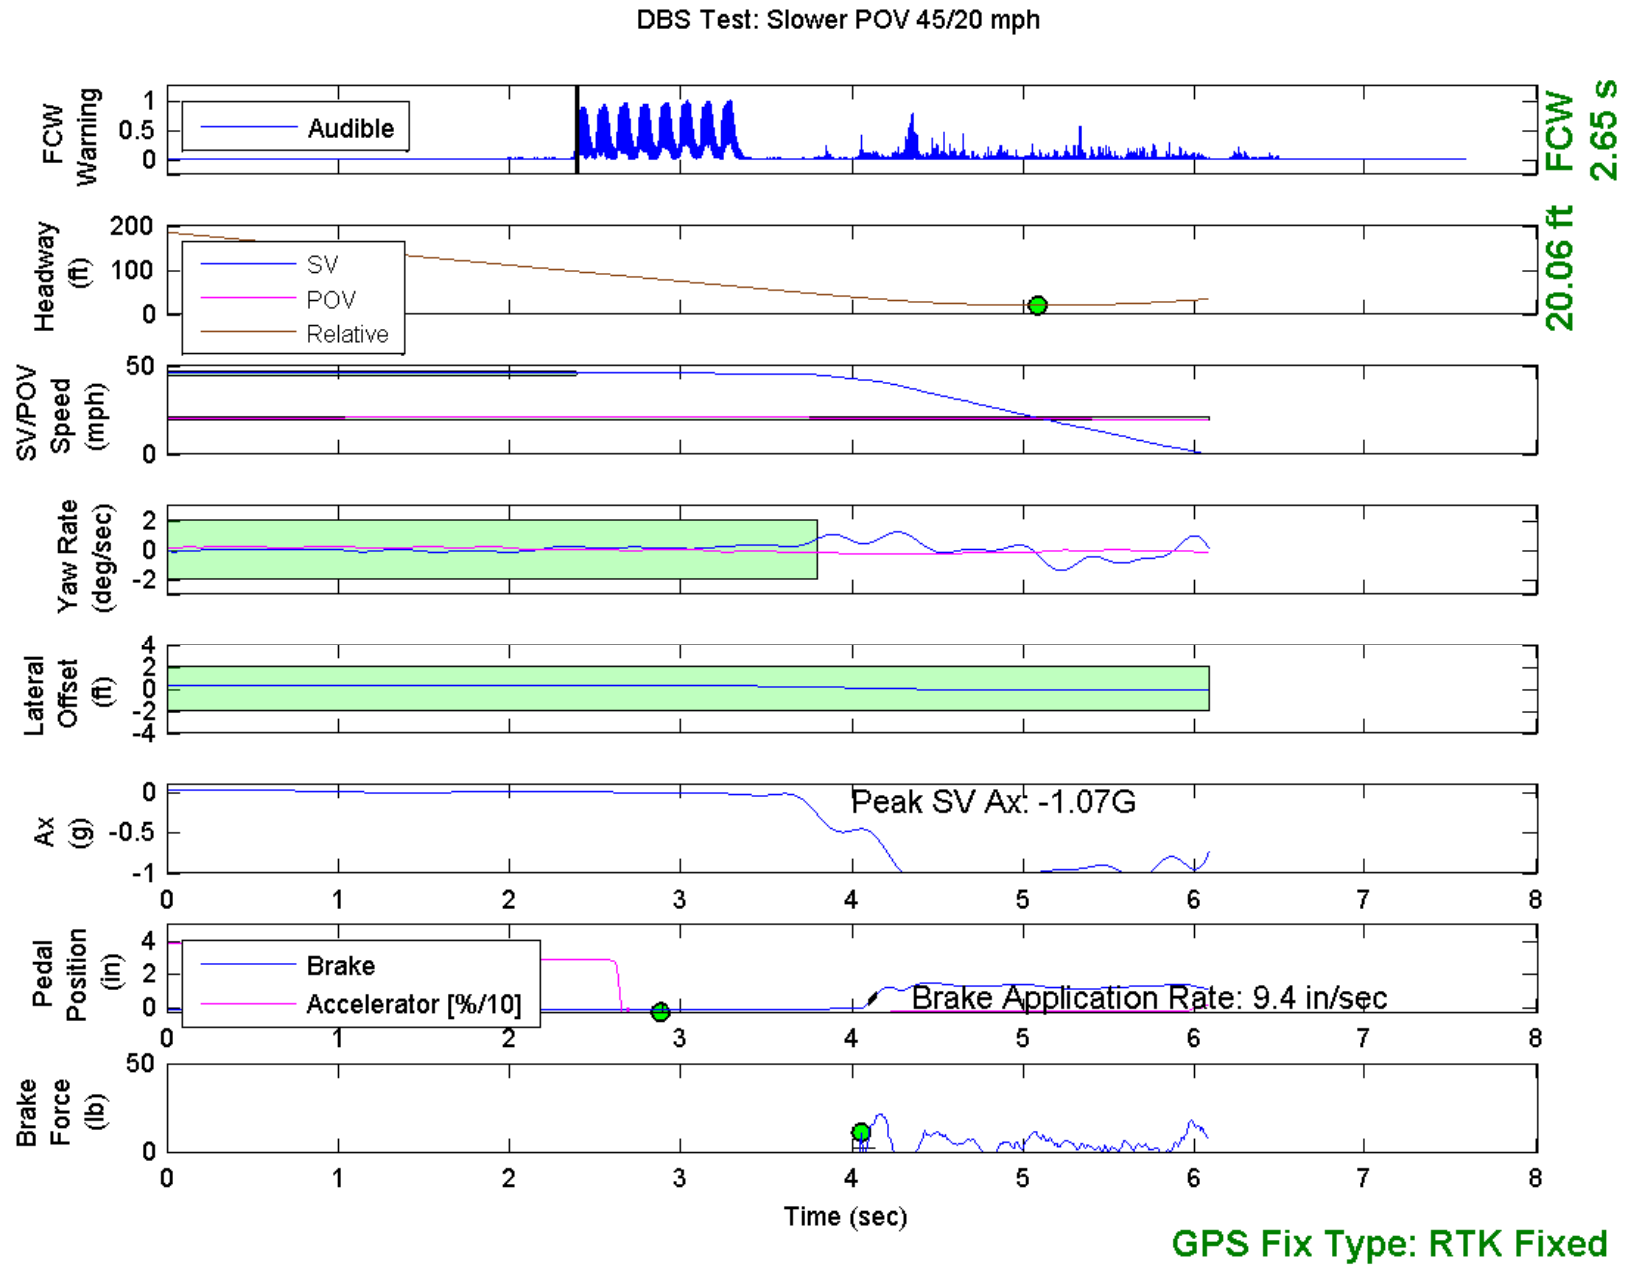


Figure E3. Example Time History for Slower POV 45 vs. 20, Passing

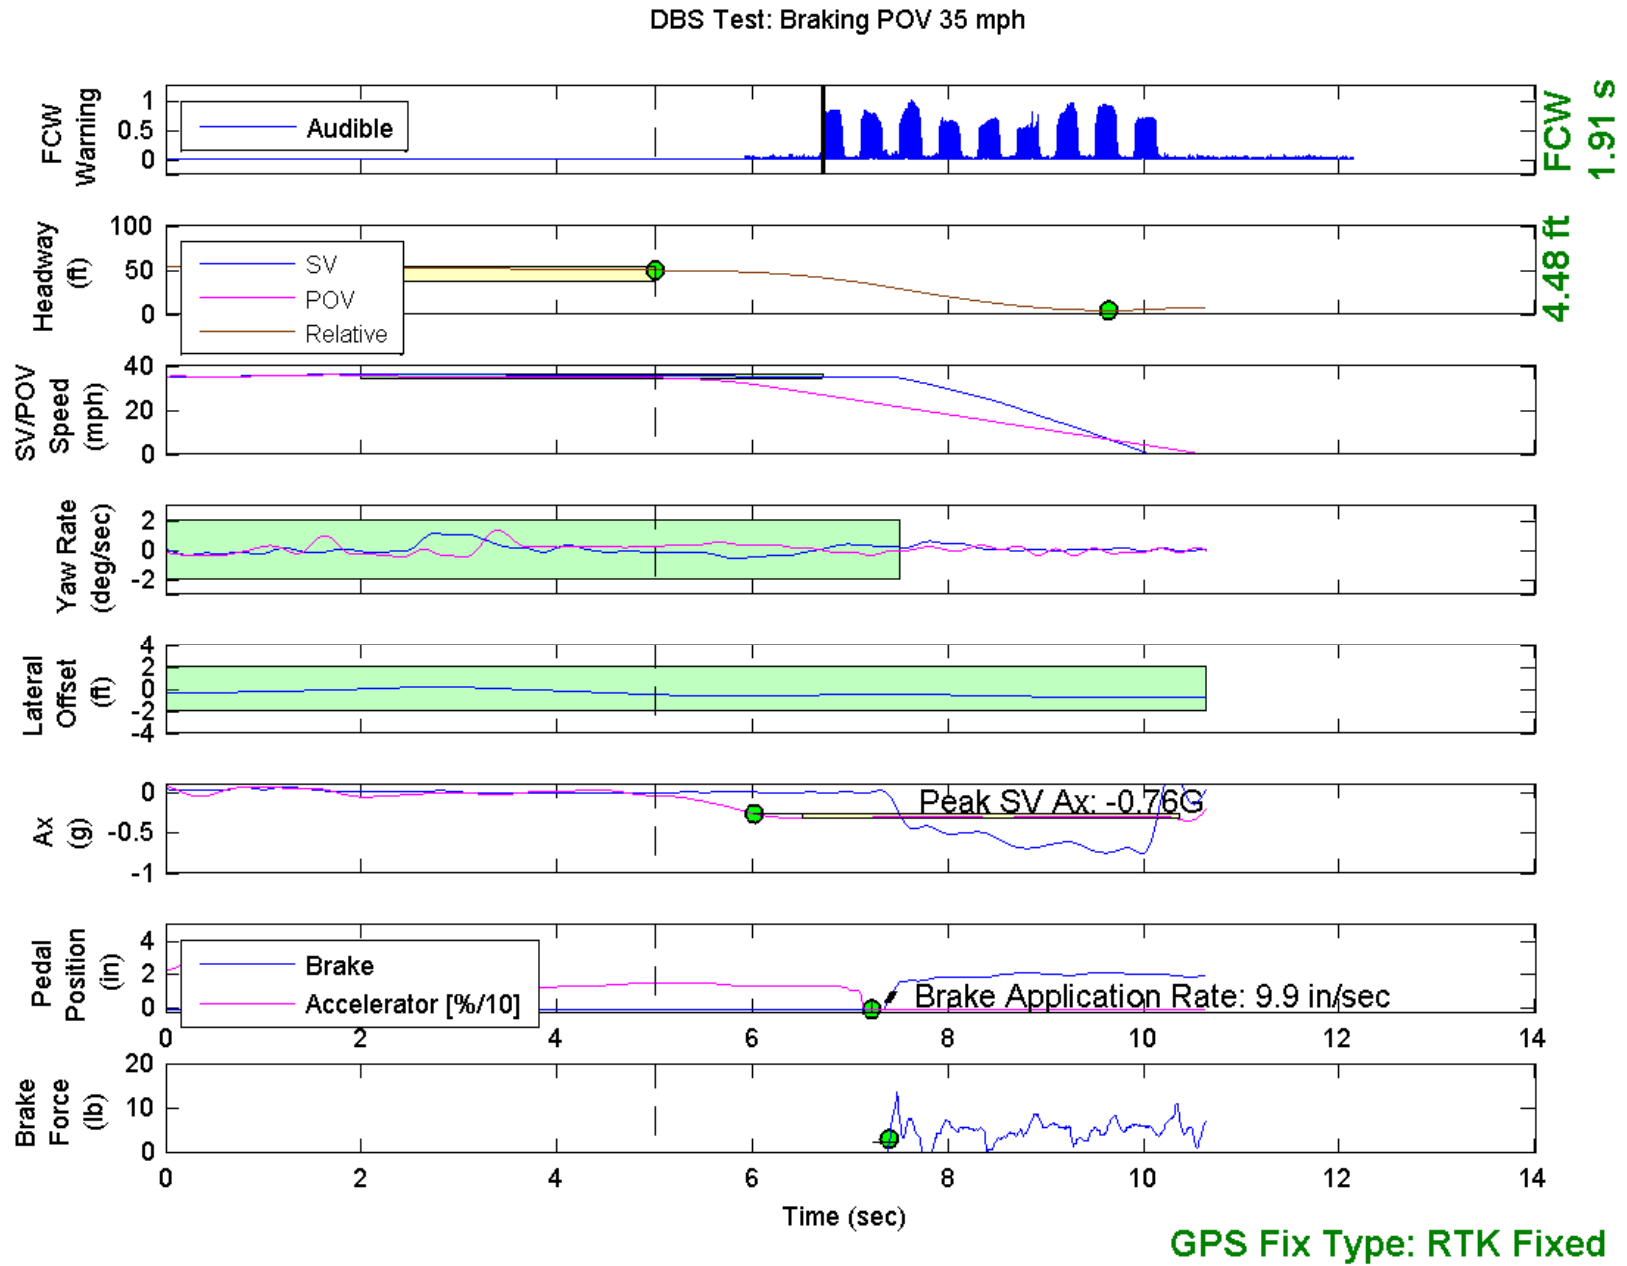


Figure E4. Example Time History for Braking POV 35, Passing

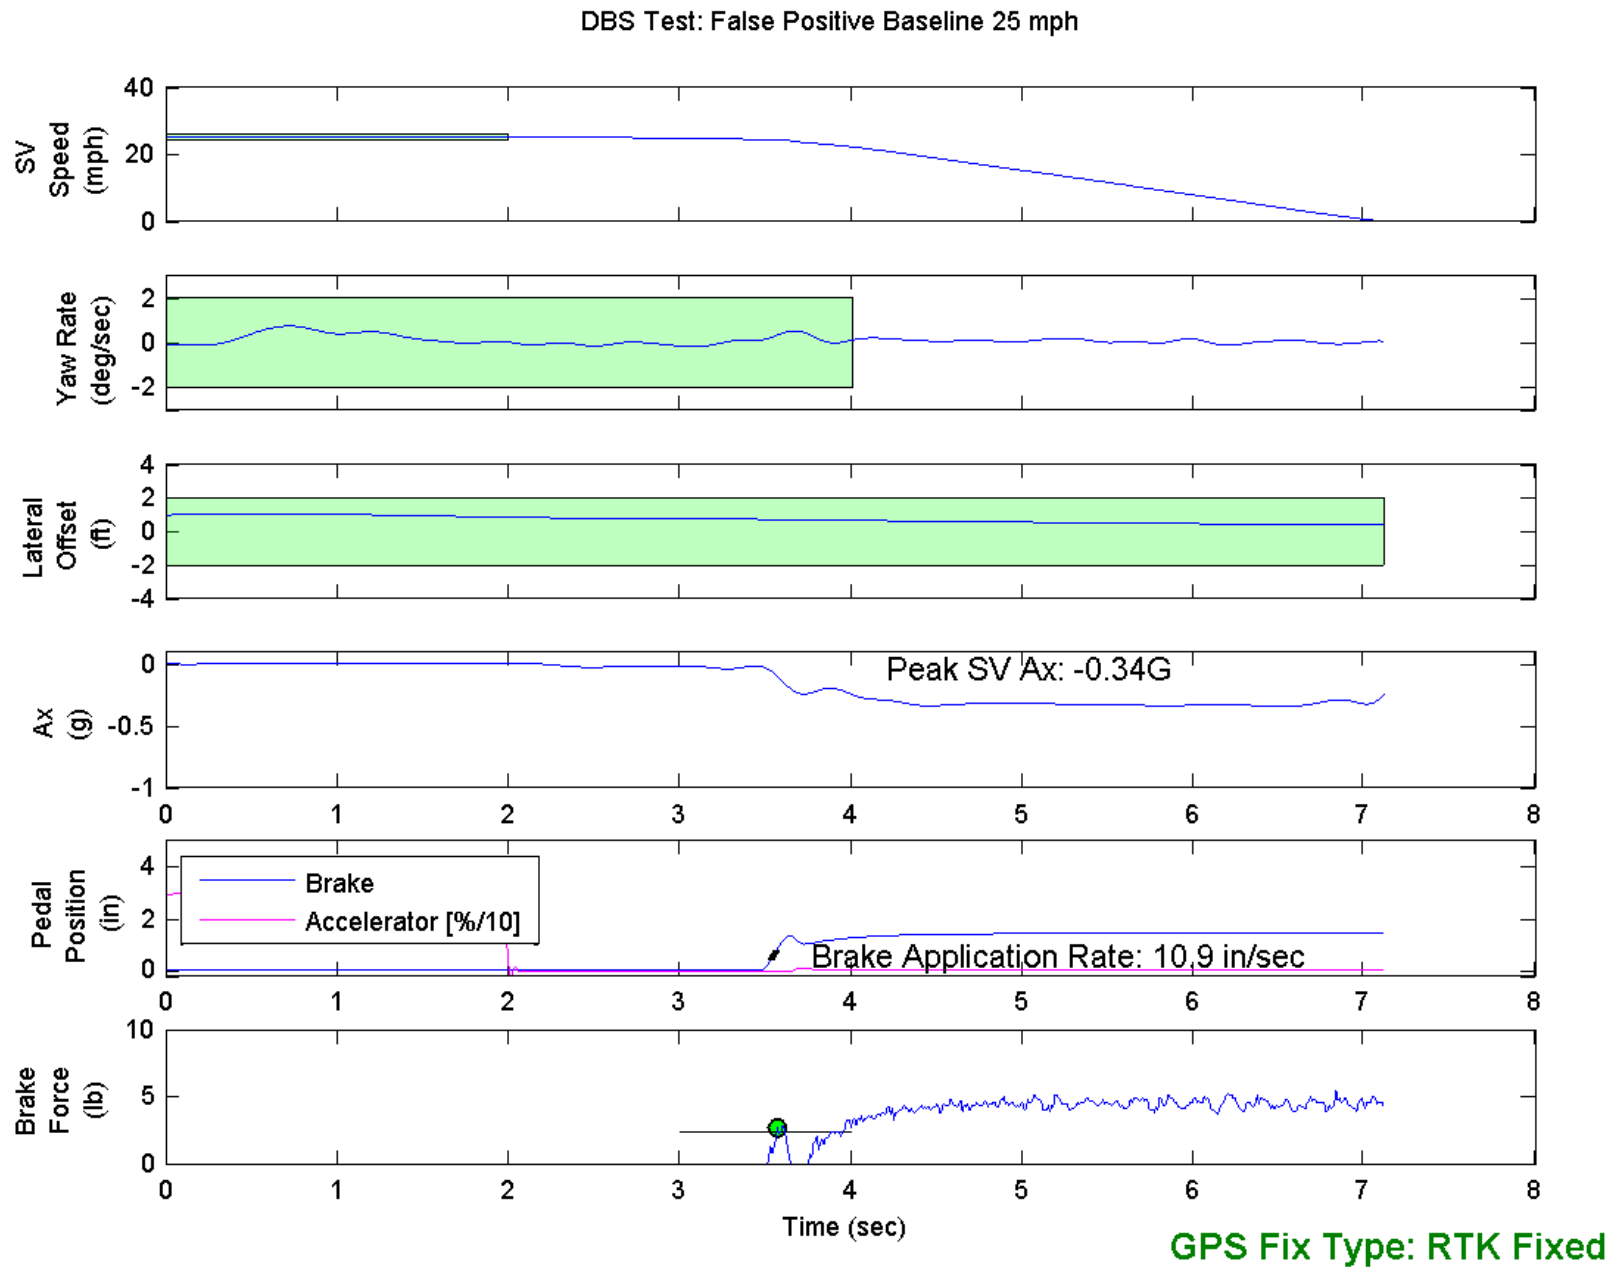


Figure E5. Example Time History for False Positive Baseline 25, Passing

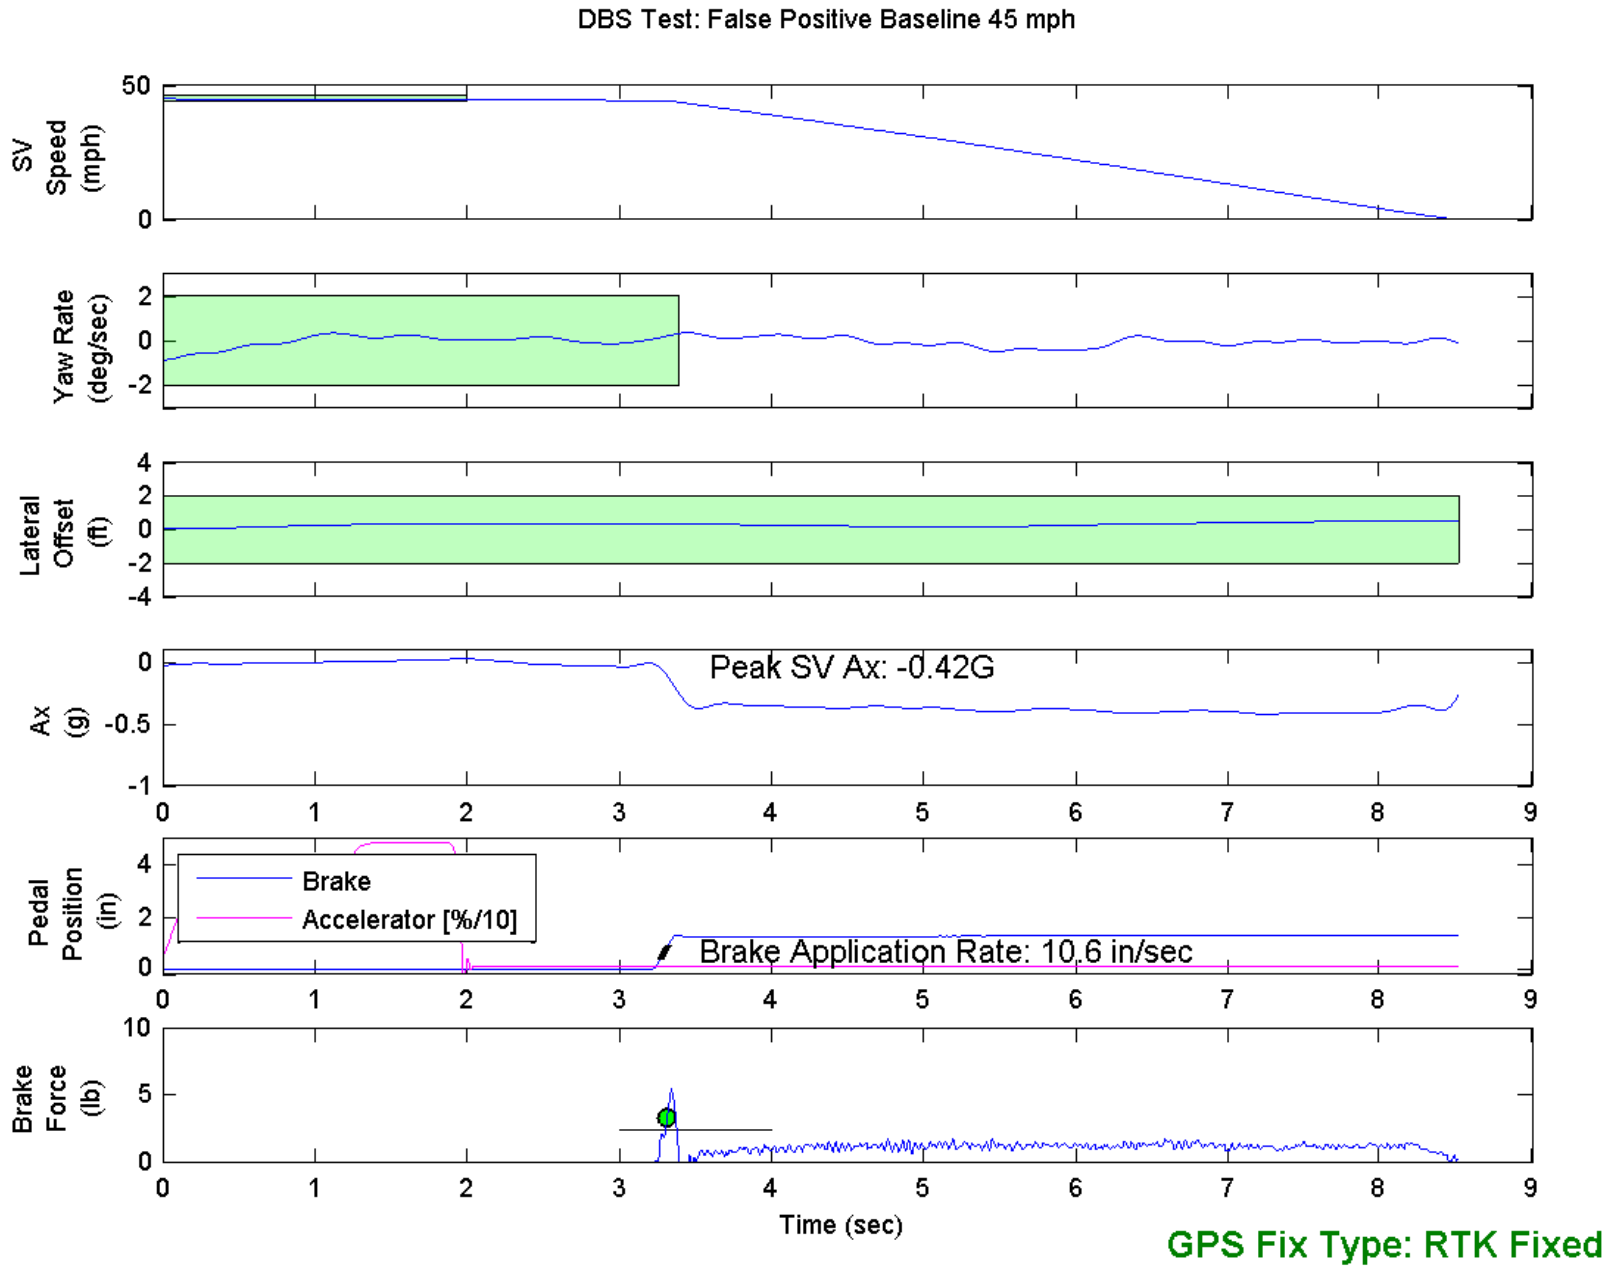


Figure E6. Example Time History for False Positive Baseline 45, Passing

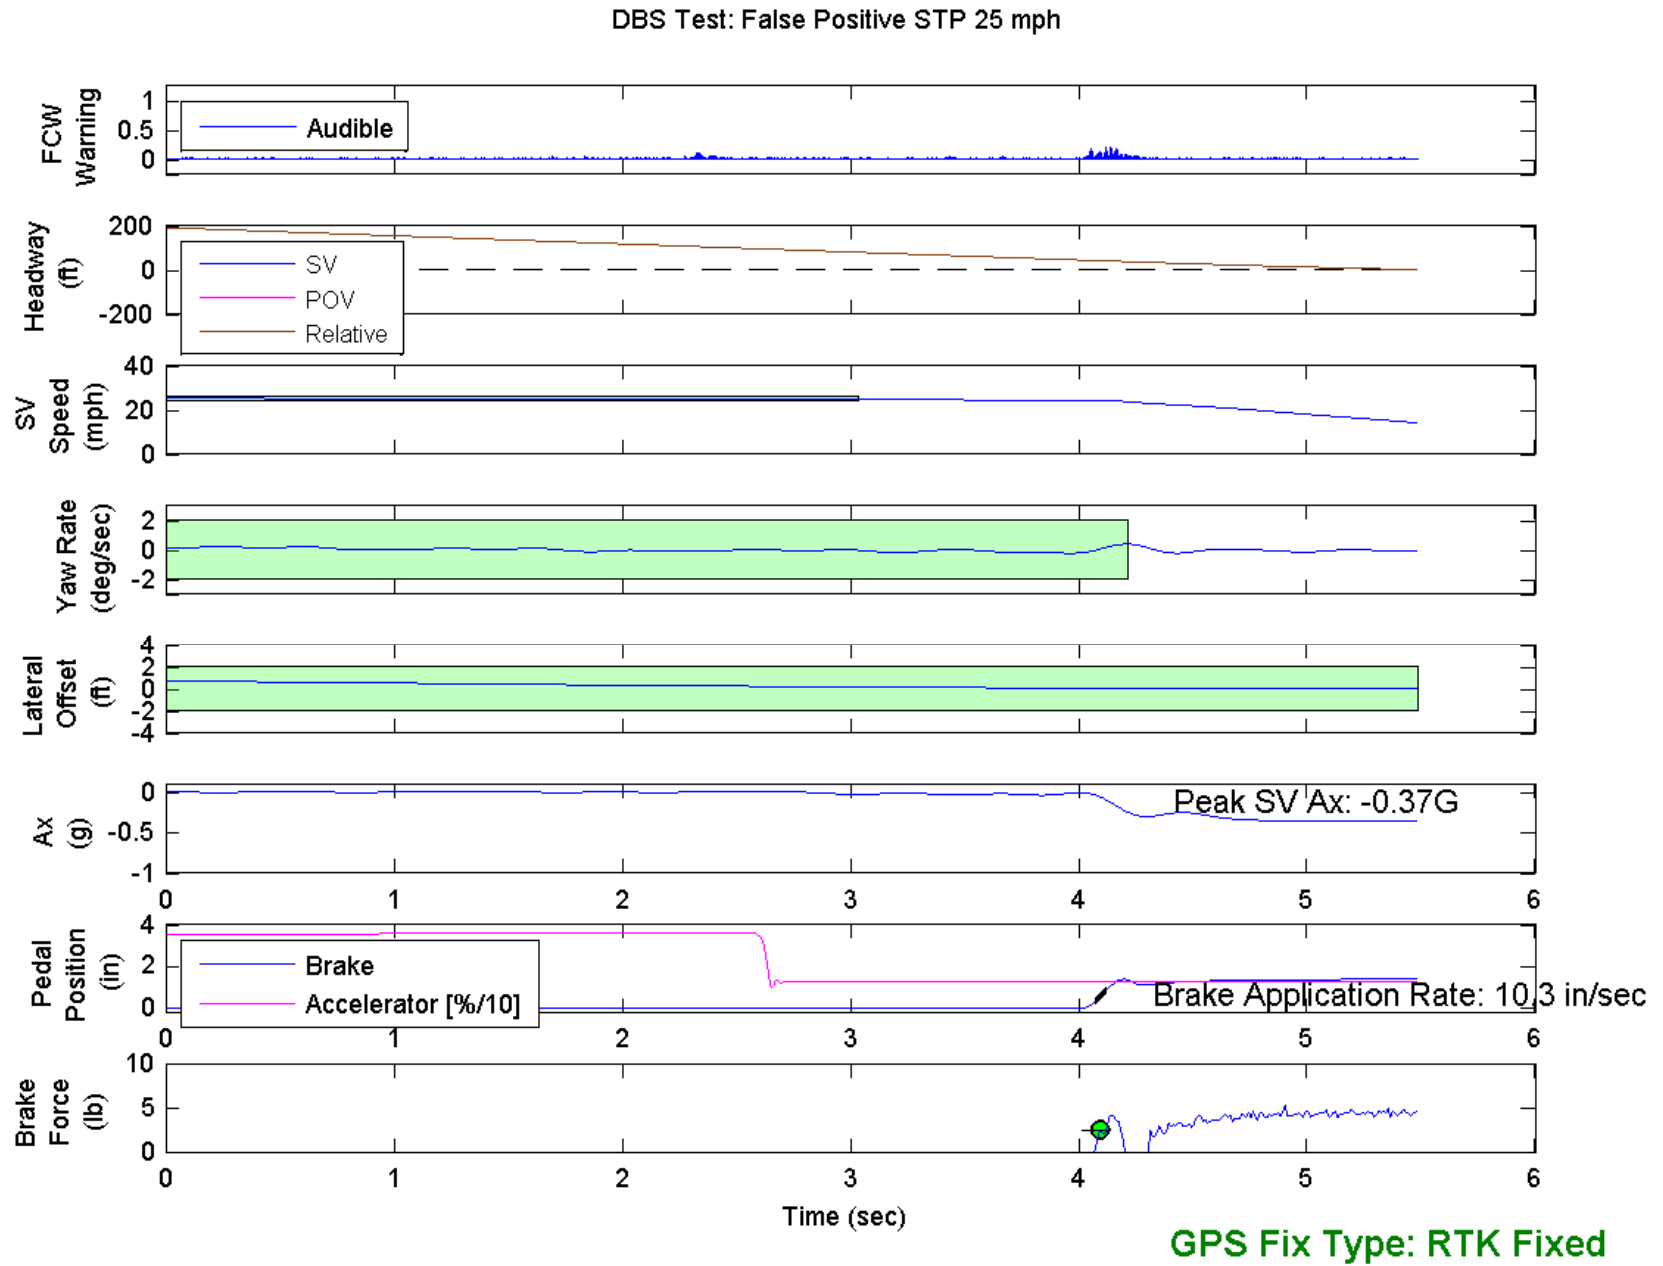


Figure E7. Example Time History for False Positive Steel Plate 25, Passing

DBS Test: False Positive STP 45 mph

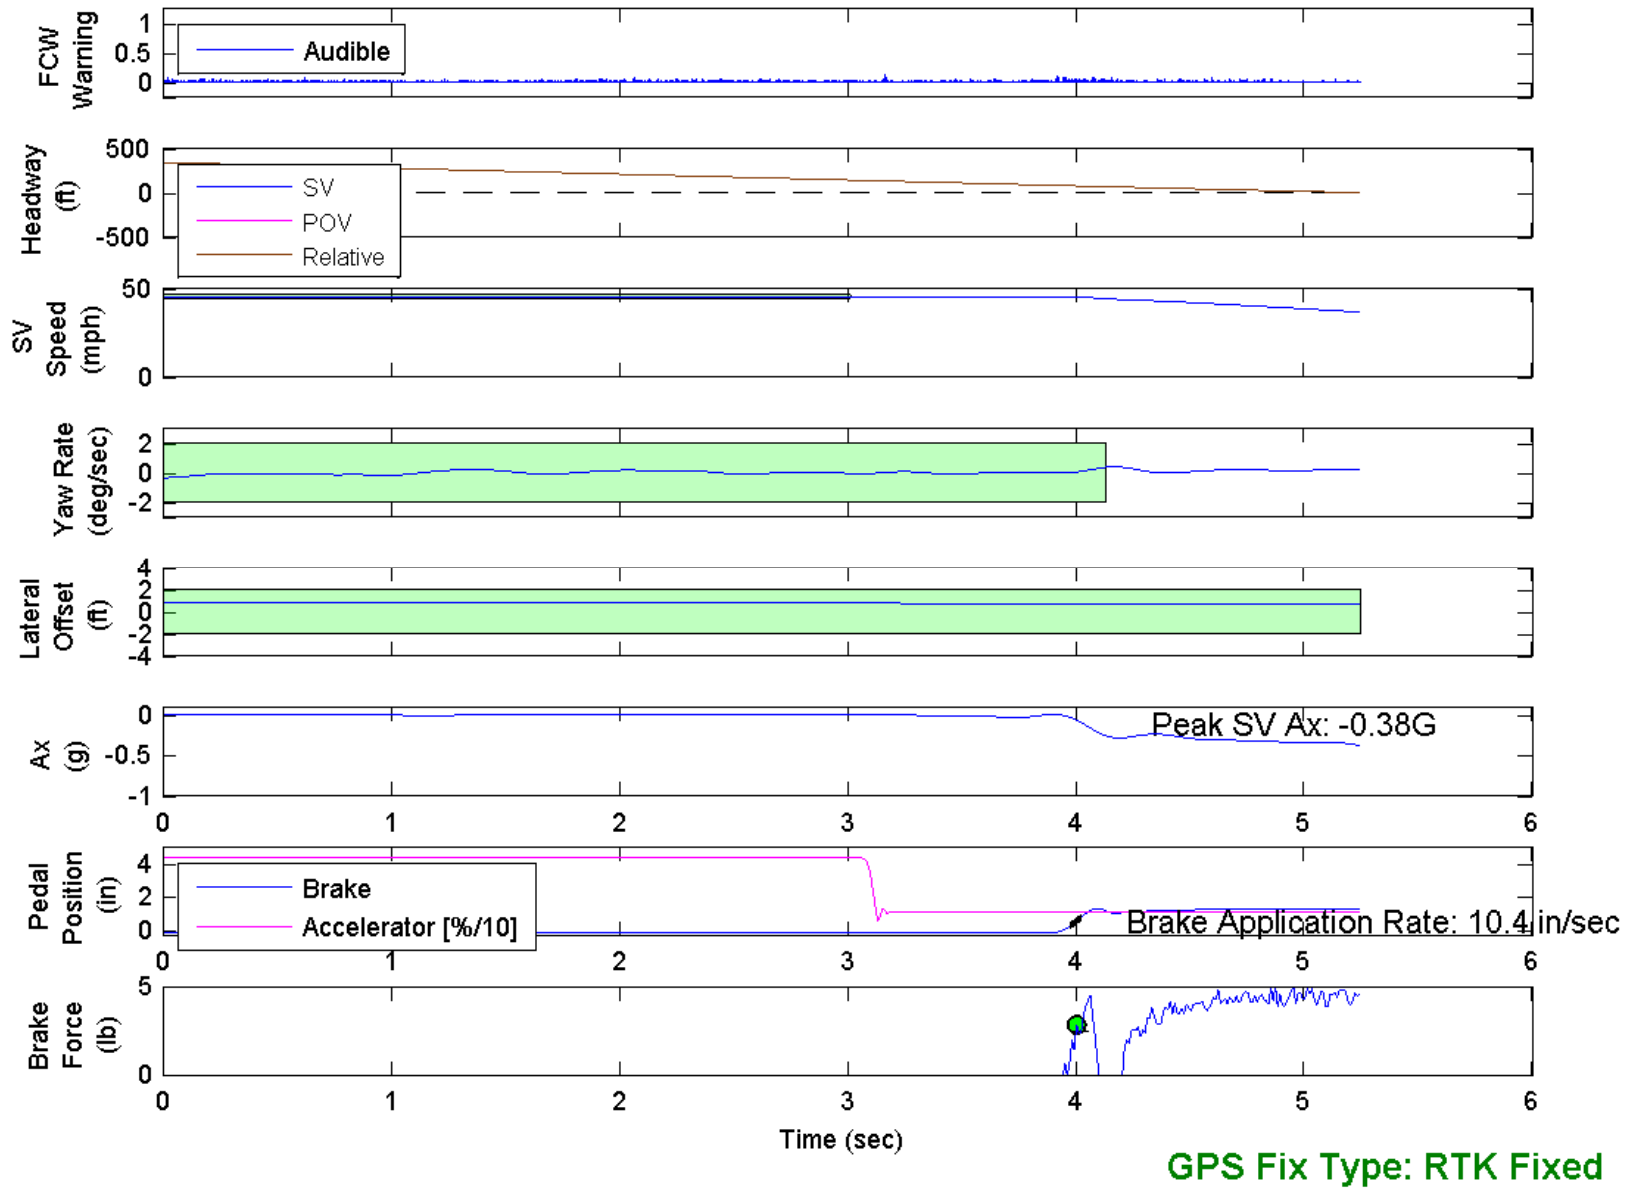


Figure E8. Example Time History for False Positive Steel Plate 45, Passing

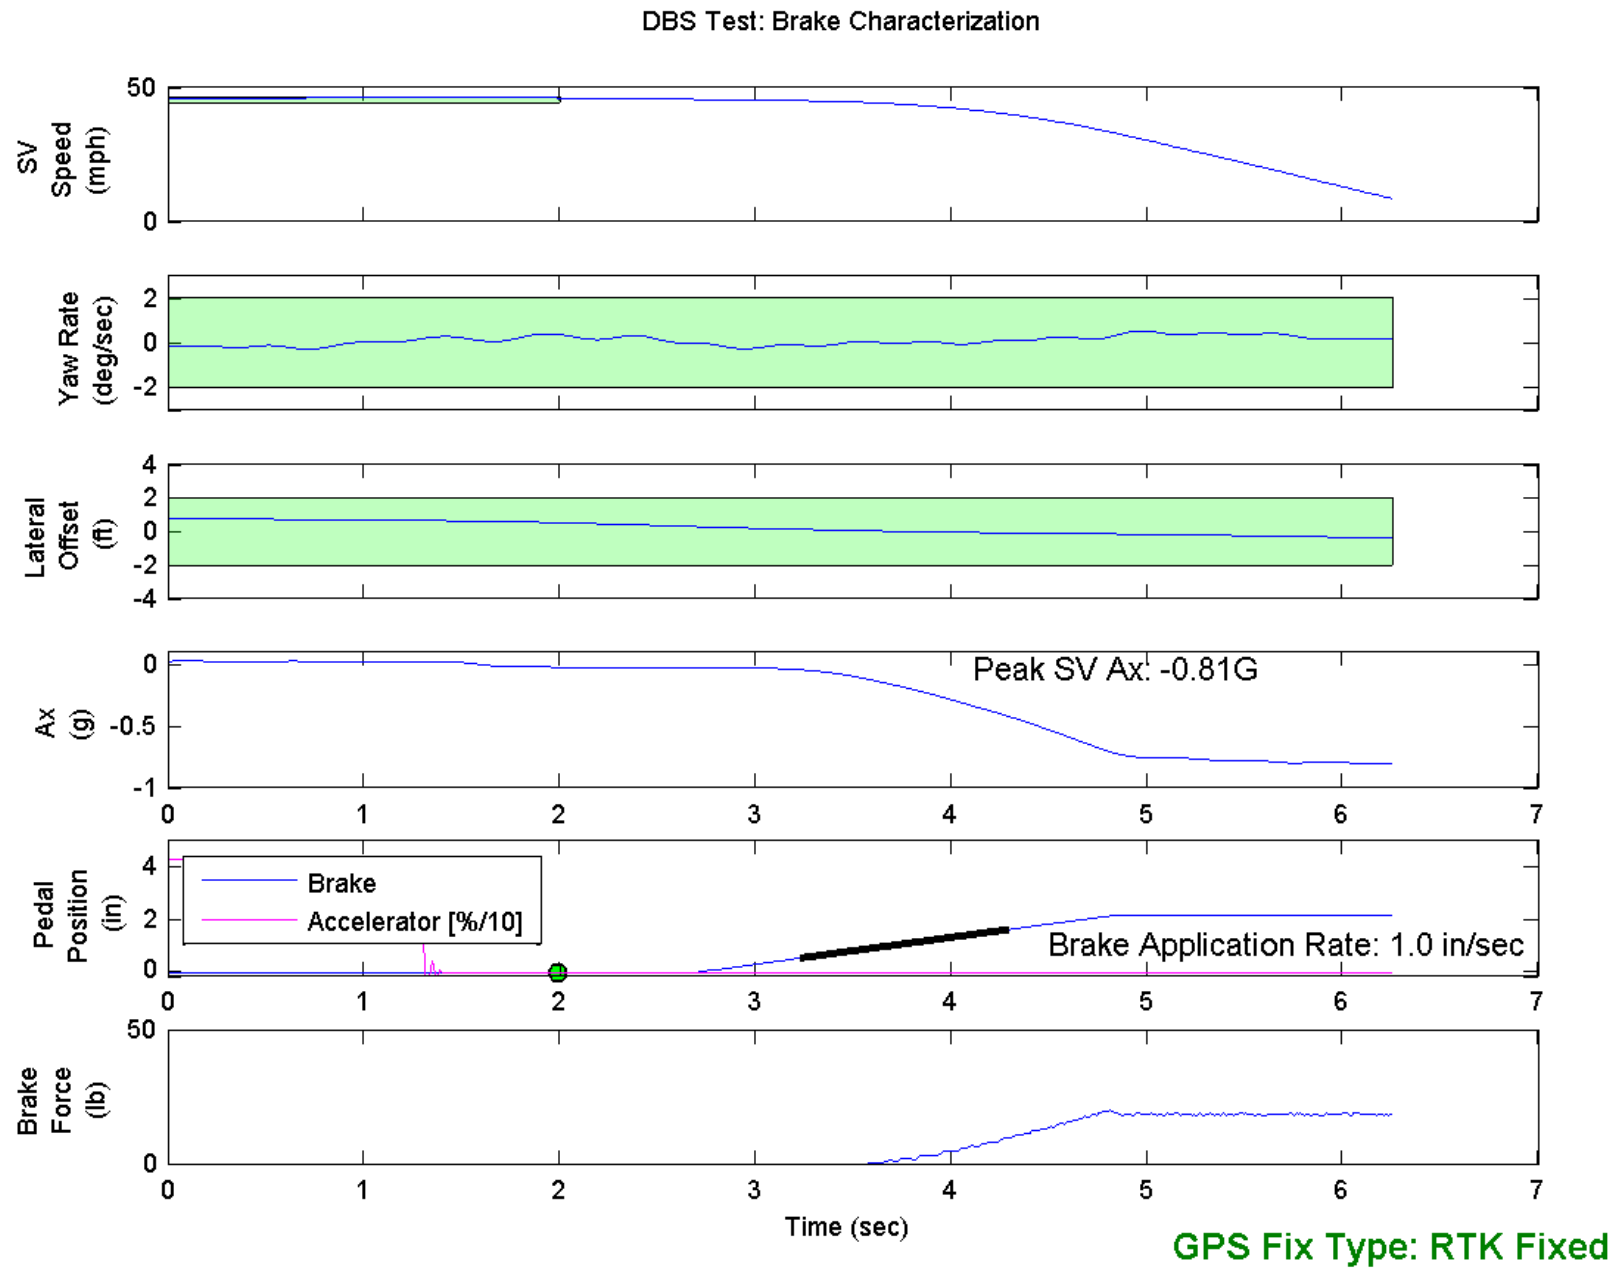


Figure E9. Example Time History for DBS Brake Characterization, Passing

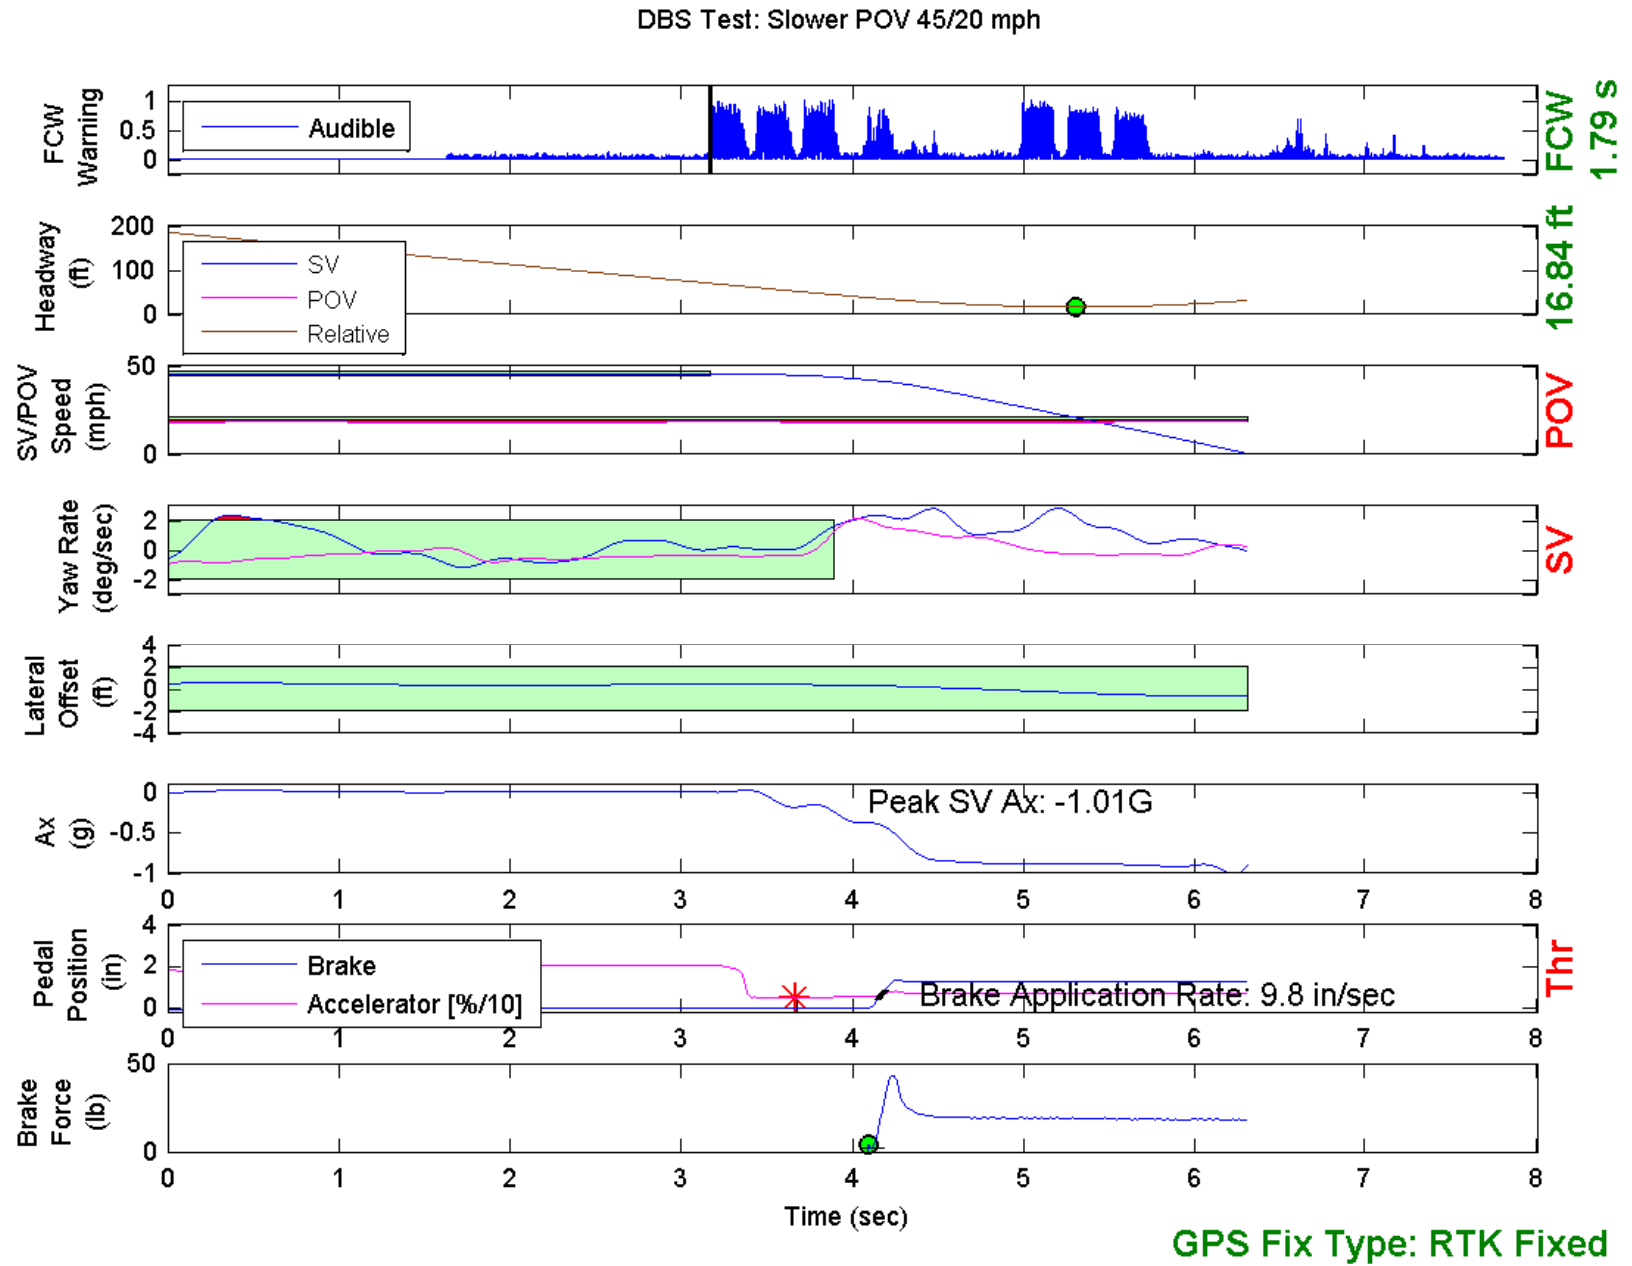


Figure E10. Example Time History Displaying Various Invalid Criteria

DBS Test: Braking POV 25 mph

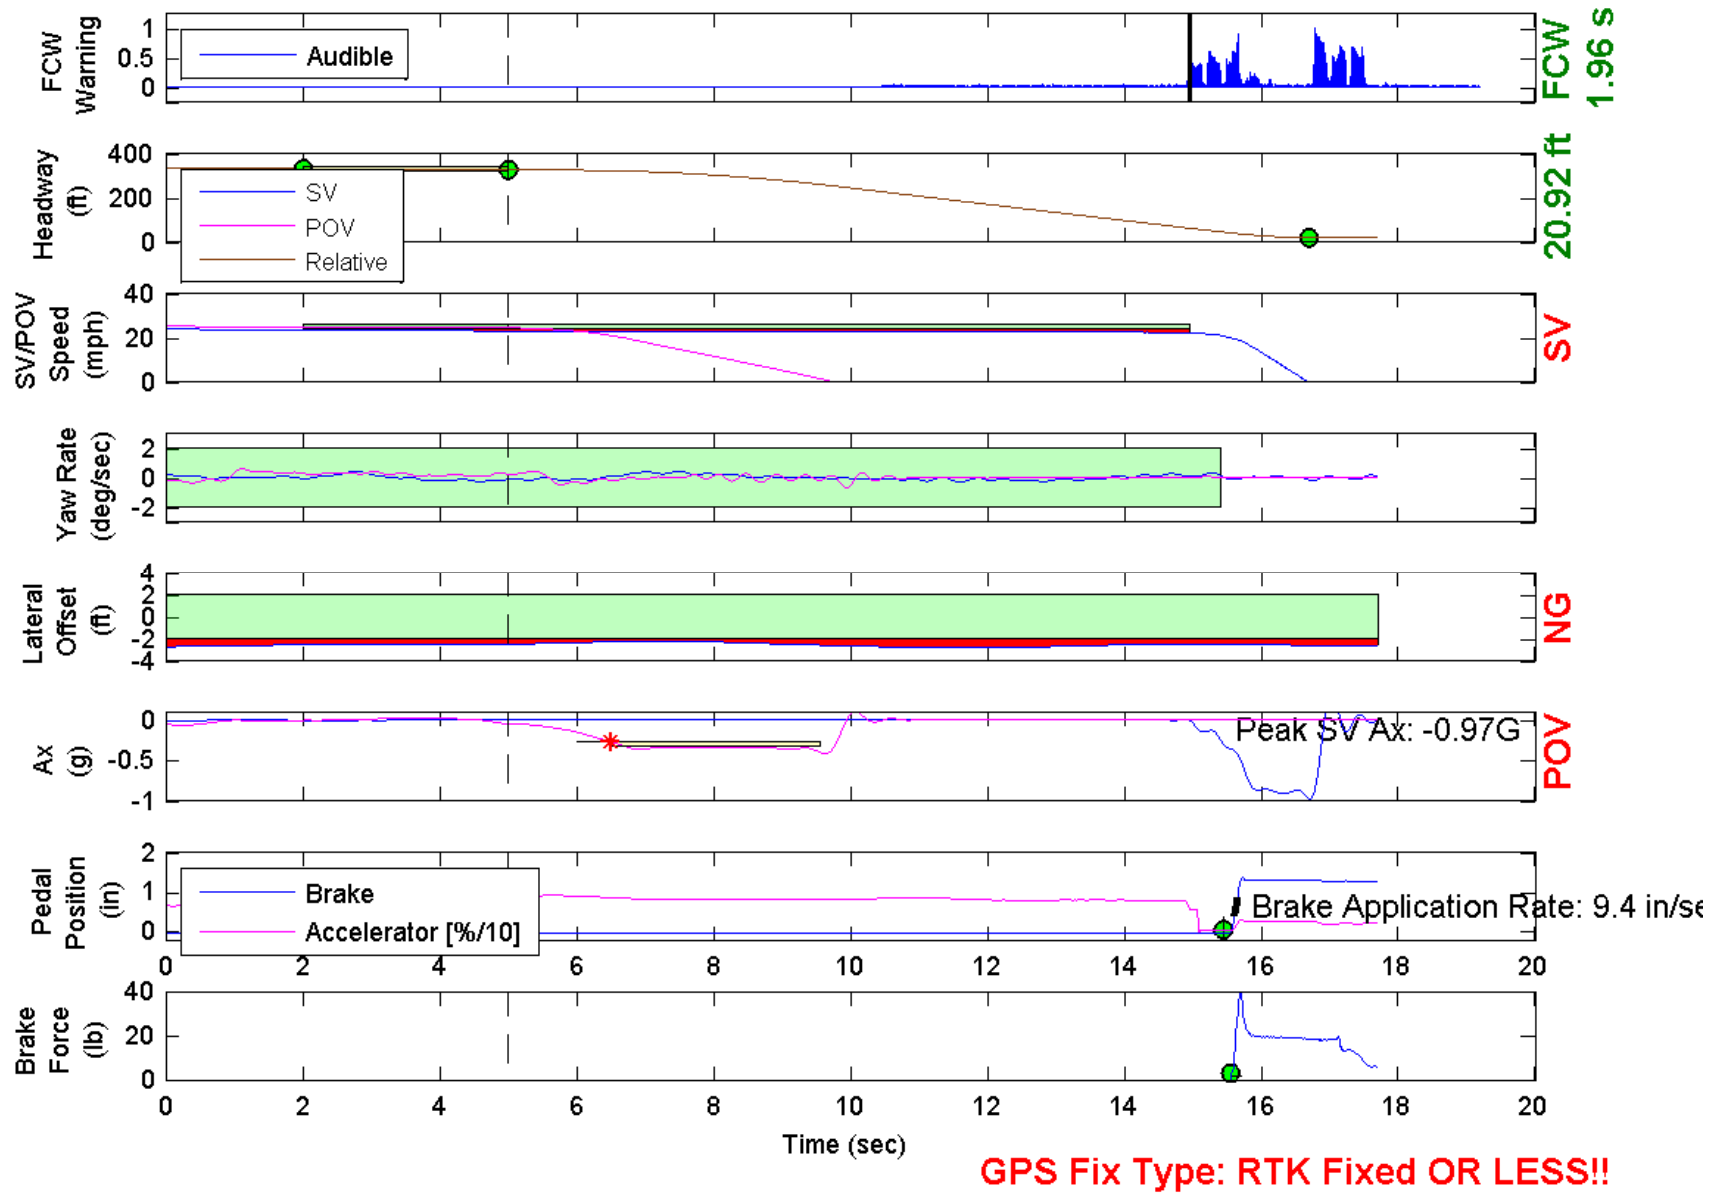


Figure E11. Example Time History Displaying Various Invalid Criteria

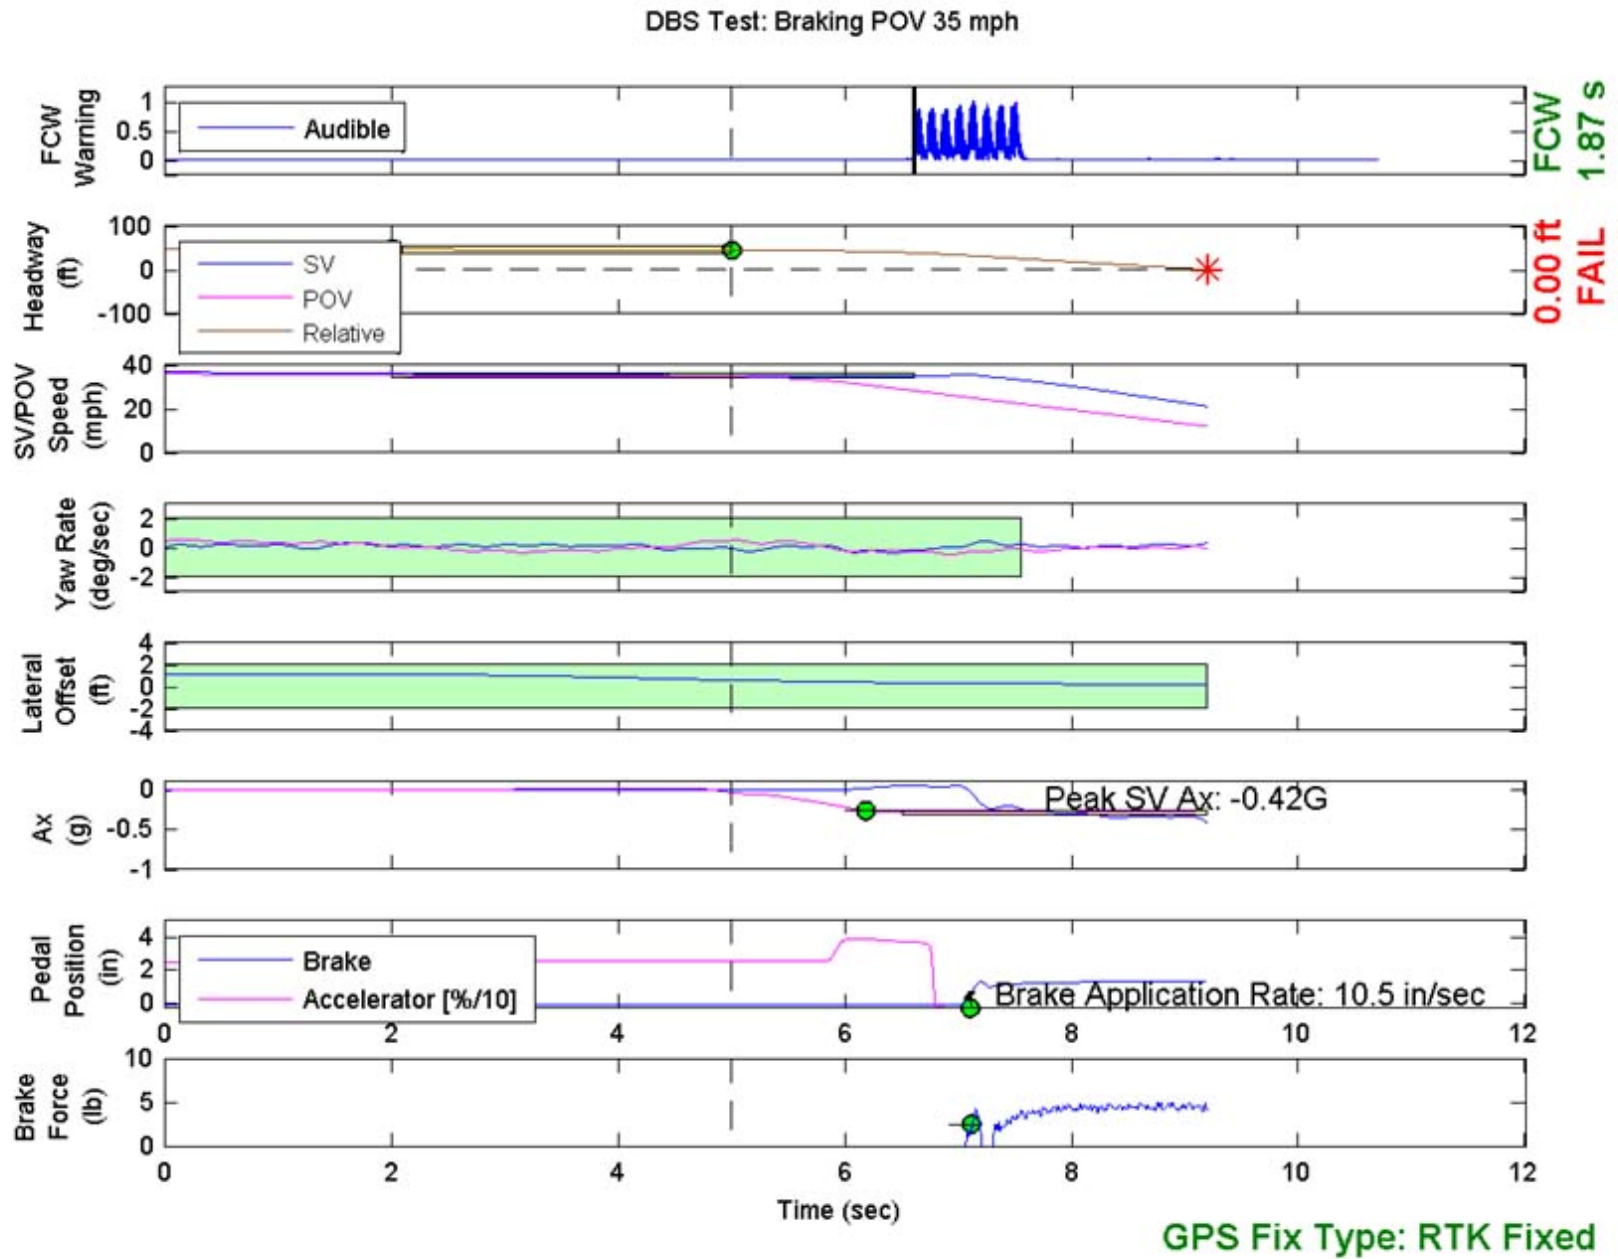


Figure E12. Example Time History for a Failed Run

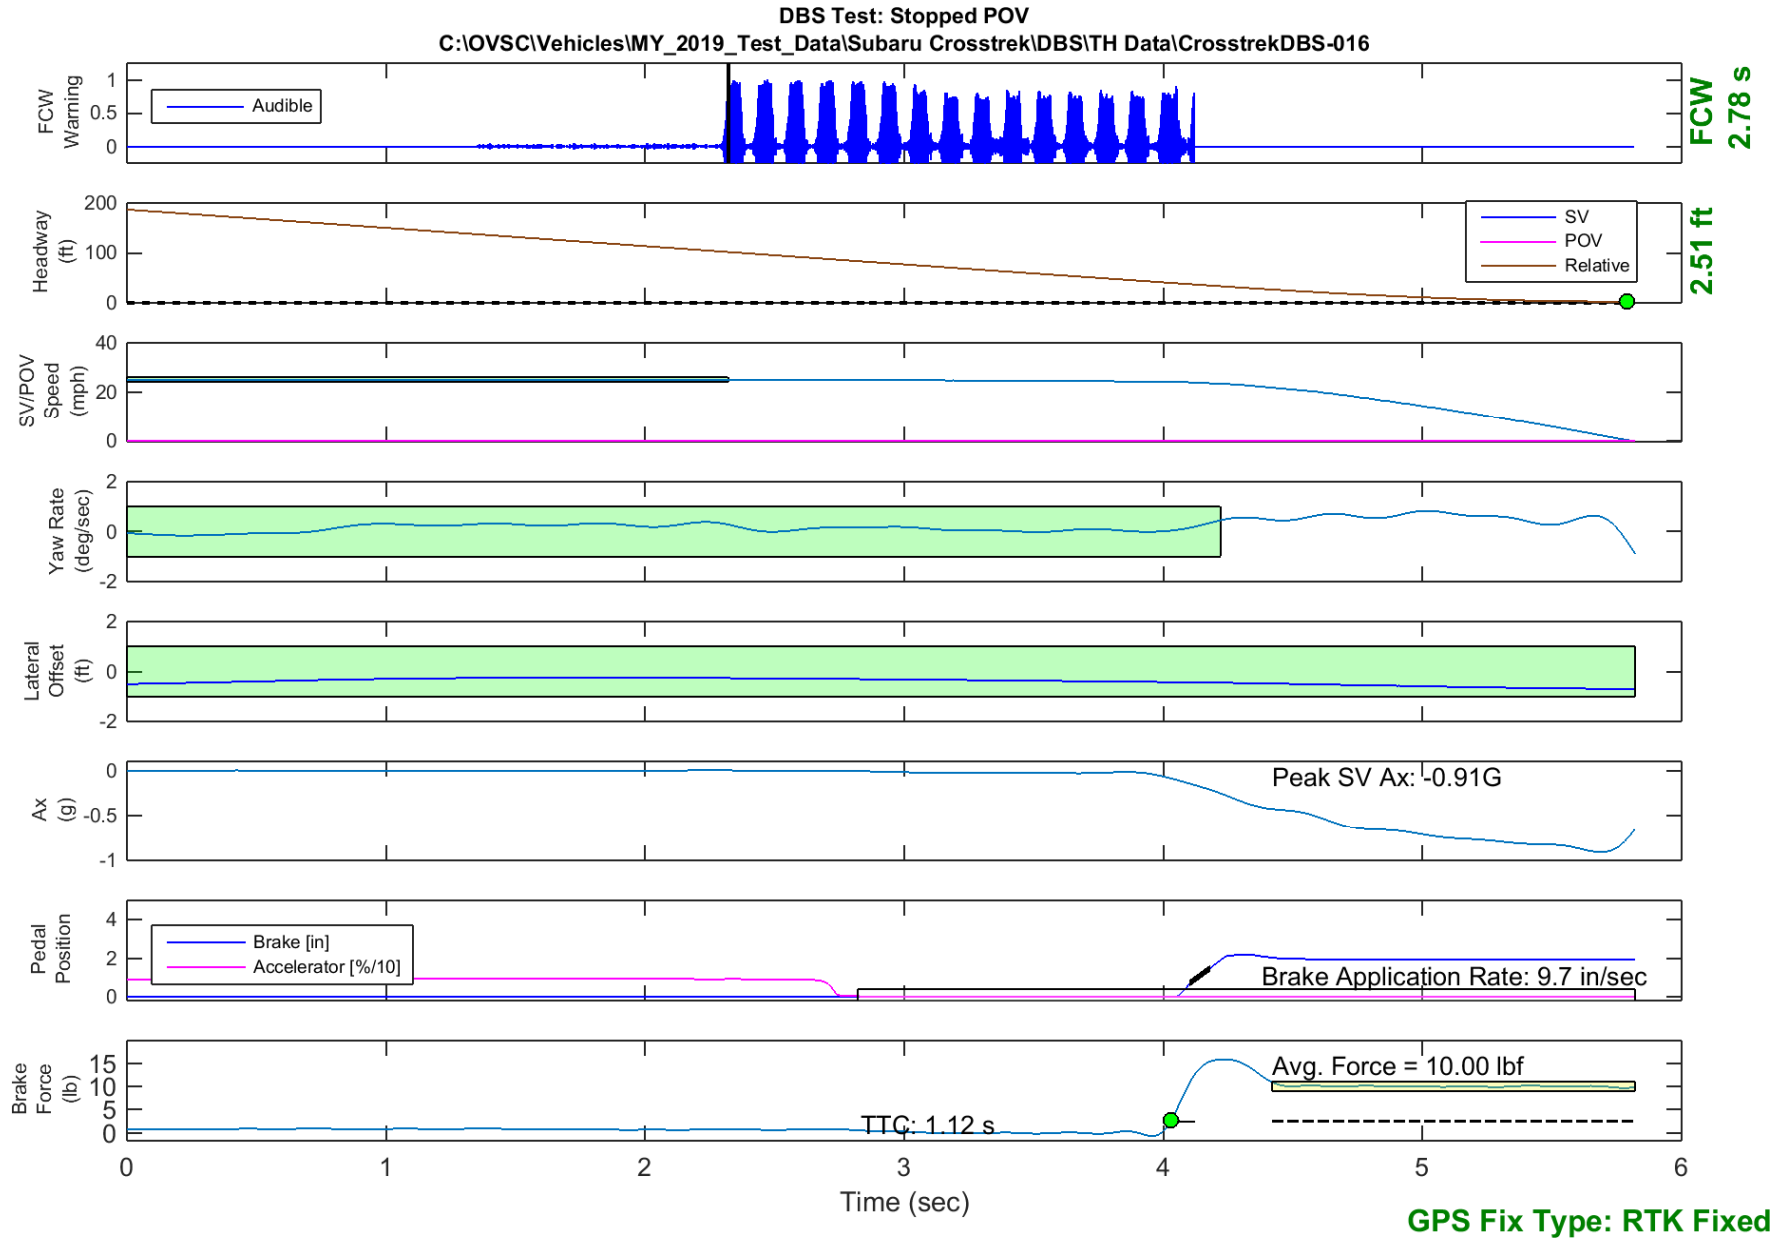


Figure E13. Time History for DBS Run 16, SV Encounters Stopped POV

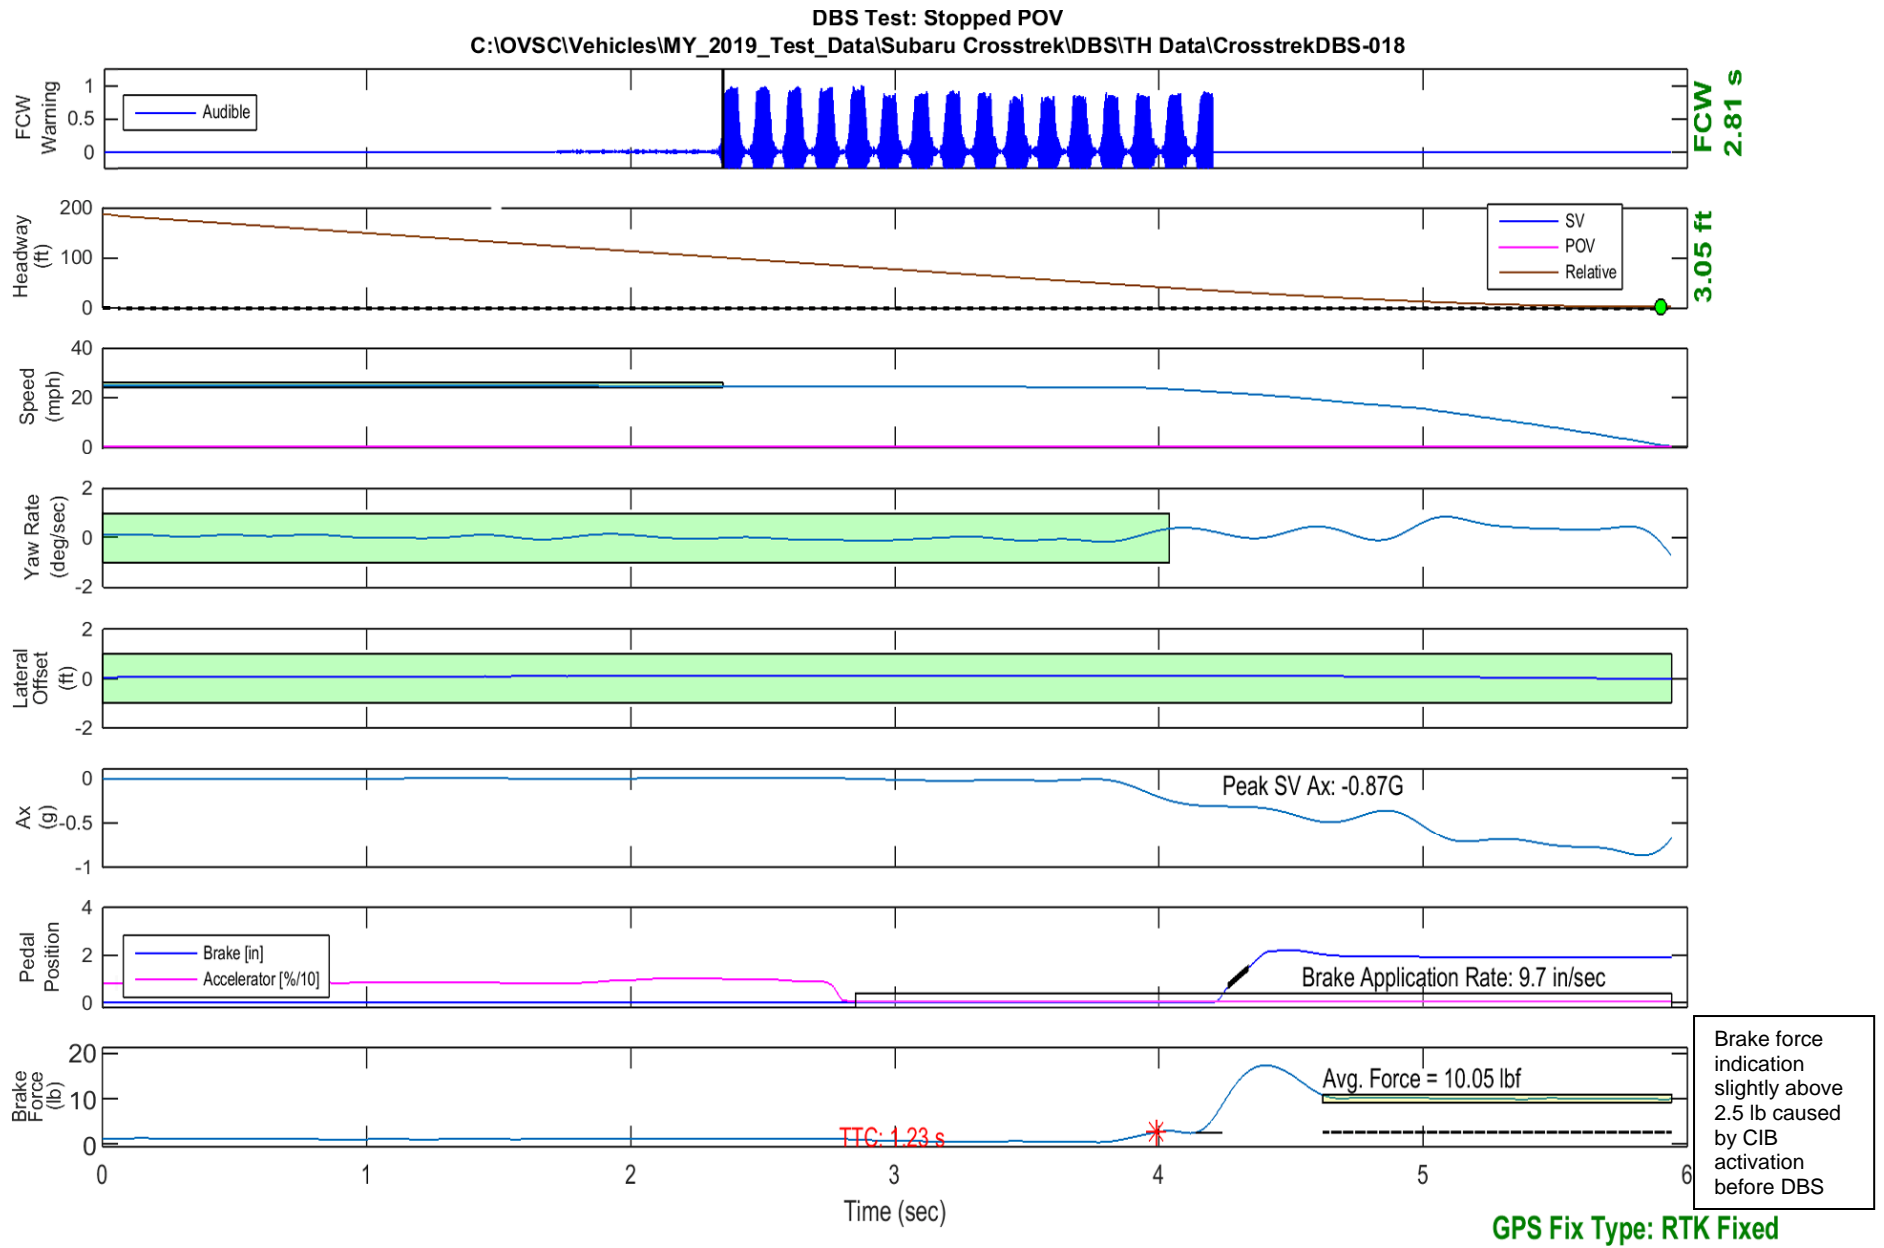


Figure E14. Time History for DBS Run 18, SV Encounters Stopped POV

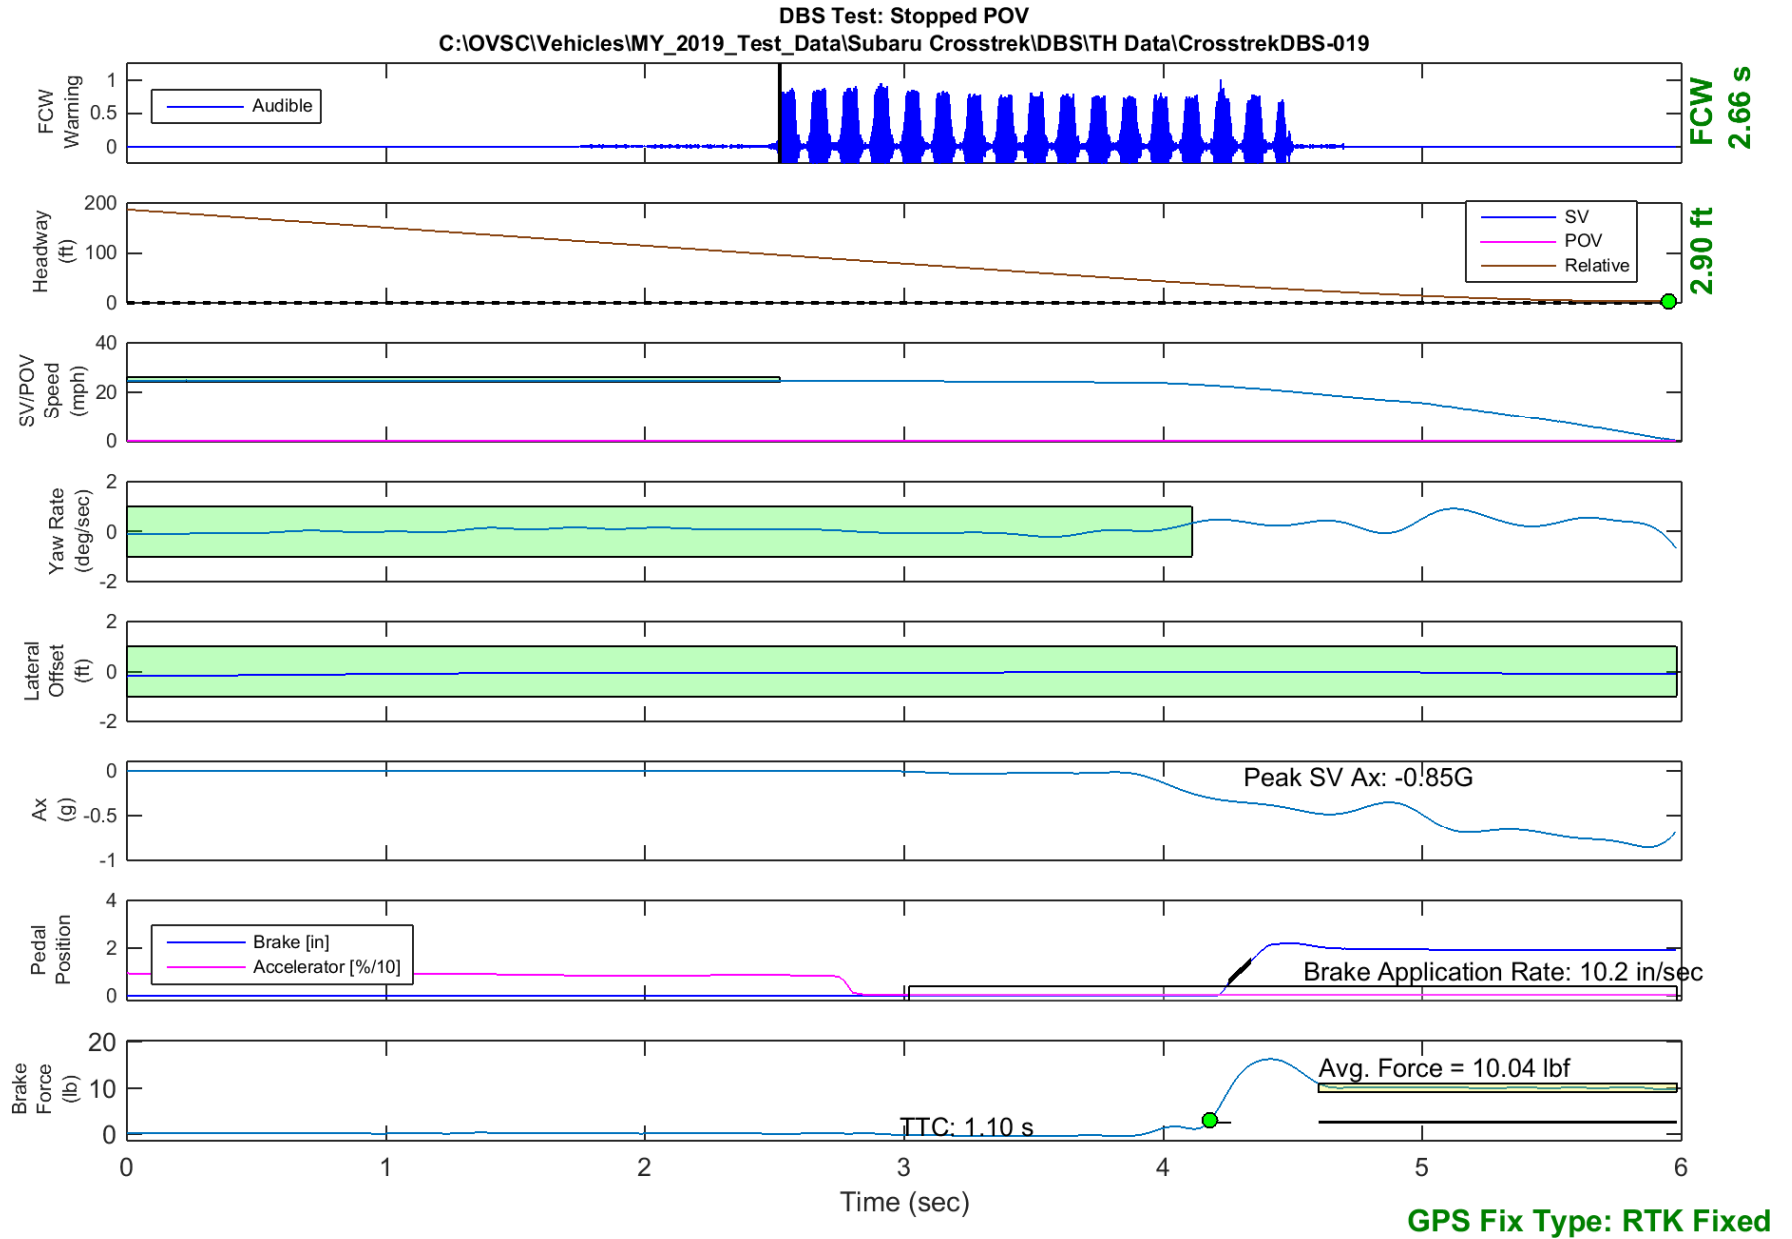


Figure E15. Time History for DBS Run 19, SV Encounters Stopped POV

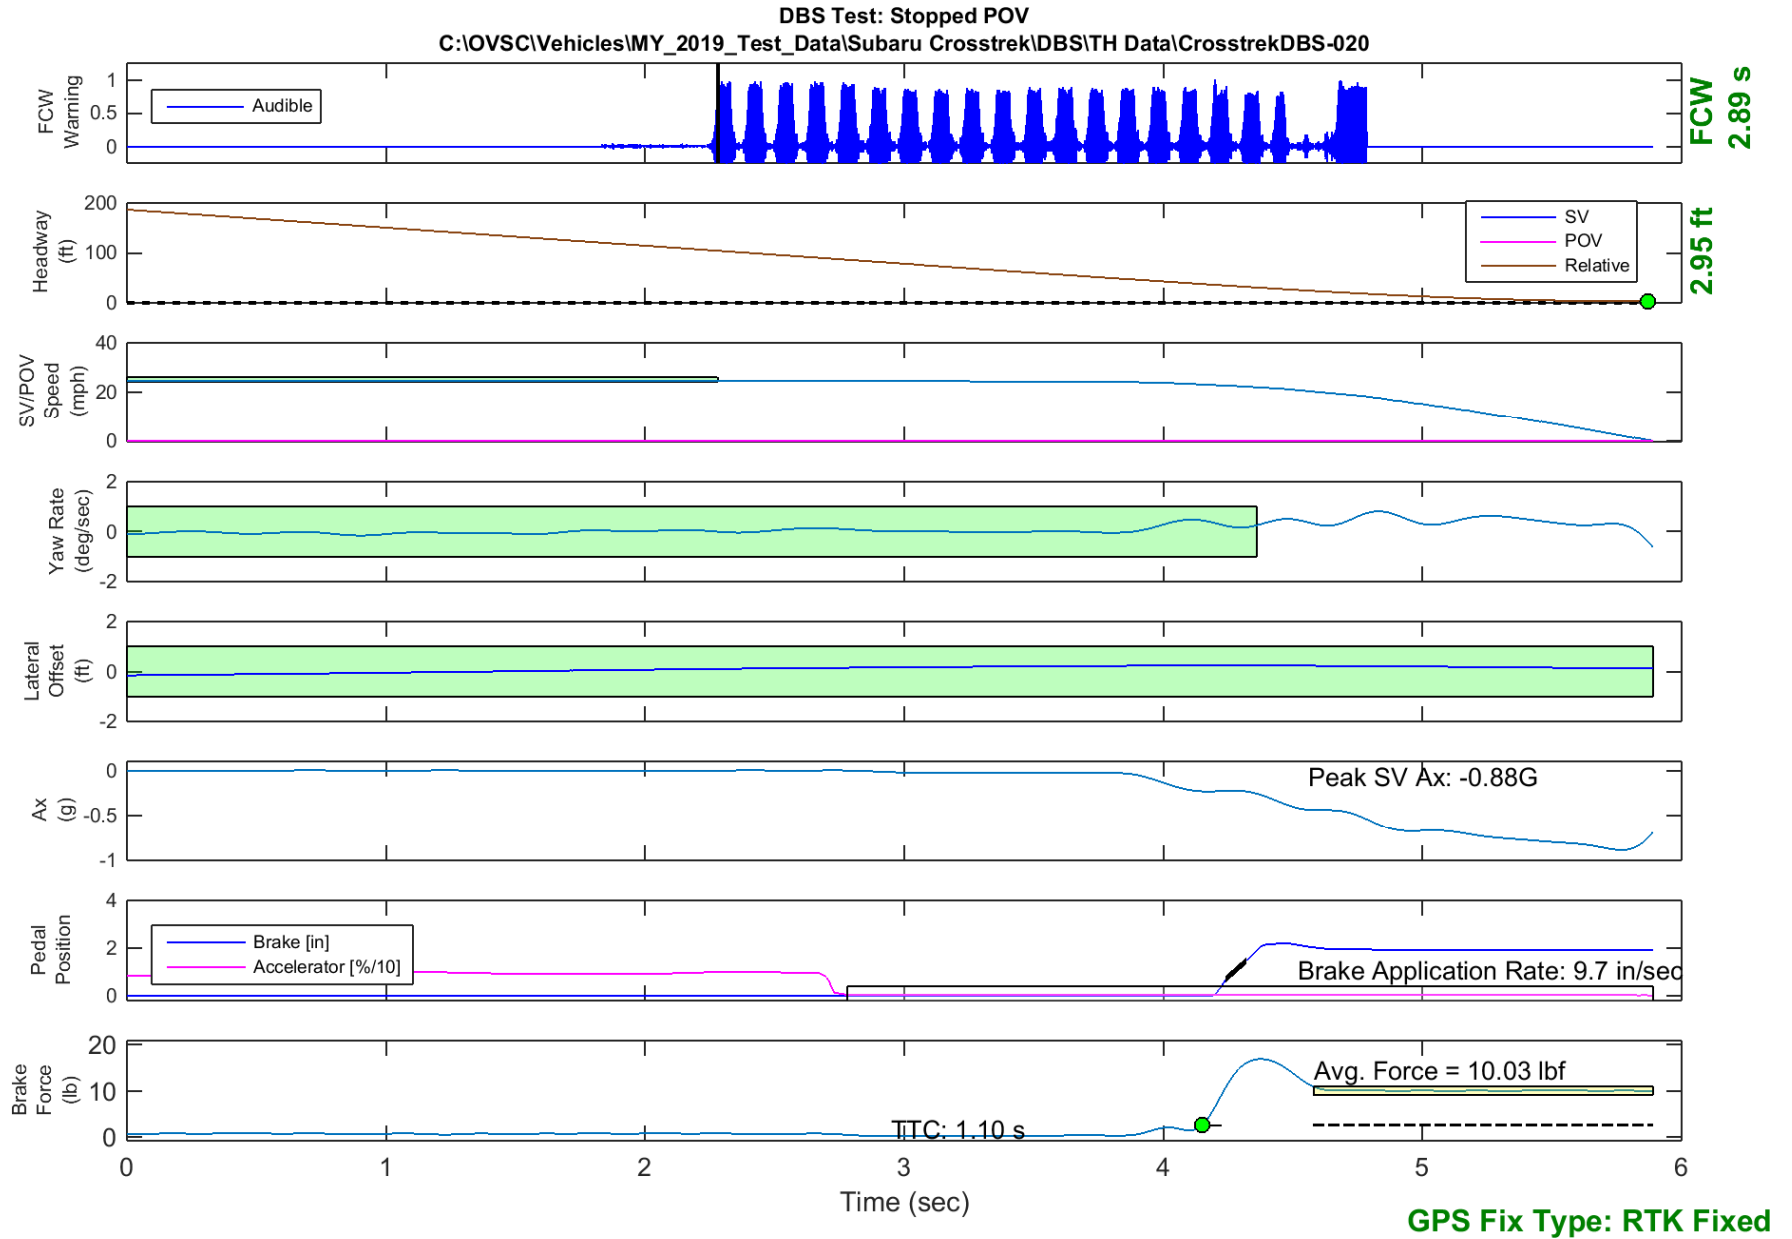


Figure E16. Time History for DBS Run 20, SV Encounters Stopped POV

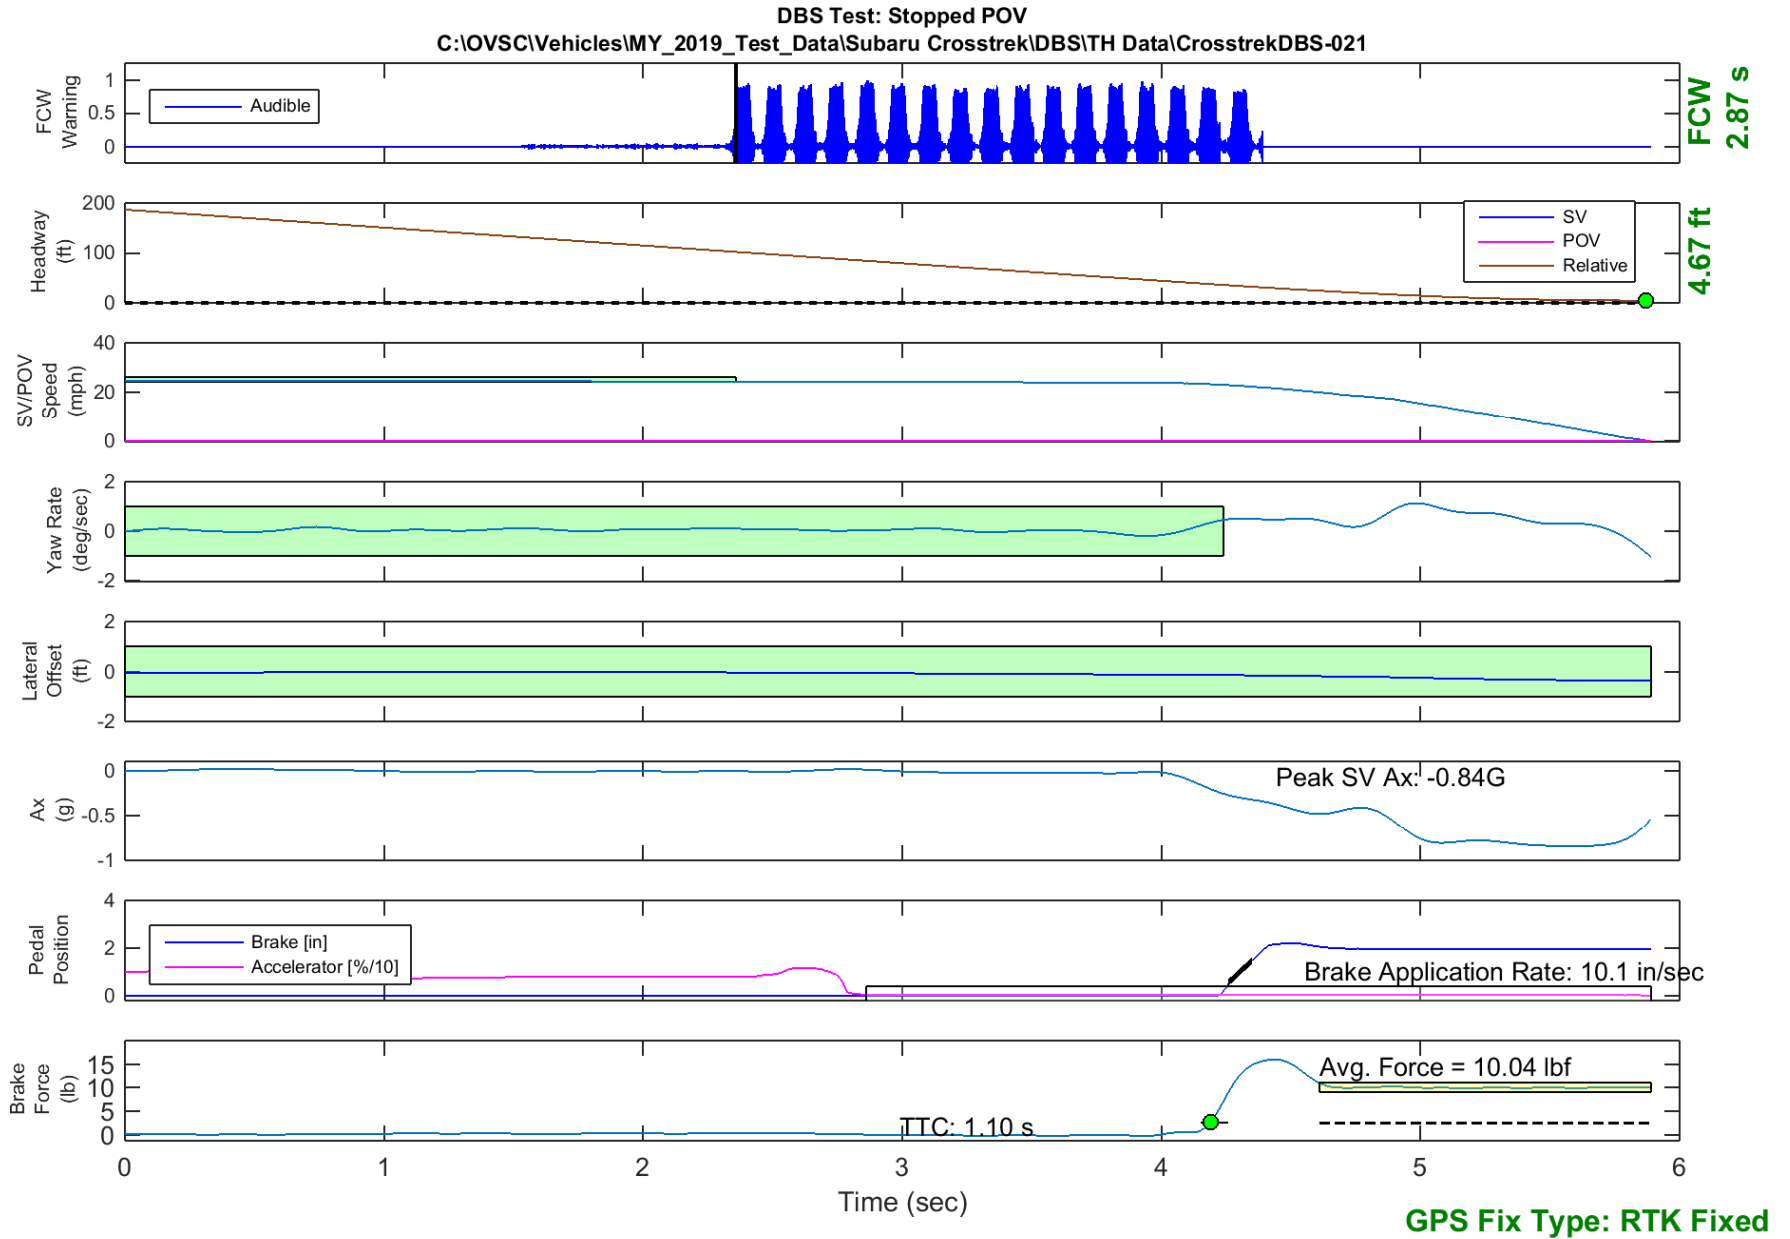


Figure E17. Time History for DBS Run 21, SV Encounters Stopped POV

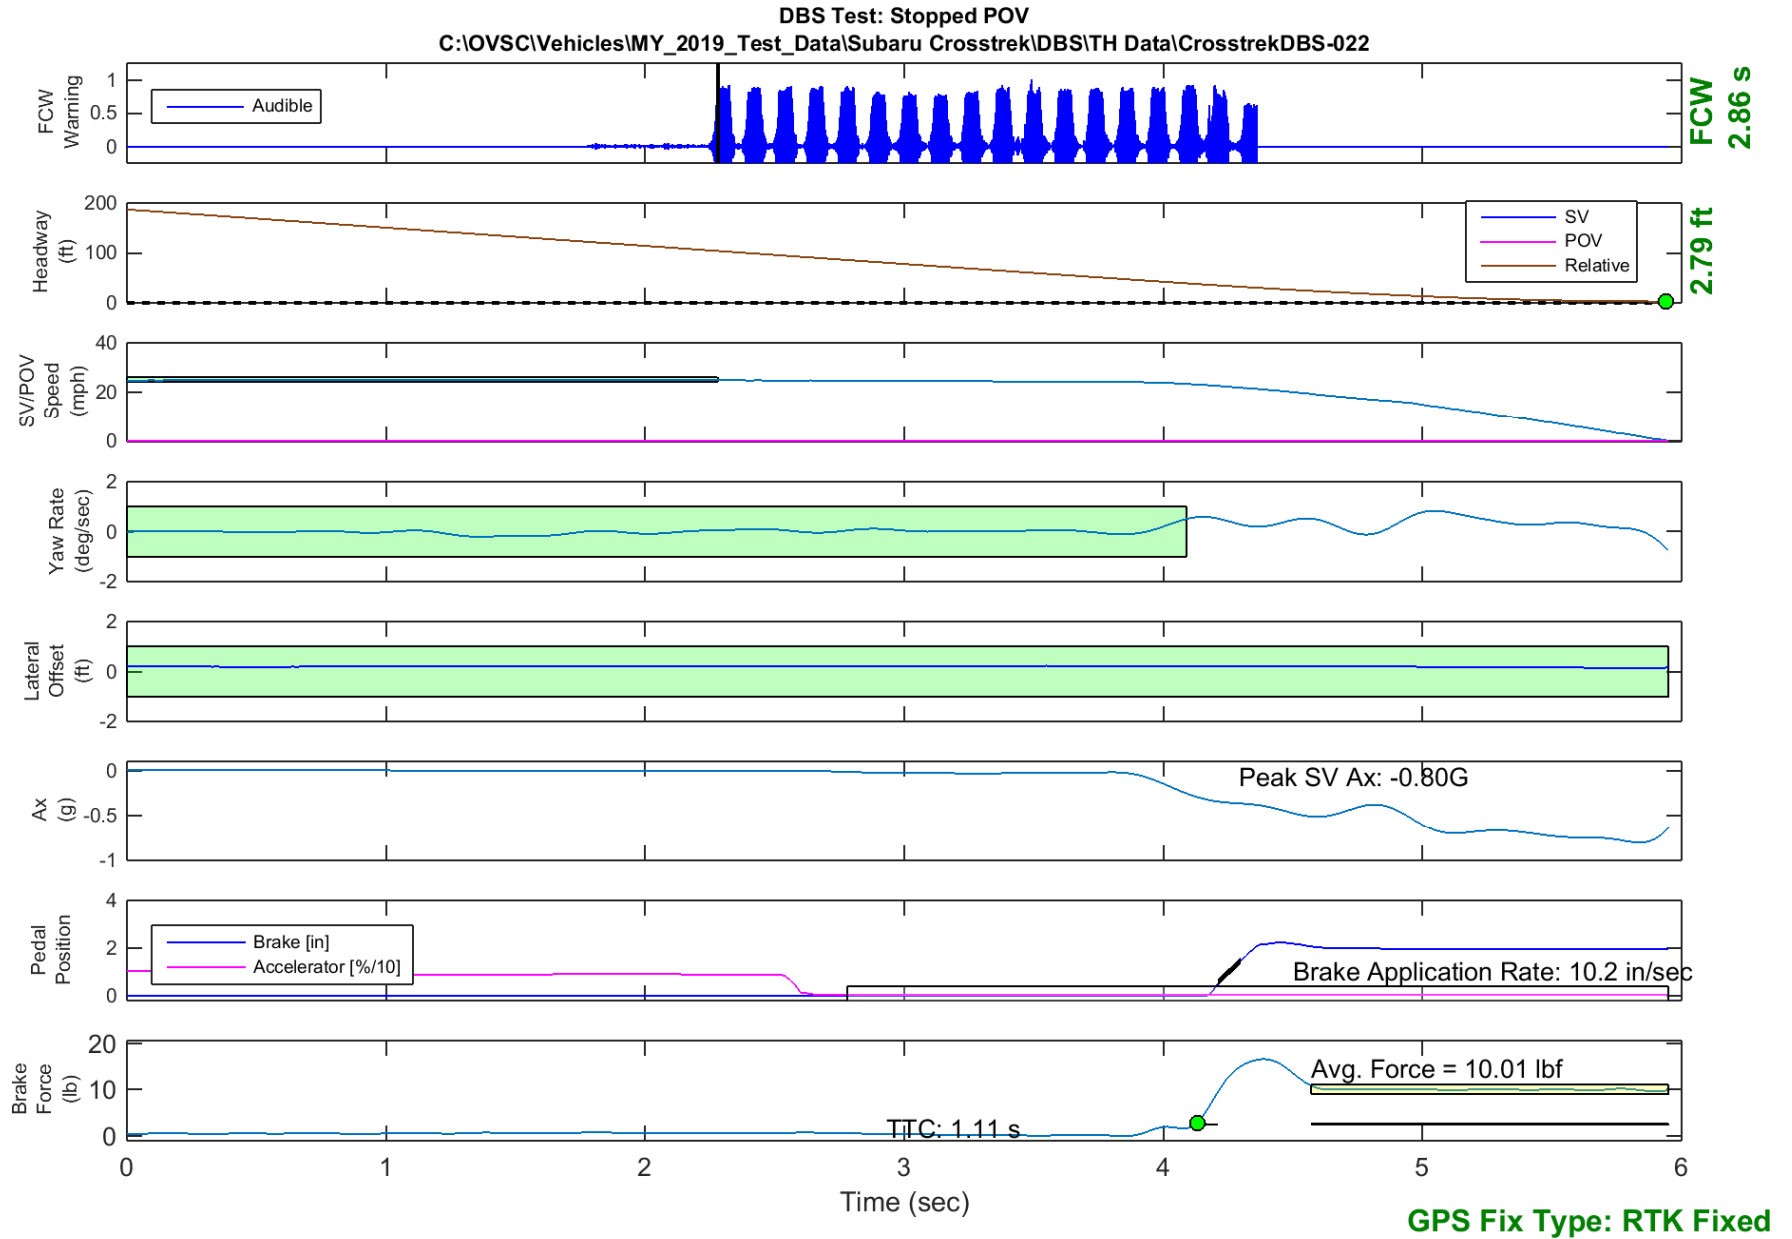


Figure E18. Time History for DBS Run 22, SV Encounters Stopped POV

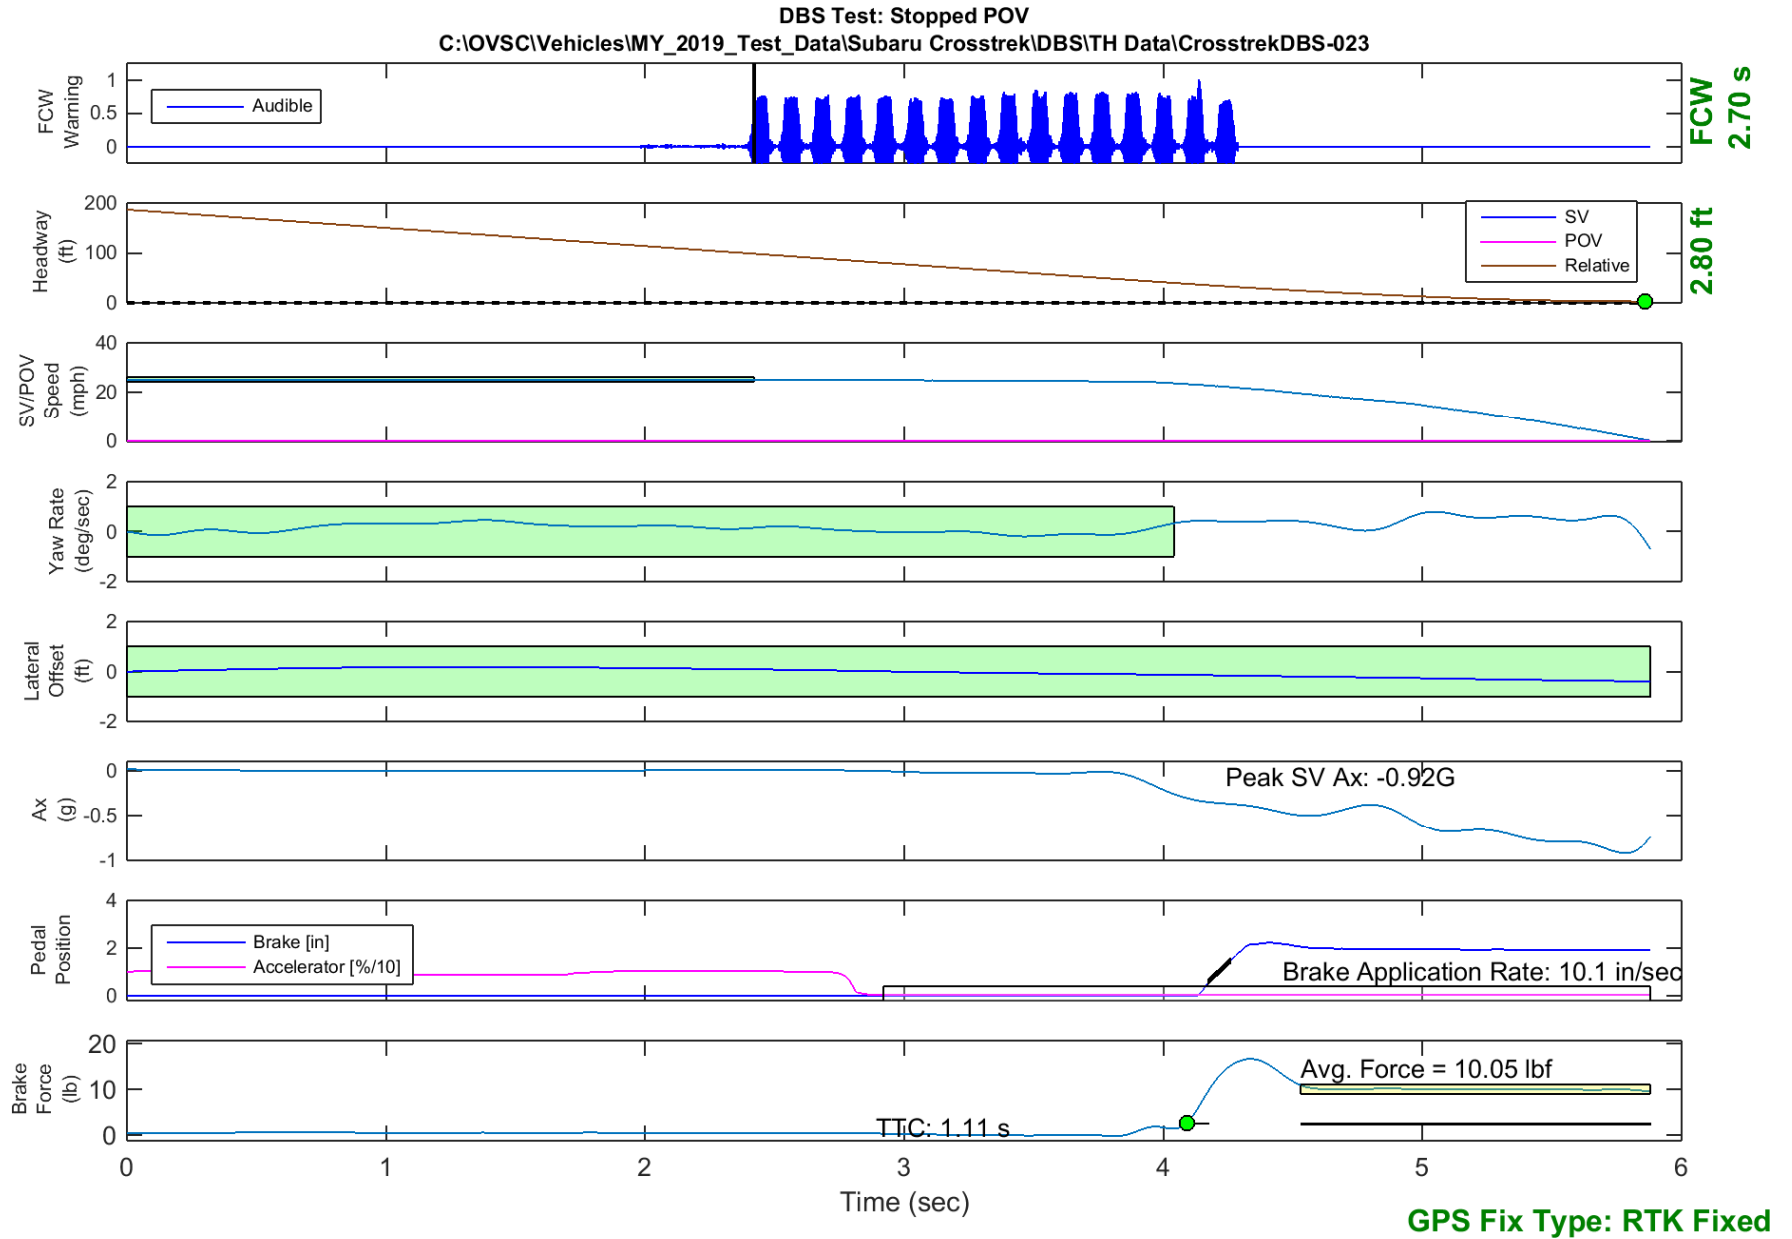


Figure E19. Time History for DBS Run 23, SV Encounters Stopped POV

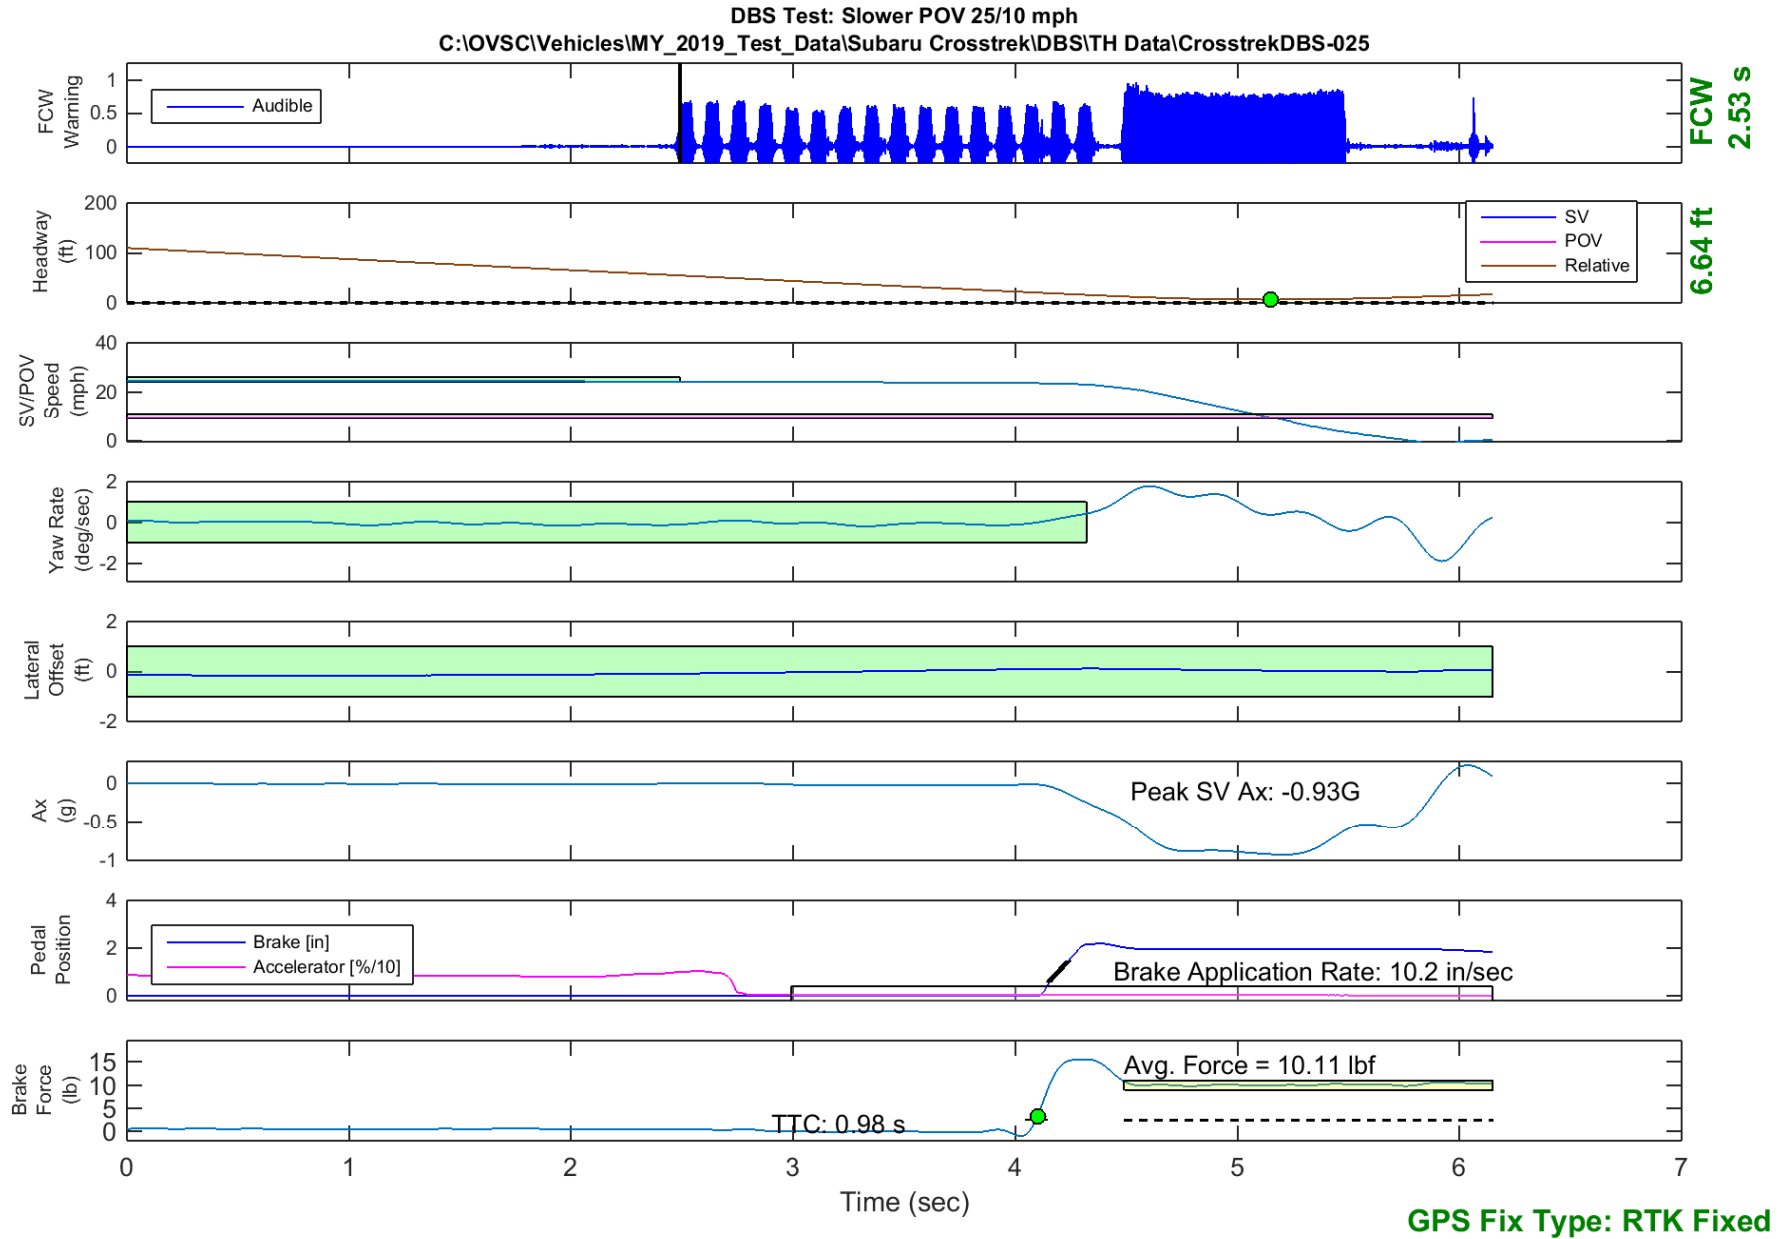


Figure E20. Time History for DBS Run 25, SV Encounters Slower POV, SV 25 mph, POV 10 mph

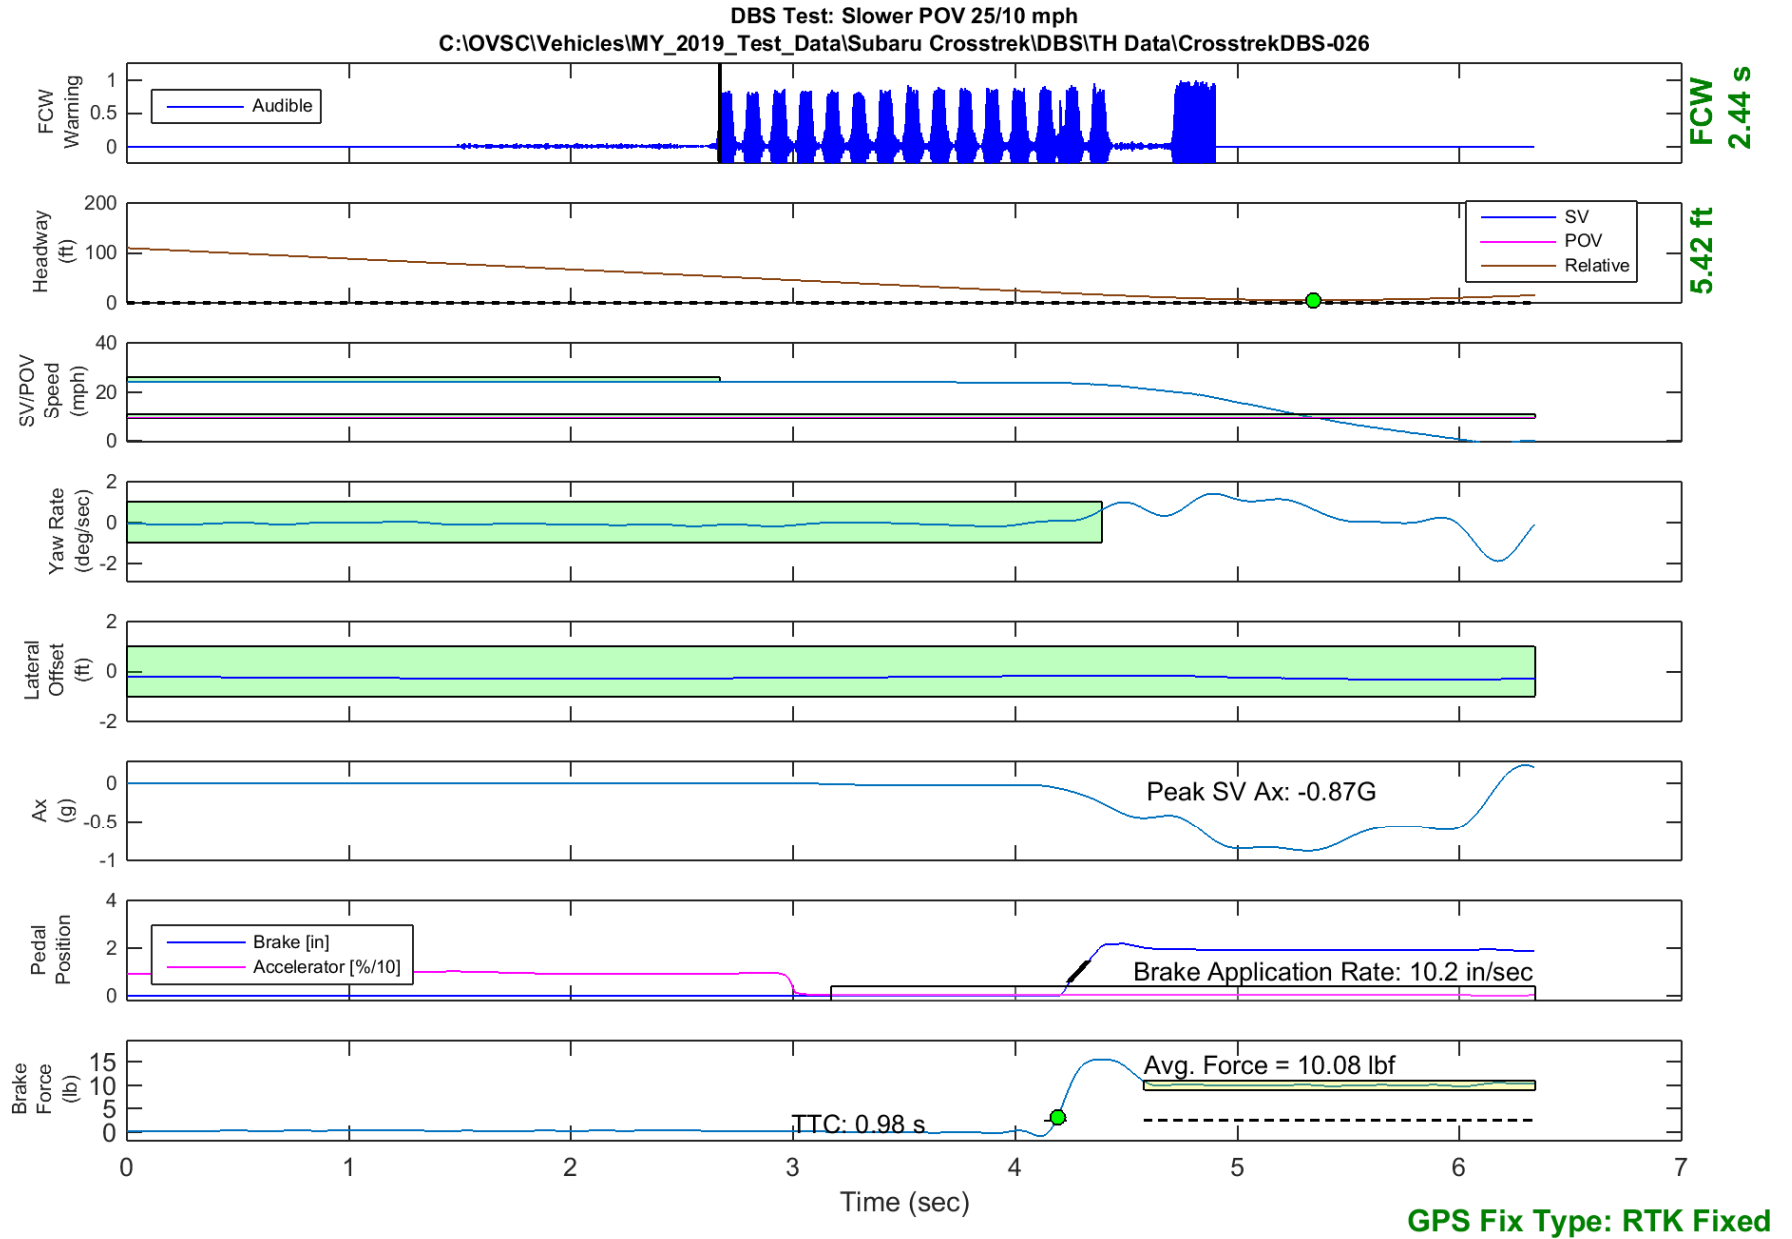


Figure E21. Time History for DBS Run 26, SV Encounters Slower POV, SV 25 mph, POV 10 mph

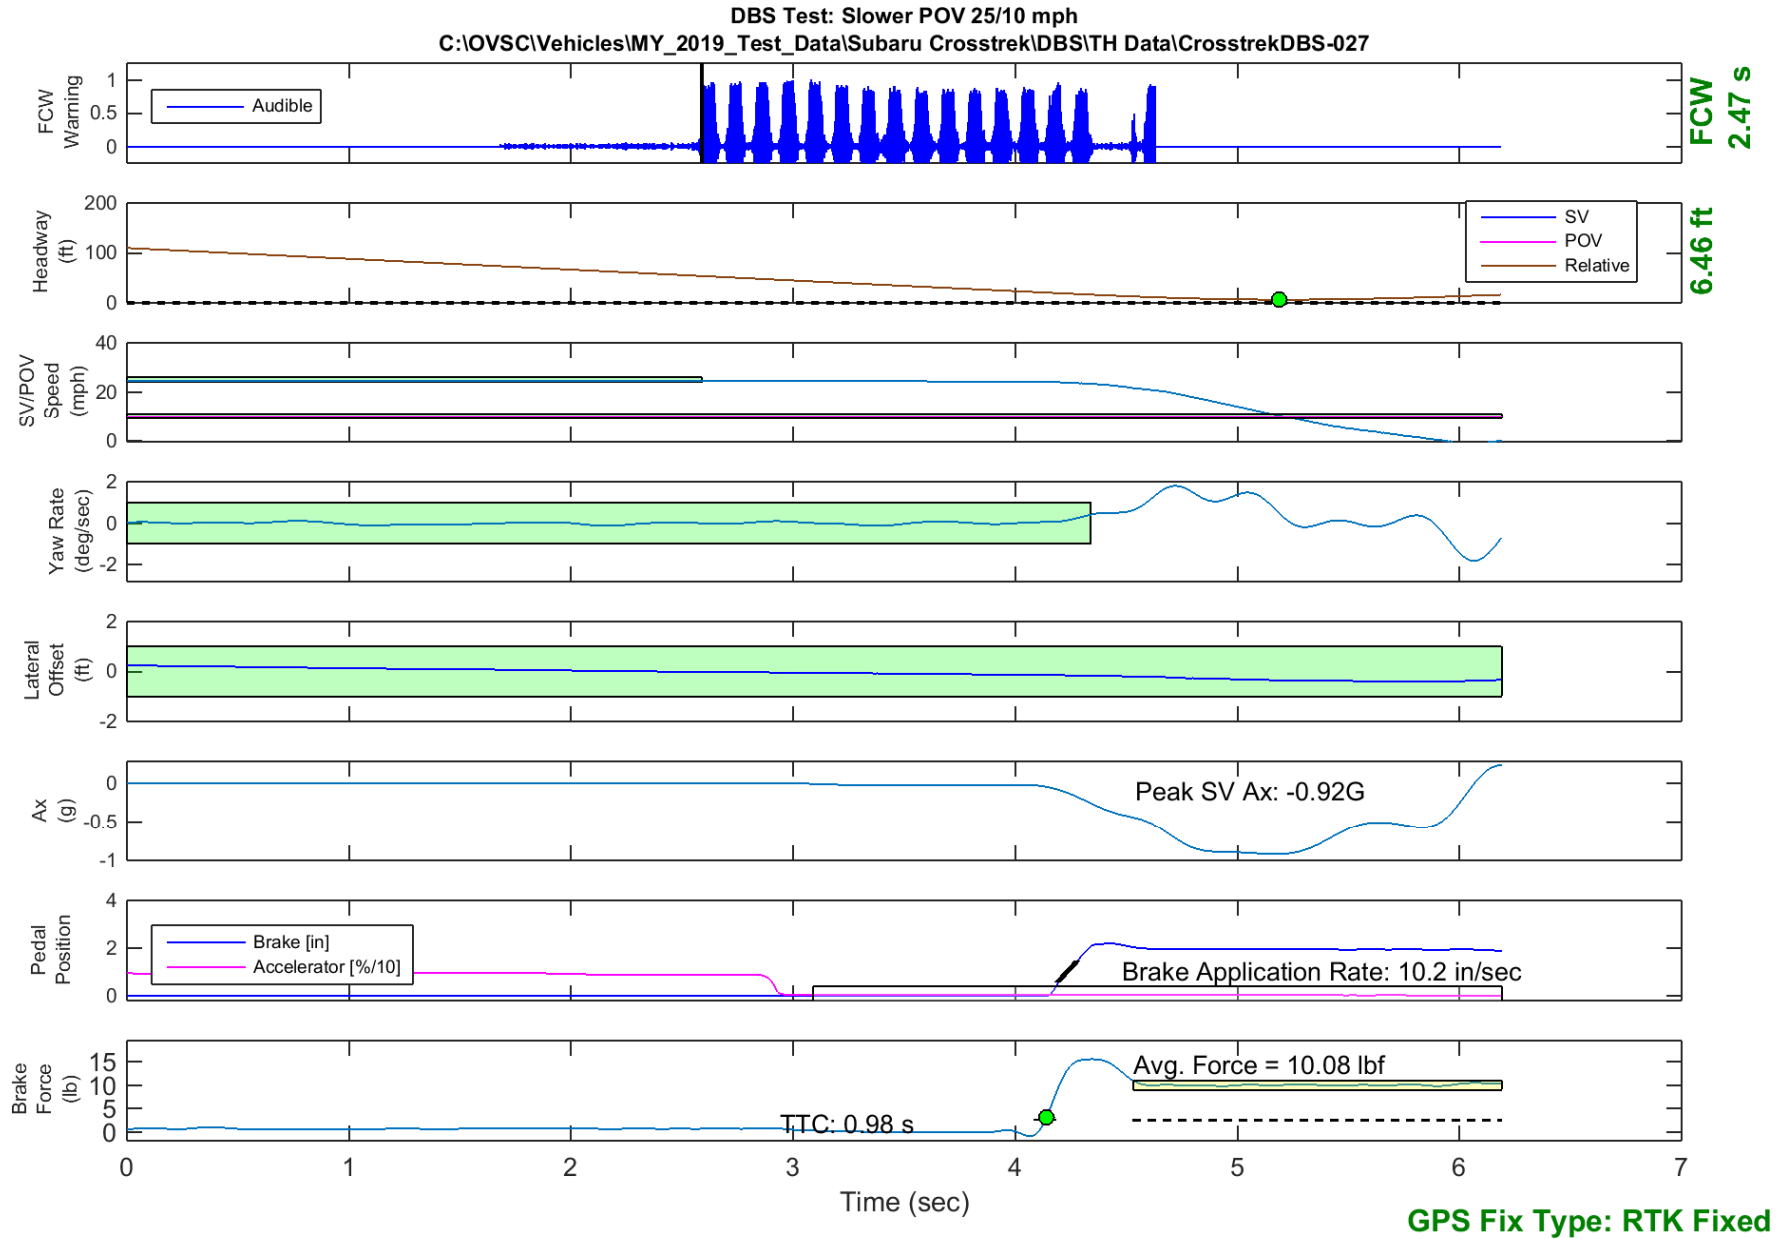


Figure E22. Time History for DBS Run 27, SV Encounters Slower POV, SV 25 mph, POV 10 mph

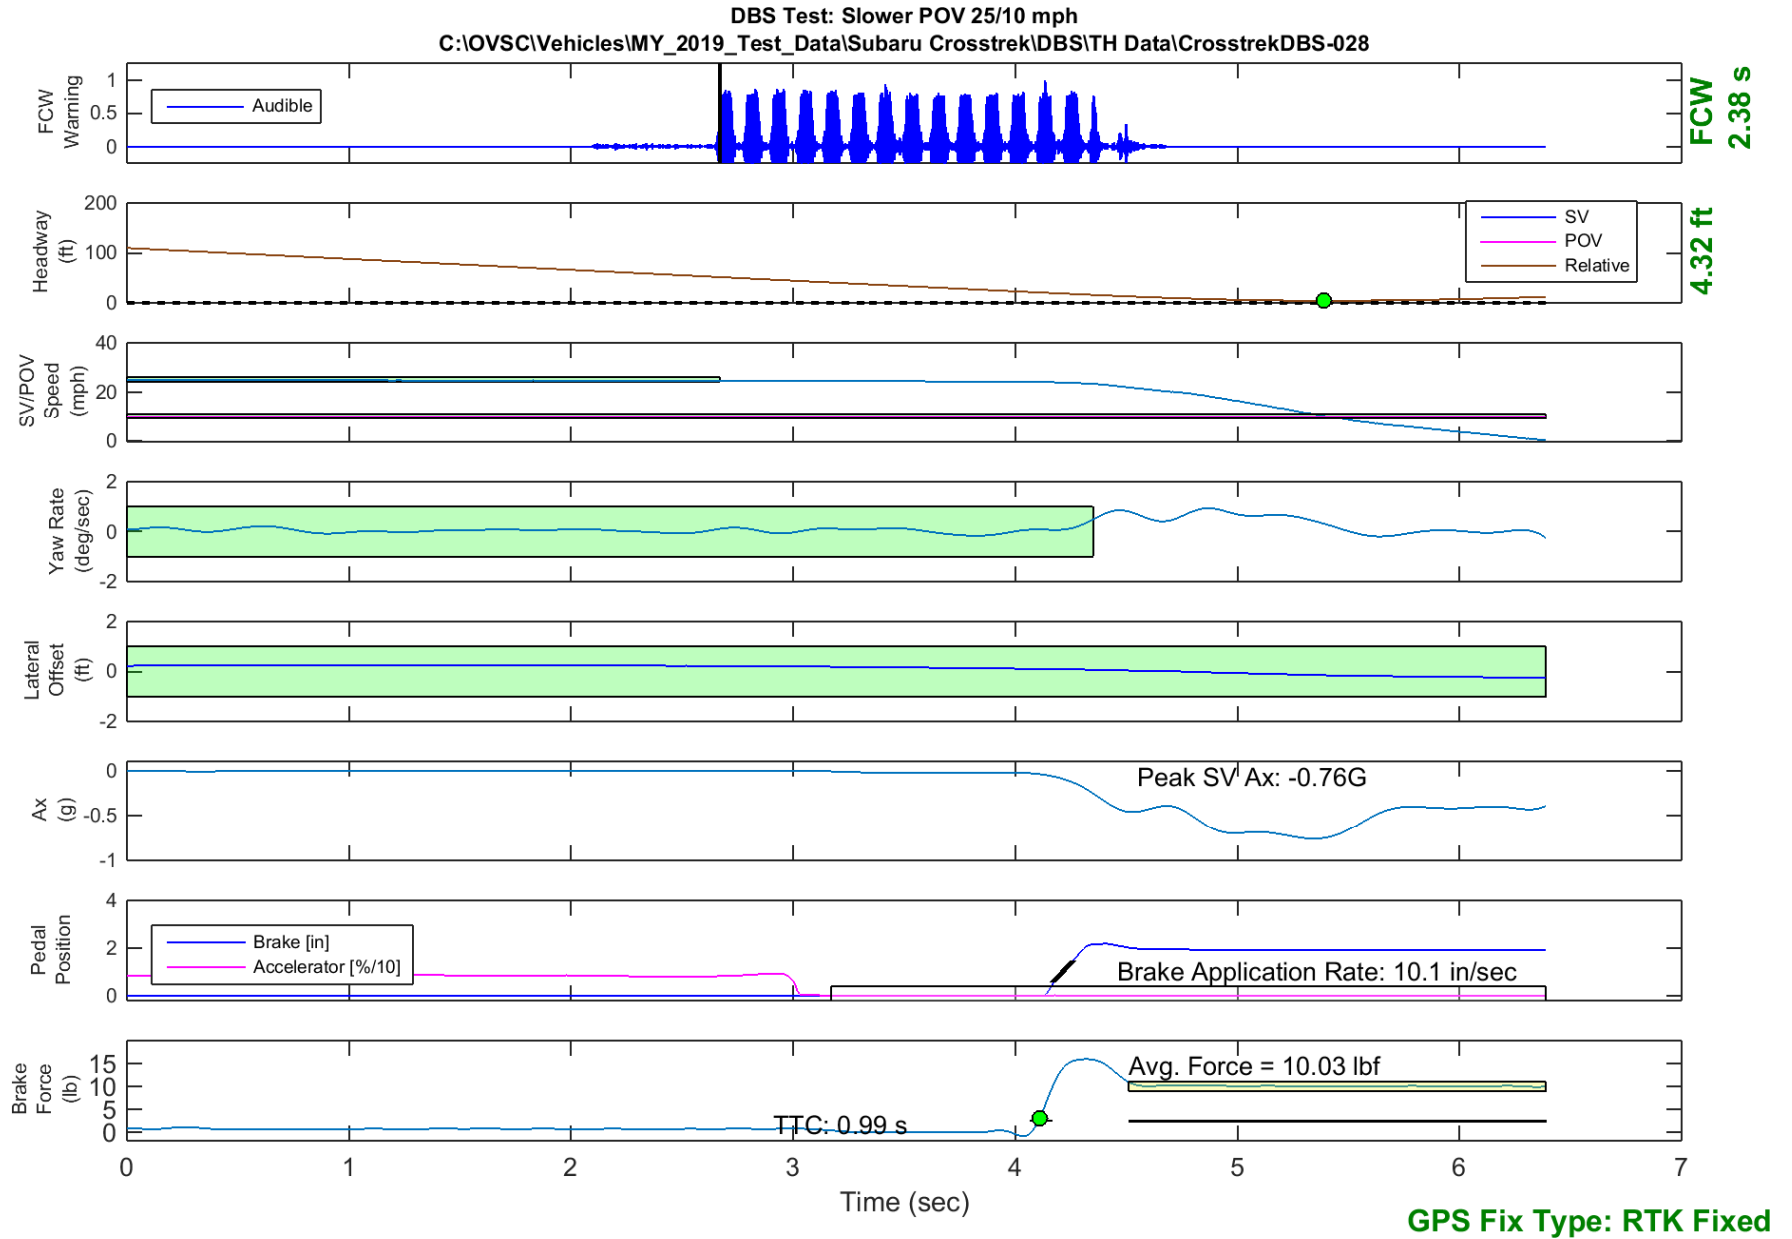


Figure E23. Time History for DBS Run 28, SV Encounters Slower POV, SV 25 mph, POV 10 mph

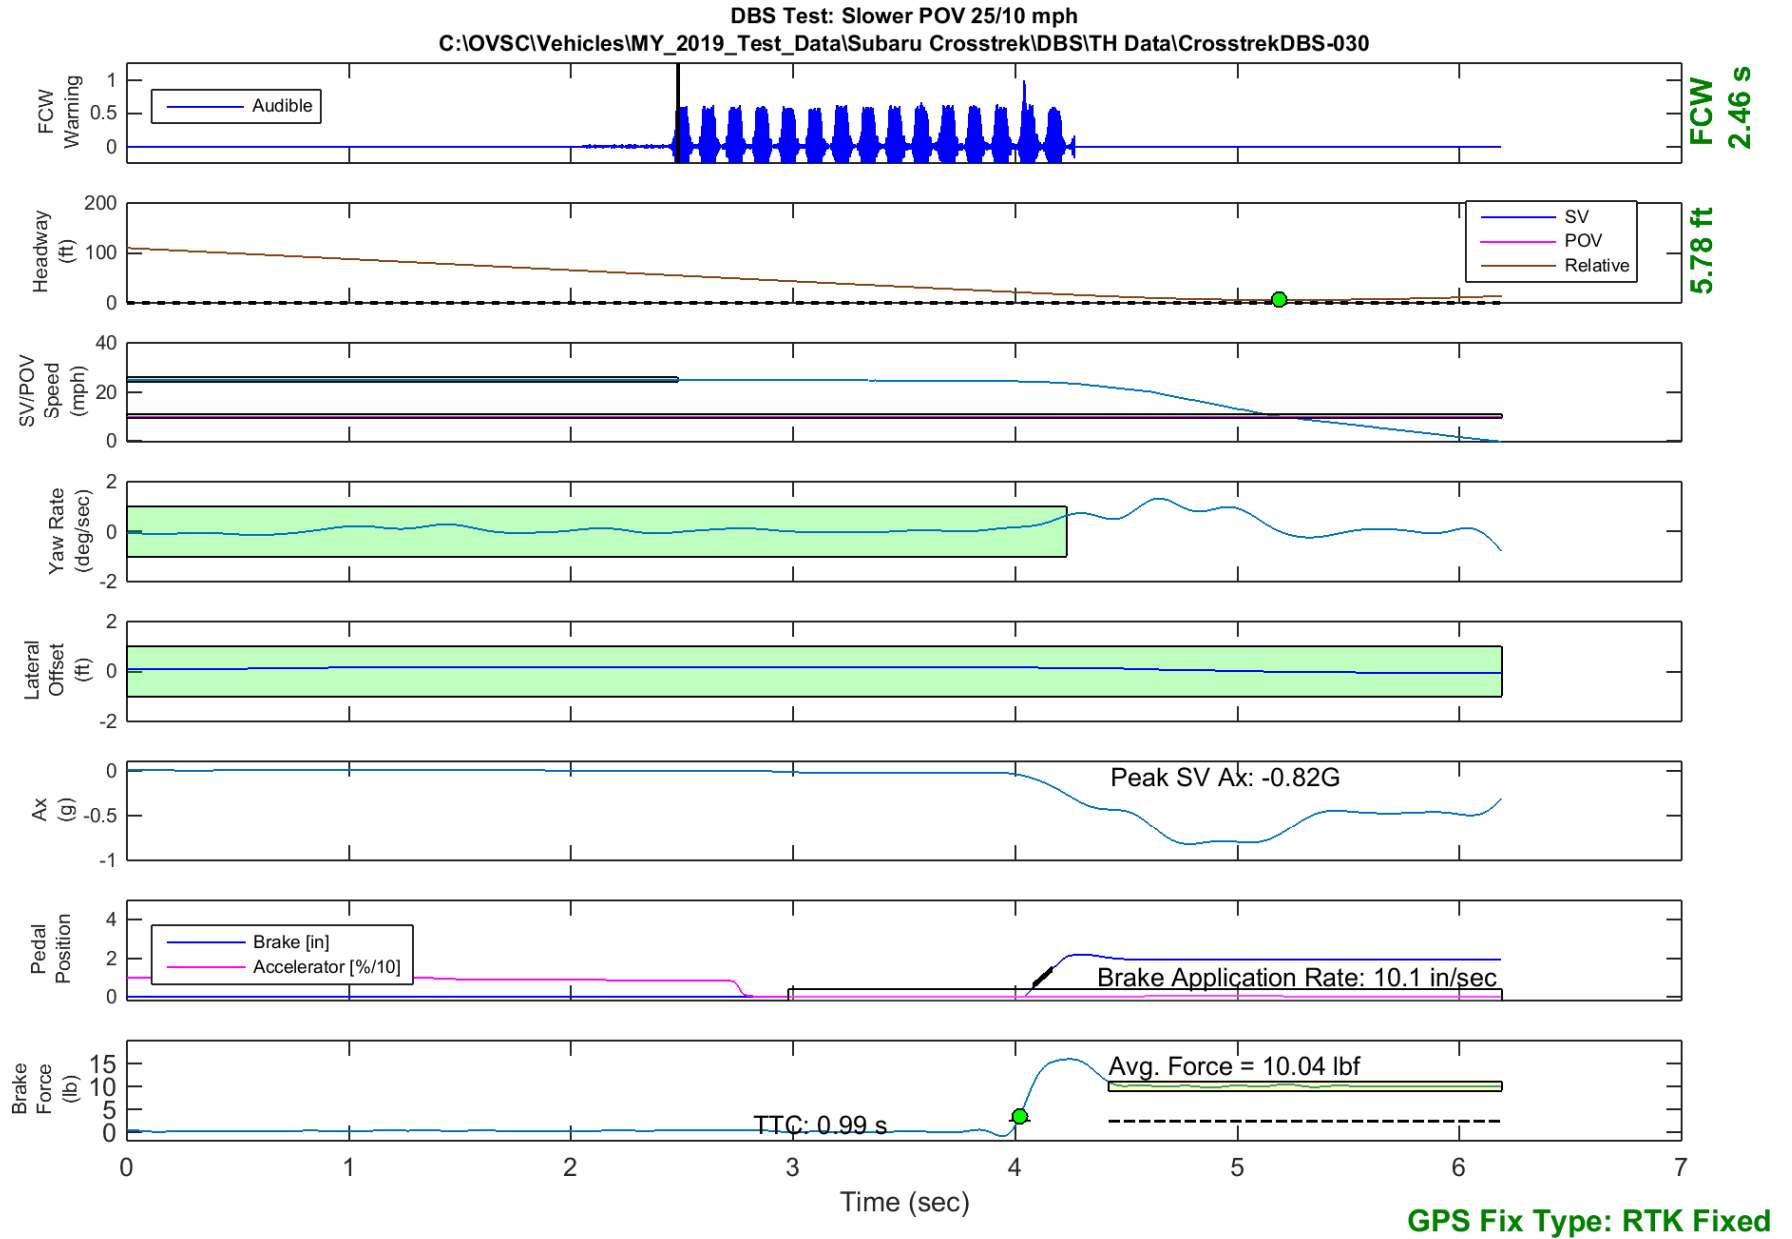


Figure E24. Time History for DBS Run 30, SV Encounters Slower POV, SV 25 mph, POV 10 mph

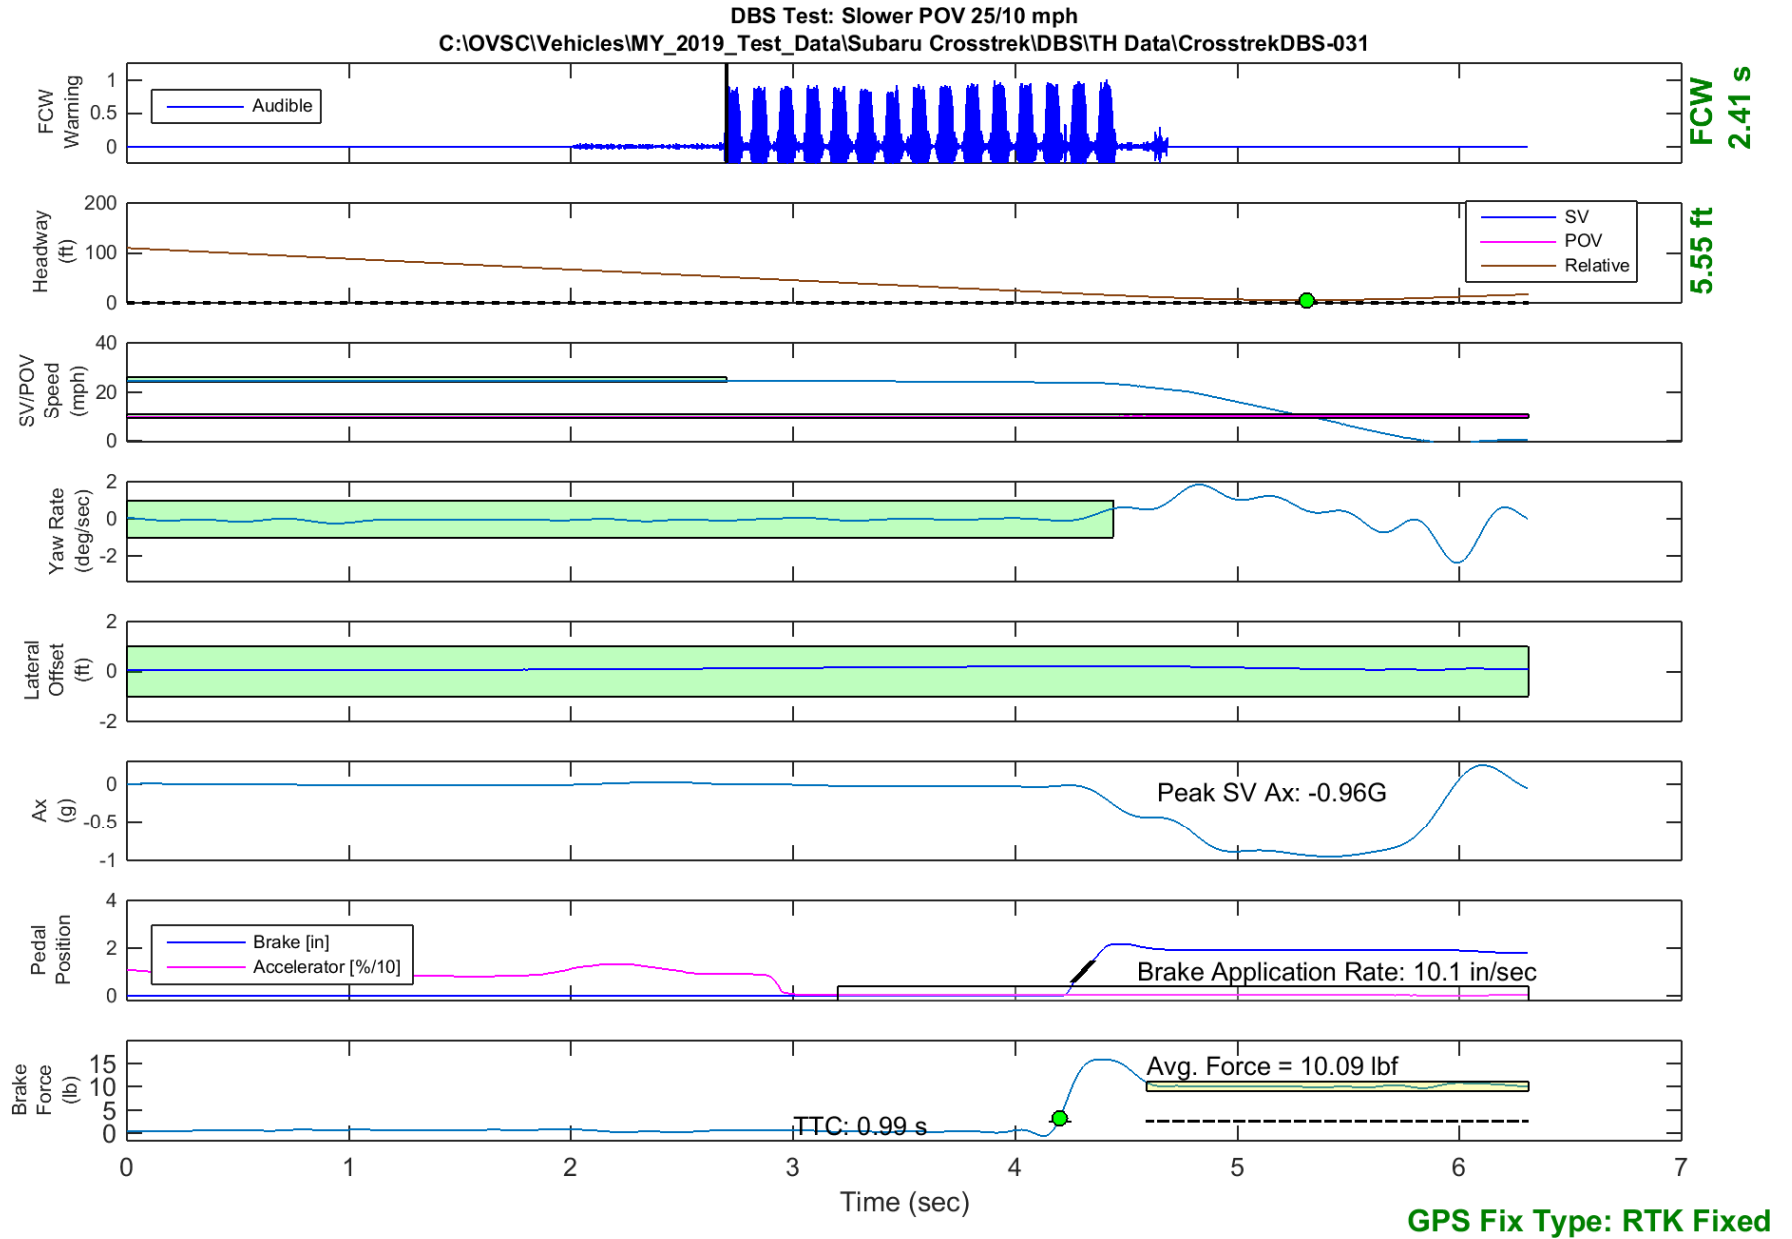


Figure E25. Time History for DBS Run 31, SV Encounters Slower POV, SV 25 mph, POV 10 mph

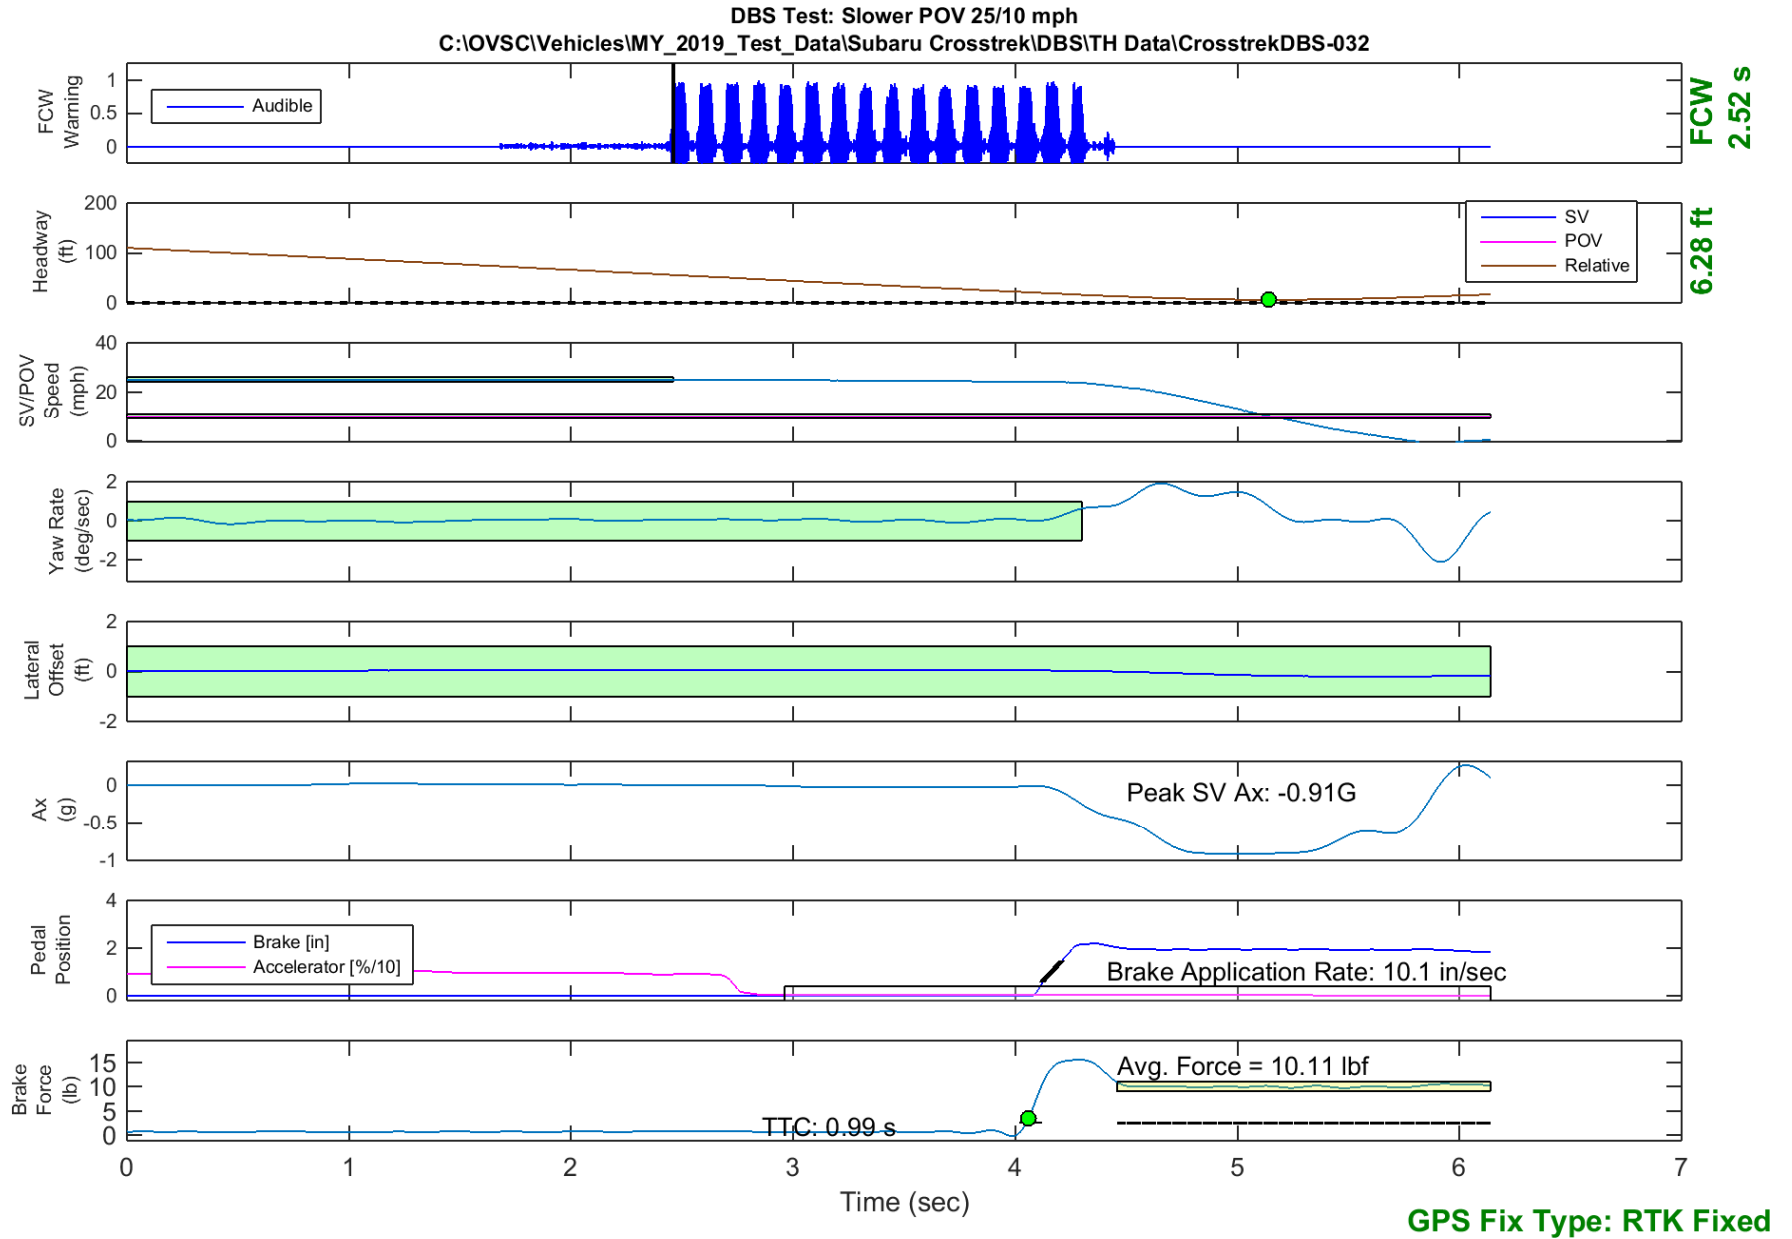


Figure E26. Time History for DBS Run 32, SV Encounters Slower POV, SV 25 mph, POV 10 mph

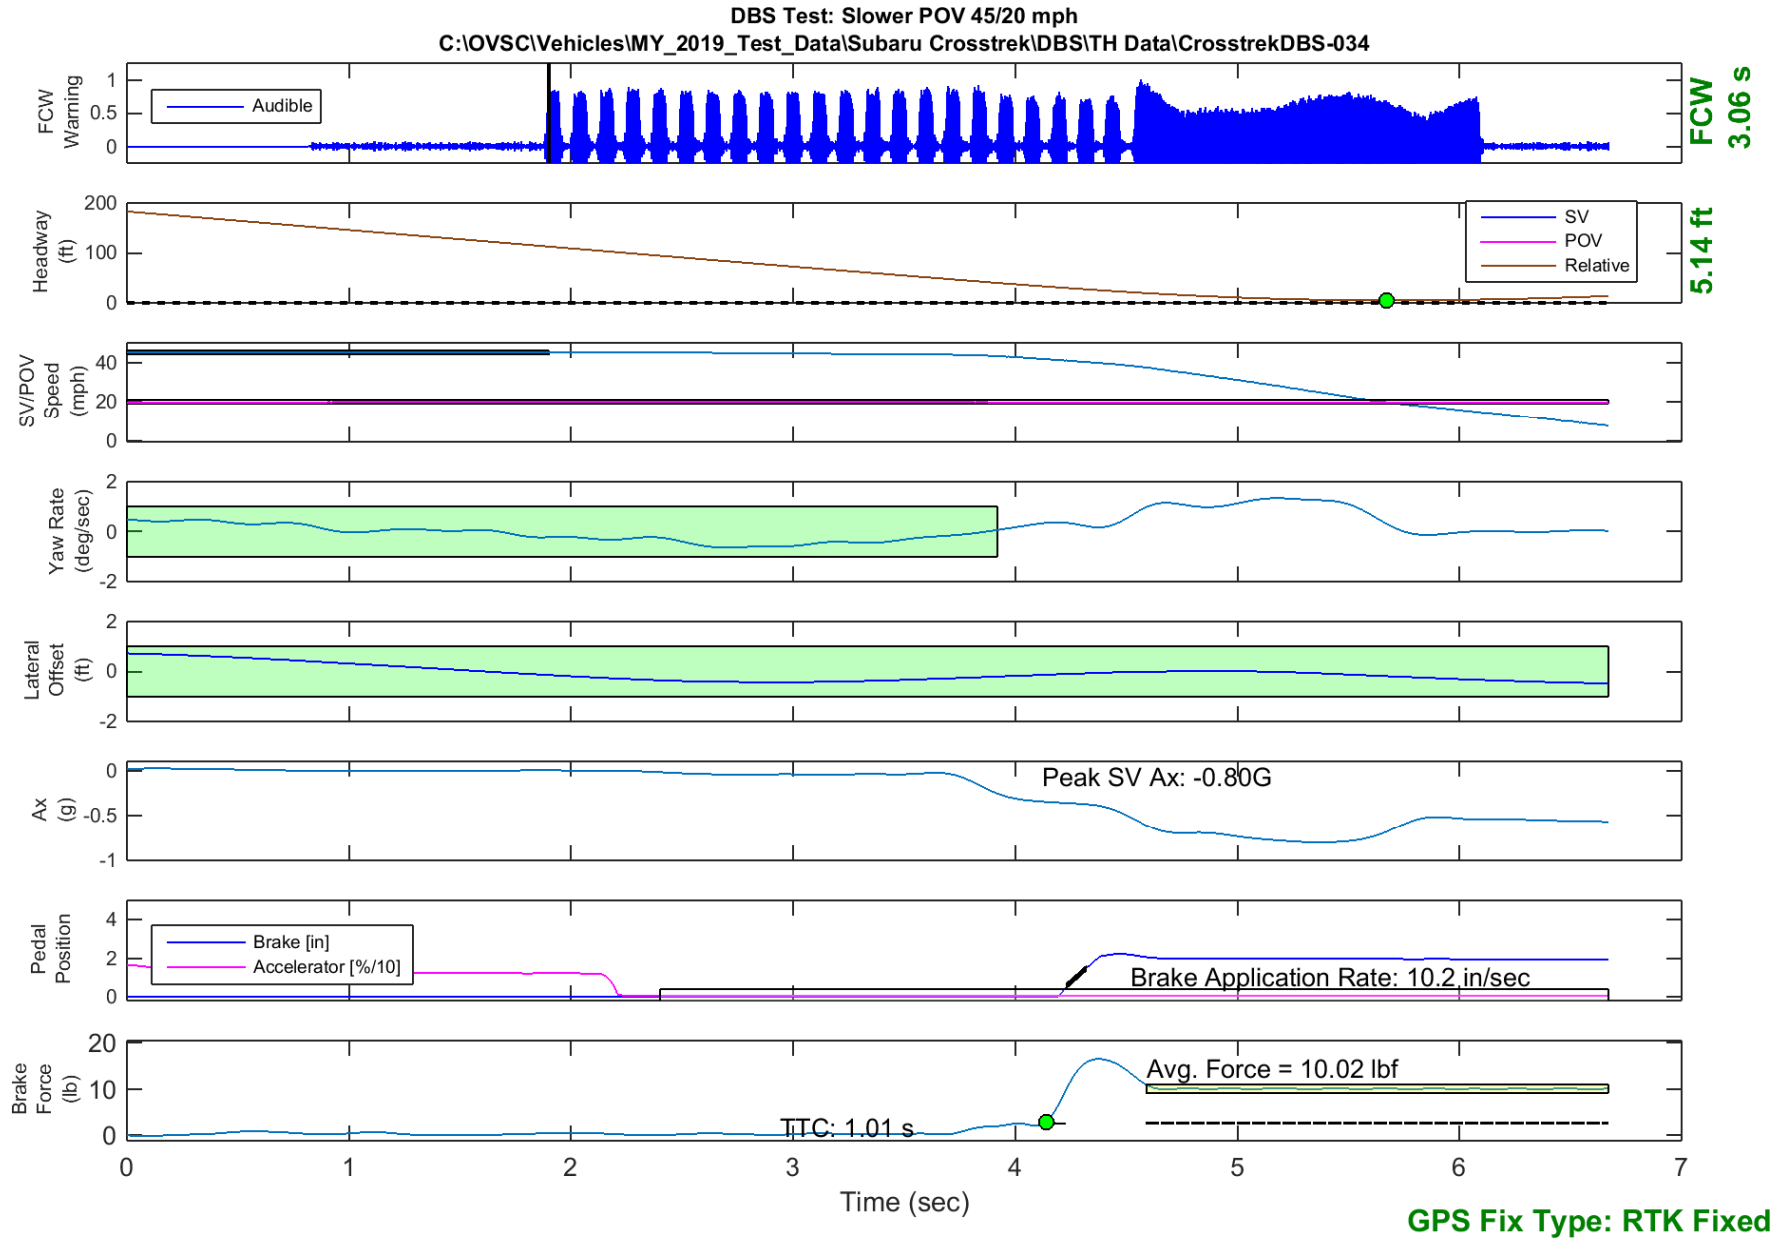


Figure E27. Time History for DBS Run 34, SV Encounters Slower POV, SV 45 mph, POV 20 mph

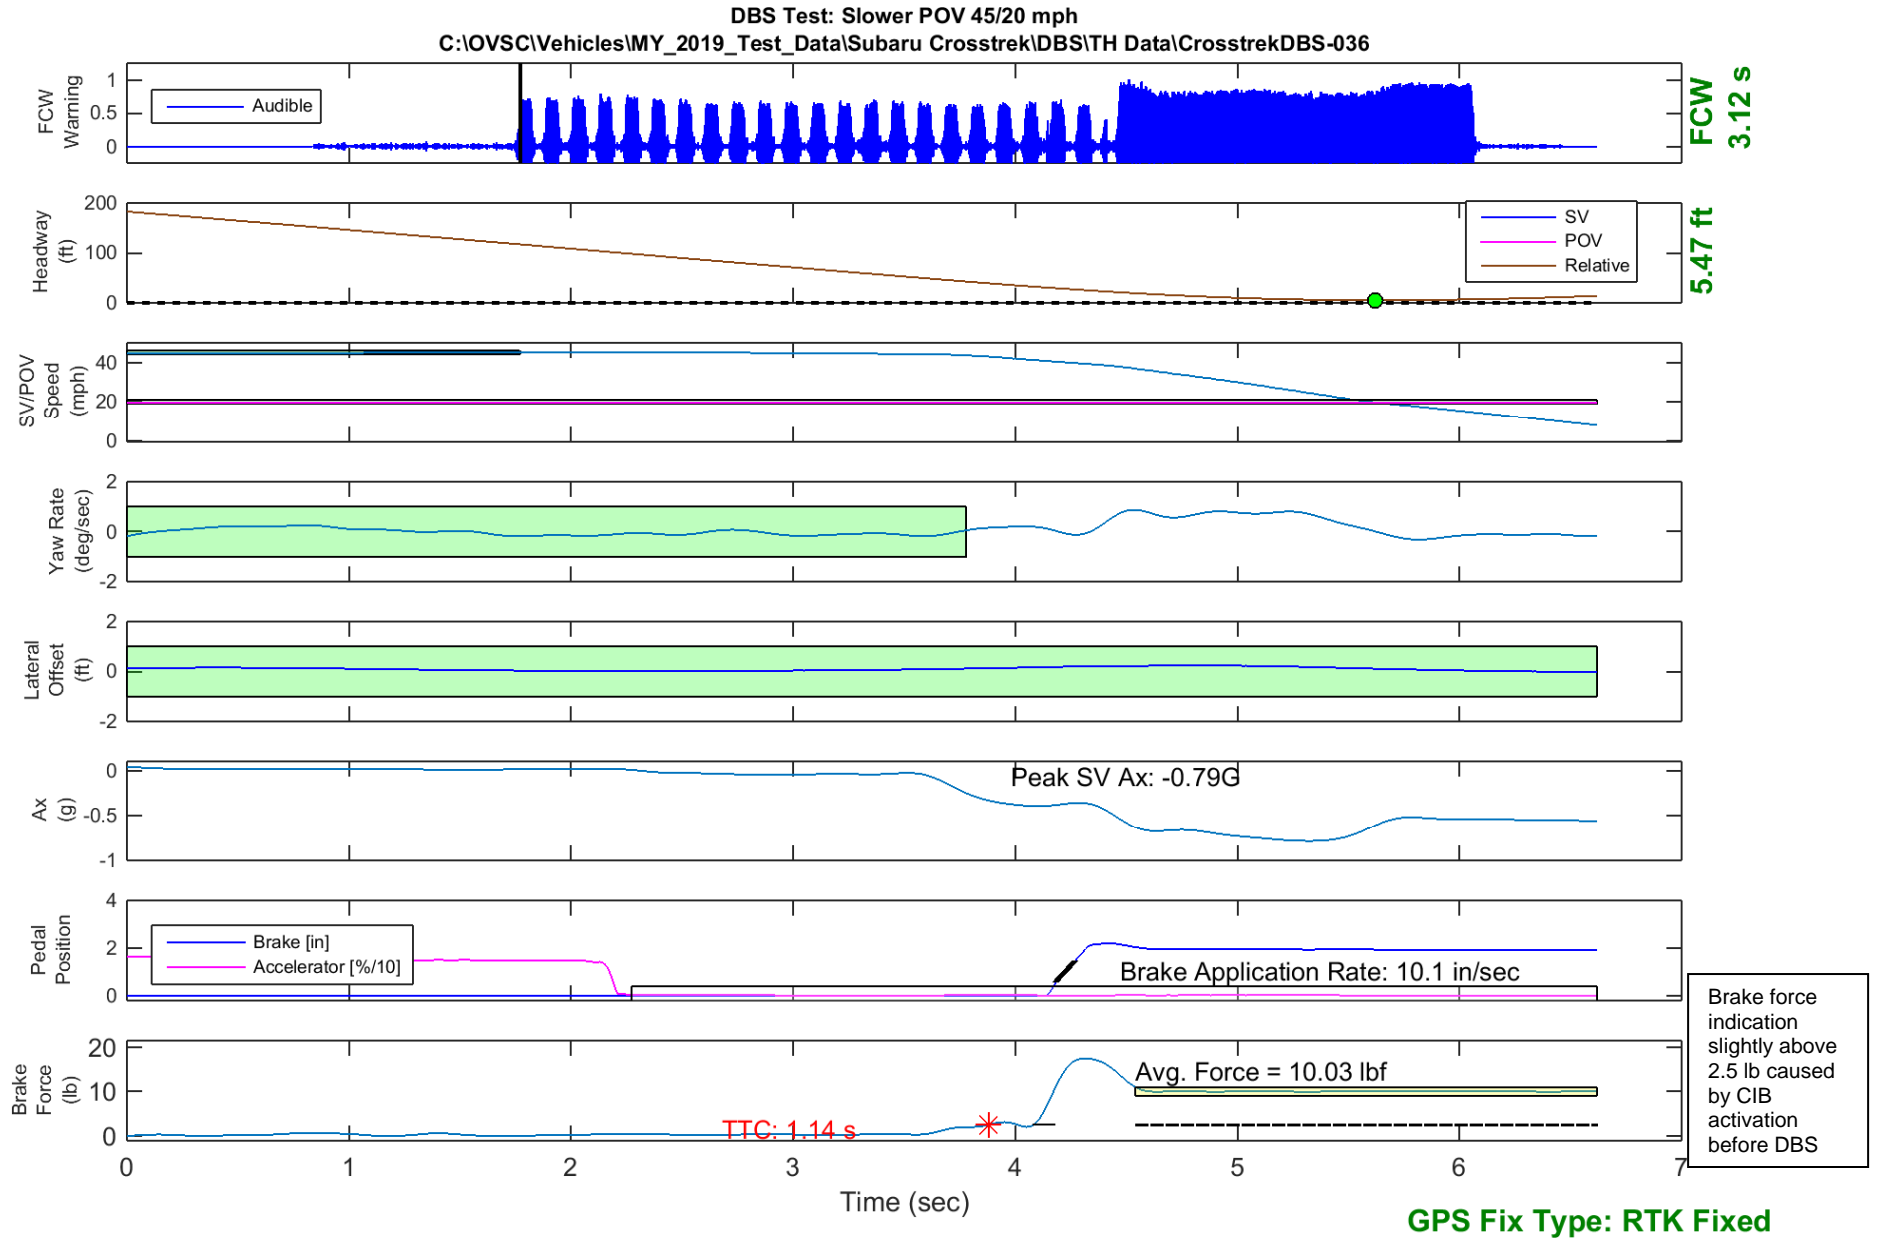


Figure E28. Time History for DBS Run 36, SV Encounters Slower POV, SV 45 mph, POV 20 mph

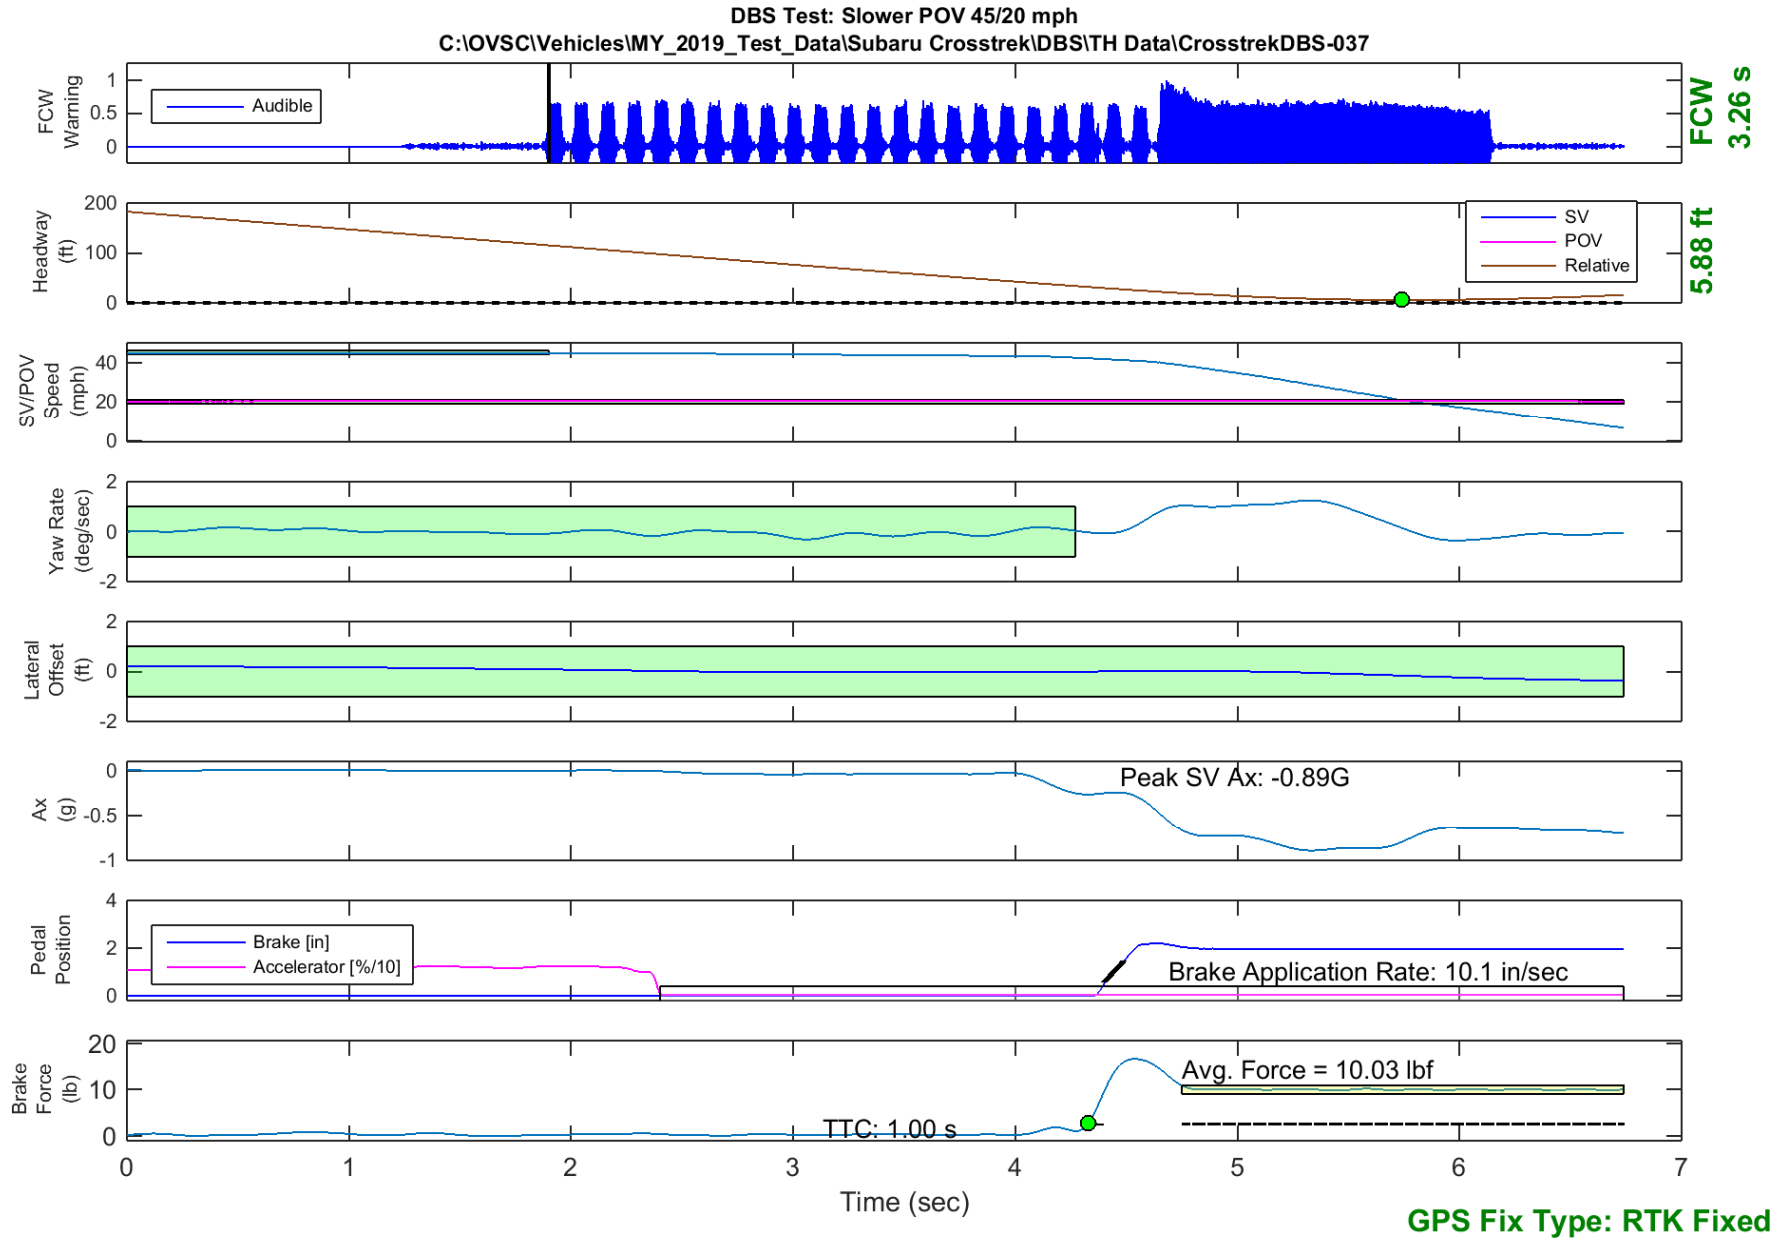


Figure E29. Time History for DBS Run 37, SV Encounters Slower POV, SV 45 mph, POV 20 mph

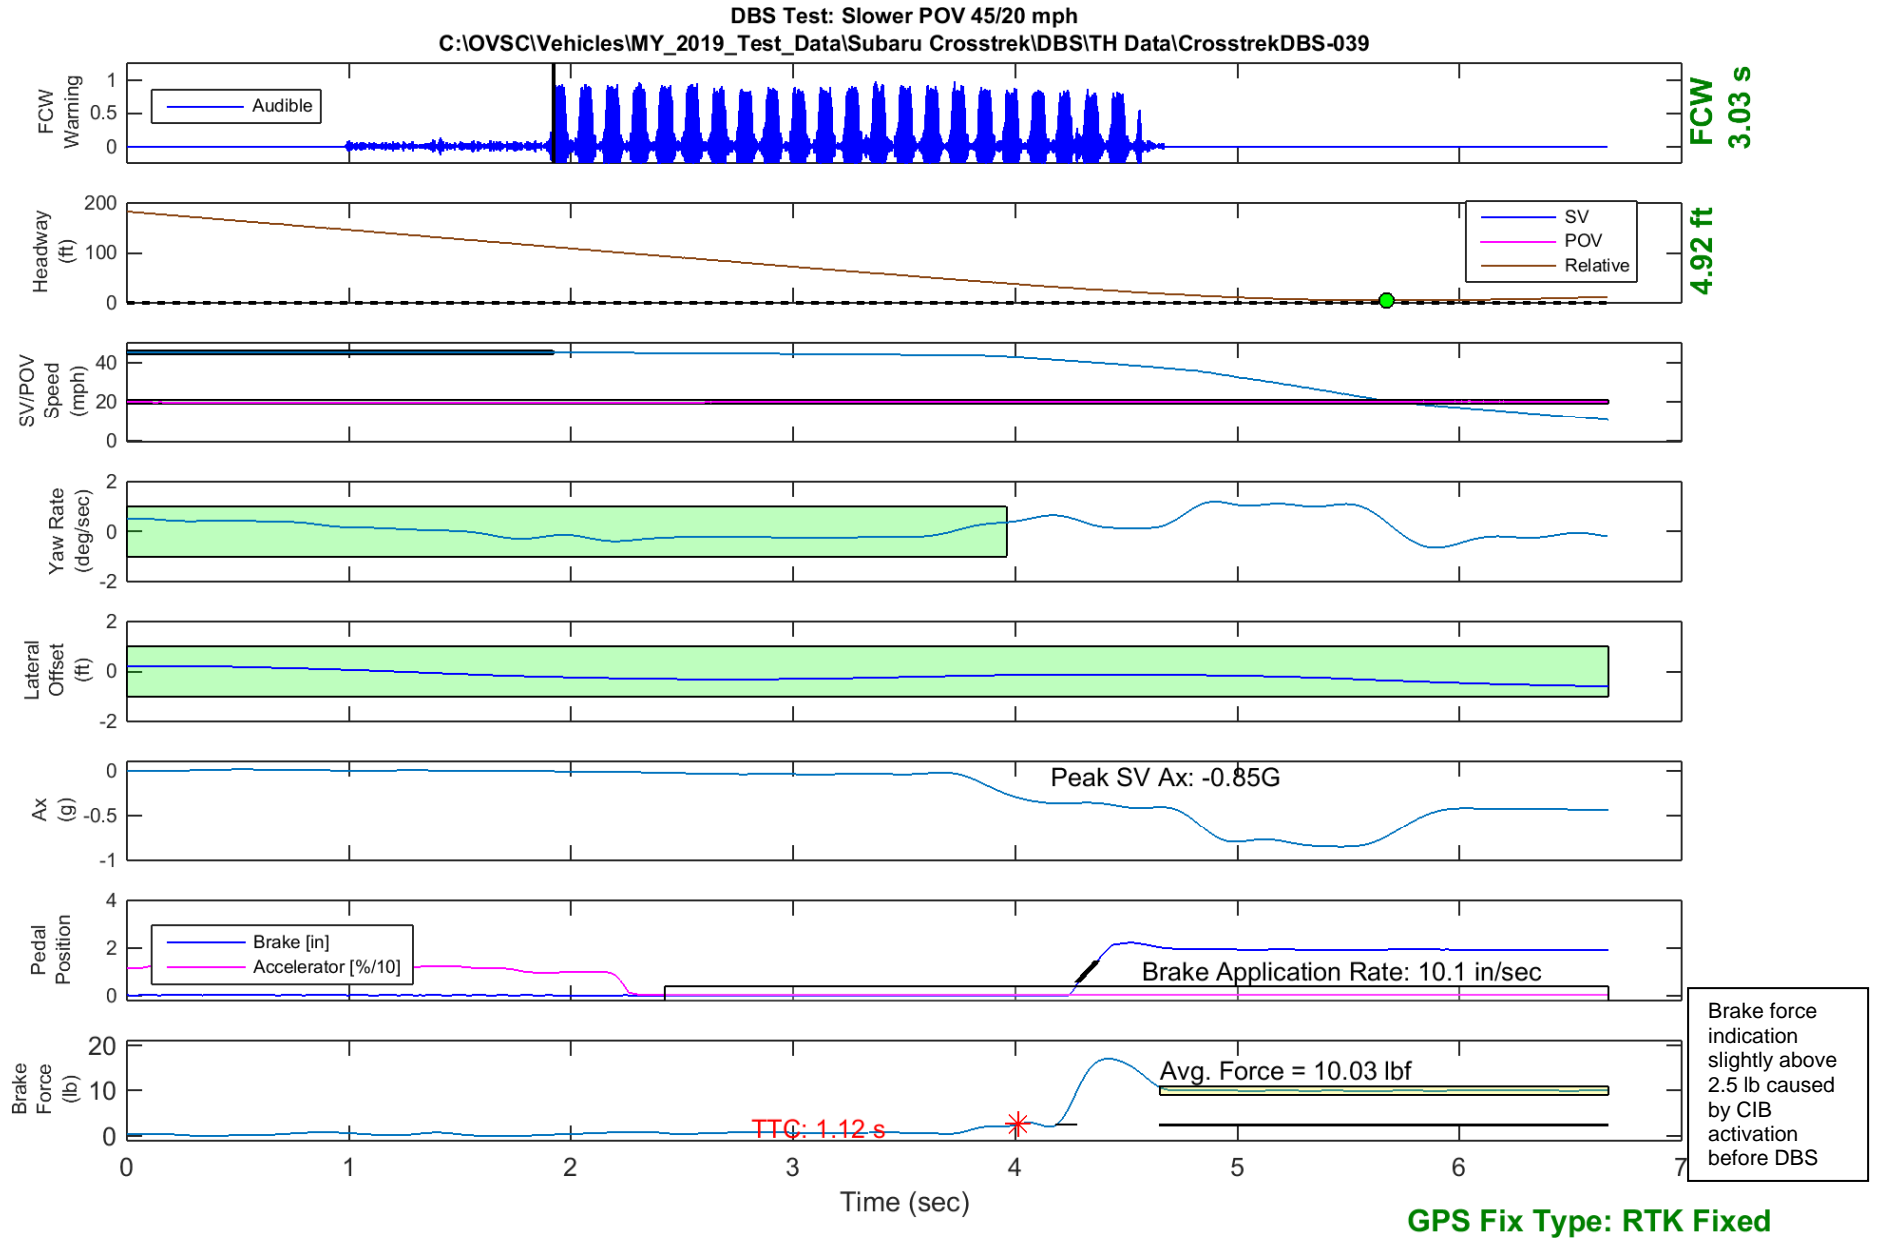


Figure E30. Time History for DBS Run 39, SV Encounters Slower POV, SV 45 mph, POV 20 mph

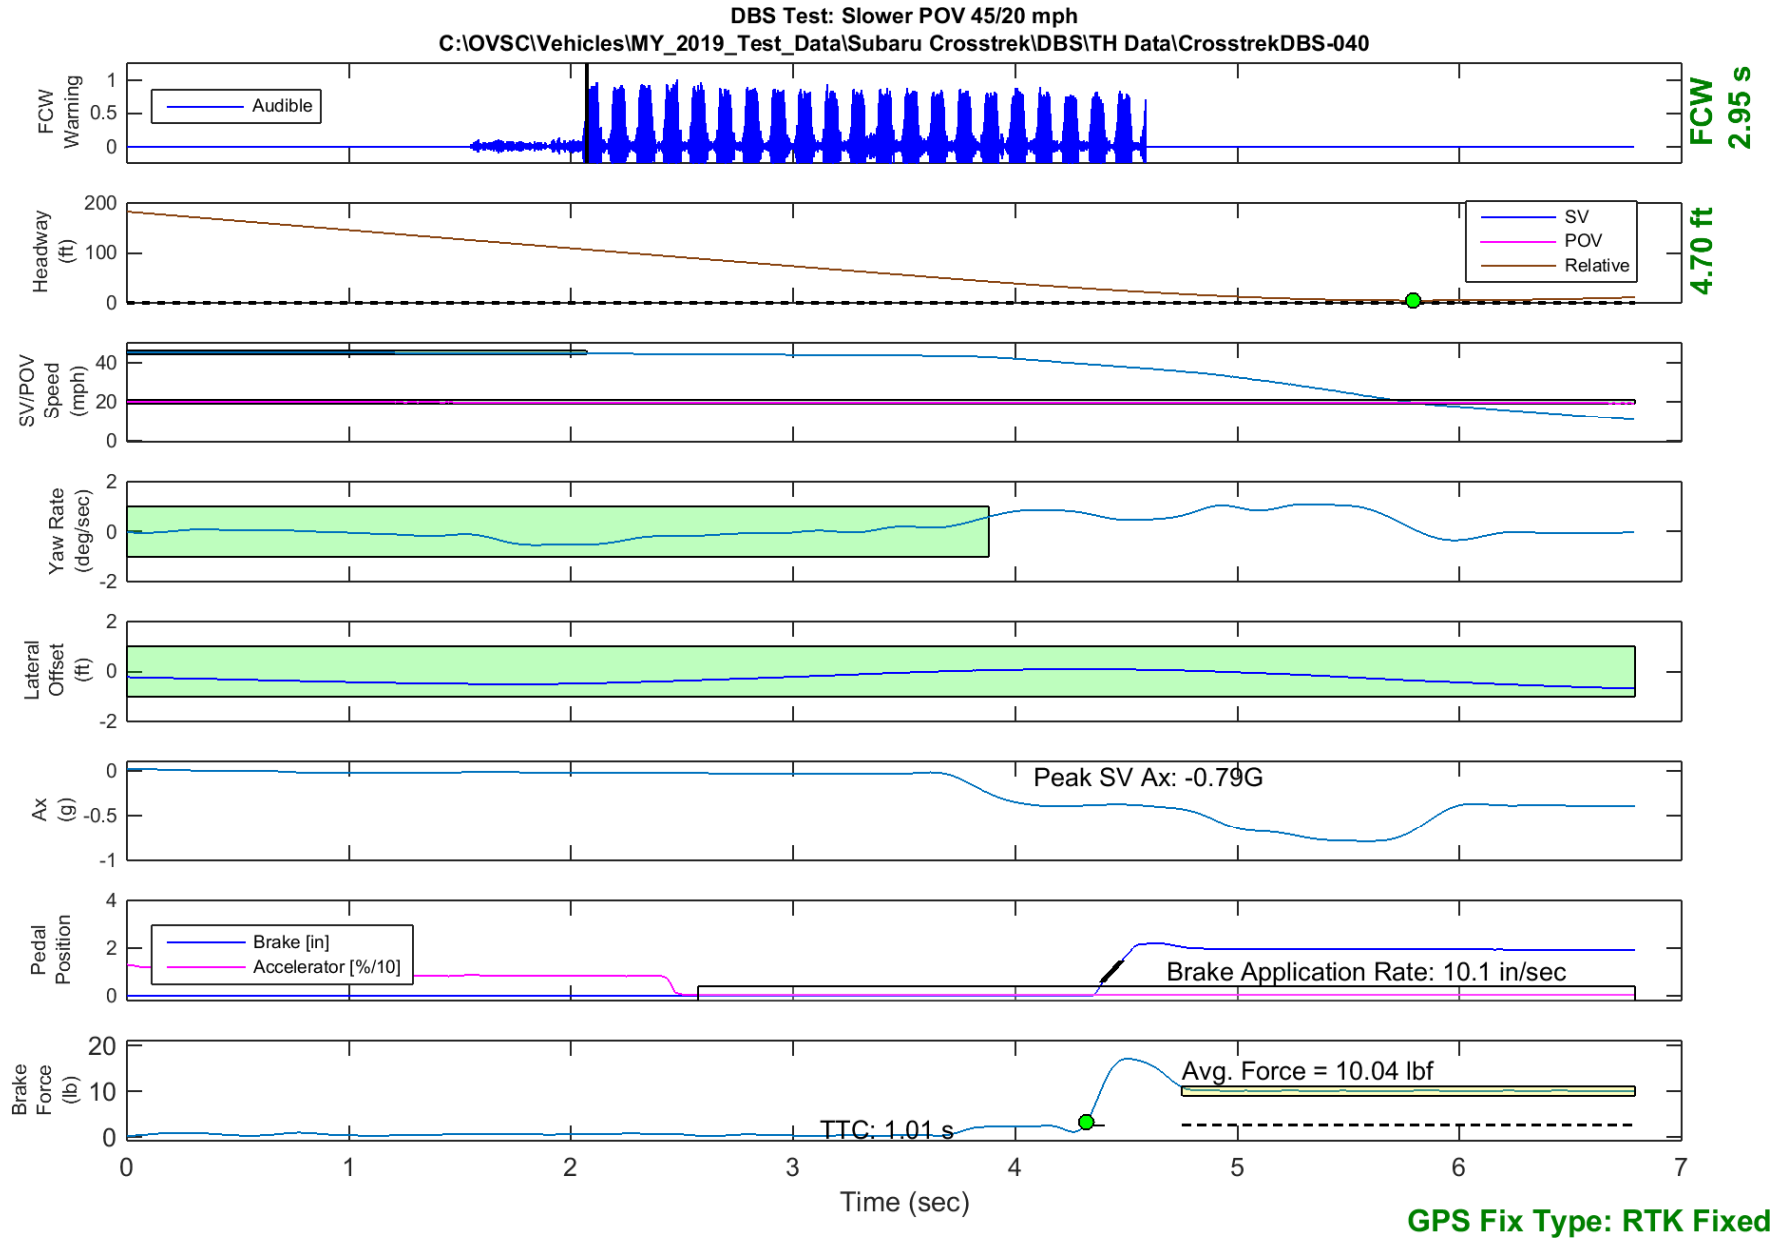


Figure E31. Time History for DBS Run 40, SV Encounters Slower POV, SV 45 mph, POV 20 mph

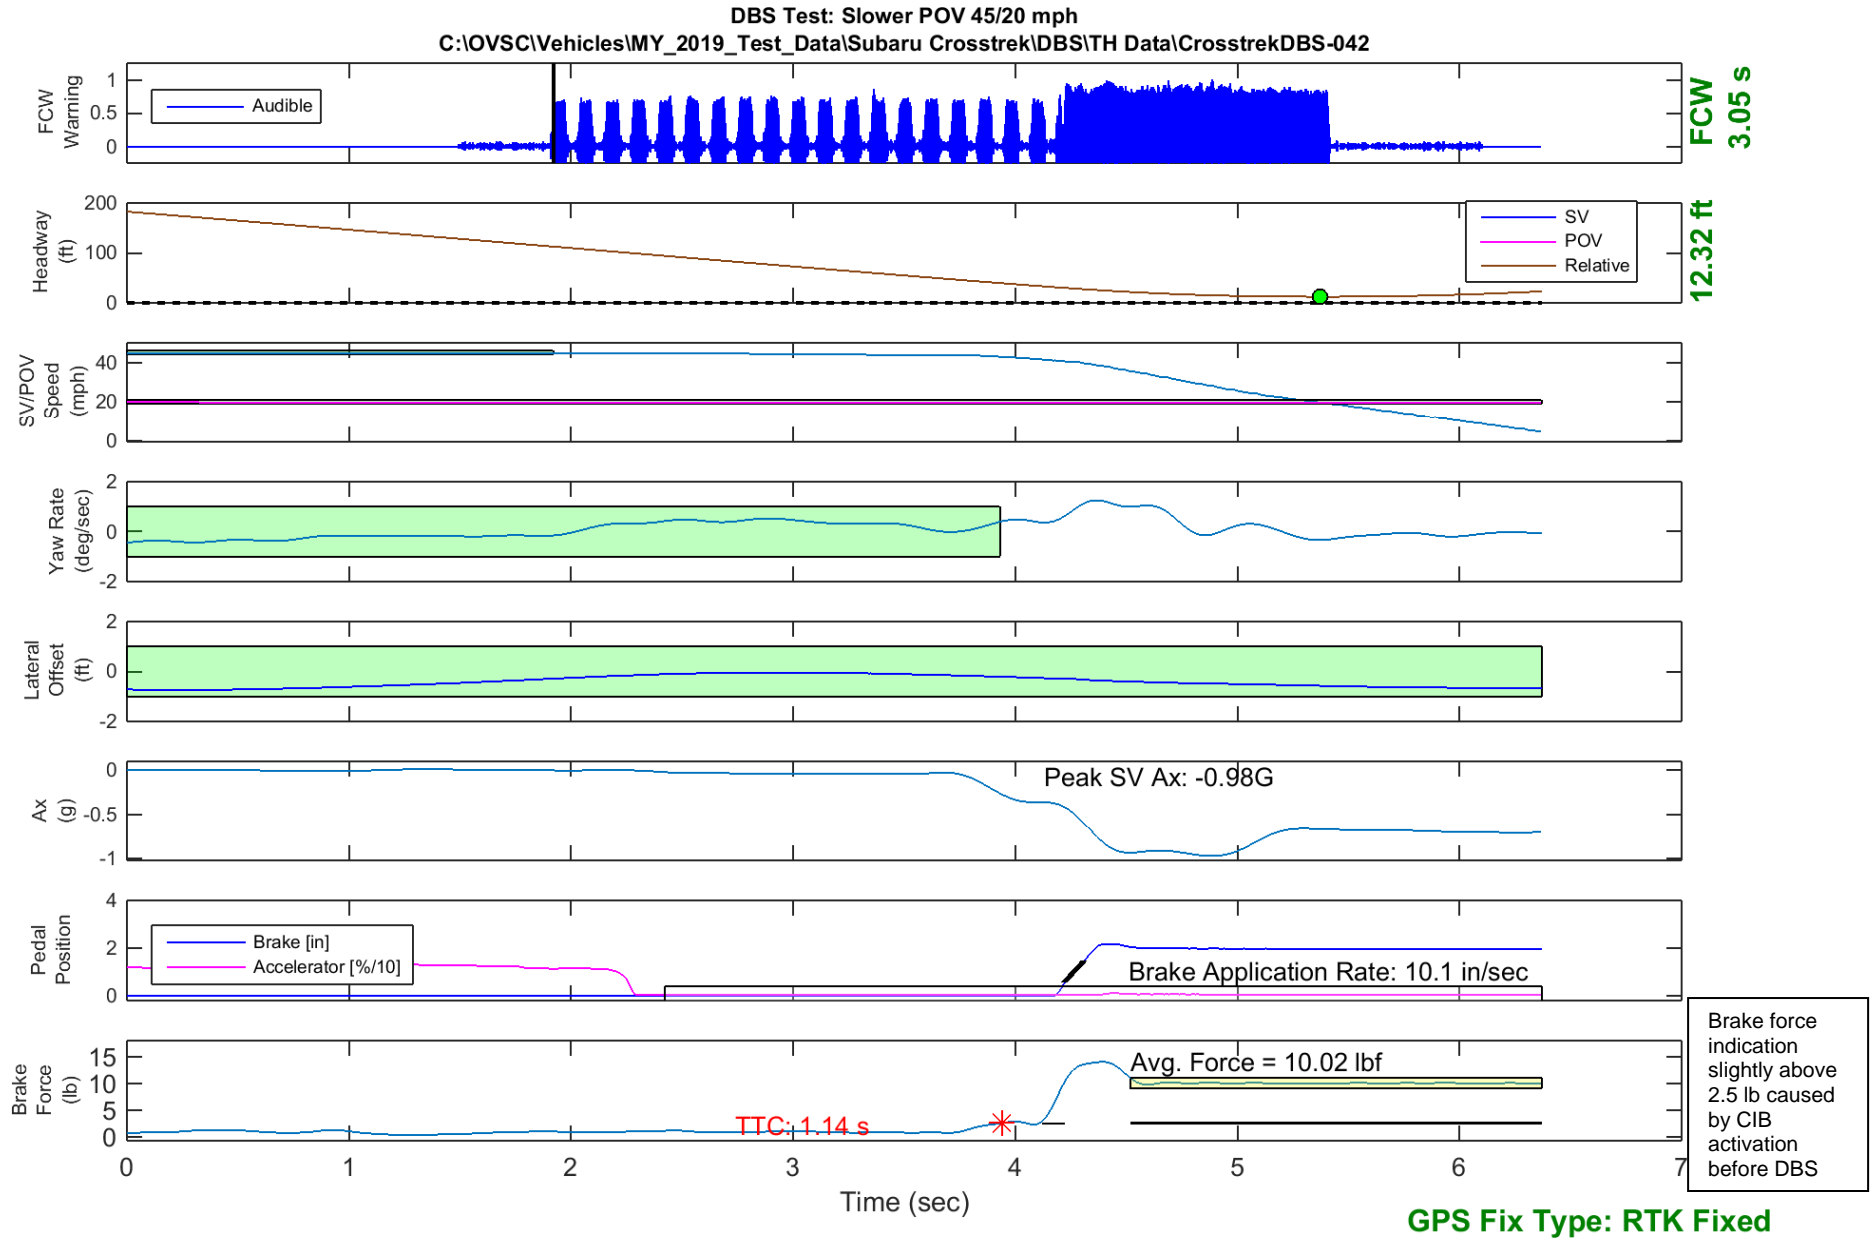


Figure E32. Time History for DBS Run 42, SV Encounters Slower POV, SV 45 mph, POV 20 mph

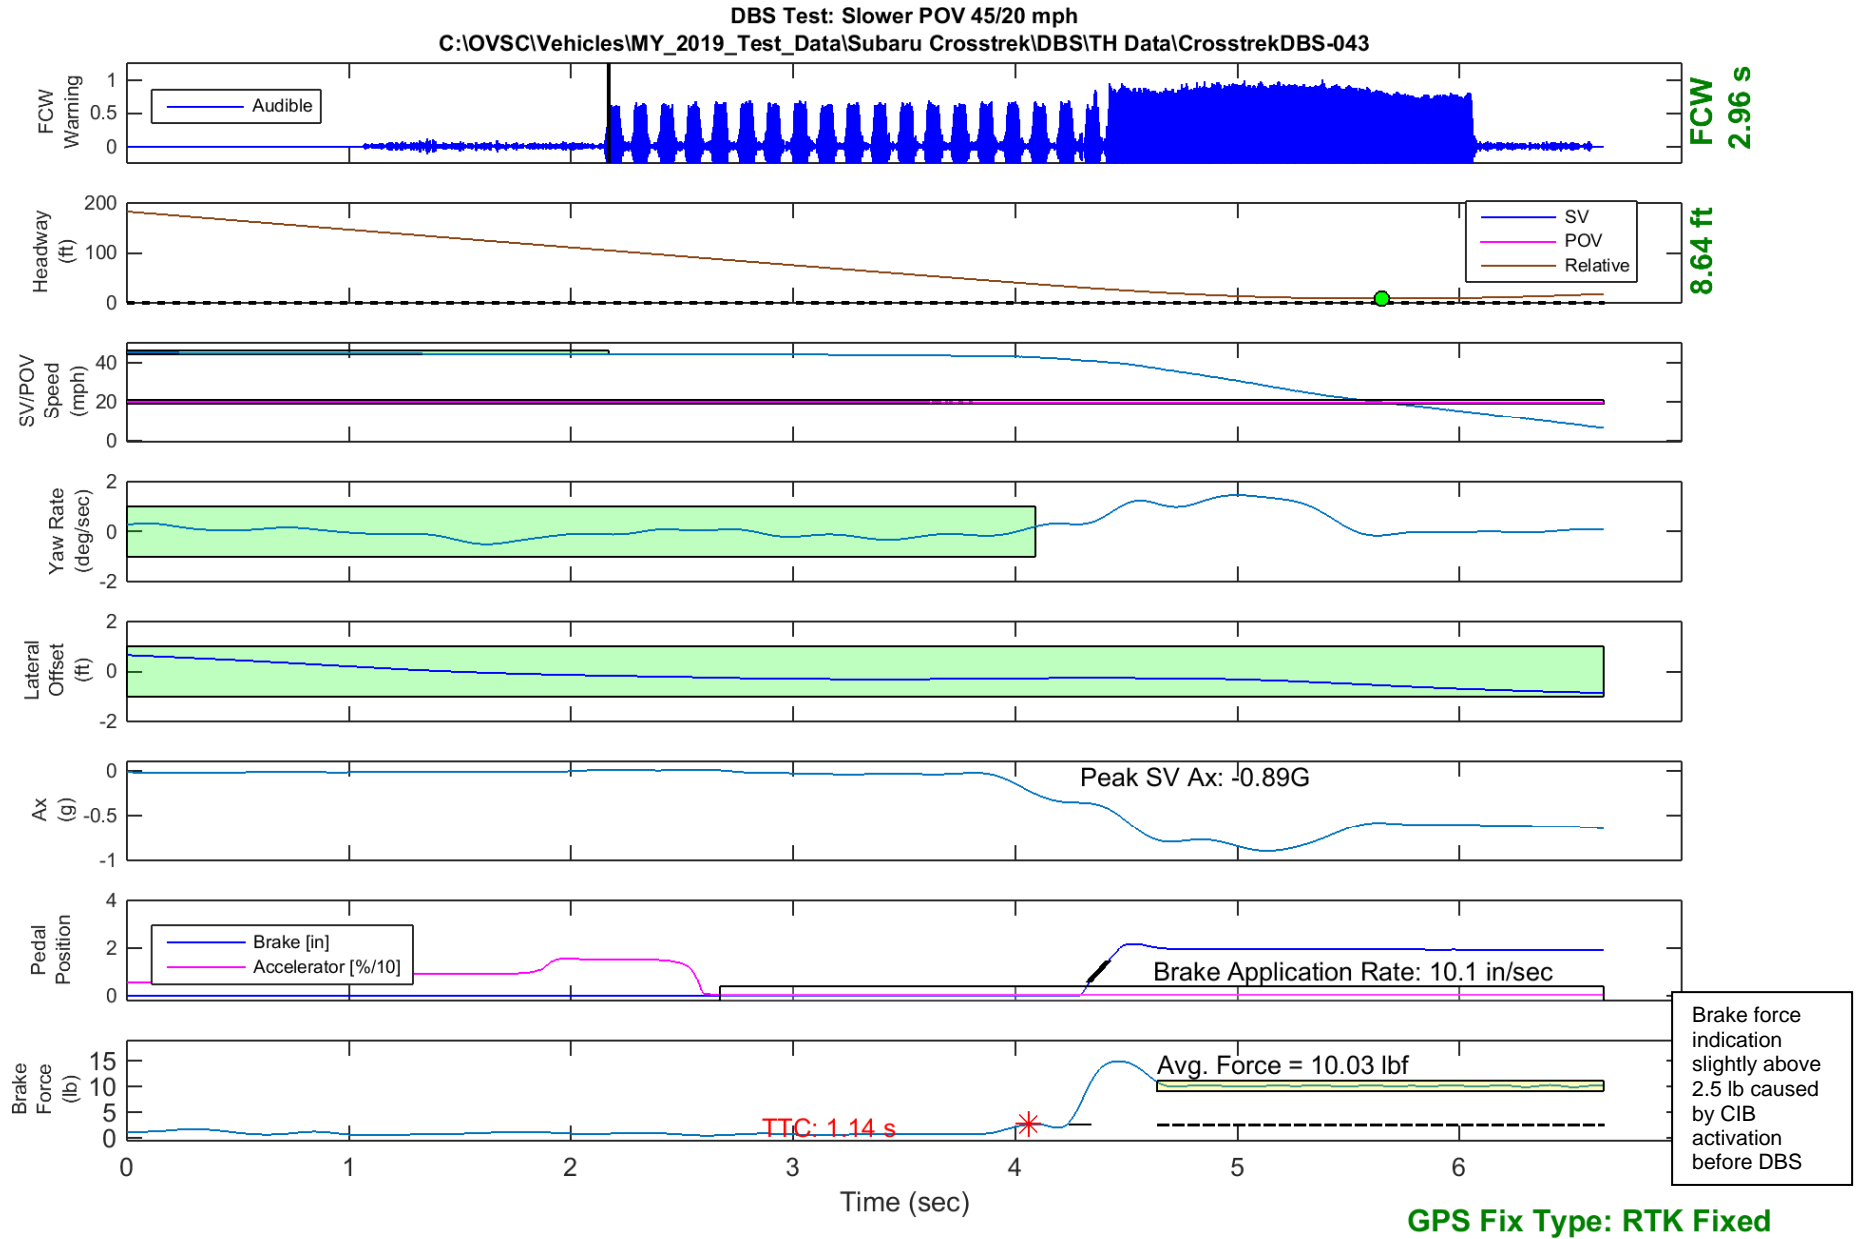


Figure E33. Time History for DBS Run 43, SV Encounters Slower POV, SV 45 mph, POV 20 mph

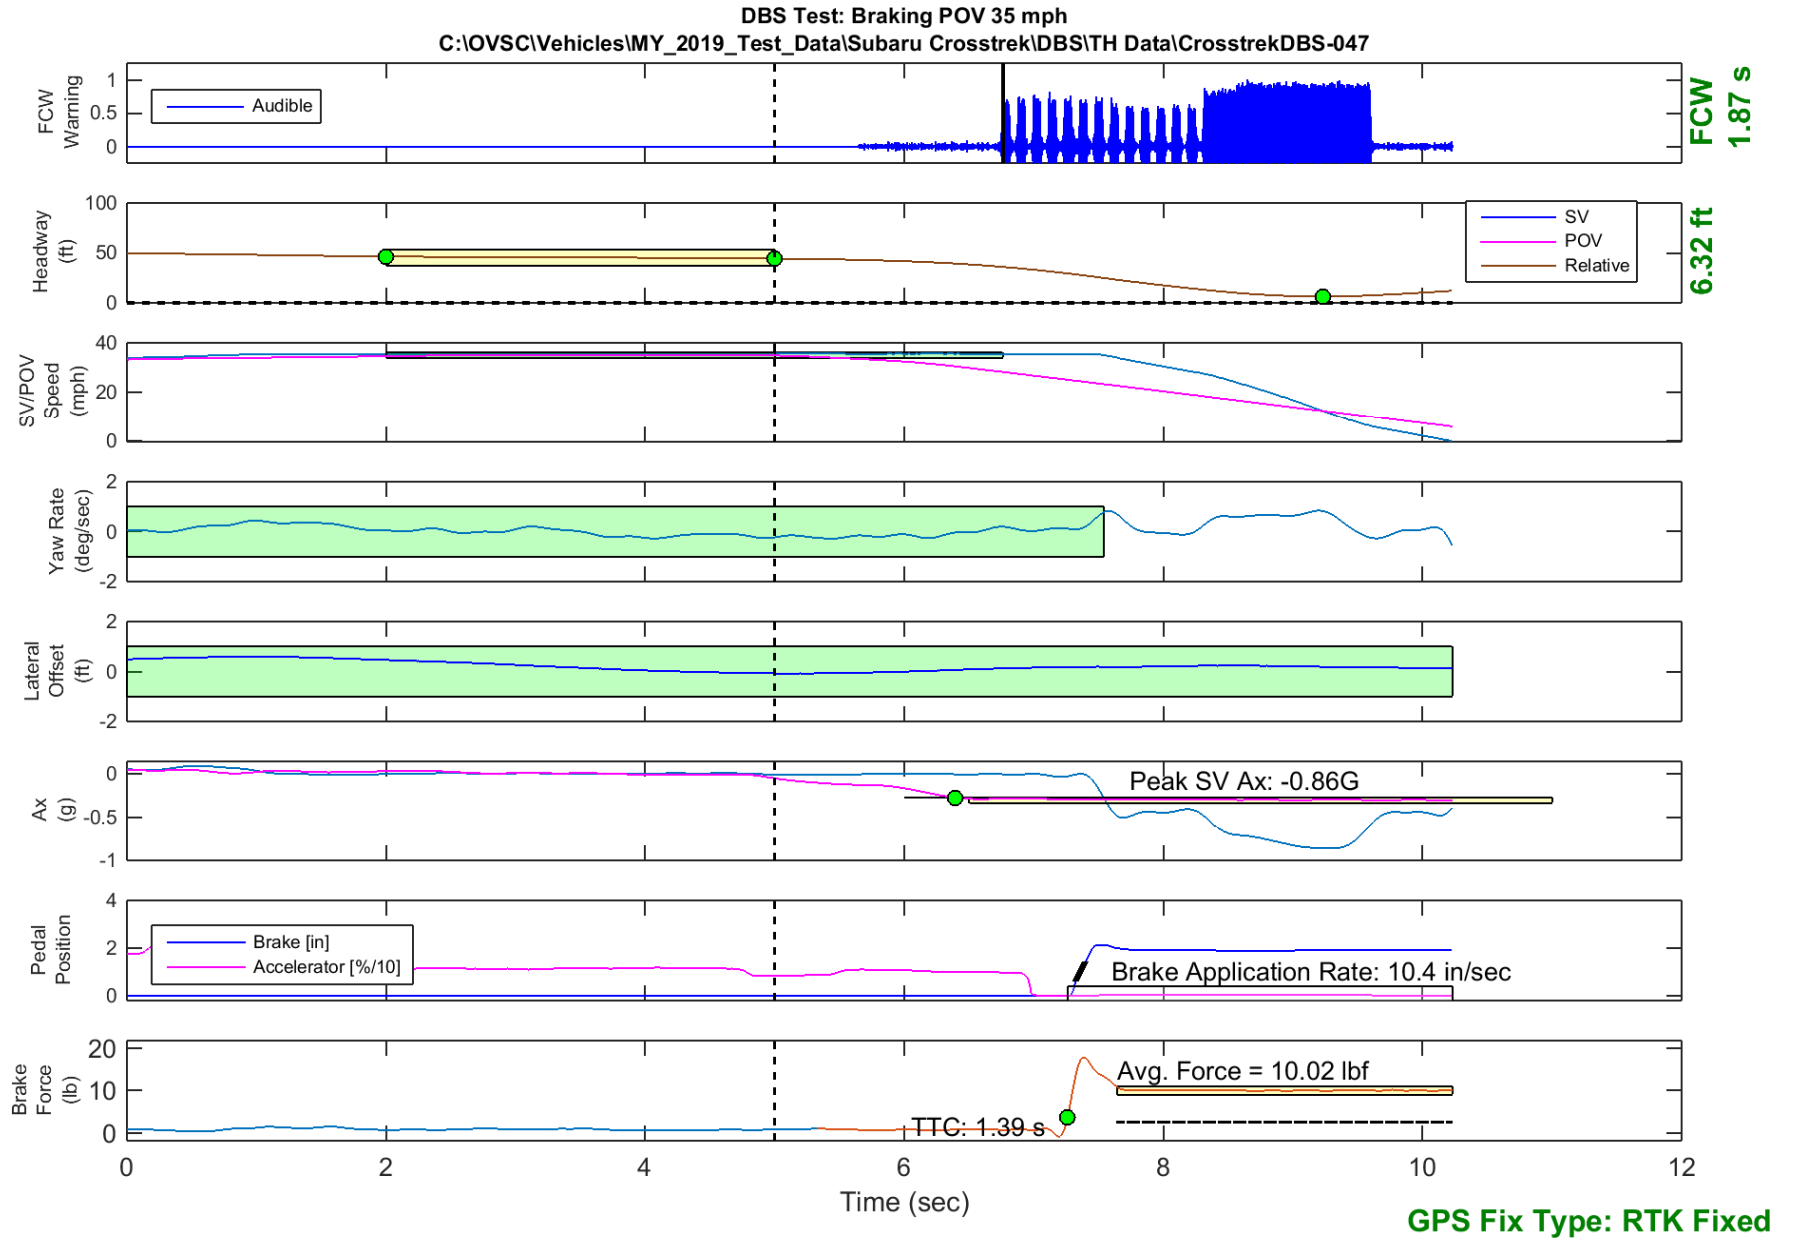


Figure E34. Time History for DBS Run 47, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

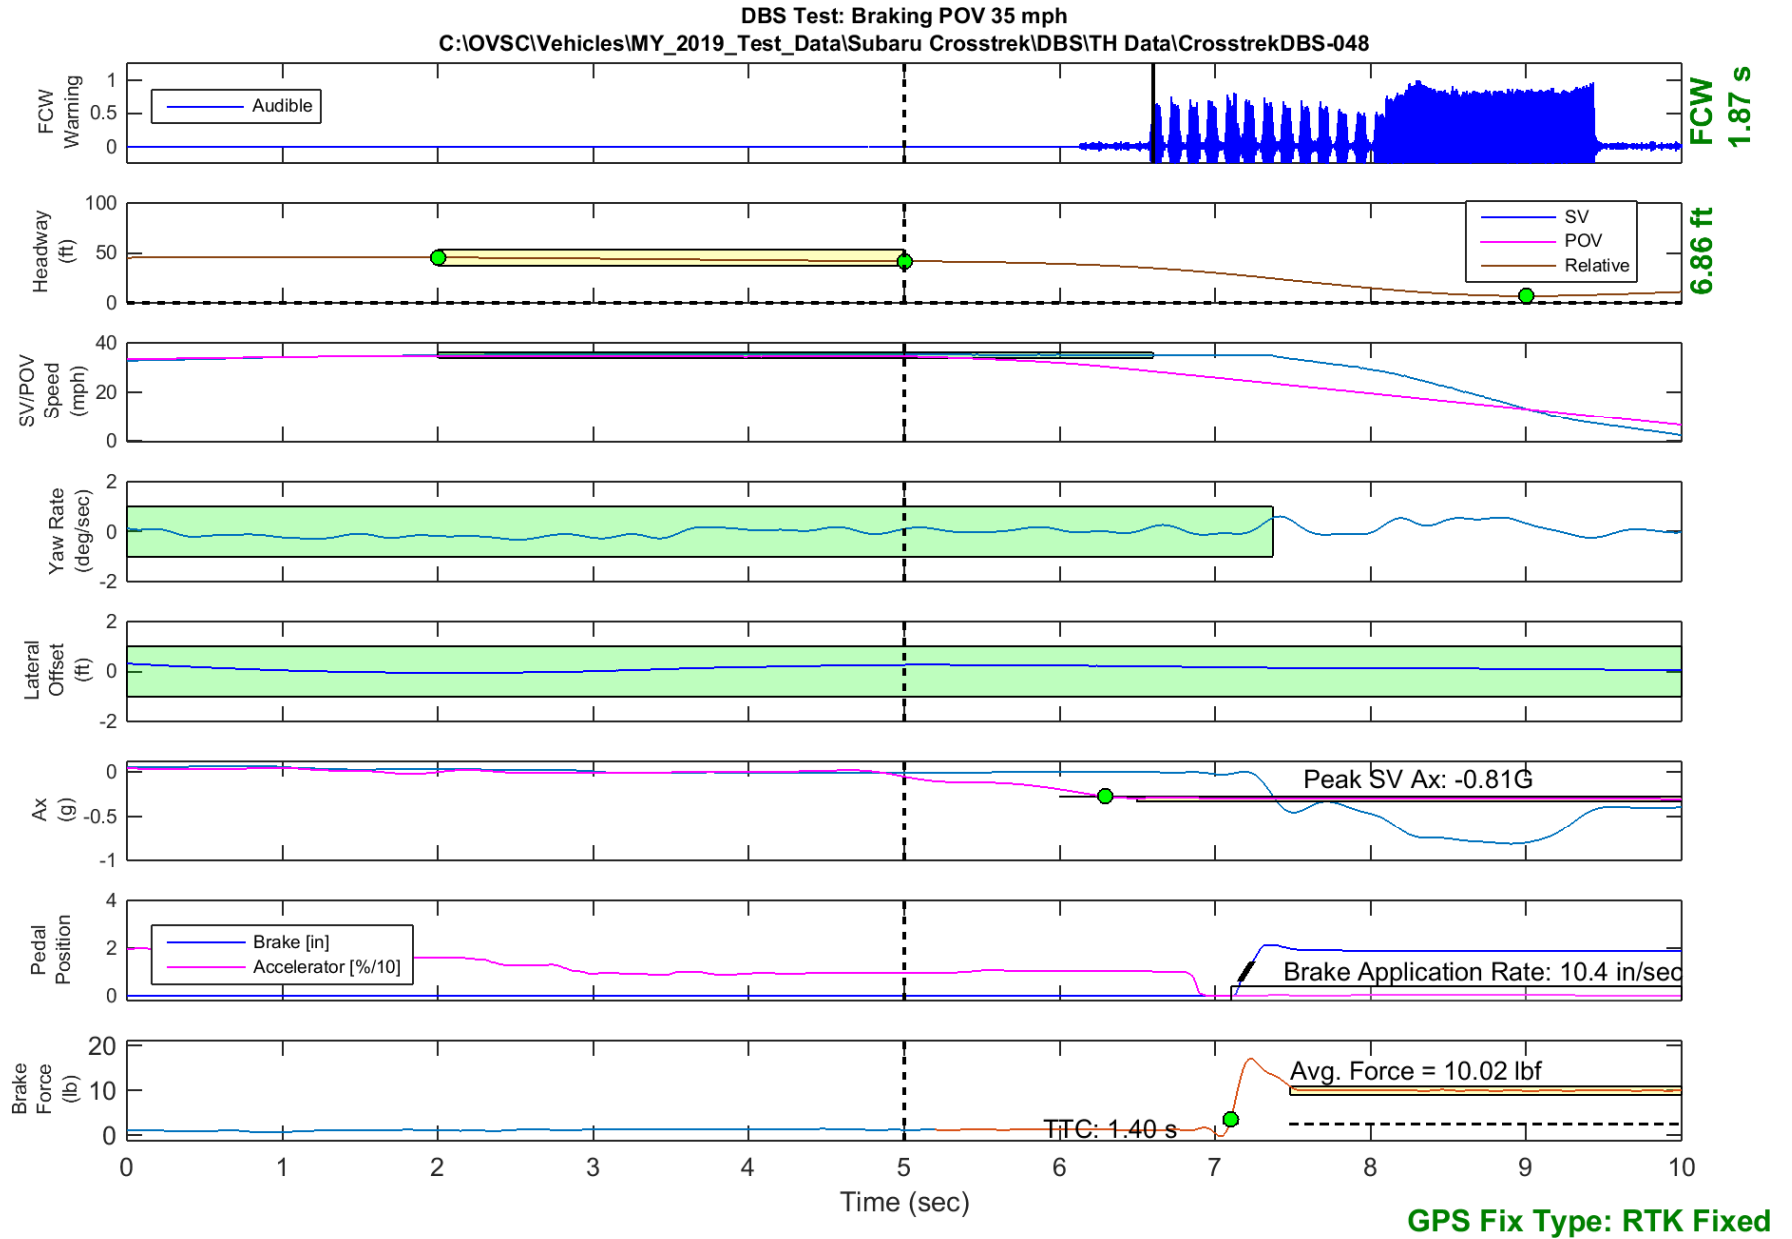


Figure E35. Time History for DBS Run 48, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

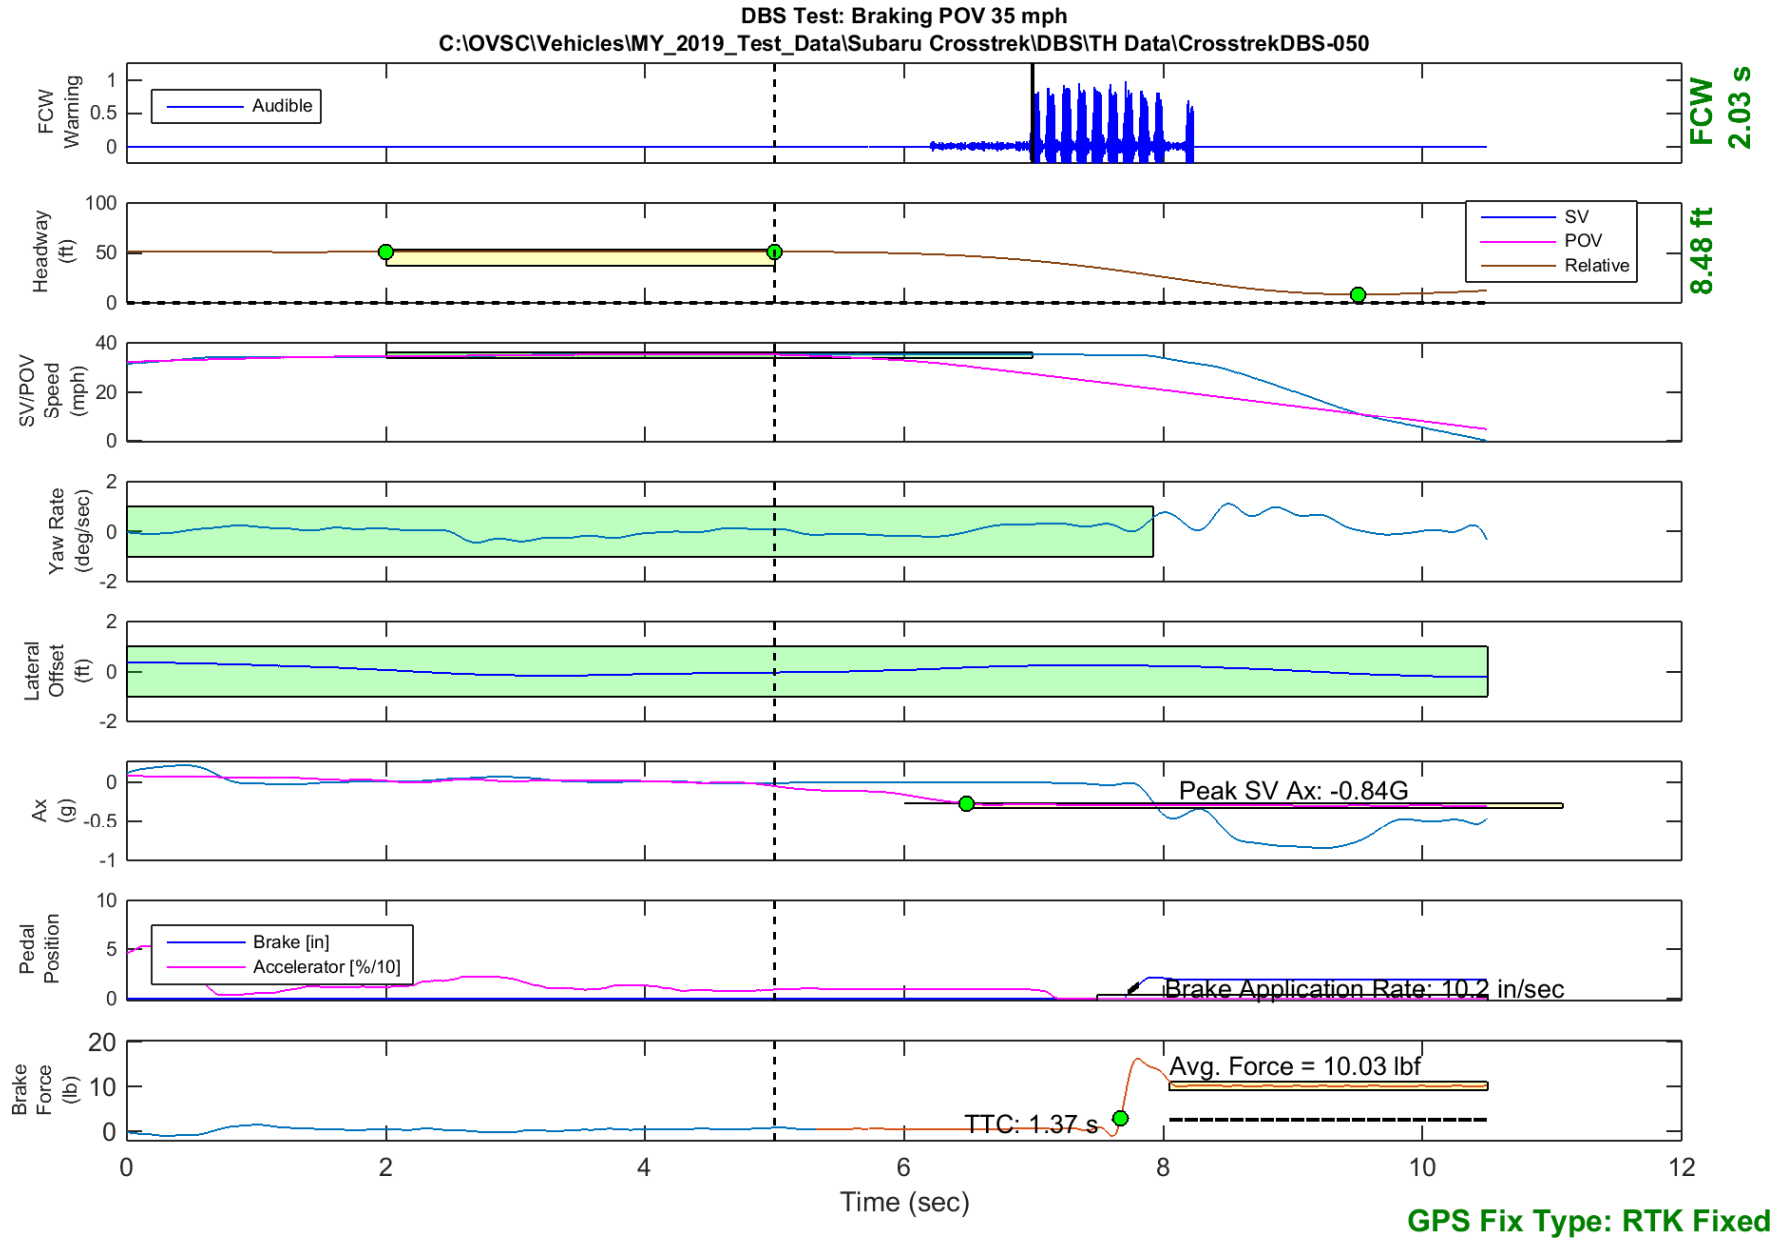


Figure E36. Time History for DBS Run 50, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

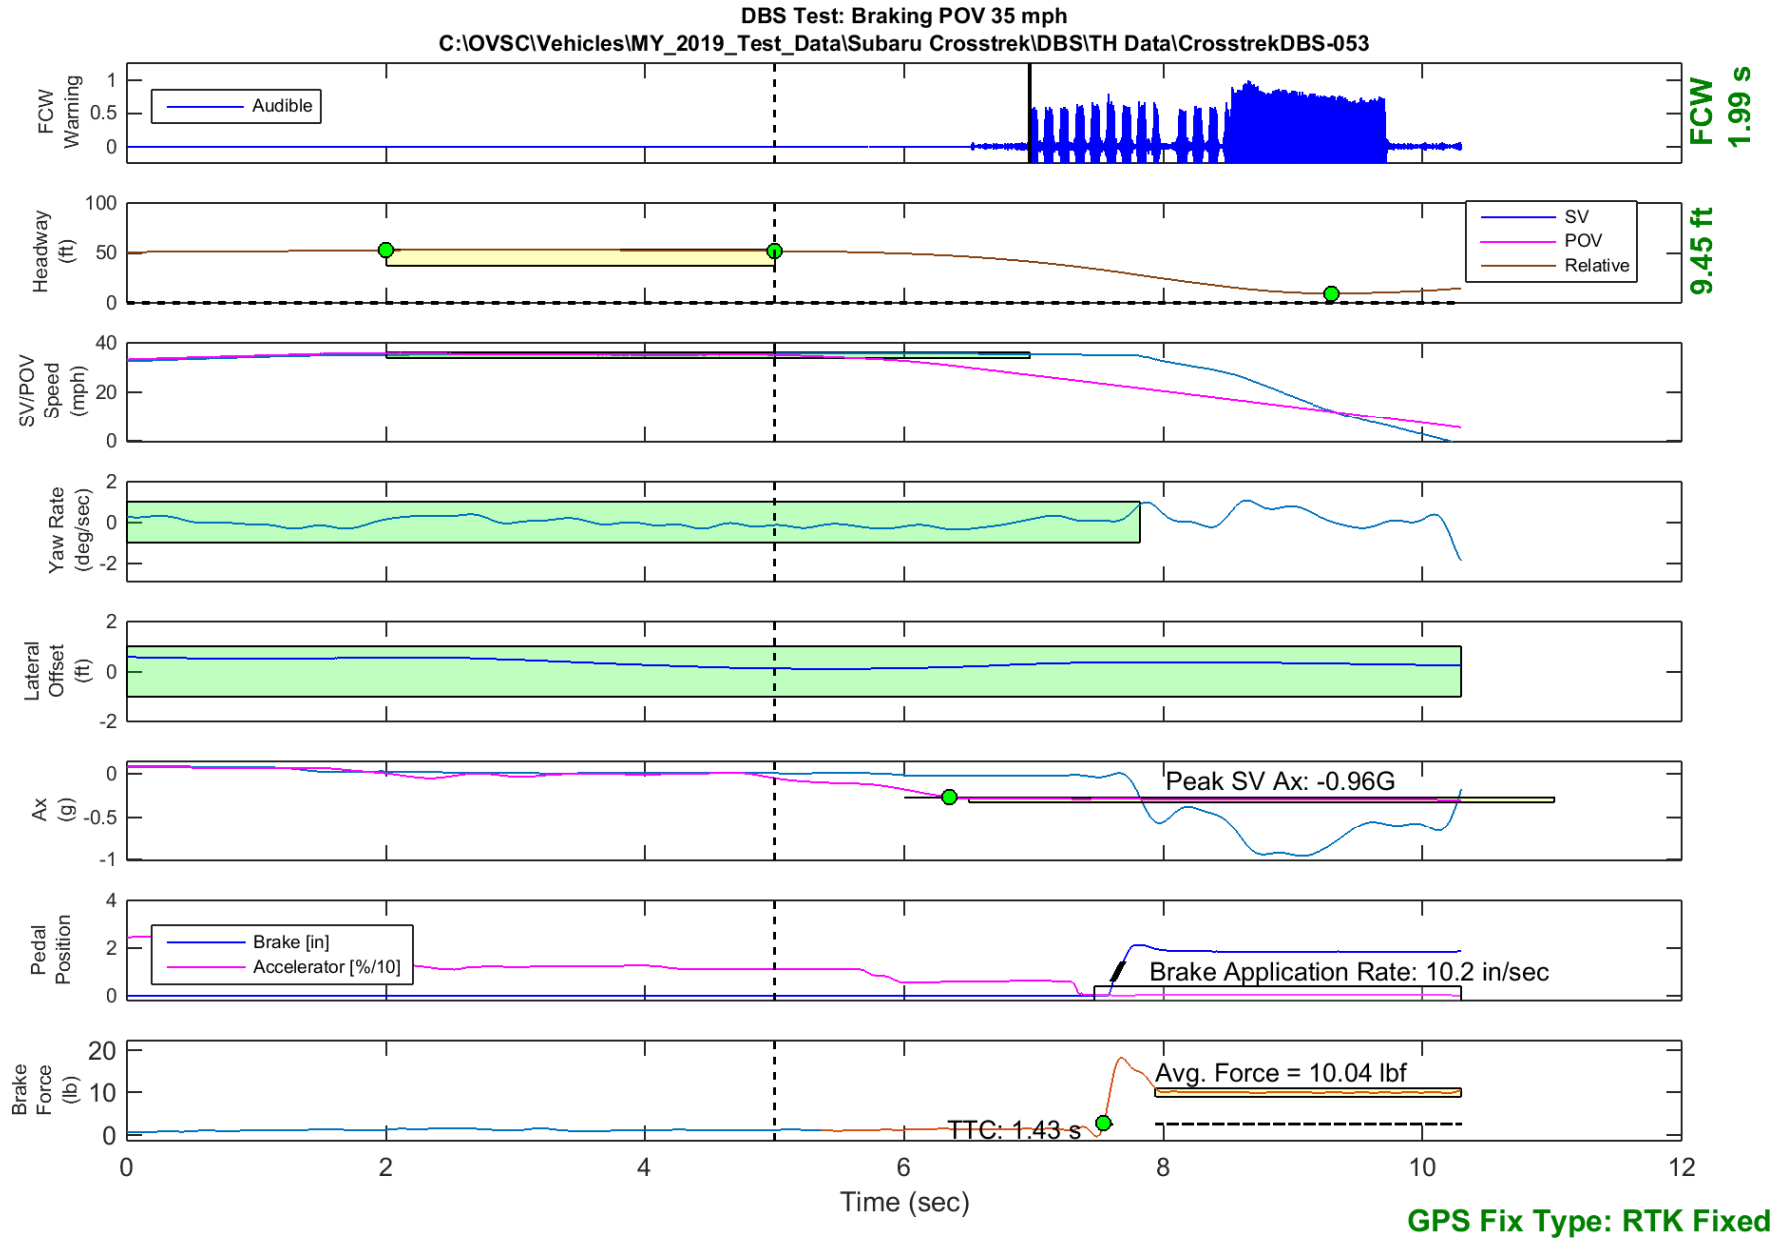


Figure E37. Time History for DBS Run 53, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

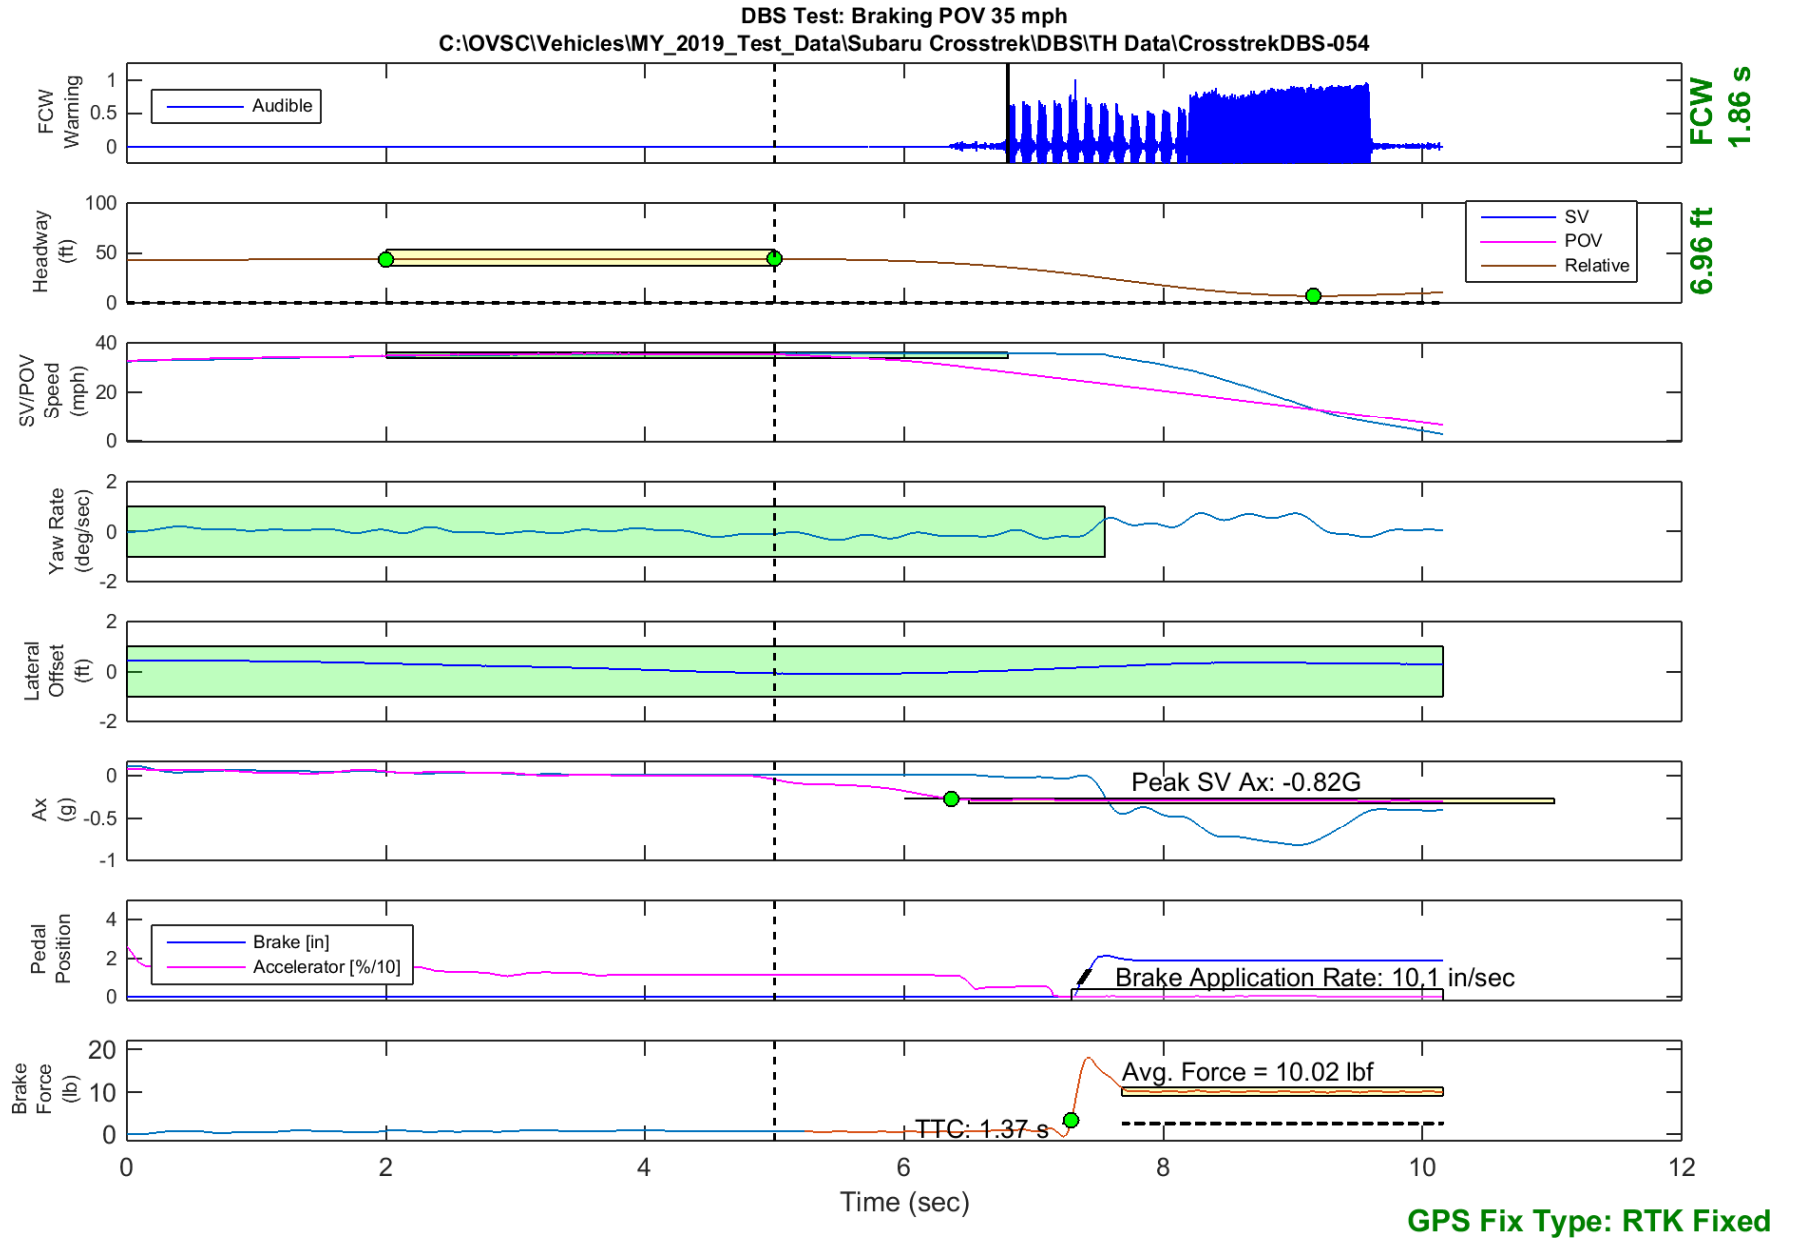


Figure E38. Time History for DBS Run 54, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

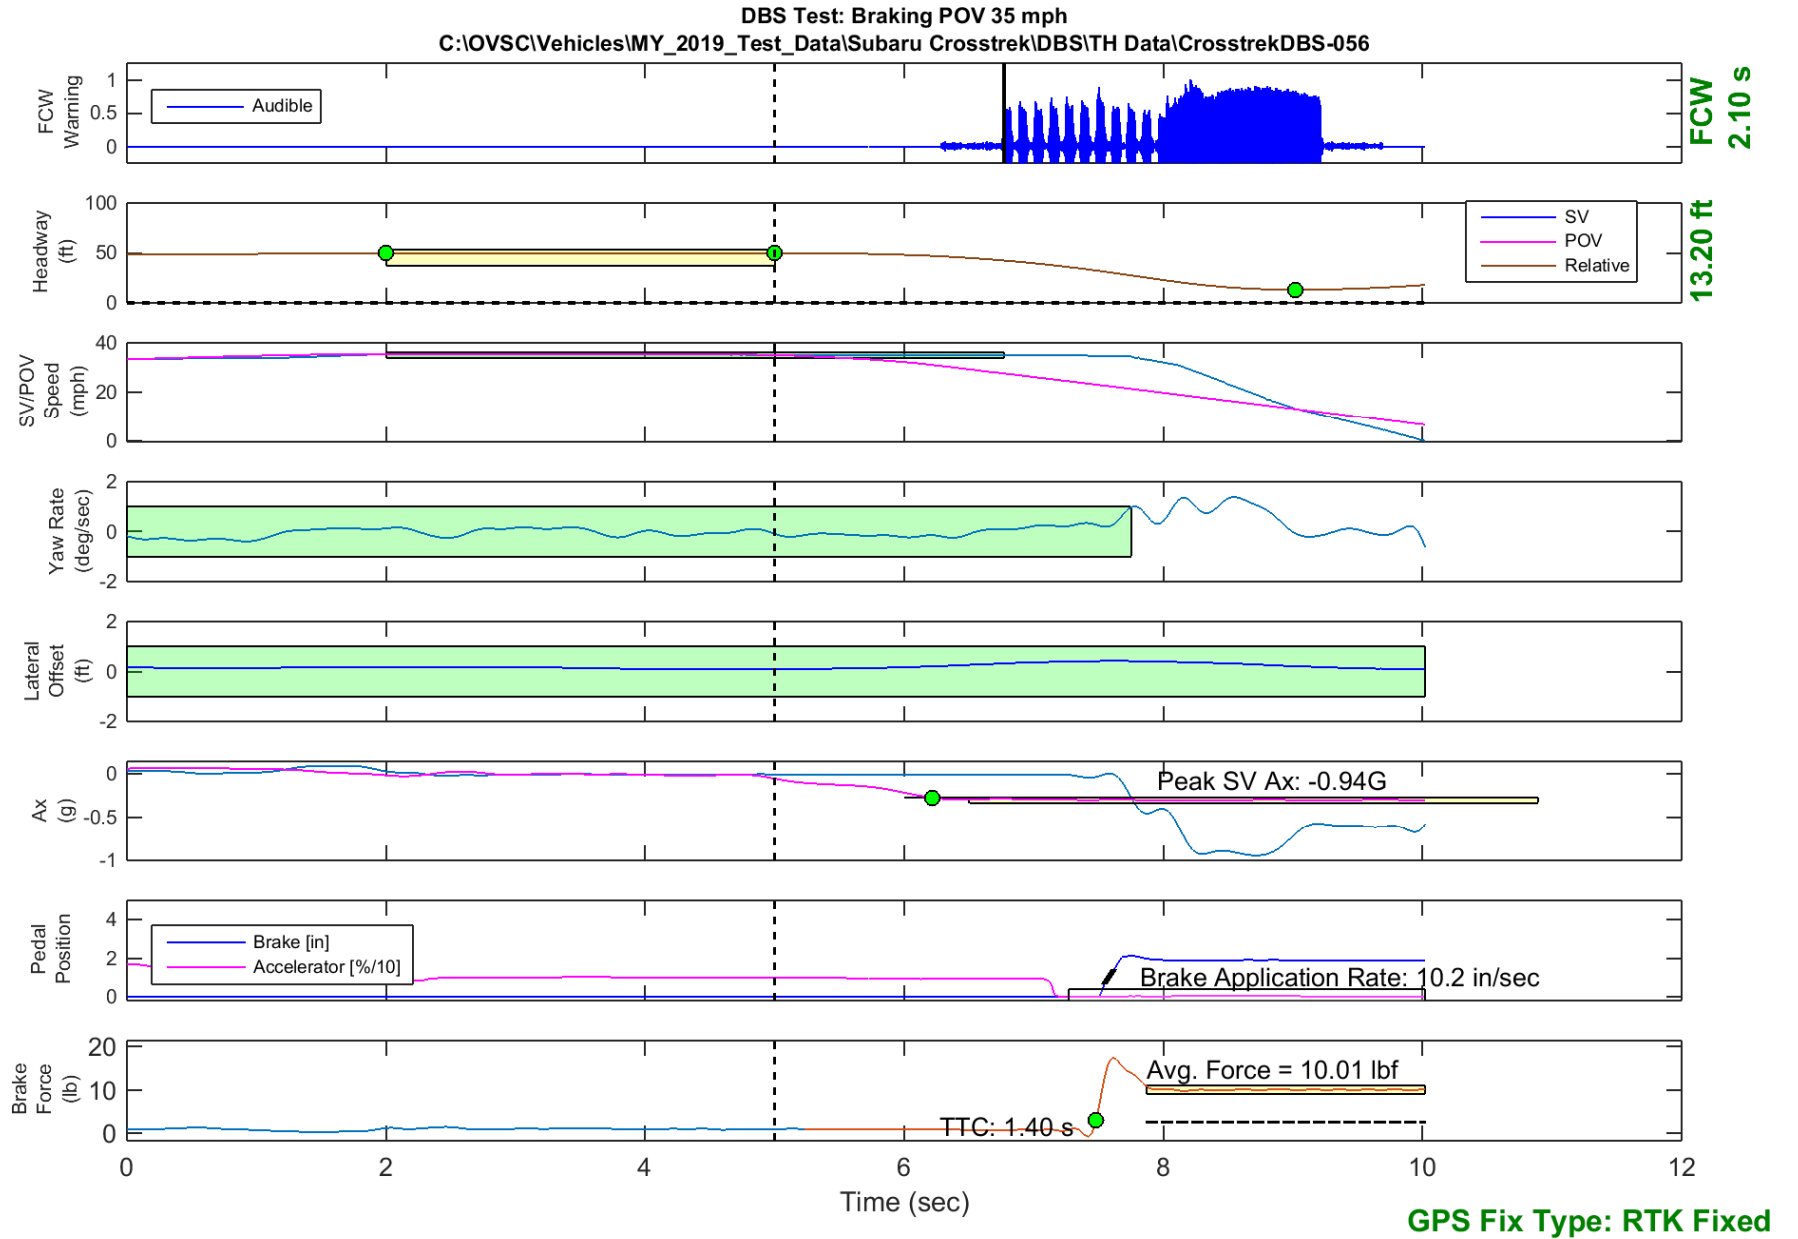


Figure E39. Time History for DBS Run 56, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph


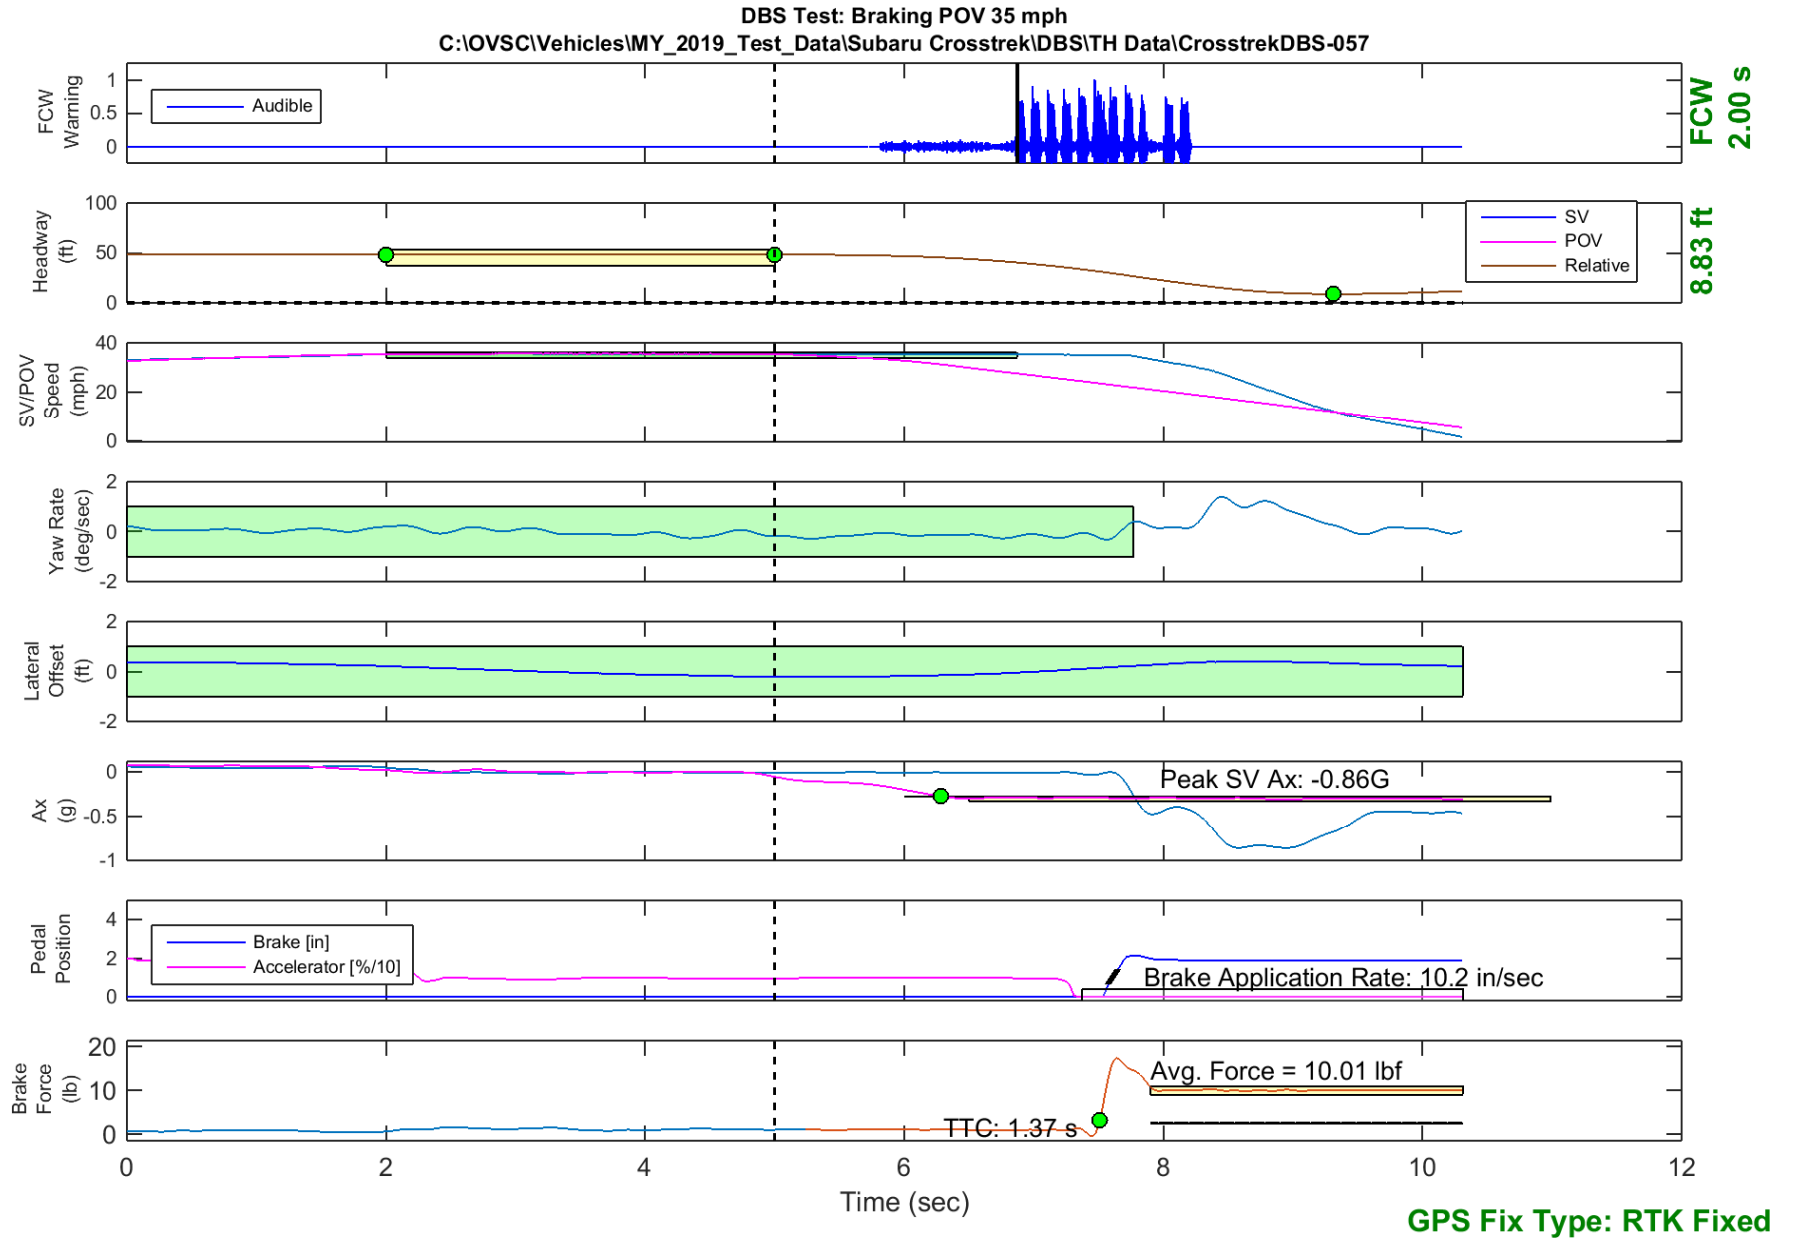


Figure E40. Time History for DBS Run 57, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

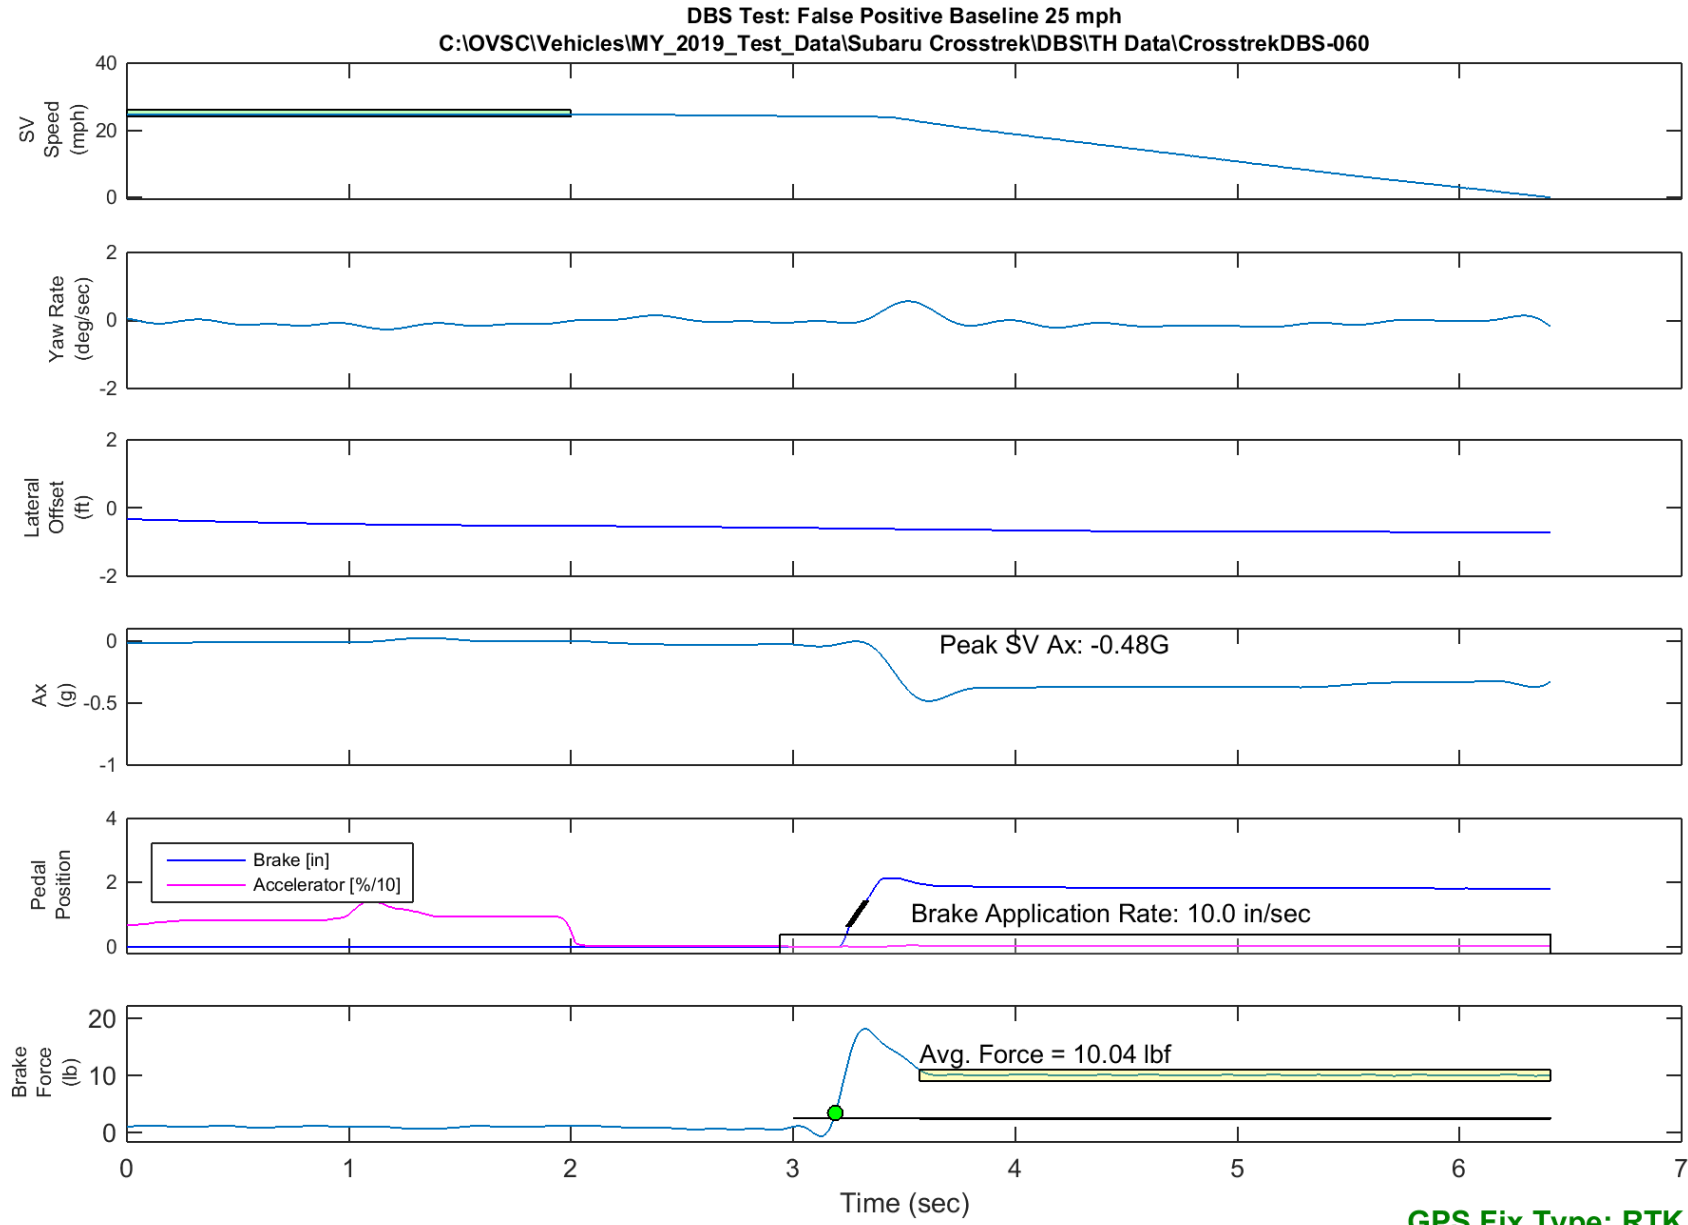

GPS Fix Type: RTK Fixed

Figure E41. Time History for DBS Run 60, False Positive Baseline, SV 25 mph


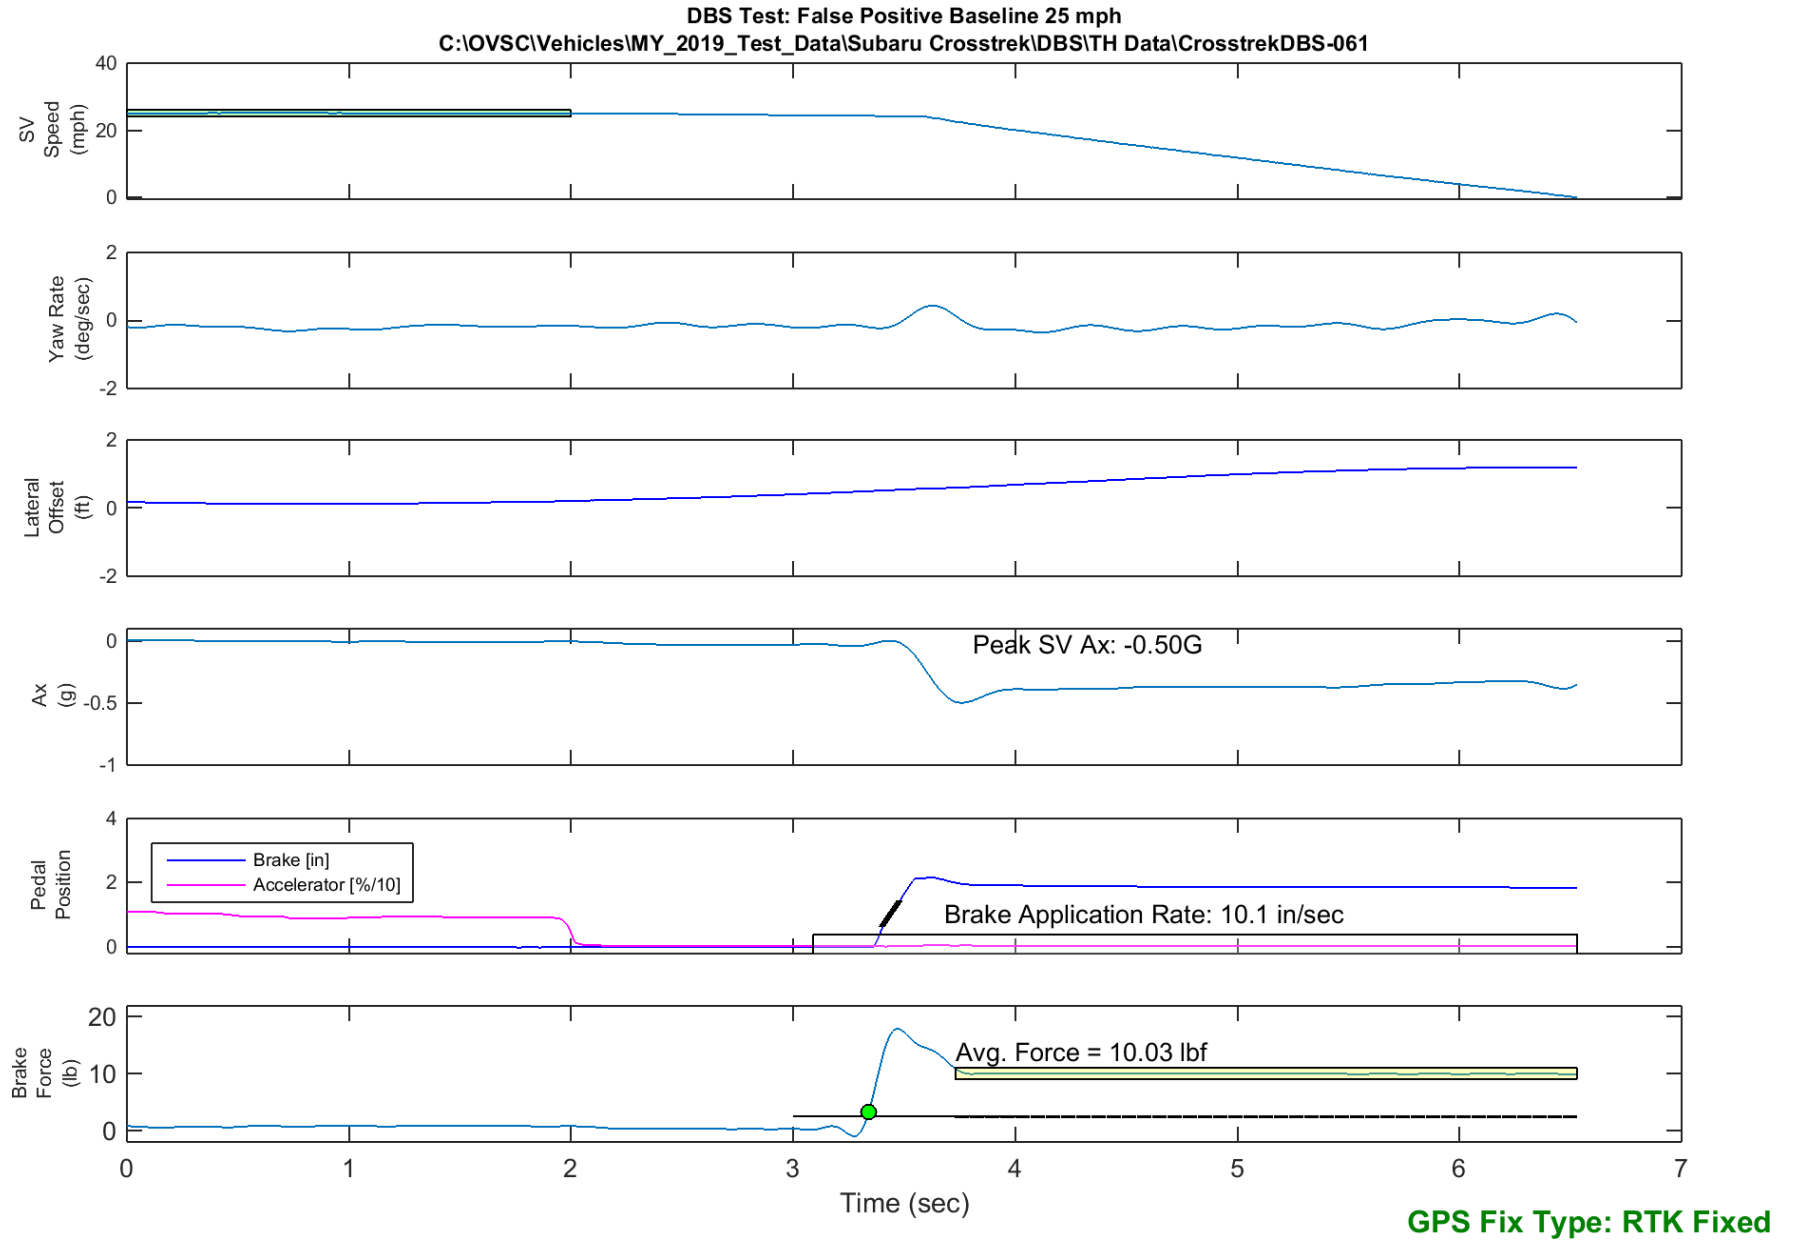


Figure E42. Time History for DBS Run 61, False Positive Baseline, SV 25 mph

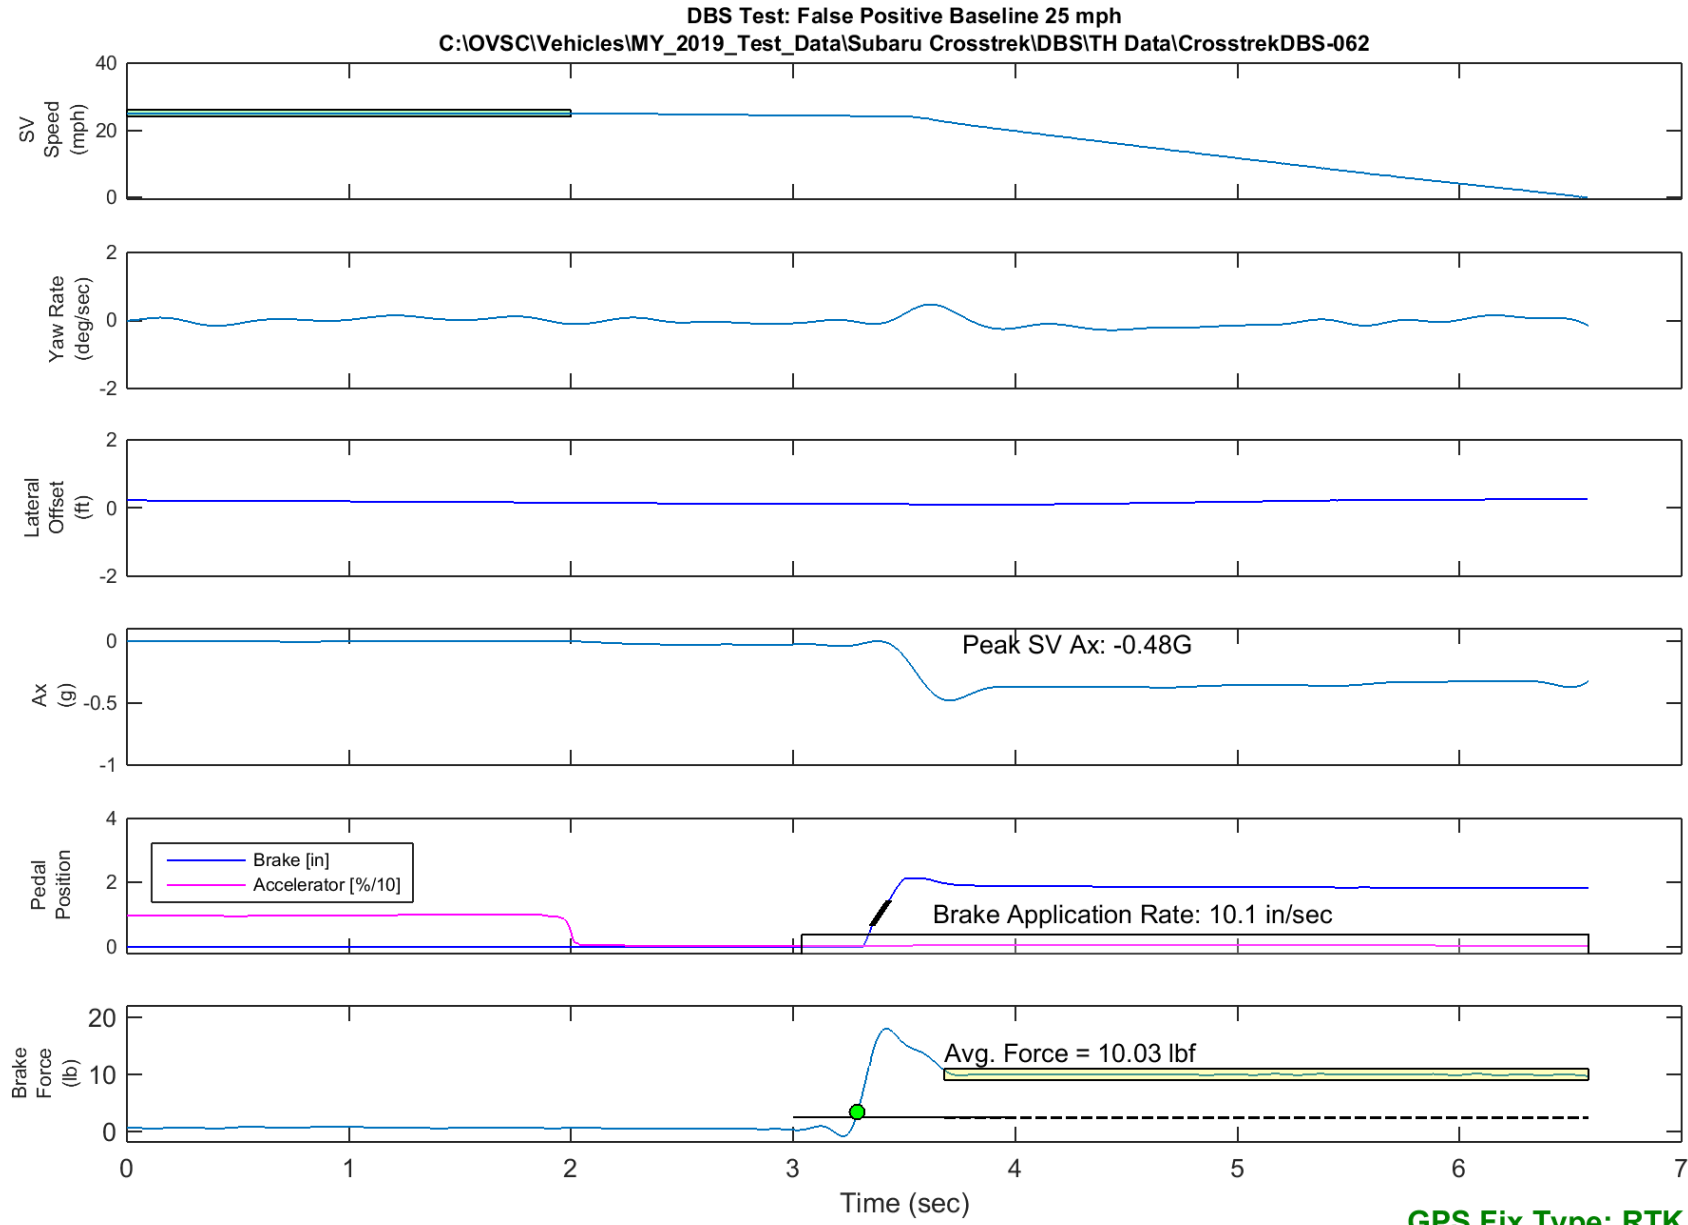

GPS Fix Type: RTK Fixed

Figure E43. Time History for DBS Run 62, False Positive Baseline, SV 25 mph

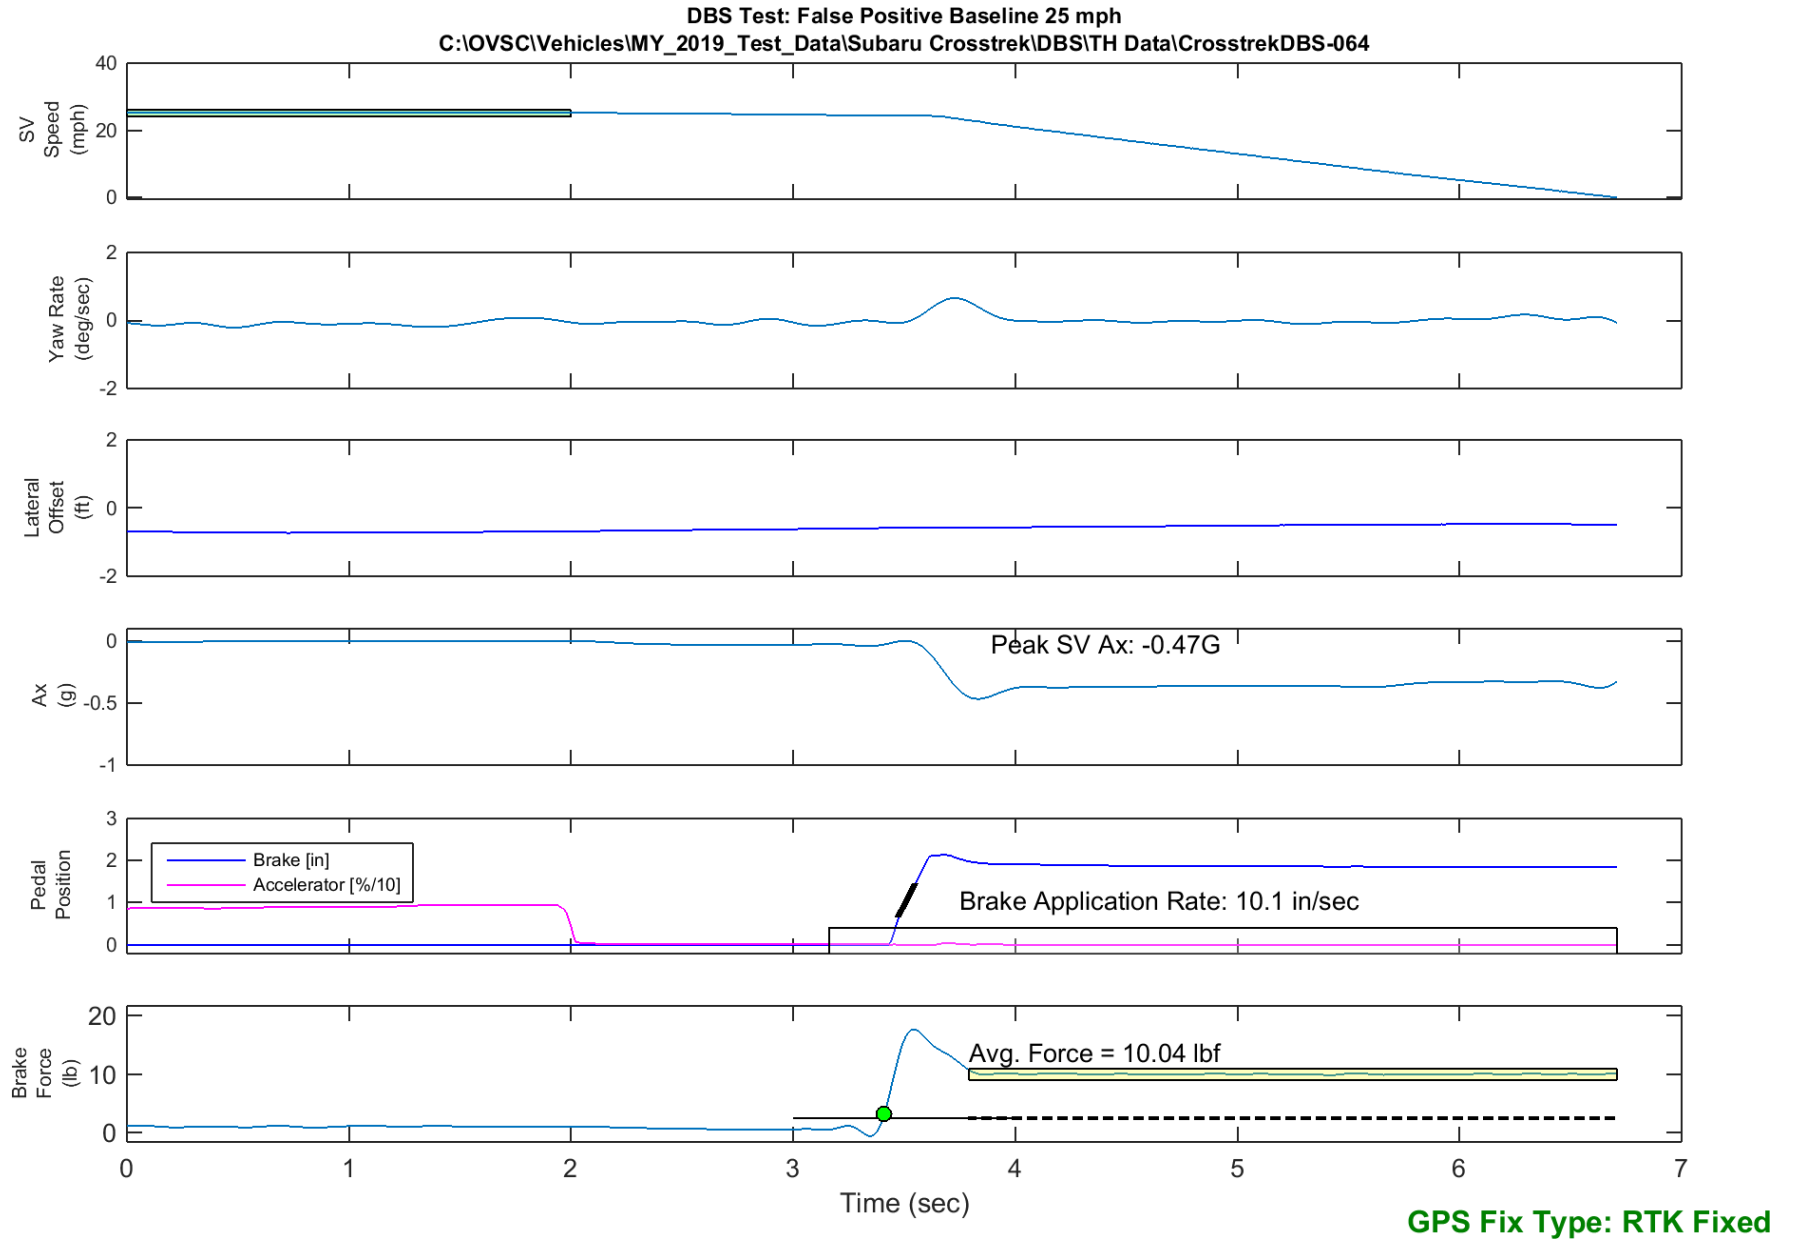


Figure E44. Time History for DBS Run 64, False Positive Baseline, SV 25 mph

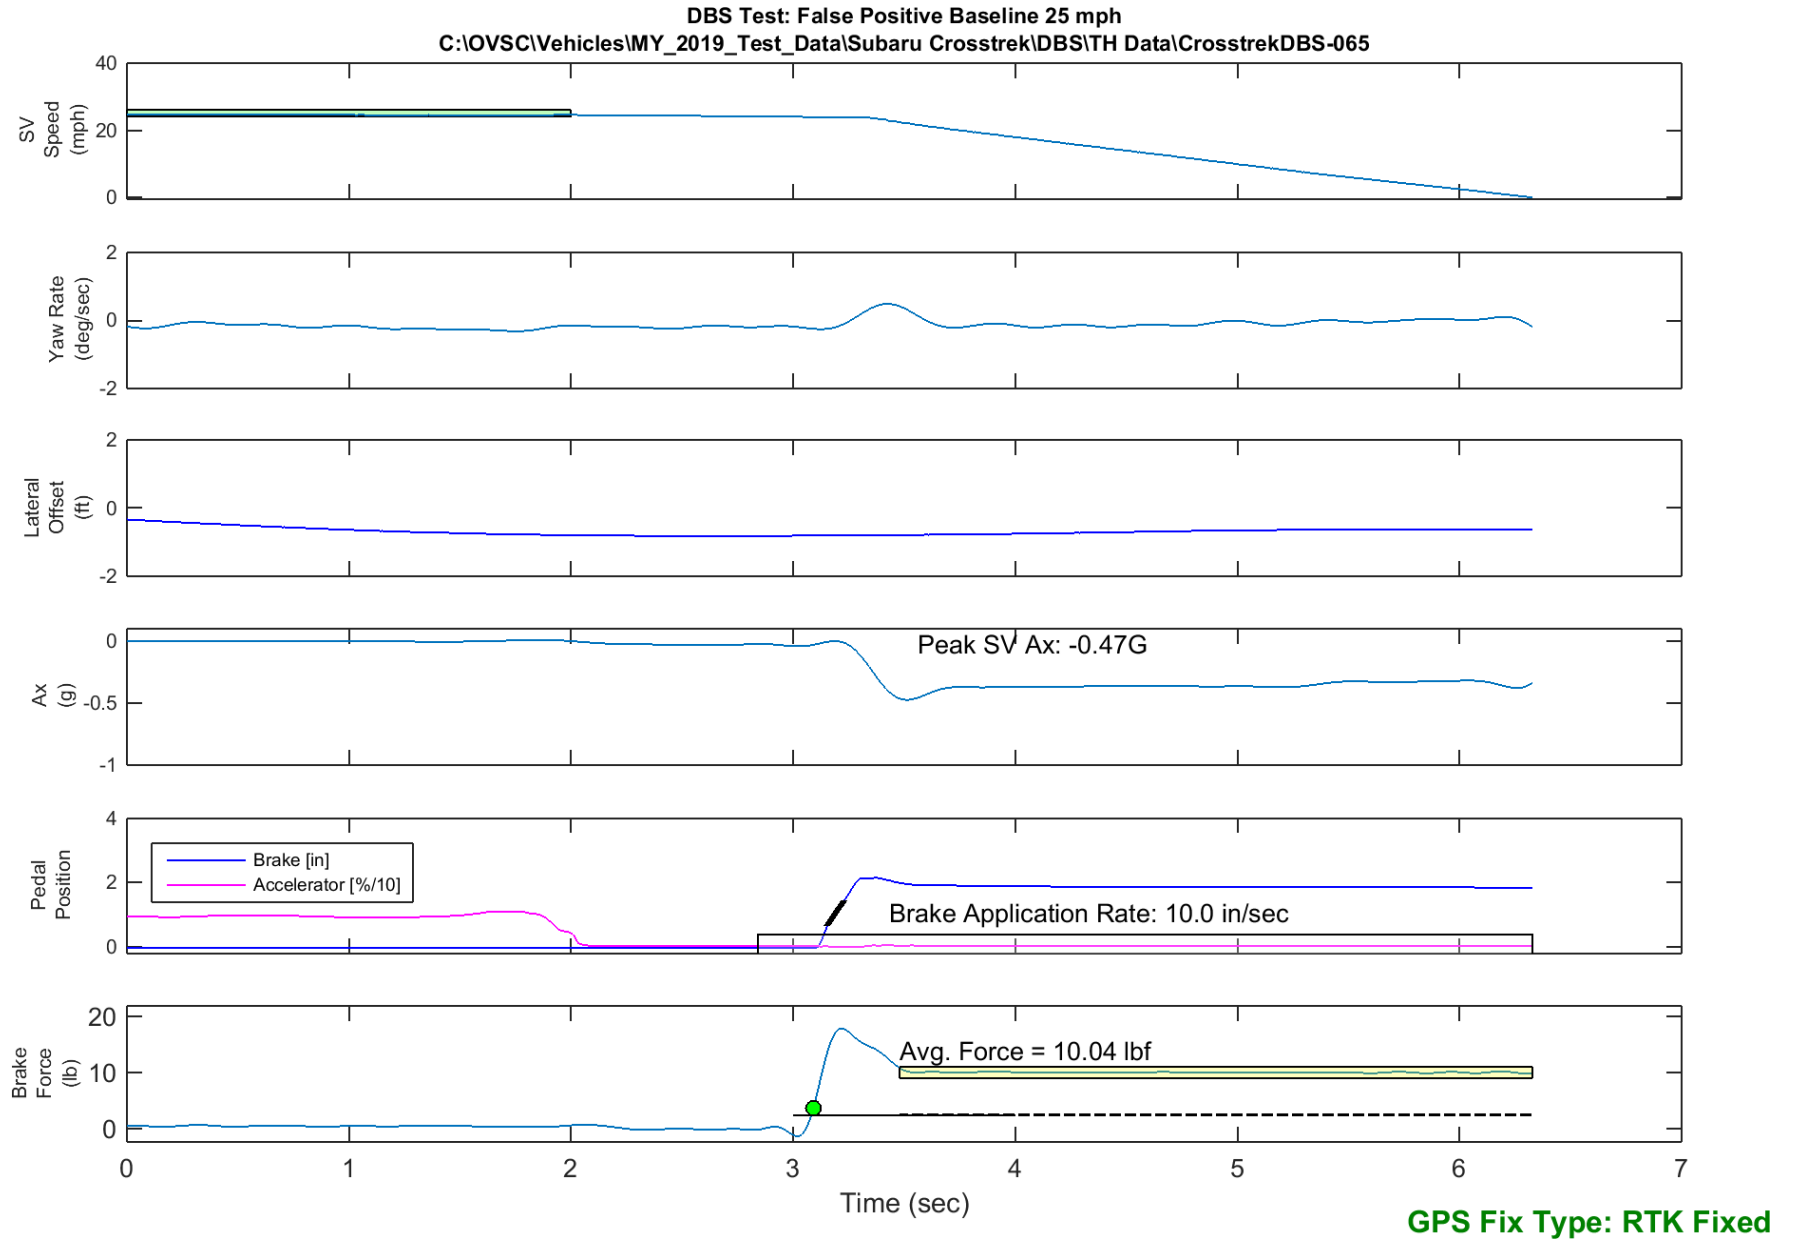


Figure E45. Time History for DBS Run 65, False Positive Baseline, SV 25 mph


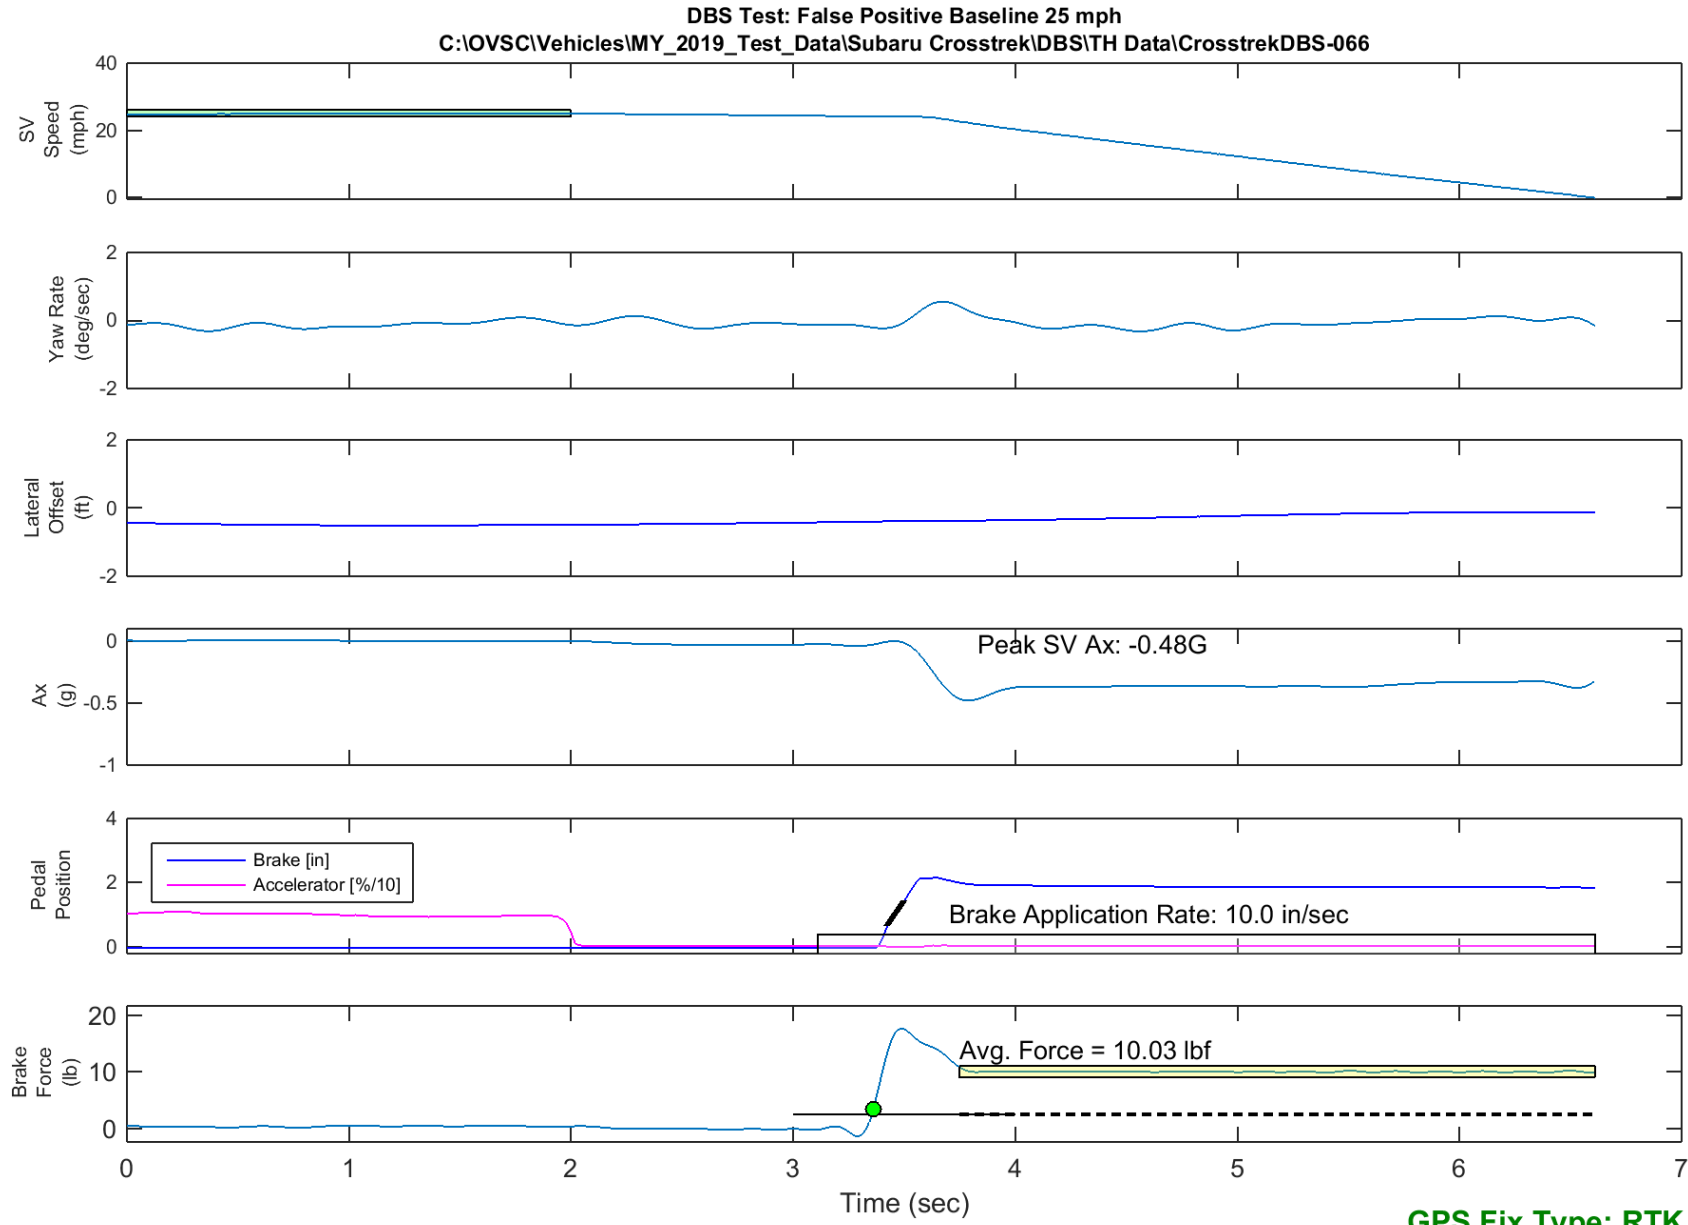


Figure E46. Time History for DBS Run 66, False Positive Baseline, SV 25 mph

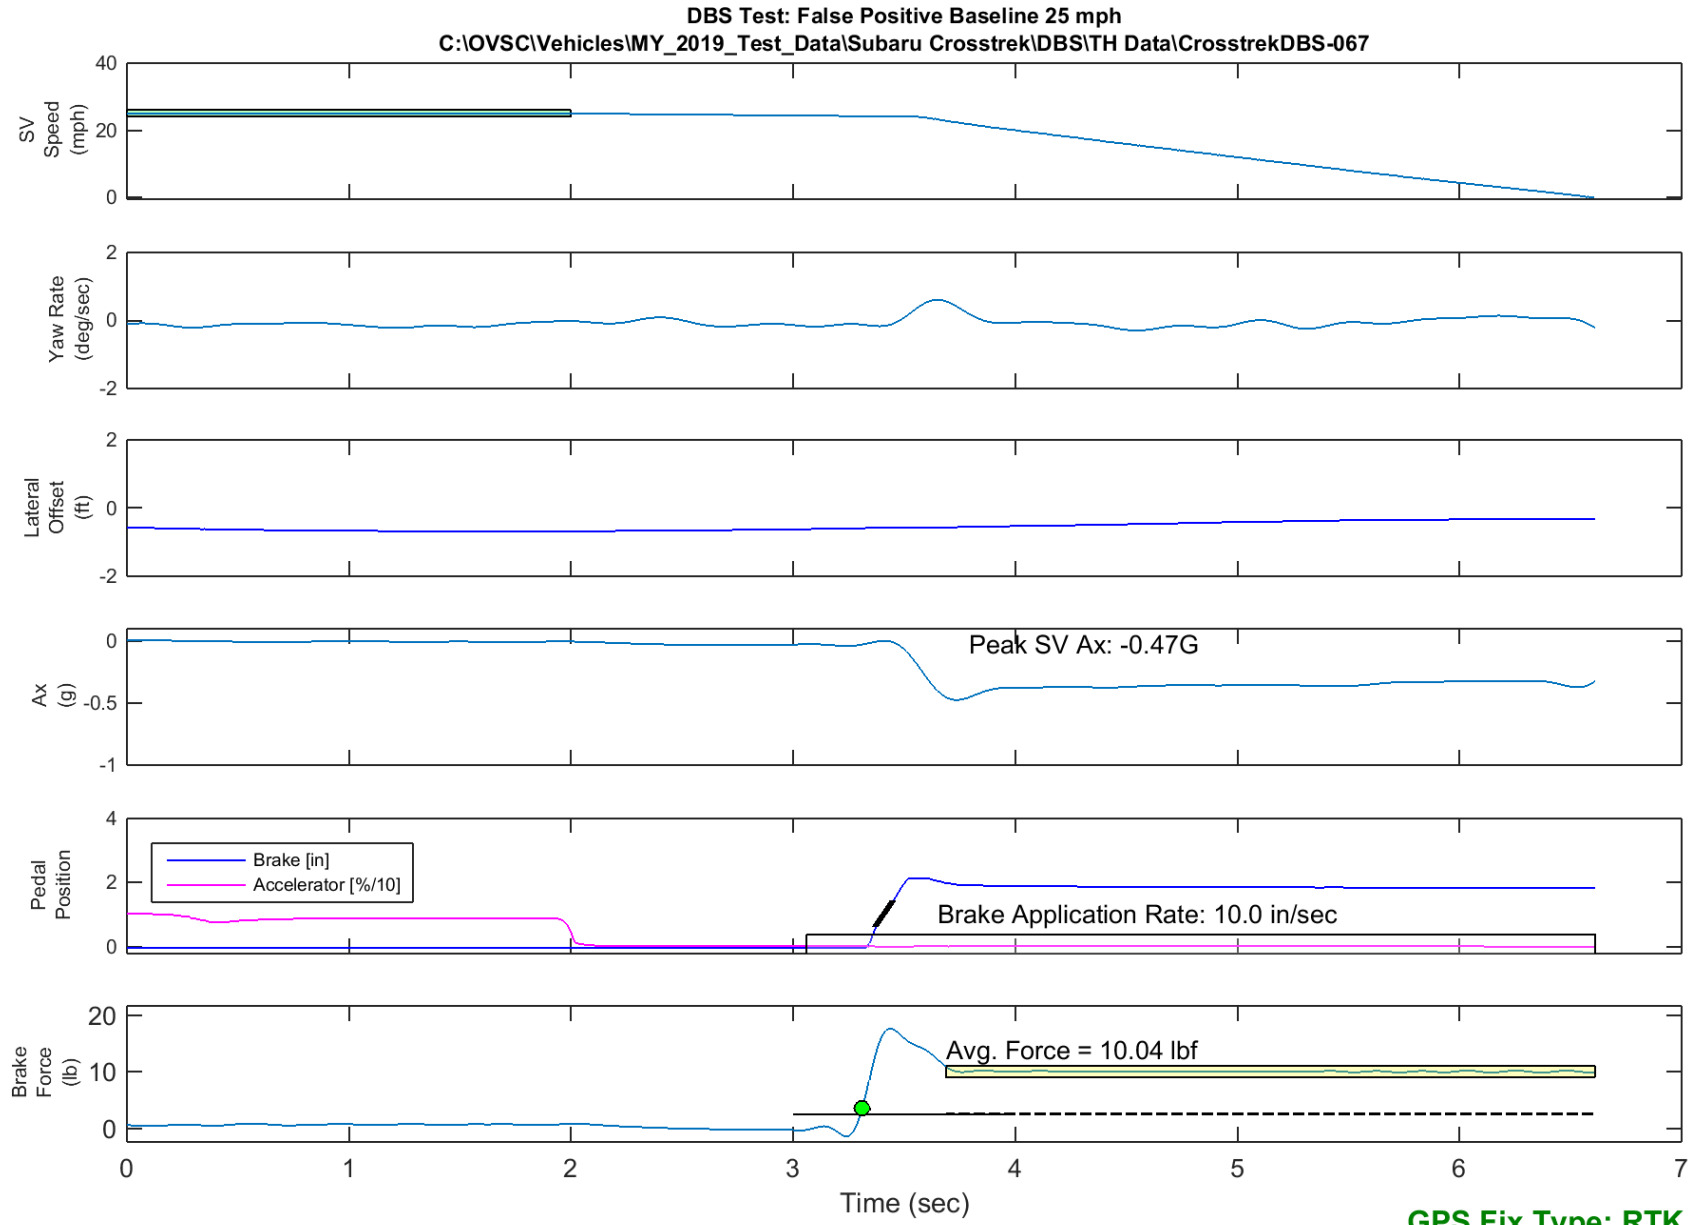

GPS Fix Type: RTK Fixed

Figure E47. Time History for DBS Run 67, False Positive Baseline, SV 25 mph

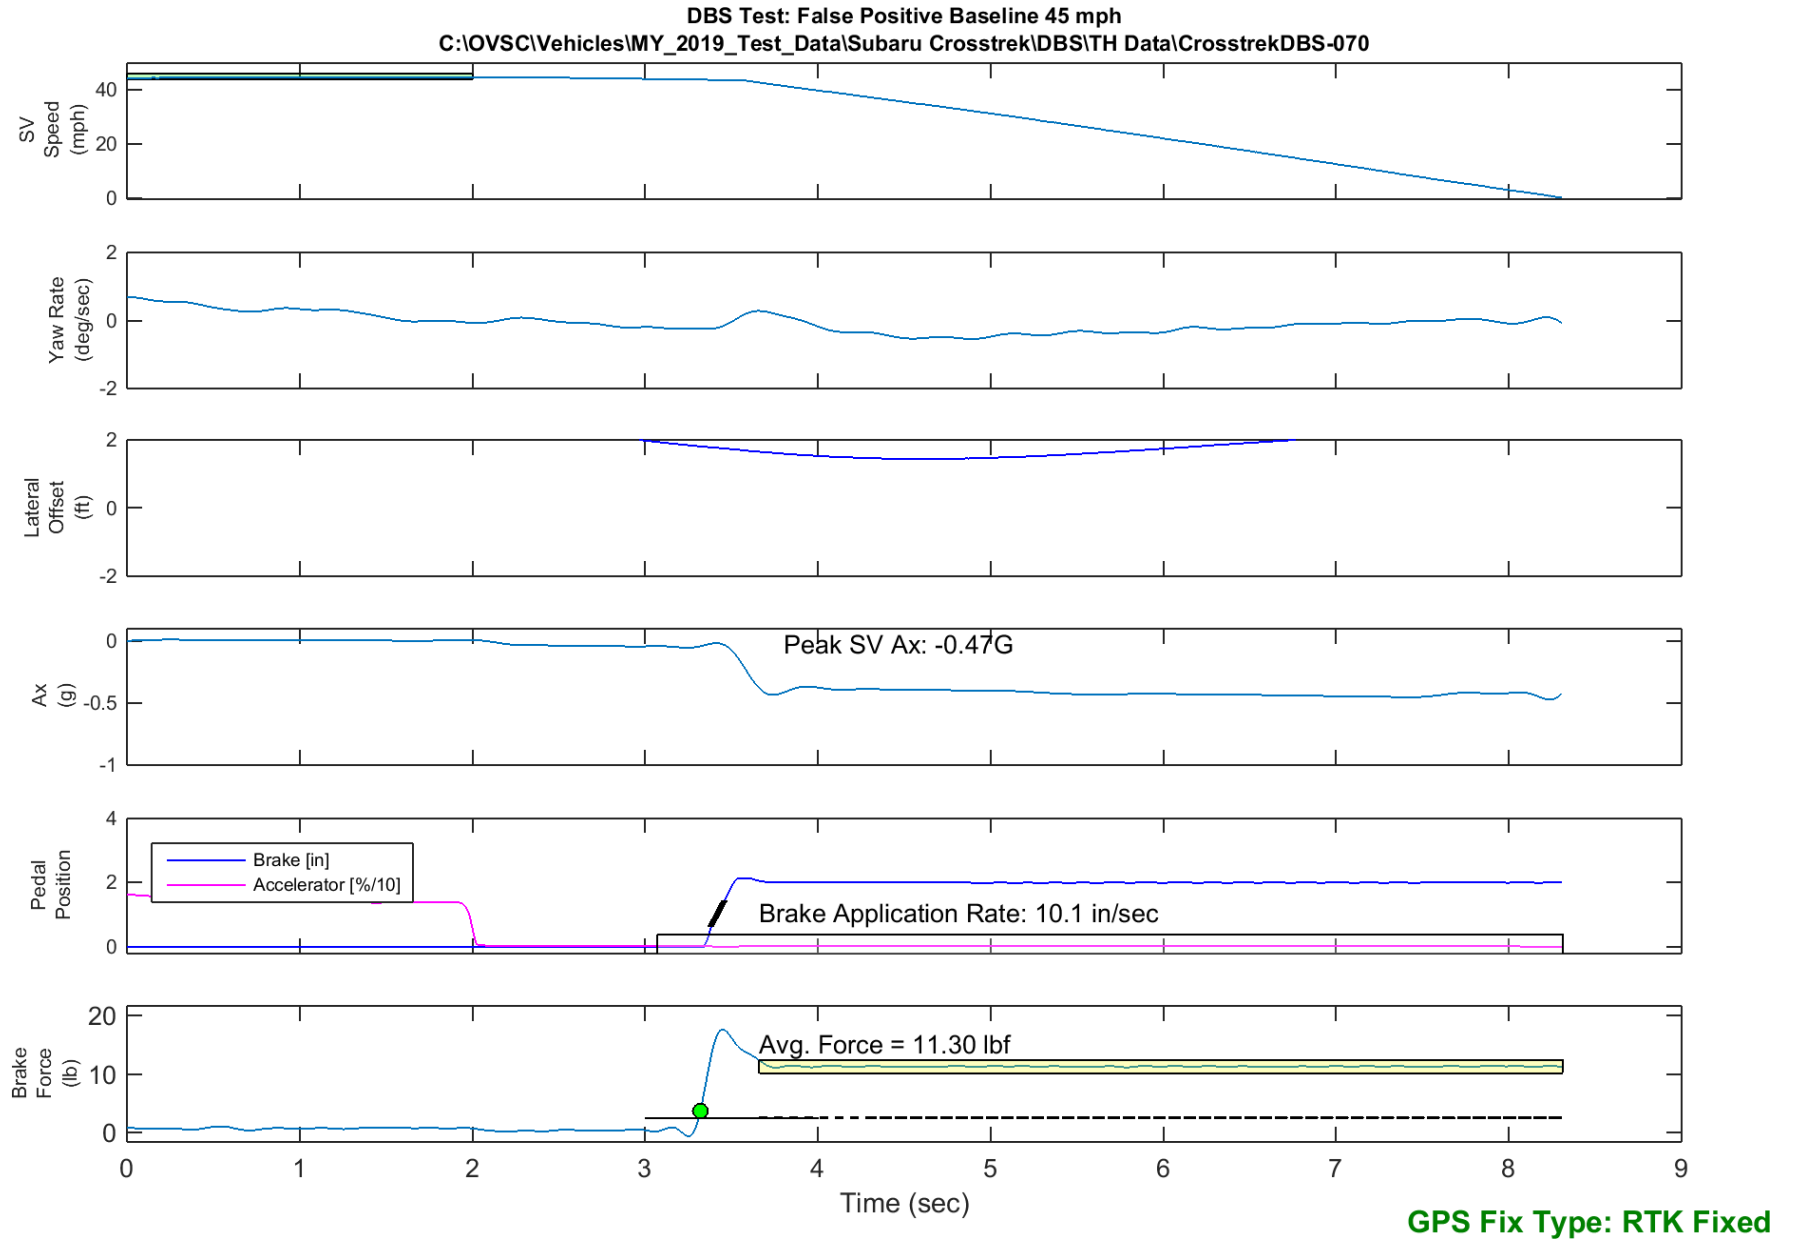


Figure E48. Time History for DBS Run 70, False Positive Baseline, SV 45 mph

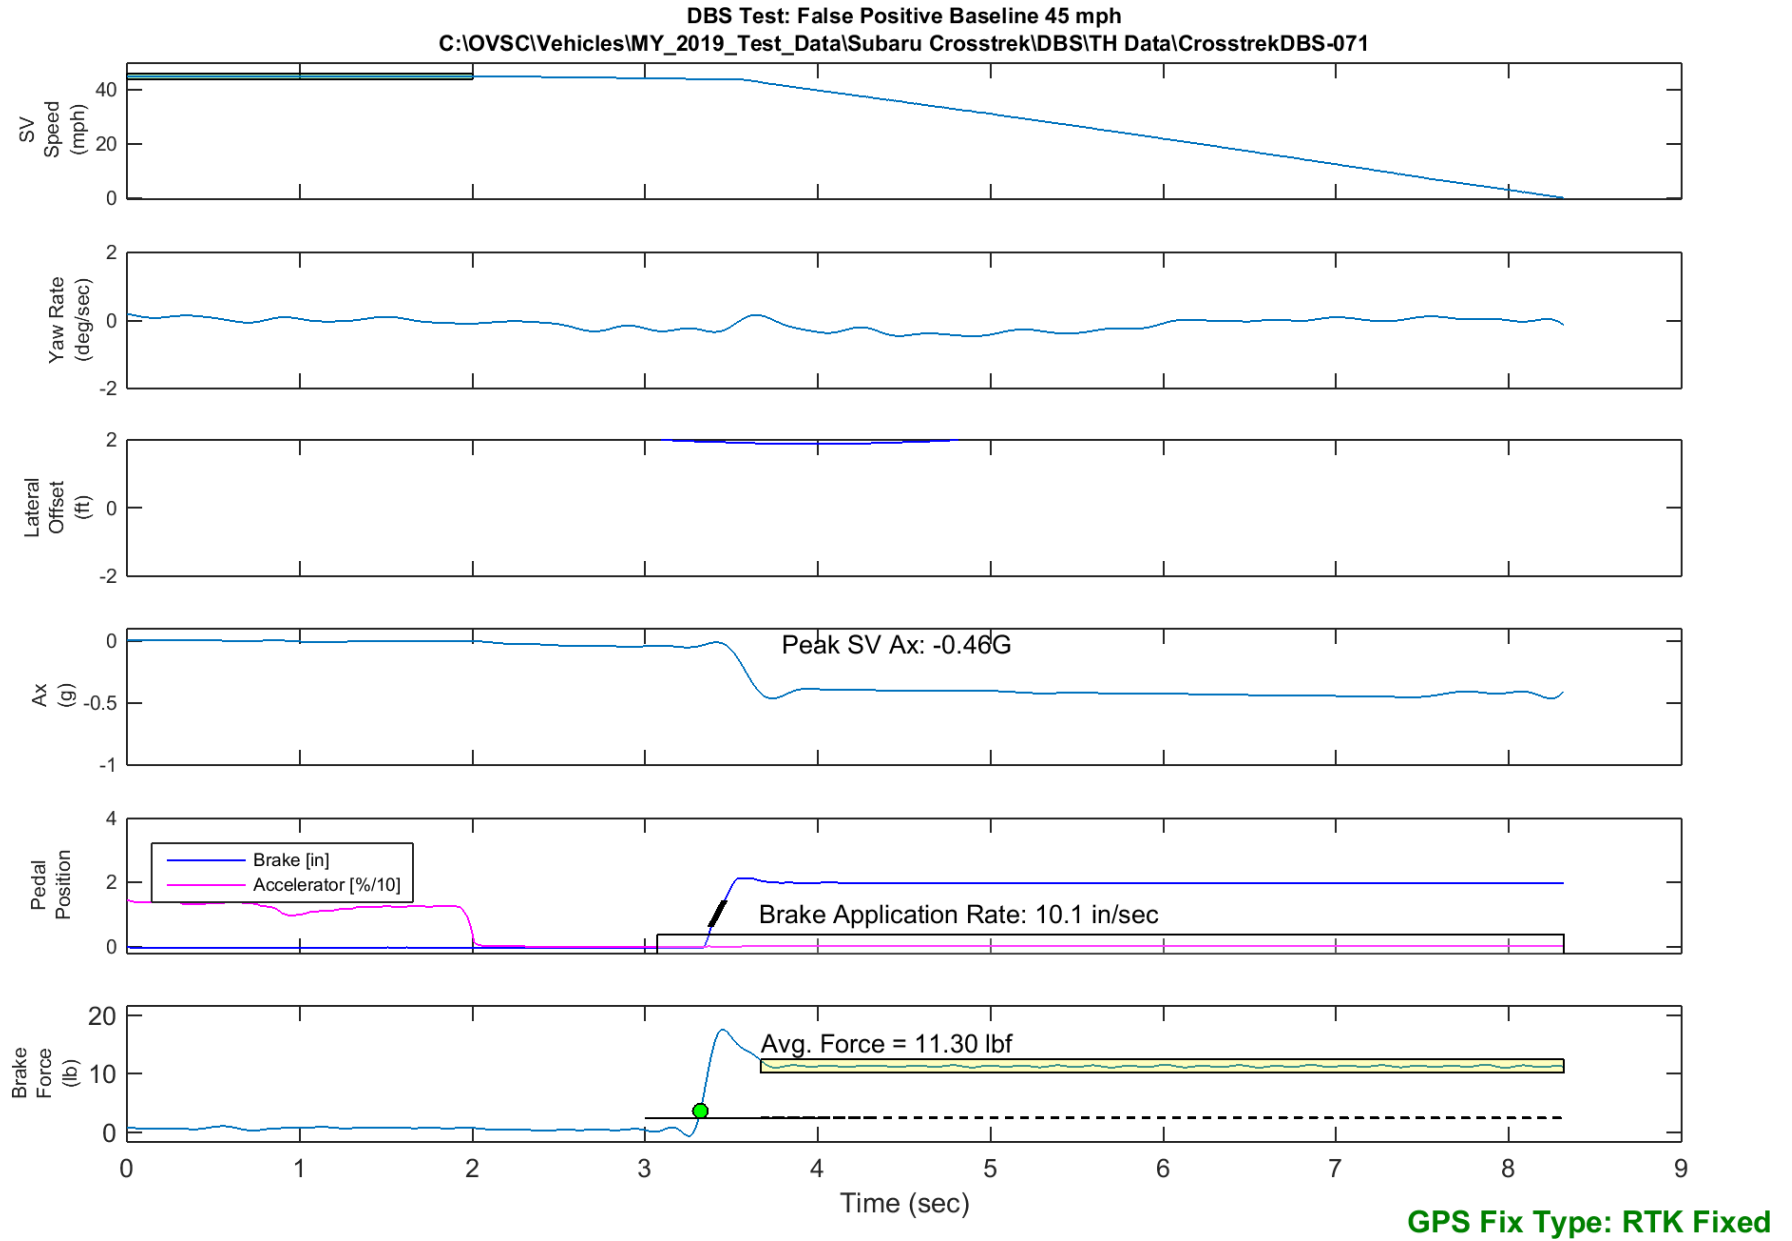


Figure E49. Time History for DBS Run 71, False Positive Baseline, SV 45 mph

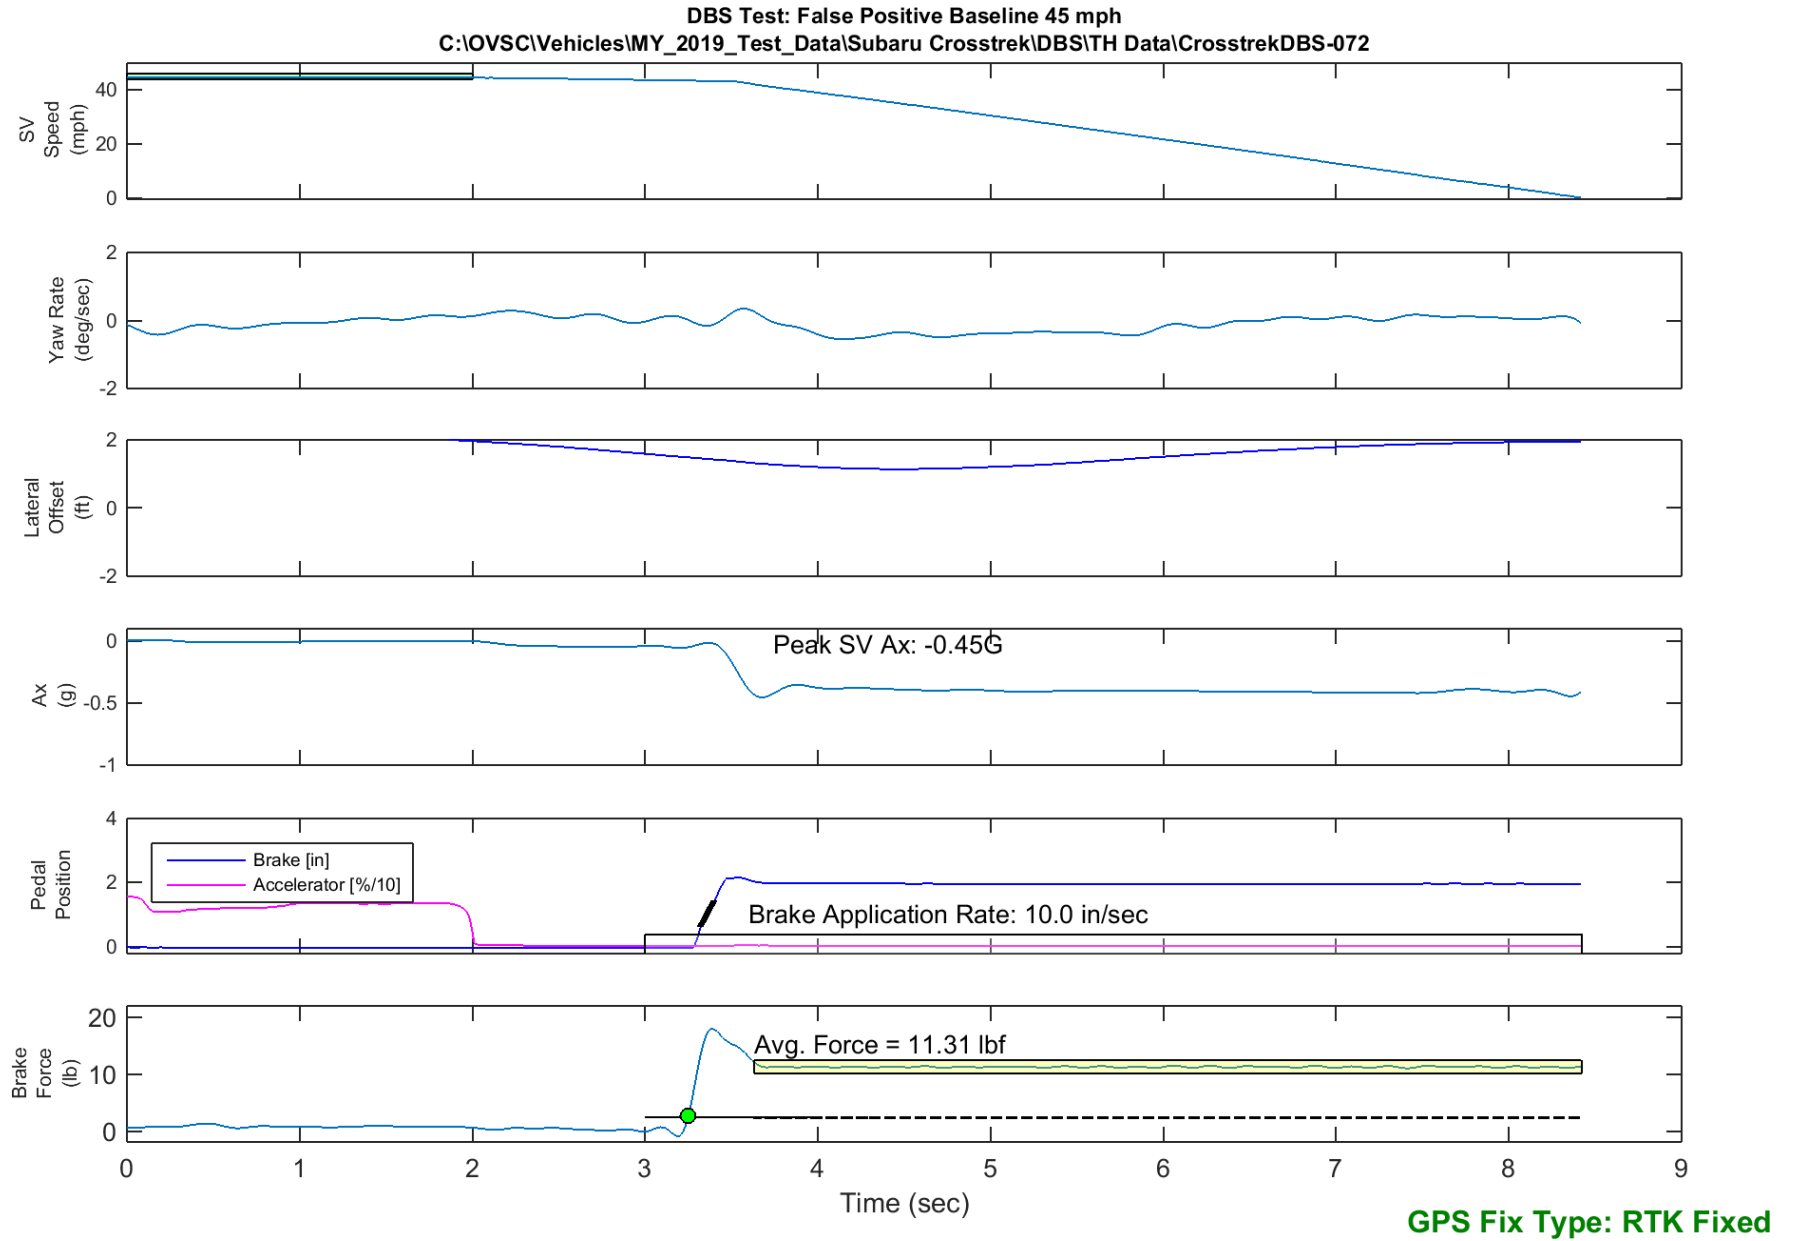


Figure E50. Time History for DBS Run 72, False Positive Baseline, SV 45 mph

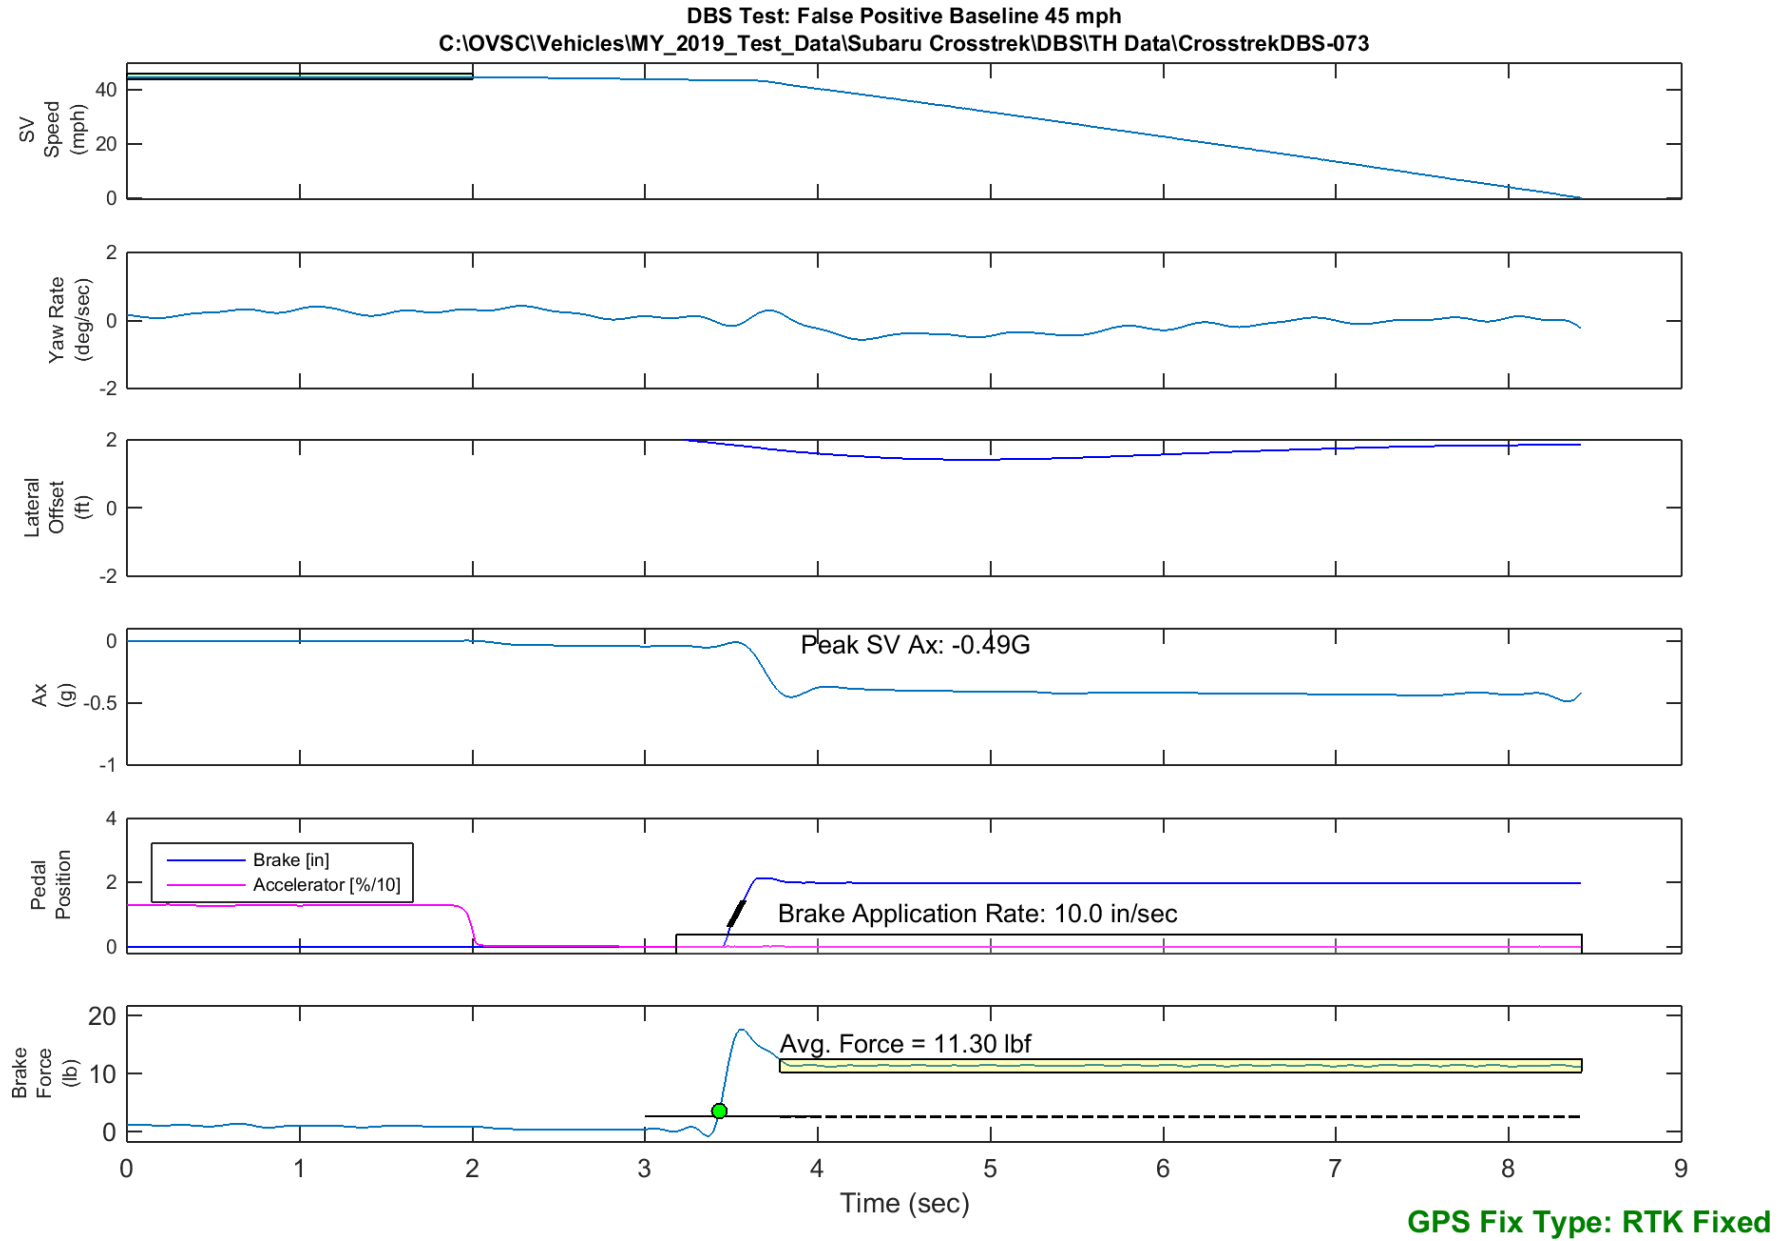


Figure E51. Time History for DBS Run 73, False Positive Baseline, SV 45 mph

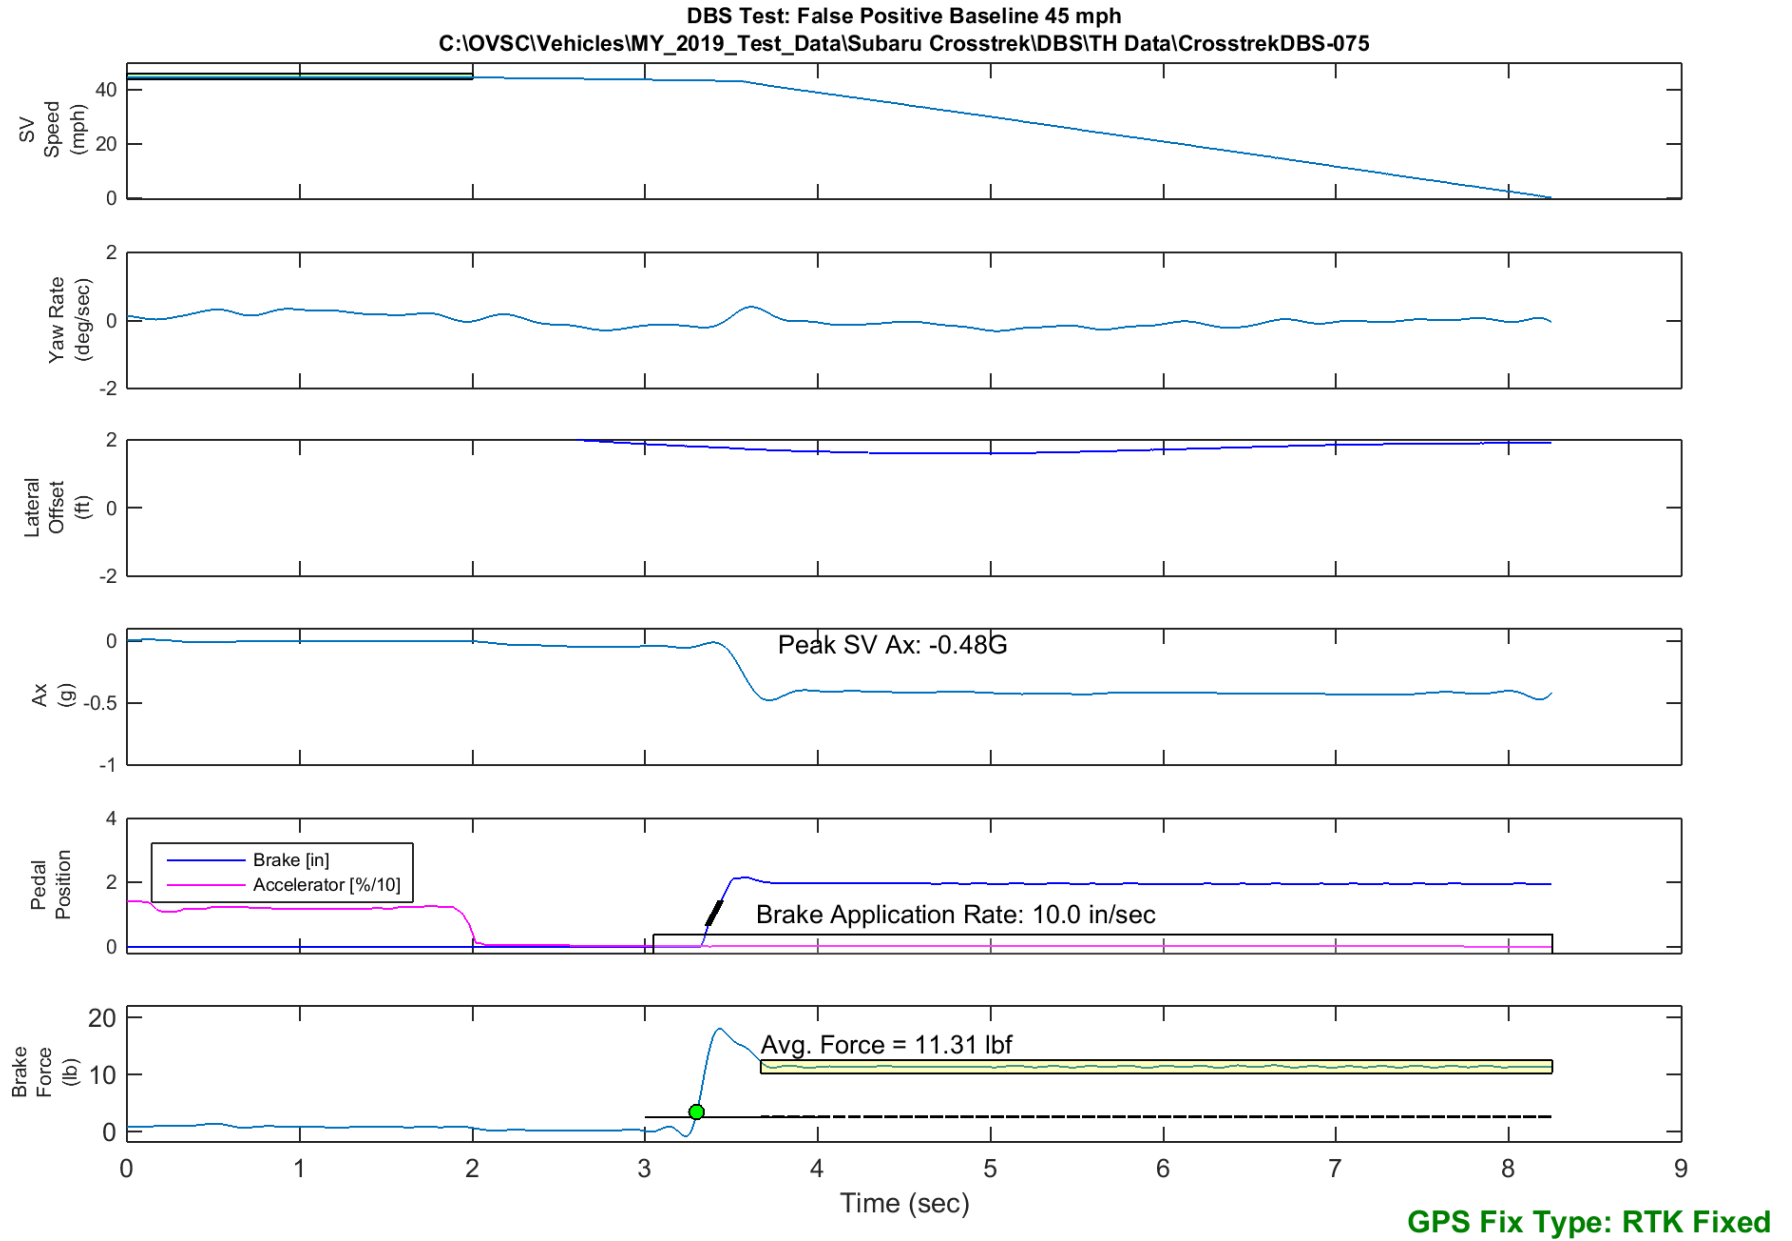


Figure E52. Time History for DBS Run 75, False Positive Baseline, SV 45 mph

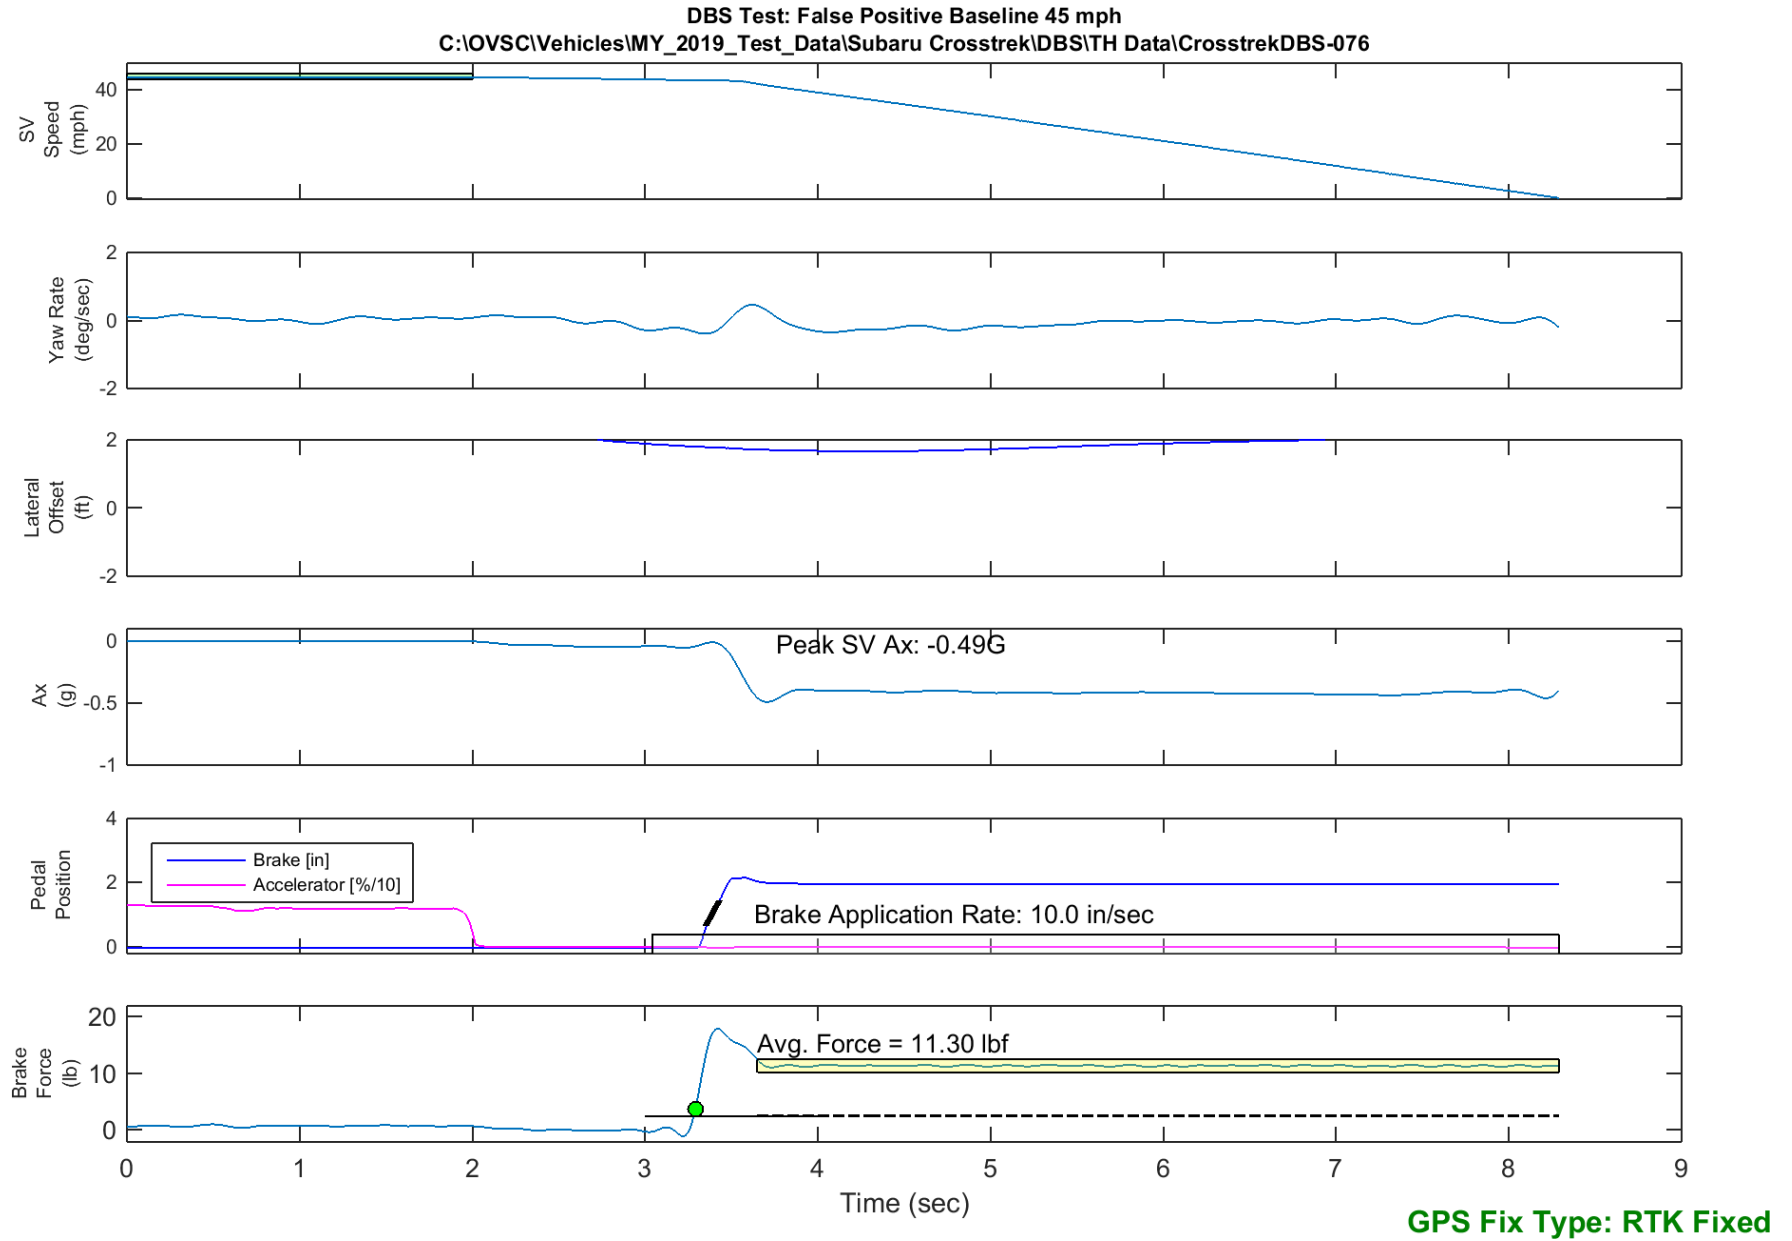


Figure E53. Time History for DBS Run 76, False Positive Baseline, SV 45 mph

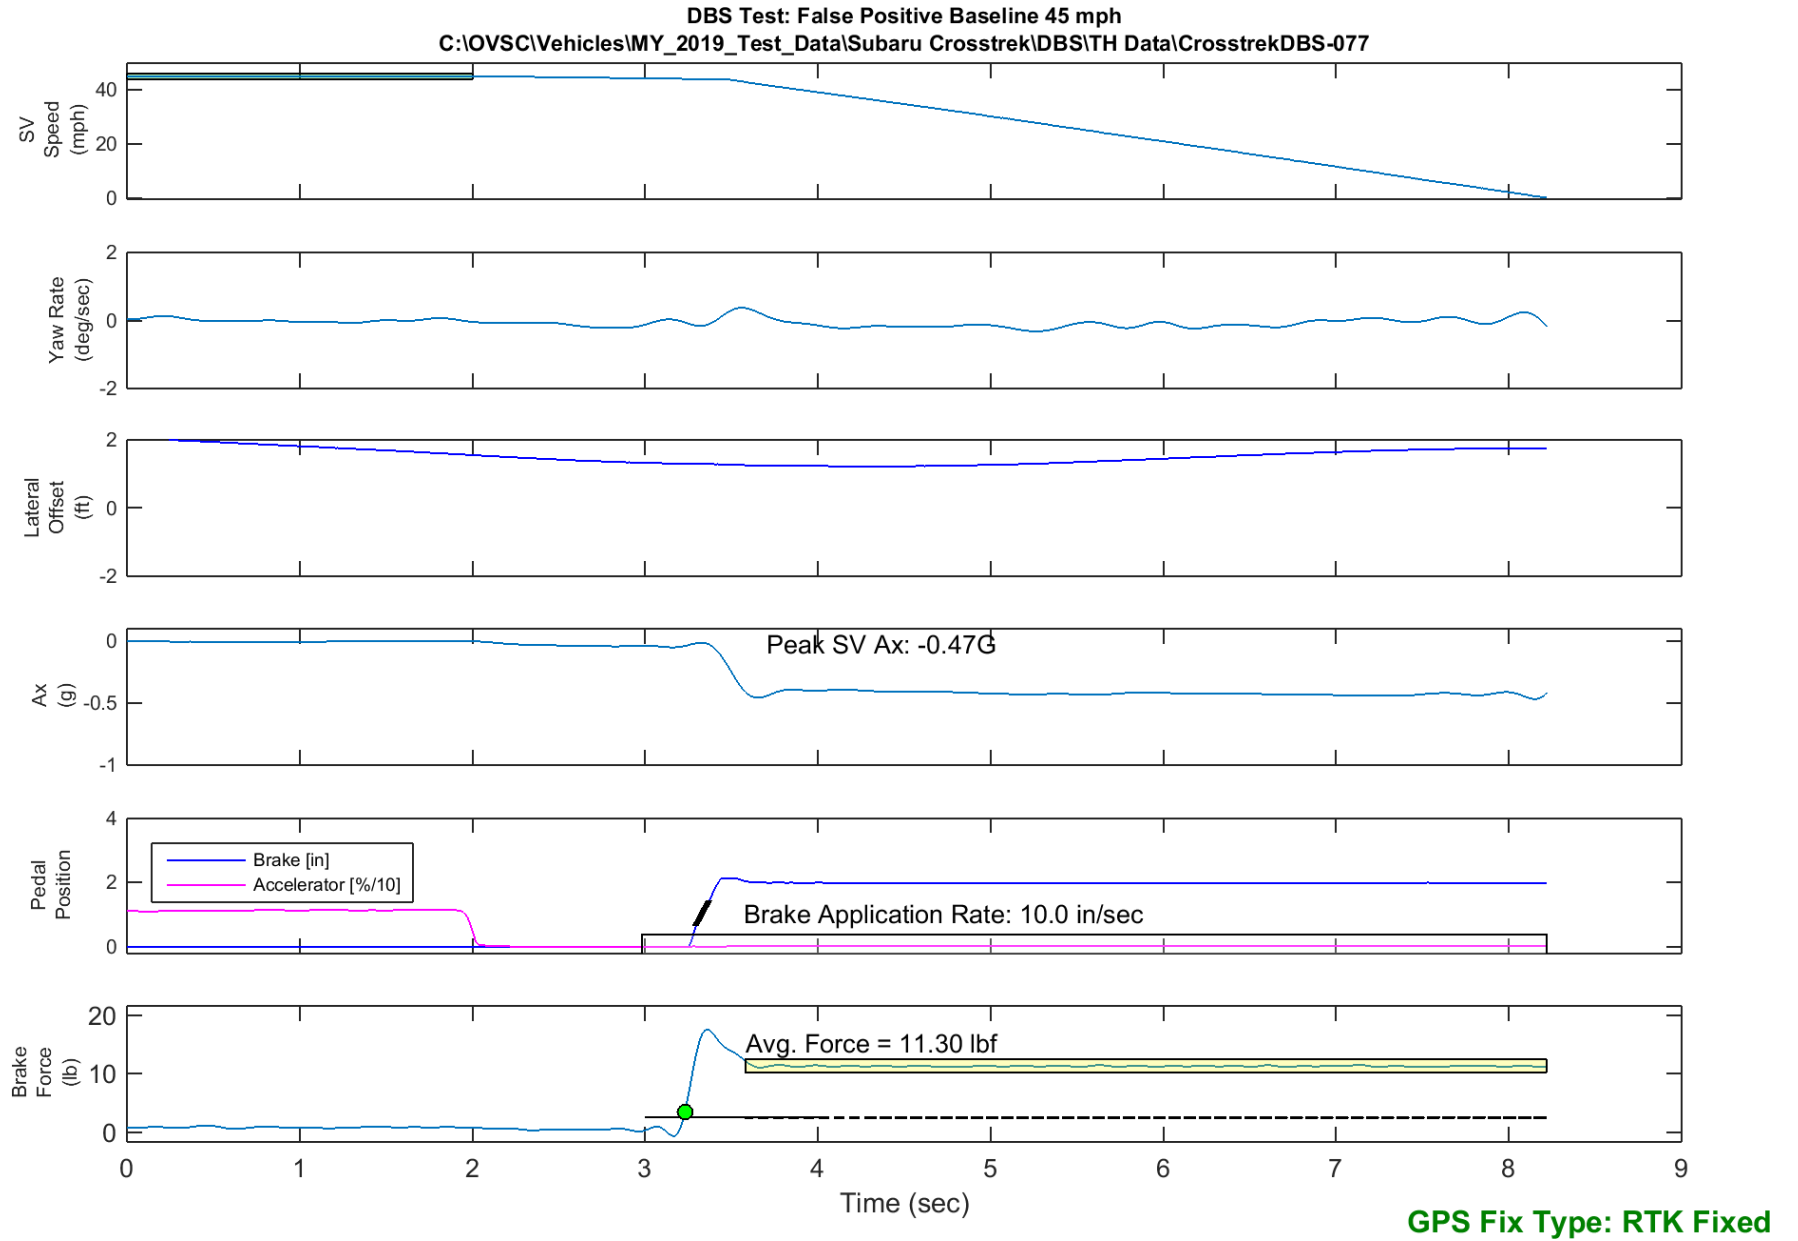


Figure E54. Time History for DBS Run 77, False Positive Baseline, SV 45 mph

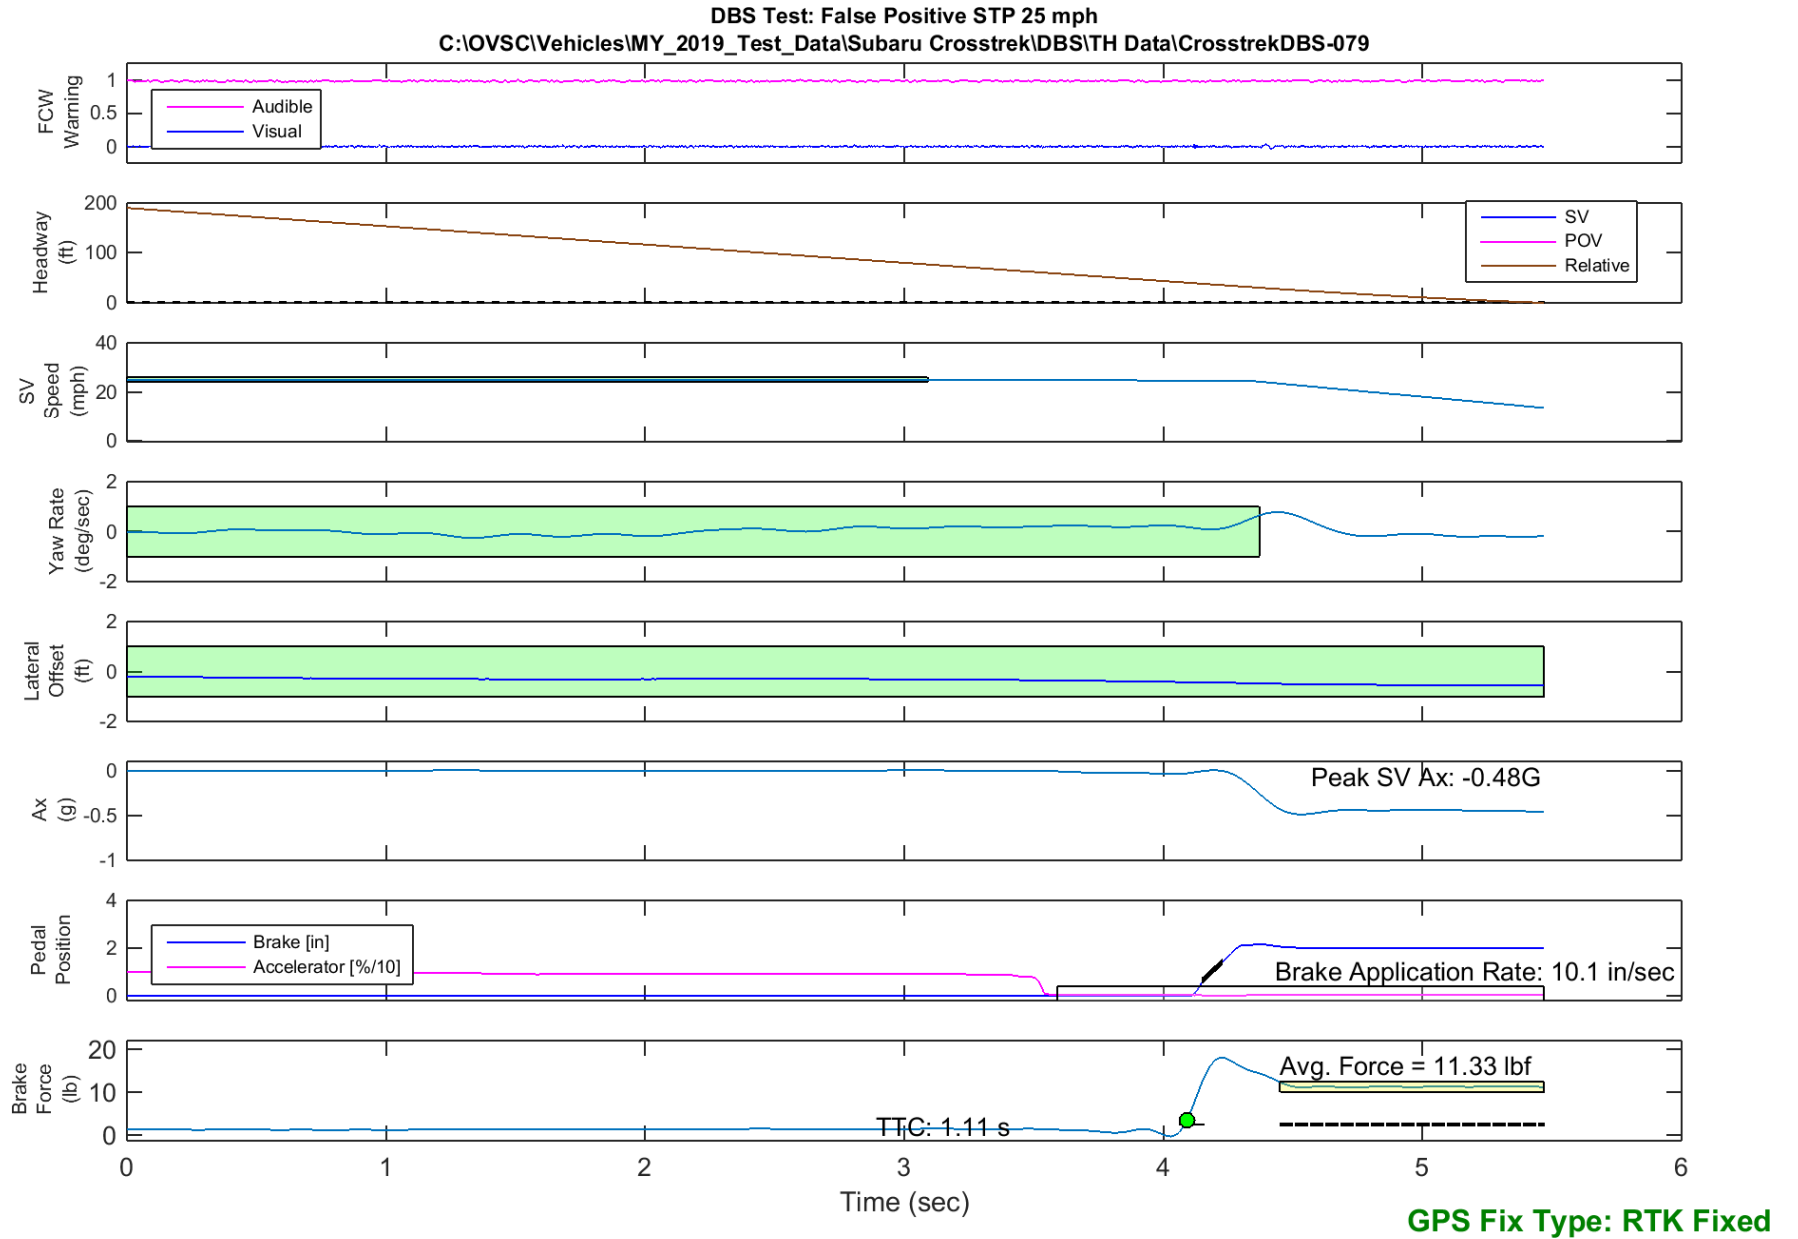


Figure E55. Time History for DBS Run 79, SV Encounters Steel Trench Plate, SV 25 mph

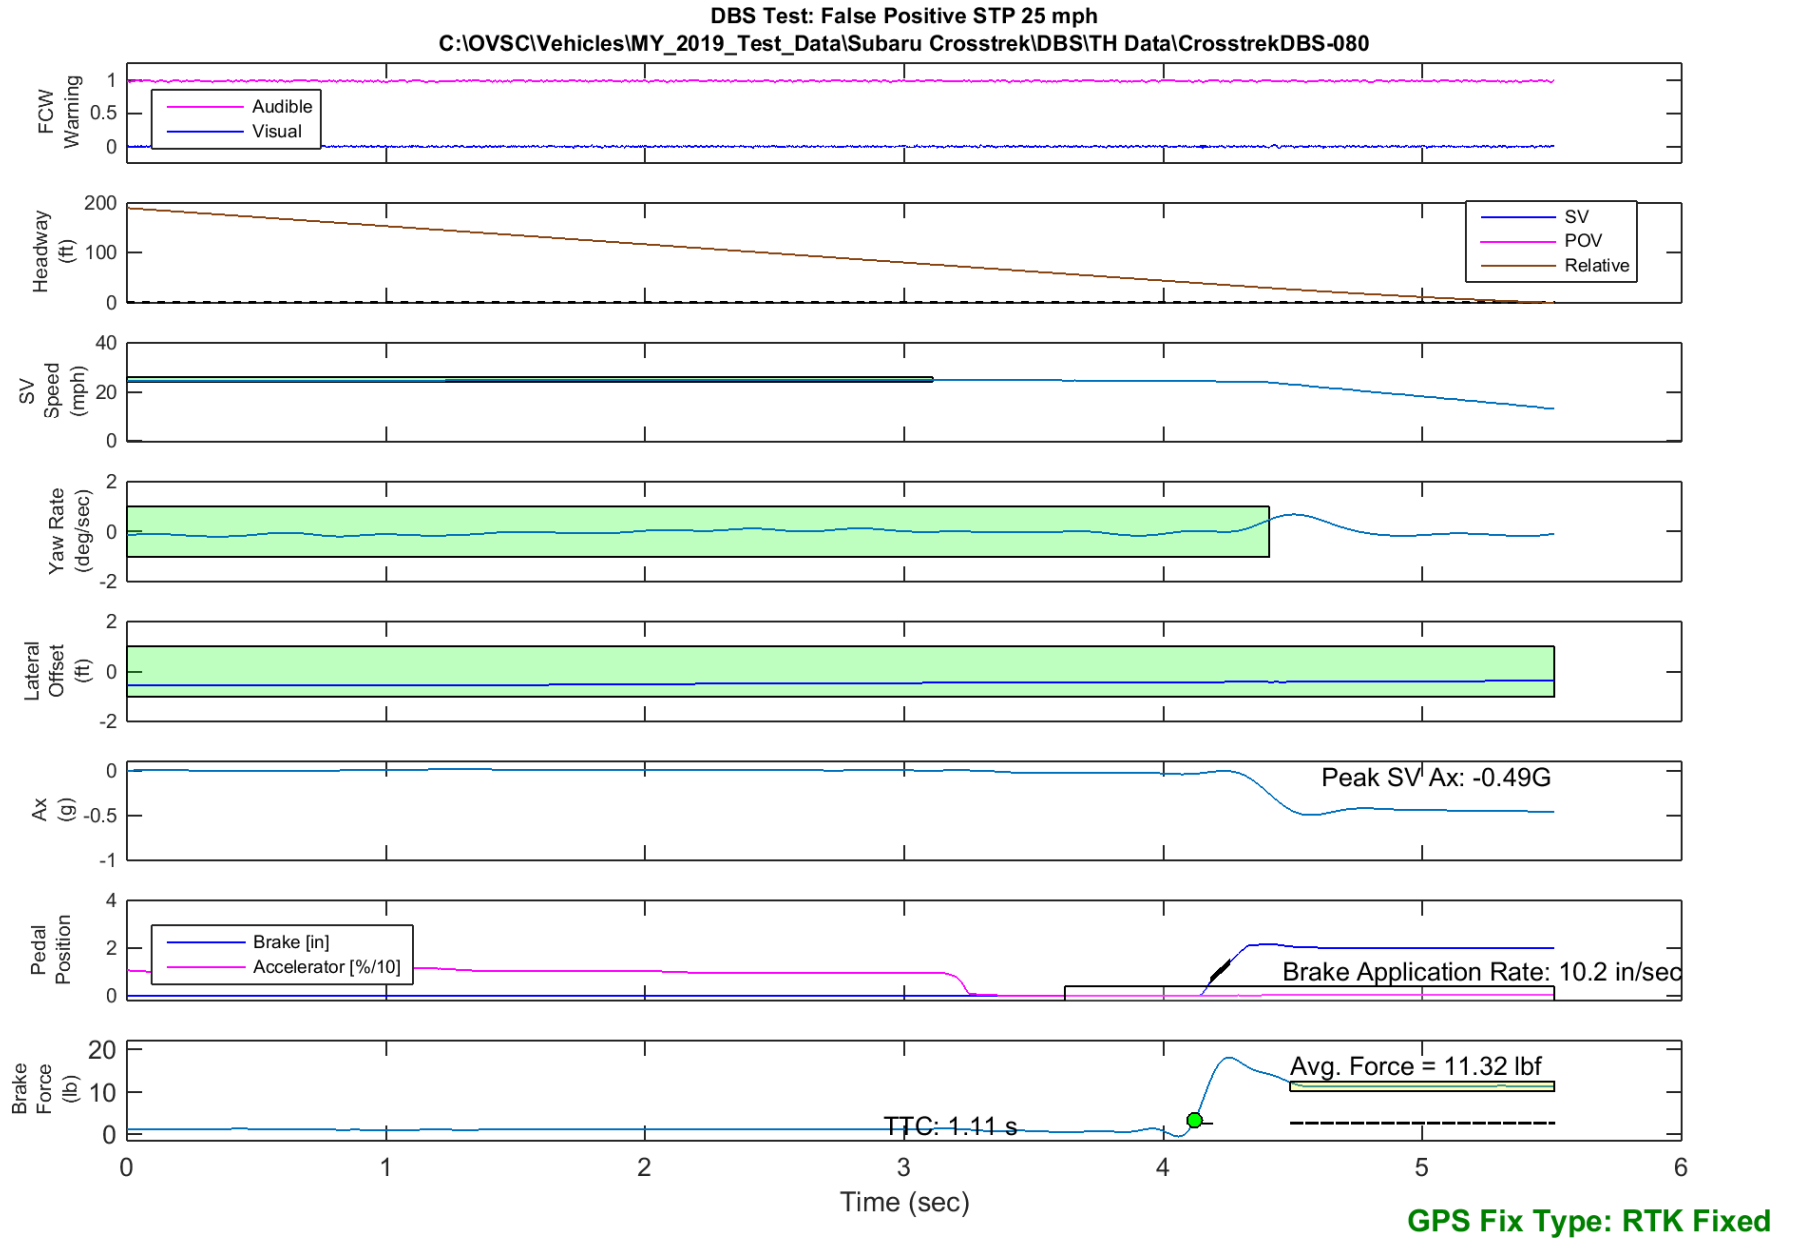


Figure E56. Time History for DBS Run 80, SV Encounters Steel Trench Plate, SV 25 mph

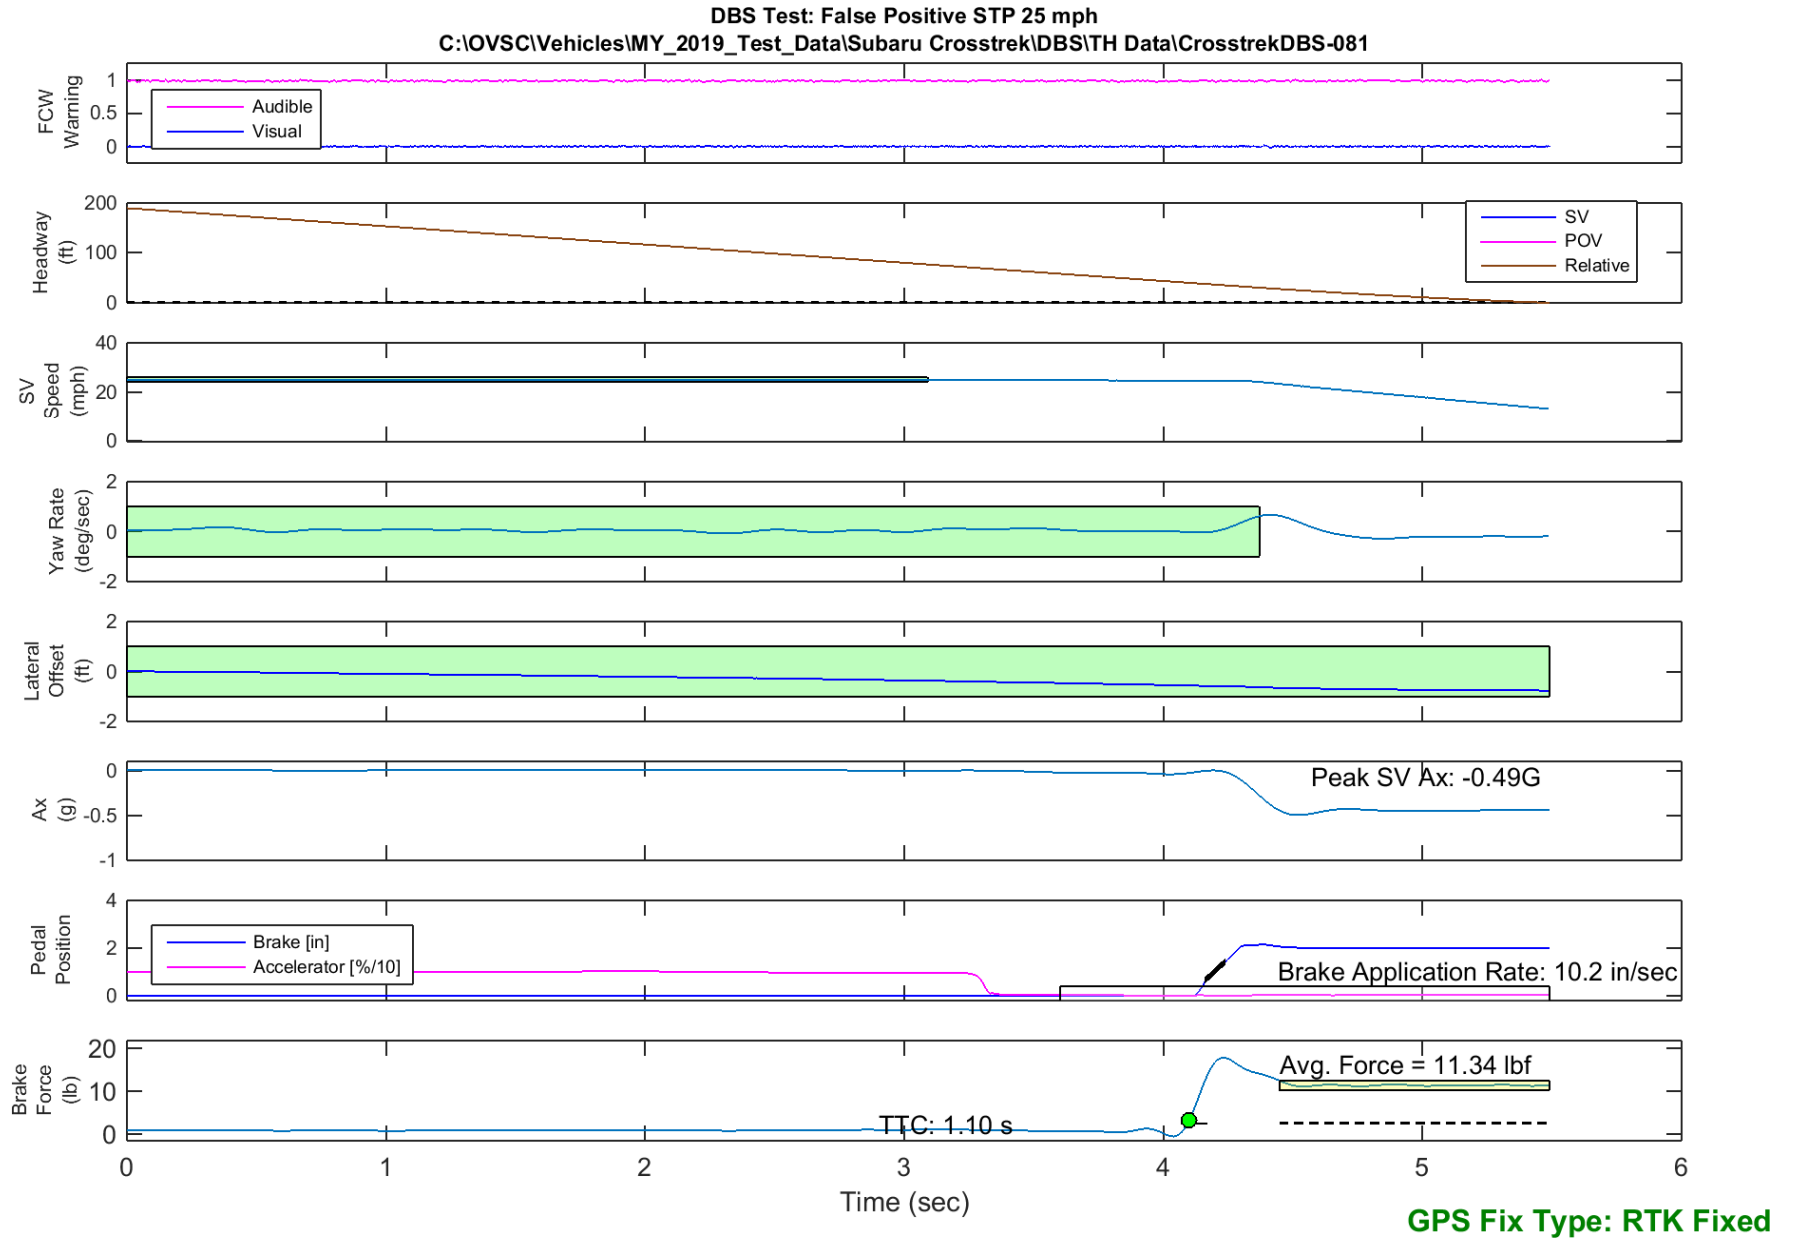


Figure E57. Time History for DBS Run 81, SV Encounters Steel Trench Plate, SV 25 mph

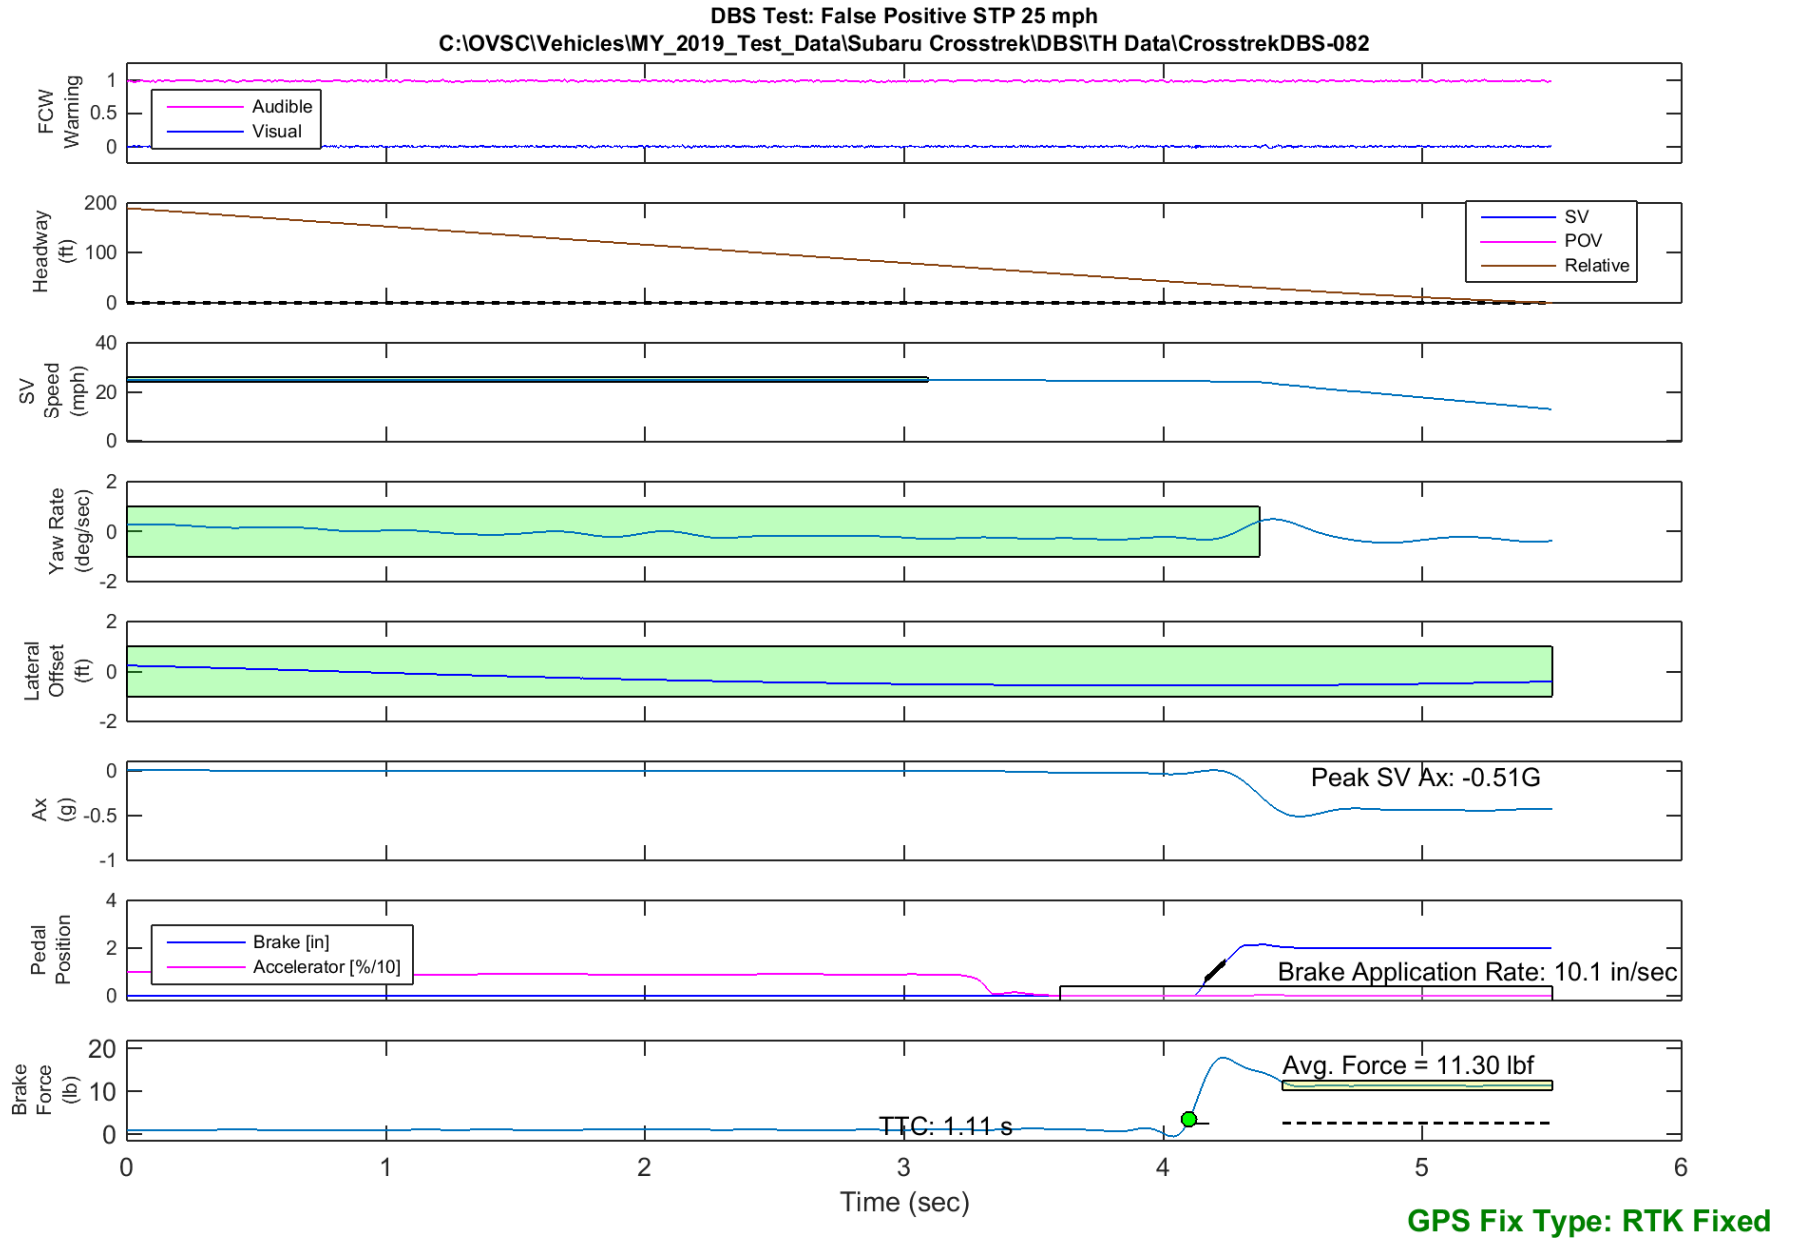


Figure E58. Time History for DBS Run 82, SV Encounters Steel Trench Plate, SV 25 mph


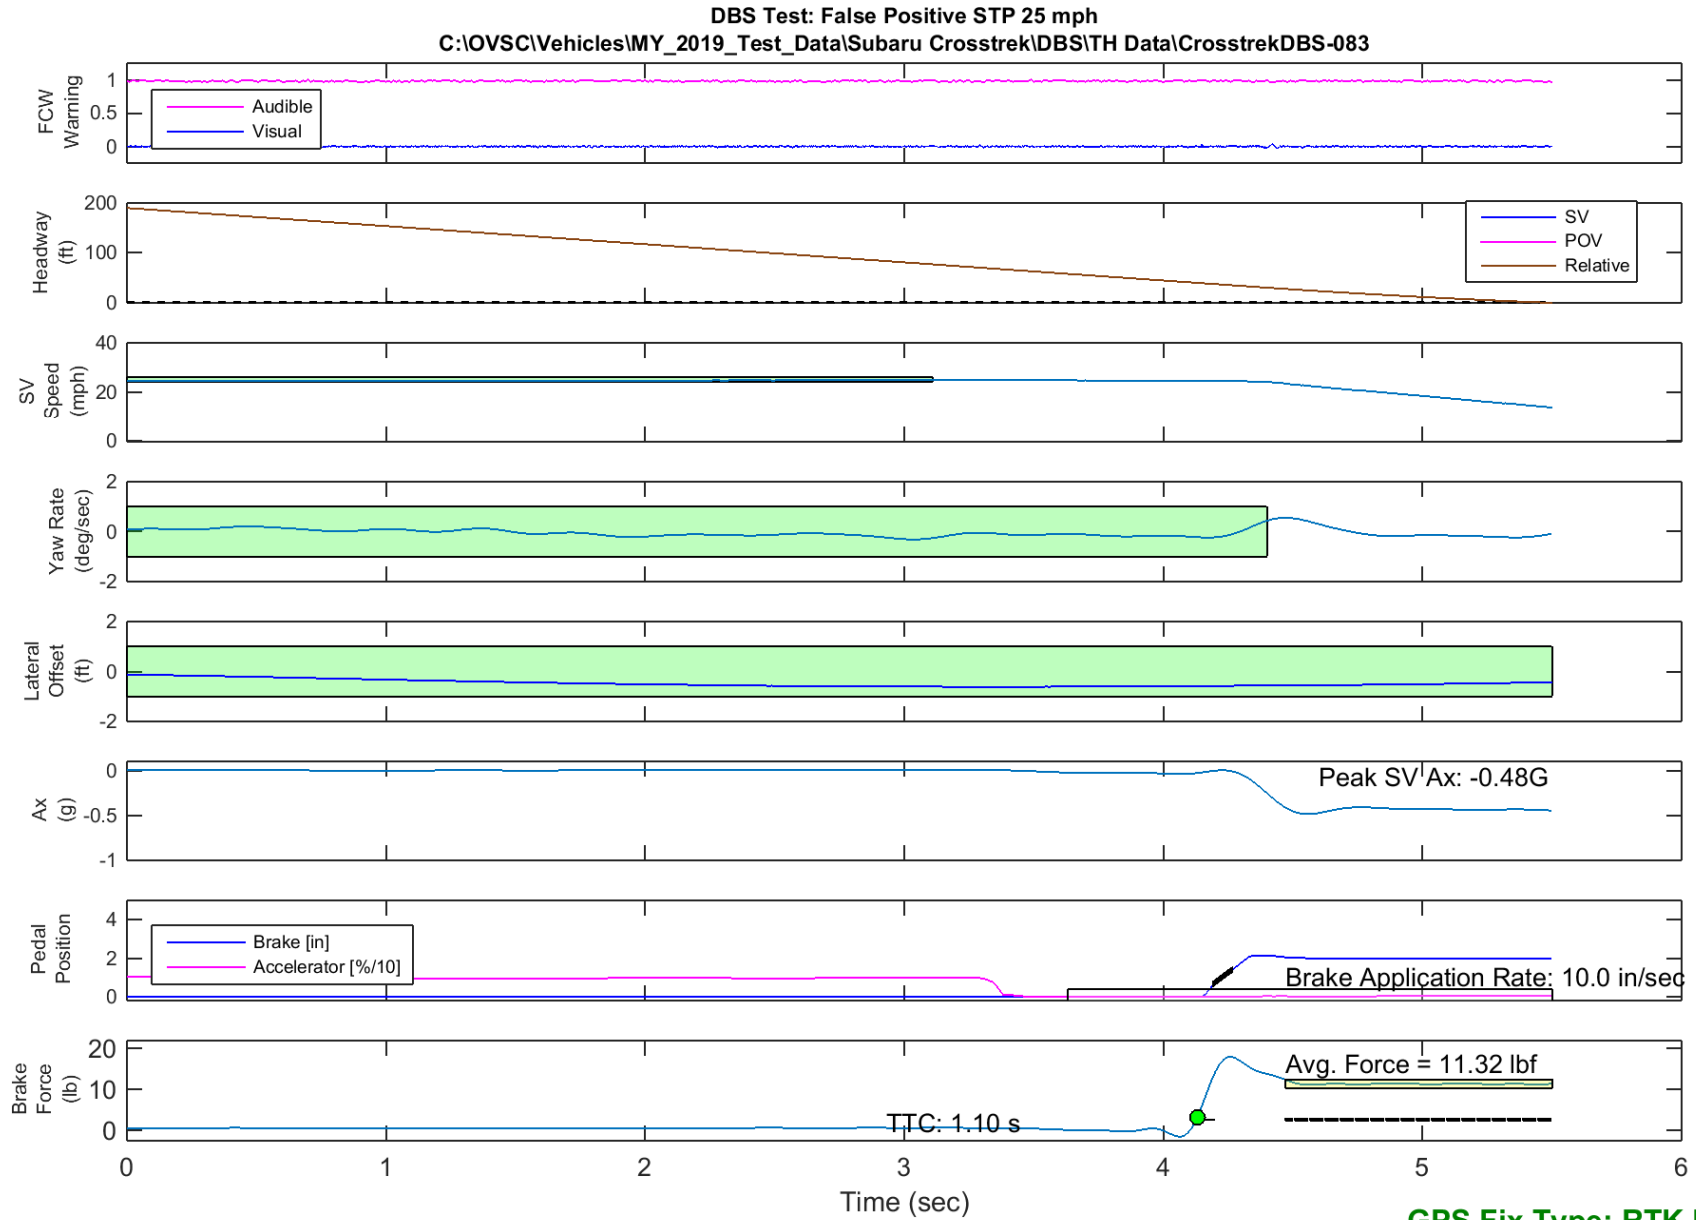


Figure E59. Time History for DBS Run 83, SV Encounters Steel Trench Plate, SV 25 mph

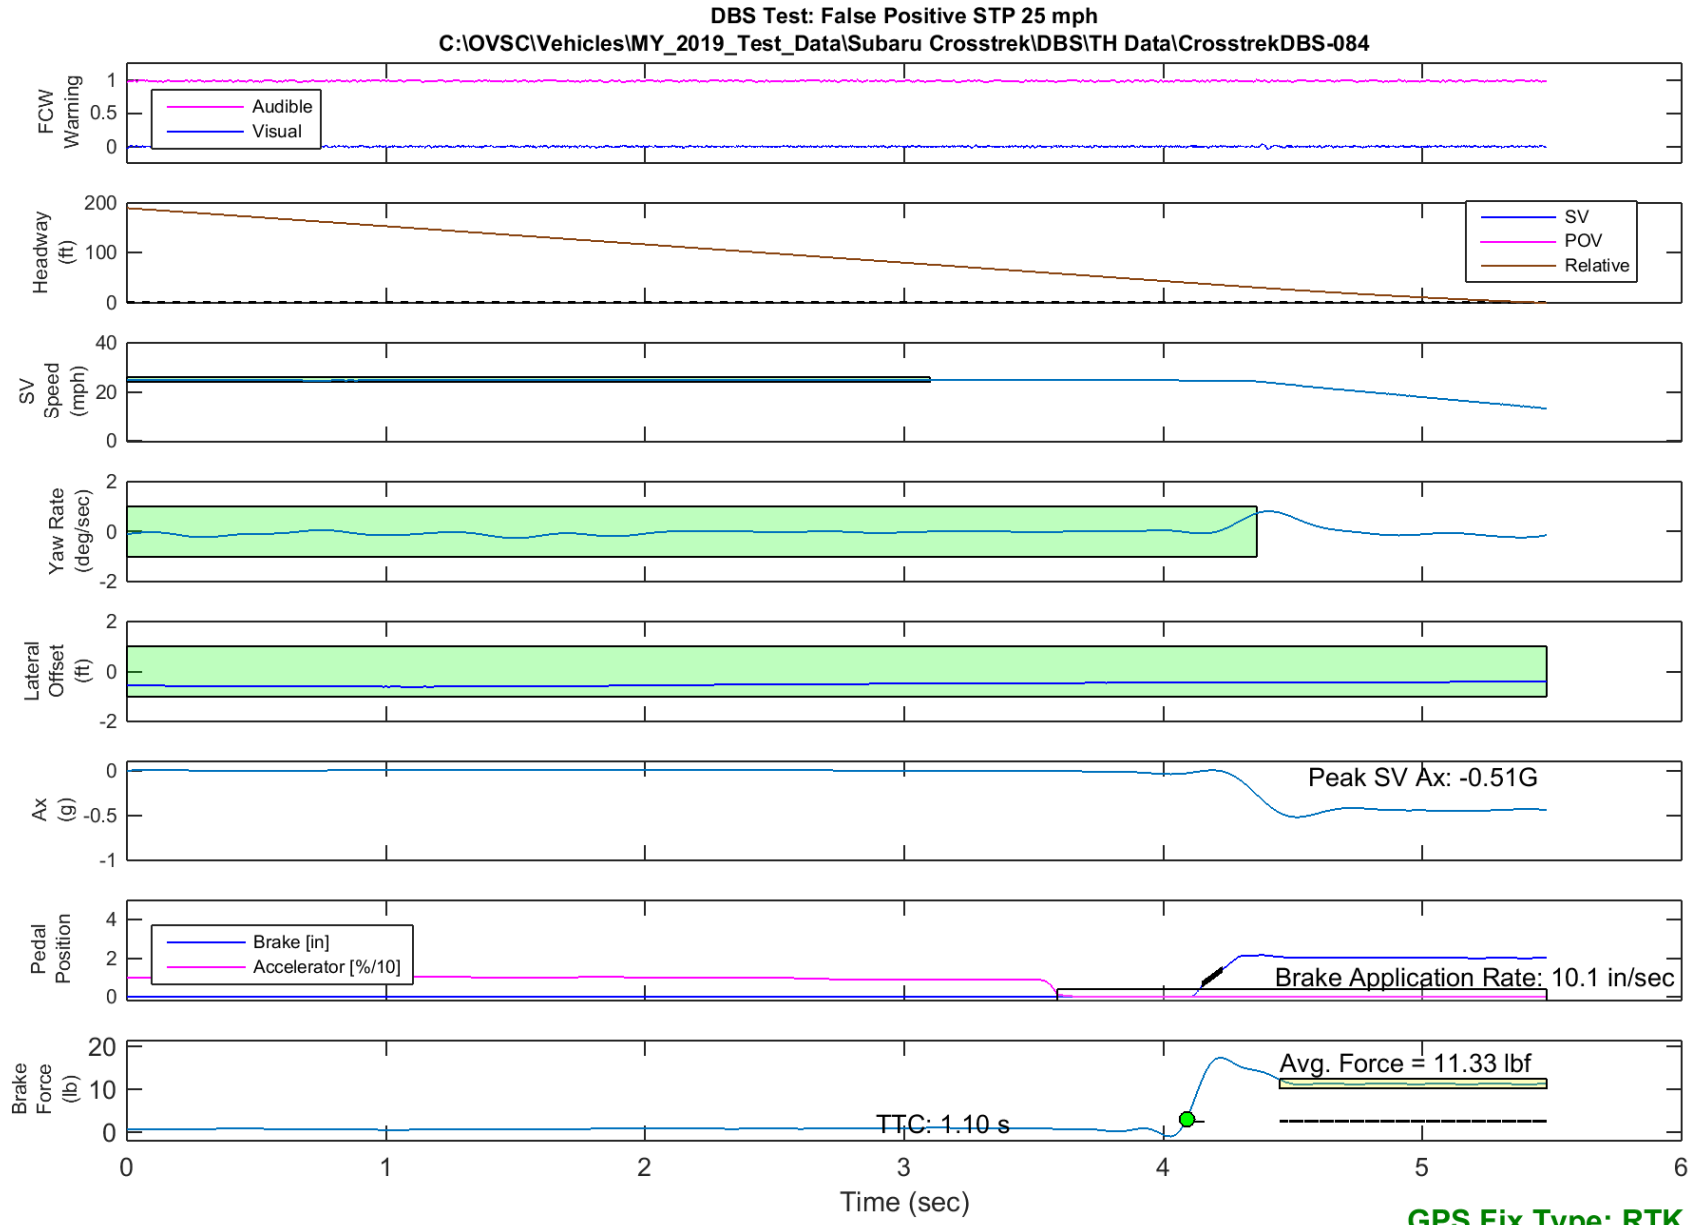

GPS Fix Type: RTK Fixed

Figure E60. Time History for DBS Run 84, SV Encounters Steel Trench Plate, SV 25 mph

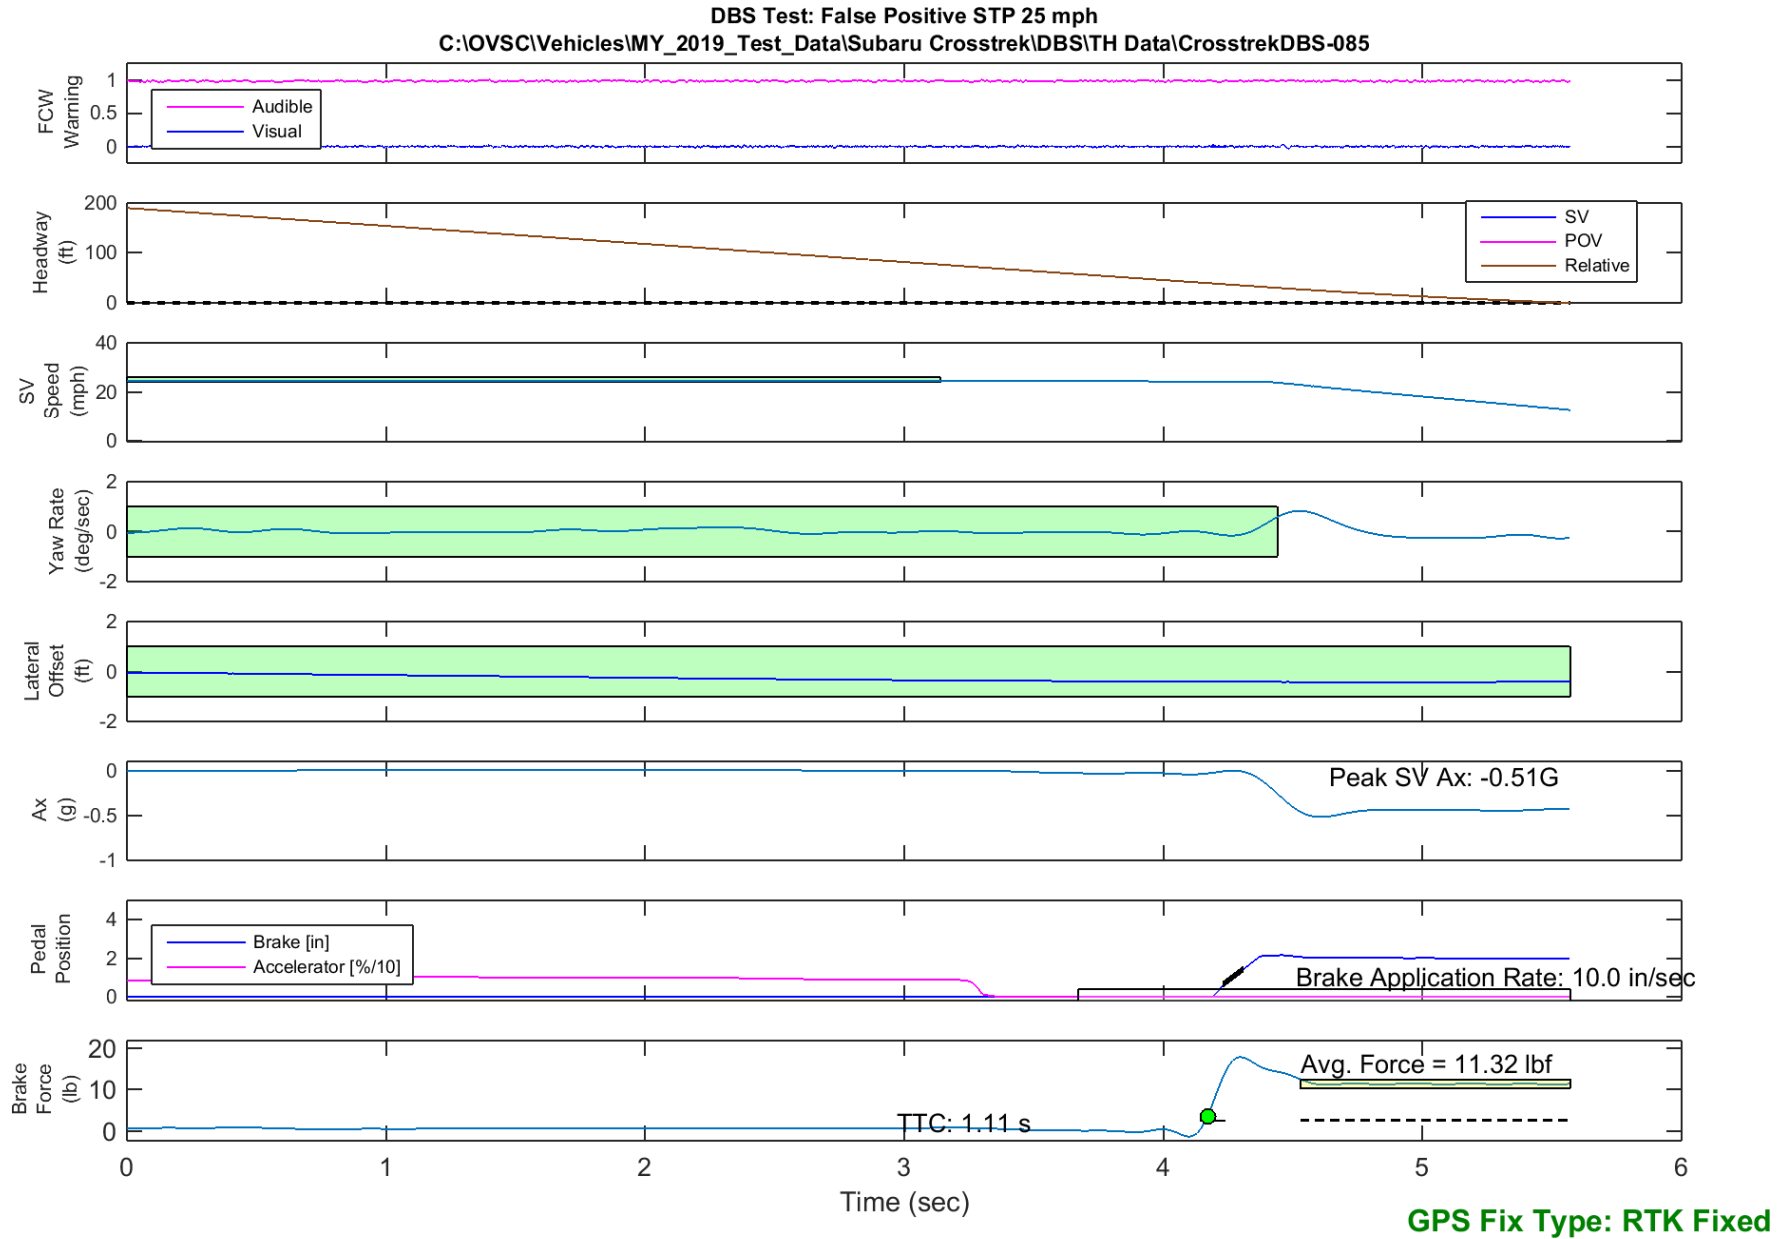


Figure E61. Time History for DBS Run 85, SV Encounters Steel Trench Plate, SV 25 mph

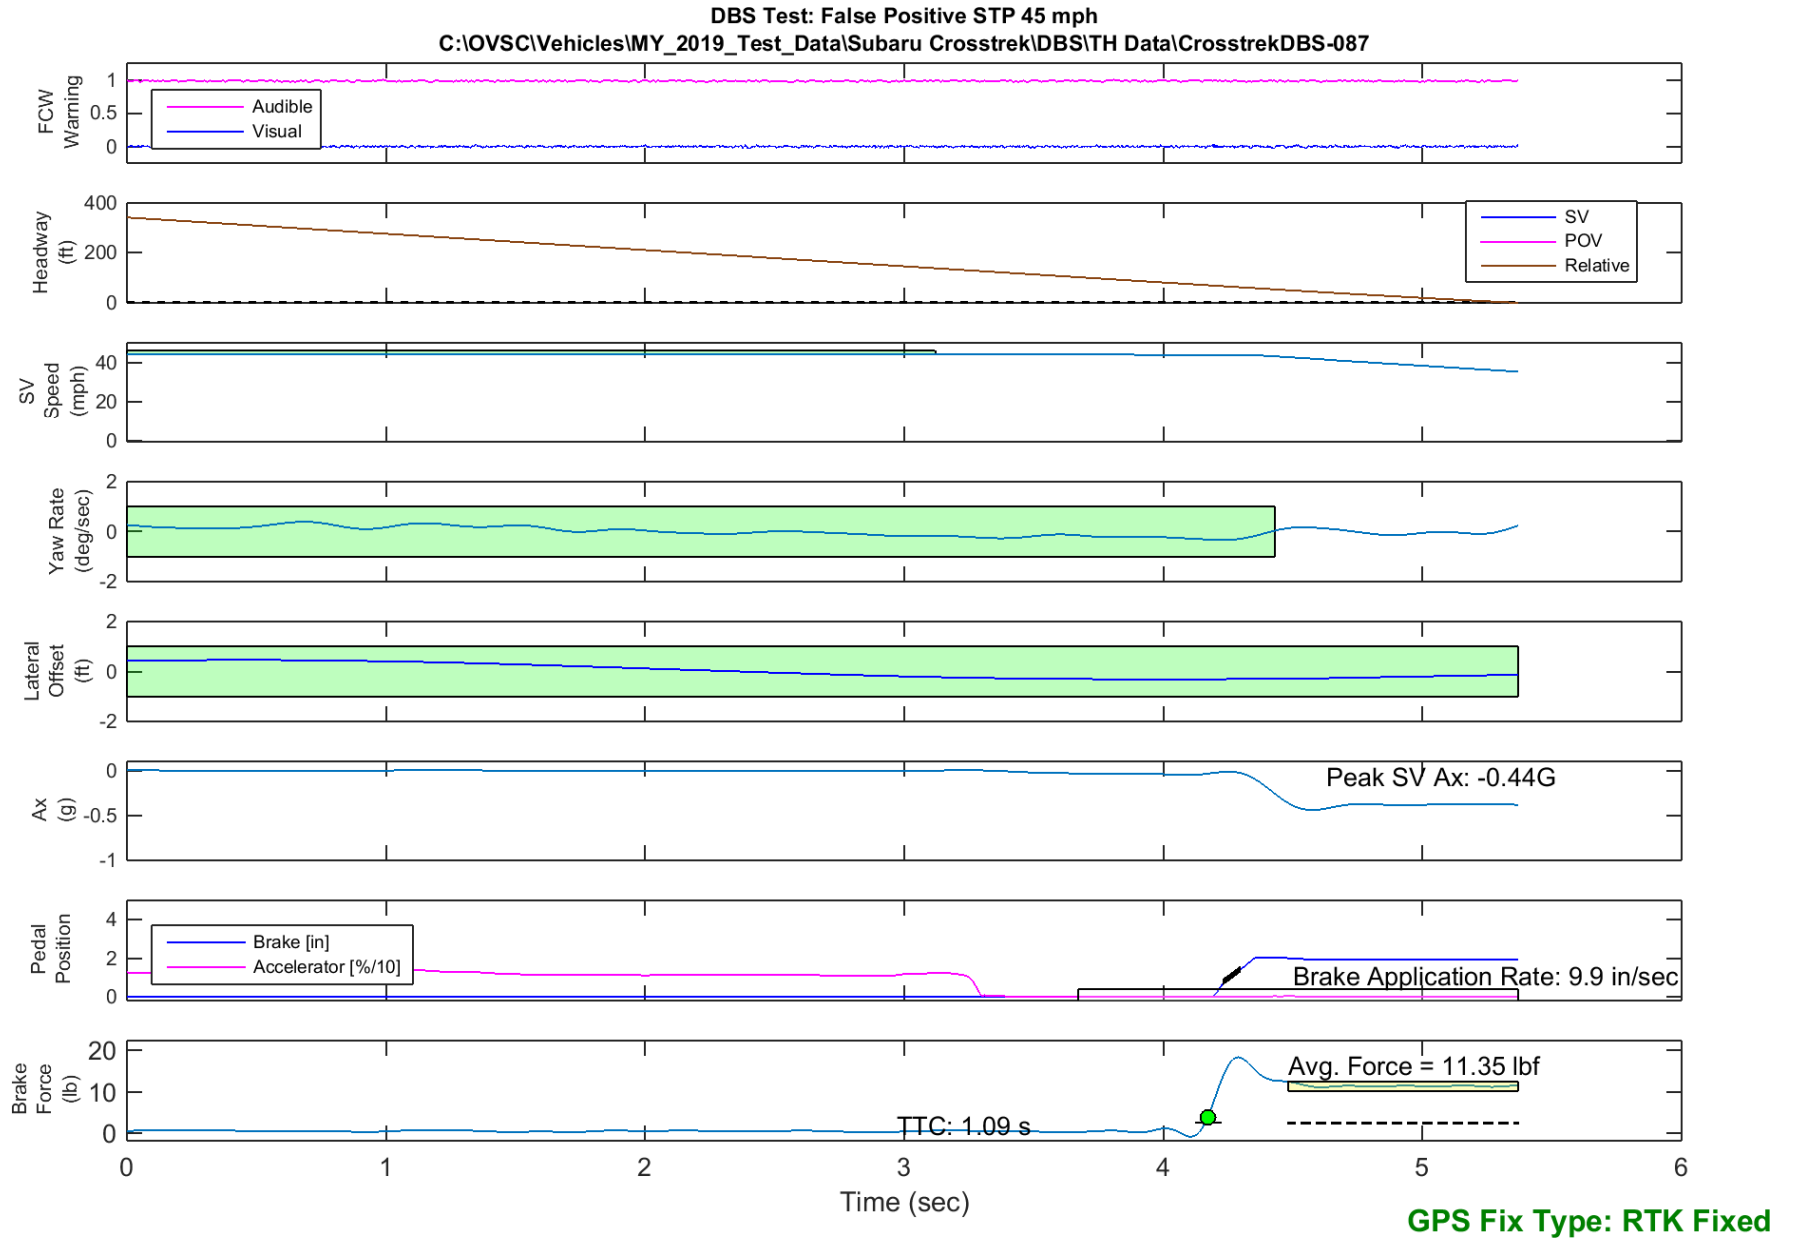


Figure E62. Time History for DBS Run 87, SV Encounters Steel Trench Plate, SV 45 mph

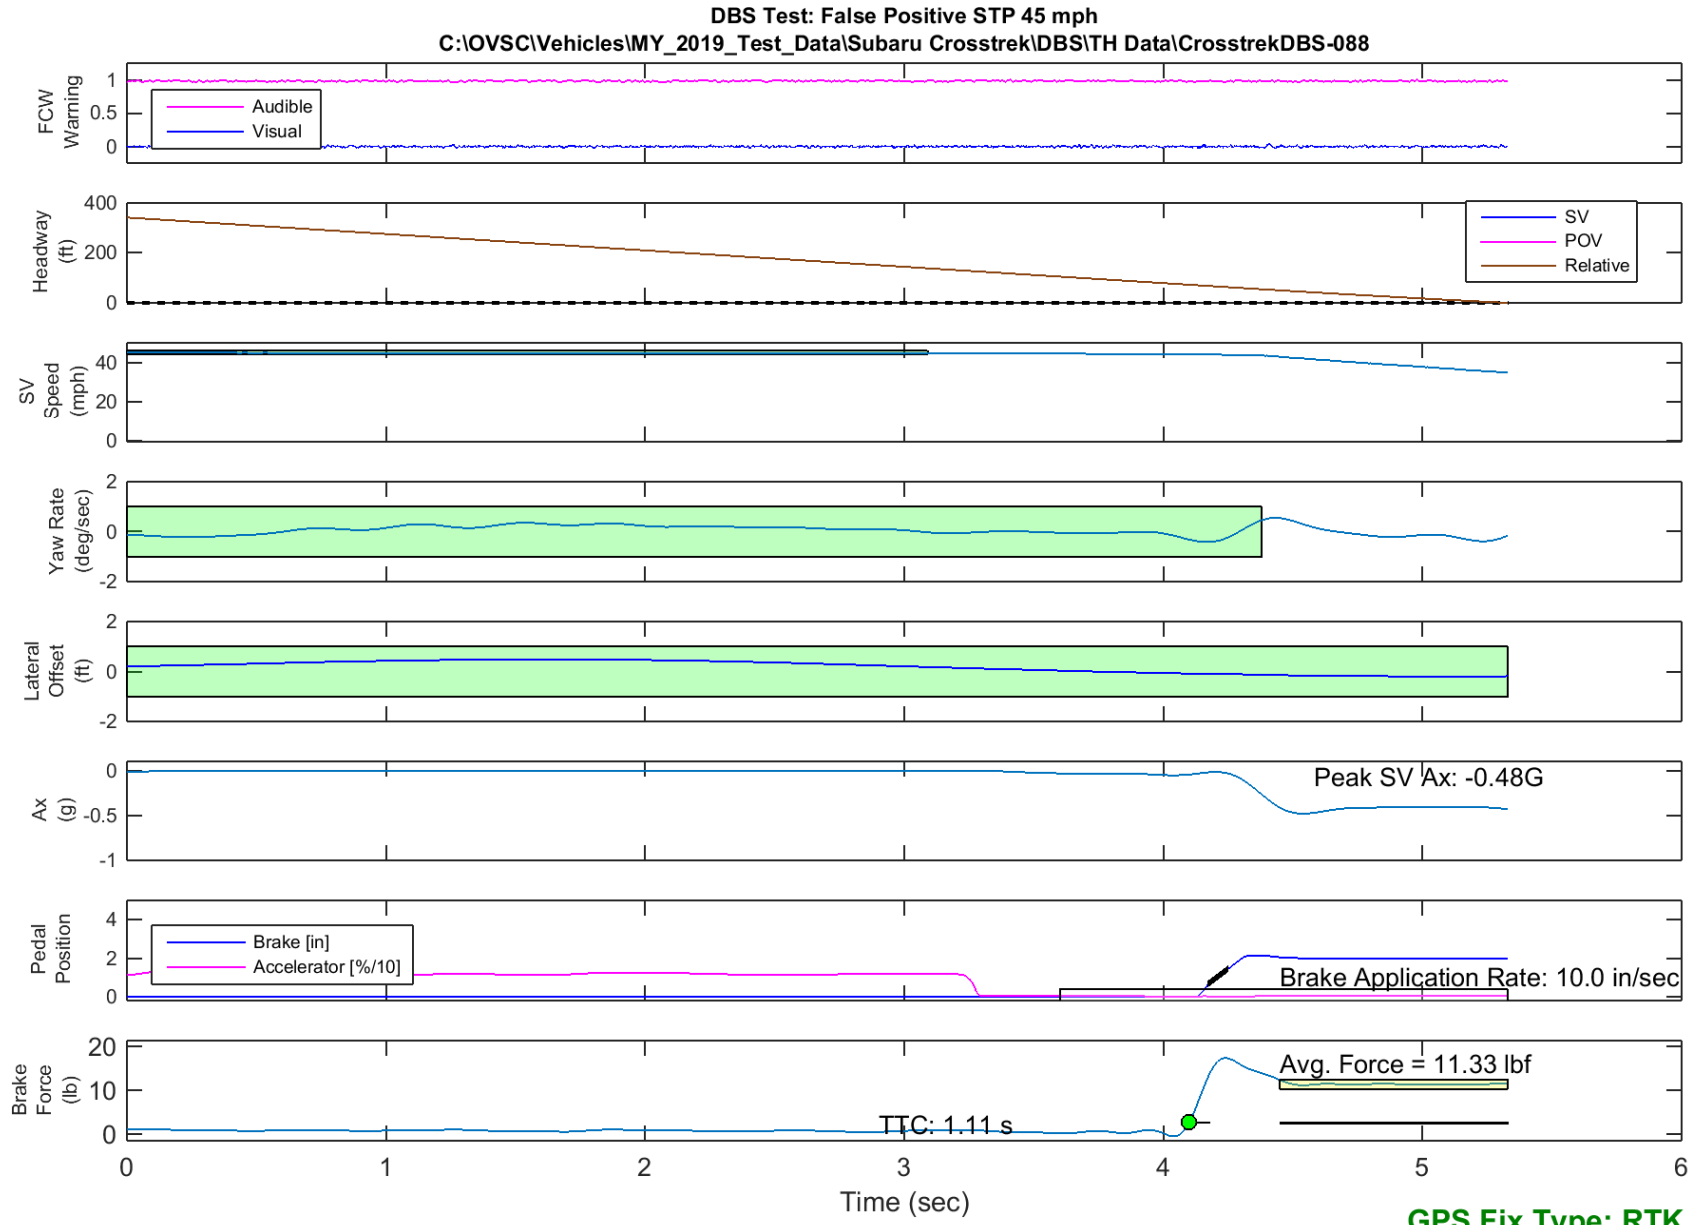


Figure E63. Time History for DBS Run 88, SV Encounters Steel Trench Plate, SV 45 mph

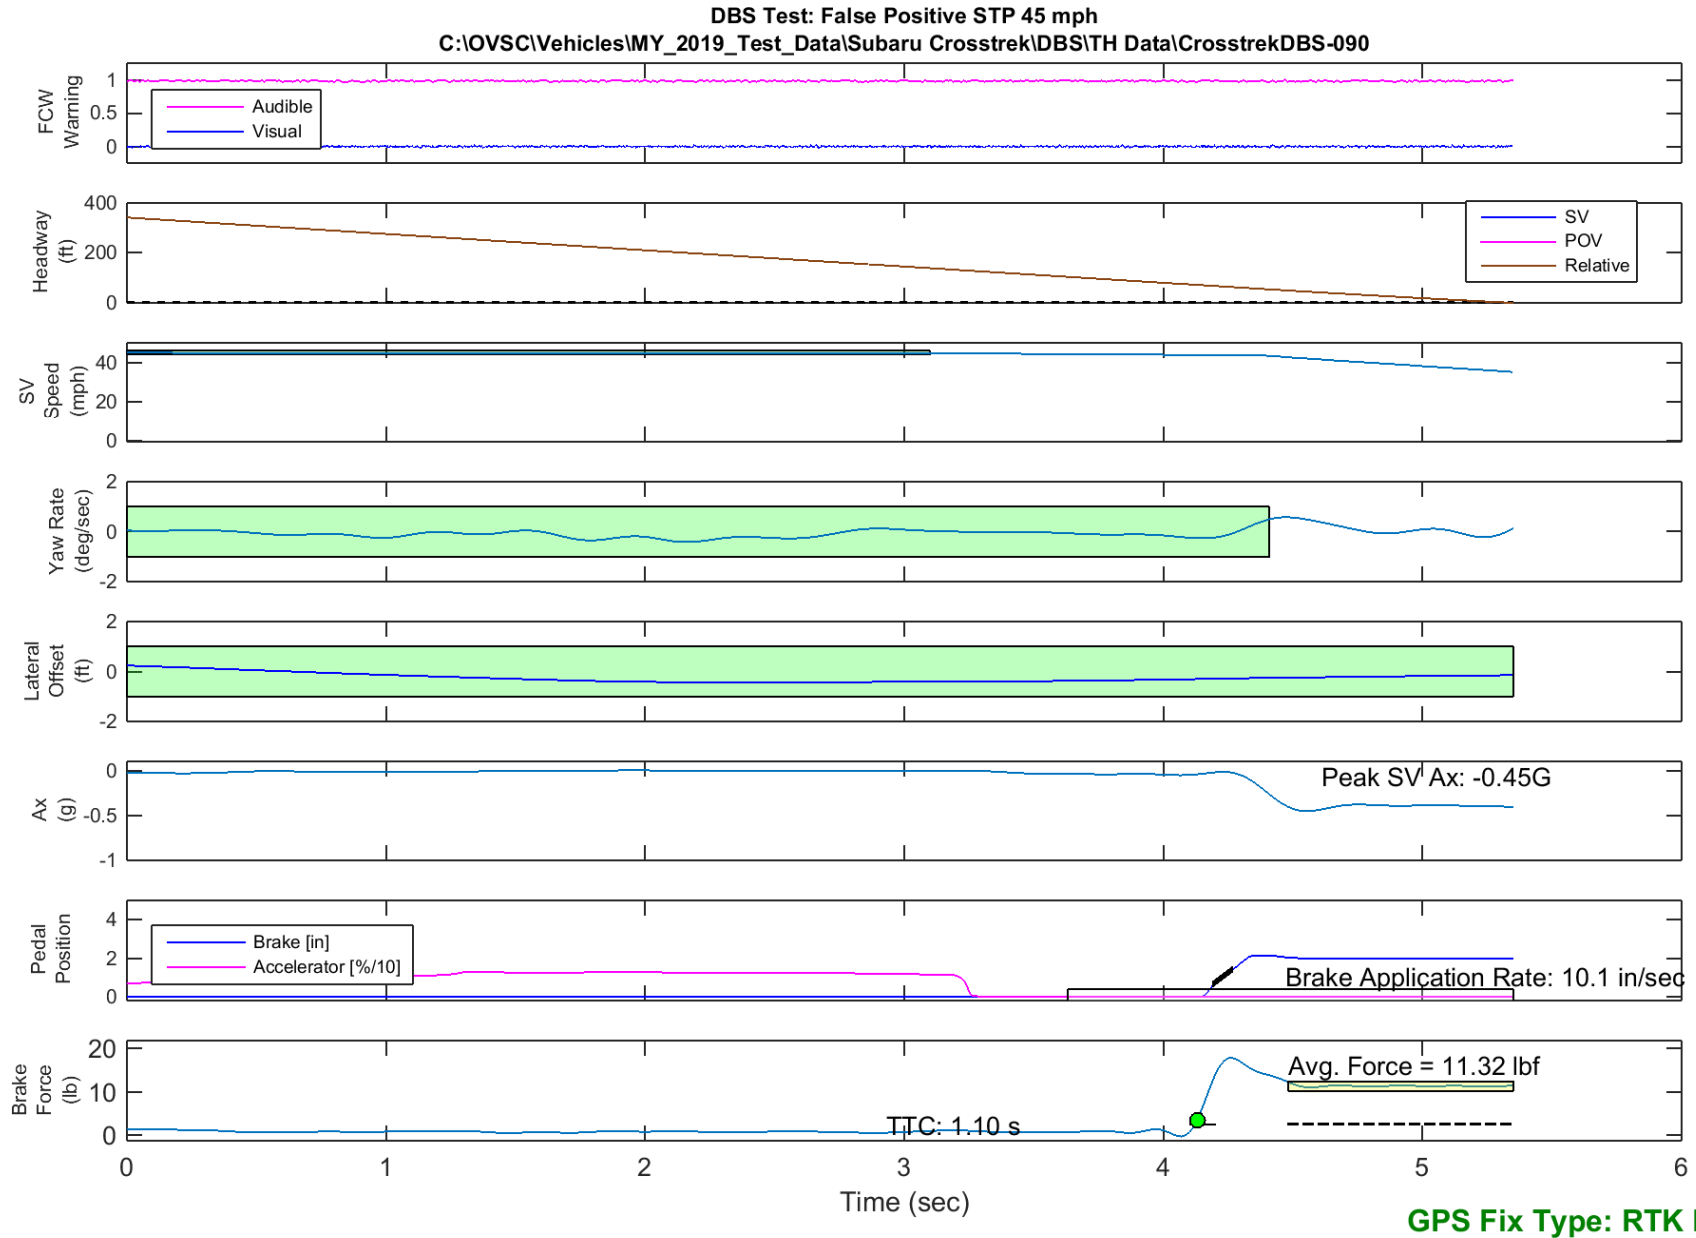


Figure E64. Time History for DBS Run 90, SV Encounters Steel Trench Plate, SV 45 mph

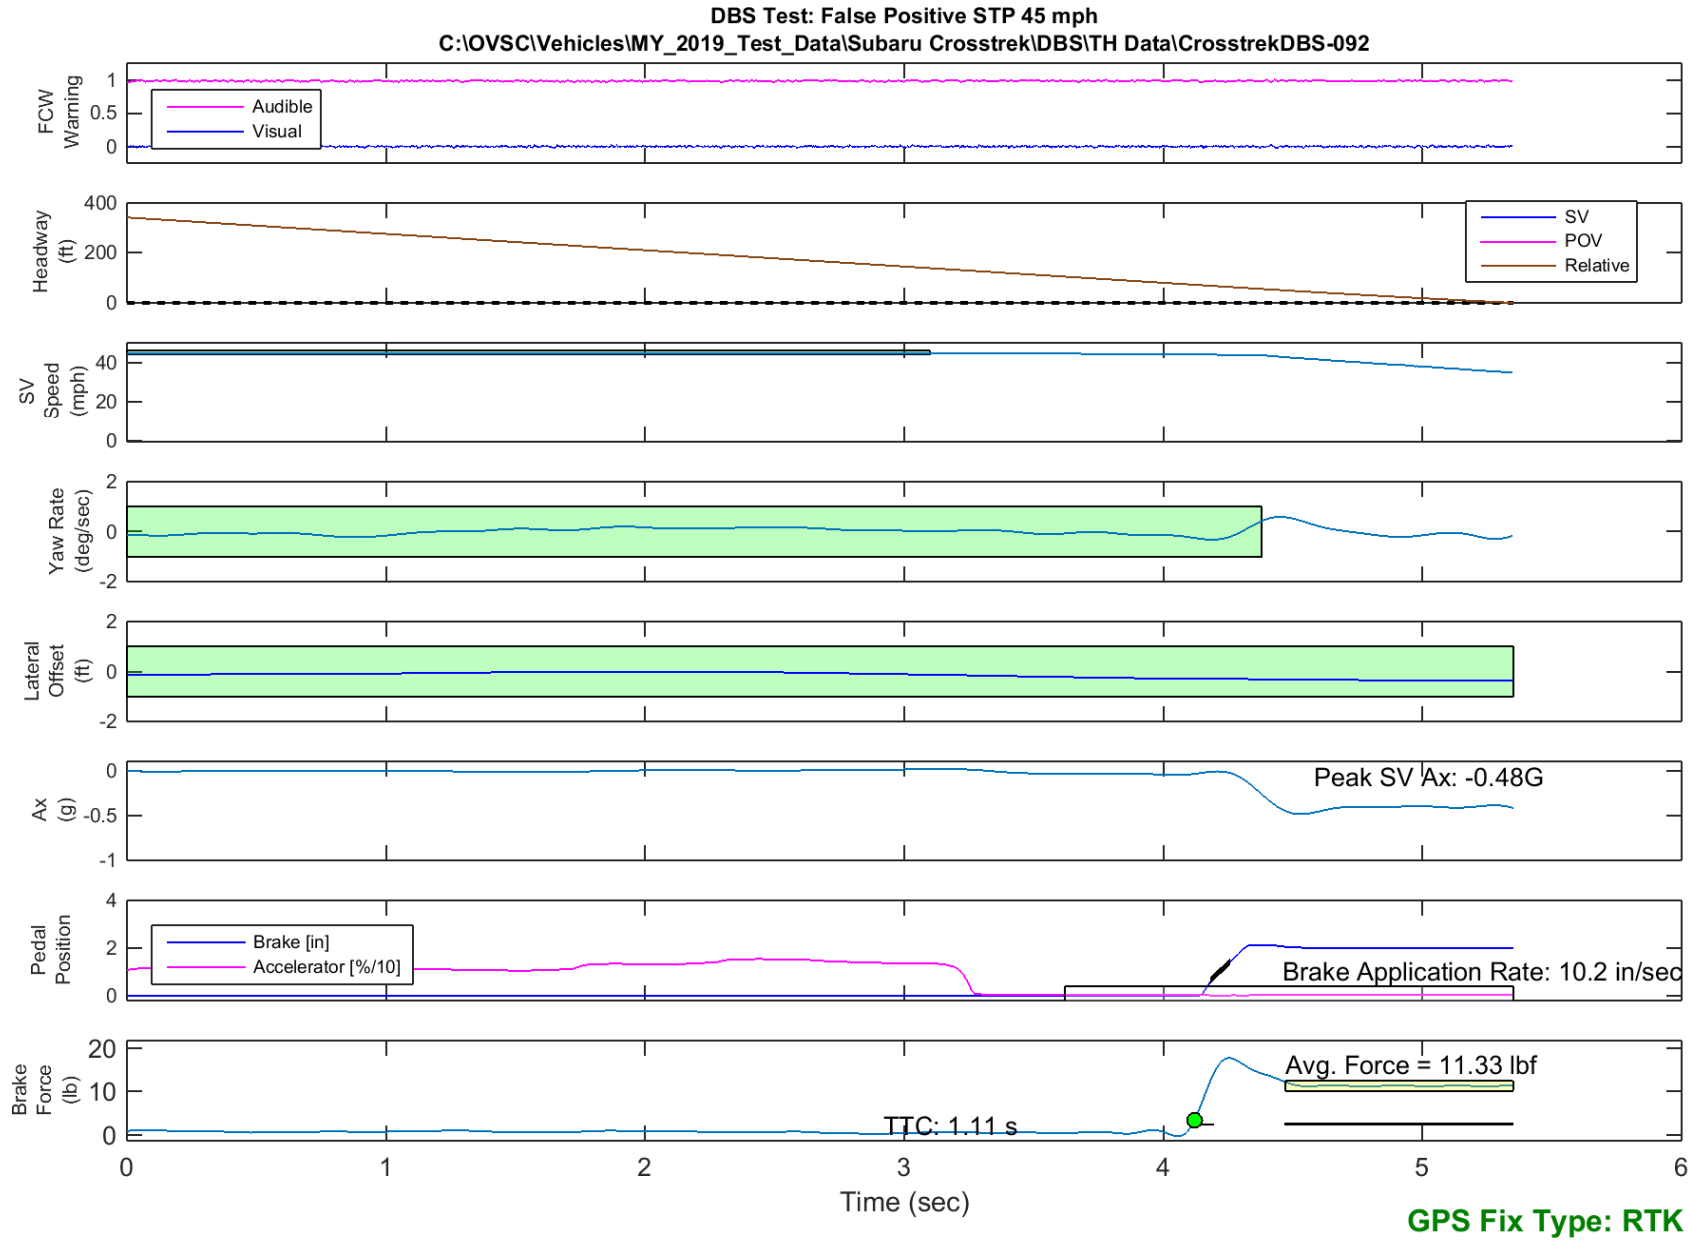


Figure E65. Time History for DBS Run 92, SV Encounters Steel Trench Plate, SV 45 mph

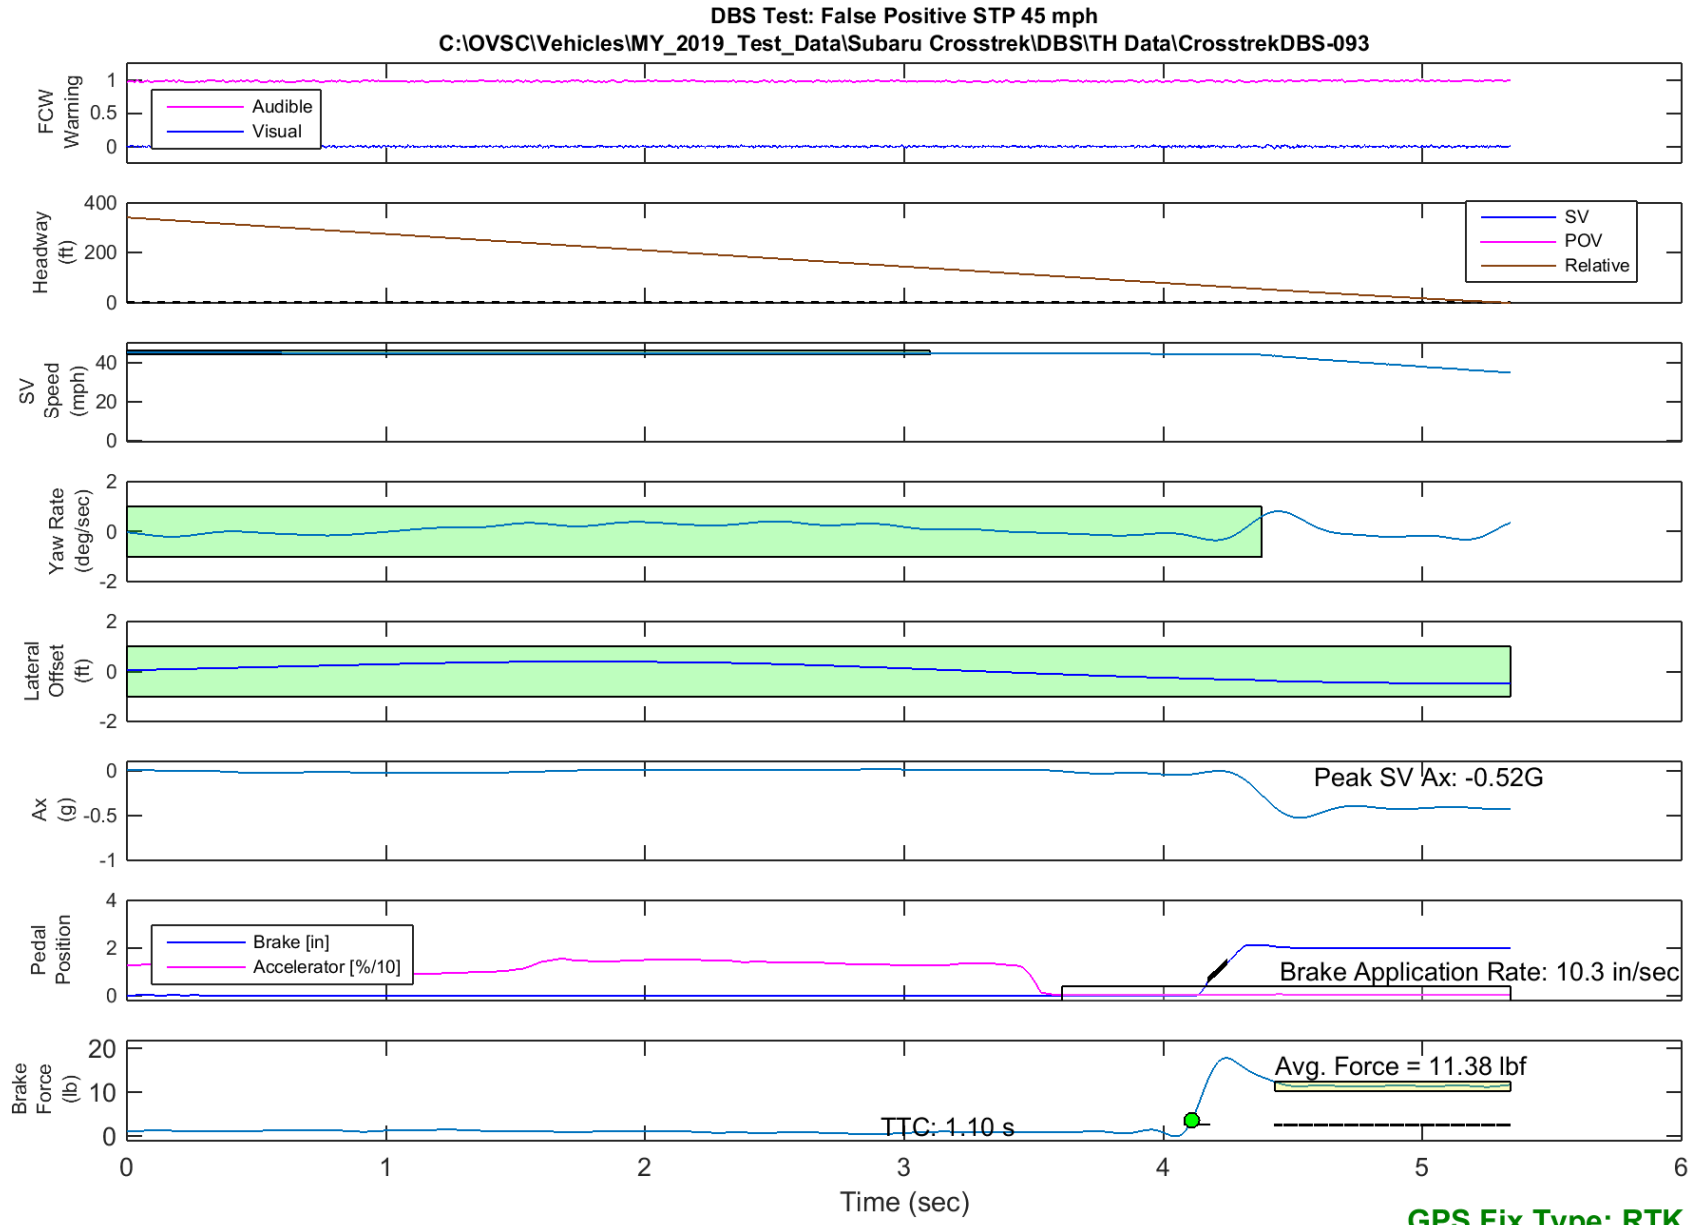


Figure E66. Time History for DBS Run 93, SV Encounters Steel Trench Plate, SV 45 mph

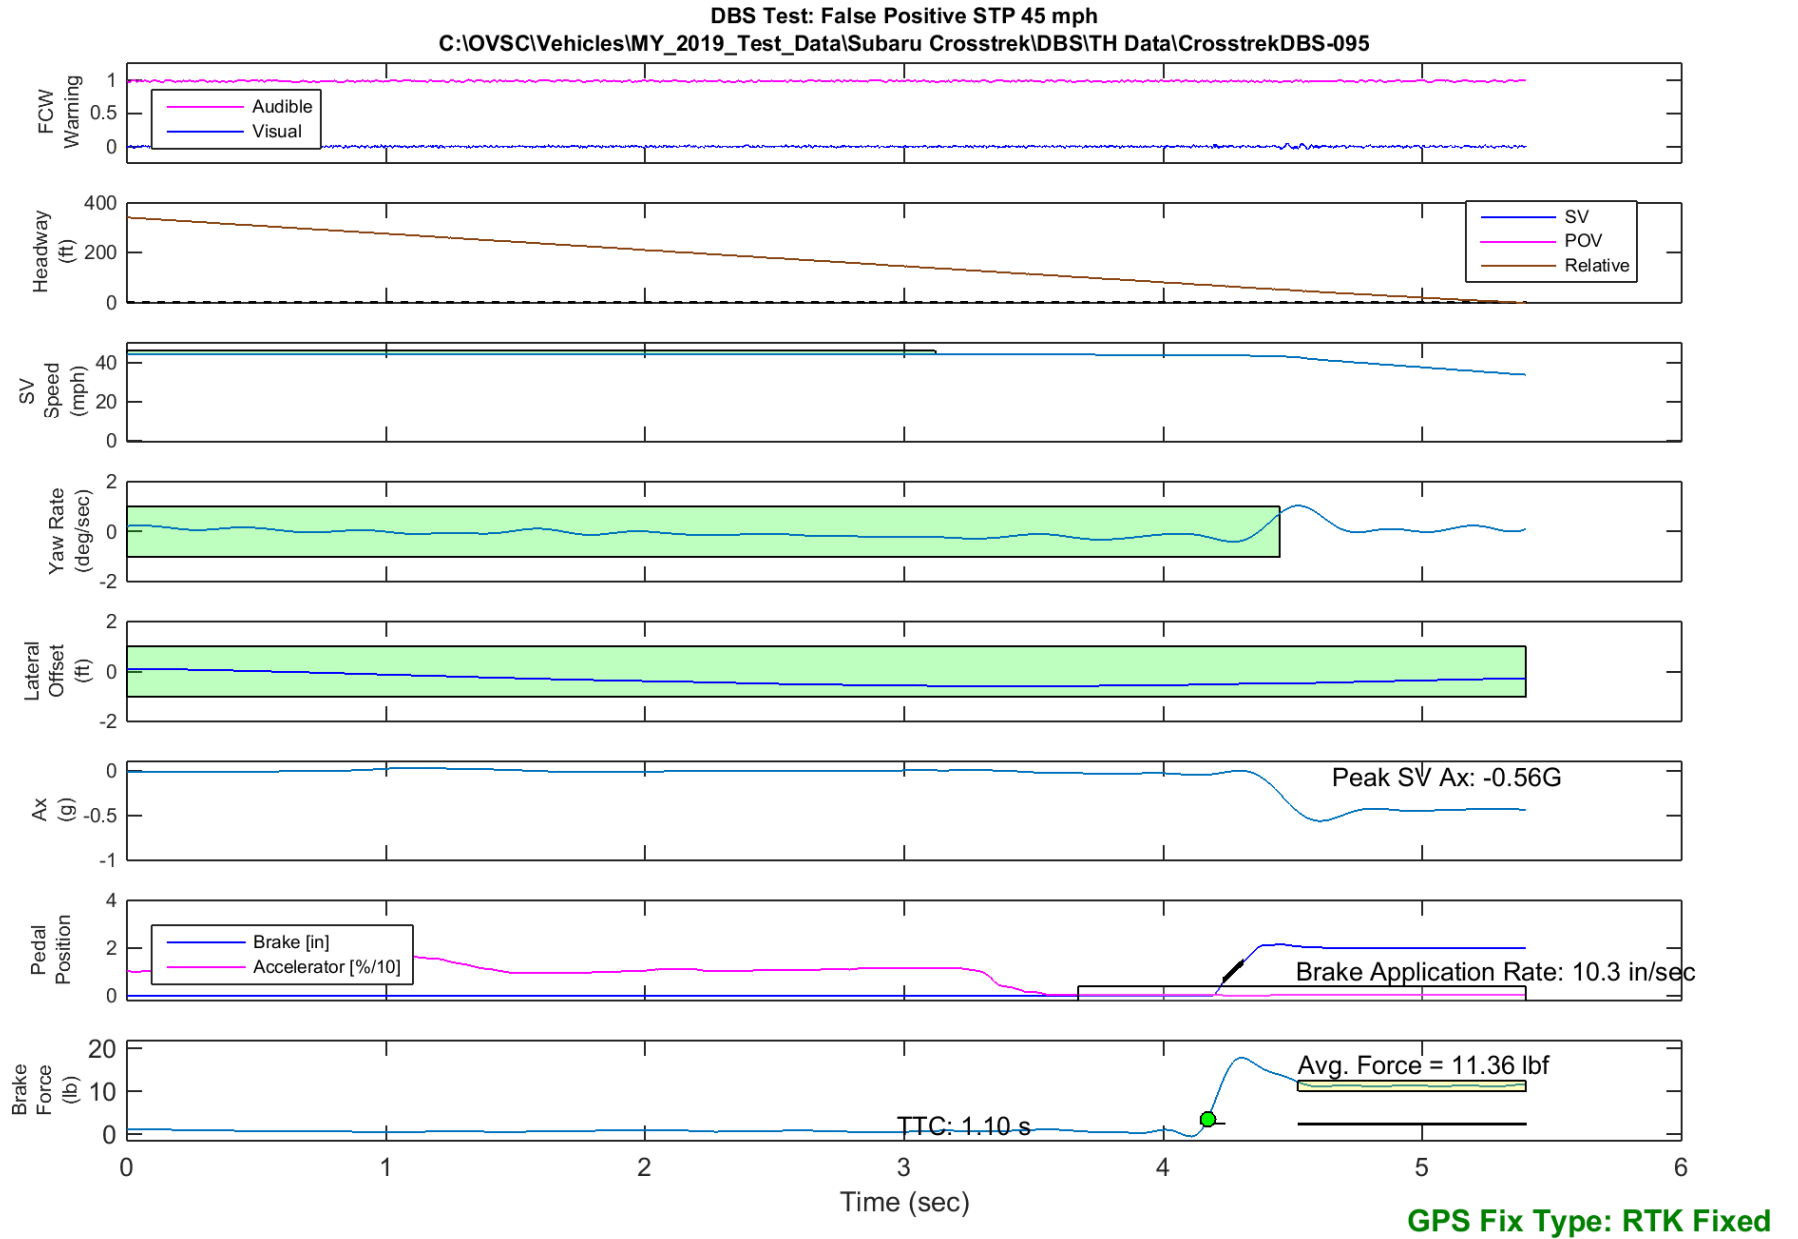


Figure E67. Time History for DBS Run 95, SV Encounters Steel Trench Plate, SV 45 mph

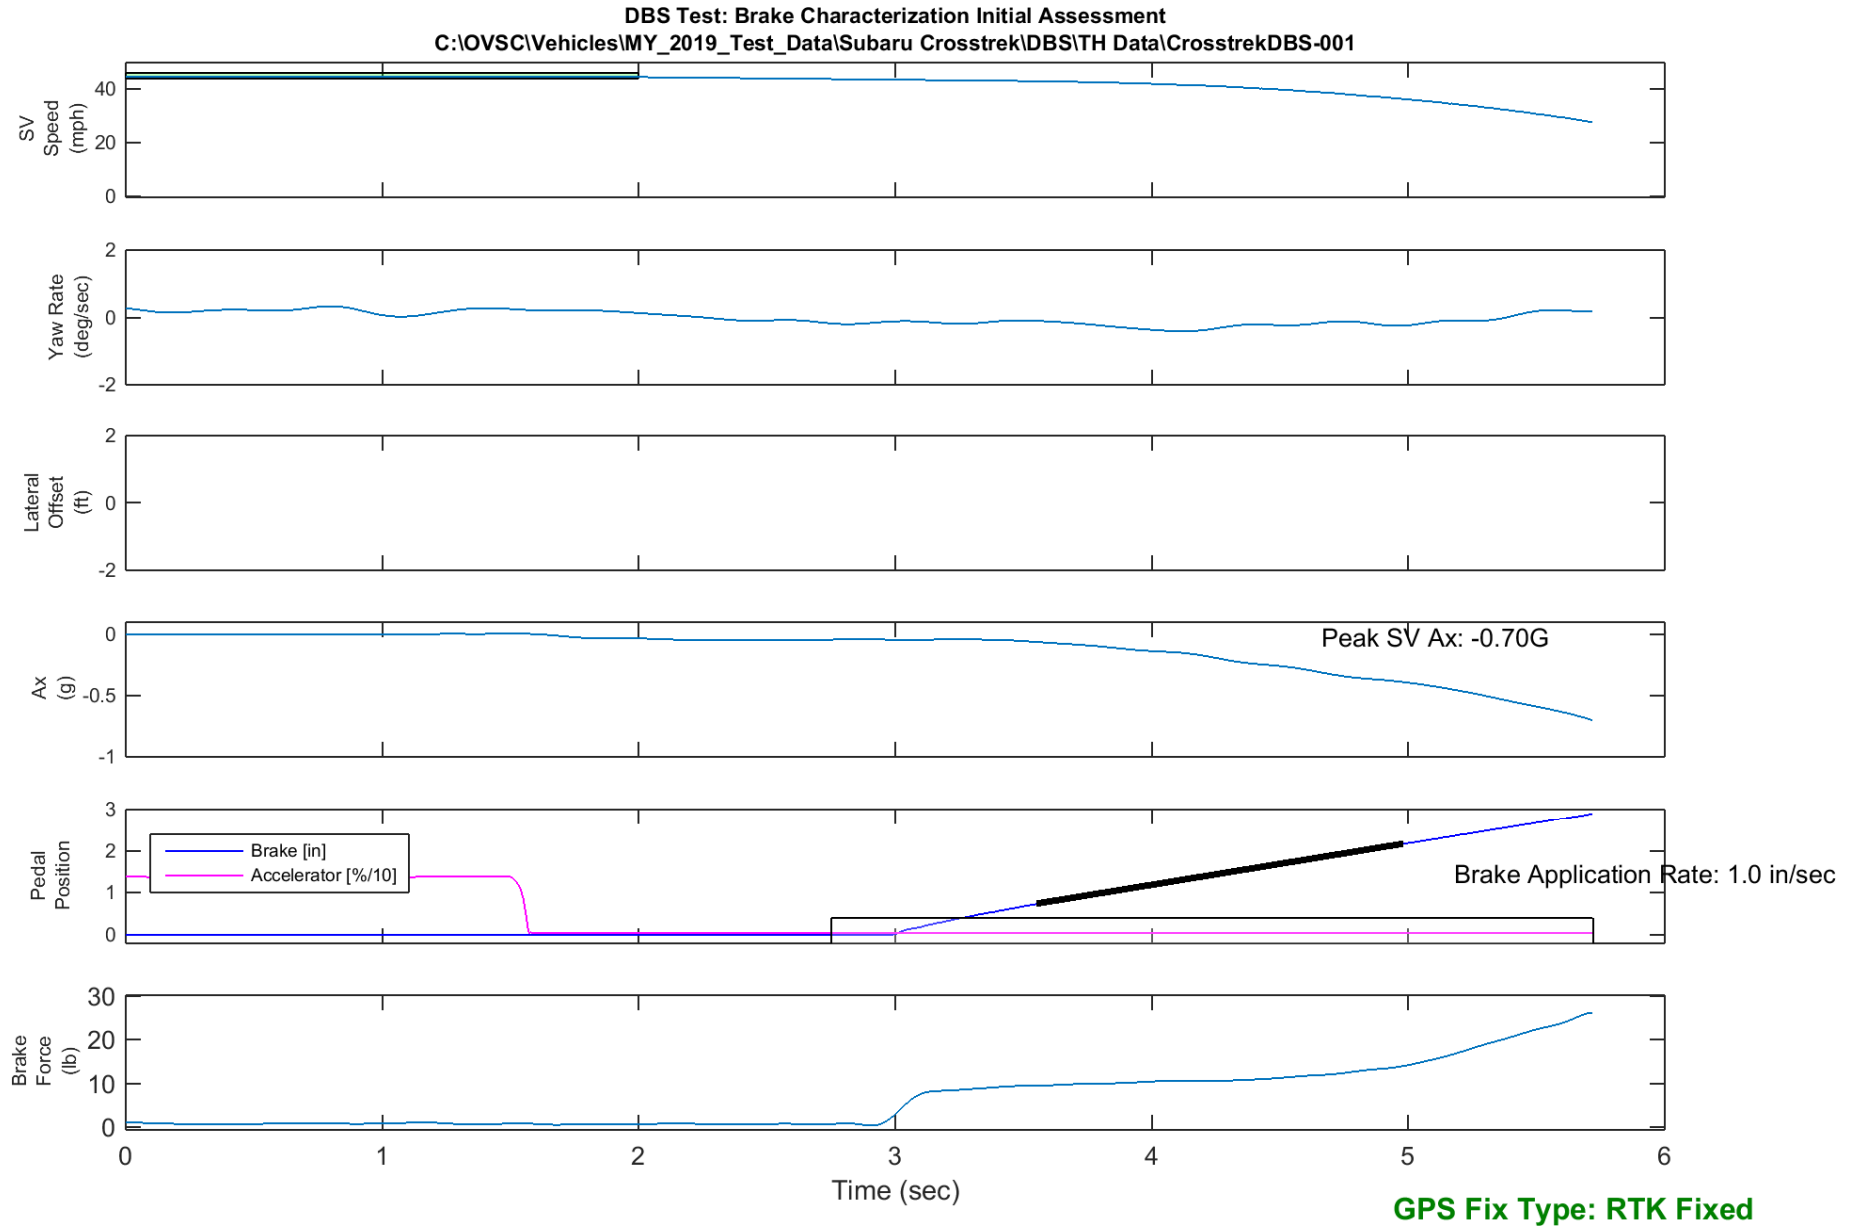


Figure E68. Time History for DBS Run 1, Brake Characterization Initial

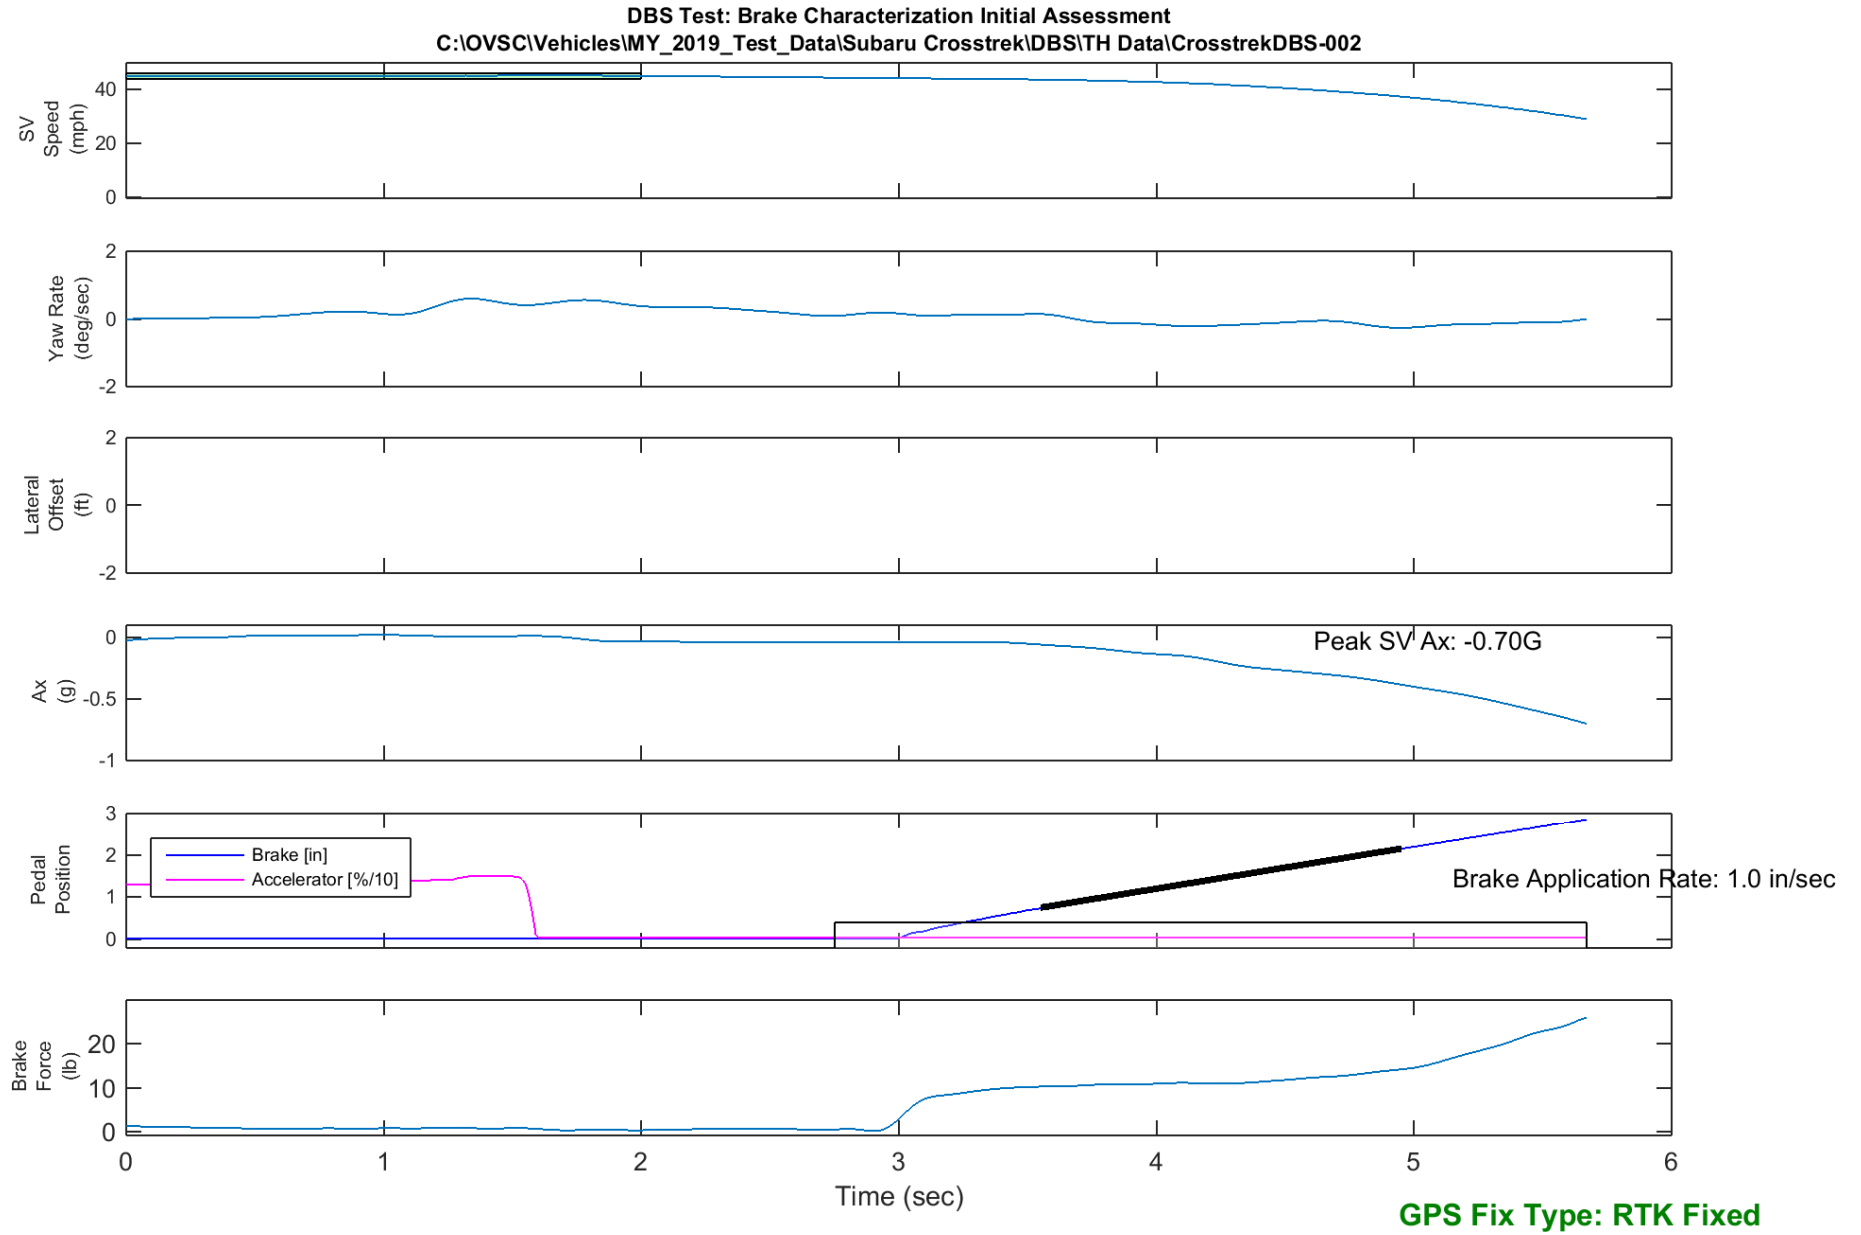


Figure E69. Time History for DBS Run 2, Brake Characterization Initial



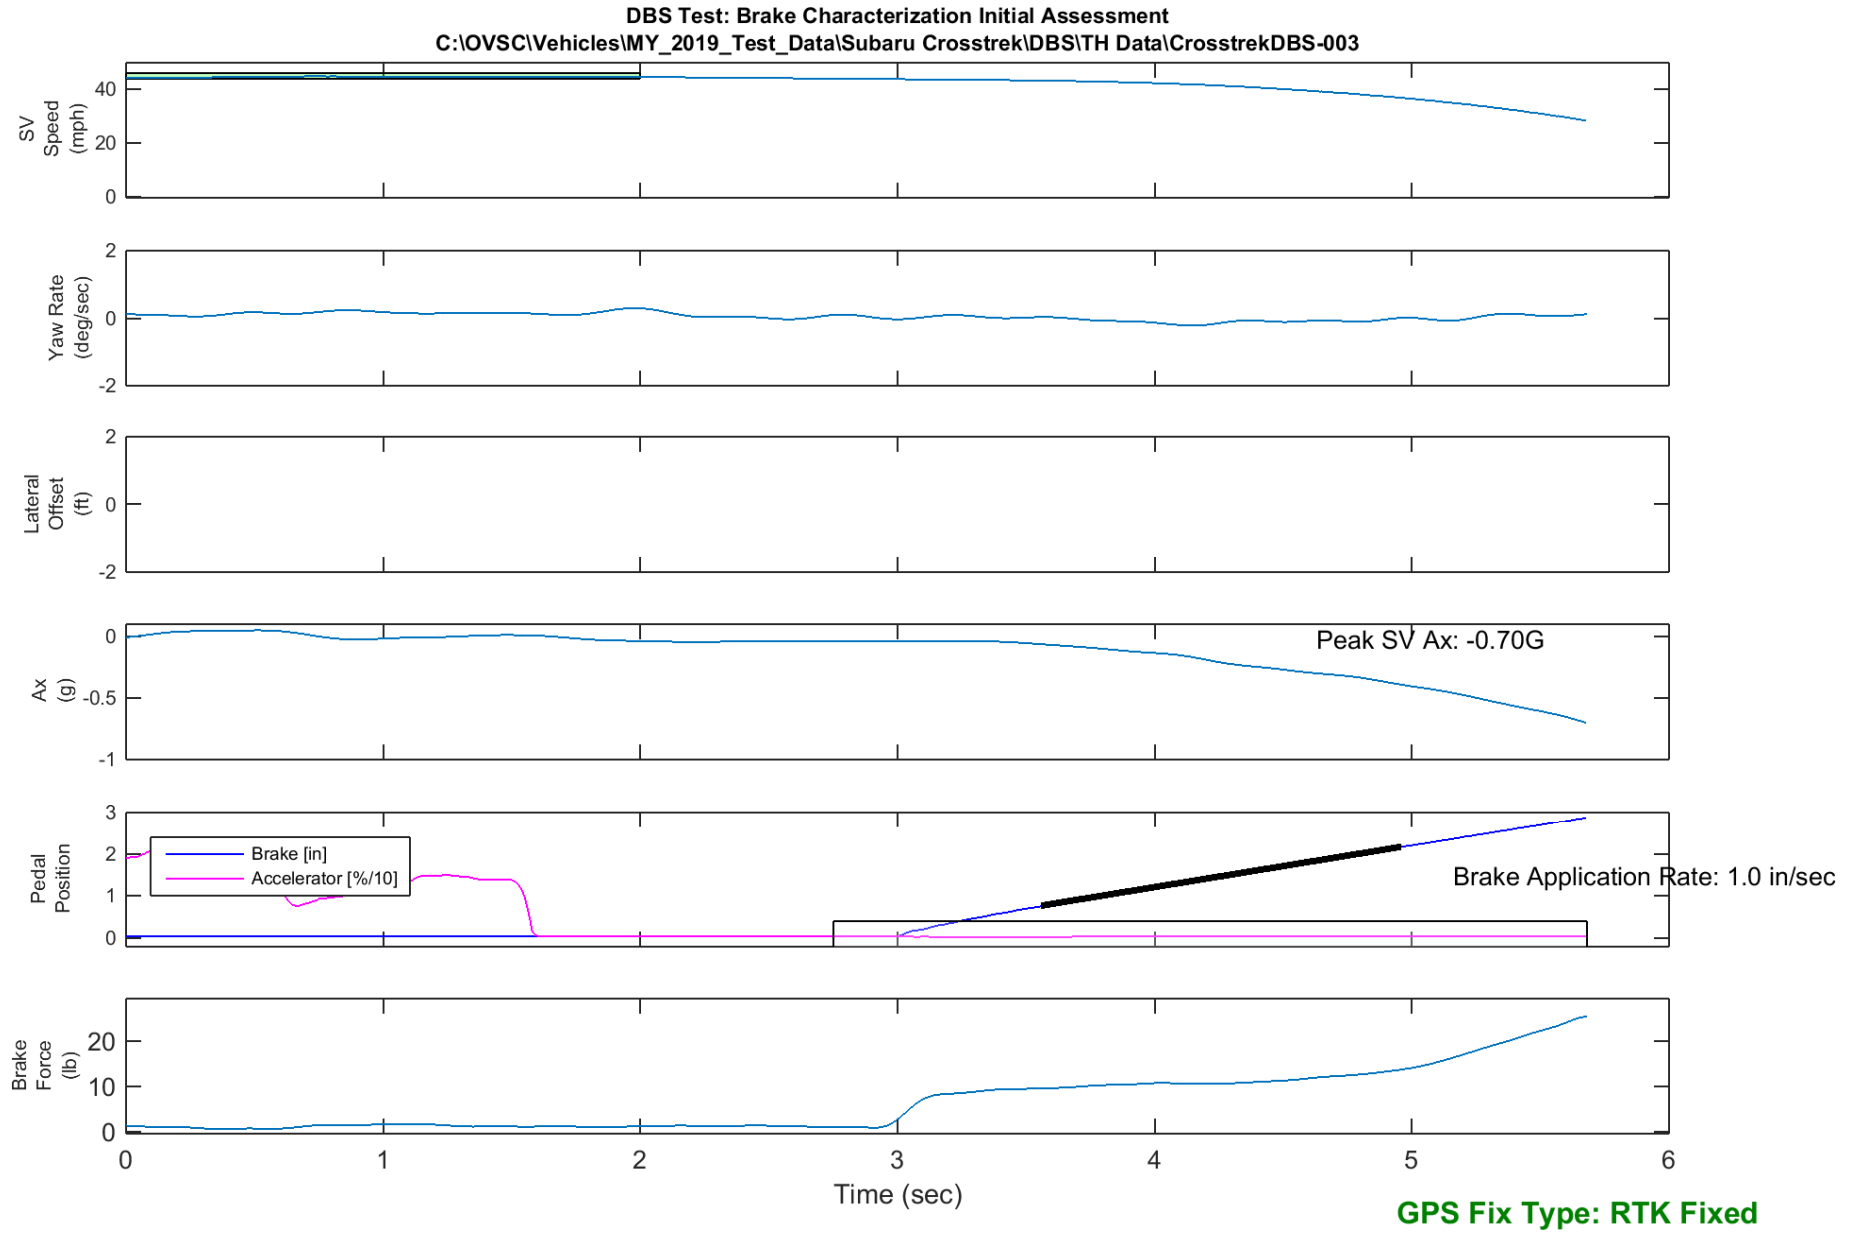


Figure E70. Time History for DBS Run 3, Brake Characterization Initial

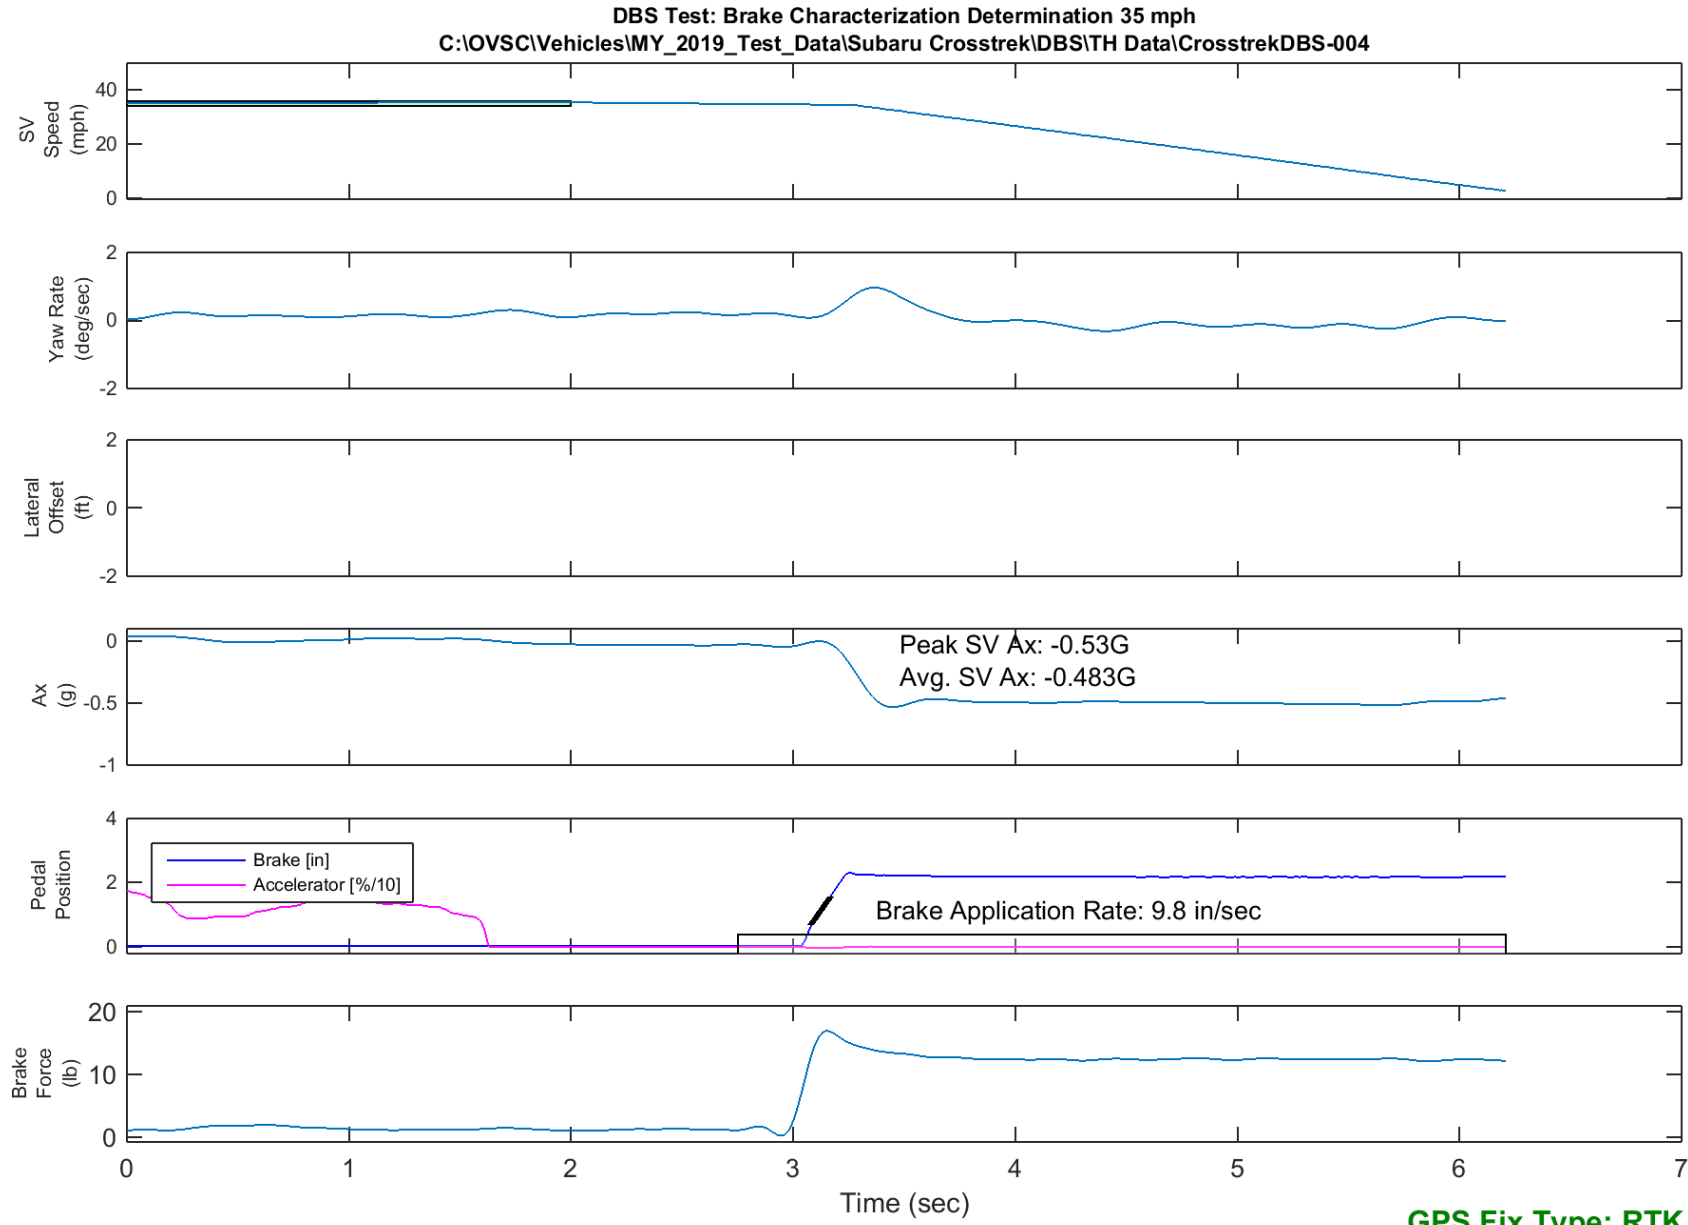

GPS Fix Type: RTK Fixed

Figure E71. Time History for DBS Run 4, Brake Characterization Determination 35 mph

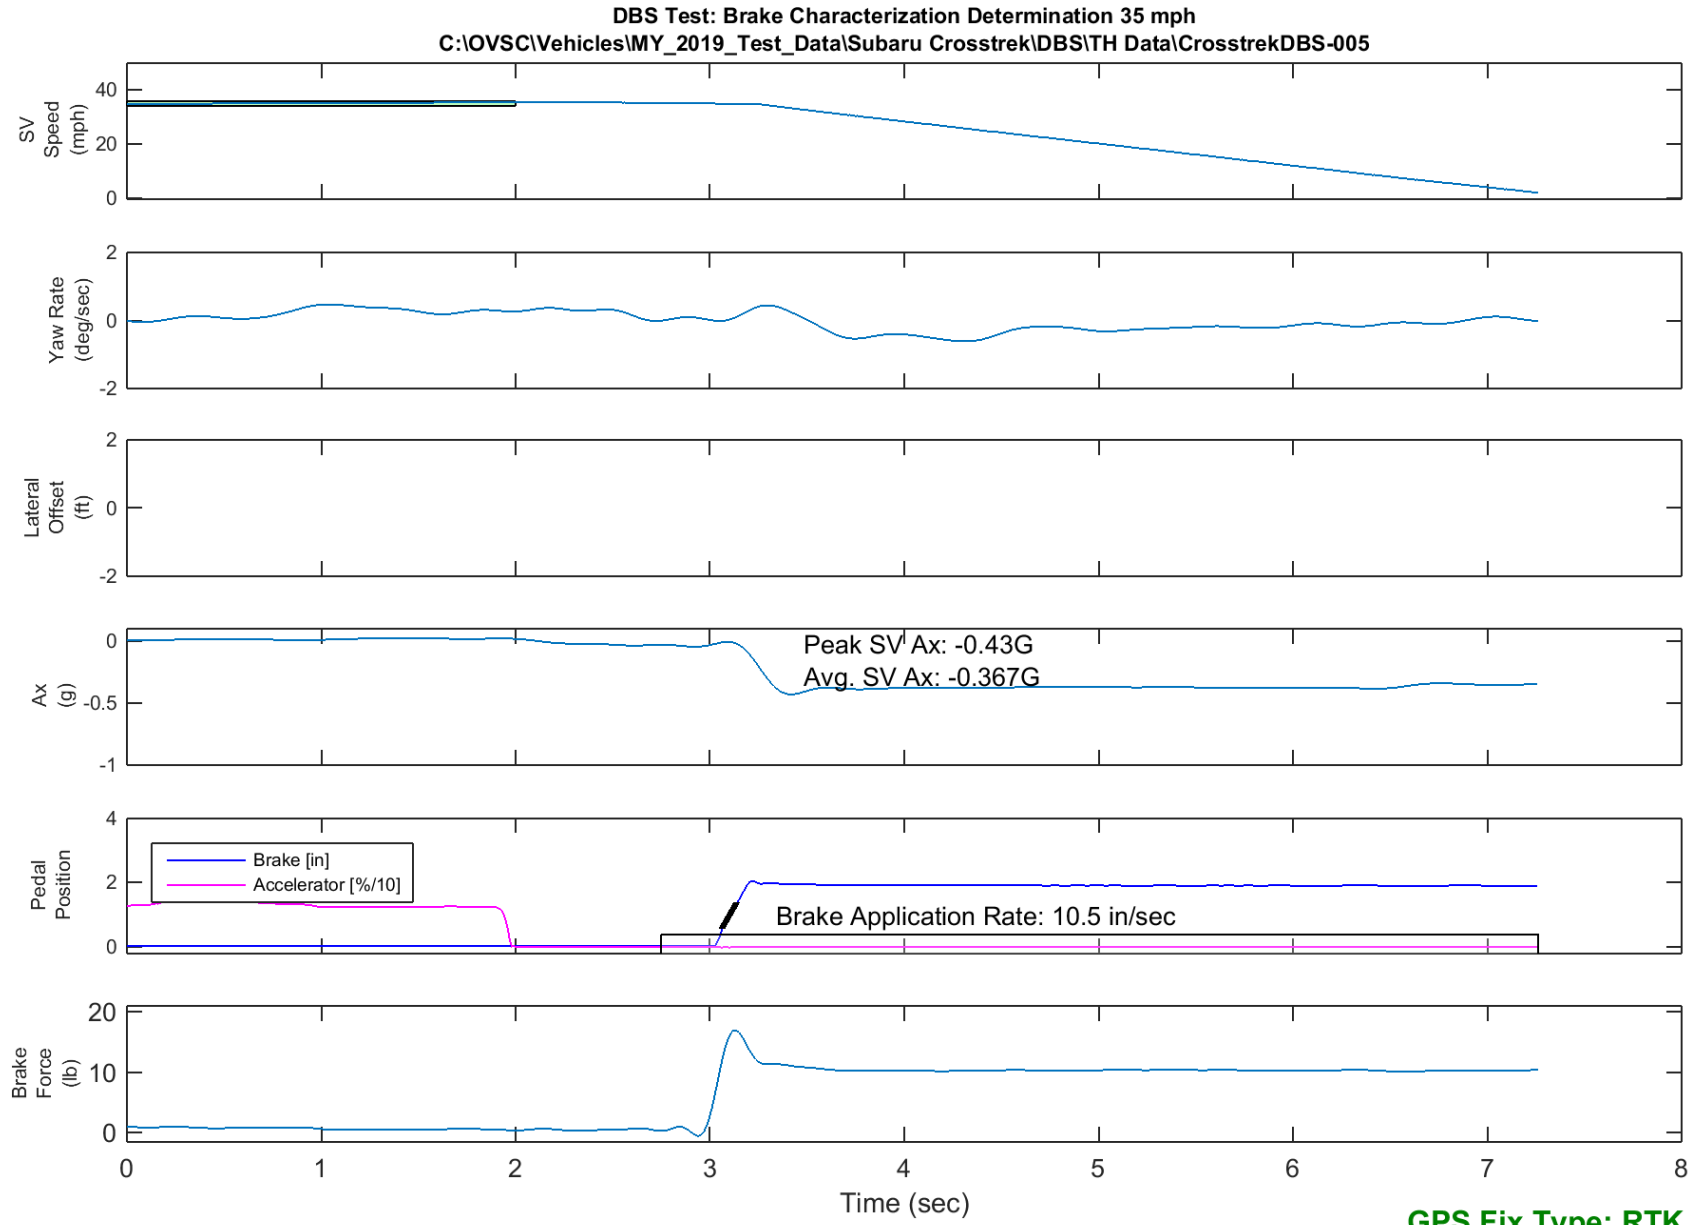

GPS Fix Type: RTK Fixed

Figure E69. Time History for DBS Run 5, Brake Characterization Determination 35 mph

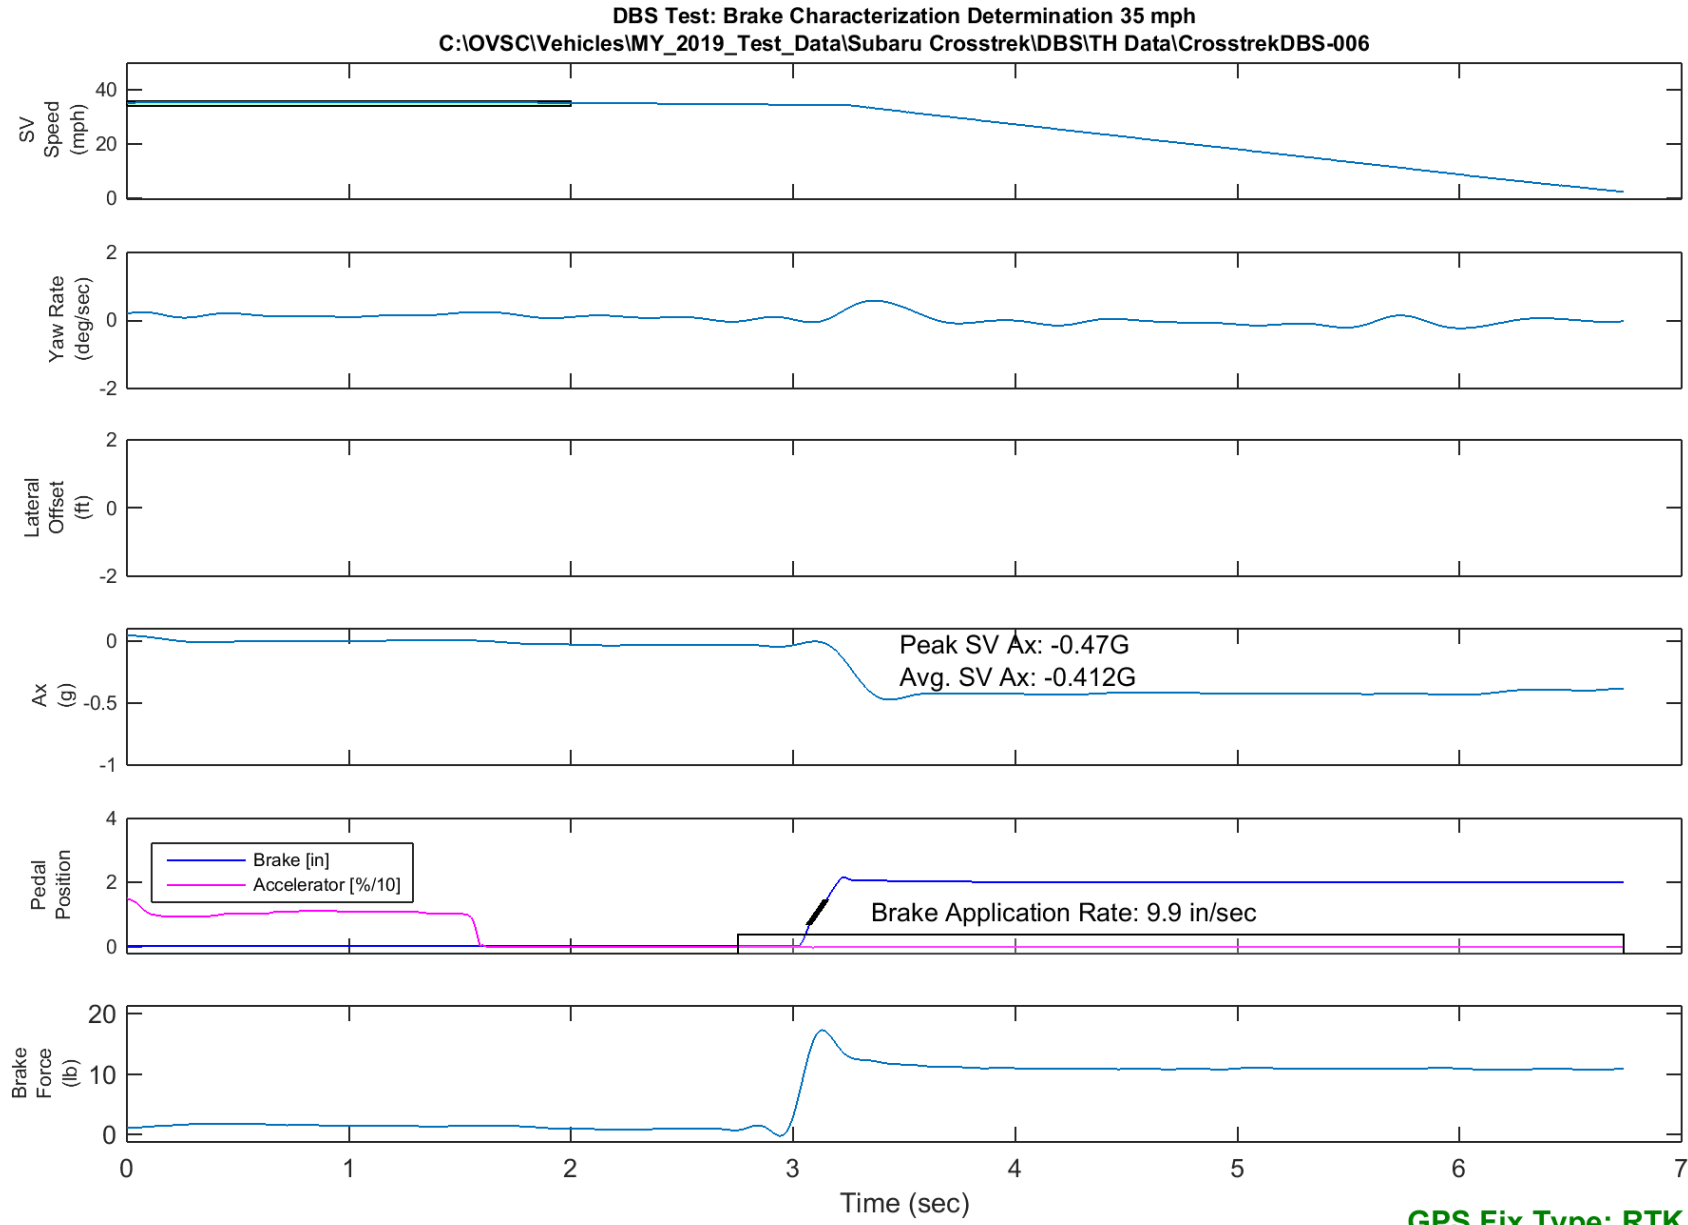


Figure E70. Time History for DBS Run 6, Brake Characterization Determination 35 mph

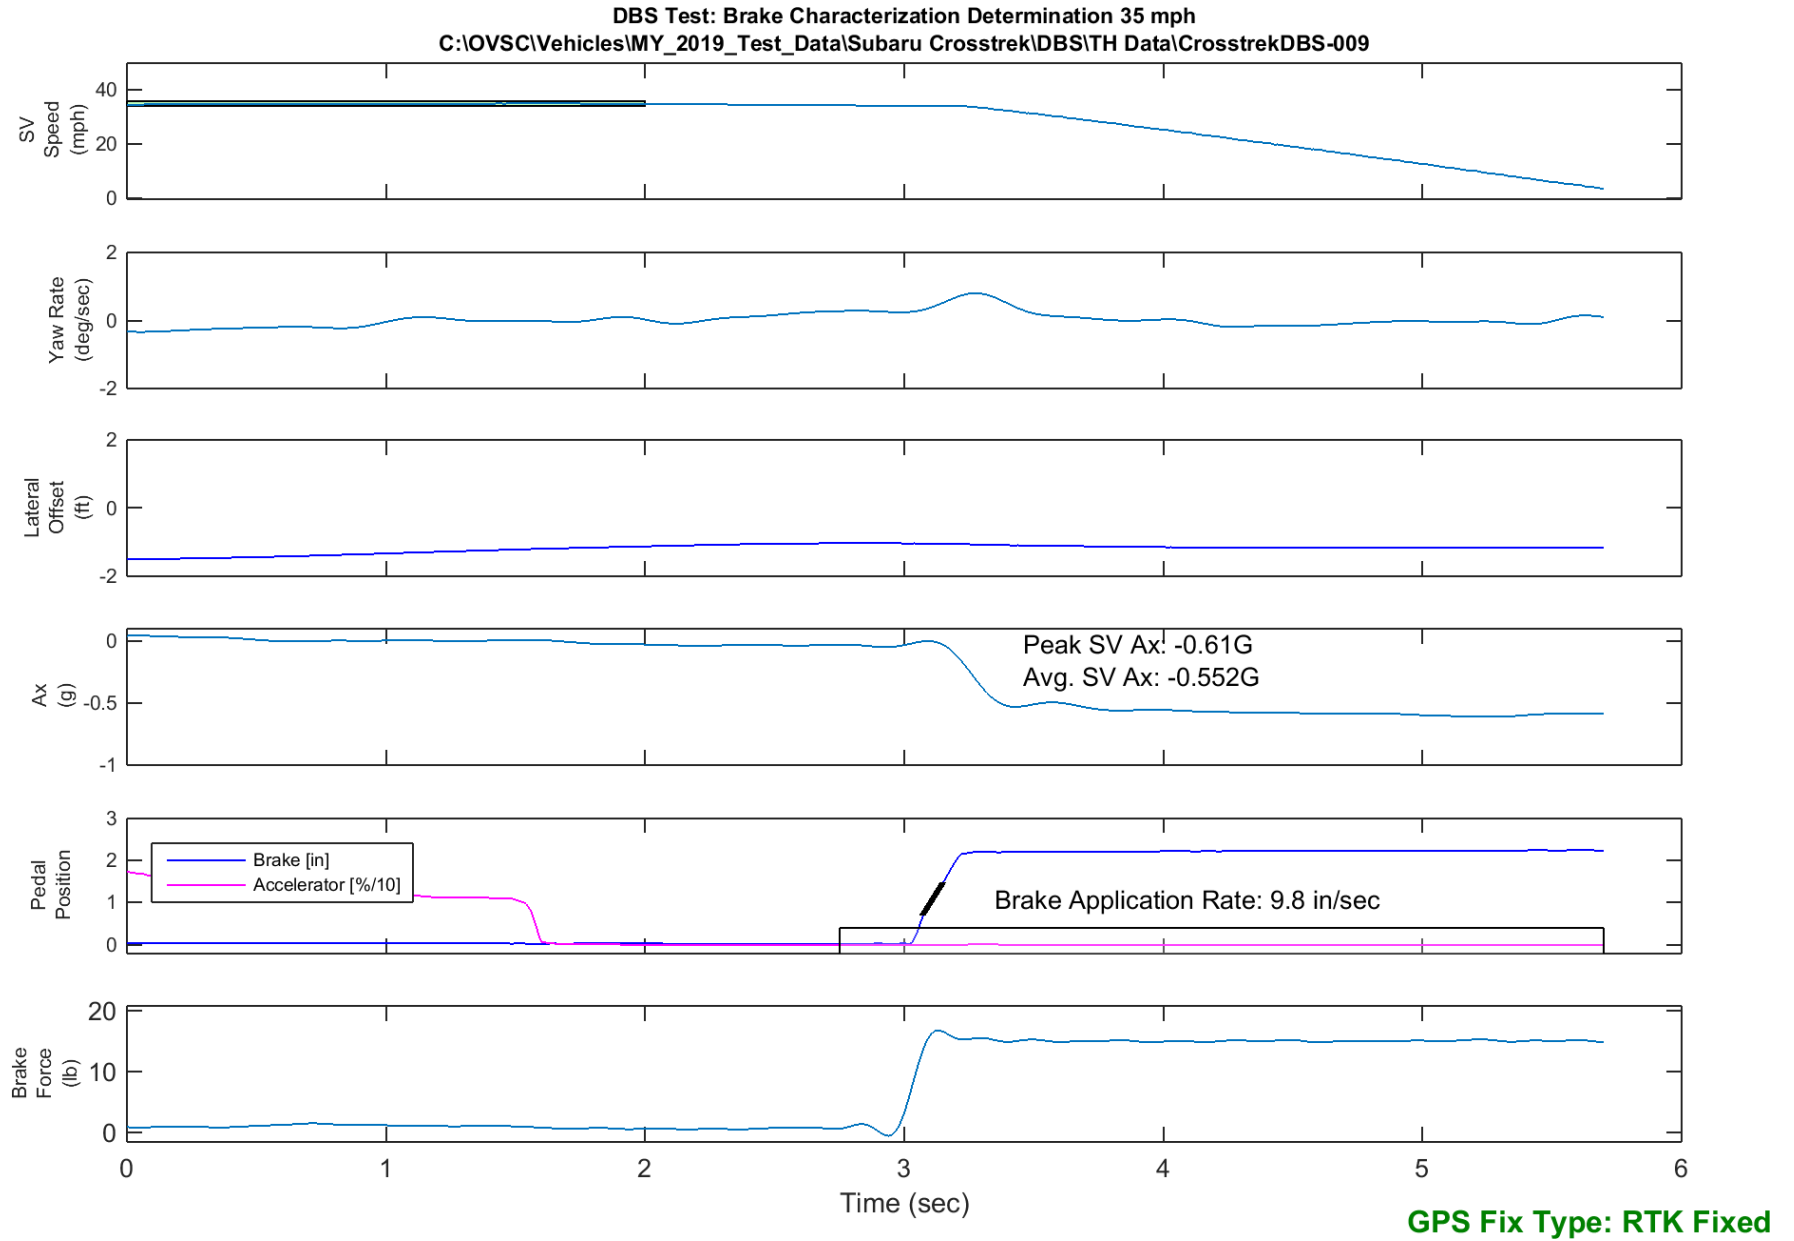


Figure E71. Time History for DBS Run 9, Brake Characterization Determination 35 mph

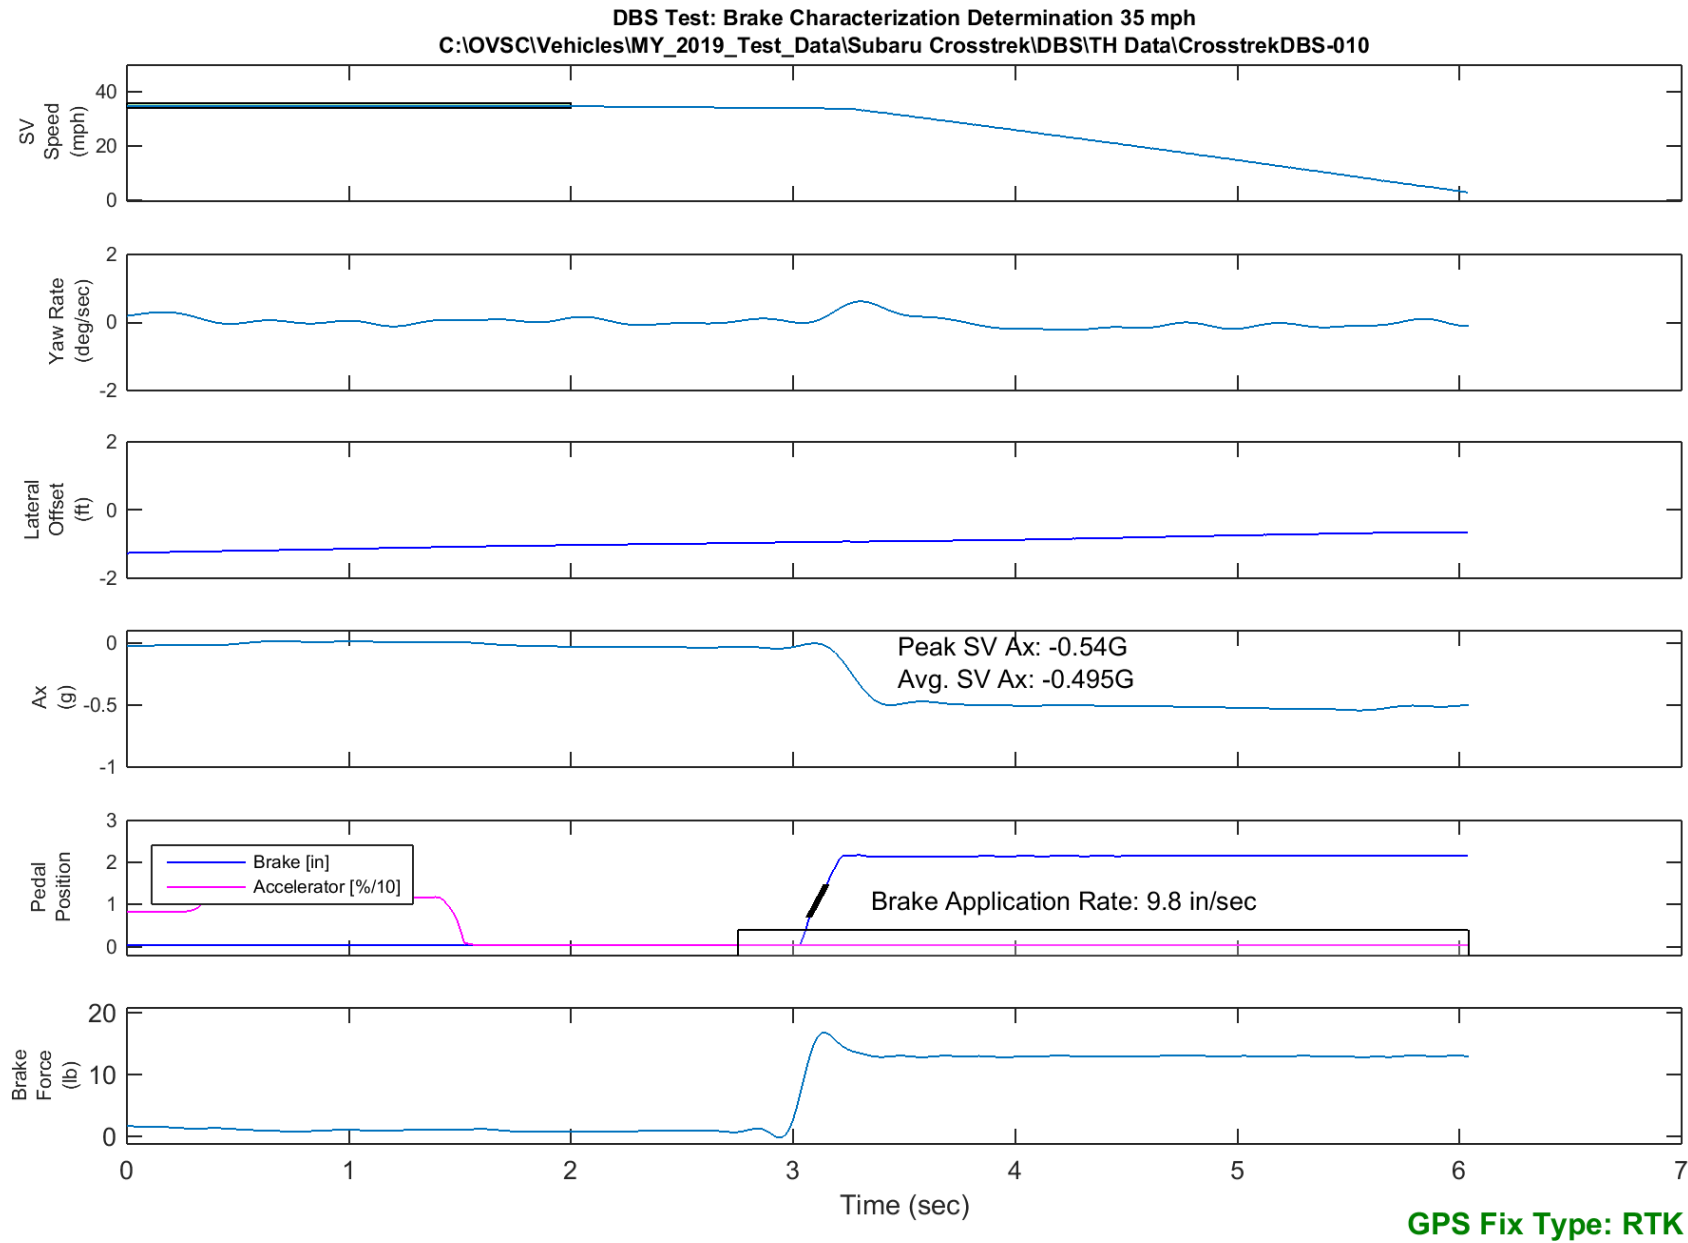


Figure E72. Time History for DBS Run 10, Brake Characterization Determination 35 mph

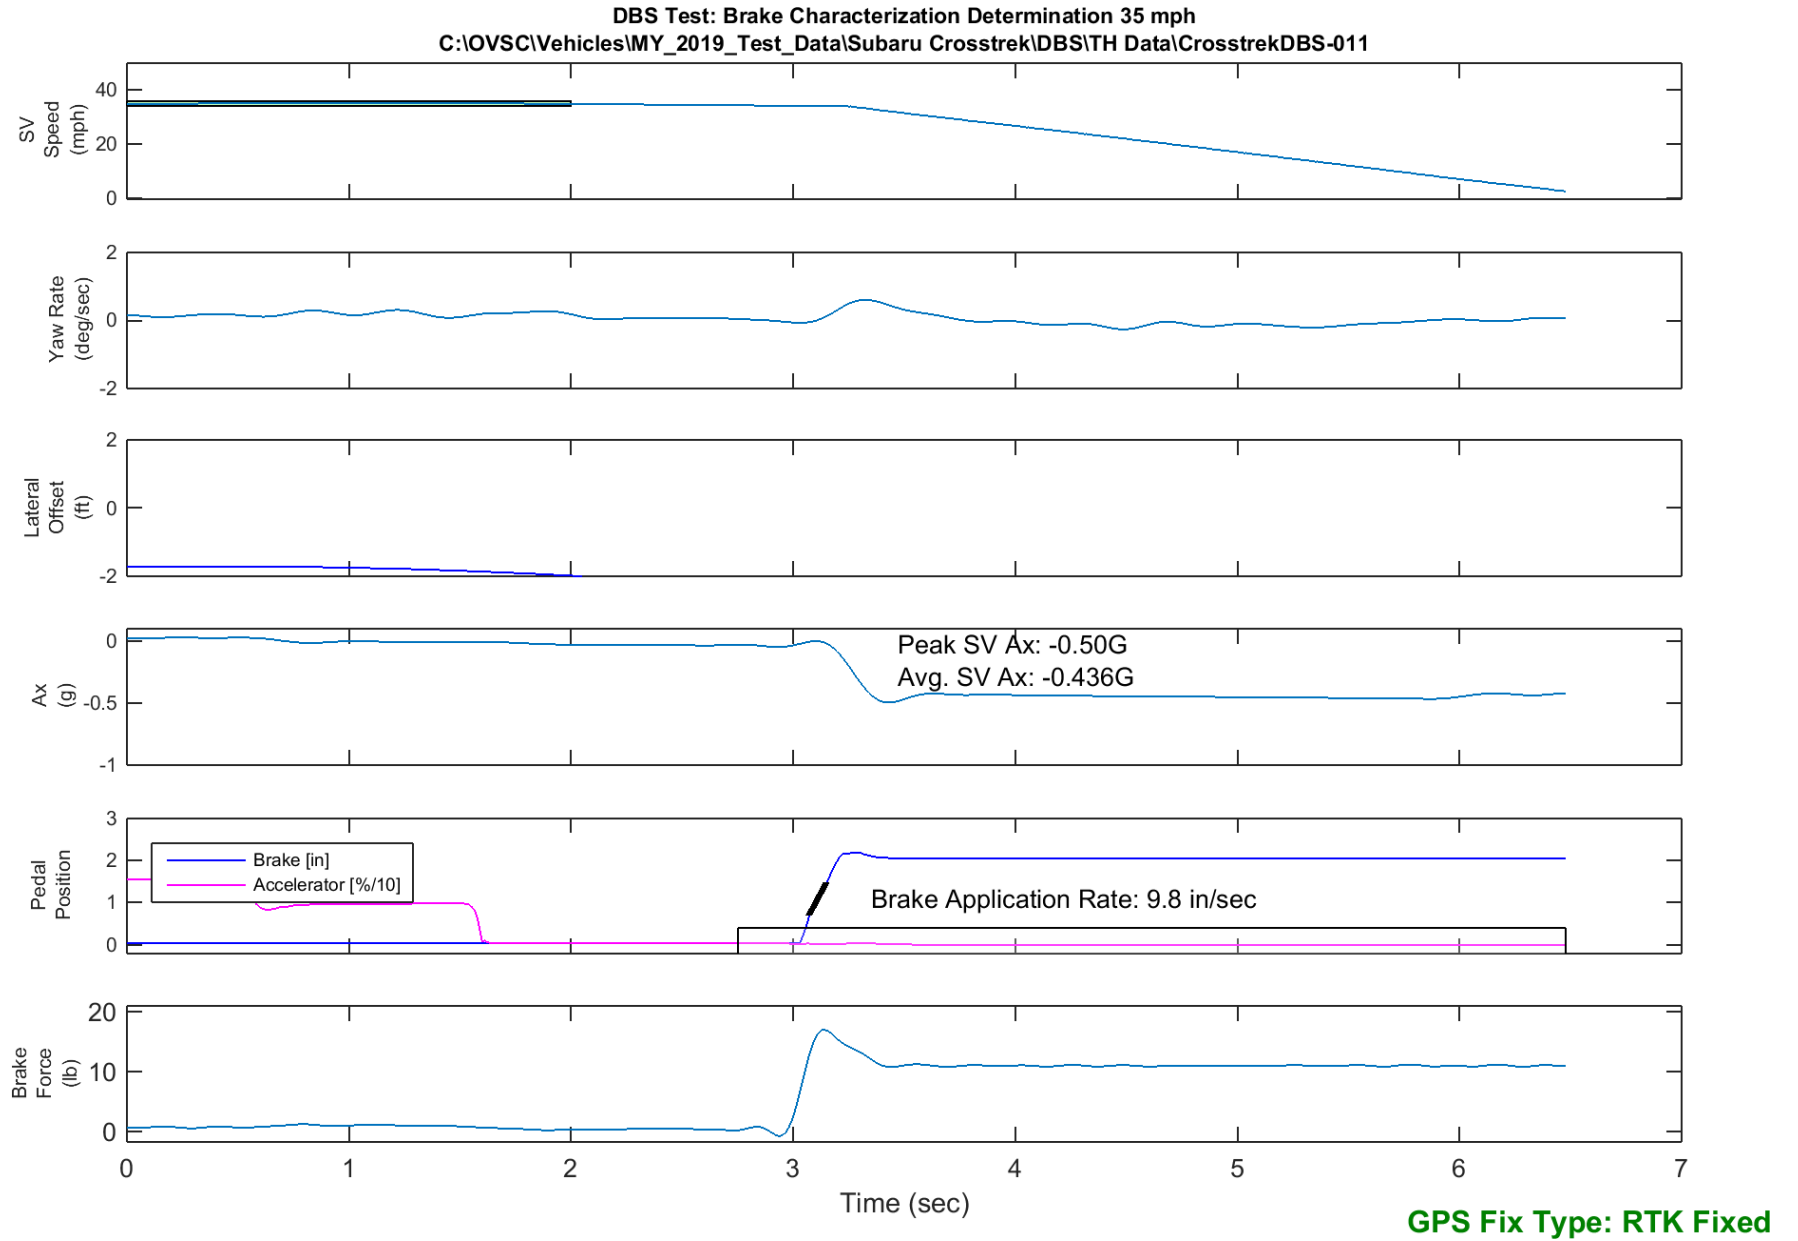


Figure E76. Time History for DBS Run 11, Brake Characterization Determination 35 mph

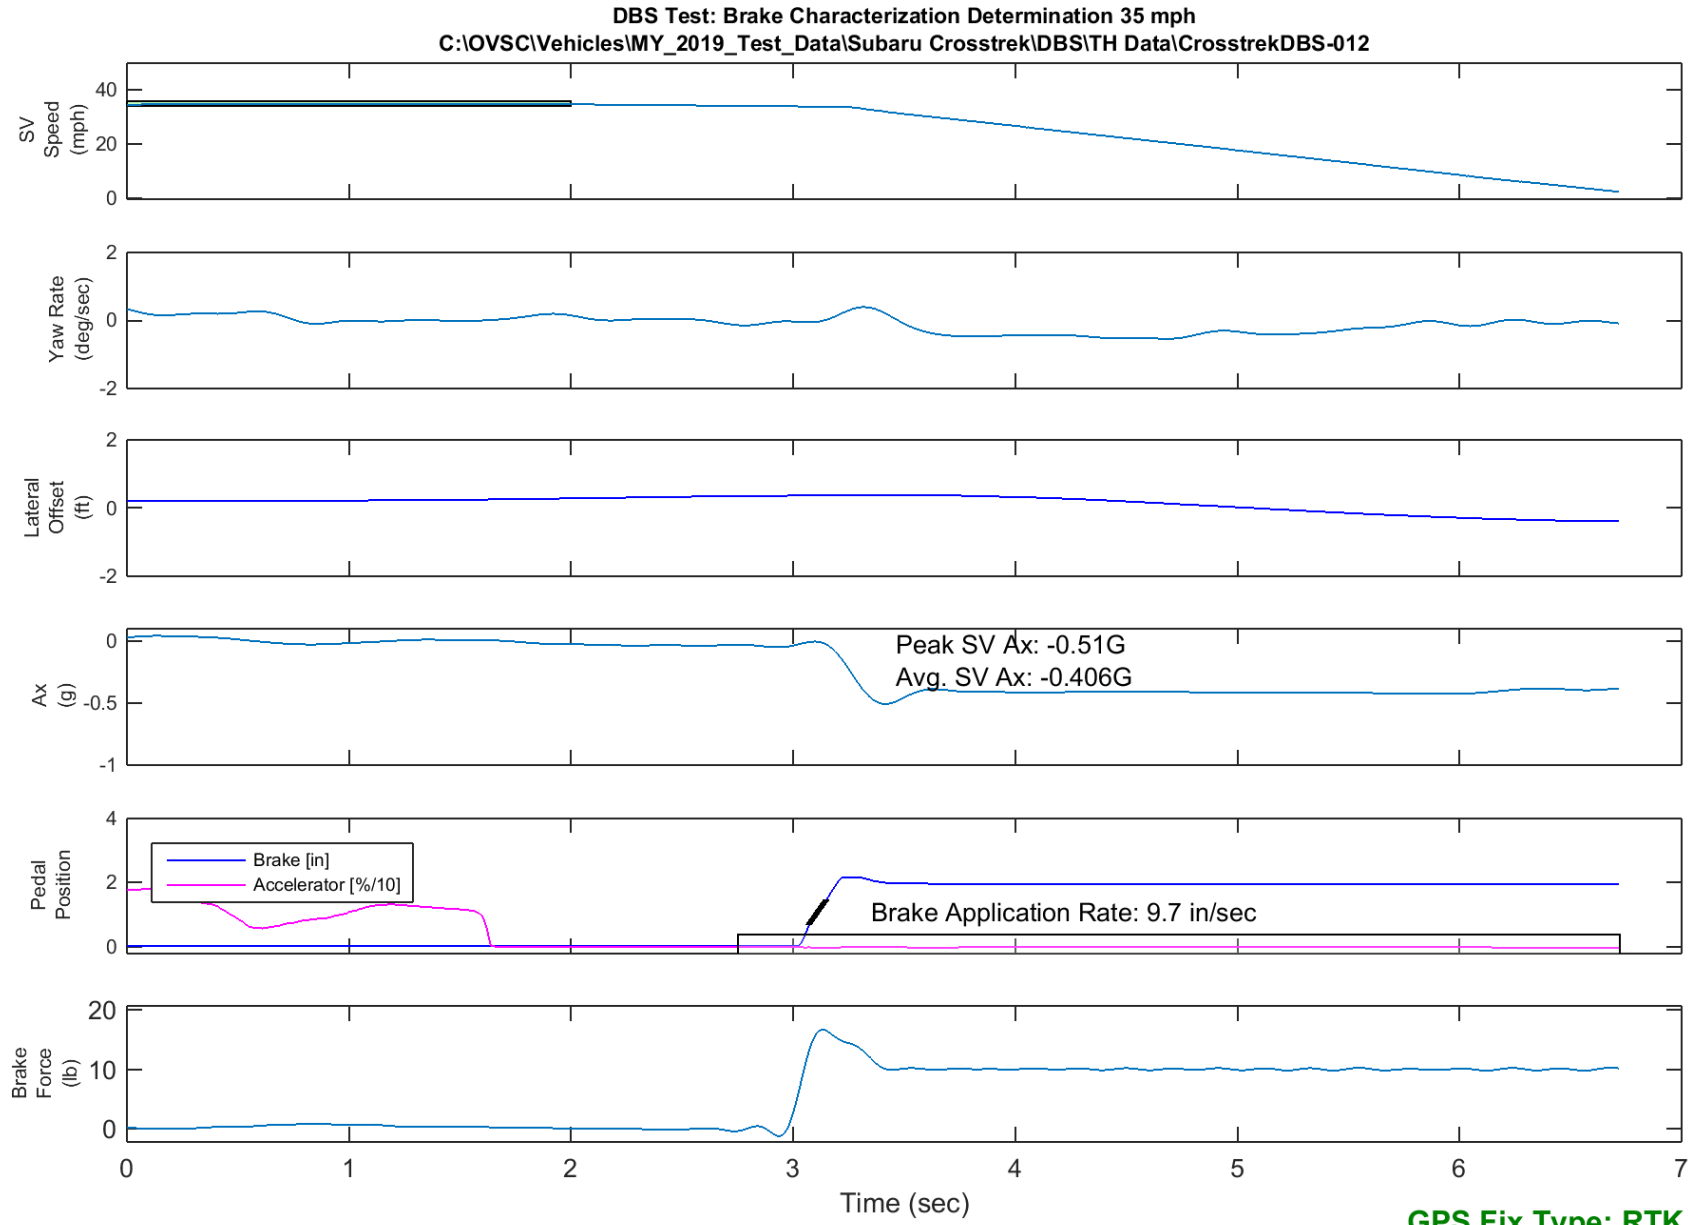


Figure E77. Time History for DBS Run 12, Brake Characterization Determination 35 mph

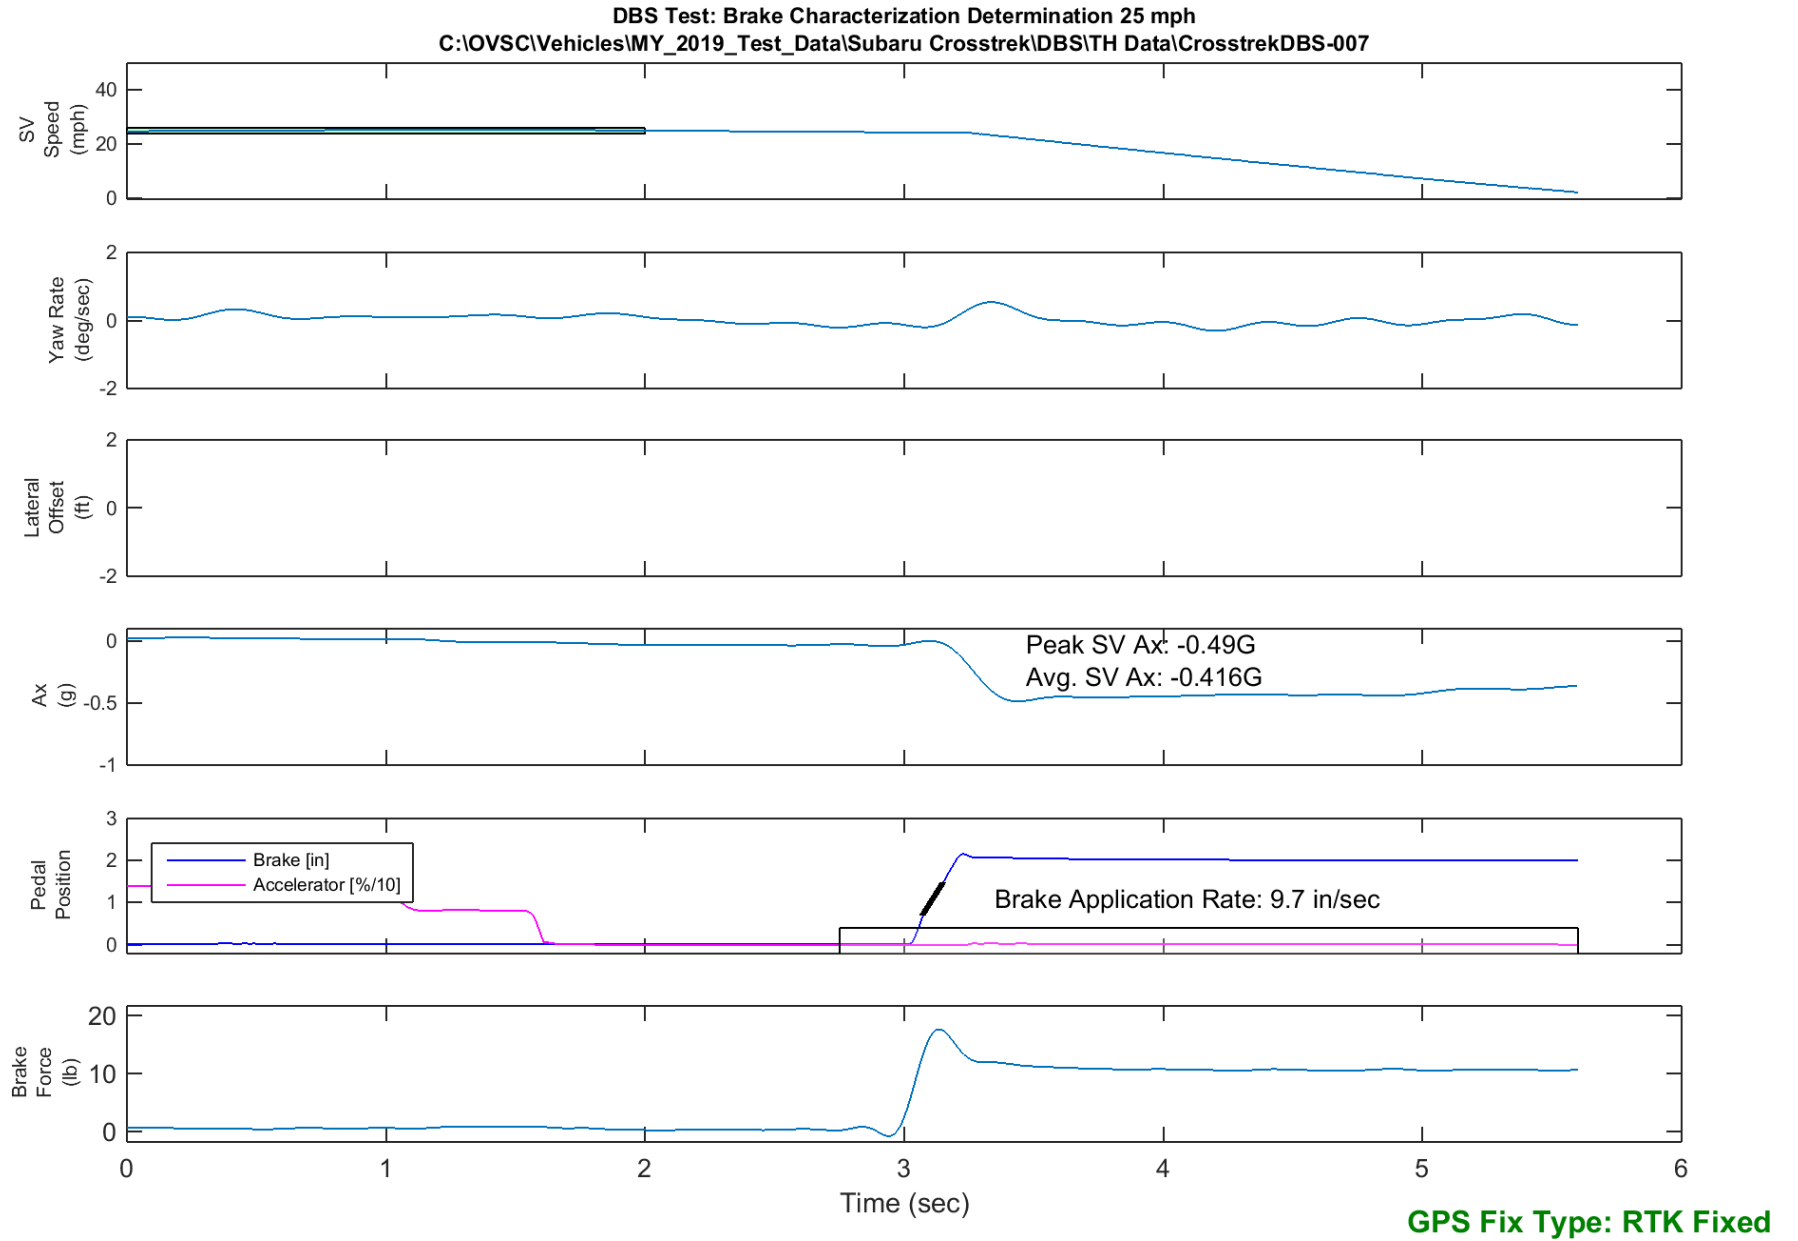


Figure E73. Time History for DBS Run 7, Brake Characterization Determination 25 mph

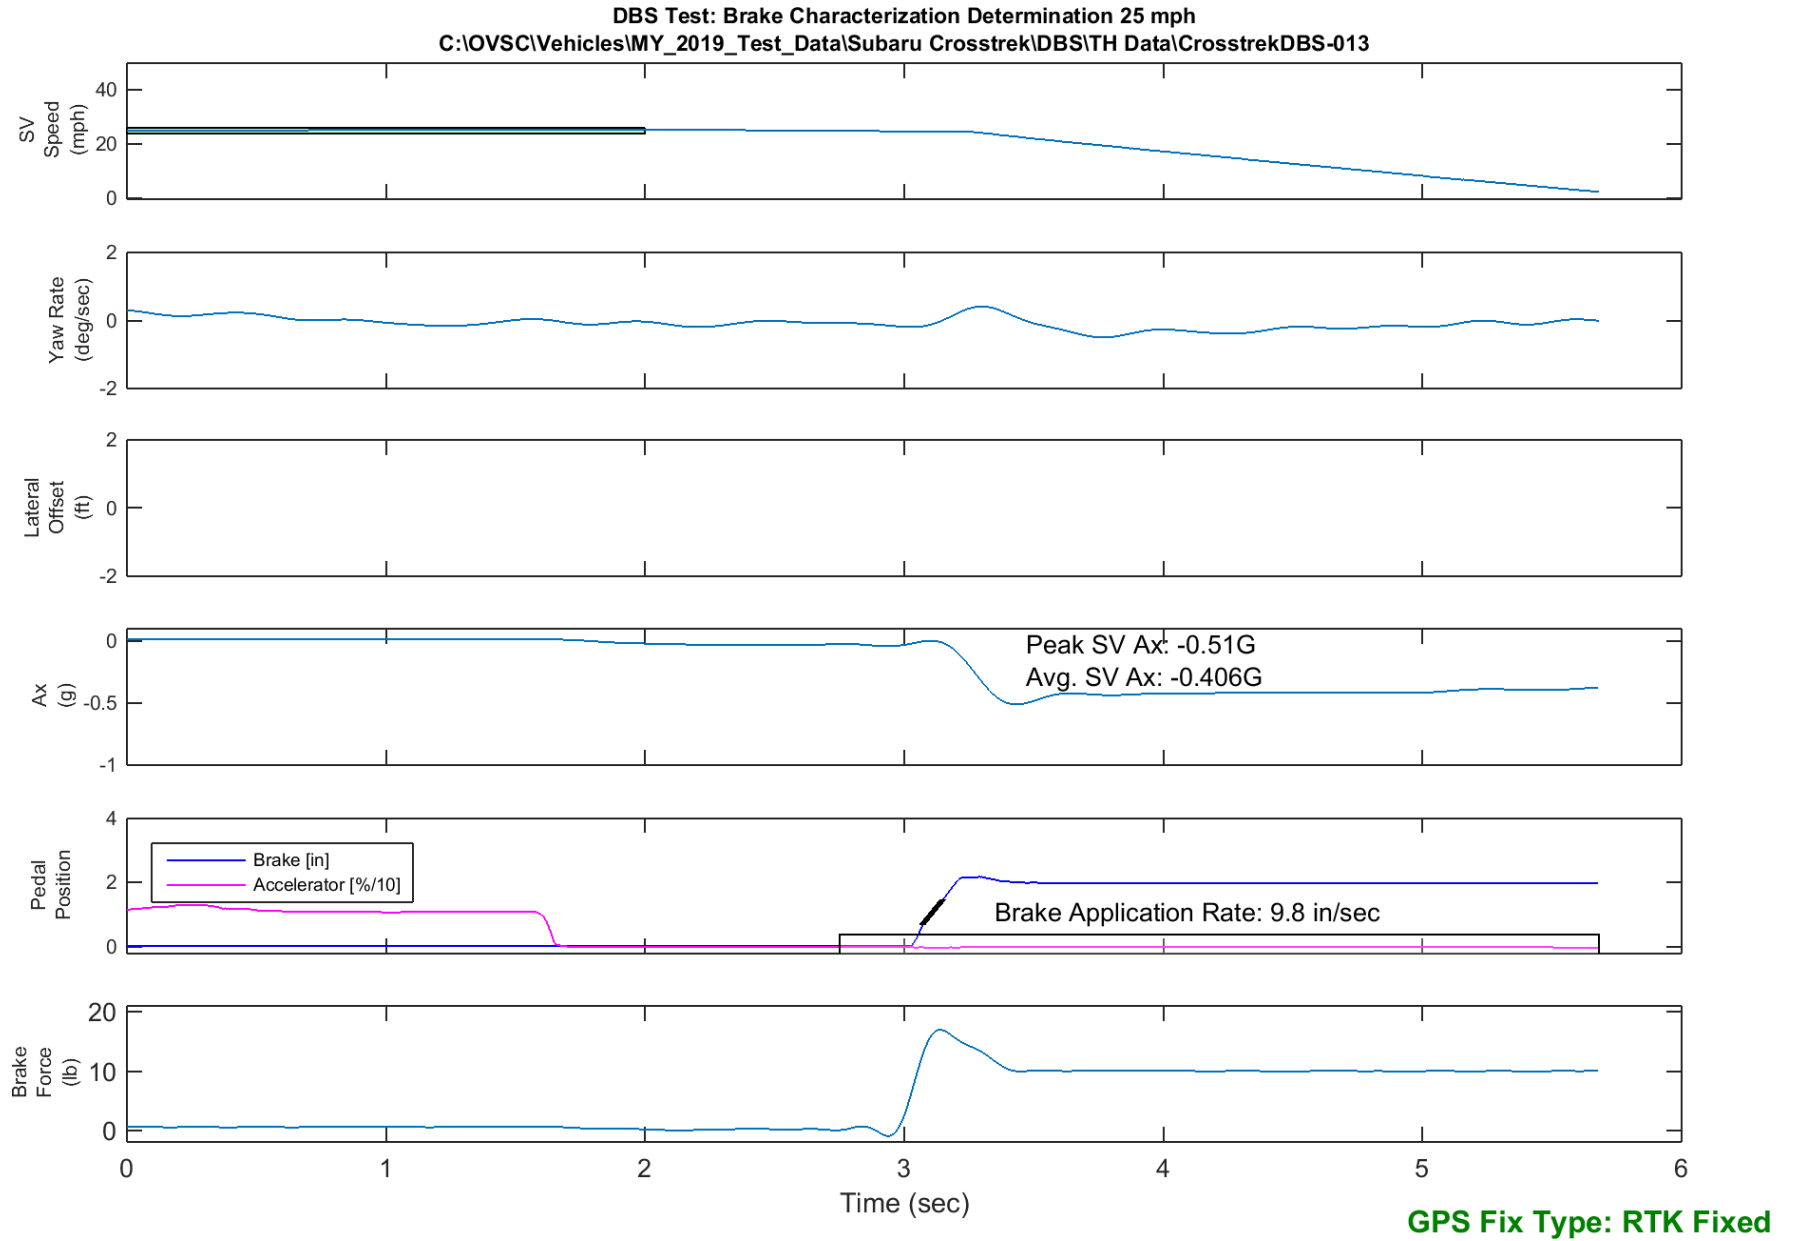


Figure E79. Time History for DBS Run 13, Brake Characterization Determination 25 mph


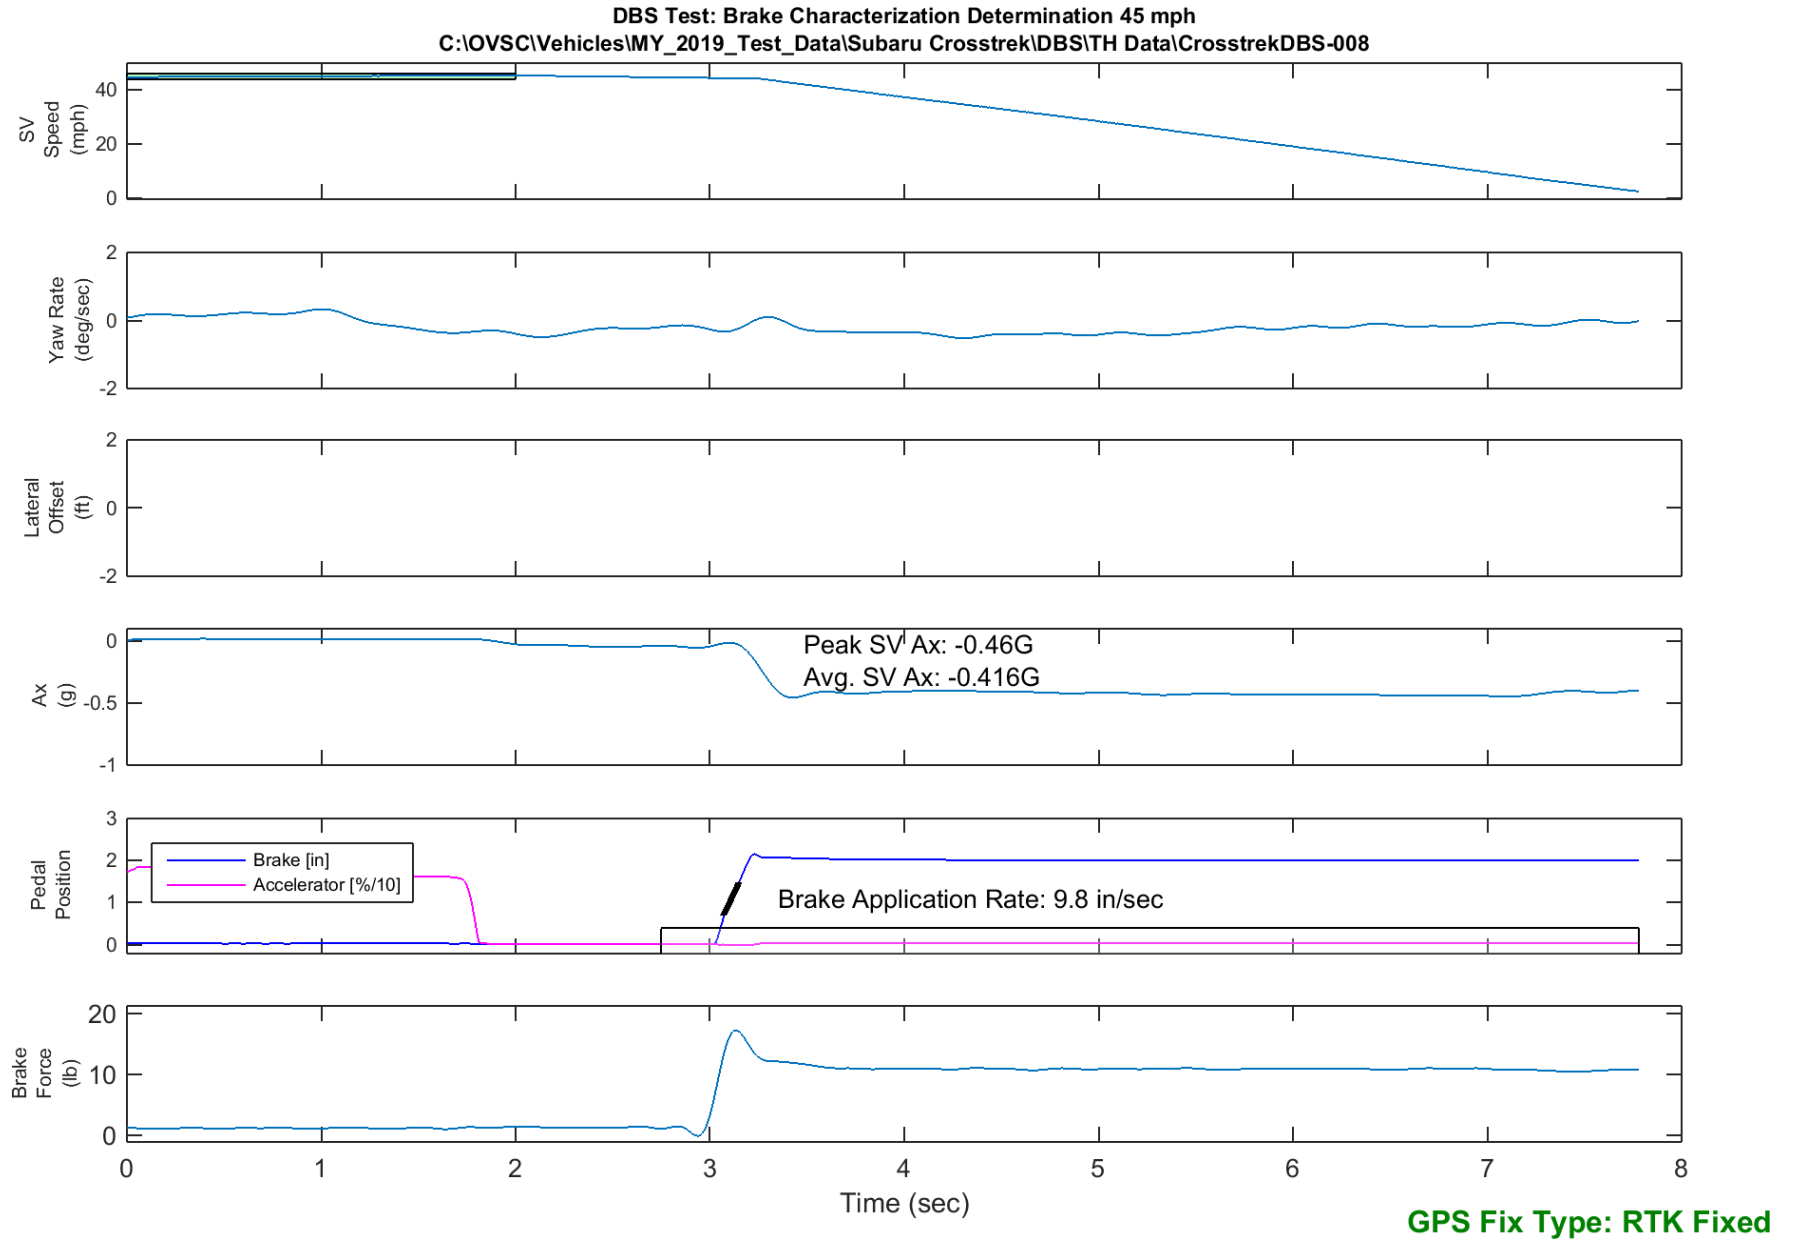


Figure E80. Time History for DBS Run 8, Brake Characterization Determination 45 mph

DBS Test: Brake Characterization Determination 45 mph
C:\OVSC\Vehicles\MY_2019_Test_Data\Subaru Crosstrek\DBS\TH Data\CrosstrekDBS-014

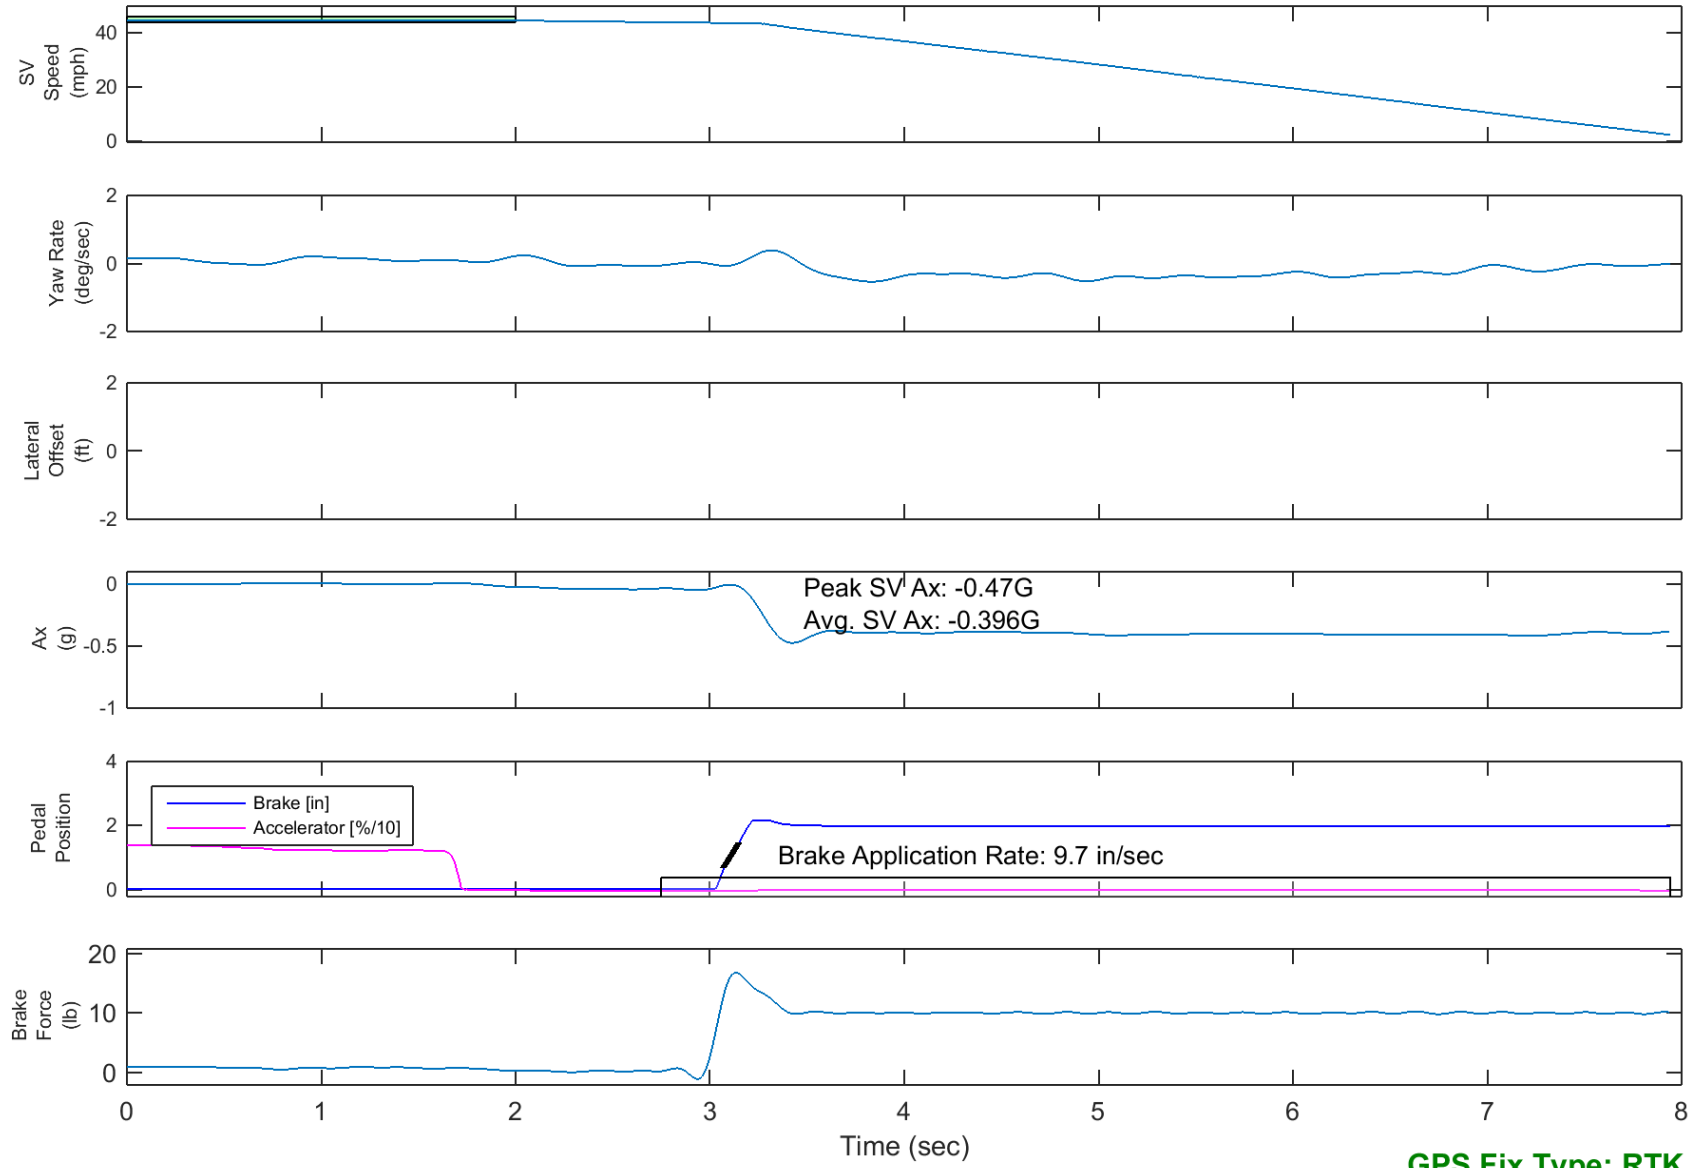

GPS Fix Type: RTK Fixed

Figure E81. Time History for DBS Run 14, Brake Characterization Determination 45 mph