

## **VIN marking area for Carnival model**


1. Hood
2. Tailgate
3. Front Fender (LH/RH)
4. Front Door (LH/RH)
5. Rear Door (LH/RH)
6. Side Outer Panel (LH/RH)
7. Front Bumper
8. Rear Bumper
9. Engine
10. Transmission



# Hood

TARGET AREA FOR  
REPLACEMENT PART  
CHINA IS NOT APPLIED

TARGET AREA FOR  
ORIGINALLY EQUIPPED PART

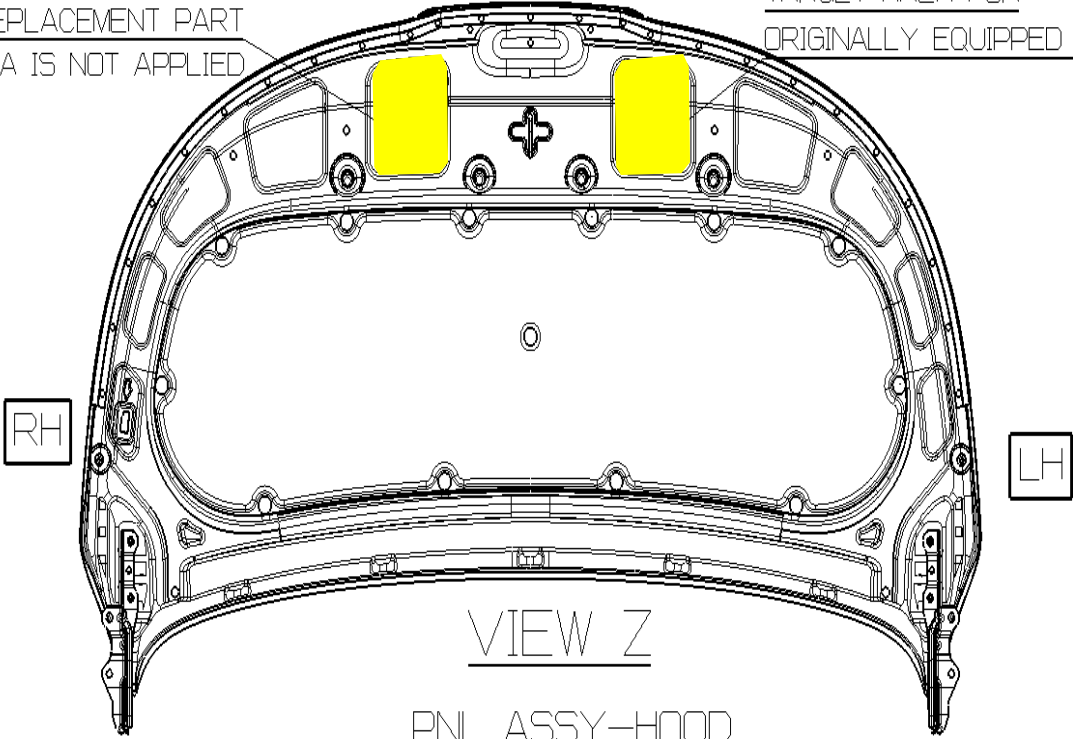

# Trunk Lid


TARGET AREAR FOR  
REPLACE EQUIPPED PART

LH


RH

TARGET AREAR FOR  
ORIGINALLY EQUIPPED PART

VIEW "Y"

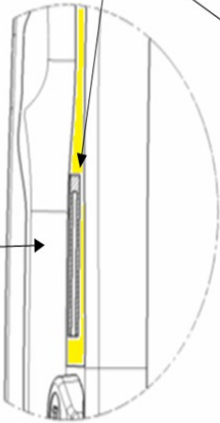


DETAIL B

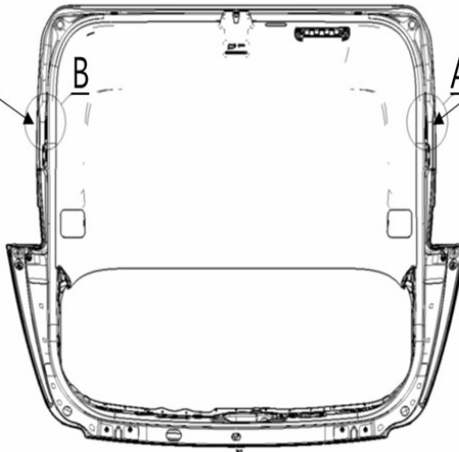


PNL ASSY-TAILGATE


VIEW "X"

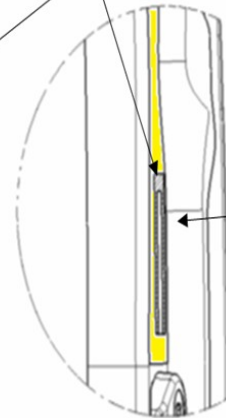

DETAIL A

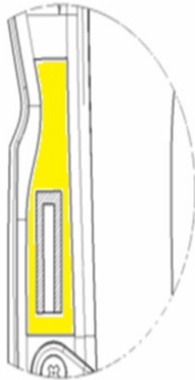


VIEW Y

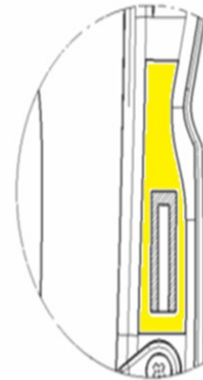


VIEW X

# Front Fender (LH/RH)

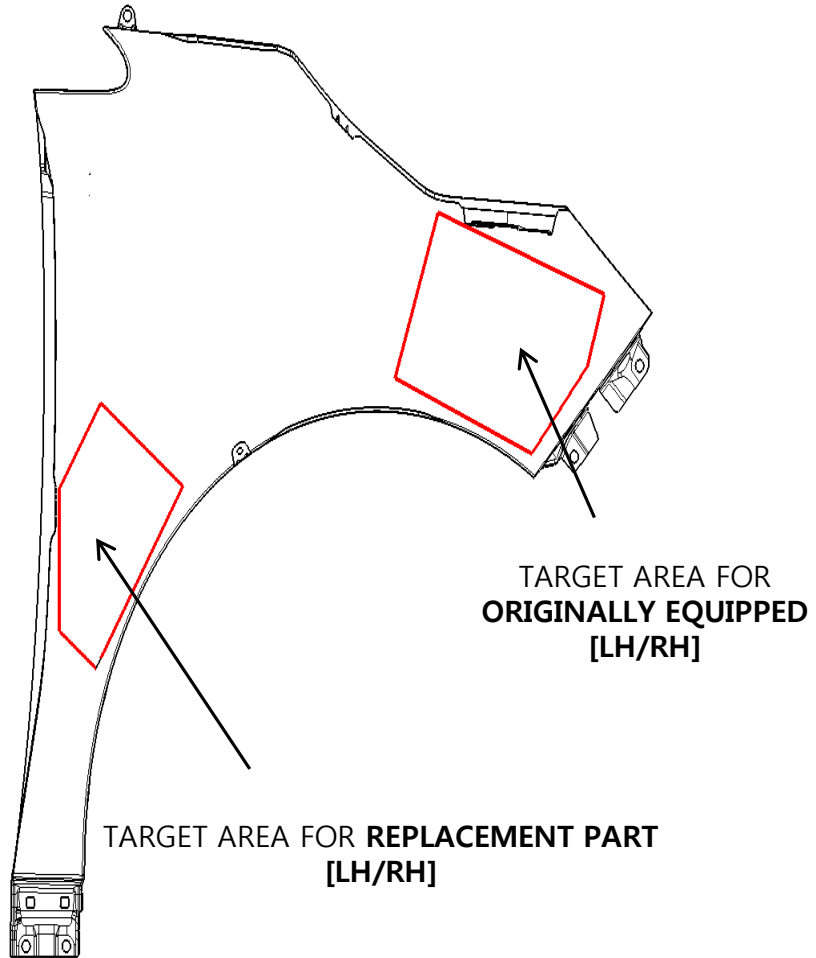

# Front Door (LH/RH)

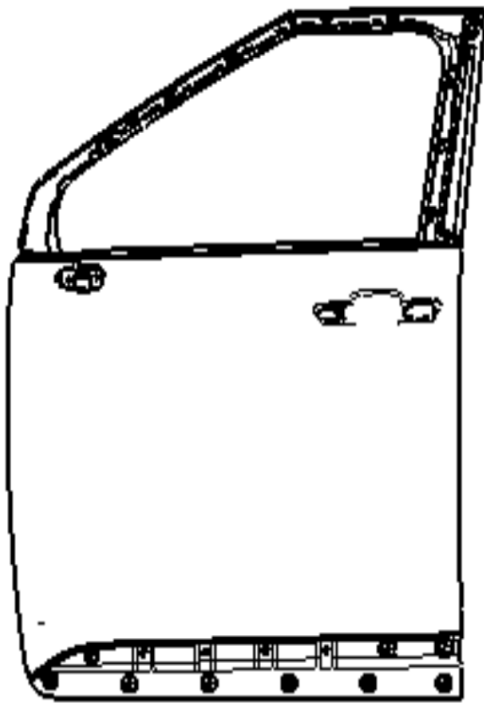


PNL ASSY-FR DR, LH/RH




TARGET AREA FOR  
REPLACEMENT PART


TARGET AREA FOR  
ORIGINALLY EQUIPPED PART

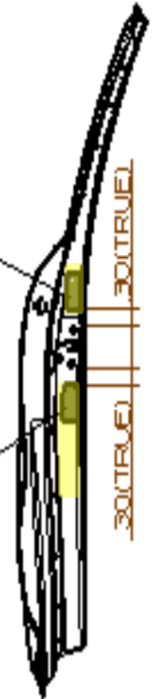


# Rear Door (LH/RH)

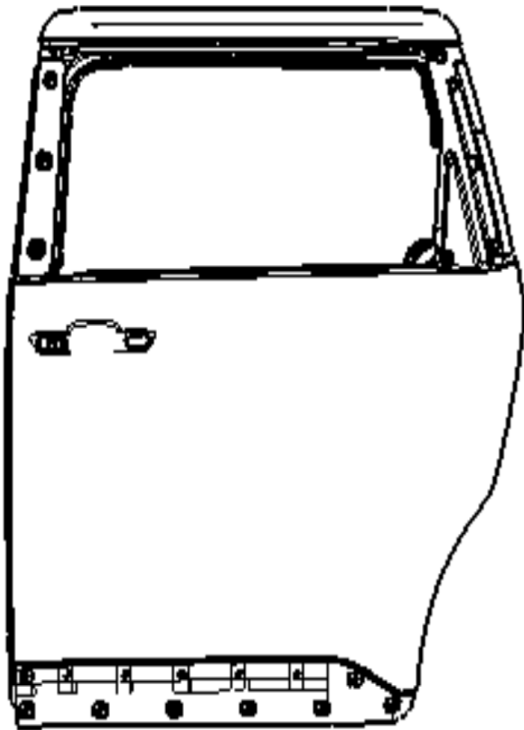

PNL ASSY-RR DR, LH/RH

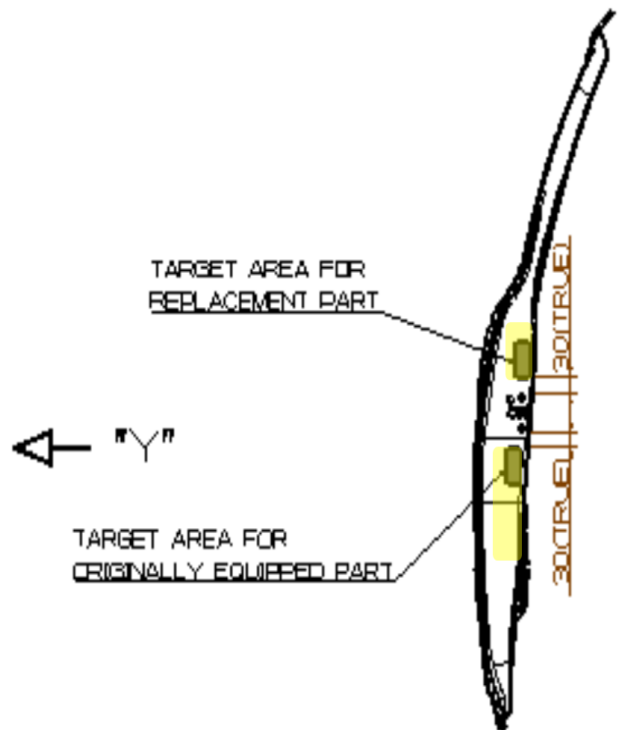

# Side Outer Panel (LH/RH)

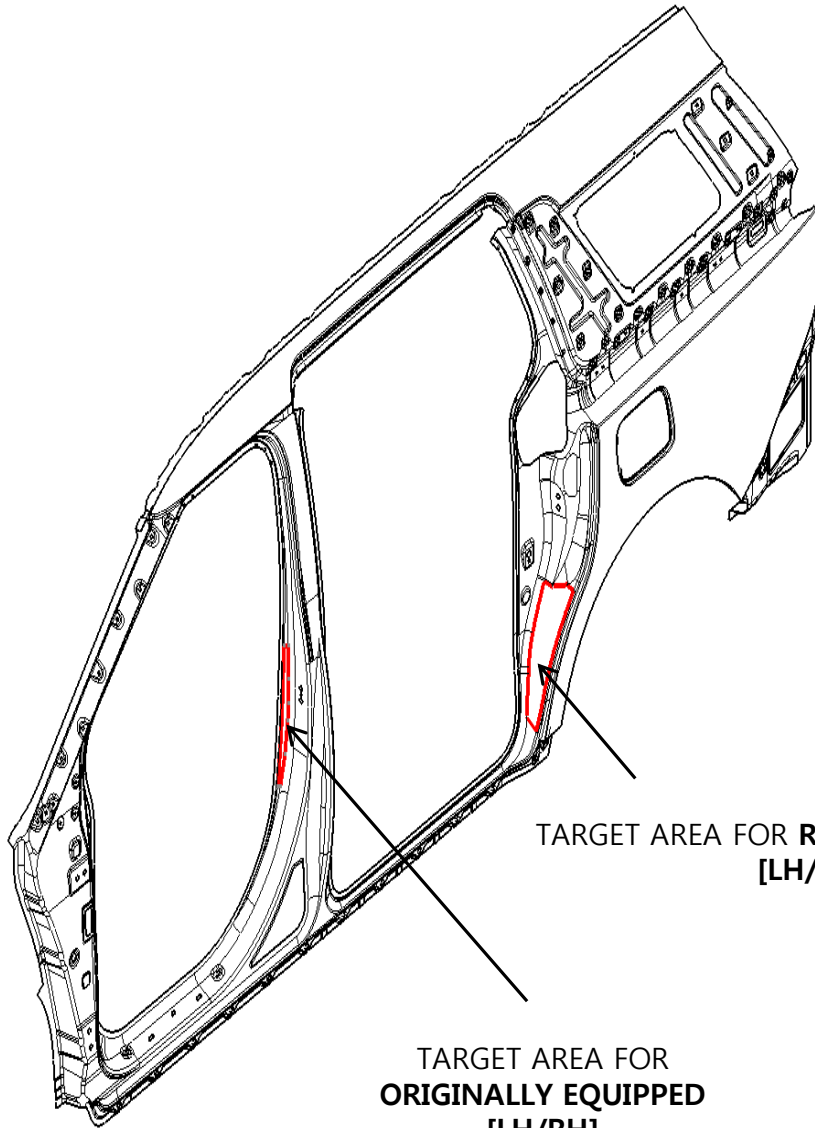

TARGET AREA FOR **REPLACEMENT PART**  
[LH/RH]


TARGET AREA FOR  
**ORIGINALLY EQUIPPED**  
[LH/RH]

# Front Bumper

FOR U.S.A ONLY



(LABEL STICKER ATTACH TO INSIDE AREA TO BE PRIMER COATED  POSITION)

LH	VIN LABEL
RH	VIN LABEL A/S

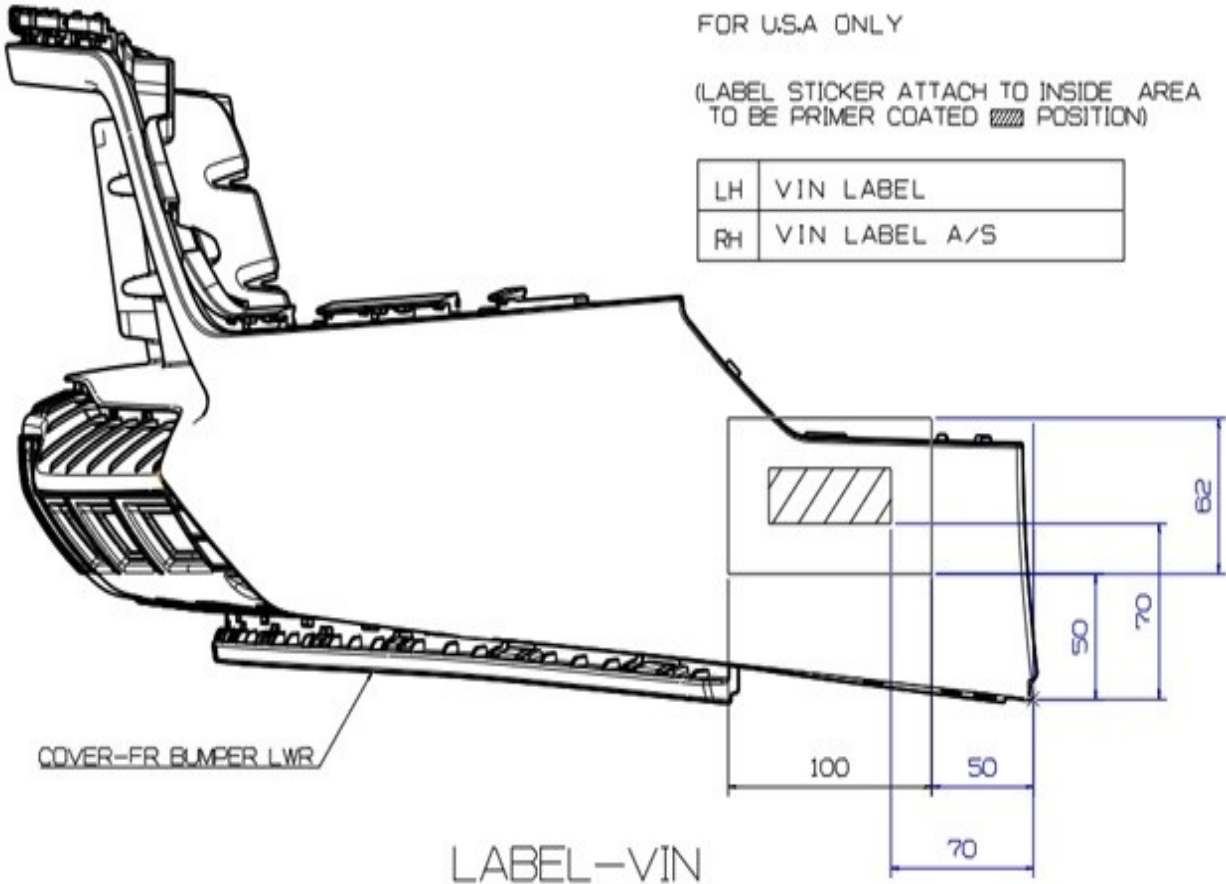



# Rear Bumper

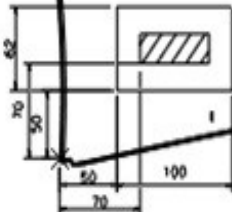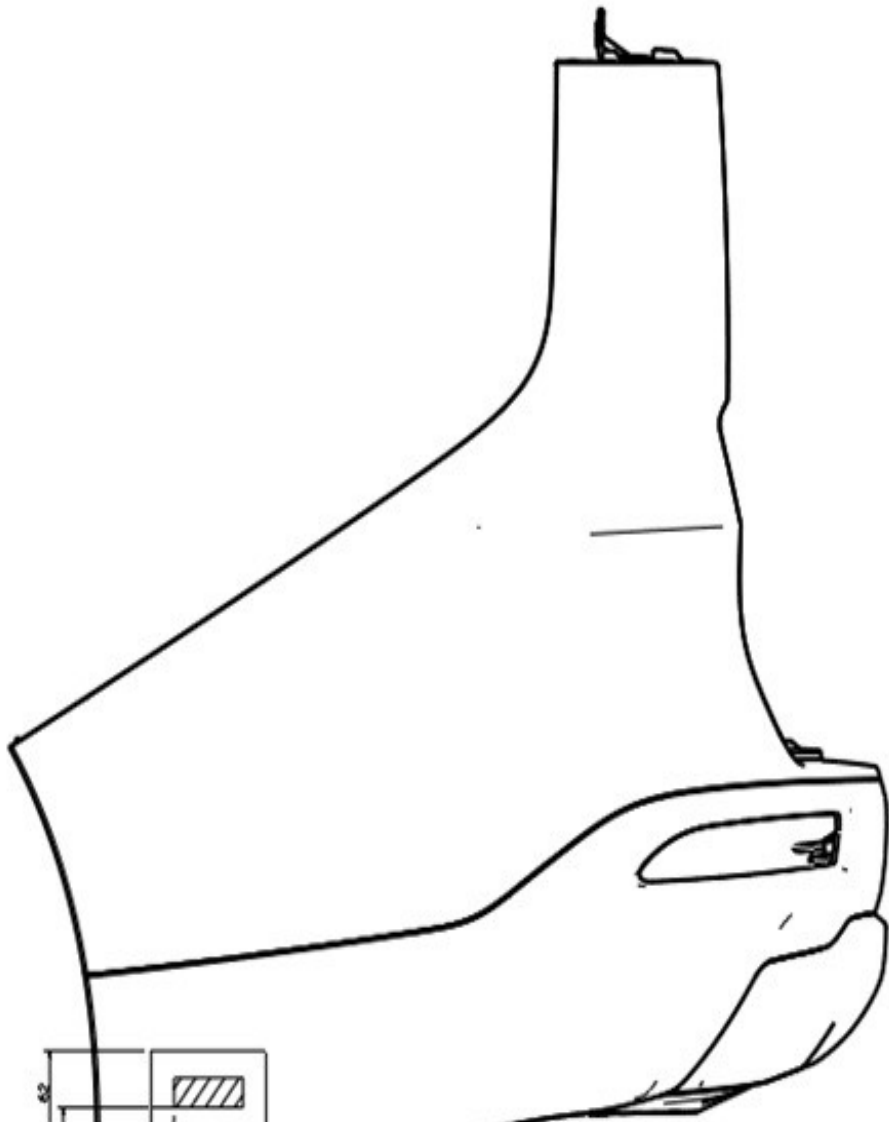

LABEL VIN  
(NON SCALE)


FOR NORTH AMERICA ONLY

(LABEL STICKER ATTACH TO INSIDE AREA TO BE PRIMER COATED  POSITION)

LH	VIN LABEL
RH	VIN LABEL A/S

# Engine (3.5L)

REAR

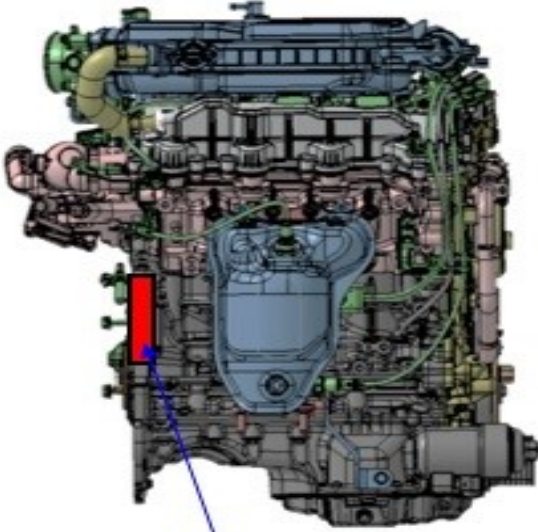


FRONT

TARGET AREA FOR  
REPLACEMENT PART

( RH VIEW )

FRONT

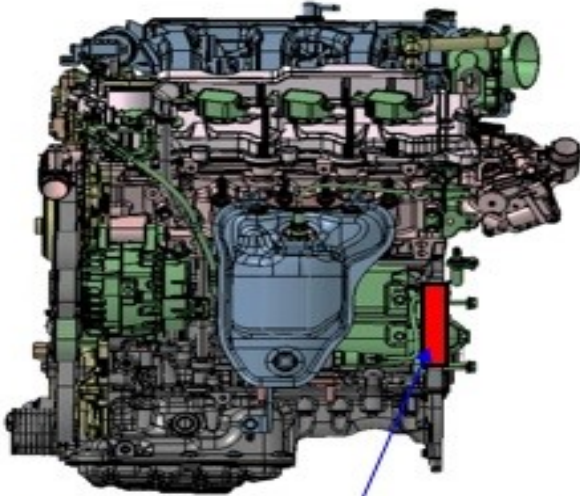


REAR

TARGET AREA FOR  
ORIGINALLY EQUIPPED  
PART (VIN PLATE)

( LH VIEW )

# Transmission

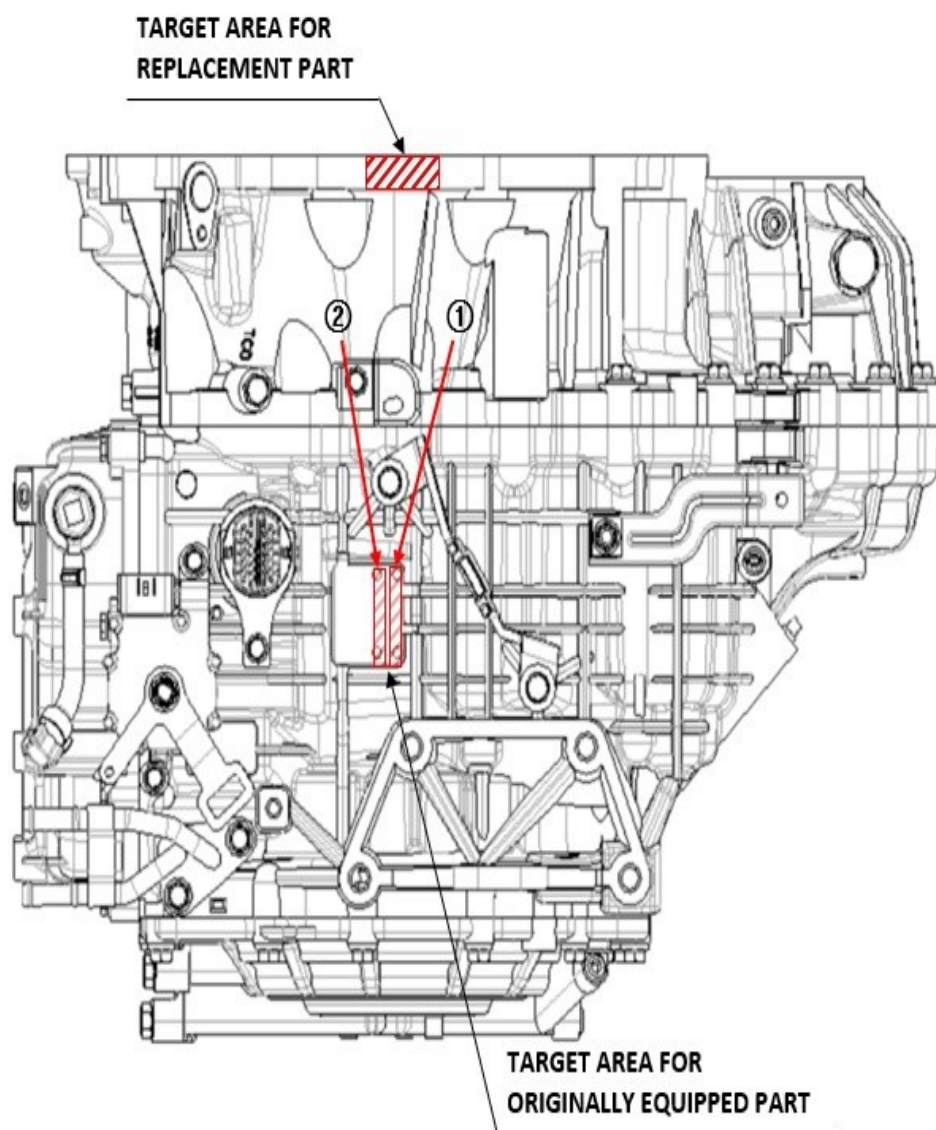

※ VIN plate for originally equipped part will be attached to either ① or ②.