

**NEW CAR ASSESSMENT PROGRAM  
CRASH IMMINENT BRAKING SYSTEM CONFIRMATION TEST  
NCAP-DRI-CIB-21-09**

**2021 Hyundai Santa Fe 2.5L FWD**

**DYNAMIC RESEARCH, INC.**  
355 Van Ness Avenue, STE 200  
Torrance, California 90501



**16 April 2021**

**Final Report**

**Prepared Under Contract No. DTNH22-14-D-00333**

**U.S. DEPARTMENT OF TRANSPORTATION  
National Highway Traffic Safety Administration  
New Car Assessment Program  
1200 New Jersey Avenue, SE  
West Building, 4<sup>th</sup> Floor (NRM-110)  
Washington, DC 20590**

Prepared for the Department of Transportation, National Highway Traffic Safety Administration, under Contract No. DTNH22-14-D-00333.

This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings, and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturer's names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products of manufacturers.

Prepared By: J. Lenkeit

Program Manager

Date: 16 April 2021

S. Rhim

Test Engineer

1. Report No. NCAP-DRI-CIB-21-09	2. Government Accession No.	3. Recipient's Catalog No.	
4. Title and Subtitle Final Report of Crash Imminent Braking System Confirmation Test of a 2021 Hyundai Santa Fe 2.5L FWD.		5. Report Date 16 April 2021	
		6. Performing Organization Code DRI	
7. Author(s) J. Lenkeit, Program Manager S. Rhim, Test Engineer		8. Performing Organization Report No. DRI-TM-20-195	
9. Performing Organization Name and Address  Dynamic Research, Inc. 355 Van Ness Ave, STE 200 Torrance, CA 90501		10. Work Unit No.	
		11. Contract or Grant No. DTNH22-14-D-00333	
12. Sponsoring Agency Name and Address U.S. Department of Transportation National Highway Traffic Safety Administration New Car Assessment Program 1200 New Jersey Avenue, SE, West Building, 4th Floor (NRM-110) Washington, DC 20590		13. Type of Report and Period Covered Final Test Report March – April 2021	
		14. Sponsoring Agency Code NRM-110	
15. Supplementary Notes			
16. Abstract These tests were conducted on the subject 2021 Hyundai Santa Fe 2.5L FWD in accordance with the specifications of the New Car Assessment program's most current Test Procedure in docket NHTSA-2015-0006-0025; CRASH IMMINENT BRAKE SYSTEM PERFORMANCE EVALUATION FOR THE NEW CAR ASSESSMENT PROGRAM, October 2015. The vehicle passed the requirements of the test for all four CIB test scenarios and all speeds.			
17. Key Words  Crash Imminent Braking, CIB, AEB, New Car Assessment Program, NCAP		18. Distribution Statement Copies of this report are available from the following: NHTSA Technical Reference Division National Highway Traffic Safety Administration 1200 New Jersey Avenue, SE Washington, DC 20590	
19. Security Classif. (of this report) Unclassified	20. Security Classif. (of this page) Unclassified	21. No. of Pages 133	22. Price

## TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
I. INTRODUCTION .....	1
II. DATA SHEETS.....	2
Data Sheet 1: Test Results Summary.....	3
Data Sheet 2: Vehicle Data .....	4
Data Sheet 3: Test Conditions.....	5
Data Sheet 4: Crash Imminent Braking System Operation.....	7
III. TEST PROCEDURES .....	11
A. Test Procedure Overview .....	11
B. General Information.....	16
C. Principal Other Vehicle .....	19
D. Automatic Braking System.....	20
E. Instrumentation.....	21
APPENDIX A Photographs .....	A-1
APPENDIX B Excerpts from Owner's Manual.....	B-1
APPENDIX C Run Log .....	C-1
APPENDIX D Time Histories.....	D-1

## Section I

### INTRODUCTION

Crash Imminent Braking (CIB) systems are a subset of Automatic Emergency Braking (AEB) systems. CIB systems are designed to avoid, or mitigate rear-end crashes, by automatically applying subject vehicle brakes when the system determines that, without intervention, a rear-end crash will occur. CIB systems typically work as an extension of Forward Collision Warning (FCW) systems, which alert the driver to the possibility of a collision unless driver action is taken. CIB systems employ sensors capable of detecting vehicles in the forward path. Current CIB technology typically involves RADAR, LIDAR, or vision-based (camera) sensors, and measurement of vehicle operating conditions such as speed, driver steering and brake application, etc. Algorithms in the system's Central Processing Unit (CPU) use this information to continuously monitor the likelihood of a rear-end crash and command a brake actuator to apply the brakes when necessary.

The method prescribed by the National Highway Traffic Safety Administration (NHTSA) to evaluate CIB performance on the test track<sup>1</sup> involves three rear-end type crash configurations and a "false positive" test. In the rear-end scenarios, a subject vehicle (SV) approaches a stopped, slower-moving, or decelerating principal other vehicle (POV) in the same lane of travel. For these tests, the POV is a strikeable object with the characteristics of a compact passenger car. The false positive scenarios are used to evaluate the propensity of a CIB system to inappropriately activate in a non-critical driving scenario that does not involve a forward vehicle or present a safety risk to the SV occupant(s).

The purpose of the testing reported herein was to objectively quantify the performance of a Crash Imminent Braking system installed on a 2021 Hyundai Santa Fe 2.5L FWD. This test is part of the New Car Assessment Program to assess Crash Imminent Braking Systems sponsored by the National Highway Traffic Safety Administration under Contract No. DTNH22-14-D-00333.

The 2021 Hyundai Santa Fe is available with two types of AEB systems. One of these uses a camera-only system and the other system uses a fusion of a camera and forward-facing radar. The vehicle covered in this report was equipped with the fusion system.

---

<sup>1</sup> NHTSA-2015-0006-0025; Crash Imminent Brake System Performance Evaluation for the New Car Assessment Program, October 2015.

Section II  
**DATA SHEETS**

**CRASH IMMINENT BRAKING**  
**DATA SHEET 1: TEST RESULTS SUMMARY**

(Page 1 of 1)

2021 Hyundai Santa Fe 2.5L FWD

---

VIN: 5NMS34AJ3MH32xxxx

Test Date: 3/9/2021

Crash Imminent Braking System settings:

Forward Safety Active Assist: Active Assist

Warning Timing: Normal

Warning Volume: Medium

**Test 1 – Subject Vehicle Encounters  
Stopped Principal Other Vehicle**

SV 25 mph: Pass

**Test 2 – Subject Vehicle Encounters  
Slower Principal Other Vehicle**

SV 25 mph POV 10 mph: Pass

SV 45 mph POV 20 mph: Pass

**Test 3 – Subject Vehicle Encounters  
Decelerating Principal Other Vehicle**

SV 35 mph POV 35 mph: Pass

**Test 4 – Subject Vehicle Encounters  
Steel Trench Plate**

SV 25 mph: Pass

SV 45 mph: Pass

**Overall: Pass**

Notes:

**CRASH IMMINENT BRAKING**  
**DATA SHEET 2: VEHICLE DATA**  
(Page 1 of 1)  
**2021 Hyundai Santa Fe 2.5L FWD**

---

**TEST VEHICLE INFORMATION**

VIN: 5NMS34AJ3MH32xxxx

Body Style: SUV

Color: Quartz White

Date Received: 3/1/2021

Odometer Reading: 83 mi

**DATA FROM VEHICLE'S CERTIFICATON LABEL**

Vehicle manufactured by: Hyundai Motor Manufacturing Alabama, LLC

Date of manufacture: Jan/08/21

Vehicle Type: MPV

**DATA FROM TIRE PLACARD**

Tires size as stated on Tire Placard: Front: 235/60R18

Rear: 235/60R18

Recommended cold tire pressure: Front: 240 kPa (35 psi)

Rear: 240 kPa (35 psi)

**TIRES**

Tire manufacturer and model: Kumho Crugen Premium

Front tire designation: 235/60R18 103H

Rear tire designation: 235/60R18 103H

Front tire DOT prefix: 000 CMYANH

Rear tire DOT prefix: 000 CMYANH



**CRASH IMMINENT BRAKING**  
**DATA SHEET 3: TEST CONDITIONS**

(Page 1 of 2)

2021 Hyundai Santa Fe 2.5L FWD

---

**GENERAL INFORMATION**

Test date: 3/9/2021

**AMBIENT CONDITIONS**

Air temperature: 16.7 C (62 F)

Wind speed: 2.6 m/s (5.8 mph)

X Windspeed  $\leq$  10 m/s (22 mph)

X Tests were not performed during periods of inclement weather. This includes, but is not limited to, rain, snow, hail, fog, smoke, or ash.

X Tests were conducted during daylight hours with good atmospheric visibility (defined as an absence of fog and the ability to see clearly for more than 5000 meters). The tests were not conducted with the vehicle oriented into the sun during very low sun angle conditions, where the sun is oriented 15 degrees or less from horizontal, and camera "washout" or system inoperability results.

**VEHICLE PREPARATION**

**Verify the following:**

All non-consumable fluids at 100% capacity: X

Fuel tank is full: X

Tire pressures are set to manufacturer's recommended cold tire pressure: X

Front: 240 kPa (35 psi)

Rear: 240 kPa (35 psi)

**CRASH IMMINENT BRAKING**  
**DATA SHEET 3: TEST CONDITIONS**

(Page 2 of 2)

**2021 Hyundai Santa Fe 2.5L FWD**

---

**WEIGHT**

Weight of vehicle as tested including driver and instrumentation

Left Front: 543.0 kg (1197 lb)

Right Front: 506.7 kg (1117 lb)

Left Rear: 409.1 kg (902 lb)

Right Rear: 396.9 kg (875 lb)

Total: 1855.7 kg (4091 lb)

**CRASH IMMINENT BRAKING**  
**DATA SHEET 4: CRASH IMMINENT BRAKING SYSTEM OPERATION**

(Page 1 of 4)

**2021 Hyundai Santa Fe 2.5L FWD**

---

Name of the CIB option, option package, etc.:

Forward Collision-Avoidance Assist (FCA). It is standard equipment. In order to have the sensor fusion, the vehicle must also be equipped with 'Smart Cruise Control with Stop & Go, which is included on this trim.

Type and location of sensors the system uses:

Sensor fusion (radar and mono camera)

Front camera: behind the back mirror

Front radar: on center of the radiator grille

System setting used for test (if applicable):

Forward Safety Active Assist: Active Assist

Warning Timing: Normal

Warning Volume: Medium

What is the minimum vehicle speed at which the CIB system becomes active?

8 km/h (5 mph) (Per manufacturer supplied information)

What is the maximum vehicle speed at which the CIB system functions?

80 km/h (50 mph) (Per manufacturer supplied information)

Does the vehicle system require an initialization sequence/procedure?

Yes  
 No

If yes, please provide a full description.

Will the system deactivate due to repeated CIB activations, impacts, or near-misses?

Yes  
 No

**CRASH IMMINENT BRAKING**

**DATA SHEET 4: CRASH IMMINENT BRAKING SYSTEM OPERATION**

(Page 2 of 4)

2021 Hyundai Santa Fe 2.5L FWD

---

If yes, please provide a full description.

In general, FCA does not deactivate due to repeated FCA activations or impacts. However, if the brake actuator or radar/camera sensors have damage or problems due to repeated FCA activations or impacts, FCA can deactivate. In this case, the system provides a diagnostic lamp to the driver.

FCA is re-activated on each ignition cycle.

How is the Forward Collision Warning system alert presented to the driver?  Warning light  
(Check all that apply)  Buzzer or auditory alarm  
 Vibration  
 Other \_\_\_\_\_

Describe the method by which the driver is alerted. For example, if the warning is a light, where is it located, its color, size, words, or symbol, does it flash on and off, etc. If it is a sound, describe if it is a constant beep or a repeated beep. If it is a vibration, describe where it is felt (e.g., pedals, steering wheel), the dominant frequency (and possibly magnitude), the type of warning (light, auditory, vibration, or combination), etc.

See Appendix A, Figure A17. The visual warning is presented in the center of the instrument cluster. It depicts the upper rear view of a passenger car following a lead passenger car. The initial alert (FCW) shows the words "Collision Warning" and a triangle with an exclamation point. When braking is initiated the words change to "Emergency Braking". The auditory alert is a 1008 Hz tone pulsed at approximately 8 Hz.

Is there a way to deactivate the system?  Yes  
 No

**CRASH IMMINENT BRAKING**

**DATA SHEET 4: CRASH IMMINENT BRAKING SYSTEM OPERATION**

(Page 3 of 4)

**2021 Hyundai Santa Fe 2.5L FWD**

---

If yes, please provide a full description including the switch location and method of operation, any associated instrument panel indicator, etc.

See Appendix A, Figures A14 and A16.

A menu button on the steering wheel is used to access the system menus displayed on the center touchscreen. The hierarchy is:

Vehicle

Driver Assistance

Forward Safety

Select either "Active Assist", "Warning Only", or "Off"

FCA is reactivated on each ignition cycle.

Is the vehicle equipped with a control whose purpose is to adjust the range setting or otherwise influence the operation of CIB?  Yes  
 No

If yes, please provide a full description.

See Appendix A, Figures A15 and A16.

A menu button on the steering wheel is used to access the system menus displayed on the center touchscreen. The hierarchy is:

Vehicle

Driver Assistance

Warning Timing

Select either "Normal" or "Late"

The warning volume can be adjusted in a similar manner.

**CRASH IMMINENT BRAKING**

**DATA SHEET 4: CRASH IMMINENT BRAKING SYSTEM OPERATION**

(Page 4 of 4)

**2021 Hyundai Santa Fe 2.5L FWD**

Are there other driving modes or conditions that render CIB inoperable or reduce its effectiveness?  Yes  
 No

If yes, please provide a full description.

Limitations of the system are described in the Owner's Manual, pages 7-11 through 7-17, shown in Appendix B, pages B-17 through B-23.

Notes:

The 2021 Hyundai Santa Fe is available with two types of AEB systems. One of these uses a camera-only system and the other system uses a fusion of a camera and forward-facing radar. The vehicle covered in this report was equipped with the fusion system.

## Section III

### TEST PROCEDURES

#### A. Test Procedure Overview

Four test scenarios were used, as follows:

Test 1. Subject Vehicle (SV) Encounters Stopped Principal Other Vehicle (POV)

Test 2. Subject Vehicle Encounters Slower Principal Other Vehicle

Test 3. Subject Vehicle Encounters Decelerating Principal Other Vehicle

Test 4. Subject Vehicle Encounters Steel Trench Plate

An overview of each of the test procedures follows.

#### 1. TEST 1 – SUBJECT VEHICLE ENCOUNTERS STOPPED PRINCIPAL OTHER VEHICLE ON A STRAIGHT ROAD

This test evaluates the ability of the CIB system to detect and respond to a stopped lead vehicle in the immediate forward path of the SV, as depicted in Figure 1.

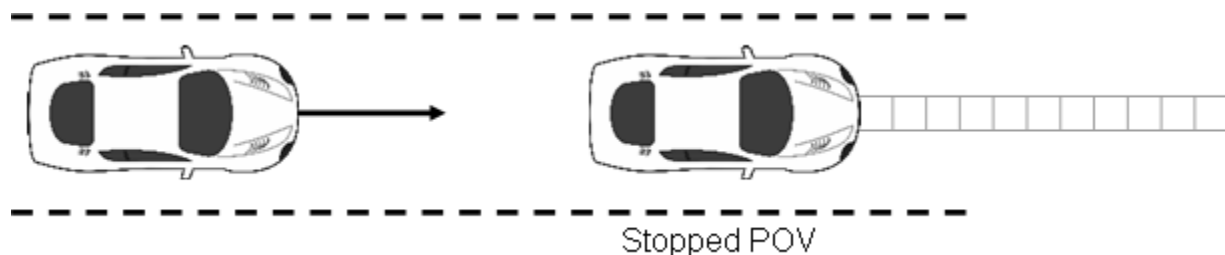


Figure 1. Depiction of Test 1

##### a. Procedure

The POV was parked in the center of a travel lane, with its longitudinal axis oriented parallel to the roadway edge and facing the same direction as the SV so that the SV approached the rear of the POV.

The SV ignition was cycled prior to each test run. The SV was driven at a nominal speed of 25 mph (40.2 km/h) in the center of the lane of travel, toward the parked POV. The SV throttle pedal was released within 500 ms after  $t_{FCW}$ , i.e. within 500 ms of the FCW alert. The test concluded when either:

- The SV came into contact with the POV or
- The SV came to a stop before making contact with the POV.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The SV speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) during an interval defined by a Time to Collision (TTC) = 5.1 seconds to  $t_{FCW}$ . For this test, TTC = 5.1 seconds is taken to occur at an SV-to-POV distance of 187 ft (57 m).

b. Criteria

In order to pass the test, the magnitude of the SV speed reduction attributable to CIB intervention must have been  $\geq 9.8$  mph (15.8 km/h) for at least five of seven valid test trials.

The magnitude of the SV speed reduction attributable to CIB intervention was calculated in one of two ways, depending on whether a test trial concluded with the SV colliding with the POV.

- If SV-to-POV contact occurred during a test trial, the CIB speed reduction was calculated by subtracting the SV speed at the time of SV-to-POV contact (i.e., when longitudinal range became zero) from the average SV speed calculated from  $t_{FCW}-100$  ms to  $t_{FCW}$ .
- If SV-to-POV contact did not occur during a test trial (i.e., CIB intervention prevented the crash), the SV speed at a time of SV-to-POV contact was taken to be zero. The speed reduction is therefore equal to the SV speed at  $t_{FCW}$ .

2. TEST 2 – SUBJECT VEHICLE ENCOUNTERS SLOWER PRINCIPAL OTHER VEHICLE

- This test evaluates the ability of the CIB system to detect and respond to a slower-moving lead vehicle traveling at a constant speed in the immediate forward path of the SV, as depicted in Figure 2.

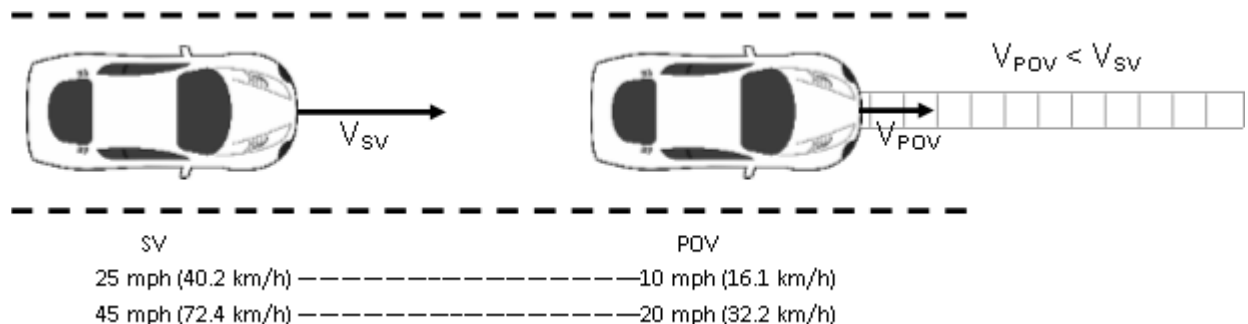


Figure 2. Depiction of Test 2



#### a. Procedure

The SV ignition was cycled prior to each test run. The tests were conducted two ways. In the first, the POV was driven at a constant 10.0 mph (16.1 km/h) in the center of the lane of travel while the SV was driven at 25.0 mph (40.2 km/h), in the center lane of travel, toward the slower-moving POV. In the second, the POV was driven at a constant 20.0 mph (32.2 km/h) in the center of the lane of travel while the SV was driven at 45.0 mph (72.4 km/h), in the center lane of travel, toward the slower-moving POV. In both cases, the SV throttle pedal was released within 500 ms after  $t_{FCW}$ , i.e. within 500 ms of the FCW alert. The test concluded when either:

- The SV came into contact with the POV or
- 1 second after the speed of the SV becomes less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than  $\pm 1$  ft (0.3 m) during the validity period.
- The lateral distance between the centerline of the SV and the center of the travel lane could not deviate more than  $\pm 1$  ft (0.3 m) during the validity period.
- The SV speed could not deviate more than  $\pm 1.0$  mph ( $\pm 1.6$  km/h) during an interval defined by  $TTC = 5.0$  seconds to  $t_{FCW}$ .
- The POV speed could not deviate more than  $\pm 1.0$  mph ( $\pm 1.6$  km/h) during the validity period.

#### b. Criteria

For the test series in which the initial SV speed was 25 mph, the condition for passing was that there be no SV-to-POV impact for at least five of the seven valid test trials.

In order to pass the test series for which the initial speed of the SV was 45 mph, the magnitude of the SV speed reduction attributable to CIB intervention must have been  $\geq 9.8$  mph (15.8 km/h) for at least five of seven valid test trials. The magnitude of the SV speed reduction attributable to CIB intervention was calculated in one of two ways, depending on whether a test trial concluded with the SV colliding with the POV.

- If SV-to-POV contact occurred during a test trial, the CIB speed reduction was calculated by subtracting the SV speed at the time of SV-to-POV contact (i.e., when longitudinal range became zero) from the average SV speed calculated from  $t_{FCW}-100$  ms to  $t_{FCW}$ .
- If SV-to-POV contact did not occur during a test trial (i.e., CIB intervention

prevented the crash), the CIB speed reduction was calculated by subtracting the SV speed at the minimum longitudinal SV-to-POV range during the validity period from the SV speed at  $t_{FCW}$ .

### 3. TEST 3 – SUBJECT VEHICLE ENCOUNTERS DECELERATING PRINCIPAL OTHER VEHICLE

This test evaluates the ability of the CIB system to detect and respond to a lead vehicle slowing with a constant deceleration in the immediate forward path of the SV, as depicted in Figure 3.

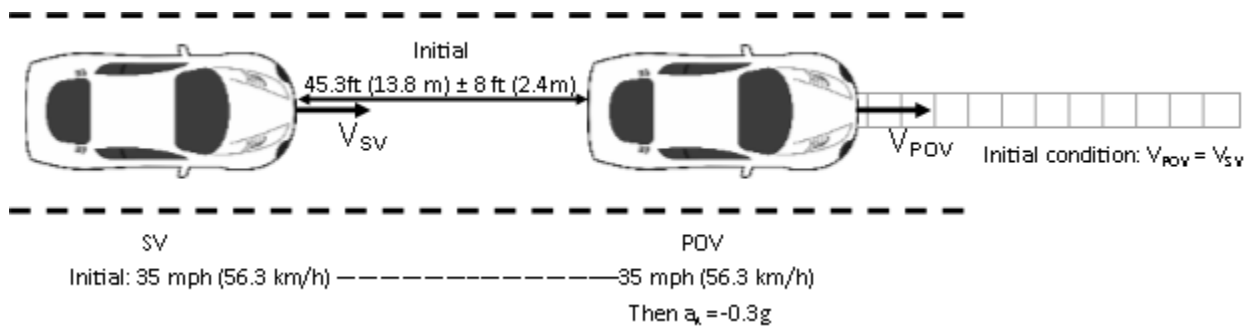


Figure 3. Depiction of Test 3

#### a. Procedure

The SV ignition was cycled prior to each test run. For this test scenario, both the POV and SV were driven at a constant 35.0 mph (56.3 km/h) in the center of the lane, with a headway of 45.3 ft (13.8 m) ± 8 ft (2.4 m). Once these conditions were met, the POV tow vehicle brakes were applied to achieve  $0.3 \pm 0.03$  g of deceleration. The test concluded when either:

- The SV came into contact with the POV or
- For the decelerating POV, 1 second after minimal longitudinal SV-to-POV distance occurred or
- For the POV decelerating to stop case, 1 second after the velocity of the SV became less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than ±1 ft (0.3 m) during the validity period.
- The lateral distance between the centerline of the SV and the center of the travel lane could not deviate more than ±1 ft (0.3 m) during the validity period.

- The headway between the SV and POV must have been constant from the onset of the applicable validity period to the onset of POV braking.
- The SV and POV speed could not deviate more than  $\pm 1.0$  mph (1.6 km/h) during an interval defined by the onset of the validity period to the onset of POV braking.
- The SV- POV headway distance could not deviate more than  $\pm 8$  ft (2.4 m) during an interval defined by the onset of the validity period to the onset of POV braking.
- The average POV deceleration could not deviate by more than  $\pm 0.03$  g from the nominal 0.3 g deceleration during the interval beginning at 1.5 seconds after the onset of POV braking and ending either 250 ms prior to the POV coming to a stop or the SV coming into contact with the POV.

#### b. Criteria

In order to pass the decelerating POV test series, the magnitude of the SV speed reduction attributable to CIB intervention must have been  $\geq 10.5$  mph (16.9 km/h) for at least five of seven valid test trials. The magnitude of the SV speed reduction attributable to CIB intervention was calculated in one of two ways, depending on whether a test trial concluded with the SV colliding with the POV.

- If SV-to-POV contact occurred during a test trial, the CIB speed reduction was calculated by subtracting the SV speed at the time of SV-to-POV contact (i.e., when longitudinal range becomes zero) from the average SV speed calculated from  $t_{FCW} - 100$  ms to  $t_{FCW}$ .
- If SV-to-POV contact did not occur during a test trial (i.e., CIB intervention prevents the crash), the CIB speed reduction was calculated by subtracting the SV speed at the minimum longitudinal SV-to-POV range during the applicable validity period from the SV speed at  $t_{FCW}$ .

#### 4. TEST 4 – FALSE POSITIVE SUPPRESSION

The false positive suppression test series evaluates the ability of a CIB system to differentiate a steel trench plate (STP) from an object presenting a genuine safety risk to the SV. Although the STP is large and metallic, it is designed to be driven over without risk of injury to the driver or damage to the SV. Therefore, in this scenario, the automatic braking available from CIB is not necessary and should be suppressed. The test condition is nearly equivalent to that previously defined for Test 1, the stopped POV condition, but with an STP in the SV forward path in lieu of a POV.

##### a. Procedure

This test was conducted at two speeds, 25 mph (40.2 km/h) and 45 mph (72.4 km/h). The SV was driven directly towards, and over, the STP, which was positioned in the center of a travel lane, with its longest sides parallel to the road edge.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The SV speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) during an interval defined by a Time to Collision (TTC) = 5.1 seconds to  $t_{FCW}$  where:
  - For SV test speed of 25 mph, TTC = 5.1 seconds is taken to occur at an SV-to-STP distance of 187 ft (57 m).
  - For SV test speed of 45 mph, TTC = 5.1 seconds is taken to occur at an SV-to-STP distance of 337 ft (106 m).
- If the SV did not present an FCW alert before the end of the validity period, SV speed could not deviate more than  $\pm 1.0$  mph ( $\pm 1.6$  km/h) from TTC = 5.1 s to the end of the validity period.

If an FCW alert was presented, the driver released the throttle pedal within 500 ms of the alert. If no alert was presented, the driver did not release the throttle pedal until the end of the validity period. The SV driver then braked to a stop.

#### b. Criteria

In order to pass the False Positive test series, the magnitude of the SV deceleration reduction attributable to CIB intervention must have been  $\leq 0.50$  g for at least five of seven valid test trials.

## B. General Information

### 1. $T_{FCW}$

The time at which the Forward Collision Warning (FCW) activation flag indicates that the system has issued an alert to the SV driver is designated as  $t_{FCW}$ . FCW alerts are typically either visual, haptic or auditory, and the onset of the alert was determined by post-processing the test data.

For systems that implement auditory or haptic alerts, part of the pre-test instrumentation verification process was to determine the tonal frequency of the auditory warning or the vibration frequency of the tactile warning through use of the PSD (Power Spectral Density) function in Matlab. This was accomplished in order to identify the center frequency around which a band-pass filter was applied to subsequent auditory or tactile warning data so that the beginning of such warnings can be programmatically determined. The band-pass filter used for these warning signal types was a phaseless, forward-reverse pass, elliptical (Cauer) digital filter, with filter parameters as listed in Table 1.

**Table 1. Auditory and Tactile Warning Filter Parameters**

<b>Warning Type</b>	<b>Filter Order</b>	<b>Peak-to-Peak Ripple</b>	<b>Minimum Stop Band Attenuation</b>	<b>Passband Frequency Range</b>
Auditory	5 <sup>th</sup>	3 dB	60 dB	Identified Center Frequency $\pm$ 5%
Tactile	5 <sup>th</sup>	3 dB	60 dB	Identified Center Frequency $\pm$ 20%

**2. GENERAL VALIDITY CRITERIA**

In addition to any validity criteria described above for the individual test scenarios, for an individual trial to be valid, it must have met the following criteria throughout the test:

- The SV driver seatbelt was latched.
- If any load had been placed on the SV front passenger seat (e.g., for instrumentation), the vehicle’s front passenger seatbelt was latched.
- The SV was driven at the nominal speed in the center of the travel lane, toward the POV or STP.
- The driver used the least amount of steering input necessary to maintain SV position in the center of the travel lane during the validity period; use of abrupt steering inputs or corrections was avoided.
- The yaw rate of the SV did not exceed  $\pm 1.0$  deg/s from the onset of the validity period to the instant SV deceleration exceeded 0.25 g.
- The SV driver did not apply any force to the brake pedal during the applicable validity period.
- The lateral distance between the centerline of the SV and the centerline of the POV or STP did not deviate more than  $\pm 1$  ft (0.3 m) during the applicable validity period.

### 3. VALIDITY PERIOD

The valid test interval began:

Test 1: When the SV-to-POV TTC = 5.1 seconds

Test 2: When the SV-to-POV TTC = 5.0 seconds

Test 3: 3 seconds before the onset of POV braking

Test 4: When the SV-to-STP TTC = 5.1 seconds

The valid test interval ended:

Test 1: When either of the following occurred:

- The SV came into contact with the POV (SV-to-POV contact was assessed by using GPS-based range data or by measurement of direct contact sensor output); or
- The SV came to a stop before making contact with the POV.

Tests 2 and 3: When either of the following occurred:

- The SV came into contact with the POV; or
- 1 second after the velocity of the SV became less than or equal to that of the POV.
- 1 second after minimal longitudinal SV-to-POV distance occurred.

Test 4: At the instant the front-most part of SV reached a vertical plane defined by the leading edge of the STP first encountered by the SV (i.e., just before it was driven onto the STP).

### 4. STATIC INSTRUMENTATION CALIBRATION

To assist in resolving uncertain test data, static calibration data was collected prior to each of the test series.

For Tests 1, 2, and 3, the SV, POV, POV moving platform, and tow vehicle were centered in the same travel lane with the same orientation (i.e., facing the same direction). For Test 4, the SV and STP were centered in the same travel lane.

For Tests 1, 2, and 3, the SV was positioned such that it just contacted a vertical plane that defines the rearmost location of the POV. For Test 4, the front-most location of the SV was positioned such that it just reached a vertical plane defined by the leading edge of the STP first encountered by the SV (i.e., just before it is driven onto the STP). This is the “zero position.”

The zero position was documented prior to, and immediately after, conduct of each test series.

If the zero position reported by the data acquisition system was found to differ by more than  $\pm 2$  in ( $\pm 5$  cm) from that measured during collection of the pre-test static calibration data file, the pre-test longitudinal offset was adjusted to output zero and another pre-test static calibration data file was collected. If the zero position reported by the data acquisition system was found to differ by more than  $\pm 2$  in ( $\pm 5$  cm) from that measured during collection of the post-test static calibration data file, the test trials performed between collection of that post-test static calibration data file and the last valid pre-test static calibration data file were repeated.

Static data files were collected prior to, and immediately after, conducting each of the test series. The pre-test static files were reviewed prior to test conduct to confirm that all data channels were operational and were properly configured.

## 5. NUMBER OF TRIALS

A target total of seven (7) valid trials were performed for each scenario. In cases where the test driver performed more than seven trials, the first seven trials satisfying all test tolerances were used to assess the SV performance.

## 6. TRANSMISSION

All trials were performed with SV automatic transmissions in “Drive” or with manual transmissions in the highest gear capable of sustaining the desired test speed. Manual transmission clutches remained engaged during all maneuvers. The brake lights of the POV were not illuminated.

### **C. Principal Other Vehicle**

CIB testing requires a POV that realistically represents typical vehicles, does not suffer damage or cause damage to a test vehicle in the event of collision, and can be accurately positioned and moved during the tests. The tests reported herein made use of the NHTSA developed Strikeable Surrogate Vehicle (SSV).

This SSV system was designed specifically for common rear-end crash scenarios which AEB systems address. The key components of the SSV system are:

- A POV shell which is a visually and dimensionally accurate representation of a passenger car.
- A slider and load frame assembly to which the shell is attached.
- A two-rail track on which the slider operates.
- A road-based lateral restraint track.
- A tow vehicle.

The key requirements of the POV element are to:

- Provide an accurate representation of a real vehicle to CIB sensors, including cameras and radar.
- Be resistant to damage and inflict little or no damage to the SV as a result of repeated SV-to-POV impacts.

The key requirements of the POV delivery system are to:

- Accurately control the nominal POV speed up to 35 mph (56 km/h).
- Accurately control the lateral position of the POV within the travel lane.
- Allow the POV to move away from the SV after an impact occurs.

Operationally, the POV shell is attached to the slider and load frame which includes rollers that allows the entire assembly to move longitudinally along the guide rail. The guide rail is coupled to a tow vehicle and guided by the lateral restraint track secured to the test track surface. The rail includes a provision for restraining the shell and roller assembly in the ward direction. In operation, the shell and roller assembly engage the rail assembly through detents to prevent relative motion during run-up to test speeds and deceleration of the tow vehicle. The combination of rearward stops and forward motion detents allows the test conditions, such as relative SV-to-POV headway distance, speed, etc., to be achieved and adjusted as needed in the preliminary part of a test. If during the test, the SV strikes the rear of the POV shell, the detents are overcome and the entire shell/roller assembly moves forward in a two-stage manner along the rail and away from the SV. The forward end of the rail has a cushioned stop to restrain forward motion of the shell/roller assembly. After impacting the SSV, the SV driver uses the steering wheel to maintain SV position in the center of the travel lane, thereby straddling the two-rail track. The SV driver must manually apply the SV brakes after impact. The SSV system is shown in Figures A6 through A8 and a detailed description can be found in the NHTSA report: NHTSA'S STRIKEABLE SURROGATE VEHICLE PRELIMINARY DESIGN+OVERVIEW, May 2013.

#### **D. Automatic Braking System**

The POV was equipped with an automatic braking system, which was used in Test 3. The braking system consisted of the following components:

- Electronically controlled linear actuator, mounted on the seat rail and attached to the brake pedal. The actuator can be programmed for control of stroke and rate.
- PC module programmed for control of the stroke and rate of the linear actuator.
- Switch to activate actuator.

In some cases, the SV is also equipped with an automatic braking system (E-brake) for the purpose of slowing the SV before impact with the SSV in cases where the SV is



likely to fail a test. The system fires when TTC is below 0.7 sec. It is typically enabled when an SV has already impacted the SSV one or two times.

### **E. Instrumentation**

Table 2 lists the sensors, signal conditioning, and data acquisition equipment used for these tests.

**Table 2. Test Instrumentation and Equipment**

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Tire Pressure Gauge	Vehicle Tire Pressure	0-100 psi 0-690 kPa	< 1% error between 20 and 100 psi	Omega DPG8001	17042707002	By: DRI Date: 8/18/2020 Due: 8/18/2021
Platform Scales	Vehicle Total, Wheel, and Axle Load	2200 lb/platform	0.1% of reading	Intercomp SW wireless	0410MN20001	By: DRI Date: 4/20/2020 Due: 4/20/2021
Linear (string) encoder	Throttle pedal travel	10 in	0.1 in	UniMeasure LX-EP	50060726	By: DRI Date: 6/19/2020 Due: 6/19/2021
Differential Global Positioning System	Position, Velocity	Latitude: $\pm 90$ deg Longitude: $\pm 180$ deg Altitude: 0-18 km Velocity: 0-1000 knots	Horizontal Position: $\pm 1$ cm Vertical Position: $\pm 2$ cm Velocity: 0.05 km/h	Trimble GPS Receiver, 5700 (base station and in-vehicle)	00440100989	N/A
Multi-Axis Inertial Sensing System	Position; Longitudinal, Lateral, and Vertical Accels; Lateral, Longitudinal and Vertical Velocities; Roll, Pitch, Yaw Rates; Roll, Pitch, Yaw Angles	Accels $\pm 10g$ , Angular Rate $\pm 100$ deg/s, Angle $>45$ deg, Velocity $>200$ km/h	Accels .01g, Angular Rate 0.05 deg/s, Angle 0.05 deg, Velocity 0.1 km/h	Oxford Inertial +		By: Oxford Technical Solutions
					2258	Date: 5/3/2019 Due: 5/3/2021
					2182	Date: 9/16/2019 Due: 9/16/2021

**Table 2. Test Instrumentation and Equipment (continued)**

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Real-Time Calculation of Position and Velocity Relative to Lane Markings (LDW) and POV (FCW)	Distance and Velocity to lane markings (LDW) and POV (FCW)	Lateral Lane Dist: ±30 m Lateral Lane Velocity: ±20 m/sec Longitudinal Range to POV: ±200 m Longitudinal Range Rate: ±50 m/sec	Lateral Distance to Lane Marking: ±2 cm Lateral Velocity to Lane Marking: ±0.02m/sec Longitudinal Range: ±3 cm Longitudinal Range Rate: ±0.02 m/sec	Oxford Technical Solutions (OXTS), RT-Range	97	N/A
Microphone	Sound (to measure time at alert)	Frequency Response: 80 Hz – 20 kHz	Signal-to-noise: 64 dB, 1 kHz at 1 Pa	Audio-Technica AT899	N/A	N/A
Light Sensor	Light intensity (to measure time at alert)	Spectral Bandwidth: 440-800 nm	Rise time < 10 msec	DRI designed and developed Light Sensor	N/A	N/A
Accelerometer	Acceleration (to measure time at alert)	±5g	≤ 3% of full range	Silicon Designs, 2210-005	N/A	N/A
Coordinate Measurement Machine	Inertial Sensing System Coordinates	0-8 ft 0-2.4 m	±.0020 in. ±.051 mm (Single point articulation accuracy)	Faro Arm, Fusion	UO8-05-08-06636	By: DRI Date: 1/6/2021 Due: 1/6/2022
Type	Description			Mfr, Model	Serial Number	
Data Acquisition System	Data acquisition is achieved using a dSPACE MicroAutoBox II. Data from the Oxford IMU, including Longitudinal, Lateral, and Vertical Acceleration, Roll, Yaw, and Pitch Rate, Forward and Lateral Velocity, Roll and Pitch Angle are sent over Ethernet to the MicroAutoBox. The Oxford IMUs are calibrated per the manufacturer's recommended schedule (listed above).			dSPACE Micro-Autobox II 1401/1513		
				Base Board	549068	
				I/O Board	588523	

## APPENDIX A

### Photographs

## LIST OF FIGURES

	Page
Figure A1. Front View of Subject Vehicle .....	A-3
Figure A2. Rear View of Subject Vehicle.....	A-4
Figure A3. Window Sticker (Monroney Label) .....	A-5
Figure A4. Vehicle Certification Label .....	A-6
Figure A5. Tire Placard .....	A-7
Figure A6. Rear View of Principal Other Vehicle (SSV) .....	A-8
Figure A7. Load Frame/Slider of SSV .....	A-9
Figure A8. Two-Rail Track and Road-Based Lateral Restraint Track.....	A-10
Figure A9. Steel Trench Plate .....	A-11
Figure A10. DGPS and Inertial Measurement Unit Installed in Subject Vehicle.....	A-12
Figure A11. Sensors for Detecting Auditory and Visual Alerts.....	A-13
Figure A12. Computer Installed in Subject Vehicle .....	A-14
Figure A13. Brake Actuator Installed in POV System.....	A-15
Figure A14. AEB Setup Menus (page 1 of 2) .....	A-16
Figure A15. AEB Setup Menus (page 2 of 2) .....	A-17
Figure A16. Button for Accessing System Menus .....	A-18
Figure A17. Visual Alert.....	A-19



Figure A1. Front View of Subject Vehicle



Figure A2. Rear View of Subject Vehicle



### 2021 SANTA FE SEL 2.5L FWD

SOLD TO: \_\_\_\_\_ SHIPPED TO: \_\_\_\_\_

VIN: SNMS34AJ3MH32  
 MODEL: 644D2F4S  
 ENGINE: G4KNMK08B  
 PORT OF ENTRY: MA  
 EXTERIOR COLOR: QUARTZ WHITE  
 INTERIOR/SEAT COLOR: BLACK/BLACK  
 TRANSPORT: TRUCK  
 ACCESSORY WEIGHT: 0 lbs./ 0 kgs.  
 EMISSIONS: This vehicle meets California Emissions regulations and is Certified as a Super Ultra Low Emission Vehicle (SULEV)

### GOVERNMENT 5-STAR SAFETY RATINGS

<b>Overall Vehicle Score</b>		Not Rated
Based on the combined rating of frontal, side and rollover. Should ONLY be compared to other vehicles of similar size and weight.		
<b>Frontal</b>	Driver	Not Rated
<b>Crash</b>	Passenger	Not Rated
Based on the risk of injury in a frontal impact. Should ONLY be compared to other vehicles of similar size and weight.		
<b>Side</b>	Front seat	Not Rated
<b>Crash</b>	Rear seat	Not Rated
Based on the risk of injury in a side impact.		
<b>Rollover</b>		★★★★
Based on the risk of rollover in a single-vehicle crash.		

Star ratings range from 1 to 5 stars (★★★★) with 5 being the highest.  
 Source: National Highway Traffic Safety Administration (NHTSA).  
[www.safercar.gov](http://www.safercar.gov) or 1-888-327-4236

#### STANDARD FEATURES:

**AMERICA'S BEST WARRANTY**  
 5-year/60,000-mile New Vehicle Warranty\*  
 10-year/100,000-mile Powertrain Warranty\*  
 7-year/Unlimited-mile Anti-perforation Warranty\*  
 3-year/36,000-mile Complimentary Maintenance\*  
 5-year/Unlimited-mile Roadside Assistance  
 \*Limited warranties, see dealer for details

**ADVANCED SAFETY TECHNOLOGY**  
 Forward Collision-Avoidance Assist, Safe Exit Assist  
 Blind-Spot Collision-Avoidance Assist, High Beam Assist  
 Rear Cross-Traffic Collision-Avoidance Assist, Immobilizer  
 Lane Keeping Assist, Driver Attention Warning  
 Rear Occupant Alert, Smart Cruise Control with Stop & Go  
 Rear View Monitor, Lane Following Assist

**POWERTRAIN TECHNOLOGY**  
 Smartstream 2.5L 4-Cylinder Engine w/ GDI and MPI  
 8-speed Automatic Transmission with SHIFTRONIC®  
 Electronic Parking Brake, Hillstart Assist Control  
 Idle, Stop & Go (ISG)

**EXTERIOR**  
 18" Alloy Wheels  
 LED Daytime Running Lights  
 Automatic LED Headlights and Chrome Accent Front Grille  
 Privacy Rear Glass, Heated Side Mirrors  
 Variable Intermittent Front Windshield Wipers  
 Roof Side Rails

**COMFORT & CONVENIENCE**  
 Cloth Seats, Heated Front Seats  
 8-way Power Driver Seat plus Lumbar Support  
 60/40 Split 2nd Row Fold-flat Seats  
 Power Door Locks and Windows with Front Auto-Down/Up  
 Air Conditioning, Rear Air Vents  
 TB- & Telescoping Steering Wheel w/ Audio/Cruise/Phone Ctl's  
 Proximity Key with Push Button Start  
 Cargo Area Underfloor Storage, Temporary Compact Spare Tire  
 8" Display Audio with Android Auto (TM) & Apple CarPlay (TM)  
 AM/FM/HD Radio/SiriusXM® Audio System, 12V Power Outlets  
 SiriusXM® w/90 Day Trial, Not Available in AK & HI  
 Dual FR and RR USB Outlets, Bluetooth® Hands-free System  
 Multi-Information Display, Wireless Device Charging  
 Blue Link® Connected Services 3-years Standard (enrollment req)  
 Blue Link Remote Start (3-year Complimentary Service)  
 Full Tank of Fuel

Manufacturer's Suggested Retail Price:	\$28,650.00
<b>ADDED FEATURES:</b>	
*QUARTZ WHITE(W/W8) Paint	\$350.00
*Convenience Package:	\$1,800.00
Ultrasonic Rear Occupant Alert	
12.3" Digital Instrument Cluster	
LED Taillights, Puddle Lamps	
Side Mirrors with Turn Signal Indicators	
Hands-Free Smart Liftgate	
Power Release 2nd Row Seats	
Dual Automatic Temperature Control	
Leather-Wrapped Steering Wheel	
Rear Side Window Sunshades	
Hyundai Digital Key	
Auto-dimming Rearview Mirror w/ HomeLink®	
*Premium Package:	\$3,950.00
Panoramic Sunroof, LED Interior Lights	
Leather Seating Surfaces, Power Passenger Seat	
10.25" Navigation System, Highway Drive Assist	
Rear Seat Quiet Mode, Premium Door Sill Plate	
Hamam Kardon® Premium Audio System	
*Cargo Package	\$200.00
Cargo Tray, Cargo Net & First Aid Kit	
*Carpeted Floor Mats	\$155.00
*Cargo Cover	\$190.00
*Rear Bumper Appliqué	\$75.00
*Wheel Locks	\$65.00
Inland Freight & Handling:	\$1,185.00
<b>Total Price :</b>	<b>\$36,620.00</b>



### EPA DOT Fuel Economy and Environment Gasoline Vehicle

**Fuel Economy**

**26** MPG  
 combined city/hwy

25 city  
 28 highway

3.8 gallons per 100 miles

Small SUVs range from 16 to 125 MPG. The best vehicle rates 141 MPG.

**You spend \$250**  
 more in fuel costs over 5 years compared to the average new vehicle.

**Annual fuel cost \$1,550**

**Fuel Economy & Greenhouse Gas Rating** (tailpipe only) **5** Best

**Smog Rating** (tailpipe only) **7** Best

This vehicle emits 344 grams CO<sub>2</sub> per mile. The best emits 0 grams per mile (tailpipe only). Producing and distributing fuel also create emissions; learn more at [fuelconomy.gov](http://fuelconomy.gov).

Actual results will vary for many reasons, including driving conditions and how you drive and maintain your vehicle. The average new vehicle gets 27 MPG and costs \$7,500 to fuel over 5 years. Cost estimates are based on 15,000 miles per year at \$2.70 per gallon. MPGe is miles per gasoline gallon equivalent. Vehicle emissions are a significant cause of climate change and smog.

**fuelconomy.gov**  
 Calculate personalized estimates and compare vehicles

Smartphone QR Code

Manufacturer's suggested retail price includes manufacturer's recommended pre-delivery service. Gasoline license and title fees state and local taxes and dealer installed options and accessories are not included in the manufacturer's suggested retail price. This label has been affixed to this vehicle by Hyundai Motor America, pursuant to the requirements of 15 U.S.C. 1231 et seq. which prohibits its removal or alteration prior to delivery to the ultimate purchaser.

**PARTS CONTENT INFORMATION FOR VEHICLE IN THIS CARLINE:**  
**U.S./CANADIAN PARTS CONTENT: 51 %**  
**MAJOR SOURCES OF FOREIGN PARTS CONTENT: KOREA: 38 %**

Note: Parts content does not include final assembly, distribution, or other non-parts costs.

**FOR THIS VEHICLE:**  
**FINAL ASSEMBLY POINT: MONTGOMERY, ALABAMA U.S.A.**  
**COUNTRY OF ORIGIN:**  
**ENGINE: U.S.A.**  
**TRANSMISSION: U.S.A./KOREA**

9 A 1

Figure A3. Window Sticker (Monroney Label)





MANUFACTURED BY  
HYUNDAI MOTOR MANUFACTURING ALABAMA, LLC

Jan/08/21	GVWR 5137 lbs	PAINT WW8	TRIM NNB
GAWR	TIRES	RIMS	COLD TIRE INFL
FRONT 2866 lbs	235/60R18	7.5JX18	35 psi SINGLE
REAR 2976 lbs	235/60R18	7.5JX18	35 psi SINGLE

THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S.A. FEDERAL  
MOTOR VEHICLE SAFETY AND THEFT PREVENTION STANDARDS  
IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE

V.I.N 5NMS34AJ3MH32

TYPE: MPV



Figure A4. Vehicle Certification Label



**TIRE AND LOADING INFORMATION**  
**RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT**

SEATING CAPACITY NOMBRE DE PLACES	TOTAL 5	FRONT AVANT 2	REAR ARRIÈRE 3
--------------------------------------	---------	------------------	-------------------

The combined weight of occupants and cargo should never exceed 480 kg or 1058 lbs.  
 Le poids total des occupants et du chargement ne doit jamais dépasser 480 kg ou 1058 lb.

TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS À FROID
FRONT AVANT	235/60R18	240kPa, 35psi
REAR ARRIÈRE	235/60R18	240kPa, 35psi
SPARE PNEU DE SECOURS	T135/90D17	420kPa, 60psi

**SEE OWNER'S  
MANUAL FOR  
ADDITIONAL  
INFORMATION**  
**VOIR LE MANUEL  
DE L'USAGER  
POUR PLUS DE  
RENSEIGNEMENTS**



**CAUTION: LOAD CARRYING CAPACITY REDUCED**  
 Modifications to this vehicle have reduced  
 the original load carrying capacity by: \_\_\_\_\_ kg or \_\_\_\_\_ lbs

Figure A5. Tire Placard



Figure A6. Rear View of Principal Other Vehicle (SSV)



Figure A7. Load Frame/Slider of SSV

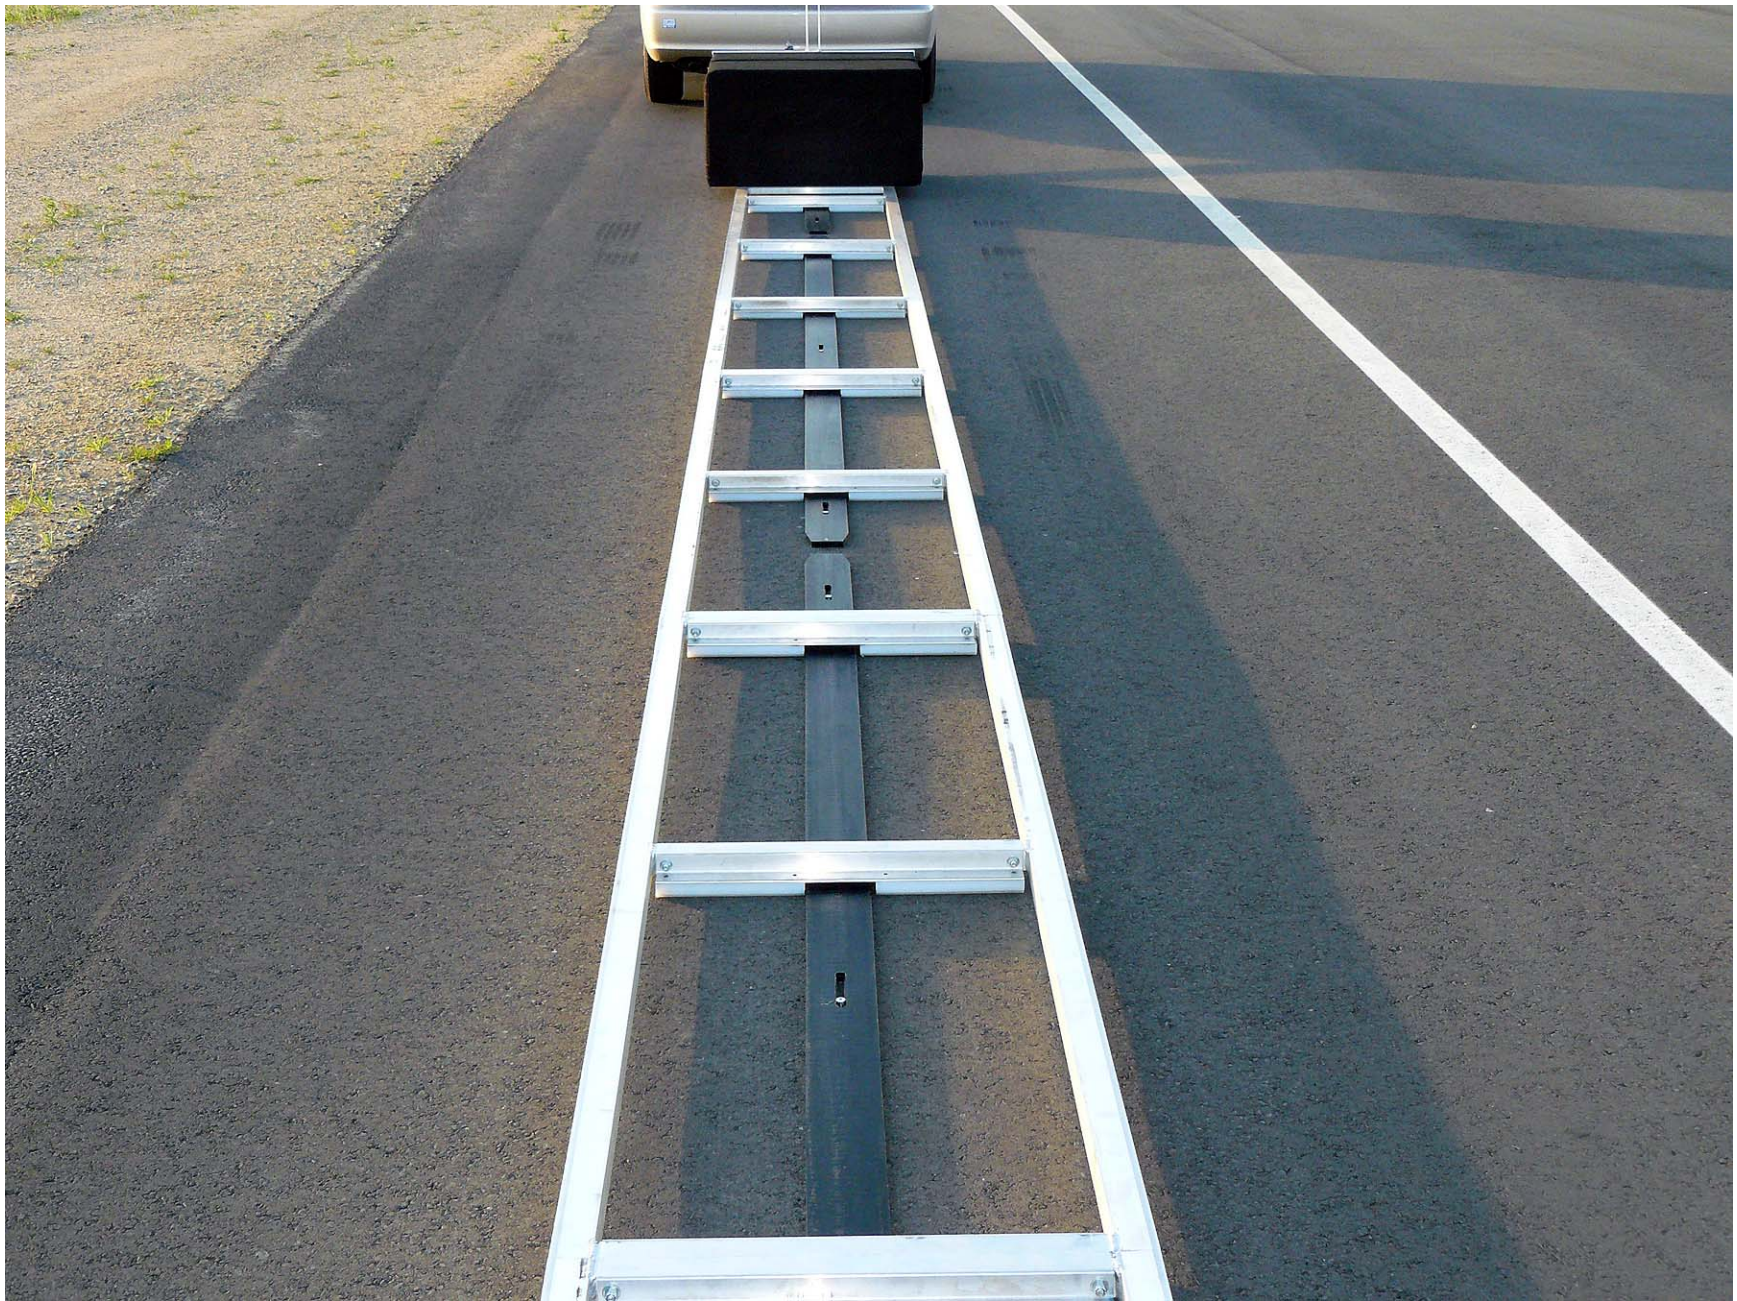


Figure A8. Two-Rail Track and Road-Based Lateral Restraint Track



Figure A9. Steel Trench Plate



Figure A10. DGPS and Inertial Measurement Unit Installed in Subject Vehicle



Figure A11. Sensors for Detecting Auditory and Visual Alerts





Figure A12. Computer Installed in Subject Vehicle



Figure A13. Brake Actuator Installed in POV System

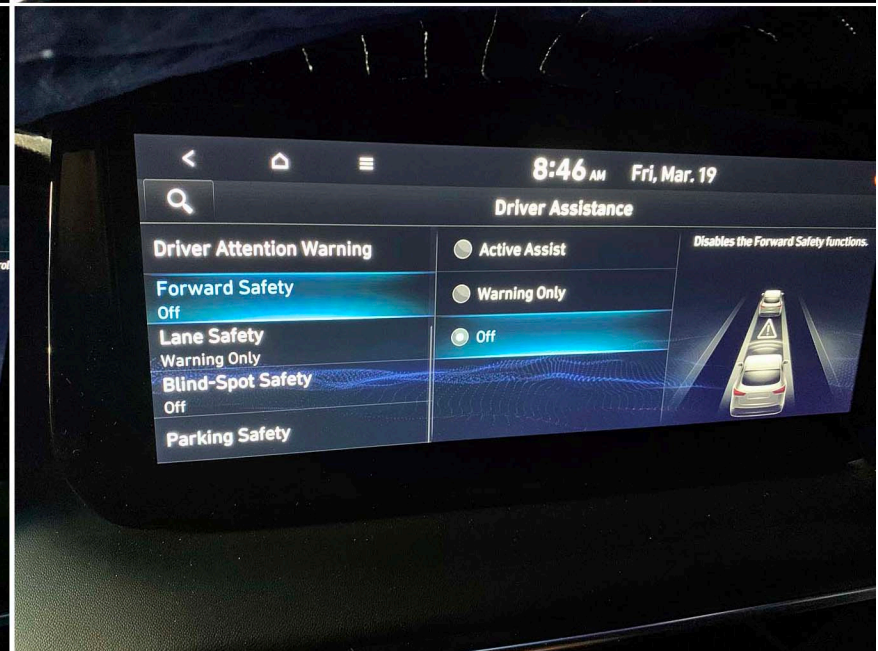
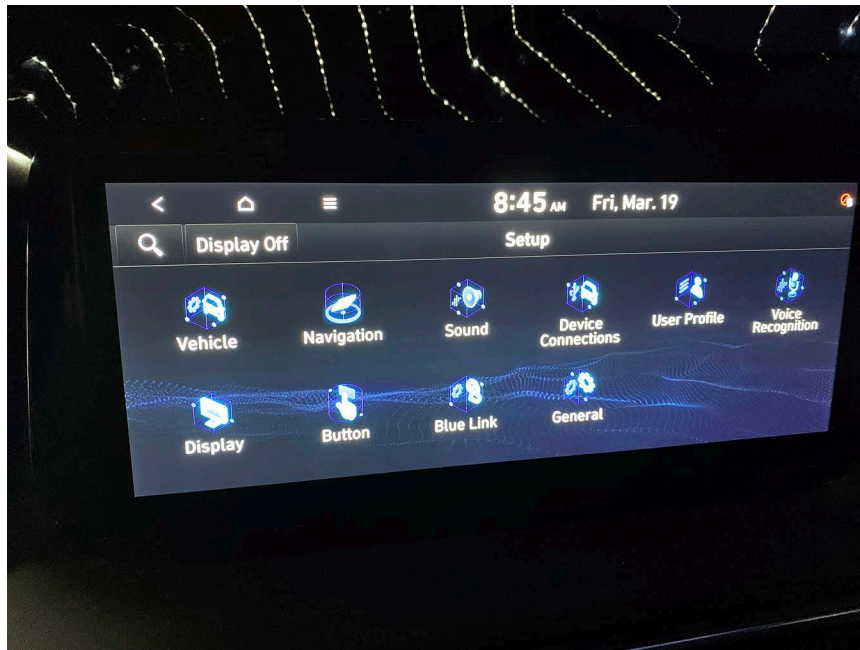


Figure A14. AEB Setup Menus (page 1 of 2)



Figure A15. AEB Setup Menus (page 2 of 2)



Figure A16. Button for Accessing System Menus

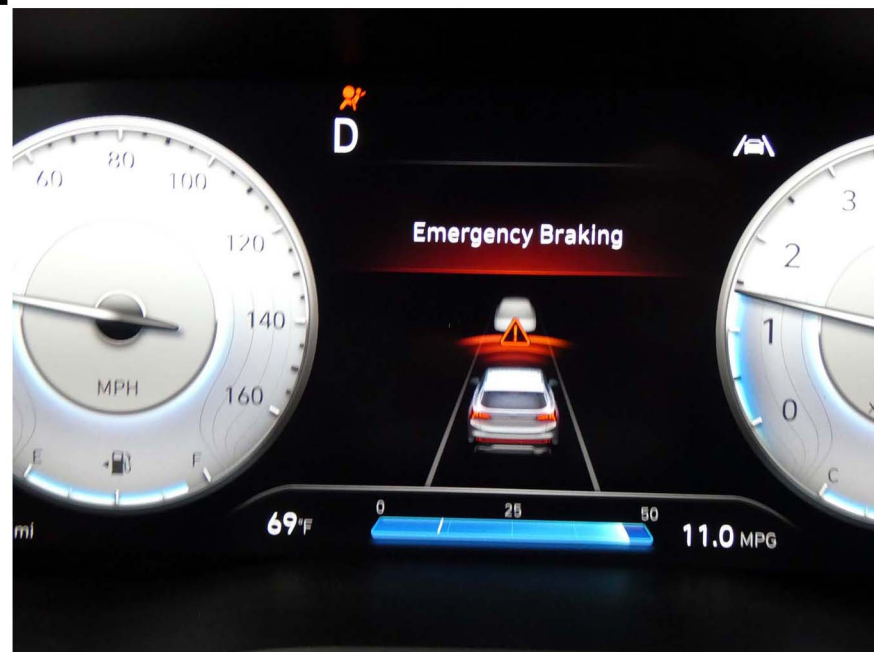


Figure A17. Visual Alert

## APPENDIX B

Excerpts from Owner's Manual

**Forward Safety warning light  
(if equipped)**



This warning light illuminates:

- When you set the ignition switch or the Engine Start/Stop button to the ON position.
  - The Forward Safety warning light illuminates for approximately 3 seconds and then goes off.
- Whenever there is a malfunction with Forward Collision-Avoidance Assist.

If this occurs, we recommend that you have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “Forward Collision-Avoidance Assist (FCA)” section in chapter 7.**

**Lane Safety indicator light  
(if equipped)**



This indicator light illuminates:

- [Green] When the system operating conditions are satisfied.
- [White] When the system operating conditions are not satisfied.
- [Yellow] Whenever there is a malfunction with Lane Keeping Assist. If this occurs, we recommend that you have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “Lane Keeping Assist (LKA)” section in chapter 7.**

**4 Wheel Drive (4WD) warning  
light**



This warning light illuminates:

Whenever there is a malfunction with the 4WD system.

If this occurs, we recommend that you have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “4 Wheel Drive (4WD)” section in chapter 6.**



***SPORT Mode Indicator Light  
(if equipped)***



**This indicator light illuminates**

When you select "SPORT" mode as drive mode.

**For more details, refer to "Drive Mode Integrated Control System" in chapter 6.**

***SMART Mode Indicator Light  
(if equipped)***



**This indicator light illuminates:**

When you select "SMART" mode as drive mode.

**For more details, refer to "Drive Mode Integrated Control System" in chapter 6.**

***Master warning light***



**This warning light illuminates:**

When there is a malfunction in operation in any of the following systems:

- Forward Collision-Avoidance Assist malfunction (if equipped)
- Forward Collision-Avoidance Assist radar blocked (if equipped)
- Blind-Spot Collision Warning malfunction (if equipped)
- Blind-Spot Collision Warning radar blocked (if equipped)
- LED headlamp malfunction (if equipped)
- High Beam Assist malfunction (if equipped)
- Smart Cruise Control with Stop & Go malfunction (if equipped)
- Smart Cruise Control with Stop & Go radar blocked (if equipped)
- Tire Pressure Monitoring System (TPMS) malfunction

To identify the details of the warning, look at the LCD display.

***Check Forward Collision-Avoidance Assist system (if equipped)***

This warning message is displayed if there is a problem with Forward Collision-Avoidance Assist. Have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “Forward Collision-Avoidance Assist (FCA)” in chapter 6.**

***Check Lane Keeping Assist system (if equipped)***

This warning message is displayed if there is a problem with Lane Keeping Assist. Have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “Lane Keeping Assist (LKA)” in chapter 6.**

***Check Blind-Spot Collision Warning system (if equipped)***

This warning message is displayed if there is a problem with Blind-Spot Collision Warning. Have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “Blind-Spot Collision Warning (BCW)” in chapter 6.**

***Check Driver Attention Warning system (if equipped)***

This warning message is displayed if there is a problem with Driver Attention Warning. Have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “Driver Attention Warning (DAW)” in chapter 6.**

***Check High Beam Assist system (if equipped)***

This warning message is displayed if there is a problem with the High Beam Assist. Have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “High Beam Assist (HBA)” in chapter 5.**


***Check Smart Cruise Control system (if equipped)***

This warning message is displayed if there is a problem with Smart Cruise Control. Have the vehicle inspected by an authorized HYUNDAI dealer.

**For more details, refer to “Smart Cruise Control (SCC)” in chapter 6.**



## LCD DISPLAY

### LCD display control

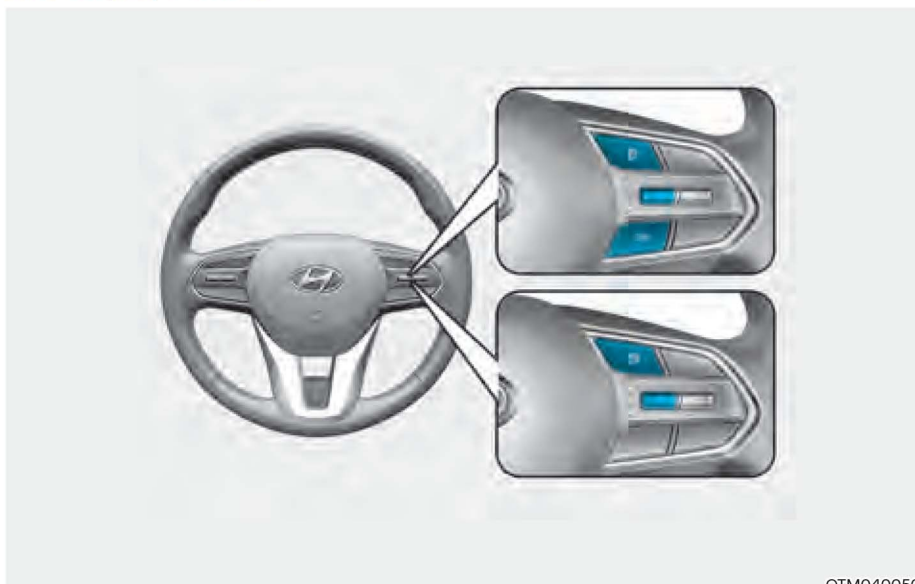


OTM040050

  The LCD display modes can be changed by using the control buttons.

Switch	Function
	MODE button for changing modes
	MOVE switch for changing items
OK	SELECT/RESET button for setting or resetting the selected item

#### Information

When the infotainment system is applied, only the User's Setting mode on the infotainment system is supported but the User's Setting mode on the instrument cluster is not supported.

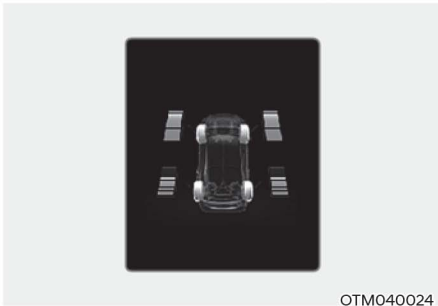

OTM040024


**Driving force distribution (4WD)**

This mode displays information related to 4WD driving force.

If the vehicle is in 4WD lock state, this mode is not displayed.

**For detailed information, refer to the "Four Wheel Drive" in the chapter 6.**

**Master warning group**

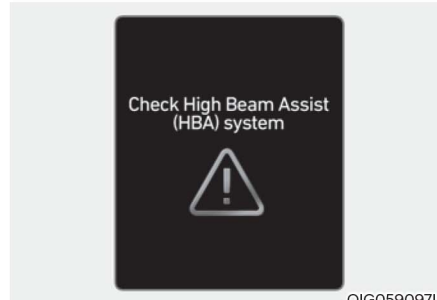

OIG059097L

This warning light informs the driver the following situations.

- Forward Collision-Avoidance Assist malfunction (if equipped)
- Forward Collision-Avoidance Assist radar blocked (if equipped)
- Blind-Spot Collision Warning malfunction (if equipped)
- Blind-Spot Collision Warning radar blocked (if equipped)
- LED headlamp malfunction (if equipped)
- High Beam Assist malfunction (if equipped)
- Smart Cruise Control malfunction (if equipped)
- Smart Cruise Control radar blocked (if equipped)
- Tire Pressure Monitoring System (TPMS) malfunction

The Master Warning Light illuminates if one or more of the above warning situations occur.

At this time, a Master Warning icon (⚠) will appear beside the User Settings icon (⚙), on the LCD display.


If the warning situation is solved, the master warning light will be turned off and the Master Warning icon will disappear.

1. Driver Assistance

Items	Explanation
<p>SCC Reaction</p>	<p>To adjust the sensitivity of the Smart Cruise Control system.</p> <ul style="list-style-type: none"> <li>• Fast/Normal/Slow</li> </ul> <p><b>For more details, refer to "Smart Cruise Control (SCC)" in chapter 7.</b></p>
<p>Driving Convenience</p>	<ul style="list-style-type: none"> <li>• Lane Following Assist</li> </ul> <p>To activate or deactivate the Lane Following Assist.  <b>For more details, refer to the "Lane Following Assist (LFA)" in chapter 7.</b></p> <ul style="list-style-type: none"> <li>• Highway Driving Assist</li> </ul> <p>To activate or deactivate the Highway Driving Assist.  <b>For more details, refer to the "Highway Driving Assist (HDA)" in chapter 7.</b></p> <ul style="list-style-type: none"> <li>• Auto Highway Speed Control</li> </ul> <p>To activate or deactivate the Auto Highway Speed Control.  <b>For more details, refer to the "Navigation-based Smart Cruise Control (NSCC)" in chapter 7.</b></p>
<p>Warning Timing</p>	<p>To adjust the warning timing of the driver assistance system.</p> <ul style="list-style-type: none"> <li>• Normal / Later</li> </ul>
<p>Warning Volume</p>	<p>To adjust the warning volume of the driver assistance system.</p> <ul style="list-style-type: none"> <li>• High / Medium / Low / Off</li> </ul>
<p>Driver Attention Warning</p>	<ul style="list-style-type: none"> <li>• Leading vehicle departure alert</li> </ul> <p>To activate or deactivate the Leading vehicle departure alert.  <b>For more details, refer to the "Leading vehicle departure alert" in chapter 7.</b></p> <ul style="list-style-type: none"> <li>• Inattentive Driving Warning</li> </ul> <p>To alert the driver's inattentive driving.  <b>For more details, refer to the "Driver attention Warning (DAW)" in chapter 7.</b></p>
<p>Forward safety</p>	<p>To adjust the Forward Collision-Avoidance Assist (FCA)</p> <ul style="list-style-type: none"> <li>• Active Assist</li> <li>• Warning Only</li> <li>• Off</li> </ul> <p><b>For more details, refer to the "Forward Collision-Avoidance Assist (FCA)" in chapter 7.</b></p>
<p>Lane safety</p>	<p>To adjust the Lane Keeping Assist (LKA) function.</p> <ul style="list-style-type: none"> <li>• Assist</li> <li>• Warning Only</li> <li>• Off</li> </ul> <p><b>For more details, refer to the "Lane Keeping Assist (LKA)" in chapter 7.</b></p>


## FORWARD COLLISION-AVOIDANCE ASSIST (FCA) (SENSOR FUSION)

### Basic function

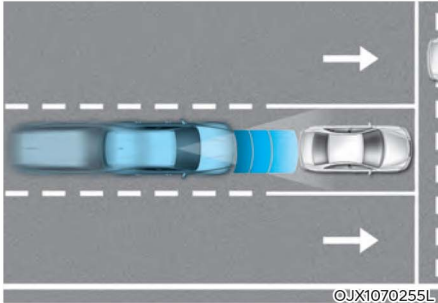


Forward Collision-Avoidance Assist is designed to help detect and monitor the vehicle ahead or help detect a pedestrian or cyclist in the roadway and warn the driver that a collision is imminent with a warning message and an audible warning, and if necessary, apply emergency braking.

### Junction Turning function (if equipped)

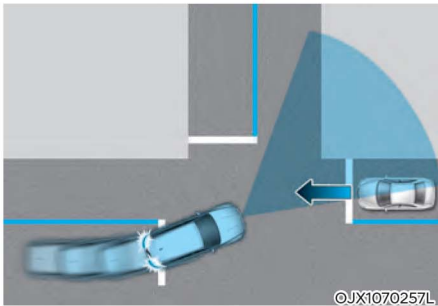

Junction Turning function will help avoid a collision with an oncoming vehicle in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking.

### Detecting sensor

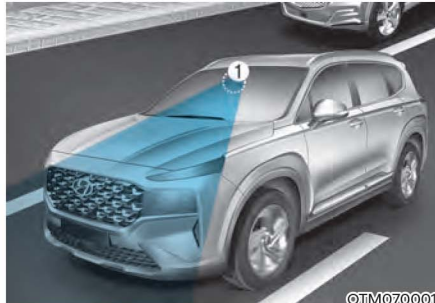

- [1] : Front view camera,
- [2] : Front radar

Refer to the picture above for the detailed location of the detecting sensors.

**CAUTION**

Take the following precautions to maintain optimal performance of the detecting sensor:

- Never disassemble the detecting sensor or sensor assembly, or apply any impact on it.
- If the detecting sensors have been replaced or repaired, we recommend that you have your vehicle inspected by an authorized HYUNDAI dealer.
- Never install any accessories or stickers on the front windshield, or tint the front windshield.
- Pay extreme caution to keep the front view camera dry.
- Never place any reflective objects (i.e. white paper, mirror) over the dashboard. Any light reflection may prevent the system from functioning properly.
- Do not apply license plate frame or objects, such as a bumper sticker, film or a bumper guard, near the front radar cover.
- Always keep the front radar and cover clean and free of dirt and debris.

Use only a soft cloth to wash the vehicle. Do not spray pressurized water directly on the sensor or sensor cover.

- If unnecessary force has been applied to the radar or around the radar, Forward Collision-Avoidance Assist may not properly operate even though a warning message does not appear on the cluster. We recommend that the vehicle be inspected by an authorized HYUNDAI dealer.
- Use only genuine parts to repair or replace a damaged front radar cover. Do not apply paint to the front radar cover.


## System settings

 
### Setting functions for the system



#### Forward Safety

With the engine on, select 'Driver Assistance → Forward Safety' from the Settings menu to set whether or not to use each function.

- If 'Active Assist' is selected, the system will warn the driver with a warning message and an audible warning depending on the collision risk levels. Braking assist will be applied depending on the collision risk.
- If 'Warning Only' is selected, the system will warn the driver with a warning message and an audible warning depending on the collision risk levels. Braking will not be assisted.
- If 'Off' is selected, the system will turn off. The  warning light will illuminate on the cluster.

The driver can monitor Forward Collision-Avoidance Assist ON/OFF status from the Settings menu. If the  warning light remains ON when the system is ON, we recommend that the system be inspected by an authorized HYUNDAI dealer.


#### WARNING

When the engine is restarted, Forward Collision-Avoidance Assist will always turn on. However, if 'Off' is selected after the engine is restarted, the driver should always be aware of the surroundings and drive safely.


#### CAUTION

- If 'Warning Only' is selected, braking is not assisted.
- The settings for Forward Safety include 'Basic function' and 'Junction Turning' (if equipped).

#### Information

Forward Collision-Avoidance Assist will turn off when ESC is turned off by pressing and holding the ESC OFF button for more than 3 seconds. The  warning light will illuminate on the cluster.



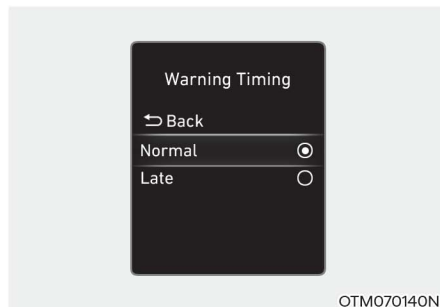


OTM070140N

### Warning Timing

With the engine on, select 'Driver Assistance → Warning Timing' from the Settings menu to change the initial warning activation time for Forward Collision-Avoidance Assist.

When the vehicle is first delivered, Warning Timing is set to 'Normal'. If you change the Warning Timing, the warning time of other Driver Assistance systems may change.

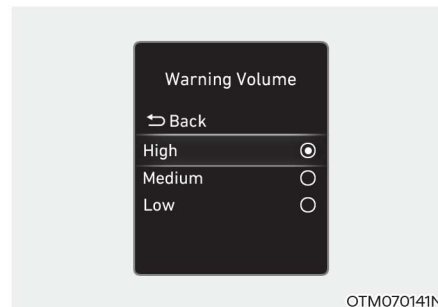

OTM070141N

### Warning Volume

With the engine on, select 'Driver Assistance → Warning Volume' from the Settings menu to change the Warning Volume to 'High', 'Medium' or 'Low' for Forward Collision-Avoidance Assist.

If you change the warning volume, the Warning Volume of other Driver Assistance systems may change.



### CAUTION

- The setting of the Warning Timing and Warning Volume applies to all functions of Forward Collision-Avoidance Assist.
- Even though 'Normal' is selected for Warning Timing, if the front vehicle suddenly stops, the initial warning activation time may seem late.
- Select 'Late' for Warning Timing when traffic is light and when driving speed is slow.



### Information

If the engine is restarted, Warning Timing and Warning Volume will maintain the last setting.

## System operation

### Basic function

#### System warning and control

The basic function for Forward Collision-Avoidance Assist is to help warn and control the vehicle depending on the collision level: 'Collision Warning', 'Emergency Braking' and 'Stopping vehicle and ending brake control'.



#### Collision Warning

- To warn the driver of a collision, the 'Collision Warning' warning message will appear on the cluster and an audible warning will sound.
- If a vehicle is detected in front, the system will operate when your vehicle speed is between approximately 6~112 mph (10~180 km/h).
- If a pedestrian or cyclist is detected in front, the system will operate when your vehicle speed is between approximately 6~53 mph (10~85 km/h).
- If 'Active Assist' is selected, braking may be assisted.



#### Emergency Braking

- To warn the driver that emergency braking will be assisted, the 'Emergency Braking' warning message will appear on the cluster and an audible warning will sound.
- If a vehicle is detected in front, the system will operate when your vehicle speed is between approximately 6~47 mph (10~75 km/h).
- If a pedestrian or cyclist is detected in front, the system will operate when your vehicle speed is between approximately 6~40 mph (10~65 km/h).
- In emergency braking situation, braking is assisted with strong braking power by the system to help prevent collision with the vehicle, pedestrian or cyclist ahead.



OTM070059L

#### Stopping vehicle and ending brake control

- When the vehicle is stopped due to emergency braking, the 'Drive carefully' warning message will appear on the cluster.  
For your safety, the driver should depress the brake pedal immediately and check the surroundings.
- Brake control will end after the vehicle is stopped by emergency braking for approximately 2 seconds.

#### Junction Turning function (if equipped)

##### System warning and control

Junction Turning function will help warn and control the vehicle depending on the collision level: 'Collision Warning', 'Emergency Braking' and 'Stopping vehicle and ending brake control'




OTM070008N

OTM070200N

#### Collision Warning

- To warn the driver of a collision, the 'Collision Warning' warning message will appear on the cluster and an audible warning will sound.
- The system will operate when your vehicle speed is between approximately 6~19 mph (10~30 km/h) and the oncoming vehicle speed is between approximately 19~44 mph (30~70 km/h).
- If 'Active Assist' is selected, braking may be assisted.

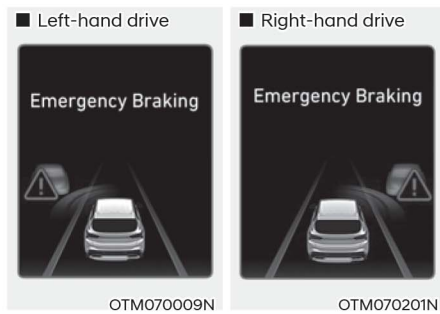

#### Emergency Braking

- To warn the driver that emergency braking will be assisted, the 'Emergency Braking' warning message will appear on the cluster and an audible warning will sound.
- The system will operate when your vehicle speed is between approximately 6~19 mph (10~30 km/h) and the oncoming vehicle speed is between approximately 19~44 mph (30~70 km/h).
- In emergency braking situation, braking is assisted with strong braking power by the system to help prevent collision with the oncoming vehicle.

#### Information

**If the driver's seat is on the left side, Junction Turning function will operate only when the driver turns left. If the driver's seat position is on right side, the function will operate only when you turn right.**




#### Stopping vehicle and ending brake control

- When the vehicle is stopped due to emergency braking, the 'Drive carefully' warning message will appear on the cluster.  
For your safety, the driver should depress the brake pedal immediately and check the surroundings.
- Brake control will end after the vehicle is stopped by emergency braking for approximately 2 seconds.

**WARNING**

Take the following precautions when using Forward Collision-Avoidance Assist:

- For your safety, change the Settings after parking the vehicle at a safe location.
- With 'Active Assist' or 'Warning Only' selected, when ESC is turned off by pressing and holding the ESC OFF button for more than 3 seconds, Forward Collision-Avoidance Assist will turn off automatically. In this case, the system cannot be set from the Settings menu and the  warning light will illuminate on the cluster which is normal. If ESC is turned on by pressing the ESC OFF button, Forward Collision-Avoidance Assist will maintain the last setting.
- Forward Collision-Avoidance Assist does not operate in all situations or cannot avoid all collisions.
- The driver should hold the responsibility to control the vehicle. Do not solely depend on Forward Collision-Avoidance Assist. Rather, maintain a safe braking distance, and if necessary, depress the brake pedal to reduce driving speed or to stop the vehicle.
- Never deliberately operate Forward Collision-Avoidance Assist on people, animal, objects, etc. It may cause serious injury or death.
- Forward Collision-Avoidance Assist may not operate if the driver depresses the brake pedal to avoid collision.
- Depending on the road and driving conditions, Forward Collision-Avoidance Assist may warn the driver late or may not warn the driver.
- During Forward Collision-Avoidance Assist operation, the vehicle may stop suddenly injuring passengers and shifting loose objects. Always have the seat belt on and keep loose objects secured.
- If any other system's warning message is displayed or audible warning is generated, Forward Collision-Avoidance Assist warning message may not be displayed and audible warning may not be generated.
- You may not hear the warning sound of Forward Collision-Avoidance Assist if the surrounding is noisy.
- Forward Collision-Avoidance Assist may turn off or may not operate properly or may operate unnecessarily depending on the road conditions and the surroundings.

**WARNING**

- Even if there is a problem with Forward Collision-Avoidance Assist, the vehicle's basic braking performance will operate normally.
- During emergency braking, braking control by the system will automatically cancel when the driver excessively depresses the accelerator pedal or sharply steers the vehicle.

 **CAUTION**


- Forward Collision-Avoidance Assist operating speed range may reduce due to the conditions of the vehicle or pedestrian in front or surroundings. Depending on the speed, the system may only warn the driver, or the system may not operate.
- Forward Collision-Avoidance Assist will operate under certain conditions by judging the risk level based on the condition of the oncoming vehicle, driving direction, speed and surroundings.



 **Information**

In a situation where collision is imminent, braking may be assisted by Forward Collision-Avoidance Assist when braking is insufficient by the driver.


**System malfunction and limitations**

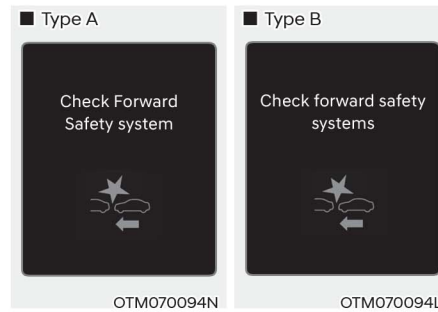**System malfunction**





When Forward Collision-Avoidance Assist is not working properly, the 'Check Forward Safety system(s)' warning message will appear, and the  and  warning lights will illuminate on the cluster. We recommend that the system be inspected by an authorized HYUNDAI dealer.
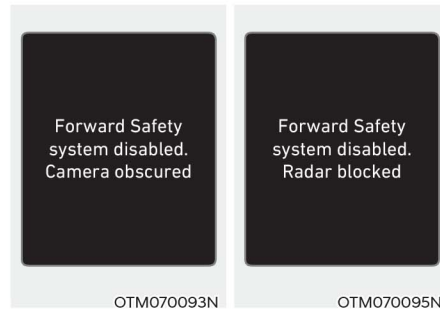
### System disabled



When the front windshield where the front view camera is located, front radar cover or sensor is covered with foreign material, such as snow or rain, it can reduce the detecting performance and temporarily limit or disable Forward Collision-Avoidance Assist.

If this occurs the 'Forward Safety system(s) disabled. Camera obscured' or the 'Forward Safety system(s) disabled. Radar blocked' warning message, and the  and  warning lights will illuminate on the cluster.

The system will operate normally when such snow, rain or foreign material is removed.

If the system does not operate normally after obstruction (snow, rain, or foreign material) is removed, we recommend that the system be inspected by an authorized HYUNDAI dealer.

### WARNING

- Even though the warning message or warning light does not appear on the cluster, Forward Collision-Avoidance Assist may not properly operate.
- Forward Collision-Avoidance Assist may not properly operate in an area (e.g. open terrain), where any substance are not detected after turning ON the engine.

### Limitations of the system


Forward Collision-Avoidance Assist may not operate normally, or the system may operate unexpectedly under the following circumstances:

- The detecting sensor or the surroundings are contaminated or damaged
- The temperature around the front view camera is high or low
- The camera lens is contaminated due to tinted, filmed or coated windshield, damaged glass, or stuck of foreign material (sticker, bug, etc.) on the glass
- Moisture is not removed or frozen on the windshield
- Washer fluid is continuously sprayed, or the wiper is on
- Driving in heavy rain or snow, or thick fog
- The field of view of the front view camera is obstructed by sun glare
- Street light or light from an oncoming vehicle is reflected on the wet road surface, such as a puddle on the road
- An object is placed on the dashboard

- Your vehicle is being towed
- The surrounding is very bright
- The surrounding is very dark, such as in a tunnel, etc.
- The brightness changes suddenly, for example when entering or exiting a tunnel
- The brightness outside is low, and the headlamps are not on or are not bright
- Driving through steam, smoke or shadow
- Only part of the vehicle, pedestrian or cyclist is detected
- The vehicle in front is a bus, heavy truck, truck with a unusually shaped luggage, trailer, etc.
- The vehicle in front has no tail lights, tail lights are located unusually, etc.
- The brightness outside is low, and the tail lamps are not on or are not bright
- The rear of the front vehicle is small or the vehicle does not look normal, such as when the vehicle is tilted, overturned, or the side of the vehicle is visible, etc.
- The front vehicle's ground clearance is low or high
- A vehicle, pedestrian or cyclist suddenly cuts in front
- The bumper around the front radar is impacted, damaged or the front radar is out of position
- The temperature around the front radar is high or low
- Driving through a tunnel or iron bridge
- Driving in large areas where there are few vehicles or structures (i.e. desert, meadow, suburb, etc.)
- Driving near areas containing metal substances, such as a construction zone, railroad, etc.
- A material is near that reflects very well on the front radar, such as a guardrail, nearby vehicle, etc.
- The cyclist in front is on a bicycle made of material that does not reflect on the front radar
- The vehicle in front is detected late
- The vehicle in front is suddenly blocked by an obstacle
- The vehicle in front suddenly changes lane or suddenly reduces speed
- The vehicle in front is bent out of shape
- The front vehicle's speed is fast or slow
- The vehicle in front steers in the opposite direction of your vehicle to avoid a collision
- With a vehicle in front, your vehicle changes lane at low speed
- The vehicle in front is covered with snow
- You are departing or returning to the lane
- Unstable driving
- You are on a roundabout and the vehicle in front is not detected
- You are continuously driving in a circle
- The vehicle in front has an unusual shape
- The vehicle in front is driving uphill or downhill



- The pedestrian or cyclist is not fully detected, for example, if the pedestrian is leaning over or is not fully walking upright
- The pedestrian or cyclist is wearing clothing or equipment that makes it difficult to detect as a pedestrian or cyclist

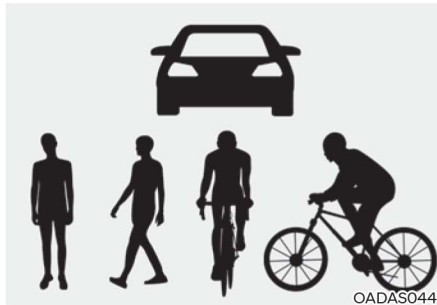


The illustration above shows the image the front view camera is capable of detecting as a vehicle, pedestrian and cyclist.

- The pedestrian or cyclist in front is moving very quickly
- The pedestrian or cyclist in front is short or is posing a low posture
- The pedestrian or cyclist in front has impaired mobility
- The pedestrian or cyclist in front is moving intersected with the driving direction
- There is a group of pedestrians, cyclists or a large crowd in front
- The pedestrian or cyclist is wearing clothing that easily blends into the background, making it difficult to detect
- The pedestrian or cyclist is difficult to distinguish from the similar shaped structure in the surroundings
- You are driving by a pedestrian, cyclist, traffic sign, structure, etc. near the intersection
- Driving in a parking lot
- Driving through a tollgate, construction area, unpaved road, partial paved road, uneven road, speed bumps, etc.
- Driving on an incline road, curved road, etc.
- Driving through a roadside with trees or streetlights
- The adverse road conditions cause excessive vehicle vibrations while driving
- Your vehicle height is low or high due to heavy loads, abnormal tire pressure, etc.
- Driving through a narrow road where trees or grass are overgrown
- There is interference by electromagnetic waves, such as driving in an area with strong radio waves or electrical noise



## WARNING

- Driving on a curve

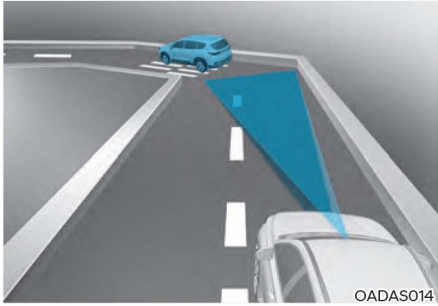


OADAS014



OADAS016




OADAS018

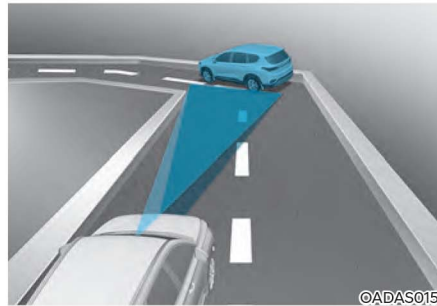

OADAS015



OADAS017

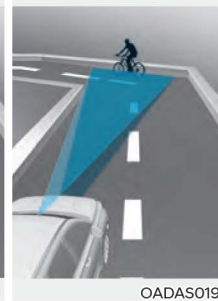

OADAS019


**Forward Collision-Avoidance Assist may not detect other vehicles, pedestrians or cyclists in front of you on curved roads adversely affecting the performance of the sensors. This may result in no warning or braking assist when necessary.**

**When driving on a curve, you must maintain a safe braking distance, and if necessary, steer the vehicle and depress the brake pedal to reduce your driving speed in order to maintain a safe distance.**

**Forward Collision-Avoidance Assist may detect a vehicle, pedestrian or cyclist in the next lane or outside the lane when driving on a curved road.**

**If this occurs, the system may unnecessarily warn the driver and control the brake. Always check the traffic conditions around the vehicle.**

- Driving on a slope

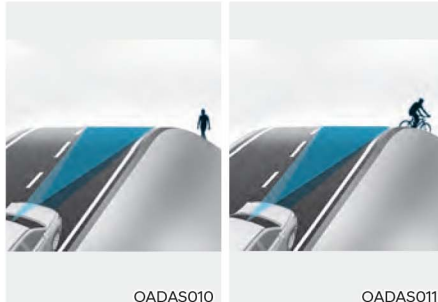

**Forward Collision-Avoidance Assist may not detect other vehicles, pedestrians or cyclists in front of you while driving uphill or downhill adversely affecting the performance of the sensors.**

This may result in unnecessary warning or braking assist, or no warning or braking assist when necessary.

Also, vehicle speed may rapidly decrease when a vehicle, pedestrian or cyclist ahead is suddenly detected.


Always have your eyes on the road while driving uphill or downhill and if necessary, steer your vehicle and depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

- Changing lanes



[A] : Your vehicle,  
[B] : Lane changing vehicle


**When a vehicle moves into your lane from an adjacent lane, it cannot be detected by the sensor until it is in the sensor's detection range. Forward Collision-Avoidance Assist may not immediately detect the vehicle when the vehicle changes lanes abruptly. In this case, you must maintain a safe braking distance, and if necessary, steer your vehicle and depress the brake pedal to reduce your driving speed in order to maintain a safe distance.**

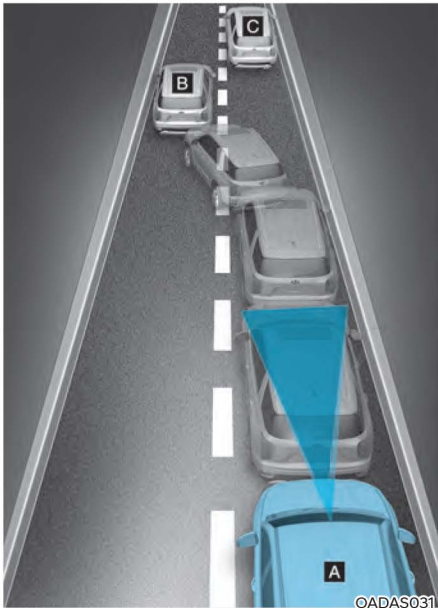

[A] : Your vehicle, [B] : Lane changing vehicle,  
[C] : Same lane vehicle

**When a vehicle in front of you merges out of the lane, Forward Collision-Avoidance Assist may not immediately detect the vehicle that is now in front of you. In this case, you must maintain a safe braking distance, and if necessary, steer your vehicle and depress the brake pedal to reduce your driving speed in order to maintain a safe distance.**

- **Detecting vehicle**

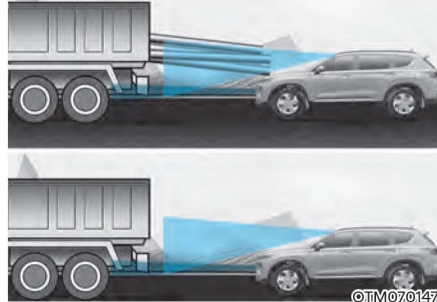

**If the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance, additional special attention is required. Forward Collision-Avoidance Assist may not be able to detect the cargo extending from the vehicle. In these instances, you must maintain a safe braking distance from the rearmost object, and if necessary, steer your vehicle and depress the brake pedal to reduce your driving speed in order to maintain distance.**

 **WARNING**

- When you are towing a trailer or another vehicle, we recommend that Forward Collision-Avoidance Assist is turned off due to safety reasons.
- Forward Collision-Avoidance Assist may operate if objects that are similar in shape or characteristics to vehicles, pedestrians and cyclists are detected.
- Forward Collision-Avoidance Assist does not operate on bicycles, motorcycles, or smaller wheeled objects, such as luggage bags, shopping carts, or strollers.
- Forward Collision-Avoidance Assist may not operate normally if interfered by strong electromagnetic waves.
- Forward Collision-Avoidance Assist may not operate for 15 seconds after the vehicle is started, or the front view camera is initialized.

 **Information**

In some instances, FCA system may be cancelled when subjected to electromagnetic interference.

 **Information**

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

## APPENDIX C

### Run Log

Subject Vehicle: **2021 Hyundai Santa Fe 2.5L FWD**

Test Date: **3/9/2021**

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Min. Distance (ft)	Speed Reduction (mph)	Peak Decel. (g)	CIB TTC (s)	Pass/Fail	Notes
1	Static Run								Zero SV front bumper to SSV rear bumper and collect data
2	<b>Stopped POV</b>	N							Throttle
3		Y	2.04	9.36	24.5	0.96	1.07	Pass	
4		Y	1.99	9.77	24.5	1.05	1.11	Pass	
5		Y	2.07	9.66	24.8	0.96	1.10	Pass	
6		Y	2.01	8.94	24.5	1.00	1.08	Pass	
7		Y	2.03	9.85	24.2	0.99	1.08	Pass	
8		Y	2.08	9.82	24.8	1.00	1.09	Pass	
9		Y	2.07	9.86	25.5	1.06	1.11	Pass	
10	Static Run								
11	<b>Slower POV, 25 vs 10</b>	Y	1.81	9.30	14.8	0.97	0.88	Pass	
12		Y	1.79	9.45	13.9	0.97	0.90	Pass	
13		Y	1.80	10.55	14.8	0.91	0.94	Pass	
14		Y	1.78	10.30	14.3	0.95	0.93	Pass	
15		Y	1.82	9.25	15.1	0.98	0.88	Pass	
16		Y	1.80	9.77	15.7	1.02	0.91	Pass	

Run	Test Type	Valid Run?	FCW TTC (s)	Min. Distance (ft)	Speed Reduction (mph)	Peak Decel. (g)	CIB TTC (s)	Pass/Fail	Notes
17	<b>Slower POV, 25 vs 10</b>	Y	1.75	9.47	14.5	0.96	0.90	Pass	
18	Static Run								Check zero data is within $\pm 0.167$ ft ( $\pm 0.05$ m)
19	<b>Slower POV, 45 vs 20</b>	Y	2.29	11.47	24.4	0.84	1.27	Pass	
20		Y	2.33	10.85	25.1	0.88	1.24	Pass	
21		Y	2.39	12.96	24.8	0.97	1.26	Pass	
22		N							GPS
23		N							GPS
24		N							GPS
25		Y	2.33	12.64	24.9	0.89	1.23	Pass	
26		Y	2.30	11.81	24.7	0.91	1.25	Pass	
27		Y	2.34	12.71	24.6	0.94	1.23	Pass	
28		Y	2.40	12.69	24.9	0.88	1.23	Pass	
29	Static run								Check zero data is within $\pm 0.167$ ft ( $\pm 0.05$ m)
30	<b>Decelerating POV</b>	N							POV brake
31		Y	1.57	6.35	22.5	1.06	0.87	Pass	
32		Y	1.57	7.98	22.1	0.88	0.96	Pass	
33		Y	1.73	8.12	23.2	0.95	0.98	Pass	
34		Y	1.67	7.74	22.4	0.97	0.96	Pass	
35		Y	1.73	7.42	23.8	0.95	0.99	Pass	
36		Y	1.72	6.97	23.1	0.99	0.93	Pass	



Run	Test Type	Valid Run?	FCW TTC (s)	Min. Distance (ft)	Speed Reduction (mph)	Peak Decel. (g)	CIB TTC (s)	Pass/Fail	Notes
37	<b>Decelerating POV</b>	Y	1.53	7.18	21.0	1.01	0.89	Pass	
38	Static Run								Check zero data is within $\pm 0.167$ ft ( $\pm 0.05$ m)
39	STP - Static Run								Zero SV front bumper to rear edge of steel plate and collect data
40	<b>STP False Positive, 25</b>	N							Throttle
41		N							Throttle
42		N							Throttle
43		Y					0.02		Pass
44		Y					0.01		Pass
45		Y					0.01		Pass
46		Y					0.01		Pass
47		Y					0.01		Pass
48		Y					0.01		Pass
49		Y					0.02		Pass
50	STP - Static Run								Check zero data is within $\pm 0.167$ ft ( $\pm 0.05$ m)
51	<b>STP False Positive, 45</b>	Y				0.02		Pass	
52		Y				0.01		Pass	
53		Y					0.02		Pass
54		N							Speed
55		N							Throttle

Run	Test Type	Valid Run?	FCW TTC (s)	Min. Distance (ft)	Speed Reduction (mph)	Peak Decel. (g)	CIB TTC (s)	Pass/Fail	Notes
56	<b>STP False Positive, 45</b>	Y				0.02		Pass	
57		Y				0.01		Pass	
58		Y				0.02		Pass	
59		Y				0.01		Pass	Check zero data is within $\pm 0.167$ ft ( $\pm 0.05$ m)
60	STP - Static Run								

## APPENDIX D

### Time History Plots

## LIST OF FIGURES

	Page
Figure D1. Example Time History for Stopped POV, Passing.....	D-9
Figure D2. Example Time History for Slower POV 25 vs. 10, Passing.....	D-10
Figure D3. Example Time History for Slower POV 45 vs. 20, Passing.....	D-11
Figure D4. Example Time History for Decelerating POV 35, Passing .....	D-12
Figure D5. Example Time History for False Positive STP 25, Passing .....	D-13
Figure D6. Example Time History for False Positive STP 45, Passing .....	D-14
Figure D7. Example Time History Displaying Invalid Headway Criteria .....	D-15
Figure D8. Example Time History Displaying Various Invalid Criteria .....	D-16
Figure D9. Example Time History for a Failed Run .....	D-17
Figure D10. Time History for CIB Run 3, SV Encounters Stopped POV .....	D-18
Figure D11. Time History for CIB Run 4, SV Encounters Stopped POV .....	D-19
Figure D12. Time History for CIB Run 5, SV Encounters Stopped POV .....	D-20
Figure D13. Time History for CIB Run 6, SV Encounters Stopped POV .....	D-21
Figure D14. Time History for CIB Run 7, SV Encounters Stopped POV .....	D-22
Figure D15. Time History for CIB Run 8, SV Encounters Stopped POV .....	D-23
Figure D16. Time History for CIB Run 9, SV Encounters Stopped POV .....	D-24
Figure D17. Time History for CIB Run 11, SV Encounters Slower POV, SV 25 mph, POV 10 mph .....	D-25
Figure D18. Time History for CIB Run 12, SV Encounters Slower POV, SV 25 mph, POV 10 mph .....	D-26
Figure D19. Time History for CIB Run 13, SV Encounters Slower POV, SV 25 mph, POV 10 mph .....	D-27
Figure D20. Time History for CIB Run 14, SV Encounters Slower POV, SV 25 mph, POV 10 mph .....	D-28
Figure D21. Time History for CIB Run 15, SV Encounters Slower POV, SV 25 mph, POV 10 mph .....	D-29
Figure D22. Time History for CIB Run 16, SV Encounters Slower POV, SV 25 mph, POV 10 mph .....	D-30
Figure D23. Time History for CIB Run 17, SV Encounters Slower POV, SV 25 mph, POV 10 mph .....	D-31
Figure D24. Time History for CIB Run 19, SV Encounters Slower POV, SV 45 mph, POV 20 mph .....	D-32
Figure D25. Time History for CIB Run 20, SV Encounters Slower POV, SV 45 mph, POV 20 mph .....	D-33
Figure D26. Time History for CIB Run 21, SV Encounters Slower POV, SV 45 mph, POV 20 mph .....	D-34
Figure D27. Time History for CIB Run 25, SV Encounters Slower POV, SV 45 mph, POV 20 mph .....	D-35
Figure D28. Time History for CIB Run 26, SV Encounters Slower POV, SV 45 mph, POV 20 mph .....	D-36
Figure D29. Time History for CIB Run 27, SV Encounters Slower POV, SV 45 mph, POV 20 mph .....	D-37
Figure D30. Time History for CIB Run 28, SV Encounters Slower POV, SV 45 mph, POV 20 mph .....	D-38
Figure D31. Time History for CIB Run 31, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph .....	D-39
Figure D32. Time History for CIB Run 32, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph .....	D-40

Figure D33.	Time History for CIB Run 33, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph .....	D-41
Figure D34.	Time History for CIB Run 34, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph .....	D-42
Figure D35.	Time History for CIB Run 35, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph .....	D-43
Figure D36.	Time History for CIB Run 36, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph .....	D-44
Figure D37.	Time History for CIB Run 37, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph .....	D-45
Figure D38.	Time History for CIB Run 43, SV Encounters Steel Trench Plate, SV 25 mph.....	D-46
Figure D39.	Time History for CIB Run 44, SV Encounters Steel Trench Plate, SV 25 mph.....	D-47
Figure D40.	Time History for CIB Run 45, SV Encounters Steel Trench Plate, SV 25 mph.....	D-48
Figure D41.	Time History for CIB Run 46, SV Encounters Steel Trench Plate, SV 25 mph.....	D-49
Figure D42.	Time History for CIB Run 47, SV Encounters Steel Trench Plate, SV 25 mph.....	D-50
Figure D43.	Time History for CIB Run 48, SV Encounters Steel Trench Plate, SV 25 mph.....	D-51
Figure D44.	Time History for CIB Run 49, SV Encounters Steel Trench Plate, SV 25 mph.....	D-52
Figure D45.	Time History for CIB Run 51, SV Encounters Steel Trench Plate, SV 45 mph.....	D-53
Figure D46.	Time History for CIB Run 52, SV Encounters Steel Trench Plate, SV 45 mph.....	D-54
Figure D47.	Time History for CIB Run 53, SV Encounters Steel Trench Plate, SV 45 mph.....	D-55
Figure D48.	Time History for CIB Run 56, SV Encounters Steel Trench Plate, SV 45 mph.....	D-56
Figure D49.	Time History for CIB Run 57, SV Encounters Steel Trench Plate, SV 45 mph.....	D-57
Figure D50.	Time History for CIB Run 58, SV Encounters Steel Trench Plate, SV 45 mph.....	D-58
Figure D51.	Time History for CIB Run 59, SV Encounters Steel Trench Plate, SV 45 mph.....	D-59

## Description of Time History Plots

A set of time history plots is provided for each valid run in the test series. Each set of plots comprises time varying data from both the Subject Vehicle (SV) and the Principal Other Vehicle (POV), as well as pass/fail envelopes and thresholds. The following is a description of data types shown in the time history plots, as well as a description of the color codes indicating to which vehicle the data pertain.

### Time History Plot Description

Each time history plot consists of data relevant to the test type under consideration, and therefore the data channels plotted vary according to test type. The test types (shown in the plot titles) include:

- Stopped POV (SV at 25 mph)
- Slower POV, 25/10 (SV at 25 mph, POV at 10 mph)
- Slower POV, 45/20 (SV at 45 mph, POV at 20 mph)
- Decelerating POV 35 mph (Both vehicles at 35 mph with 13.8 m gap, POV brakes at 0.3 g)
- False Positive STP 25 mph (Steel trench plate run over at 25 mph)
- False Positive STP 45 mph (Steel trench plate run over at 45 mph)

Time history figures include the following sub-plots:

- FCW Warning – Displays the Forward Collision Warning alert (which can be auditory, visual, or haptic). Depending on the type of FCW alert or instrumentation used to measure the alert, this can be any combination of the following:
  - Filtered, rectified, and normalized sound signal. The vertical scale is 0 to 1.
  - Filtered, rectified, and normalized acceleration (i.e., haptic alert, such as steering wheel vibration). The vertical scale is 0 to 1.
  - Normalized light sensor signal. The vertical scale is 0 to 1.

As only the auditory or haptic alert is perceptible by the driver during a test run, the earliest of either of these alerts is used to define the onset of the FCW alert. A vertical black bar on the plot indicates the TTC (sec) at the first moment of the warning issued by the FCW system. The FCW TTC is displayed to the right of the subplot in green. For False Positive tests, when the FCW presents a warning “FCW” is shown in red at the right edge of the FCW plot.

- Headway (ft) – Longitudinal separation (gap) between the frontmost point of the Subject Vehicle and the rearmost point of the Strikeable Surrogate Vehicle (SSV) towed by the Principal Other Vehicle. The minimum headway during the run is displayed to the right of the subplot.
- SV/POV Speed (mph) – Speed of the Subject Vehicle and Principal Other Vehicle (if any). For CIB tests, the speed reduction experienced by the Subject Vehicle is displayed to the right of the subplot.
- Yaw Rate (deg/sec) – Yaw rate of the Subject Vehicle and Principal Other Vehicle (if any).
- Lateral Offset (ft) – Lateral offset within the lane of the Subject Vehicle to the center of the lane of travel. Note that for tests involving the Strikeable Surrogate Vehicle (SSV), the associated lateral restraint track is defined to be the center of the lane of travel. If testing is done with a different POV which does not have a lateral restraint track, lateral offset is defined to be the lateral offset between the SV and POV.
- Ax (g) – Longitudinal acceleration of the Subject Vehicle and Principal Other Vehicle (if any). For CIB tests, the TTC (sec) at the moment of first CIB activation is displayed to the right of the subplot in green. Also, the peak value of Ax for the SV is shown on the subplot.
- Accelerator Pedal Position (0-1) – Normalized position of the accelerator pedal.

## Envelopes and Thresholds

Some of the time history plot figures contain either green or yellow envelopes and/or black threshold lines. These envelopes and thresholds are used to programmatically and visually determine the validity of a given test run. Envelope and threshold exceedances are indicated with either red shading or red asterisks, and red text is placed to the right side of the plot indicating the type of exceedance. Such exceedances indicate either that the test was invalid or that the requirements of the test were not met (i.e., failure of the AEB system).

For plots with green envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope boundaries at any time. Exceedances of a green envelope are indicated by red shading in the area between the measured time-varying data and the envelope boundaries.

For plots with yellow envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope at the beginning (left edge of the boundary) and/or end (right edge), but may exceed the boundary during the time

between the left and right edges. Exceedances at the left or right extent of a yellow envelope are indicated by red asterisks.

For the headway plot, a dashed black threshold line indicating a relative headway of zero is displayed. If no impact occurs, a green circle is displayed at the moment of minimum distance. If impact occurs, a red asterisk is displayed at the moment of impact.

For the Ax plot, if the scenario is an AEB brake-to-stop scenario, a vertical dashed black line is displayed for all plots indicating the moment of first POV braking. The yellow envelope in this case is relevant to the POV braking only. The left edge of the envelope is at 1.5 seconds after the first POV braking. A solid black threshold line extends horizontally 0.5 seconds to the left of the envelope. This threshold line represents the time during which the Ax of the Principal Other Vehicle must first achieve 0.27 g (the upper edge of the envelope). A green circle or red asterisk is displayed at the moment the POV brake level achieves 0.27 g. A green circle indicates that the test was valid (the threshold was crossed during the appropriate interval) and a red asterisk indicates that the test was invalid (the threshold was crossed outside of the appropriate interval). Additionally, for the CIB tests, a dashed black threshold line indicating an Ax of -0.15 g is given to define the onset of CIB activation. When the Subject Vehicle's Ax crosses this threshold, the CIB TTC is calculated and displayed.

For the accelerator pedal position plot, a green envelope is given starting 500 ms after the onset of the FCW warning to ensure that the accelerator pedal was released at the correct time and remained off for the duration of the CIB event. For false positive runs a green dot, rather than a green envelope is displayed. The green dot indicates that at the end of the run the accelerator pedal had not been released. If the accelerator had been released a red asterisk would appear.



## Color Codes

Color codes have been adopted to easily identify which data correspond to which vehicle, as well as to indicate the types of envelopes and thresholds used in the plots.

Color codes can be broken into four categories:

1. Time-varying data
2. Validation envelopes and thresholds
3. Individual data points
4. Text

1. Time-varying data color codes:

- Blue = Subject Vehicle data
- Magenta = Principal Other Vehicle data
- Brown = Relative data between SV and POV (i.e., TTC, lateral offset and headway distance)

2. Validation envelope and threshold color codes:

- Green envelope = time varying data must be within the envelope at all times in order to be valid
- Yellow envelope = time varying data must be within limits at left and/or right ends
- Black threshold (Solid) = time varying data must cross this threshold in the time period shown in order to be valid
- Black threshold (Dashed) = for reference only – this can include warning level thresholds, TTC thresholds, and acceleration thresholds

3. Individual data point color codes:

- Green circle = passing or valid value at a given moment in time
- Red asterisk = failing or invalid value at a given moment in time

4. Text color codes:

- Green = passing or valid value
- Red = failing or invalid value

## Other Notations

- NG – Indicates that the value for that variable was outside of bounds and therefore “No Good”.
- No Wng – No warning was detected.
- POV – Indicates that the value for the Principal Other Vehicle was out of bounds.
- SV – Indicates that the value for the Subject Vehicle was out of bounds.
- SR – Shows the speed reduction value.
- Thr – Indicates that the requirements for the throttle were not met.

The minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then “RTK Fixed OR LESS!!” is displayed in red.

Examples of time history plots for each test type (including passing, failing and invalid runs) are shown in Figure D1 through Figure D9. Figures D1 through D6 show passing runs for each of the 6 test types. Figures D7 and D8 show examples of invalid runs. Figure D9 shows an example of a valid test that failed the CIB requirements.

Time history data plots for the tests of the vehicle under consideration herein are provided beginning with Figure D10.

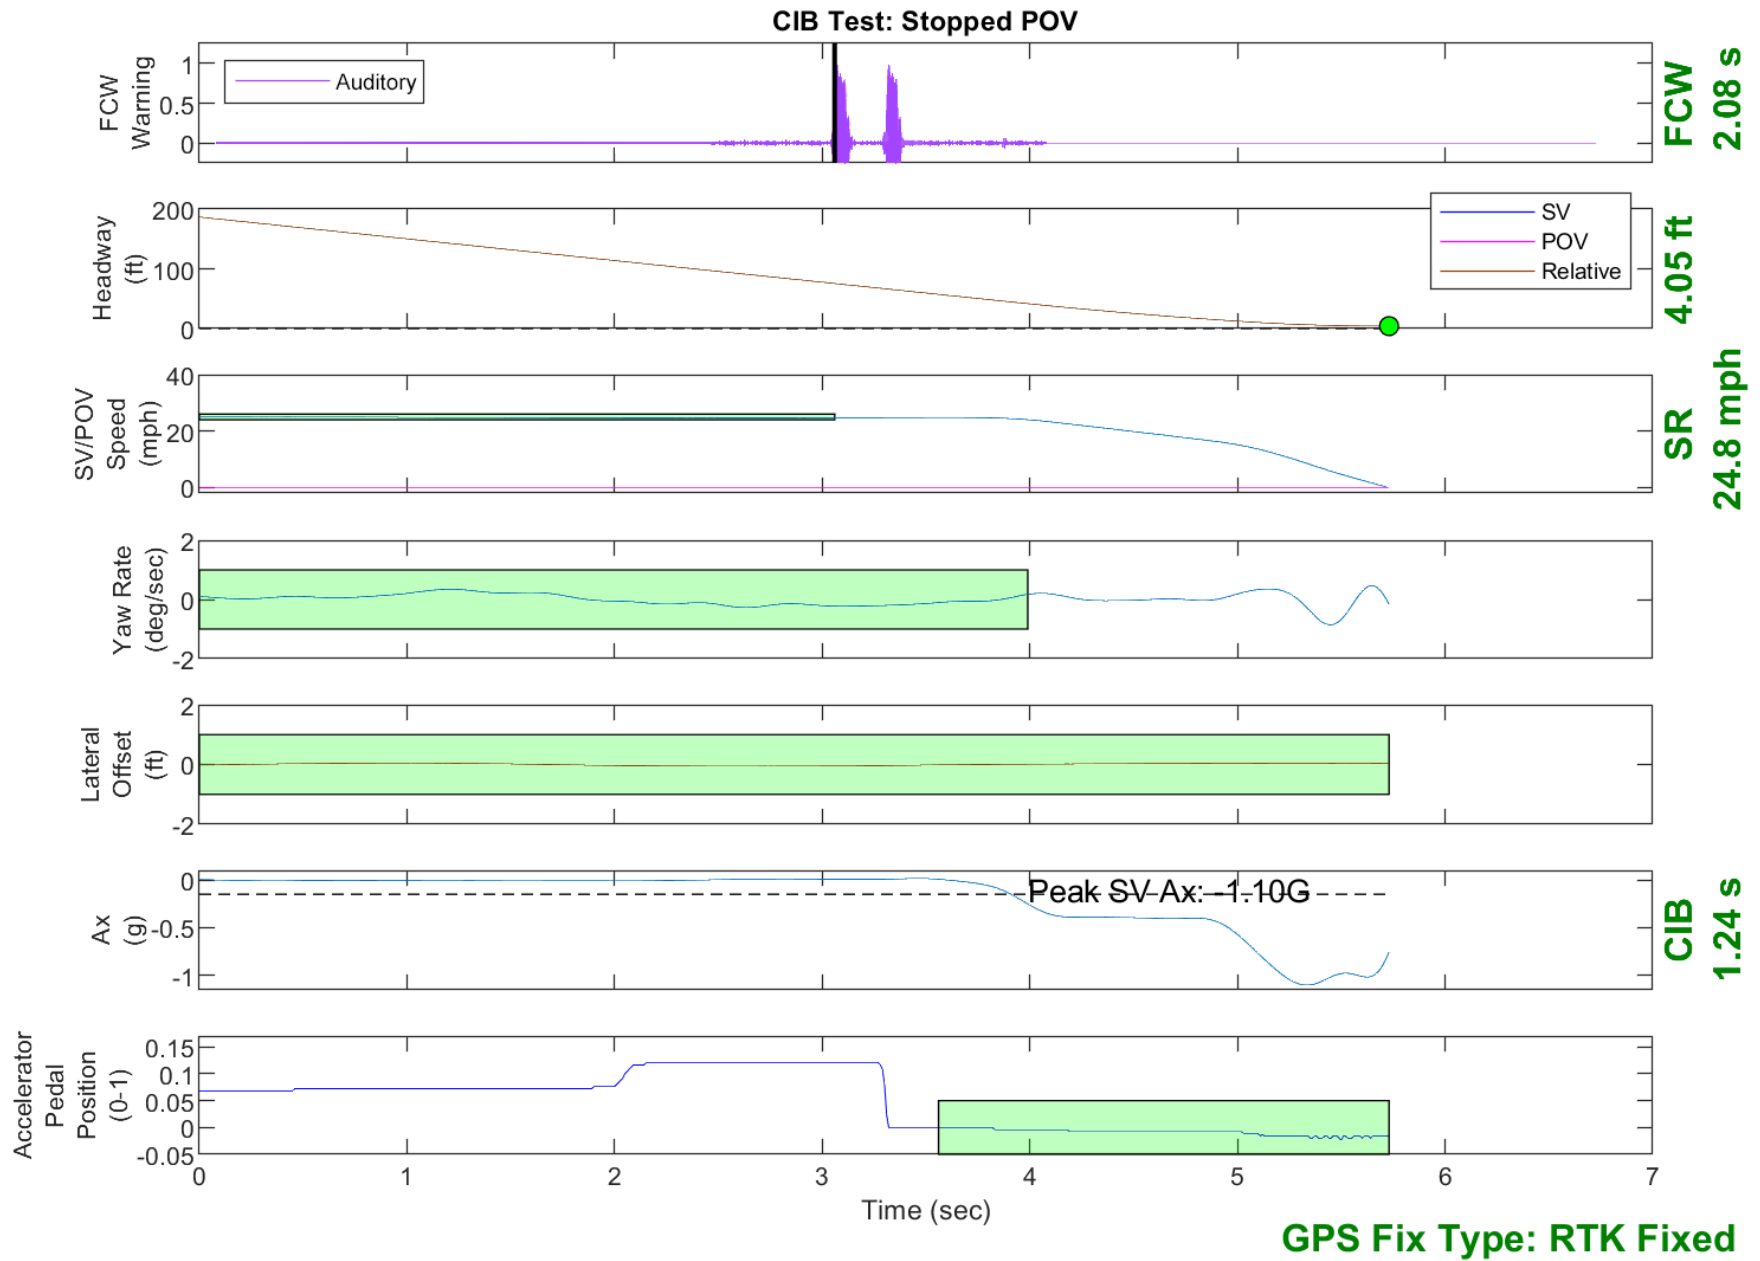


Figure D1. Example Time History for Stopped POV, Passing

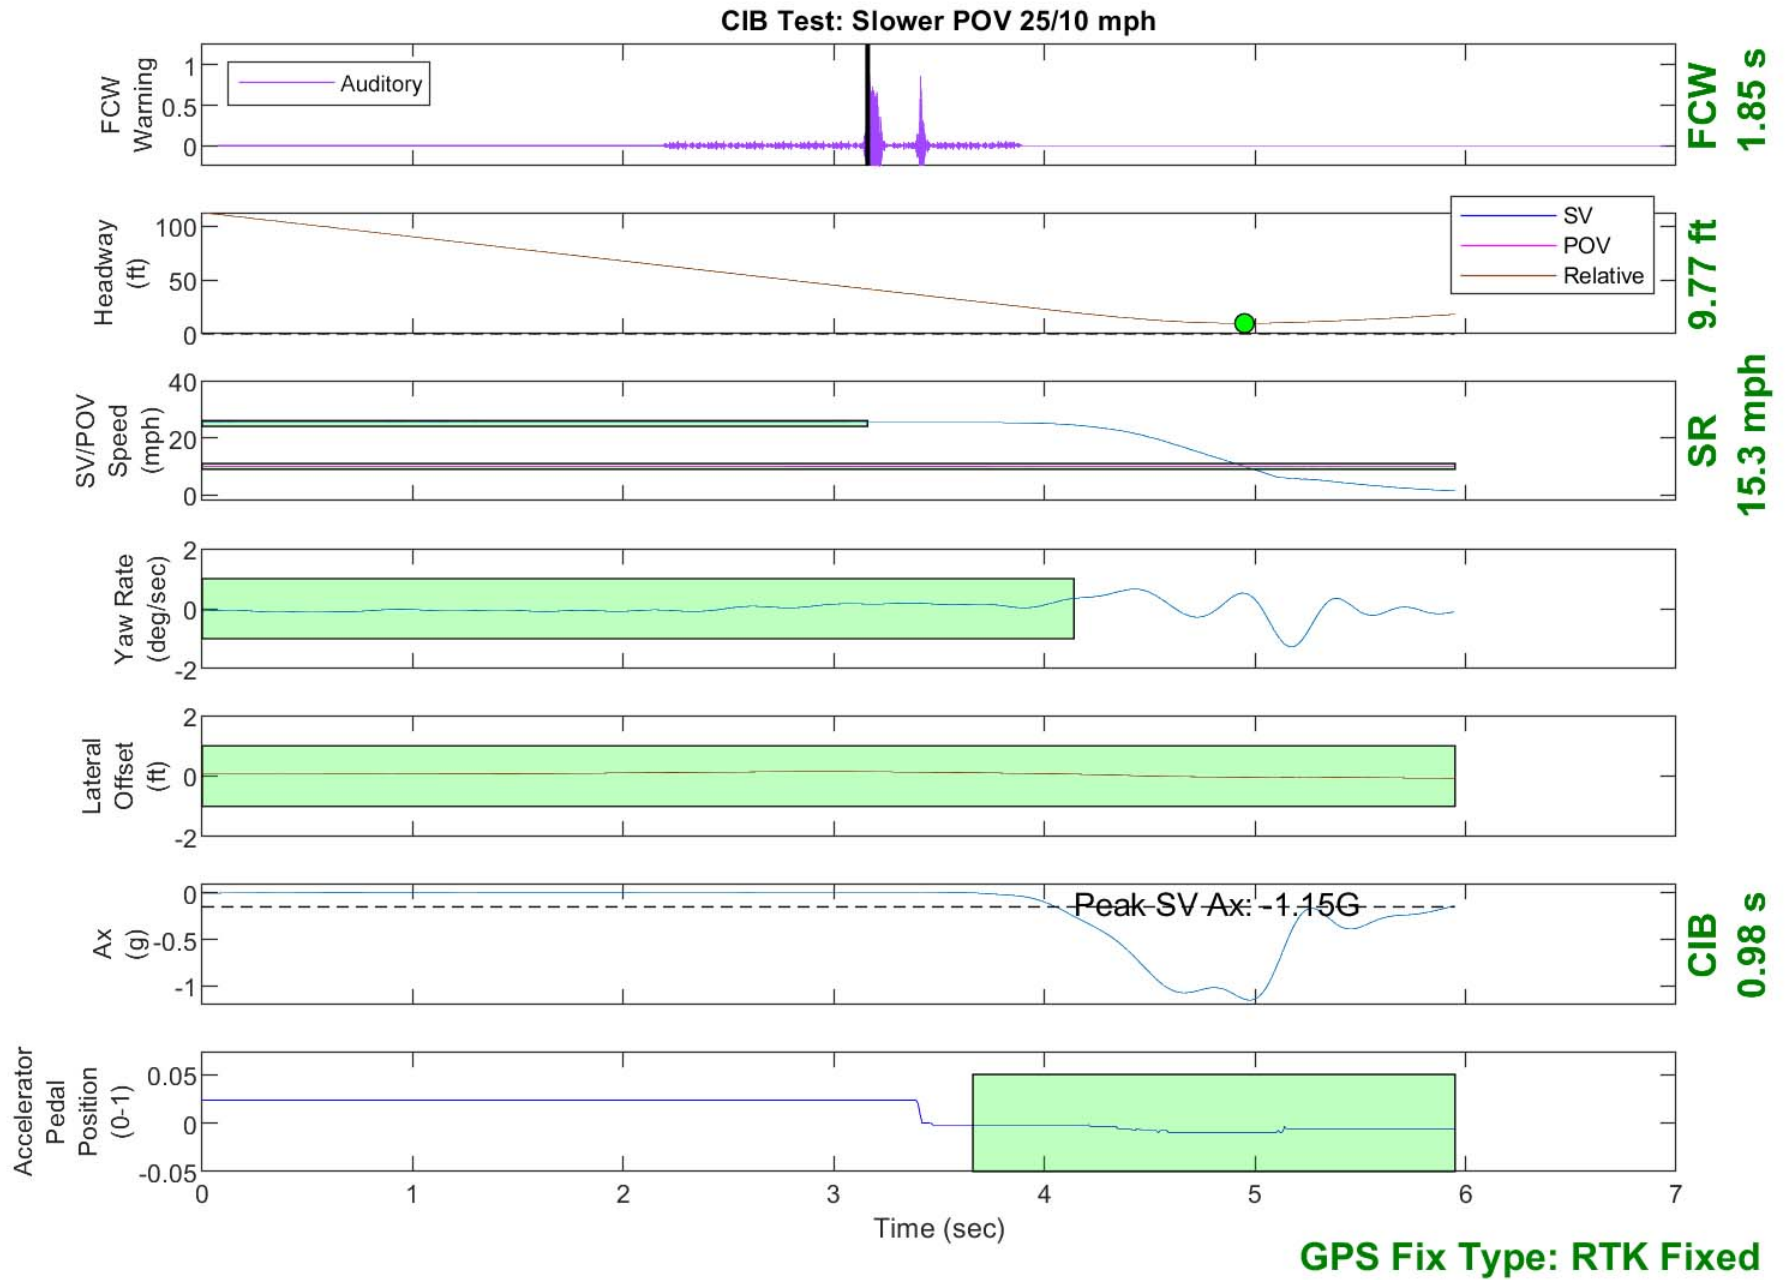


Figure D2. Example Time History for Slower POV 25 vs. 10, Passing

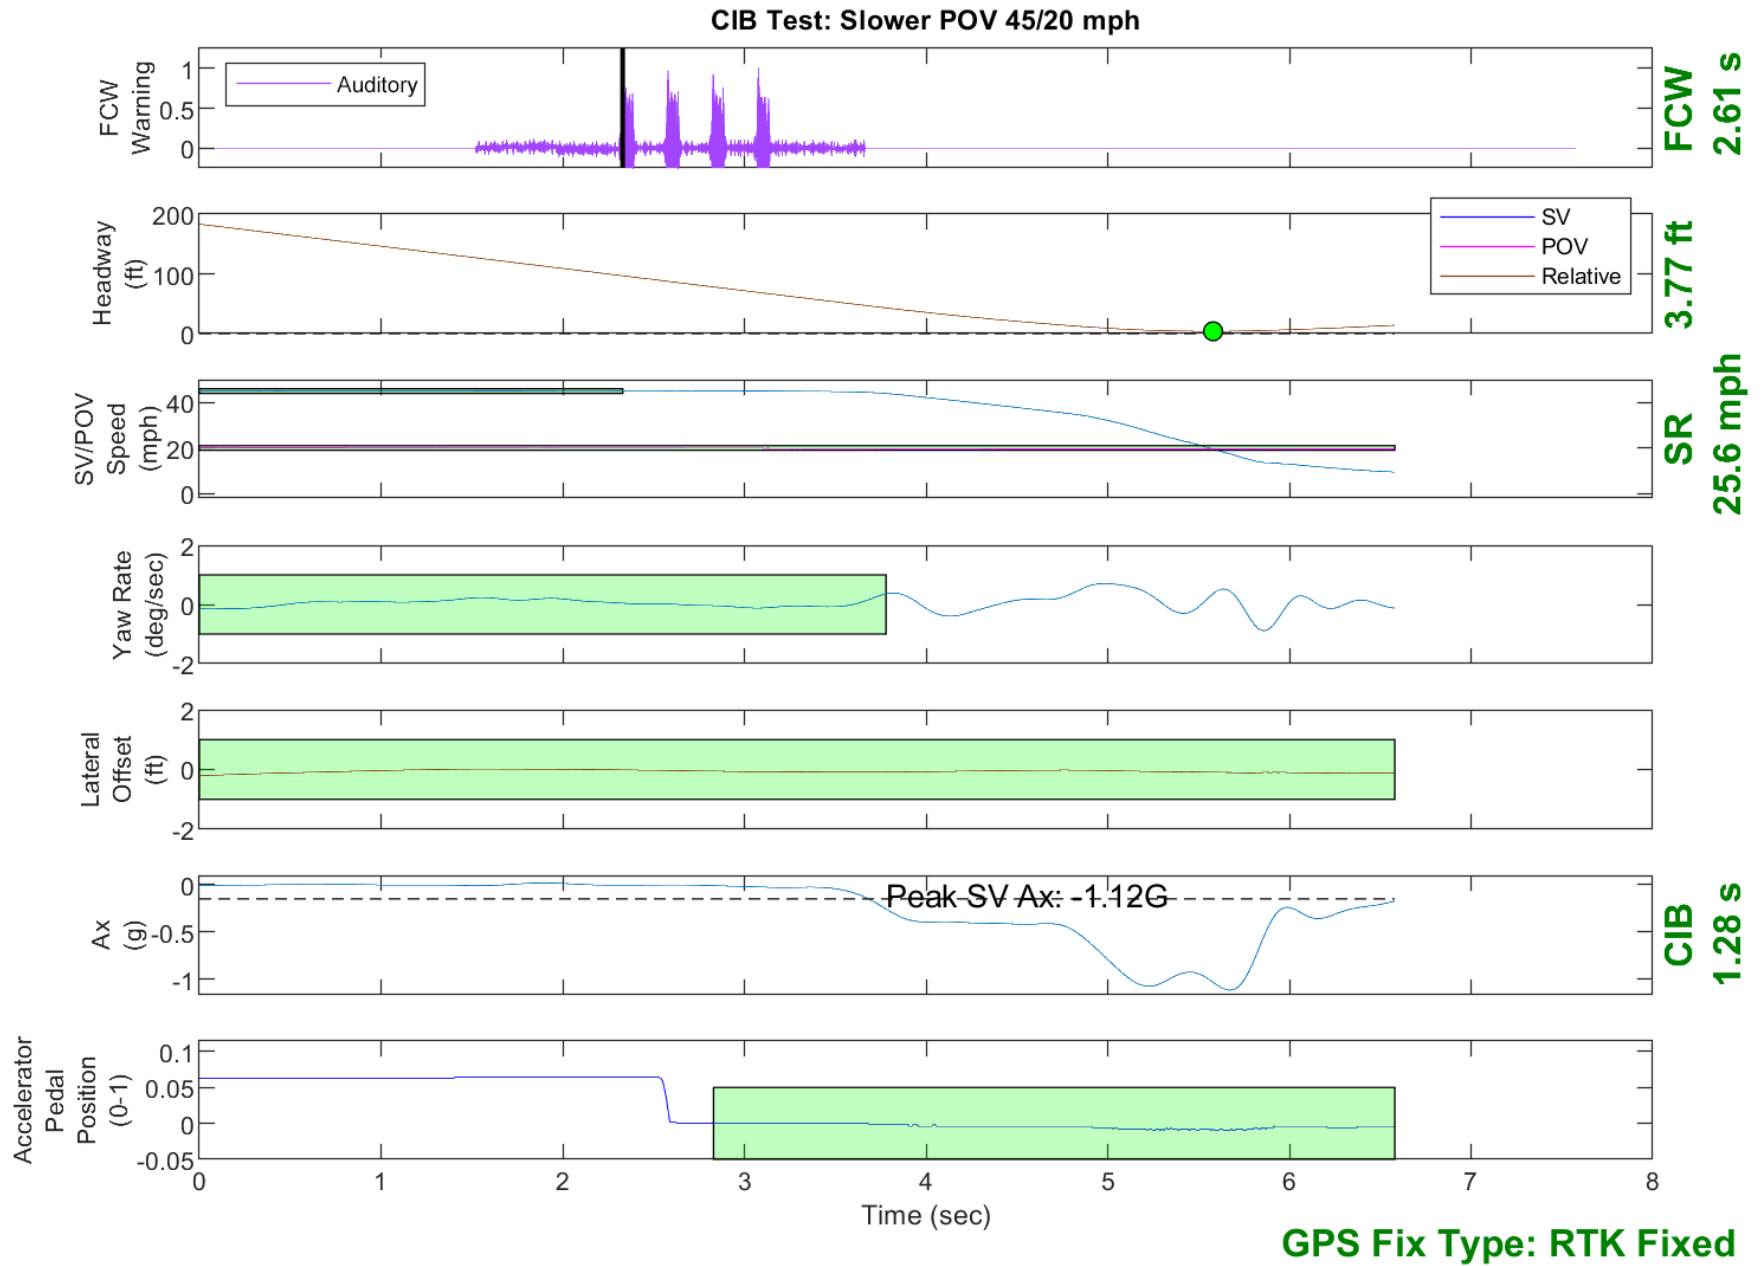


Figure D3. Example Time History for Slower POV 45 vs. 20, Passing

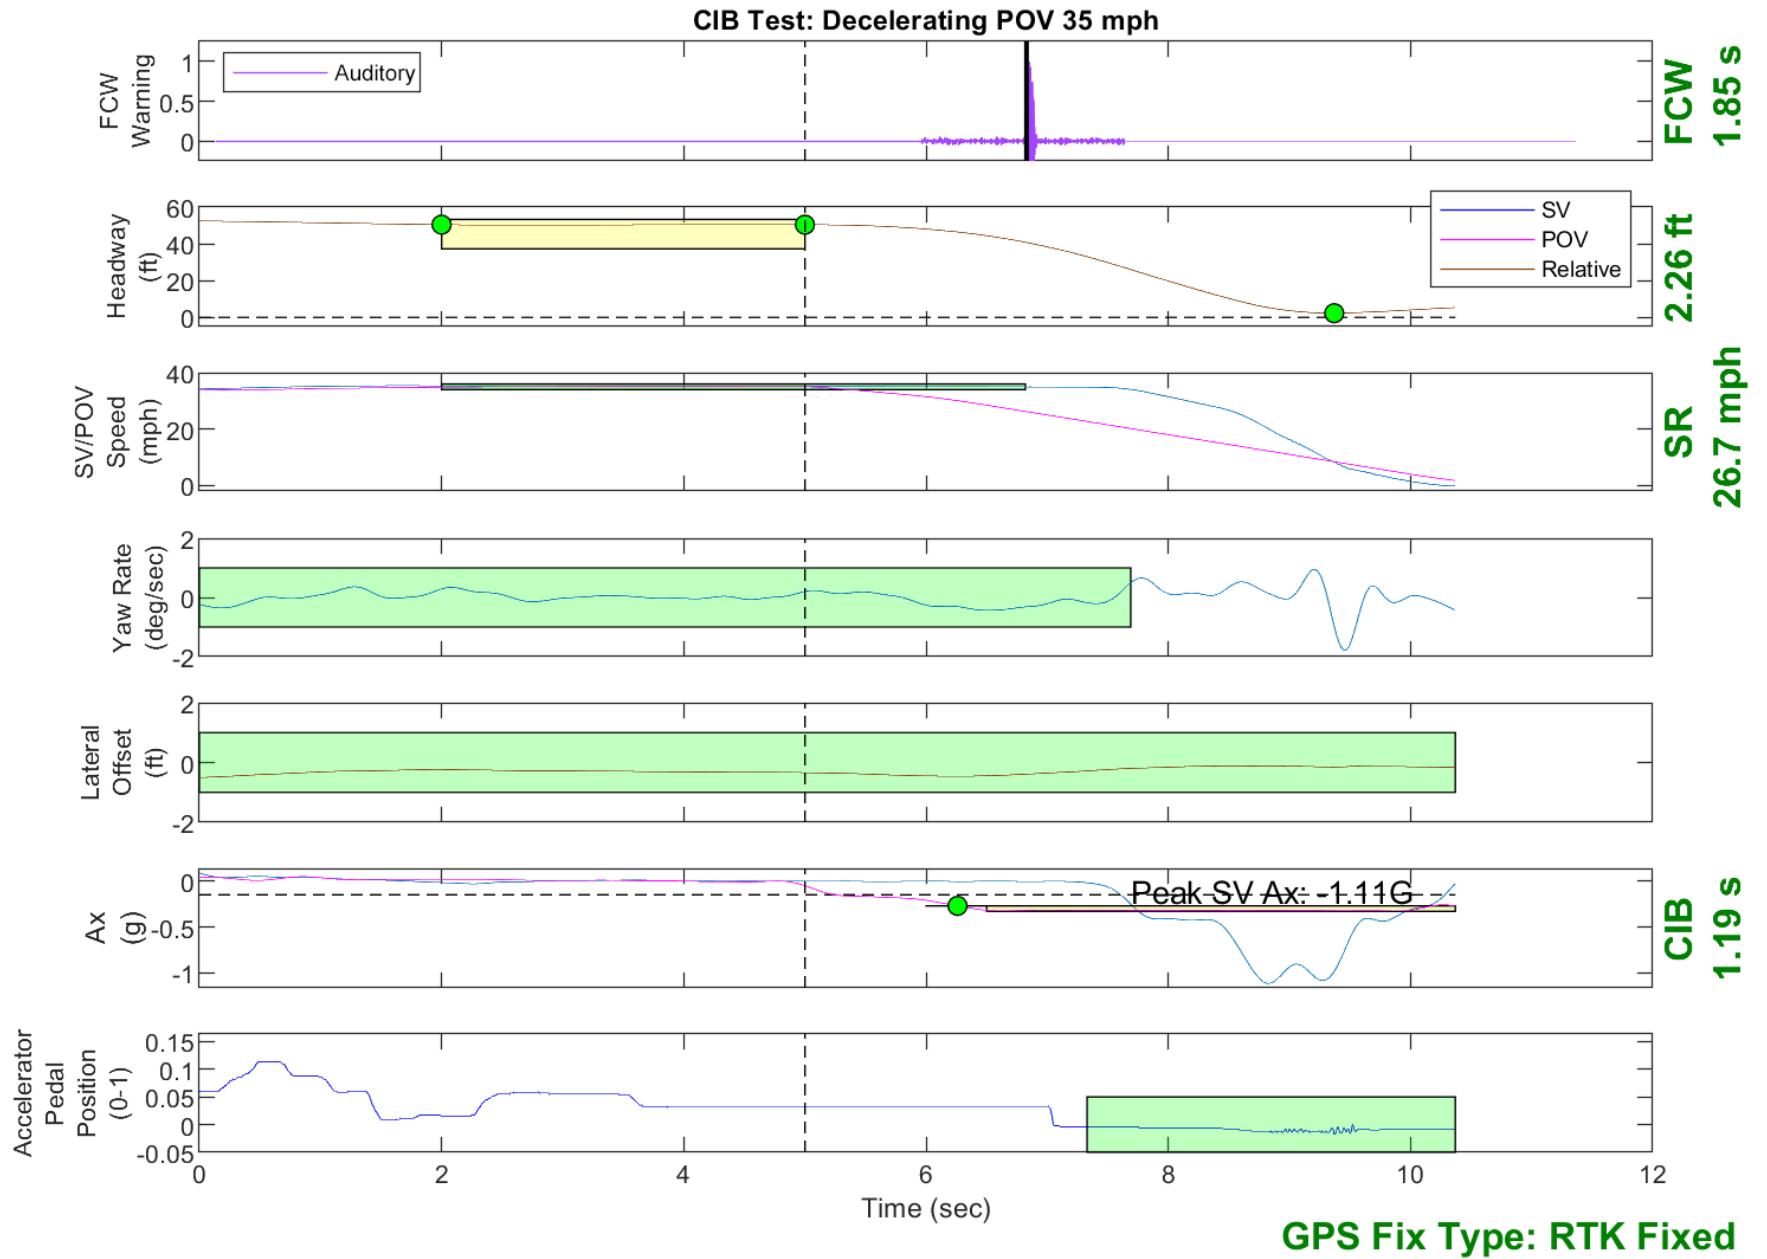


Figure D4. Example Time History for Decelerating POV 35, Passing

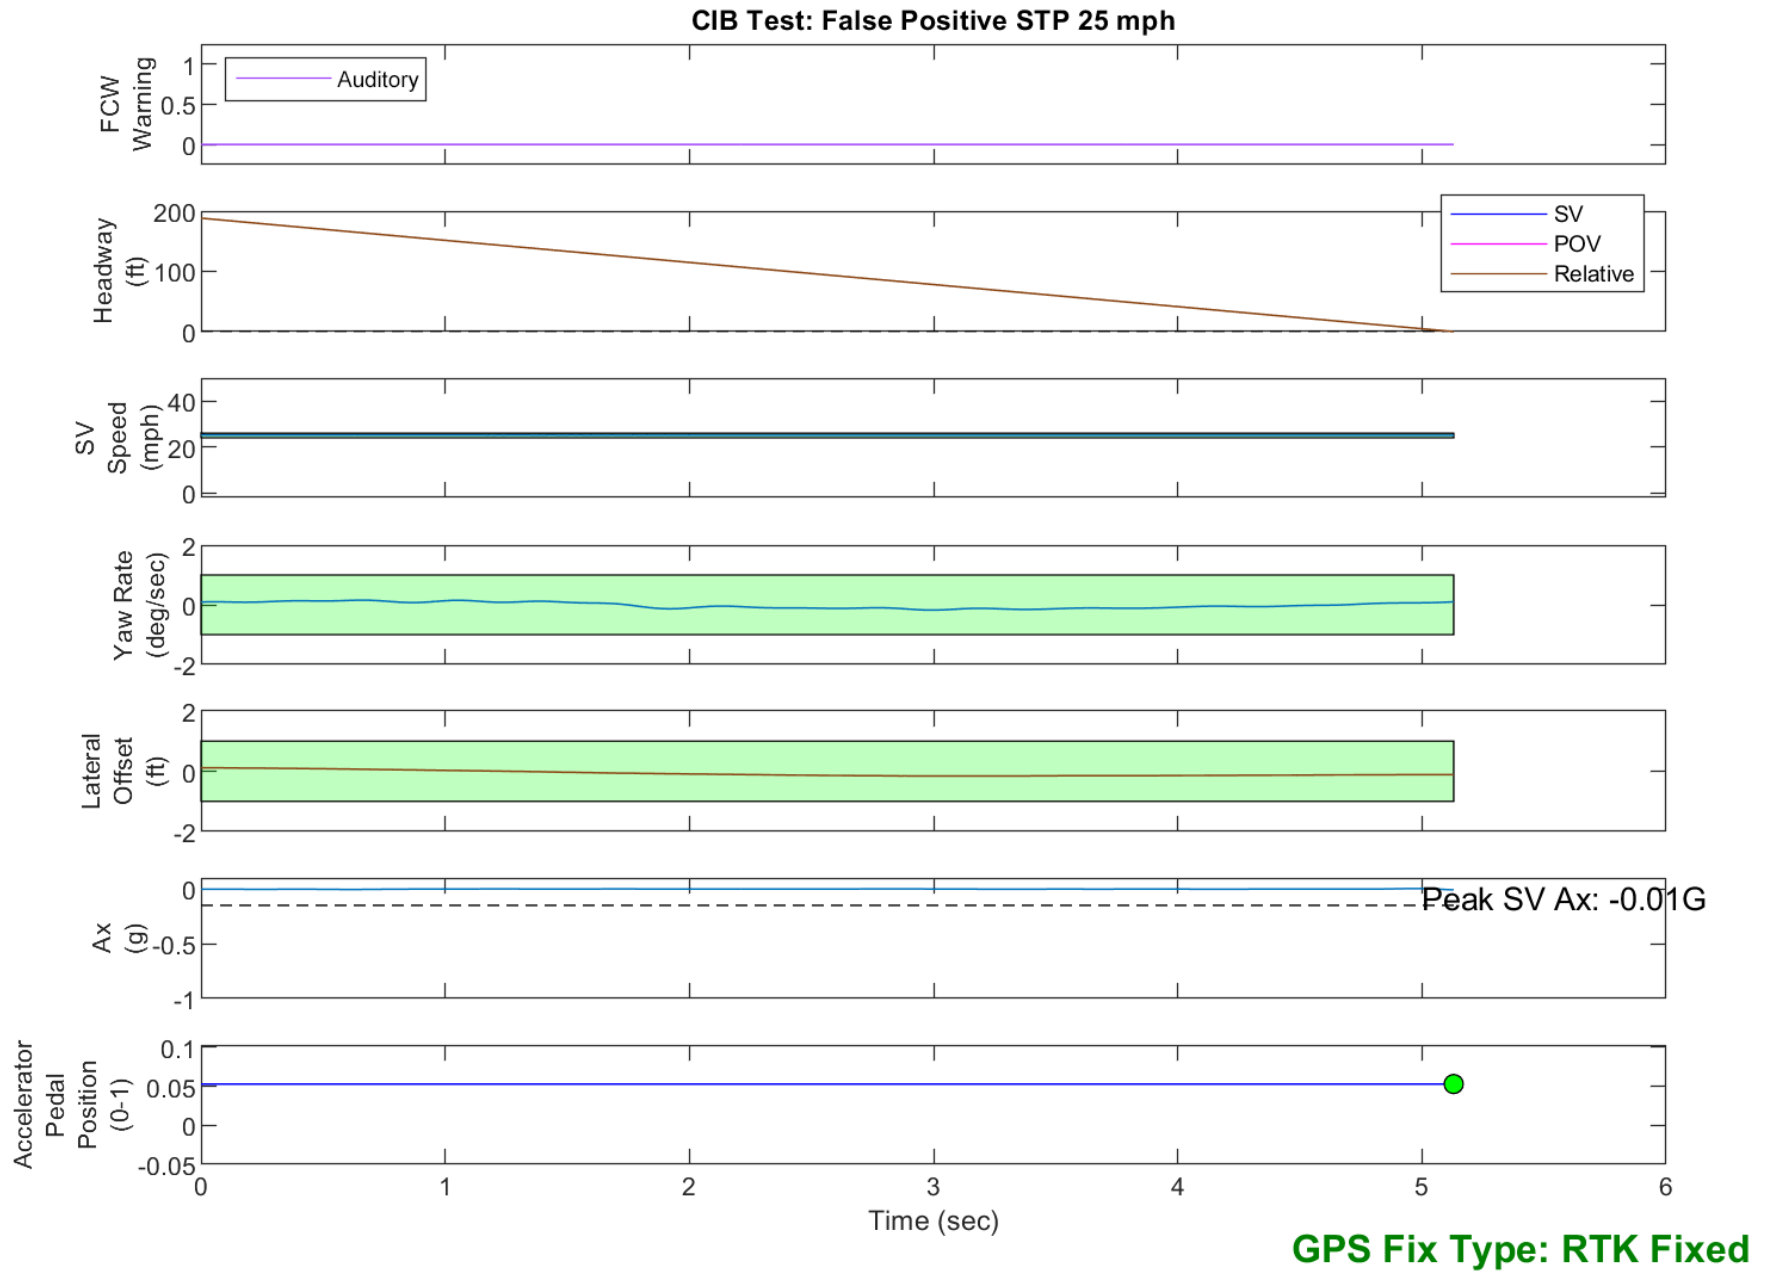


Figure D5. Example Time History for False Positive STP 25, Passing

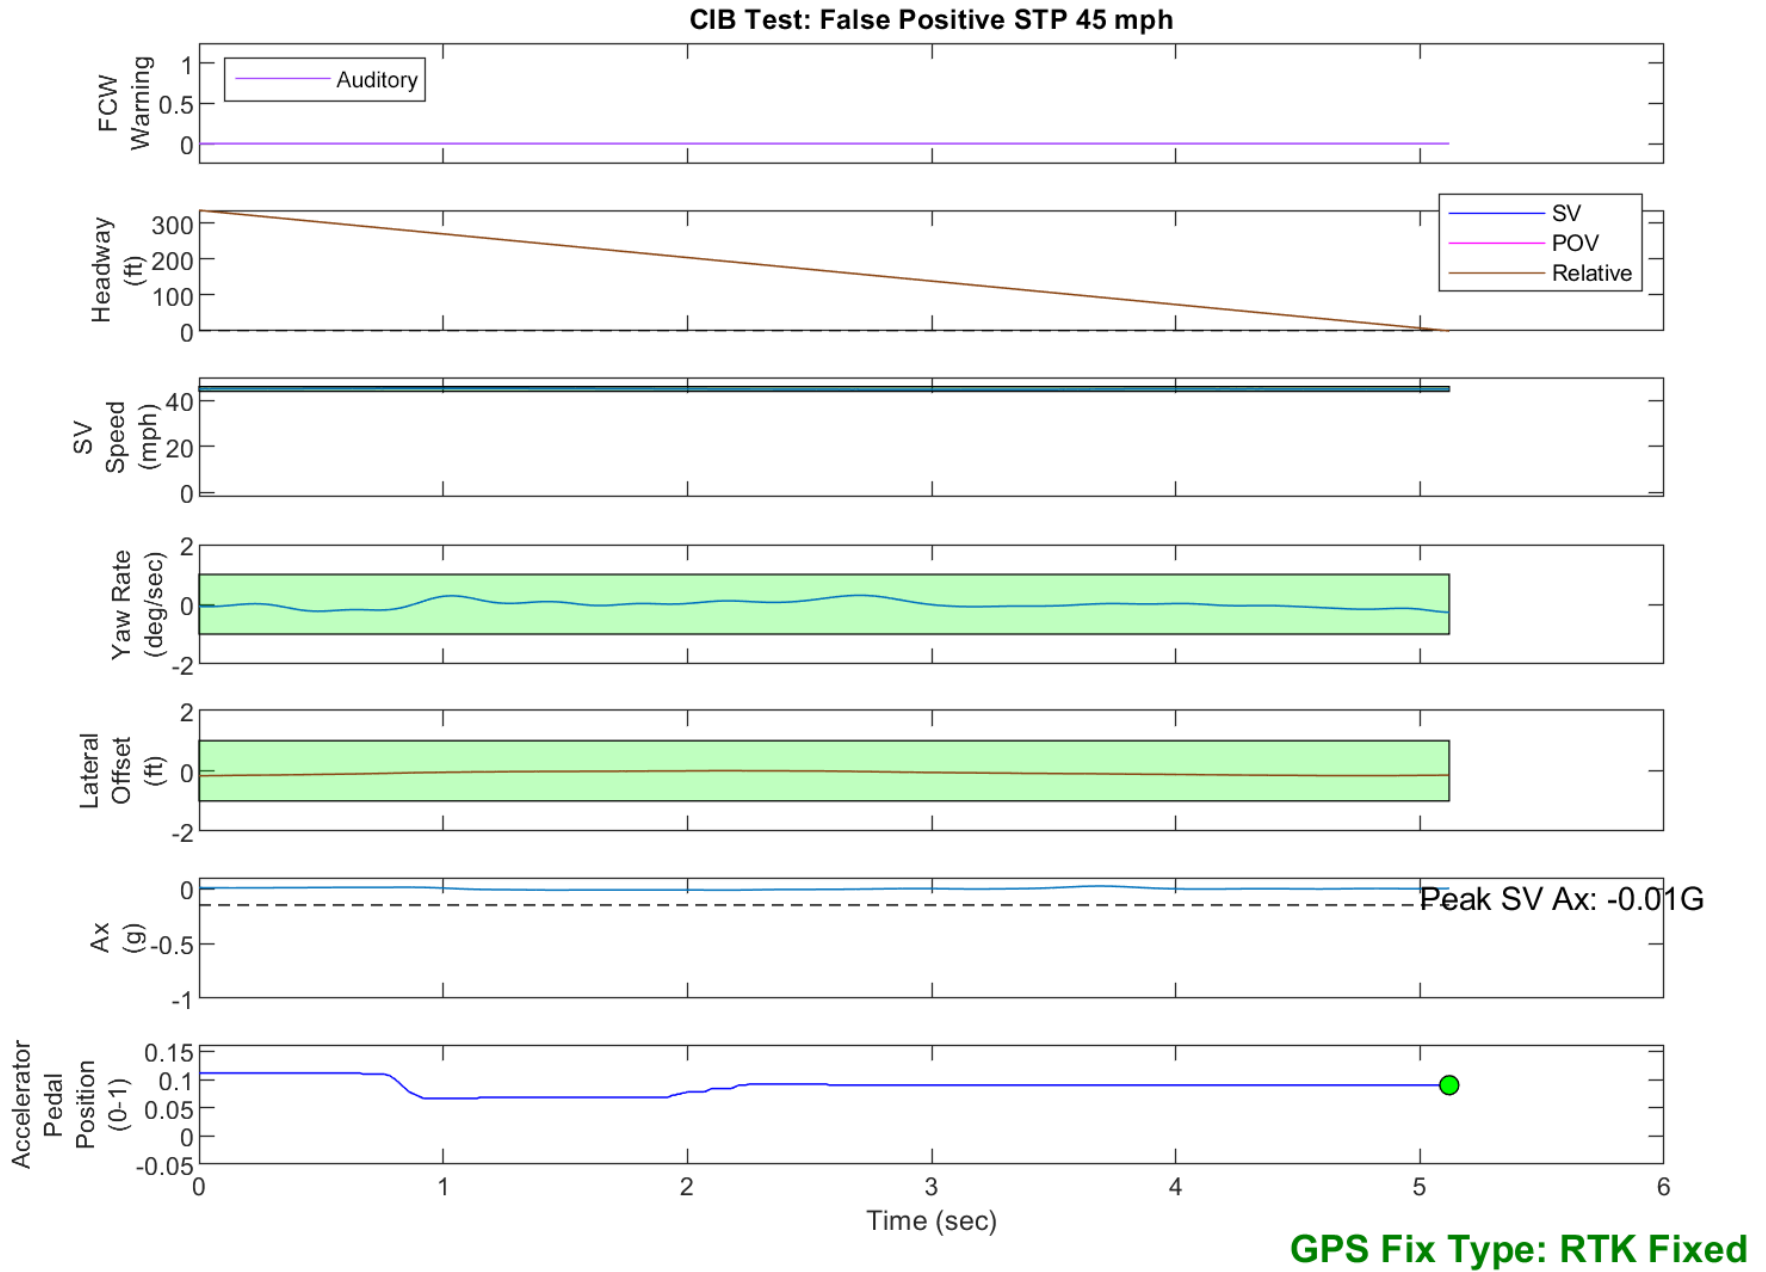


Figure D6. Example Time History for False Positive STP 45, Passing



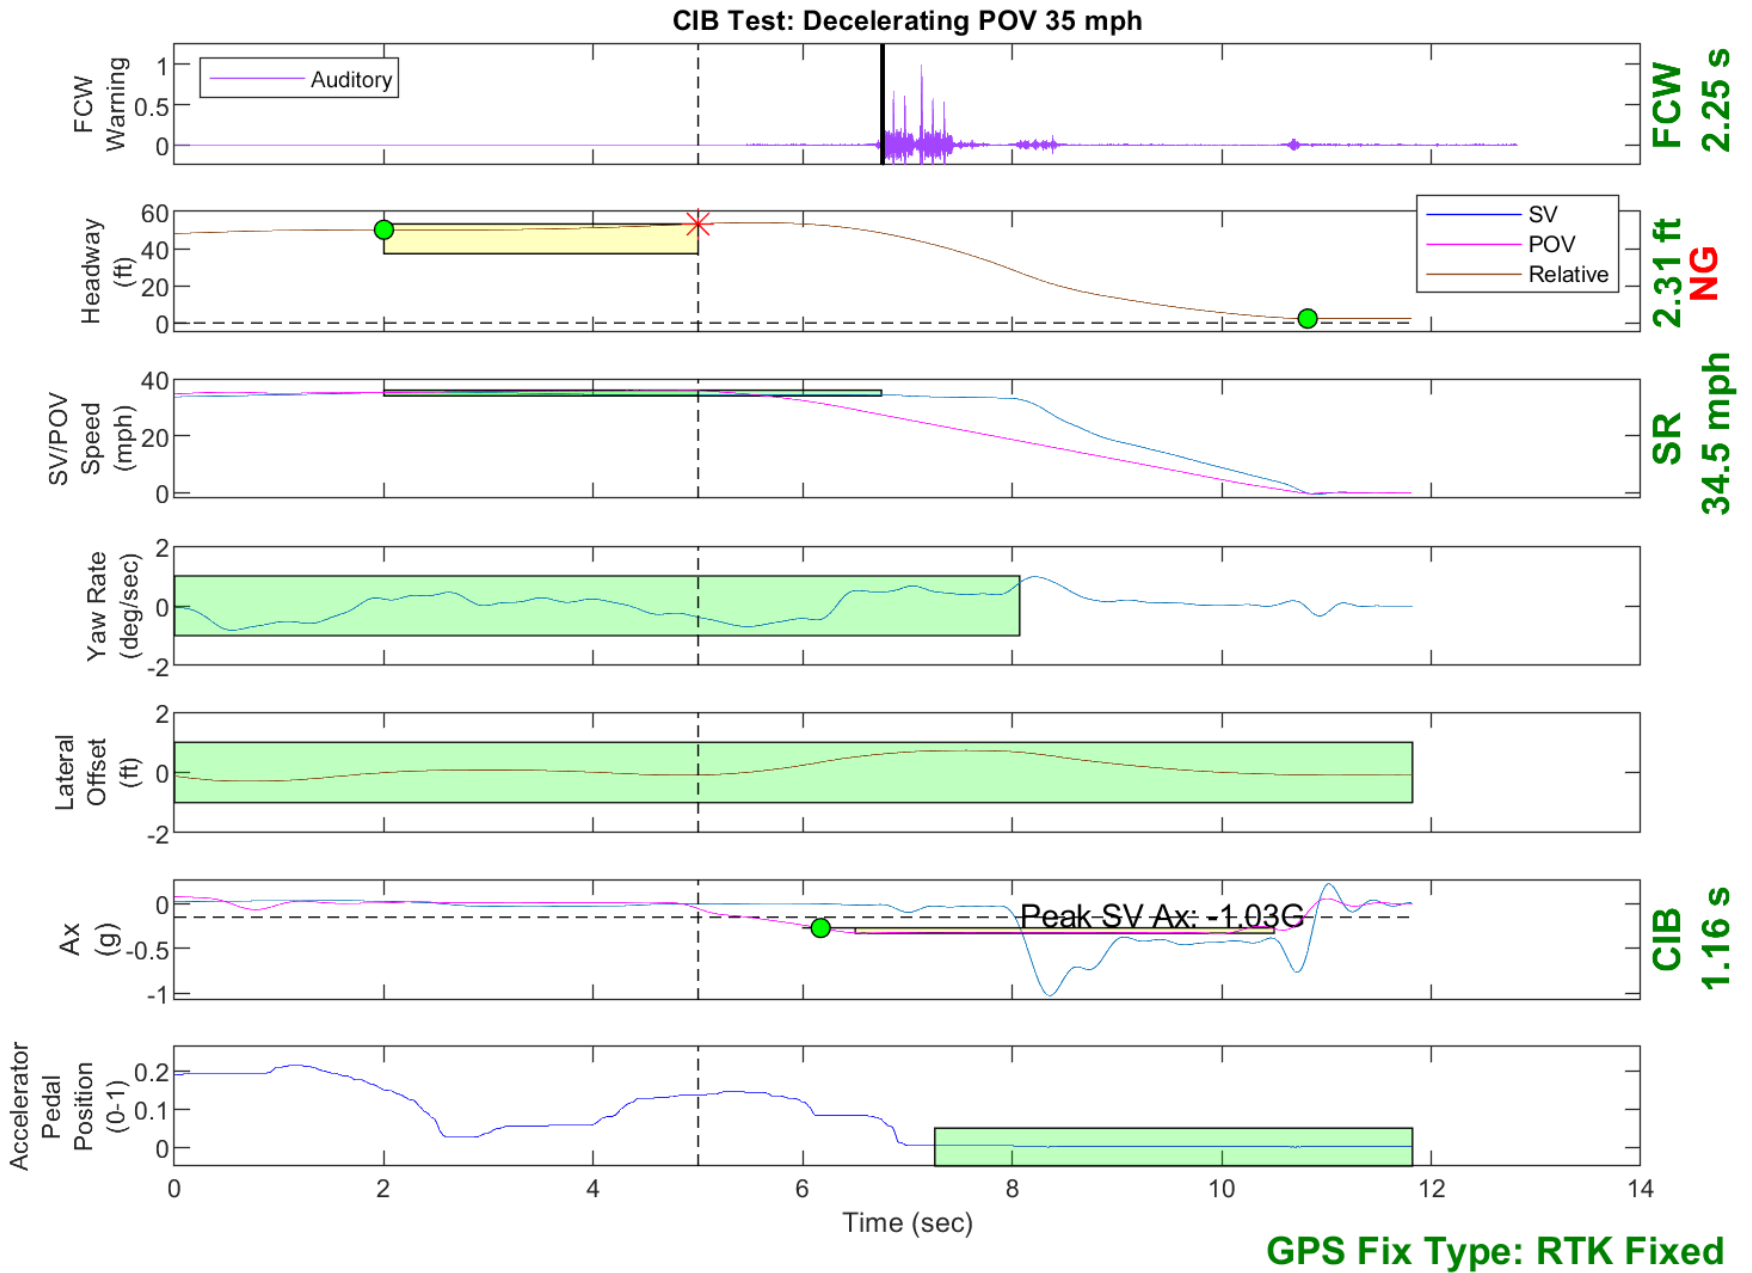


Figure D7. Example Time History Displaying Invalid Headway Criteria

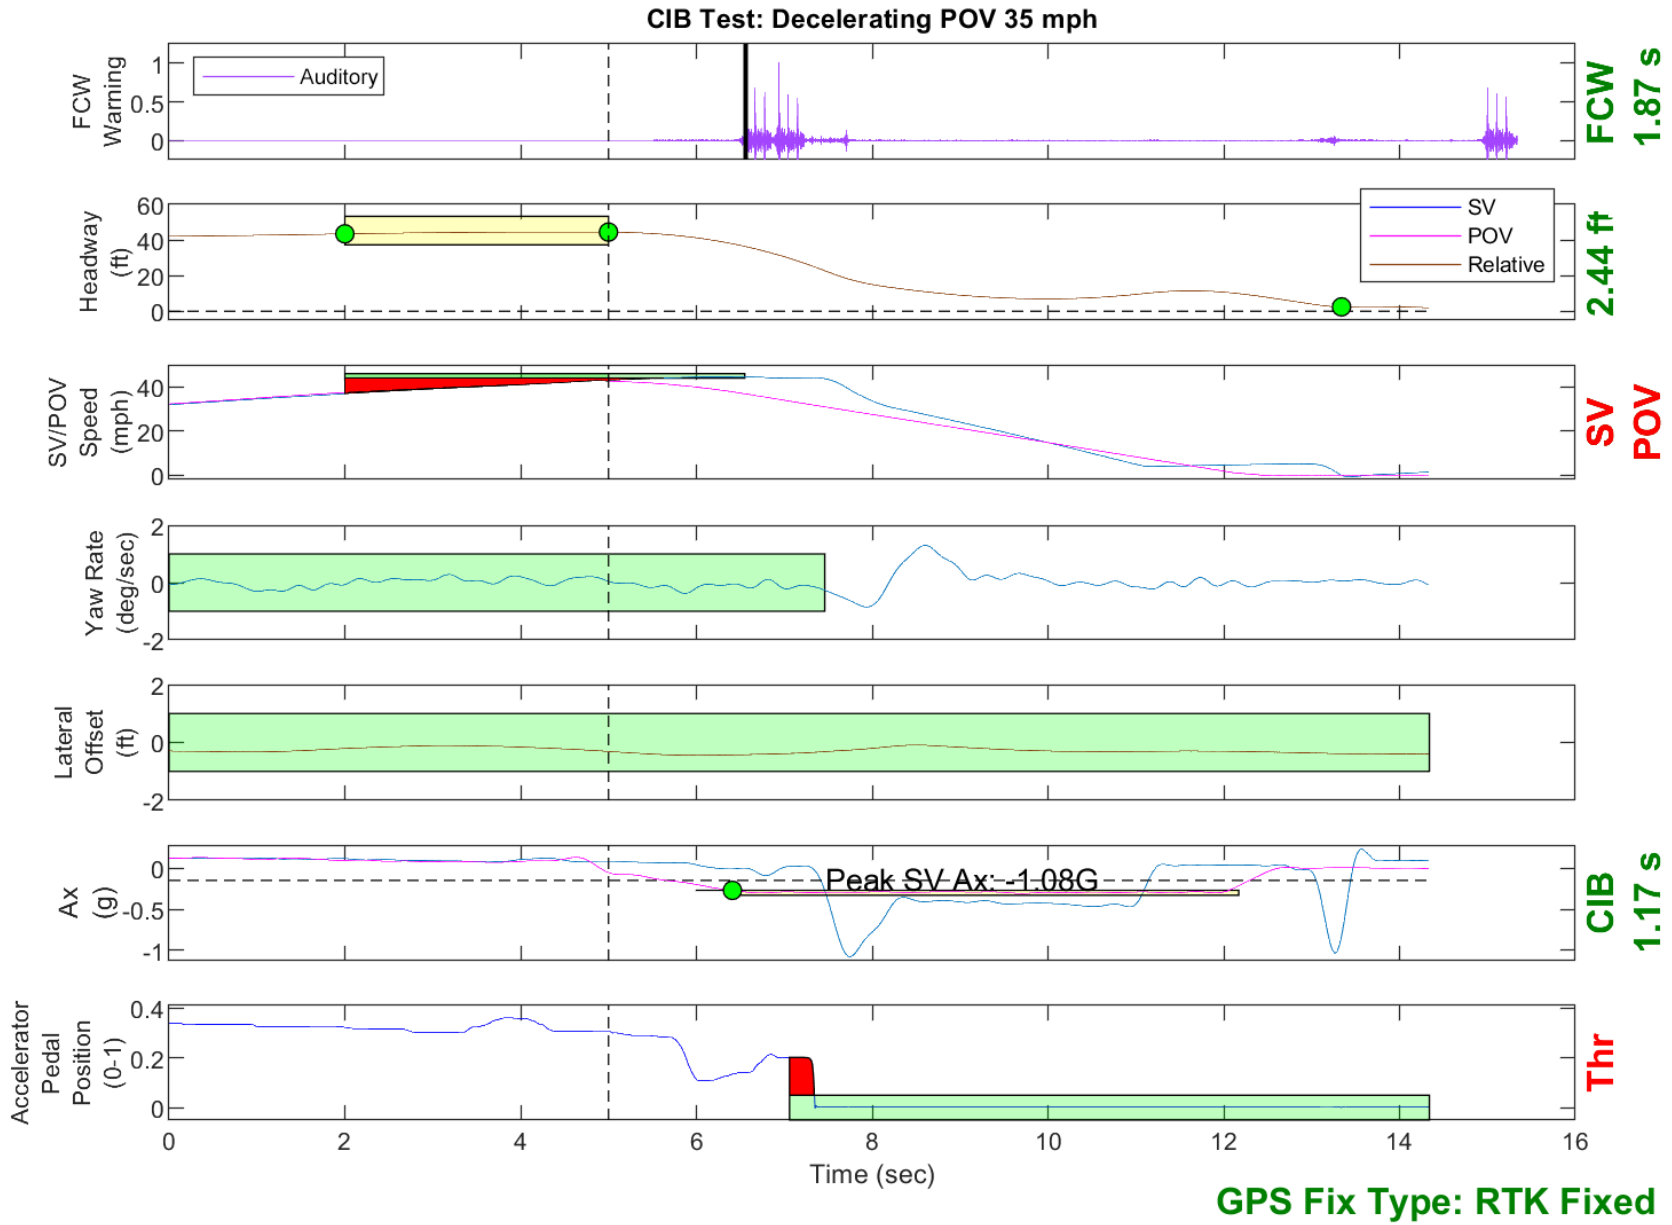


Figure D8. Example Time History Displaying Various Invalid Criteria

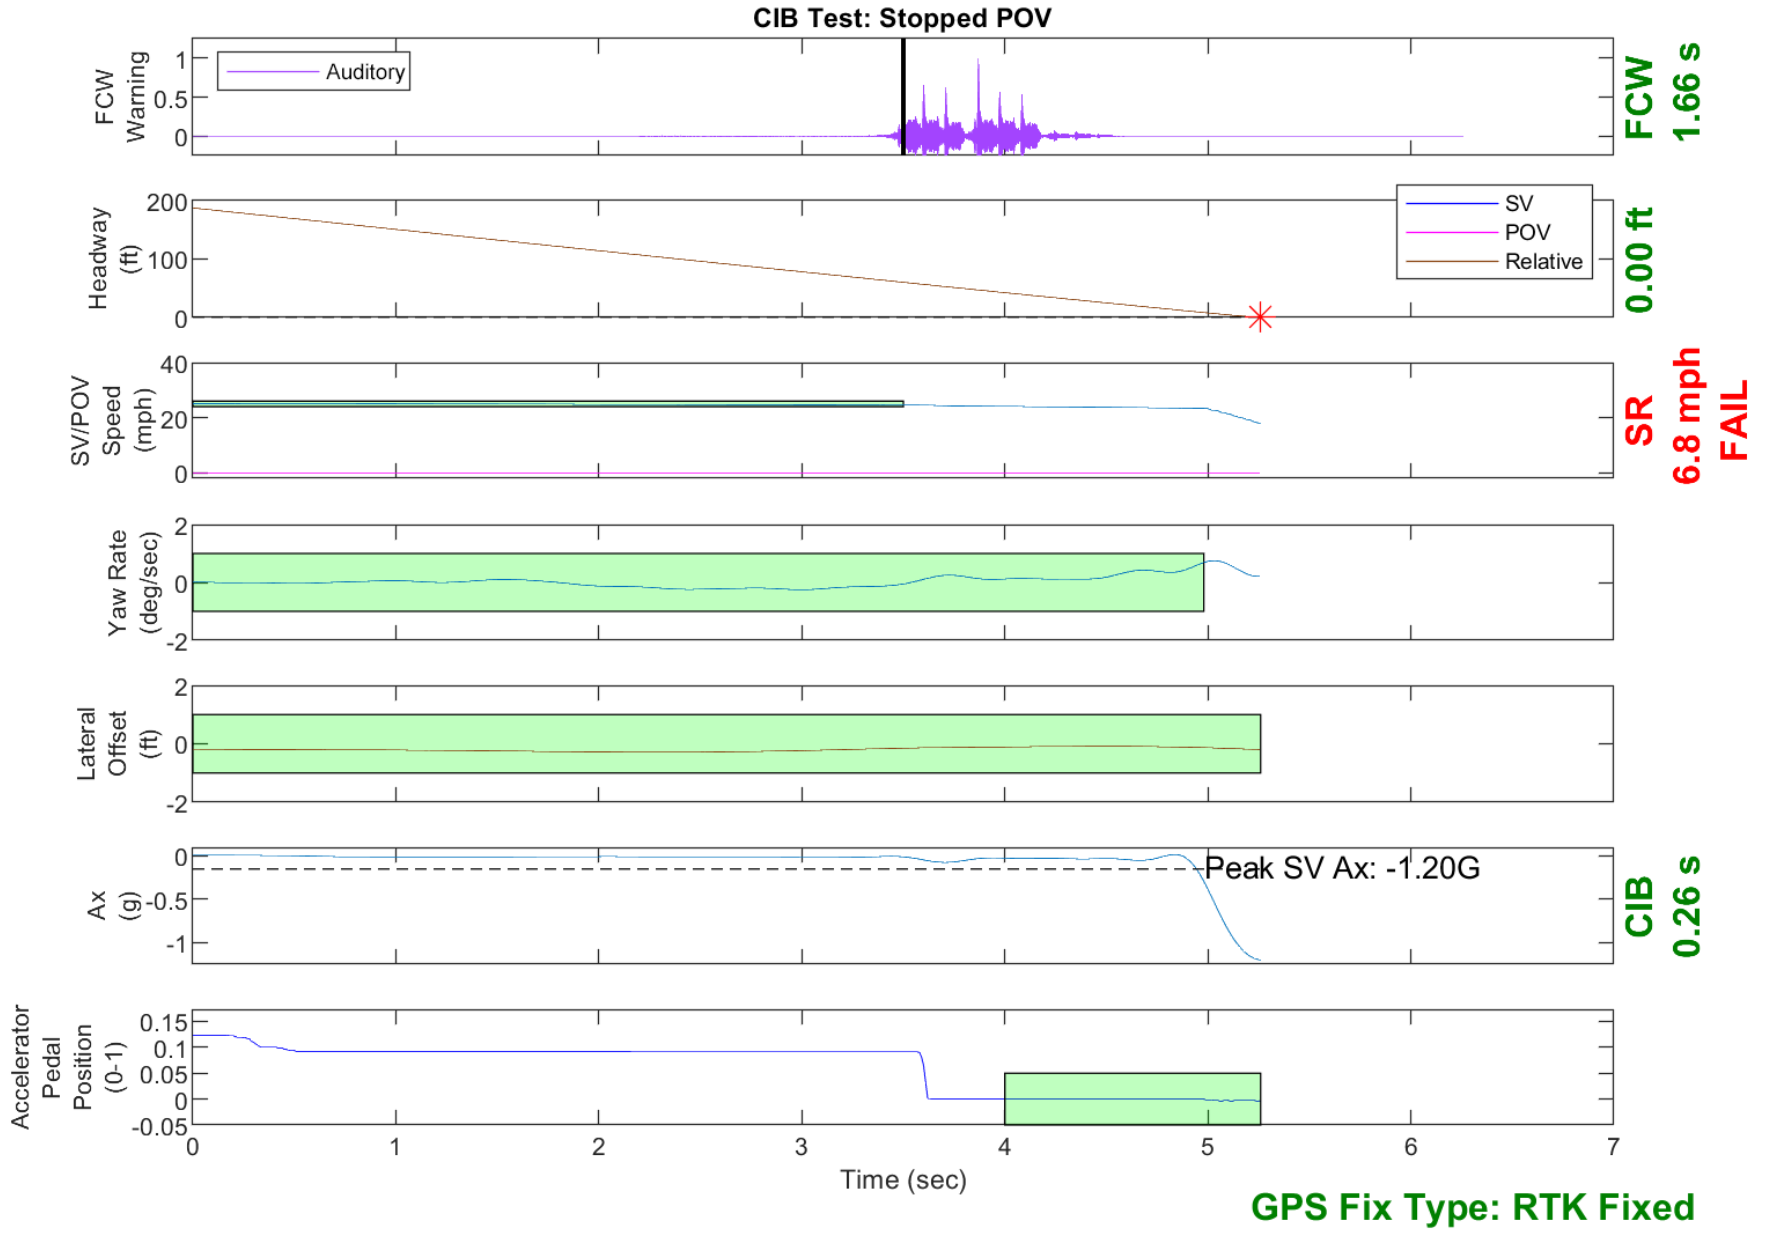


Figure D9. Example Time History for a Failed Run

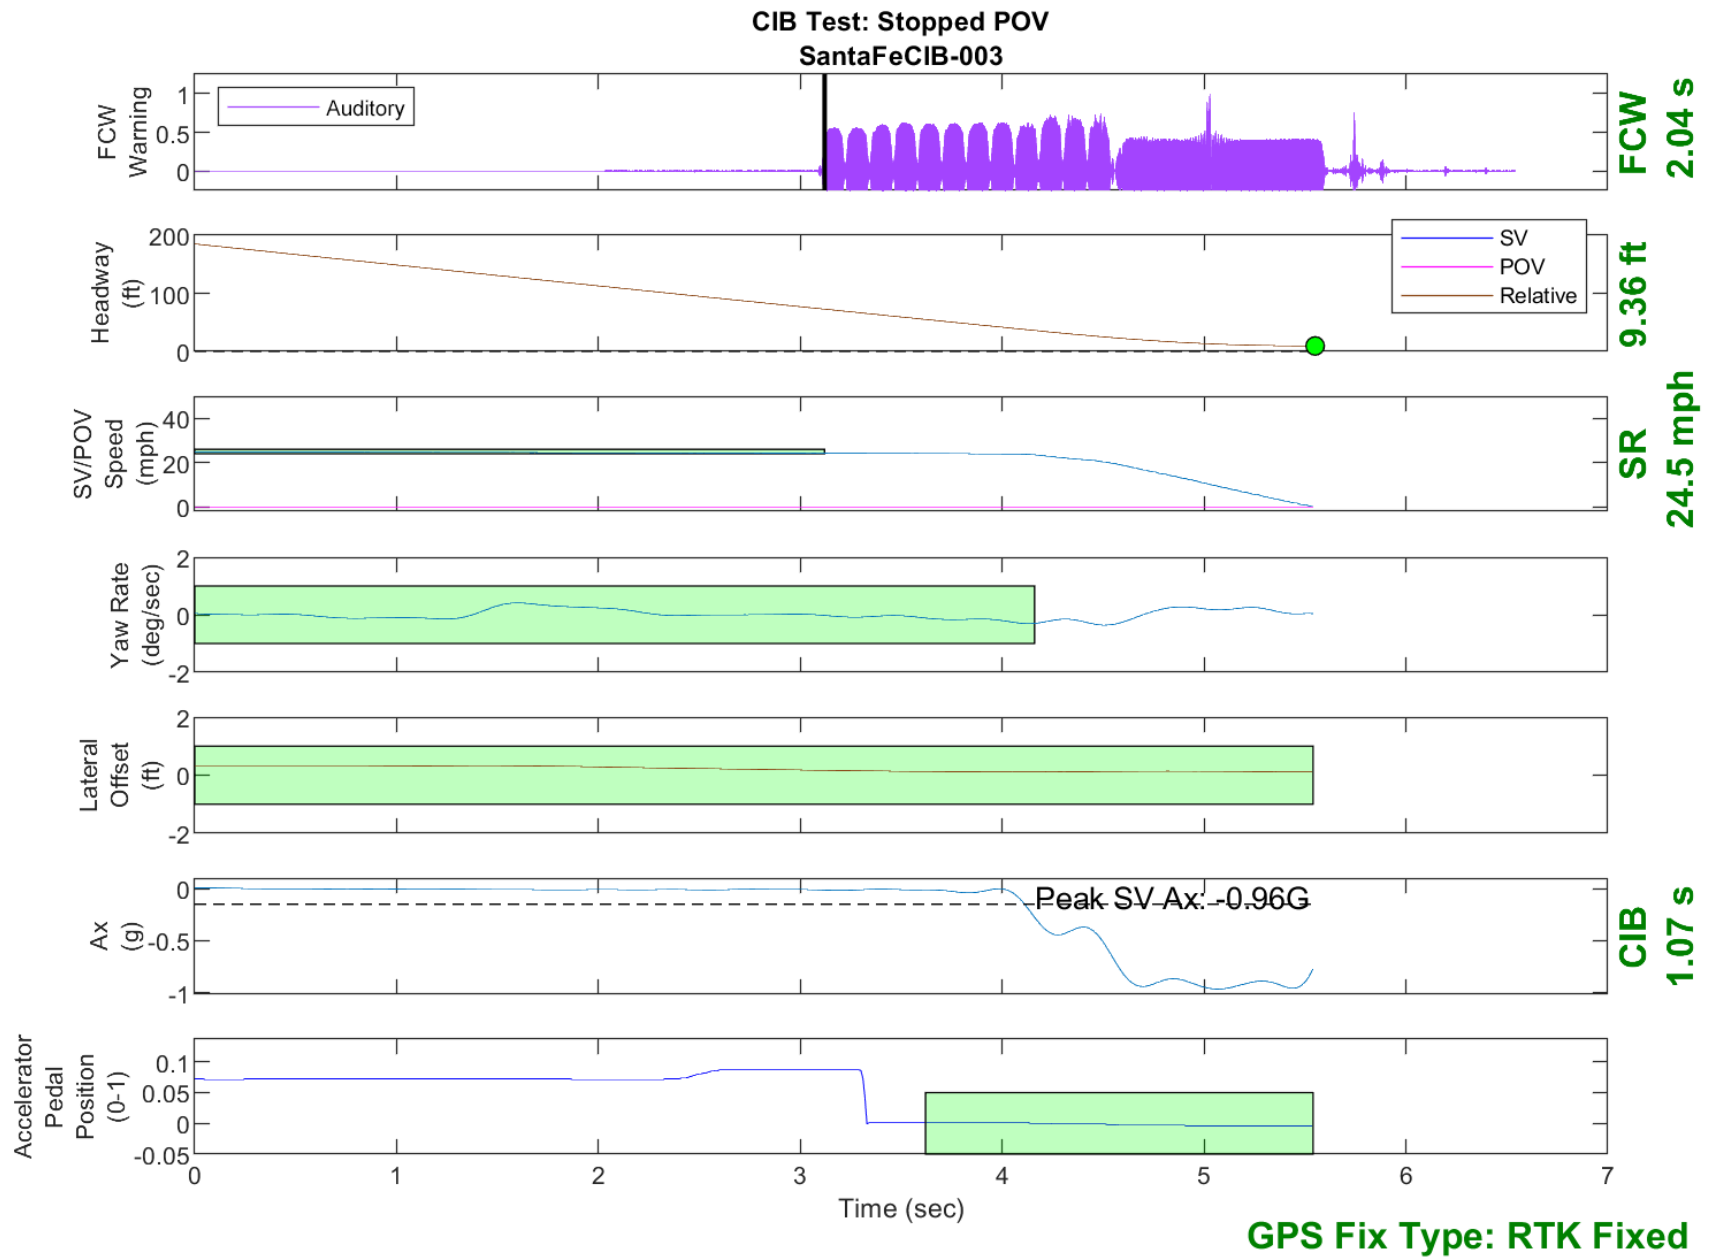


Figure D10. Time History for CIB Run 3, SV Encounters Stopped POV

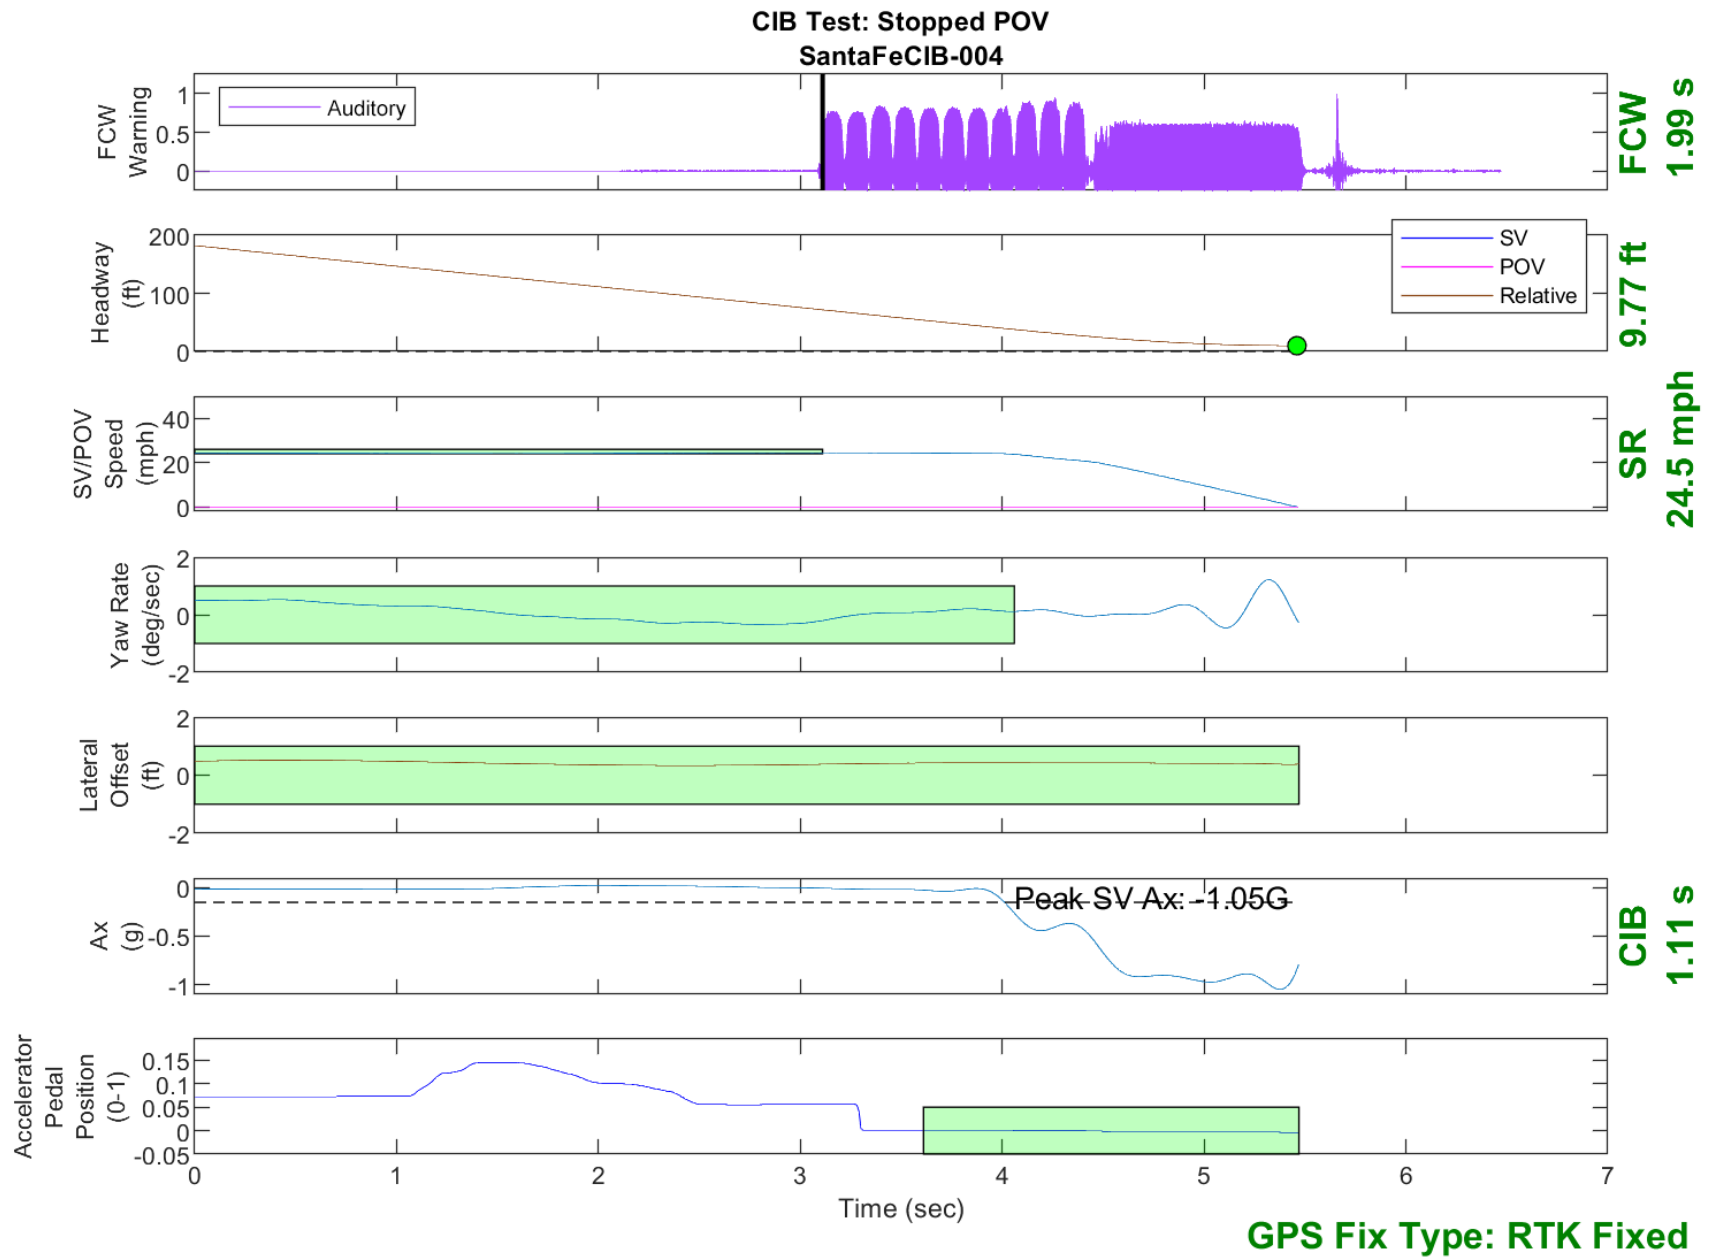


Figure D11. Time History for CIB Run 4, SV Encounters Stopped POV

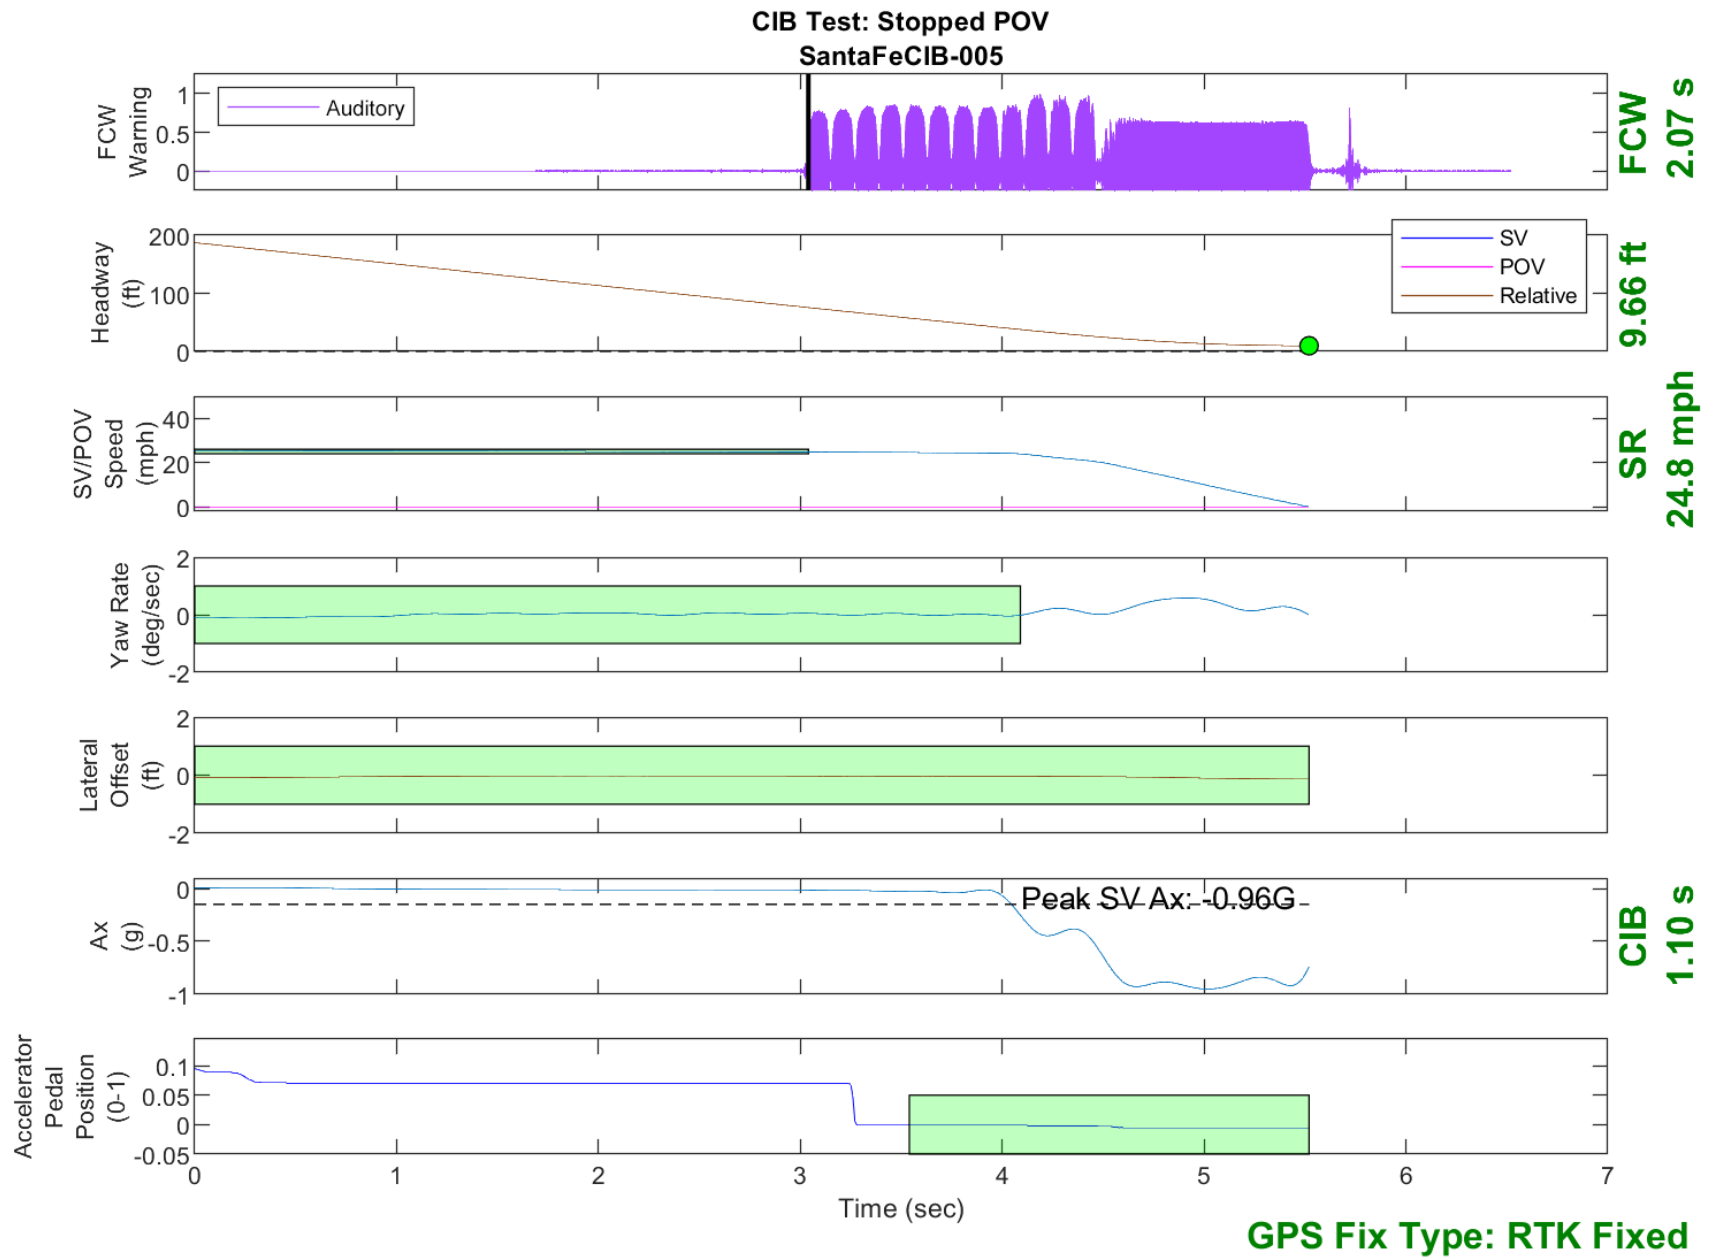


Figure D12. Time History for CIB Run 5, SV Encounters Stopped POV

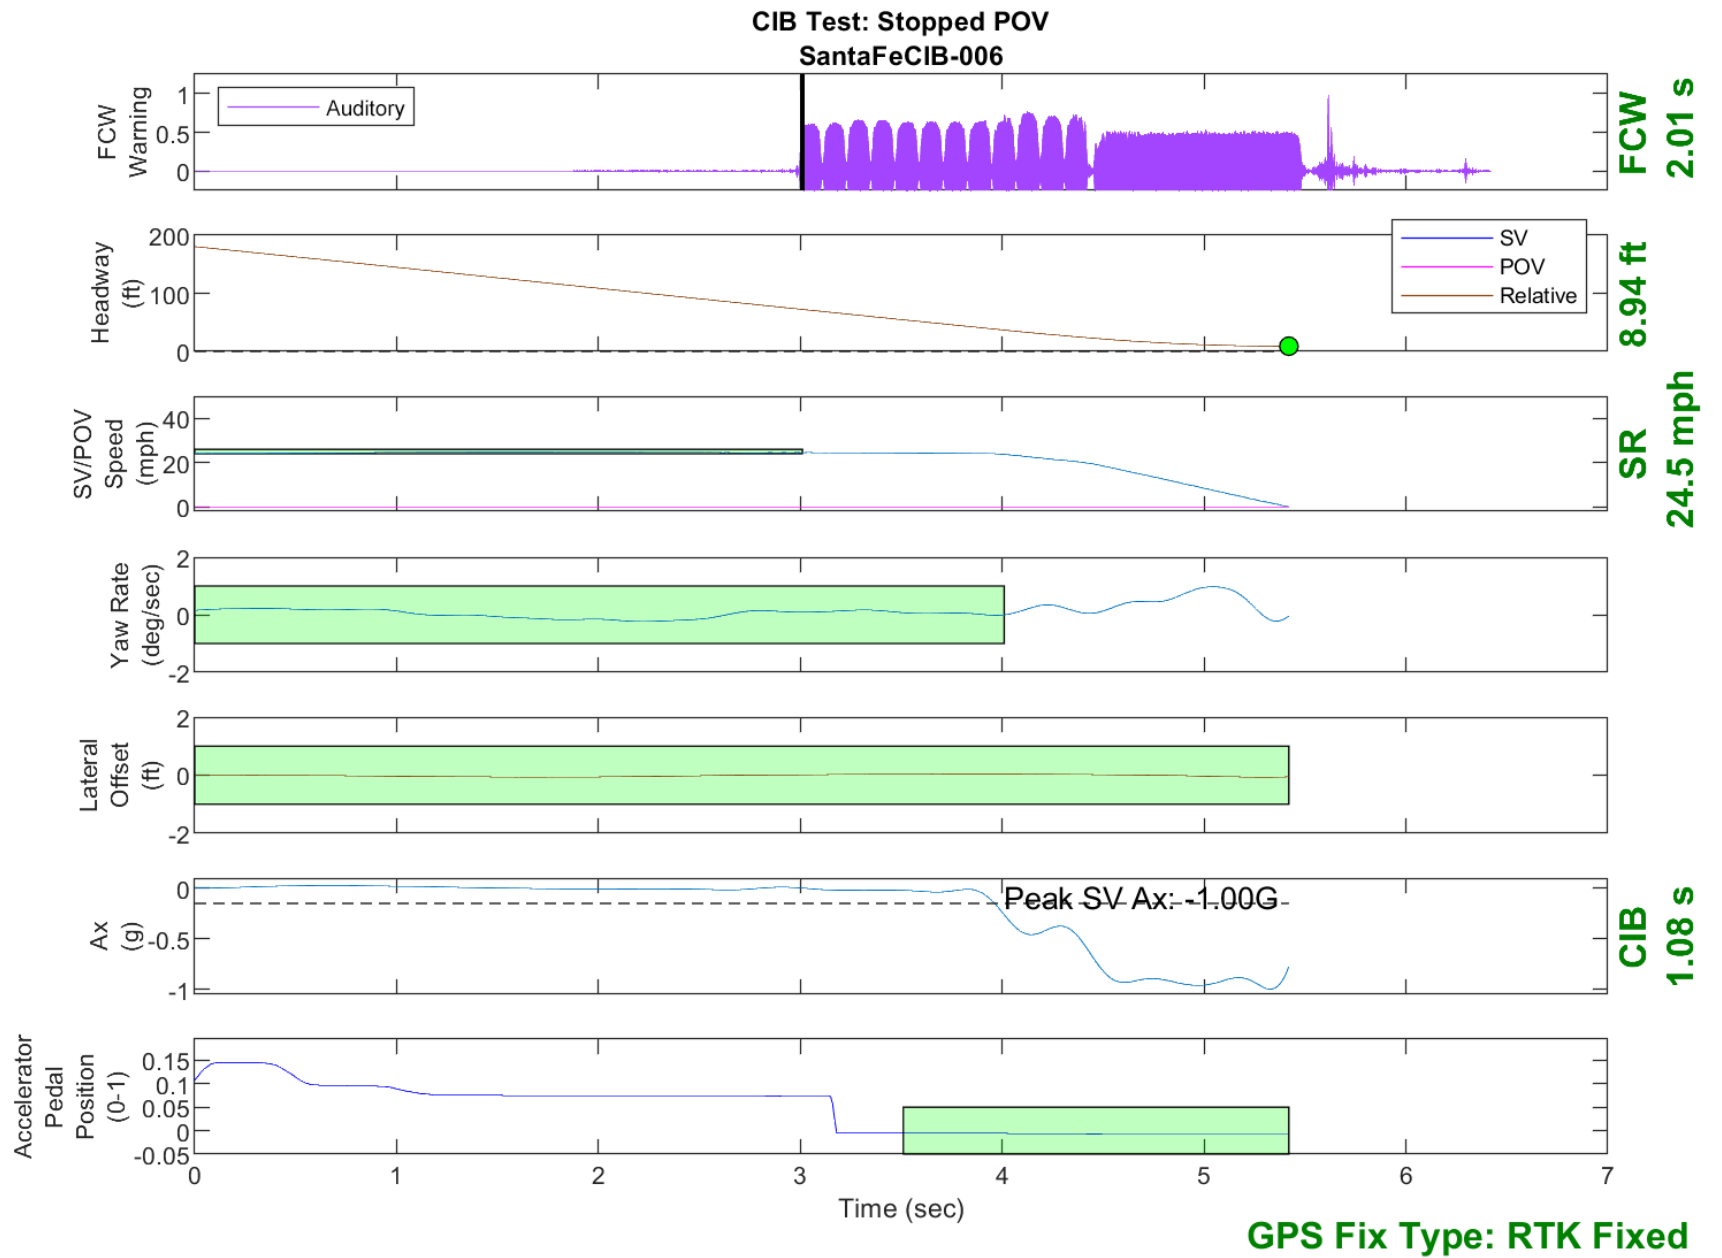


Figure D13. Time History for CIB Run 6, SV Encounters Stopped POV

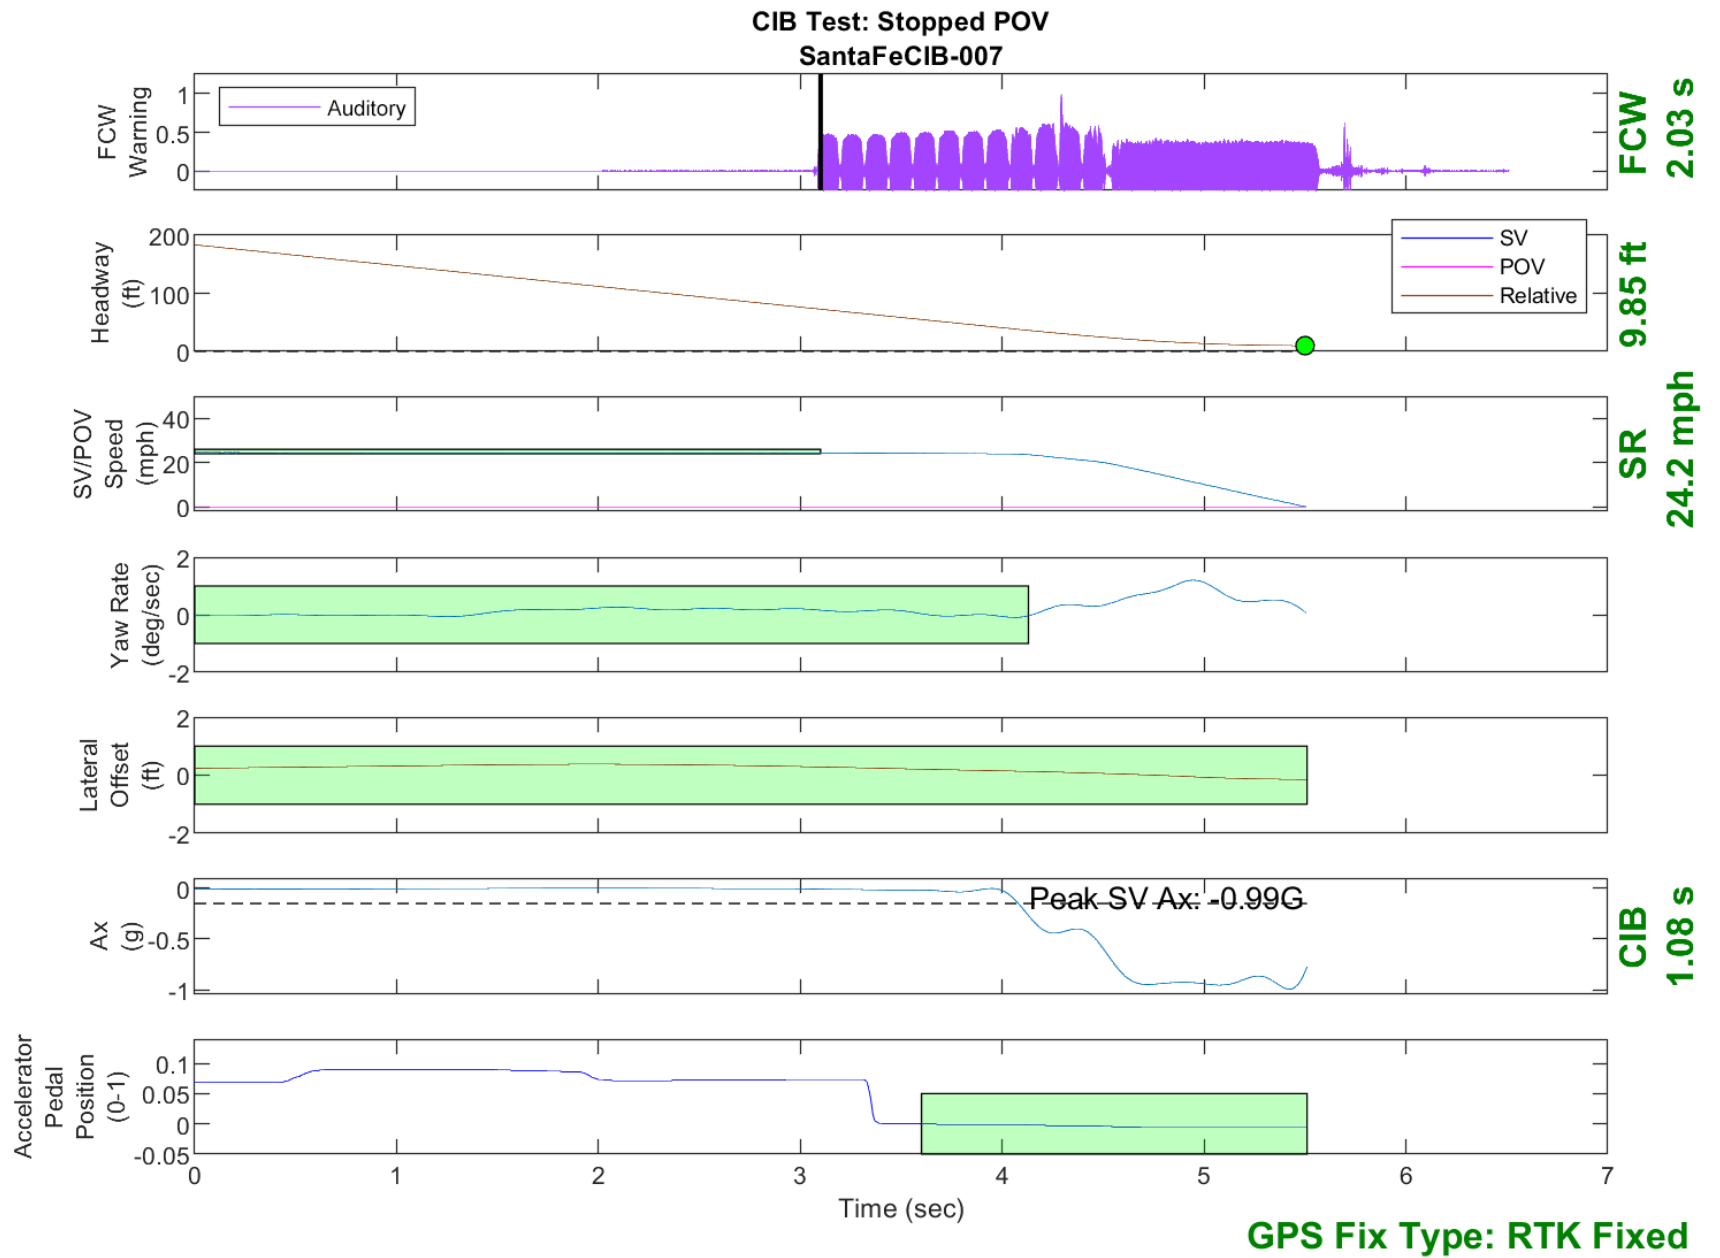


Figure D14. Time History for CIB Run 7, SV Encounters Stopped POV



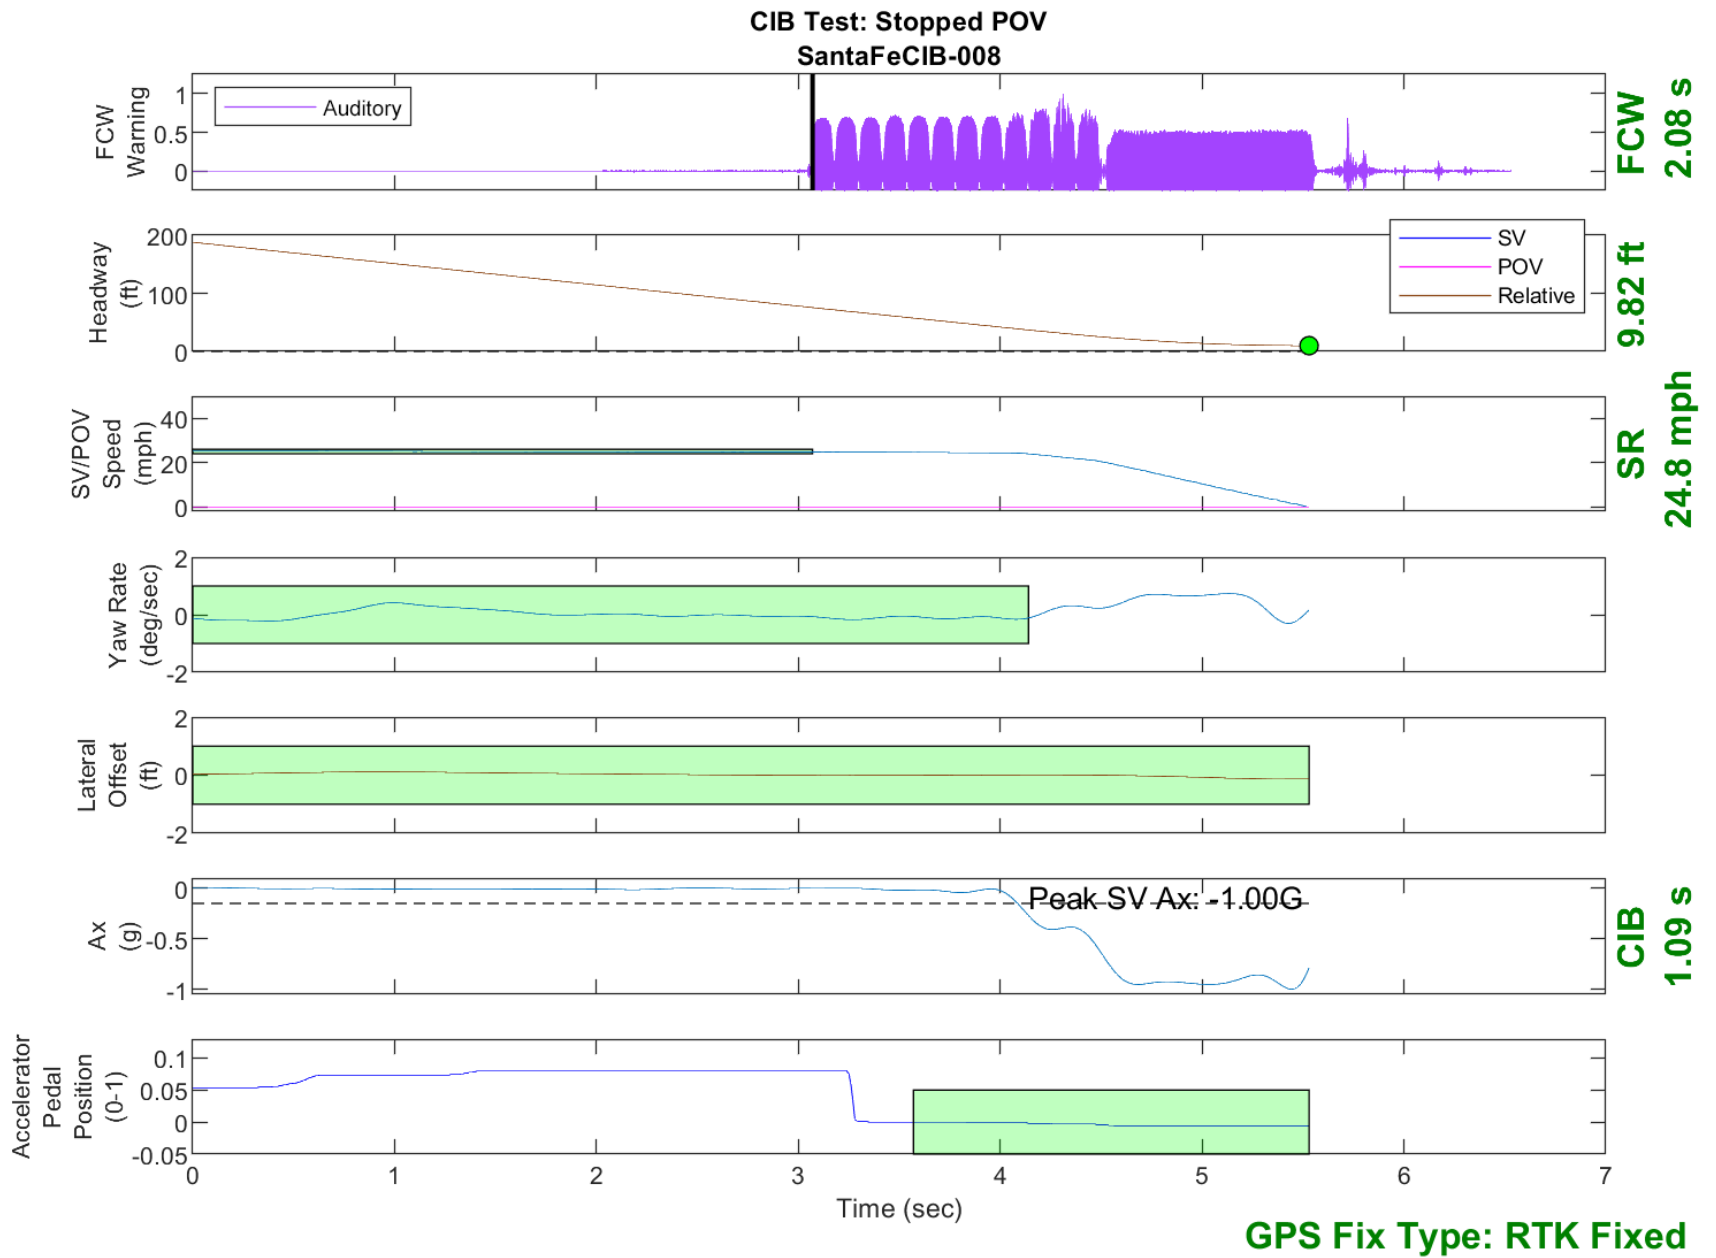


Figure D15. Time History for CIB Run 8, SV Encounters Stopped POV

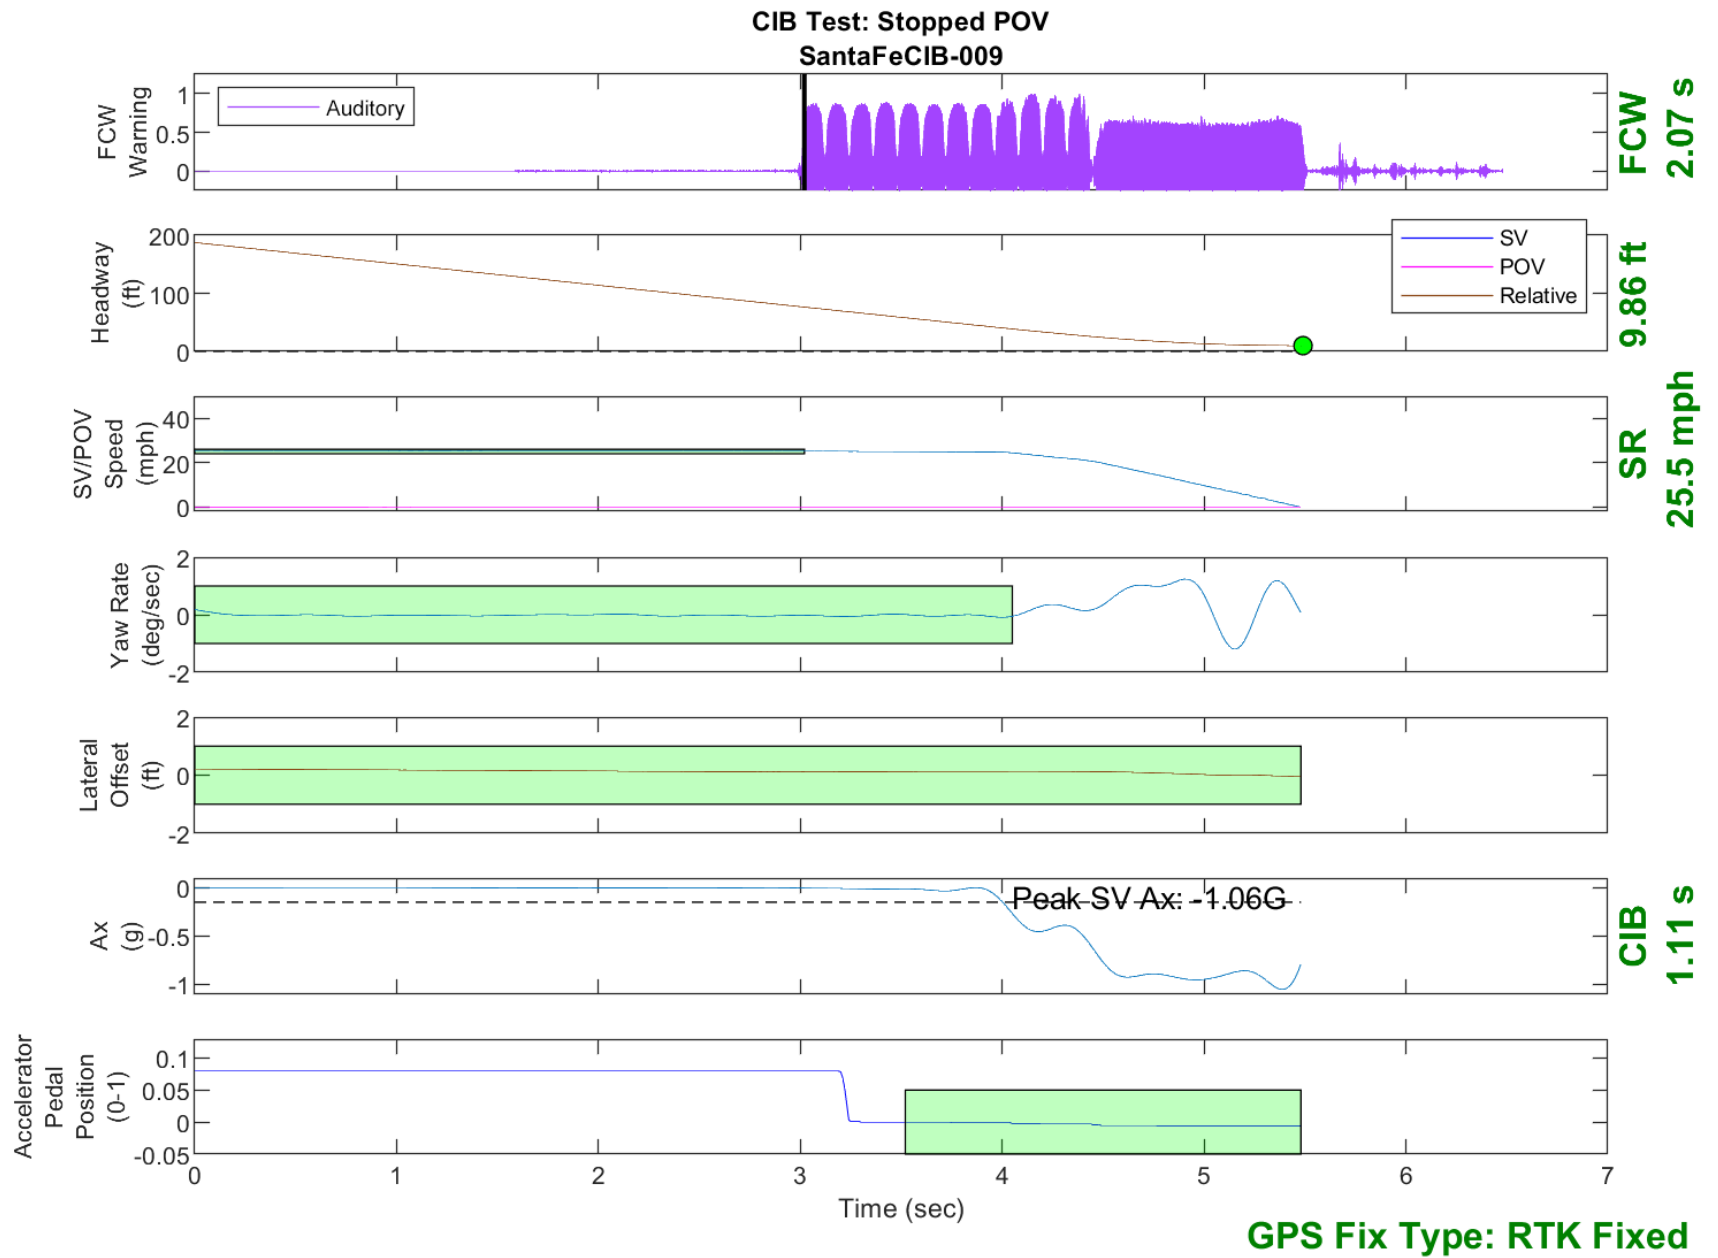


Figure D16. Time History for CIB Run 9, SV Encounters Stopped POV

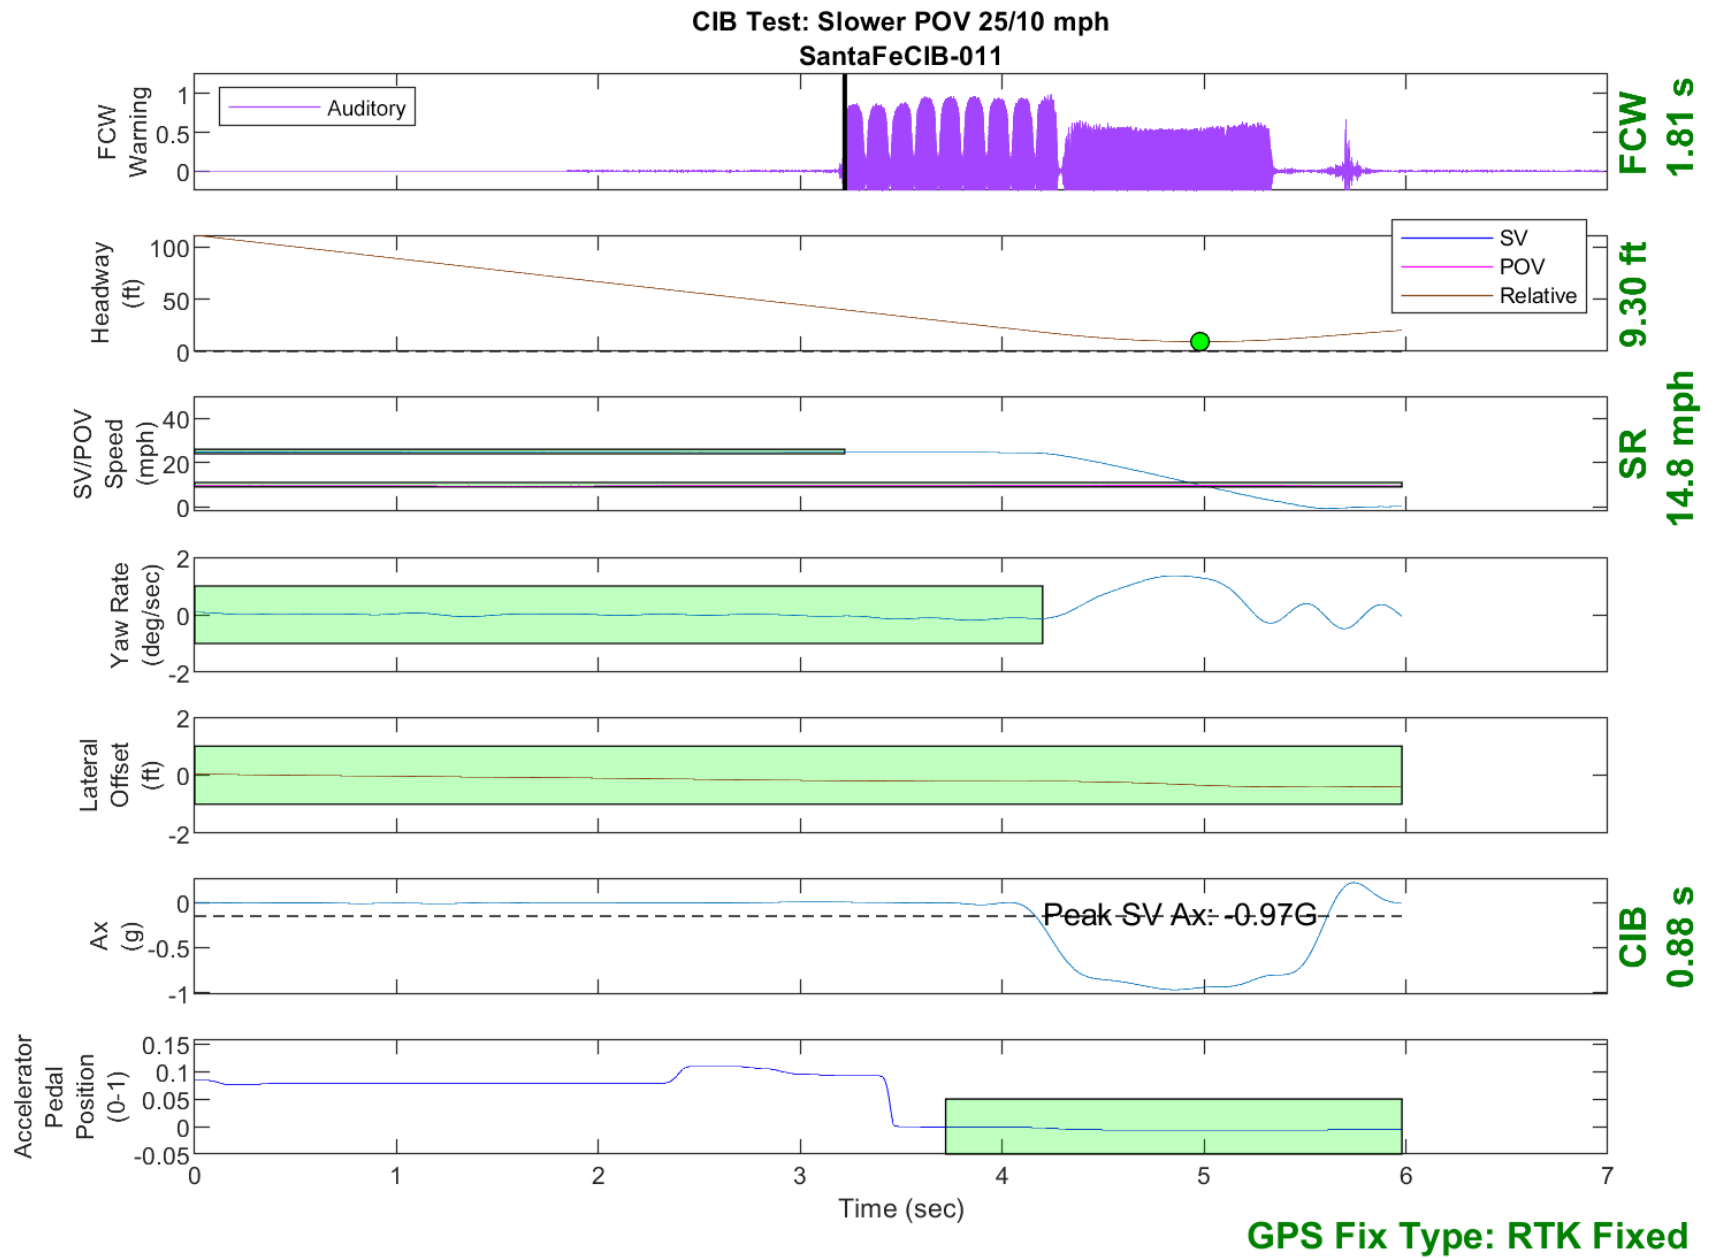


Figure D17. Time History for CIB Run 11, SV Encounters Slower POV, SV 25 mph, POV 10 mph

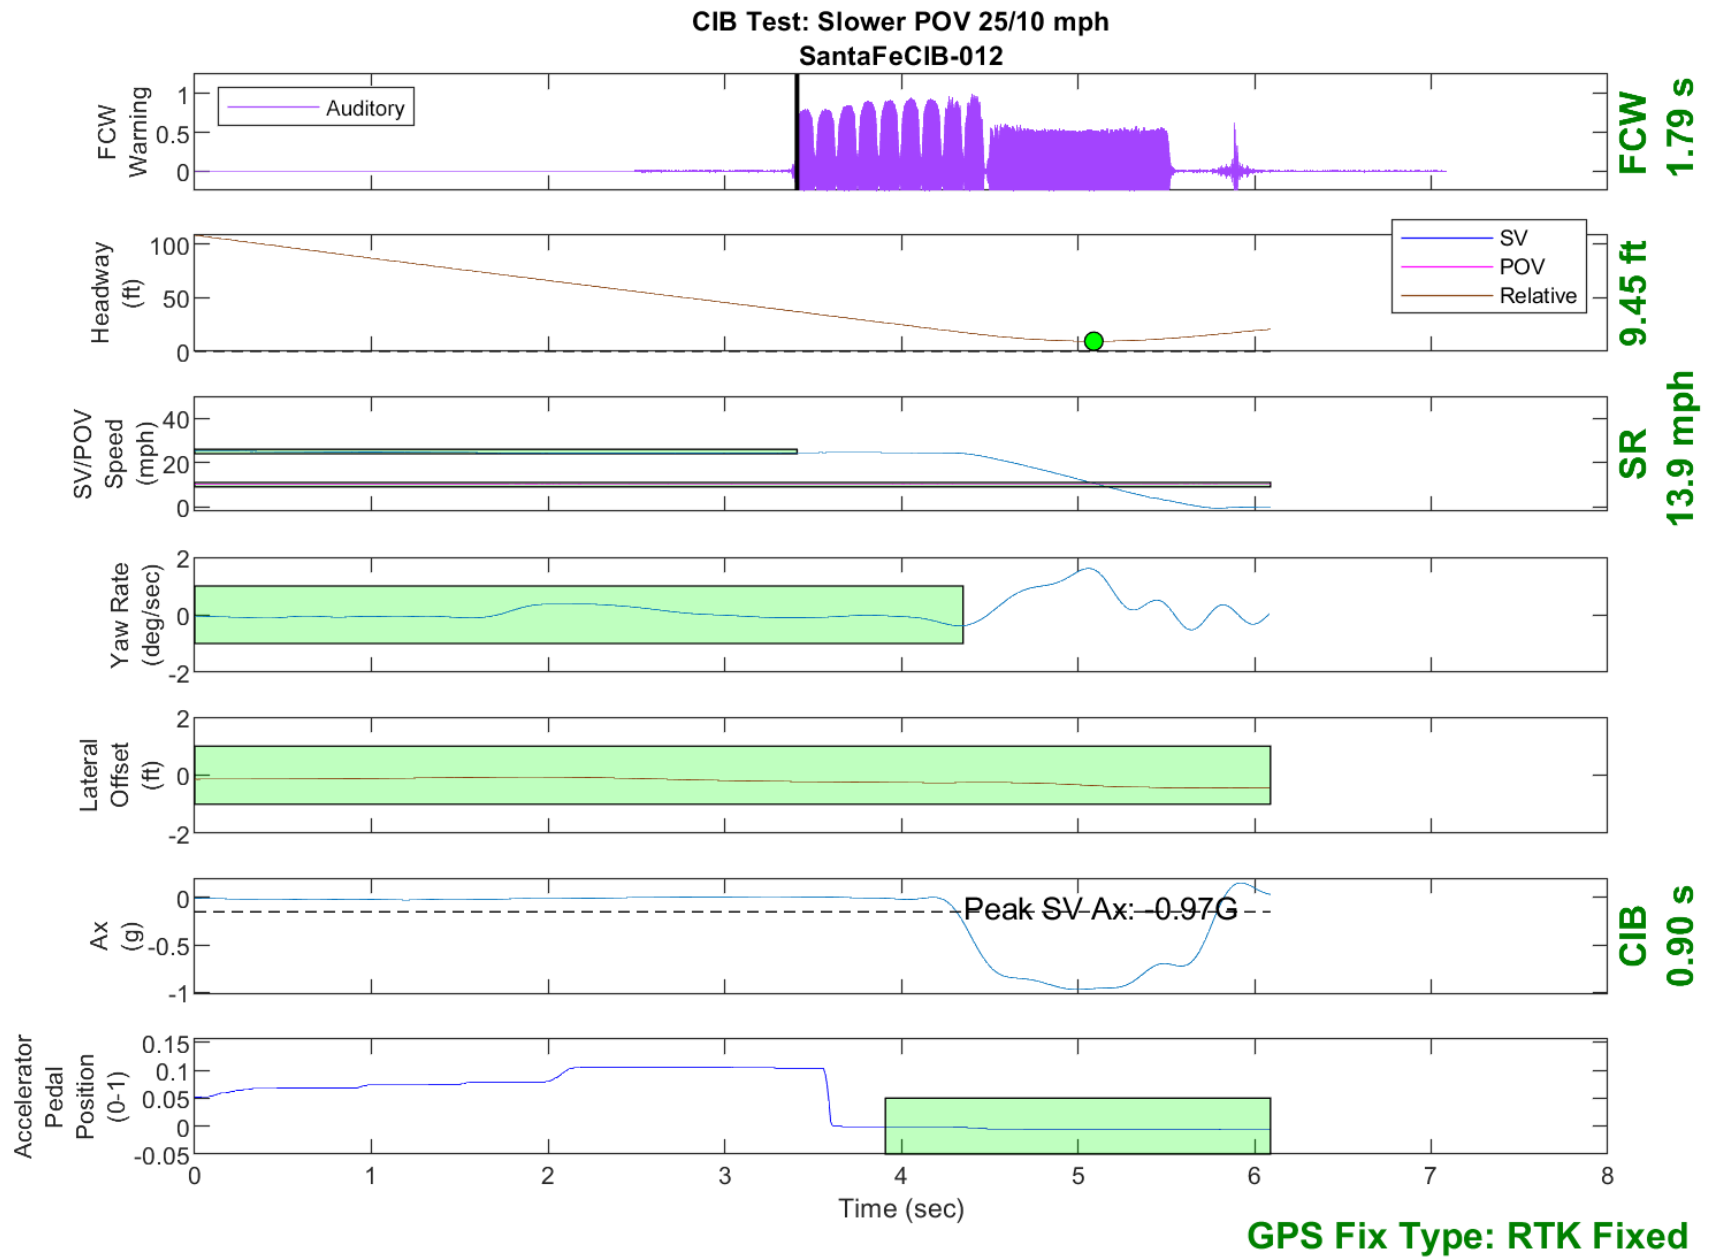


Figure D18. Time History for CIB Run 12, SV Encounters Slower POV, SV 25 mph, POV 10 mph

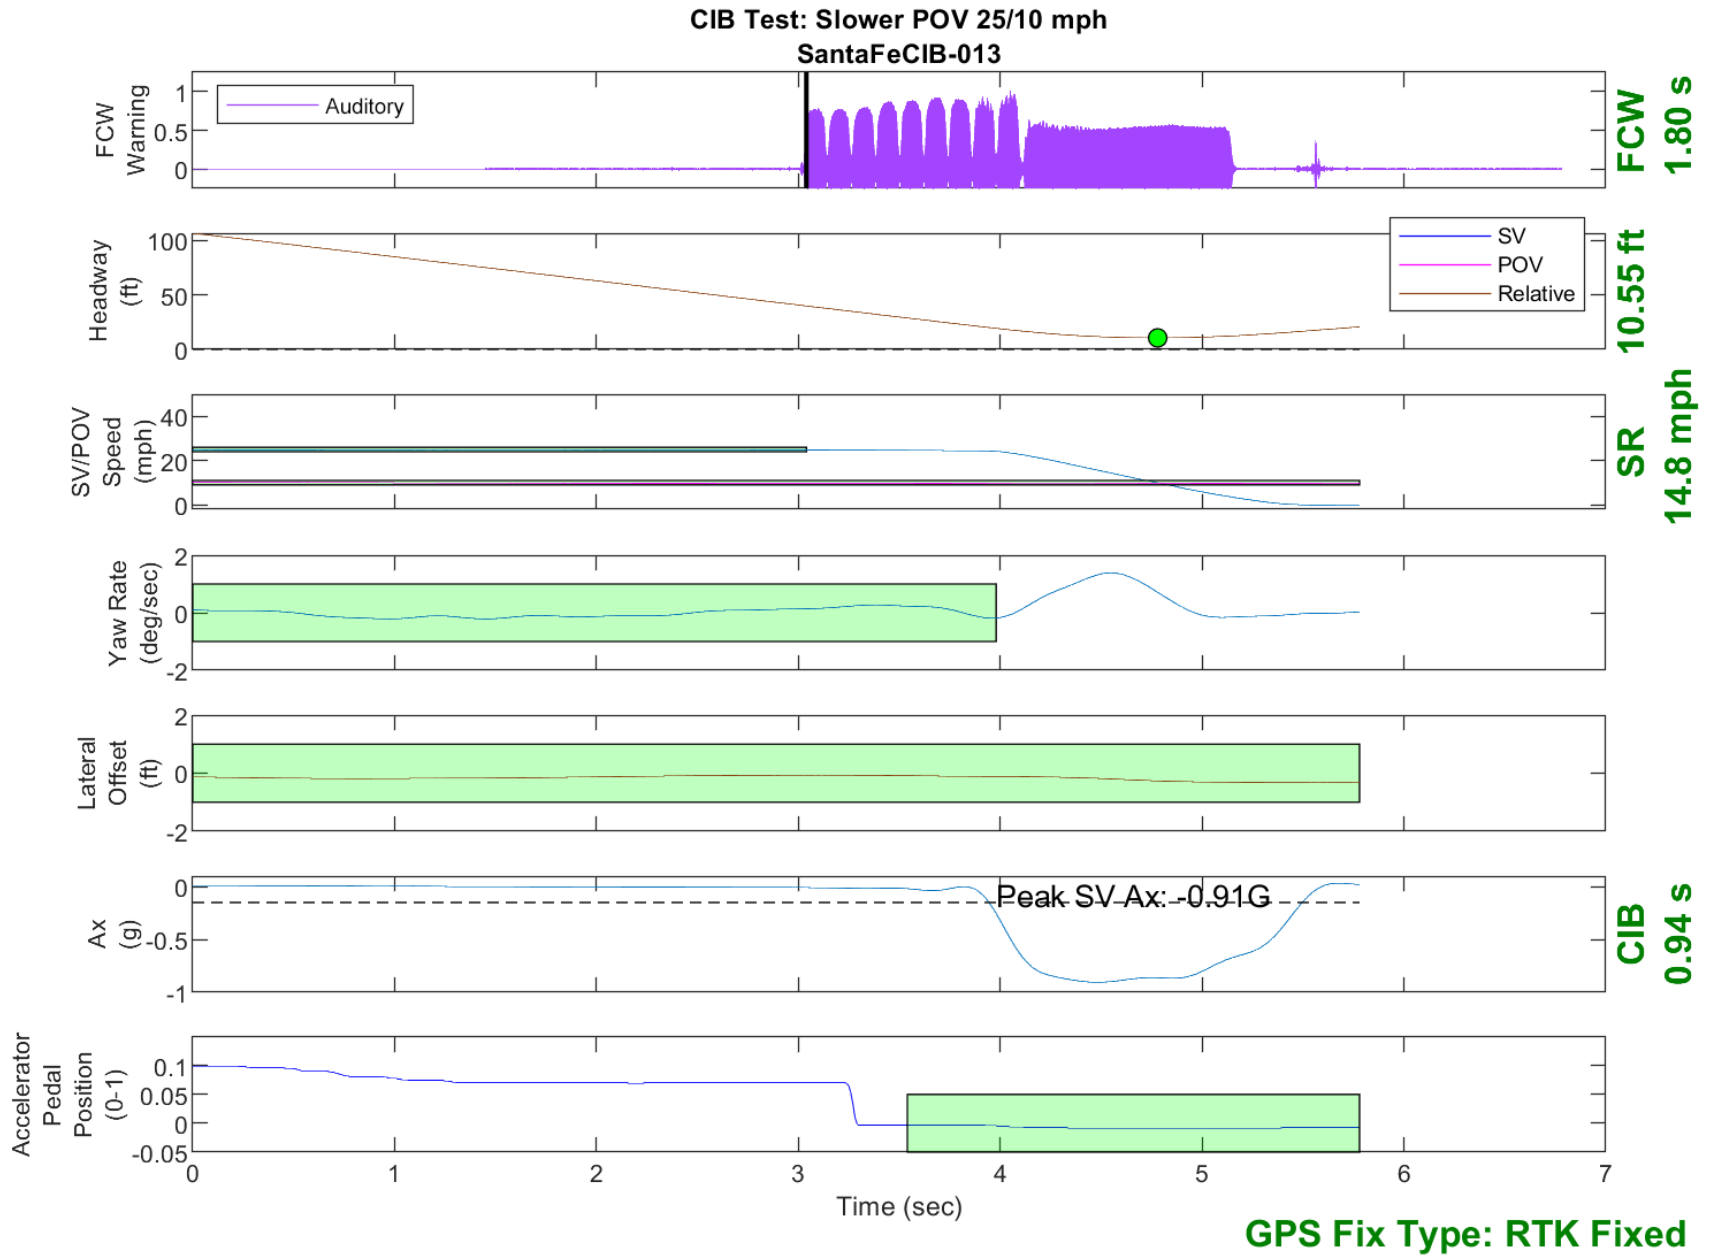


Figure D19. Time History for CIB Run 13, SV Encounters Slower POV, SV 25 mph, POV 10 mph

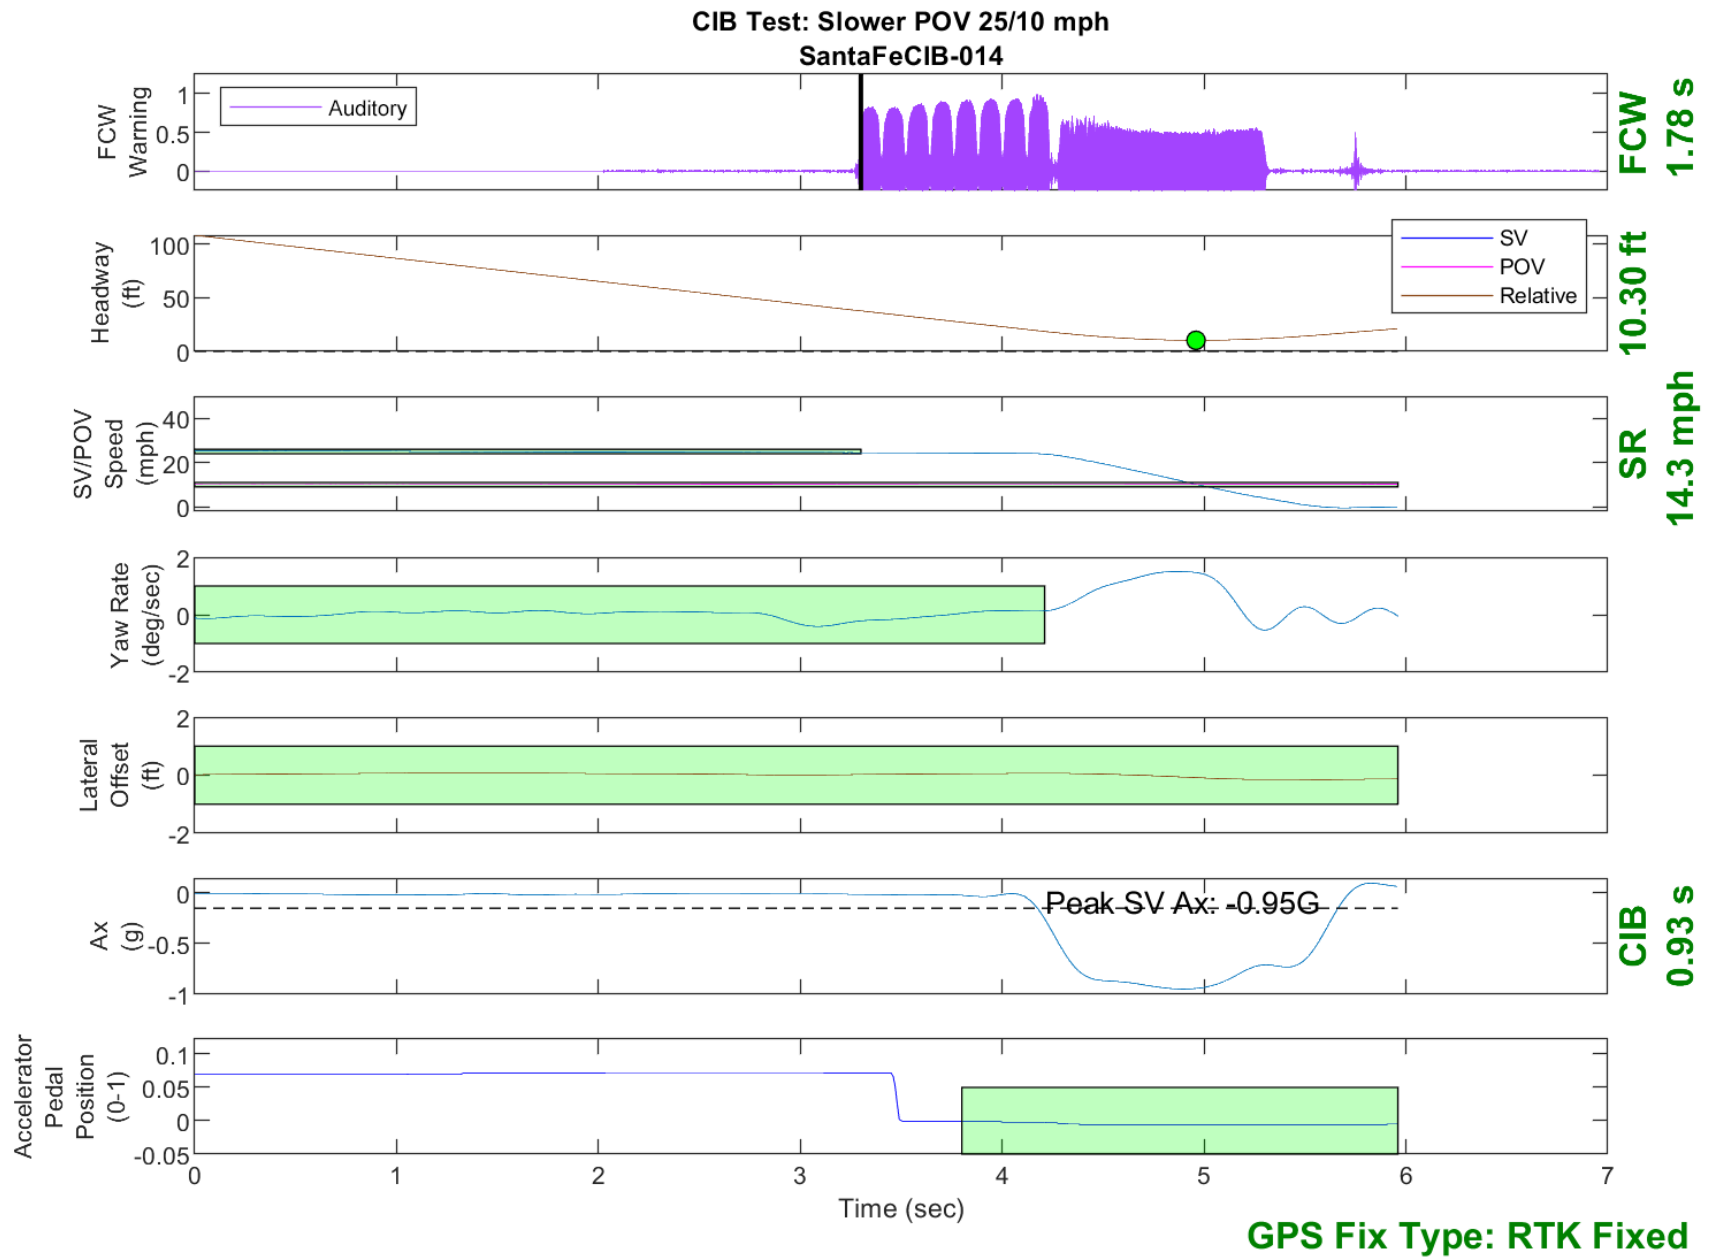


Figure D20. Time History for CIB Run 14, SV Encounters Slower POV, SV 25 mph, POV 10 mph

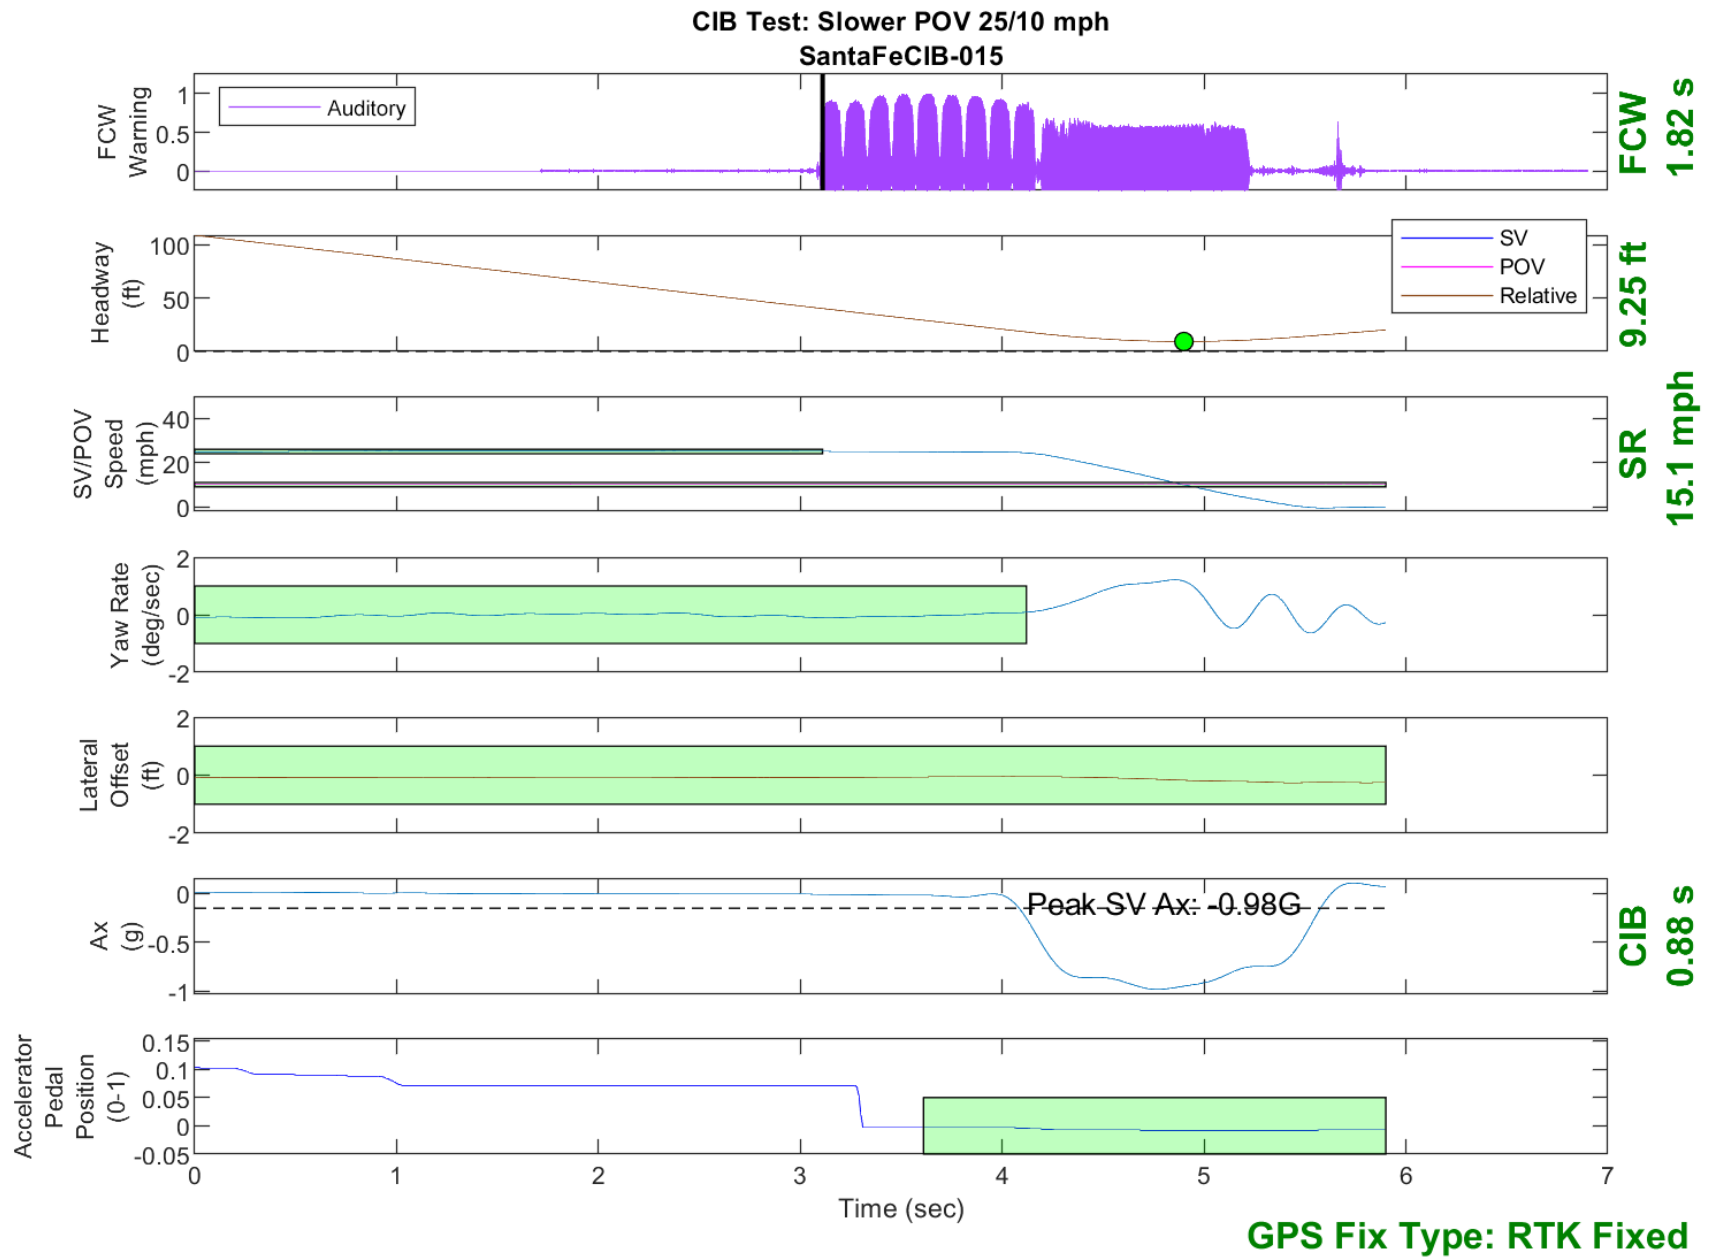


Figure D21. Time History for CIB Run 15, SV Encounters Slower POV, SV 25 mph, POV 10 mph

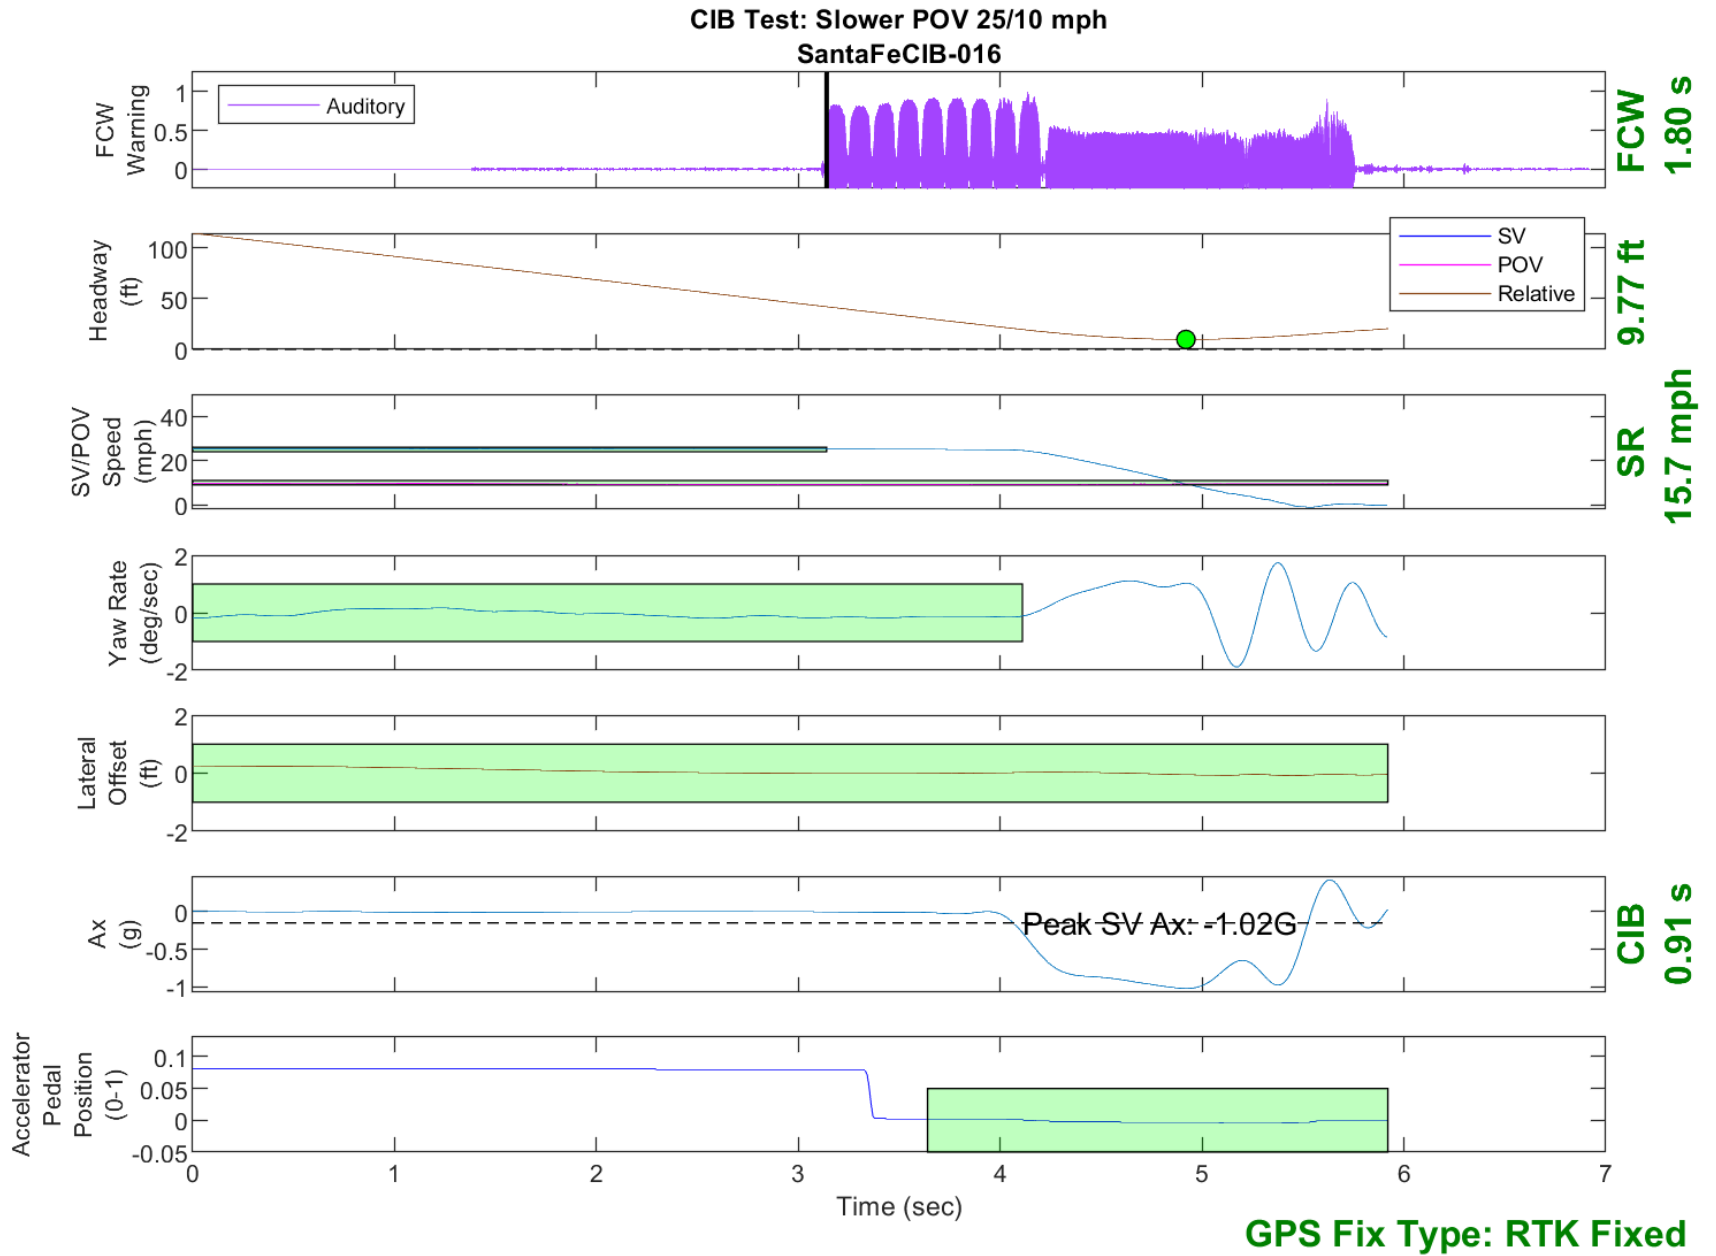


Figure D22. Time History for CIB Run 16, SV Encounters Slower POV, SV 25 mph, POV 10 mph



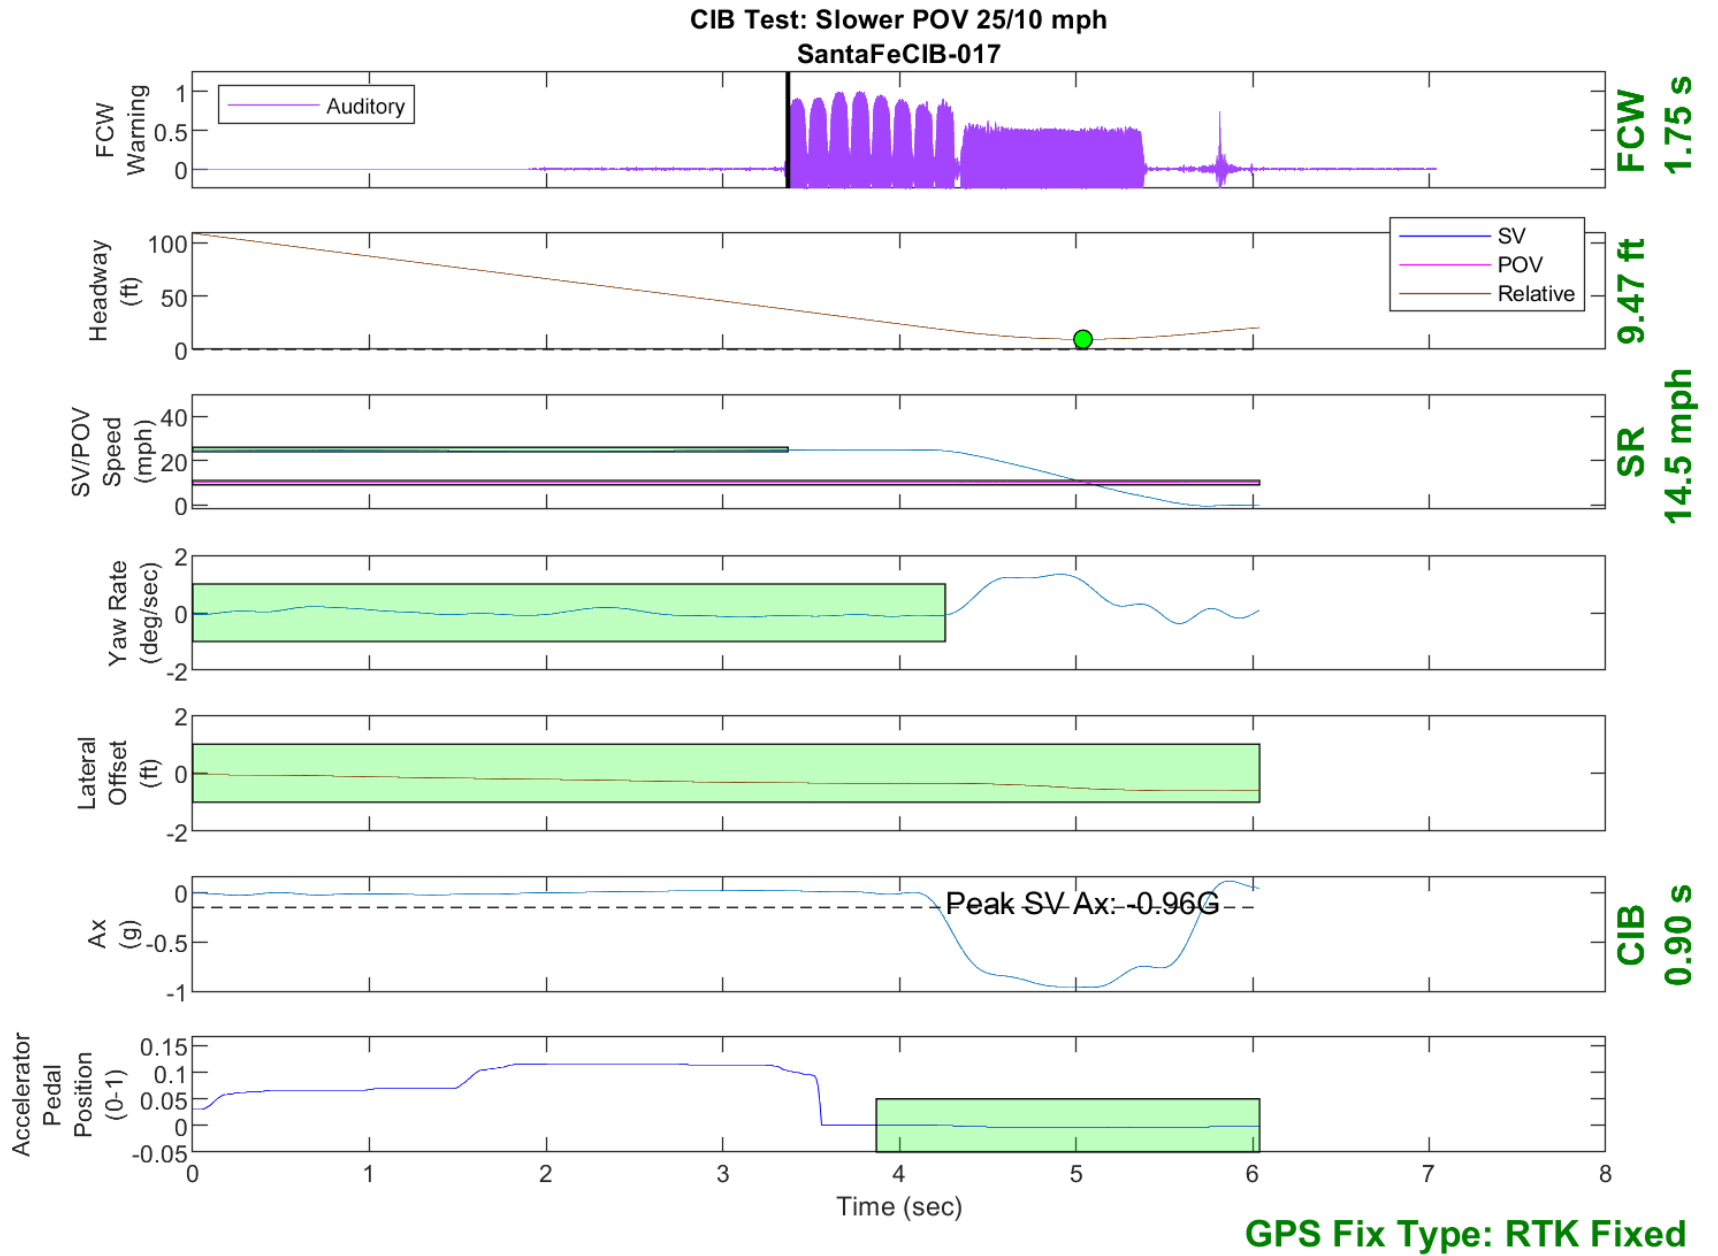


Figure D23. Time History for CIB Run 17, SV Encounters Slower POV, SV 25 mph, POV 10 mph

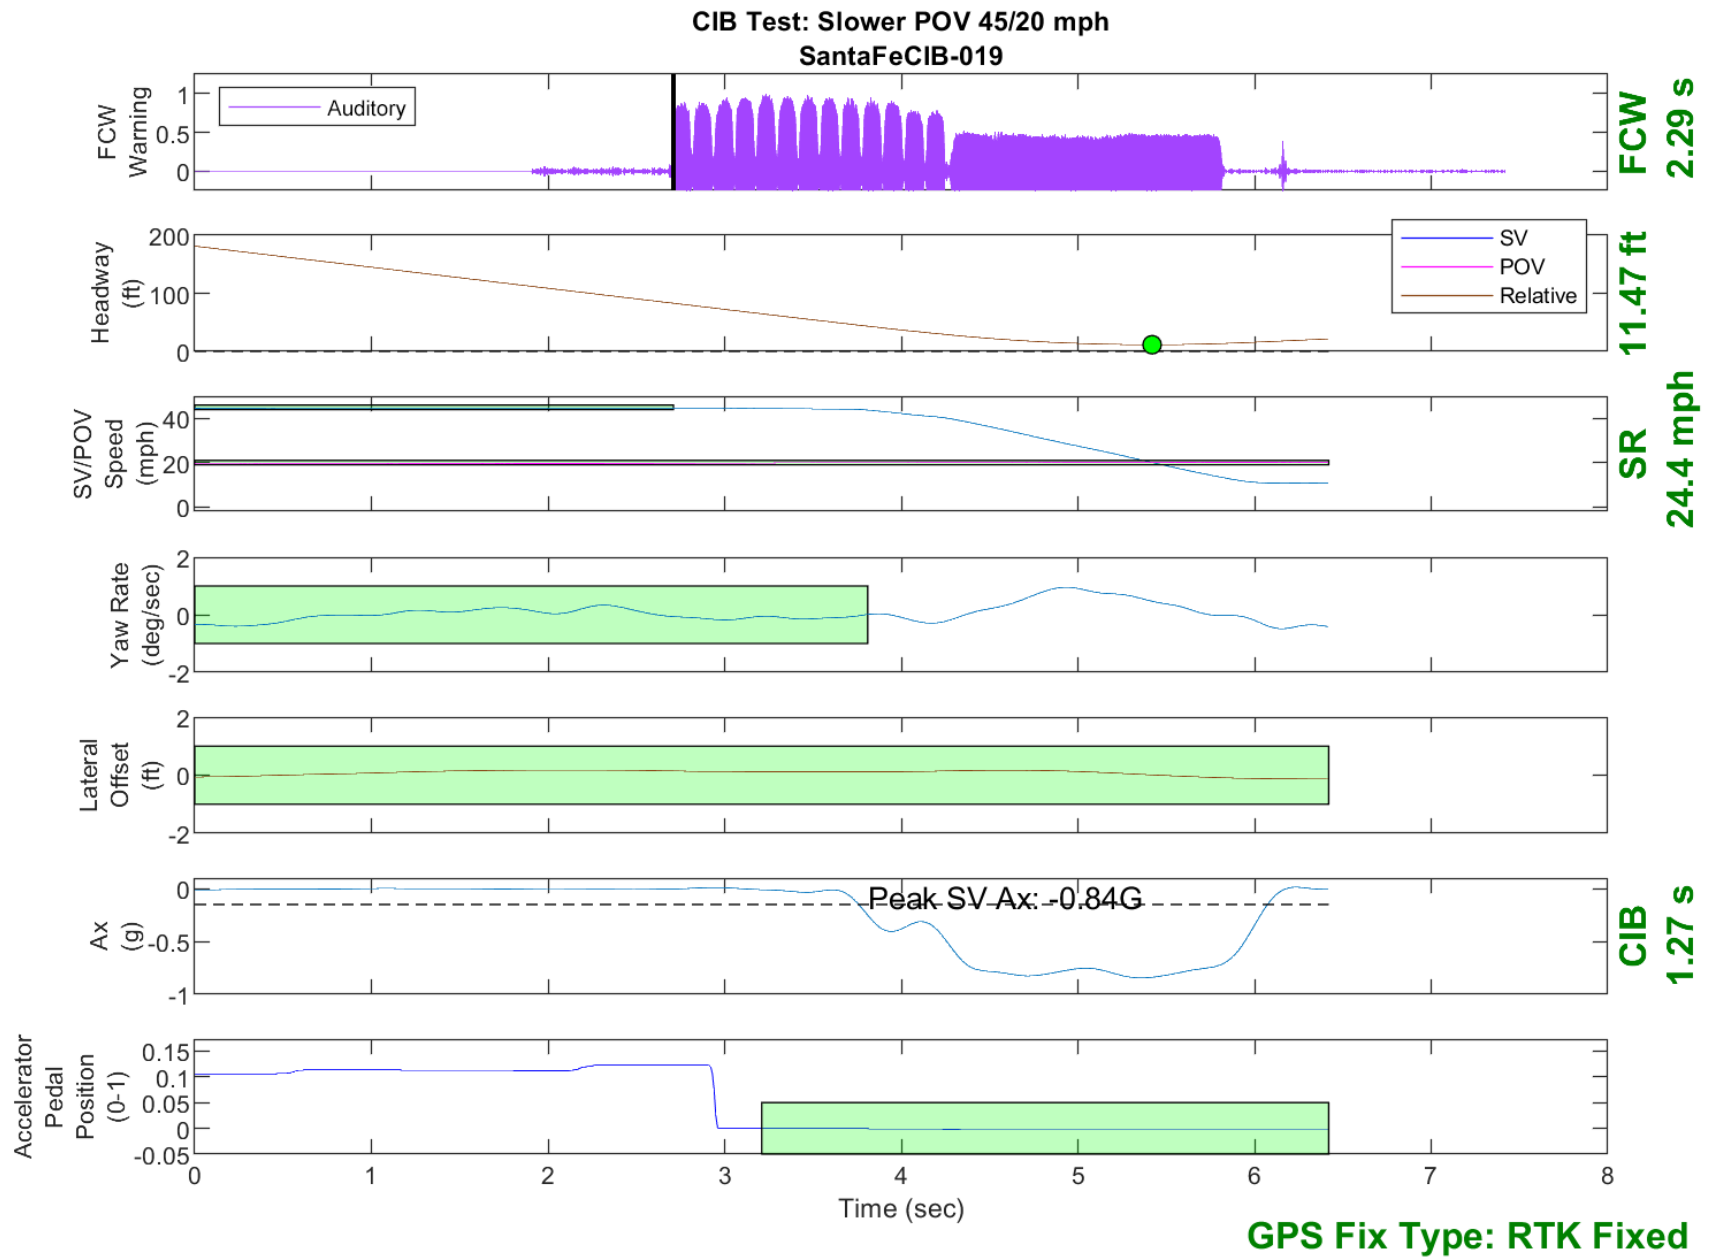


Figure D24. Time History for CIB Run 19, SV Encounters Slower POV, SV 45 mph, POV 20 mph

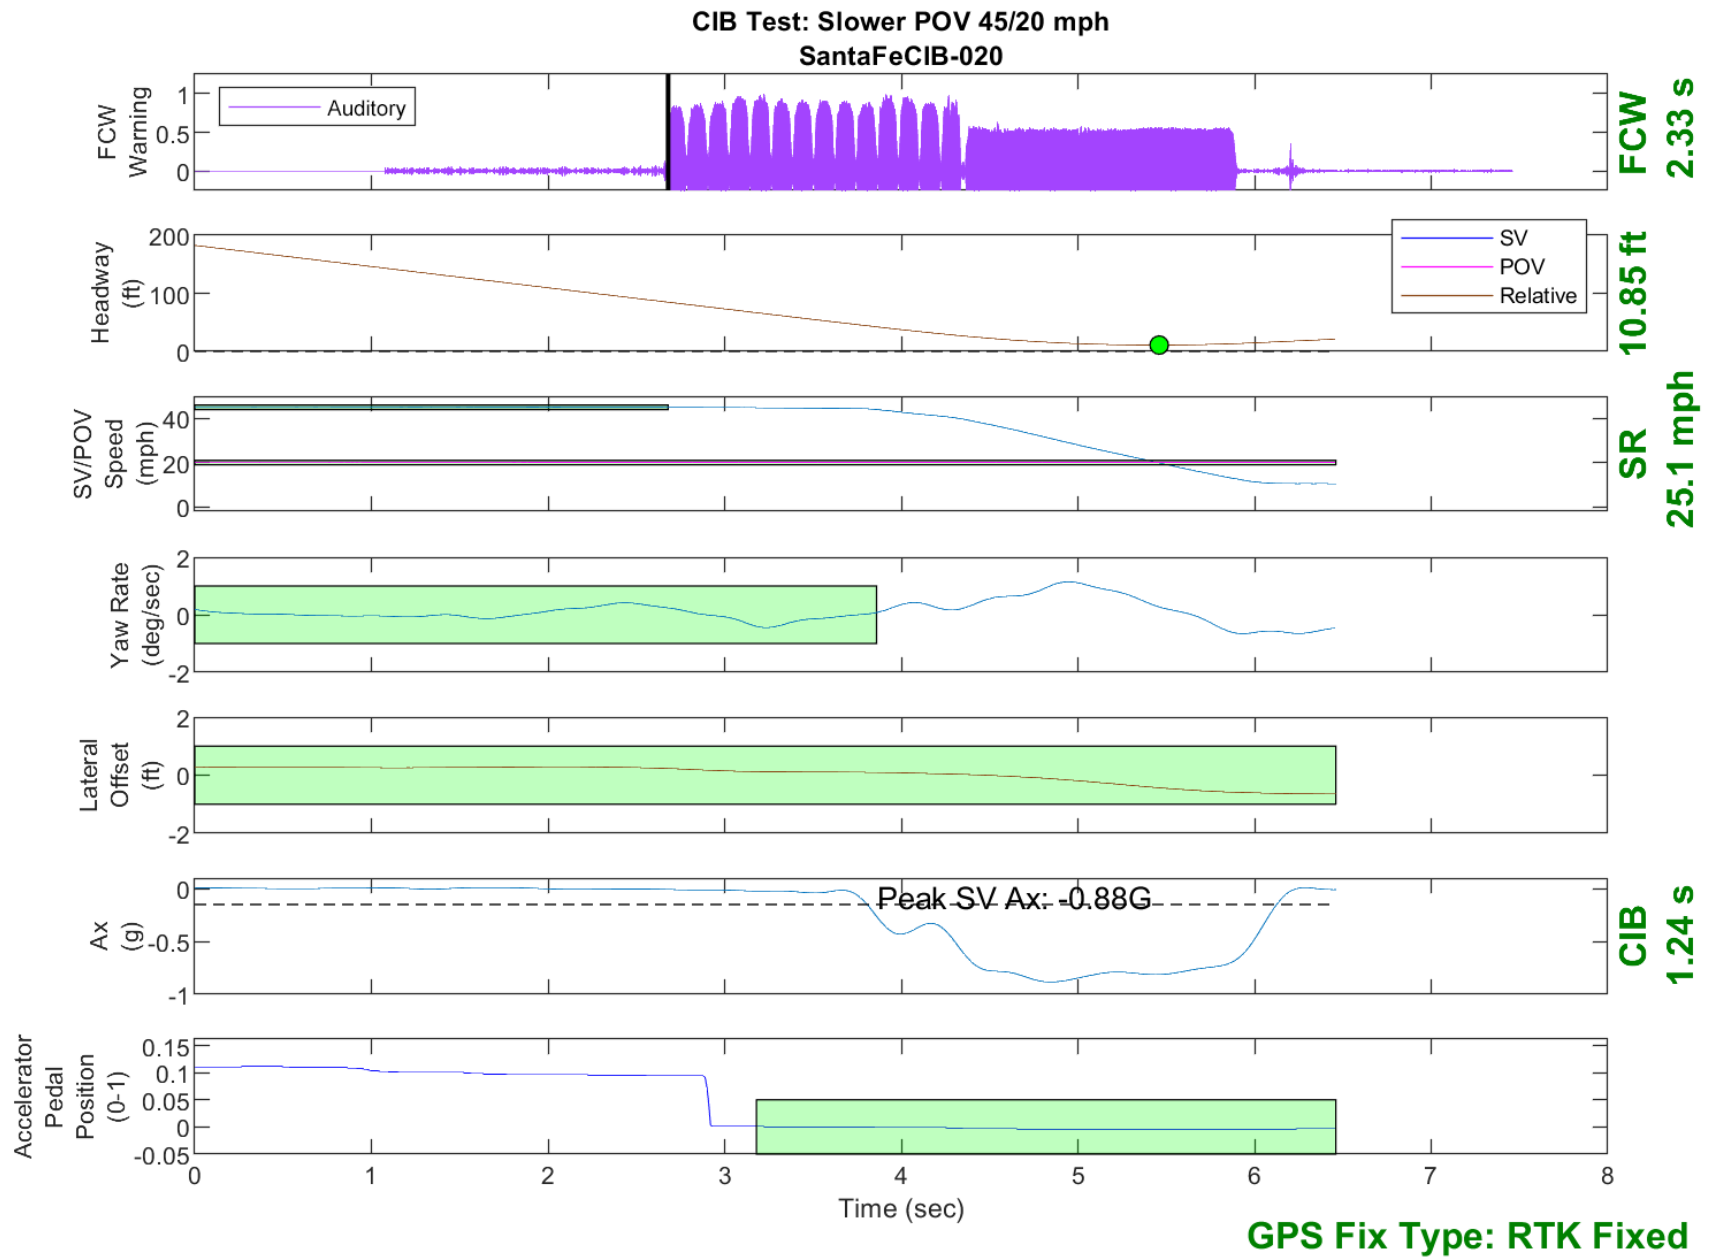


Figure D25. Time History for CIB Run 20, SV Encounters Slower POV, SV 45 mph, POV 20 mph

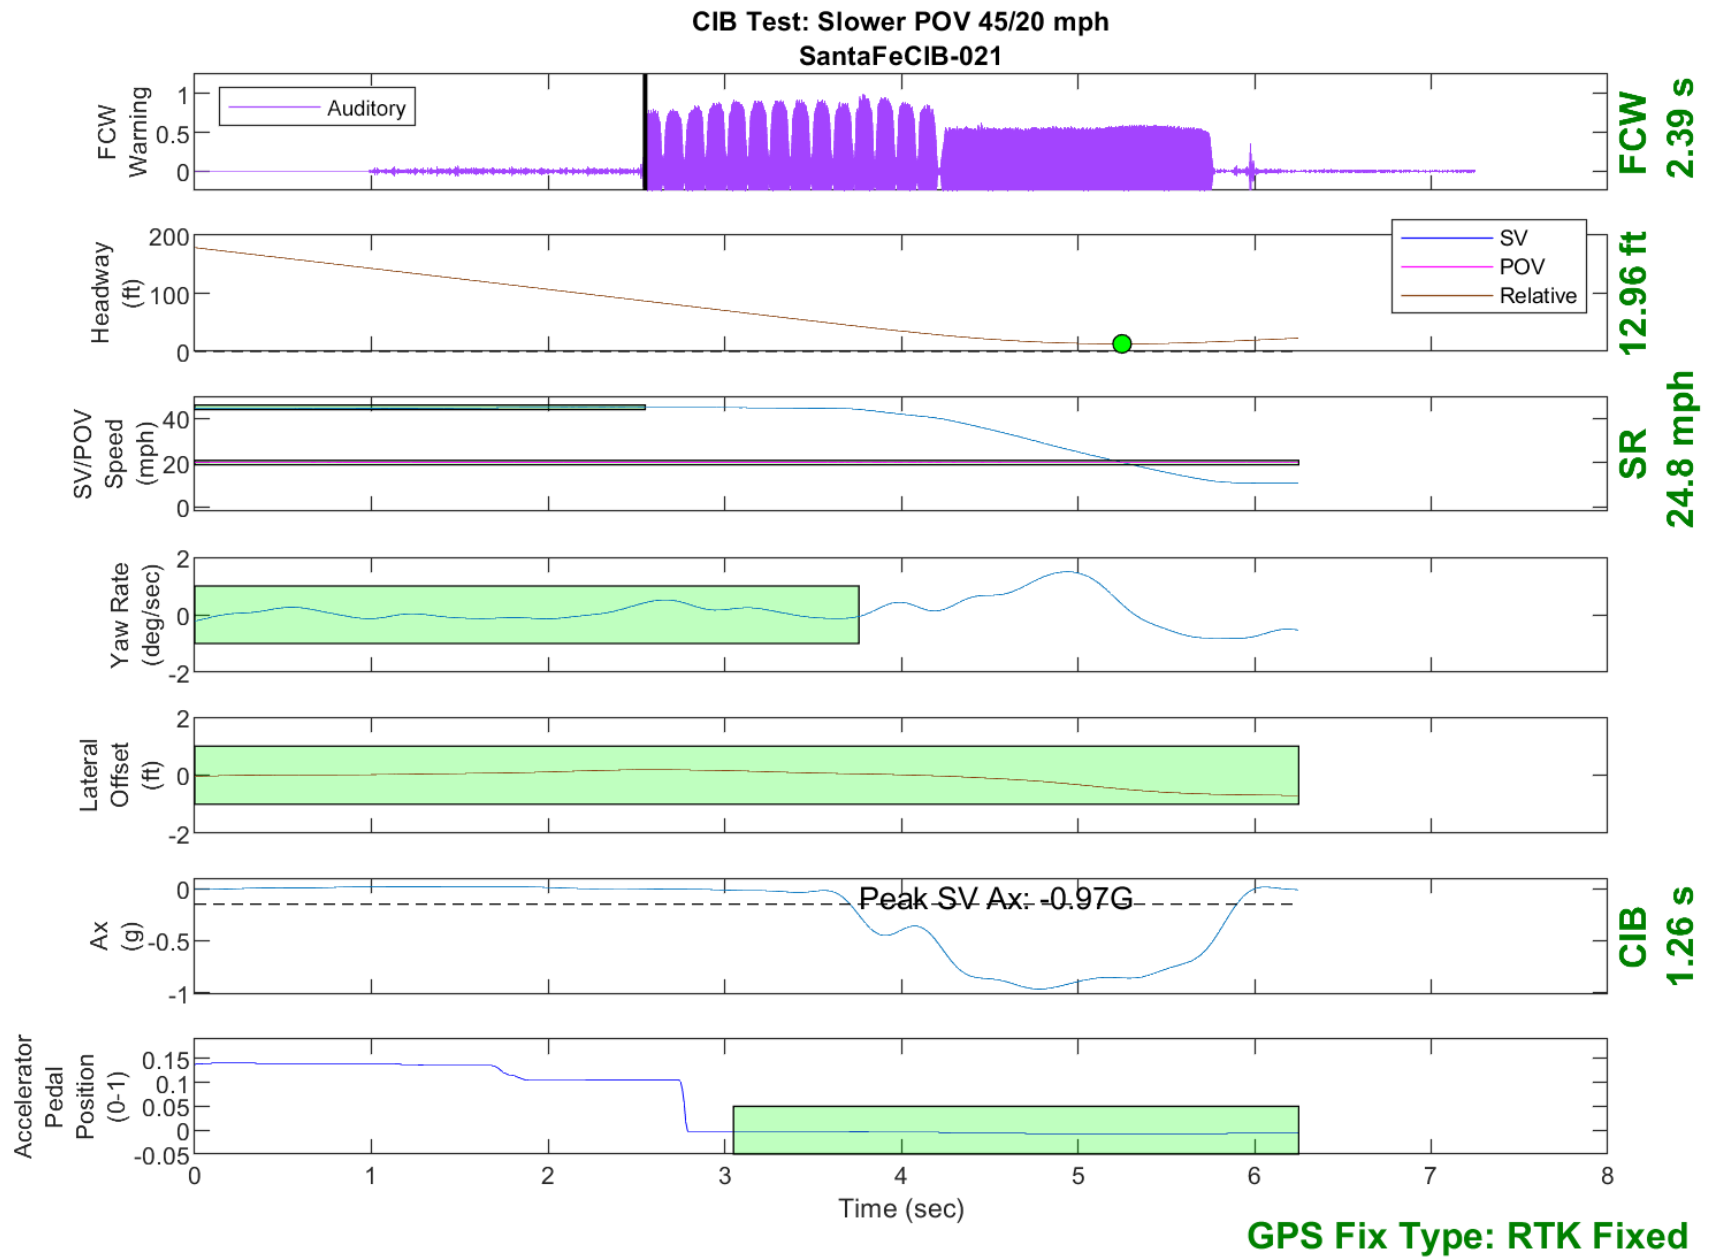


Figure D26. Time History for CIB Run 21, SV Encounters Slower POV, SV 45 mph, POV 20 mph

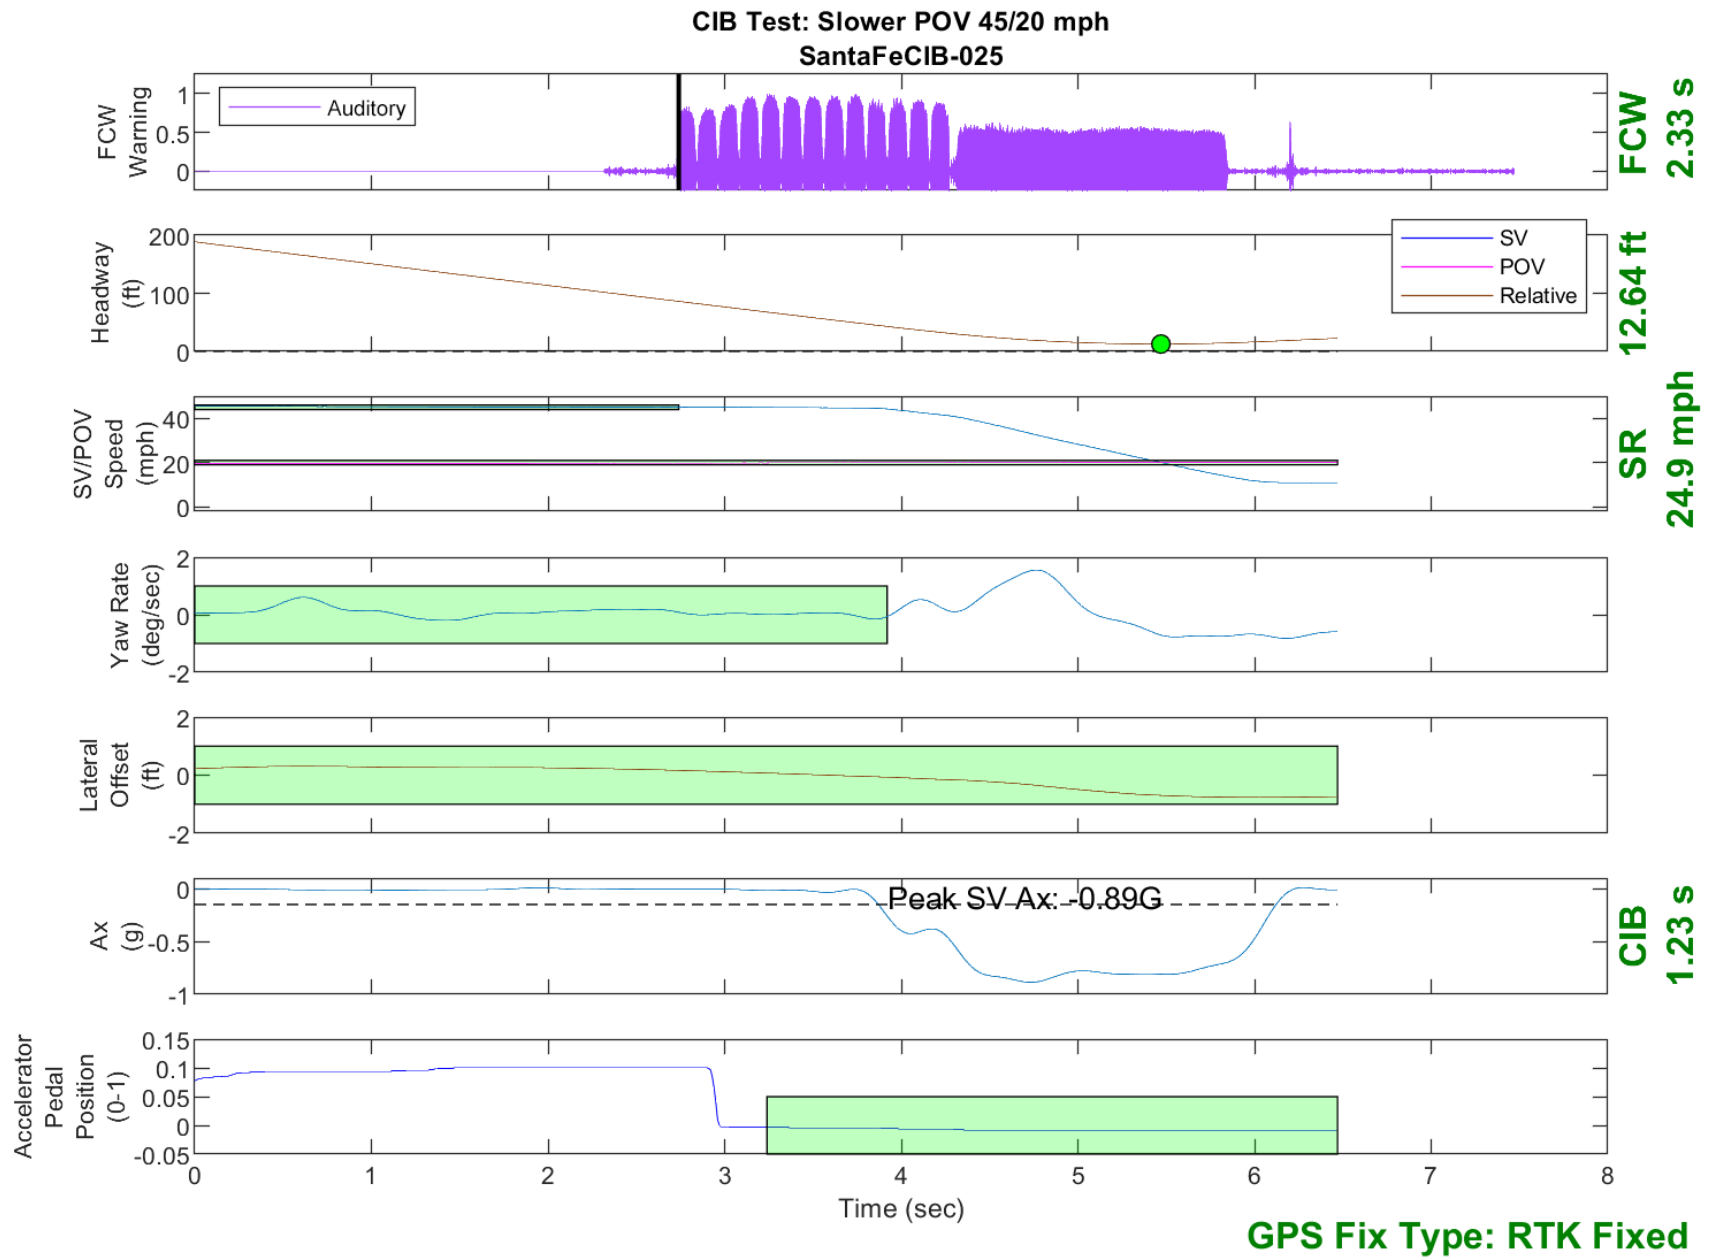


Figure D27. Time History for CIB Run 25, SV Encounters Slower POV, SV 45 mph, POV 20 mph

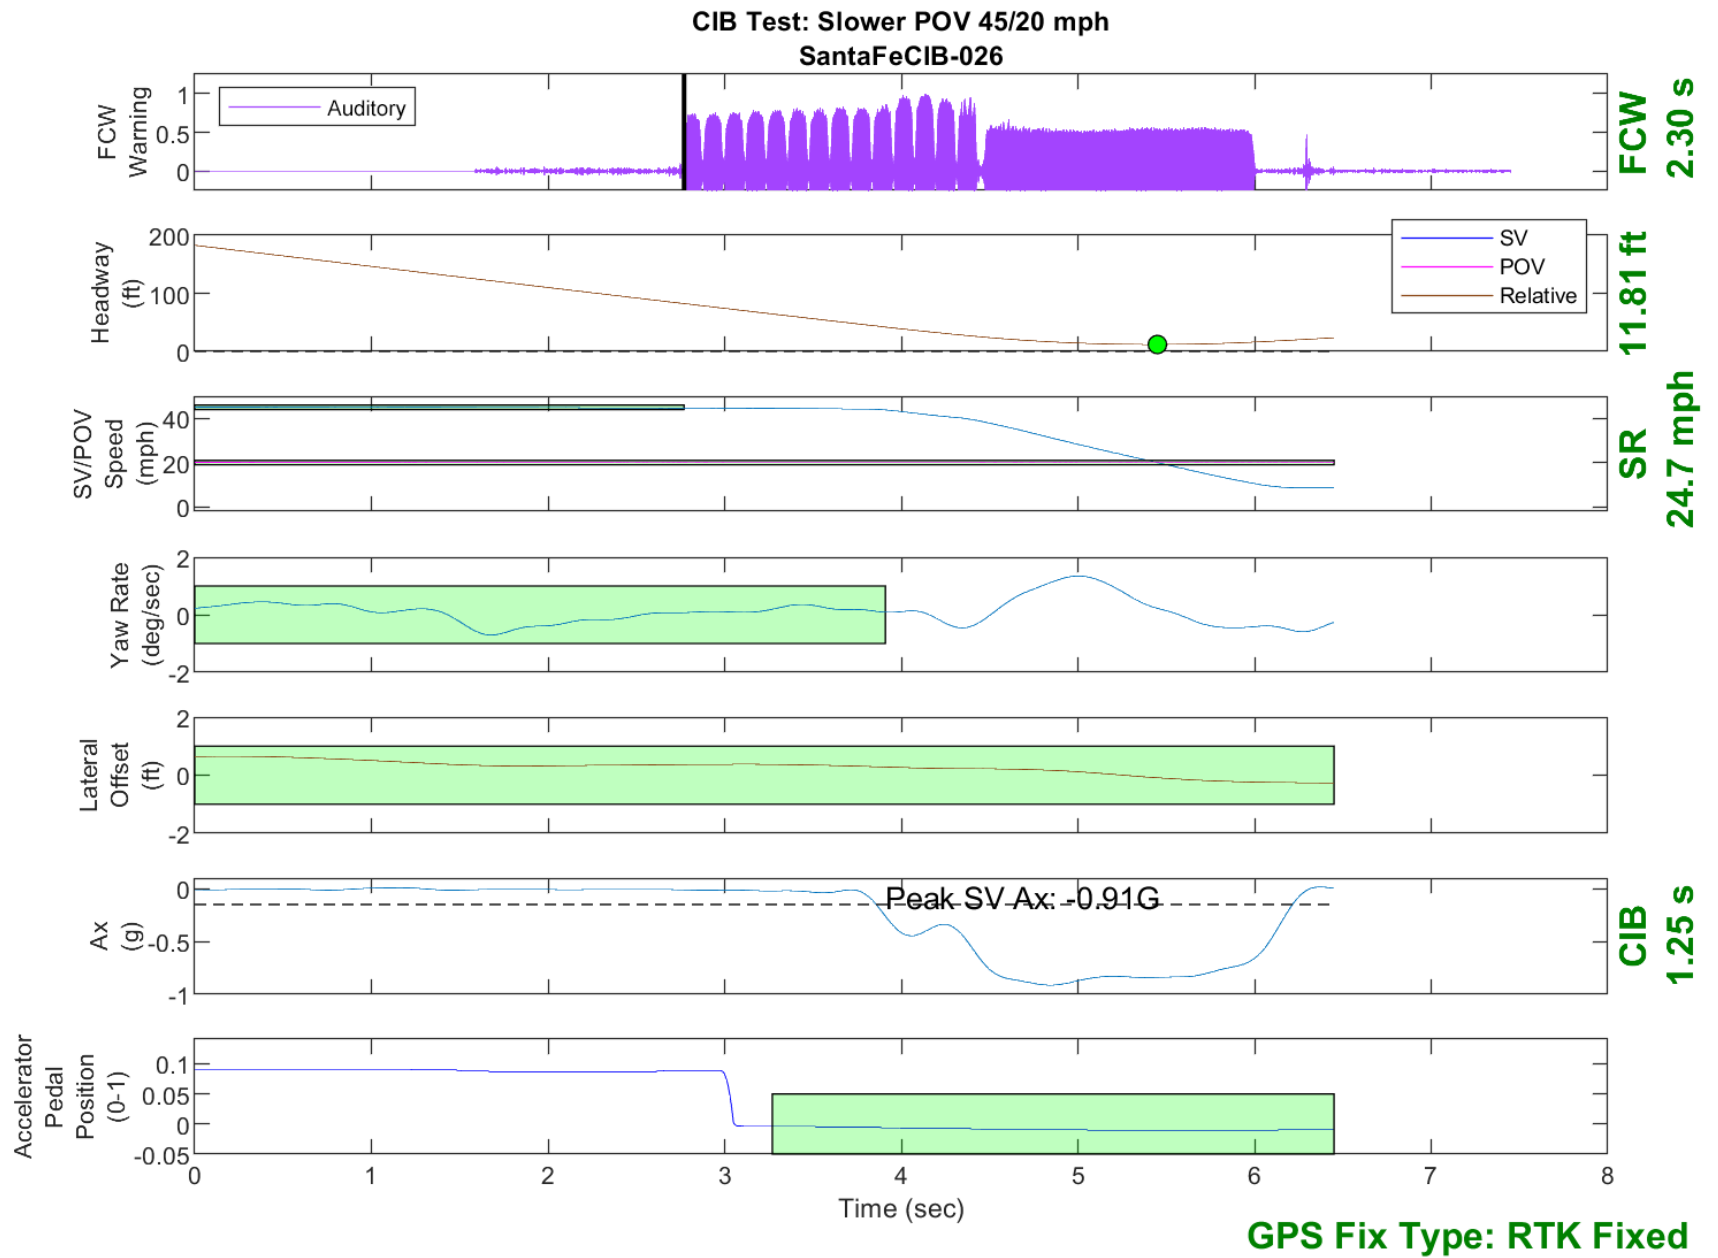


Figure D28. Time History for CIB Run 26, SV Encounters Slower POV, SV 45 mph, POV 20 mph

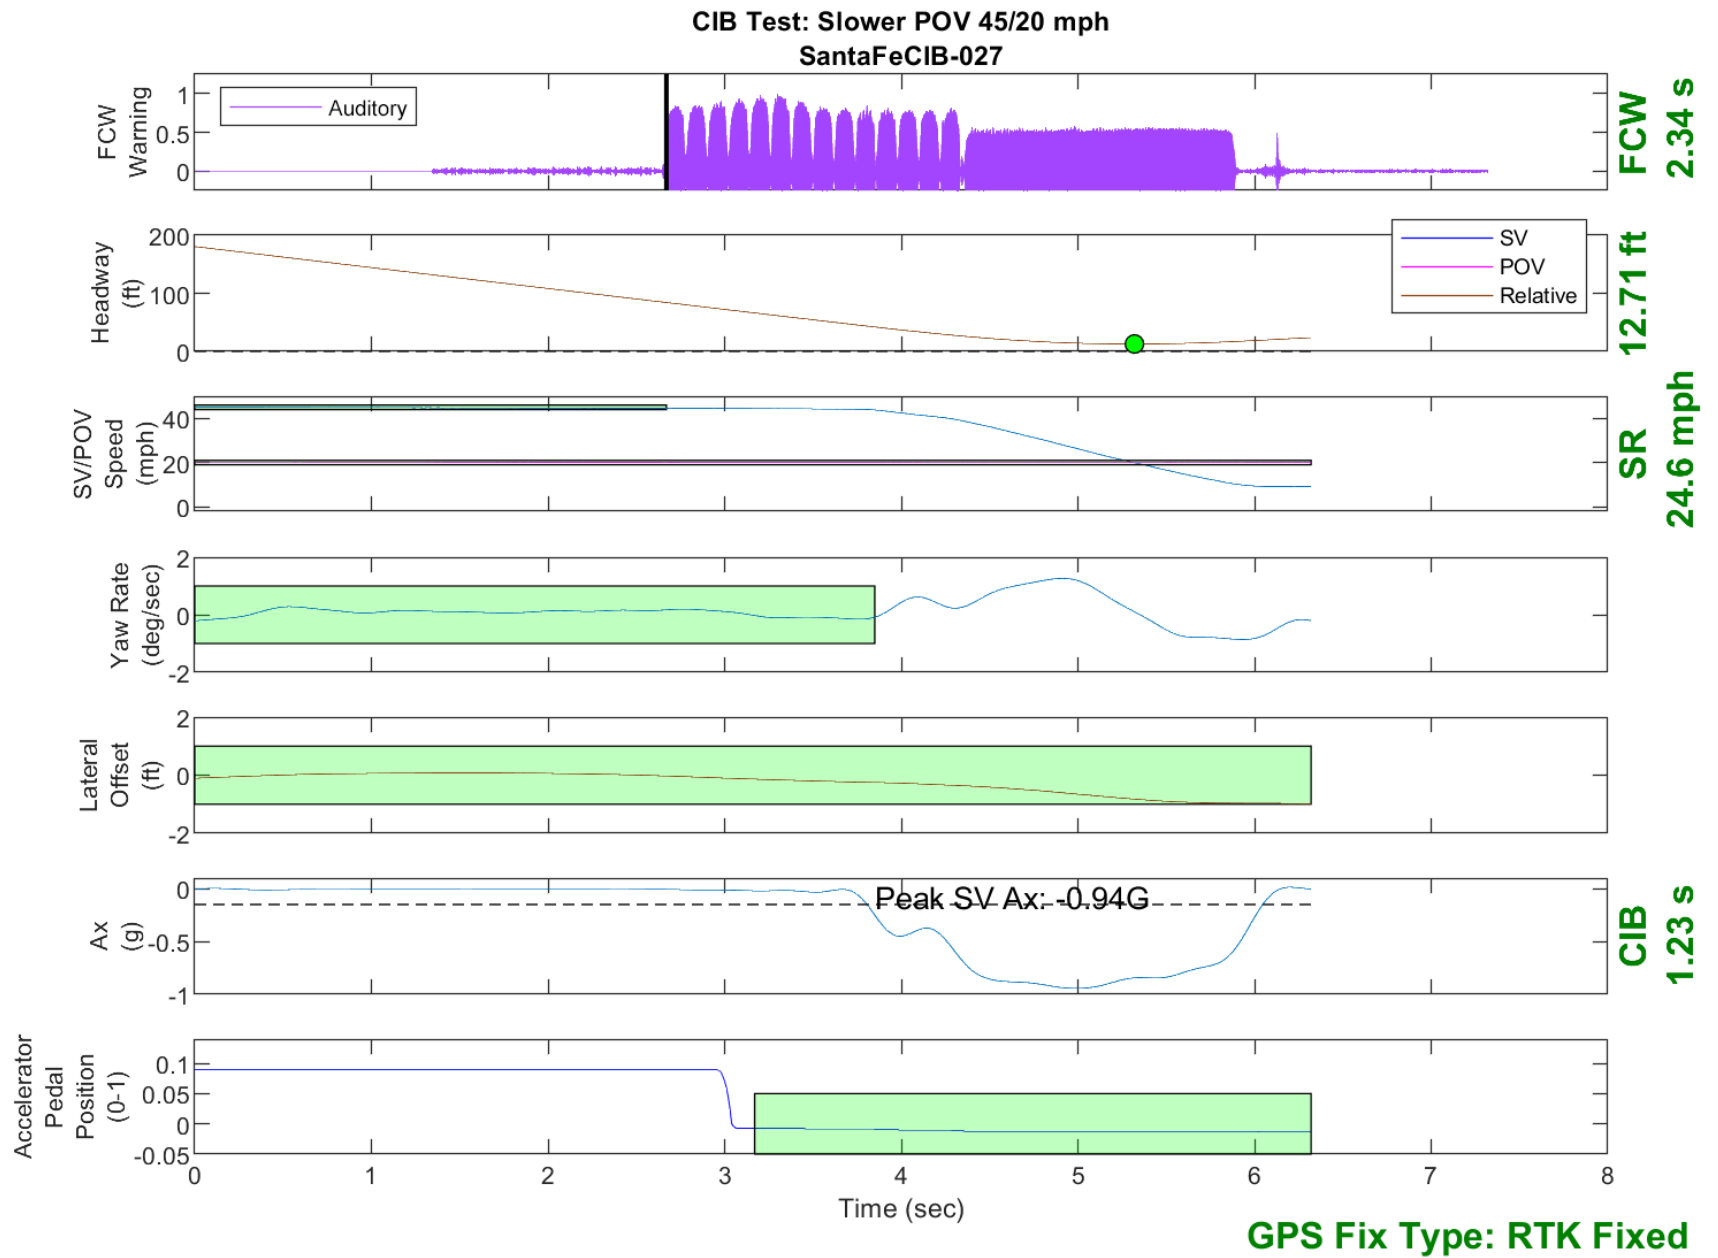


Figure D29. Time History for CIB Run 27, SV Encounters Slower POV, SV 45 mph, POV 20 mph

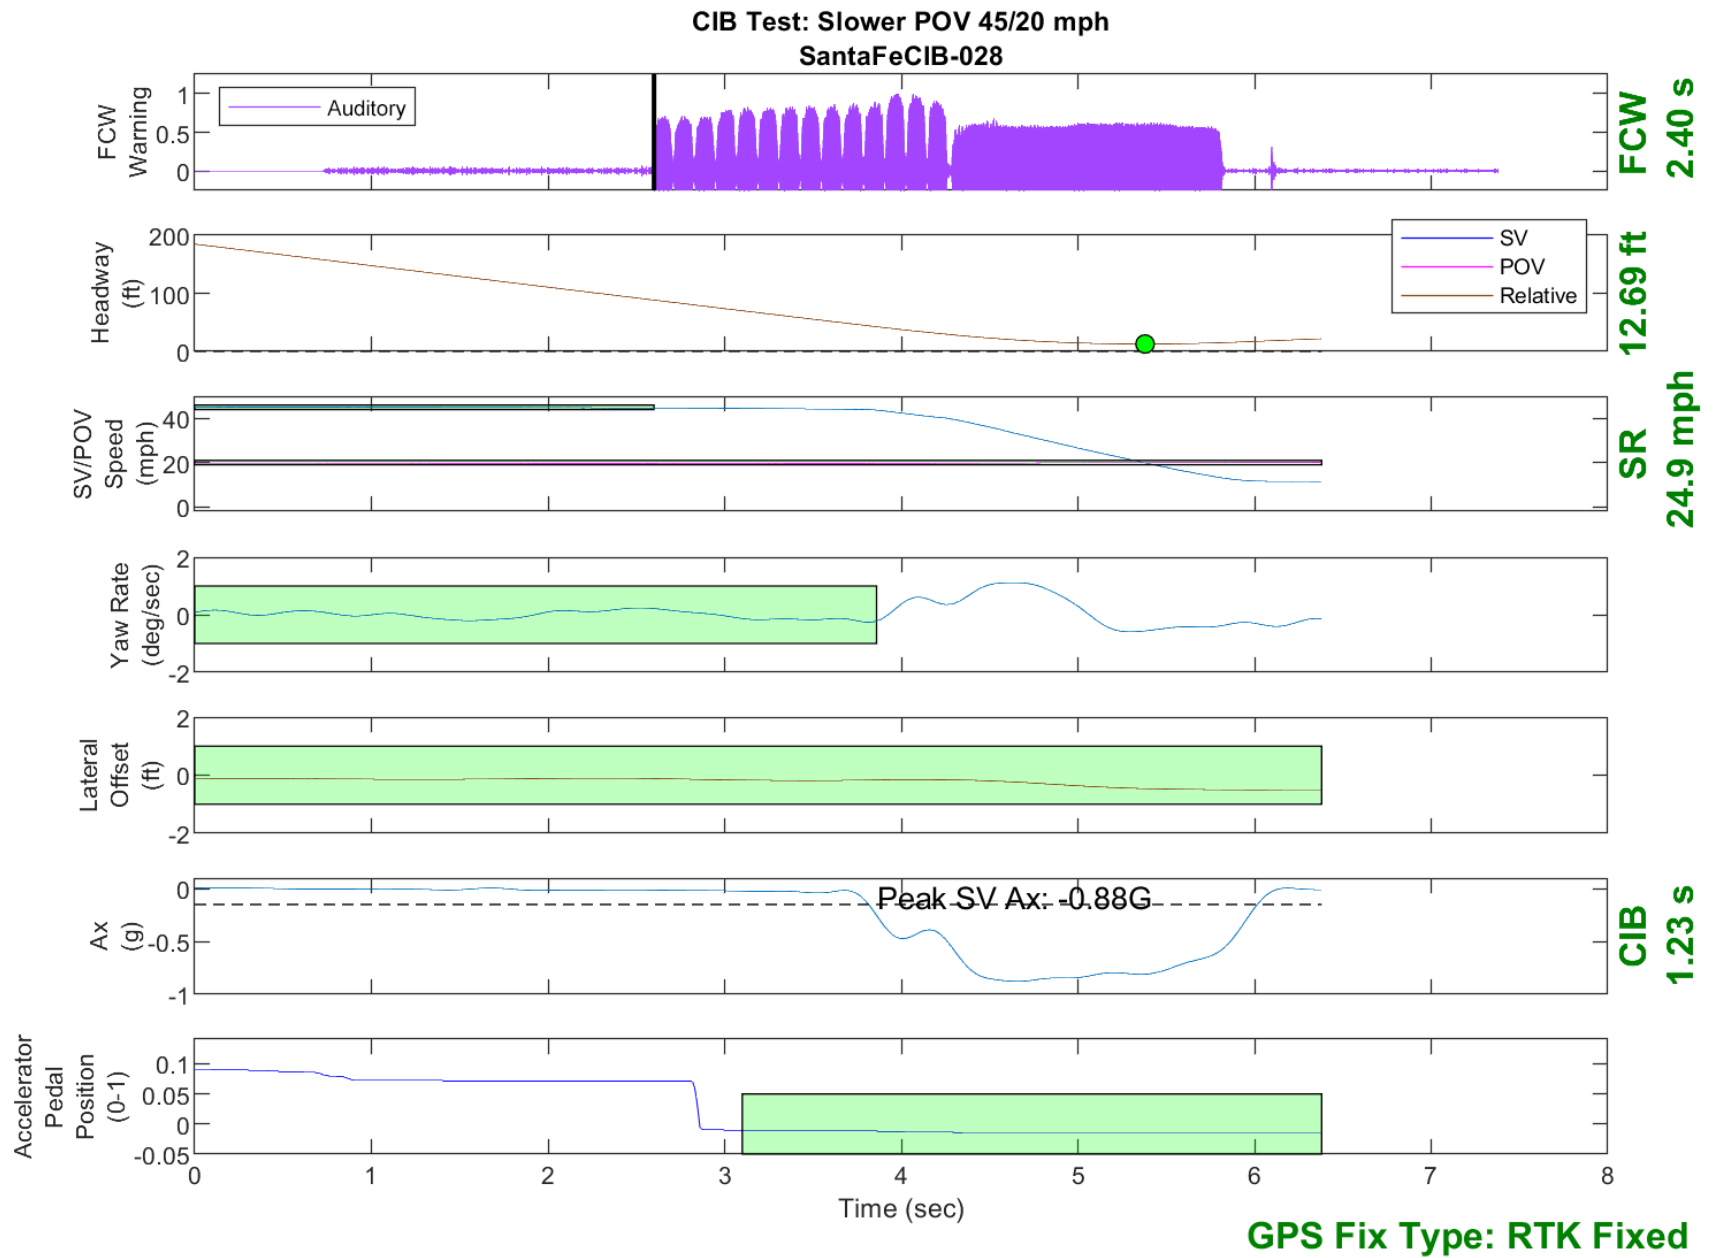


Figure D30. Time History for CIB Run 28, SV Encounters Slower POV, SV 45 mph, POV 20 mph



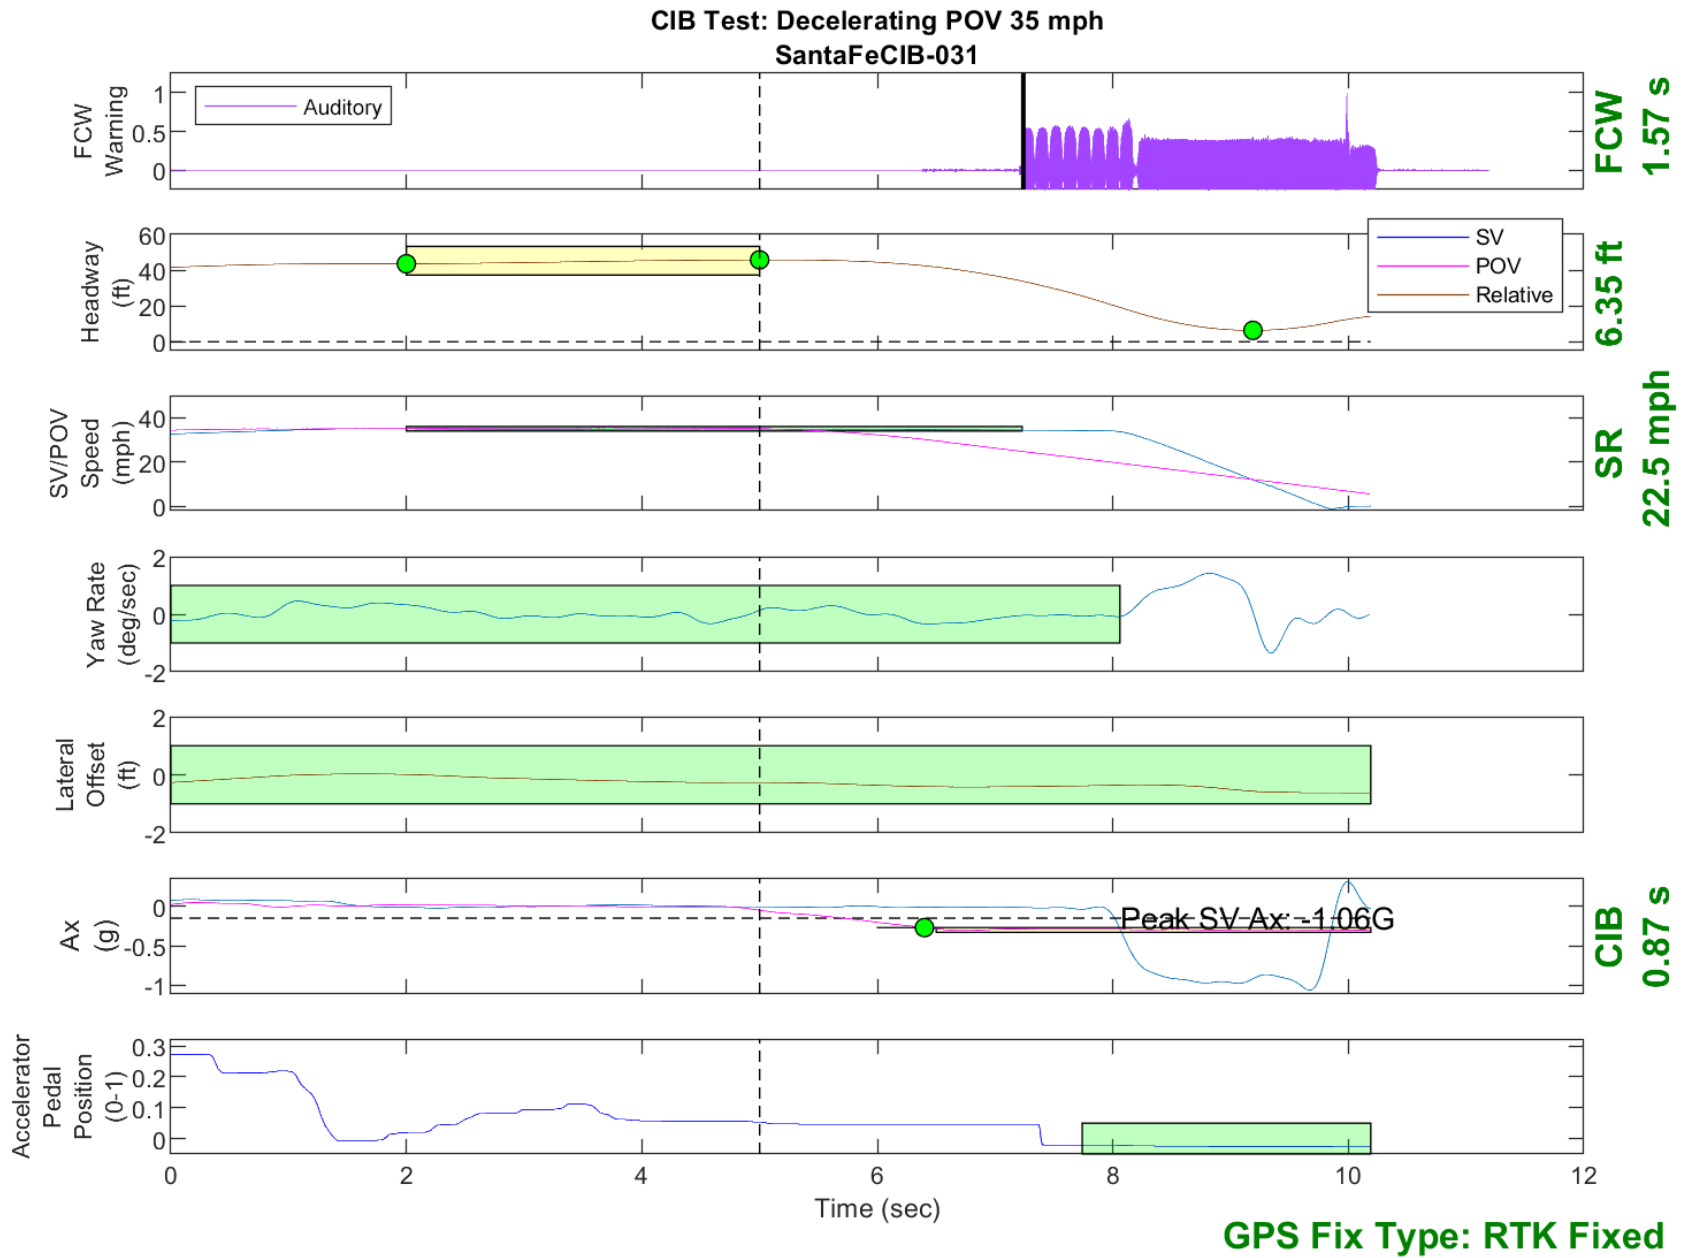


Figure D31. Time History for CIB Run 31, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

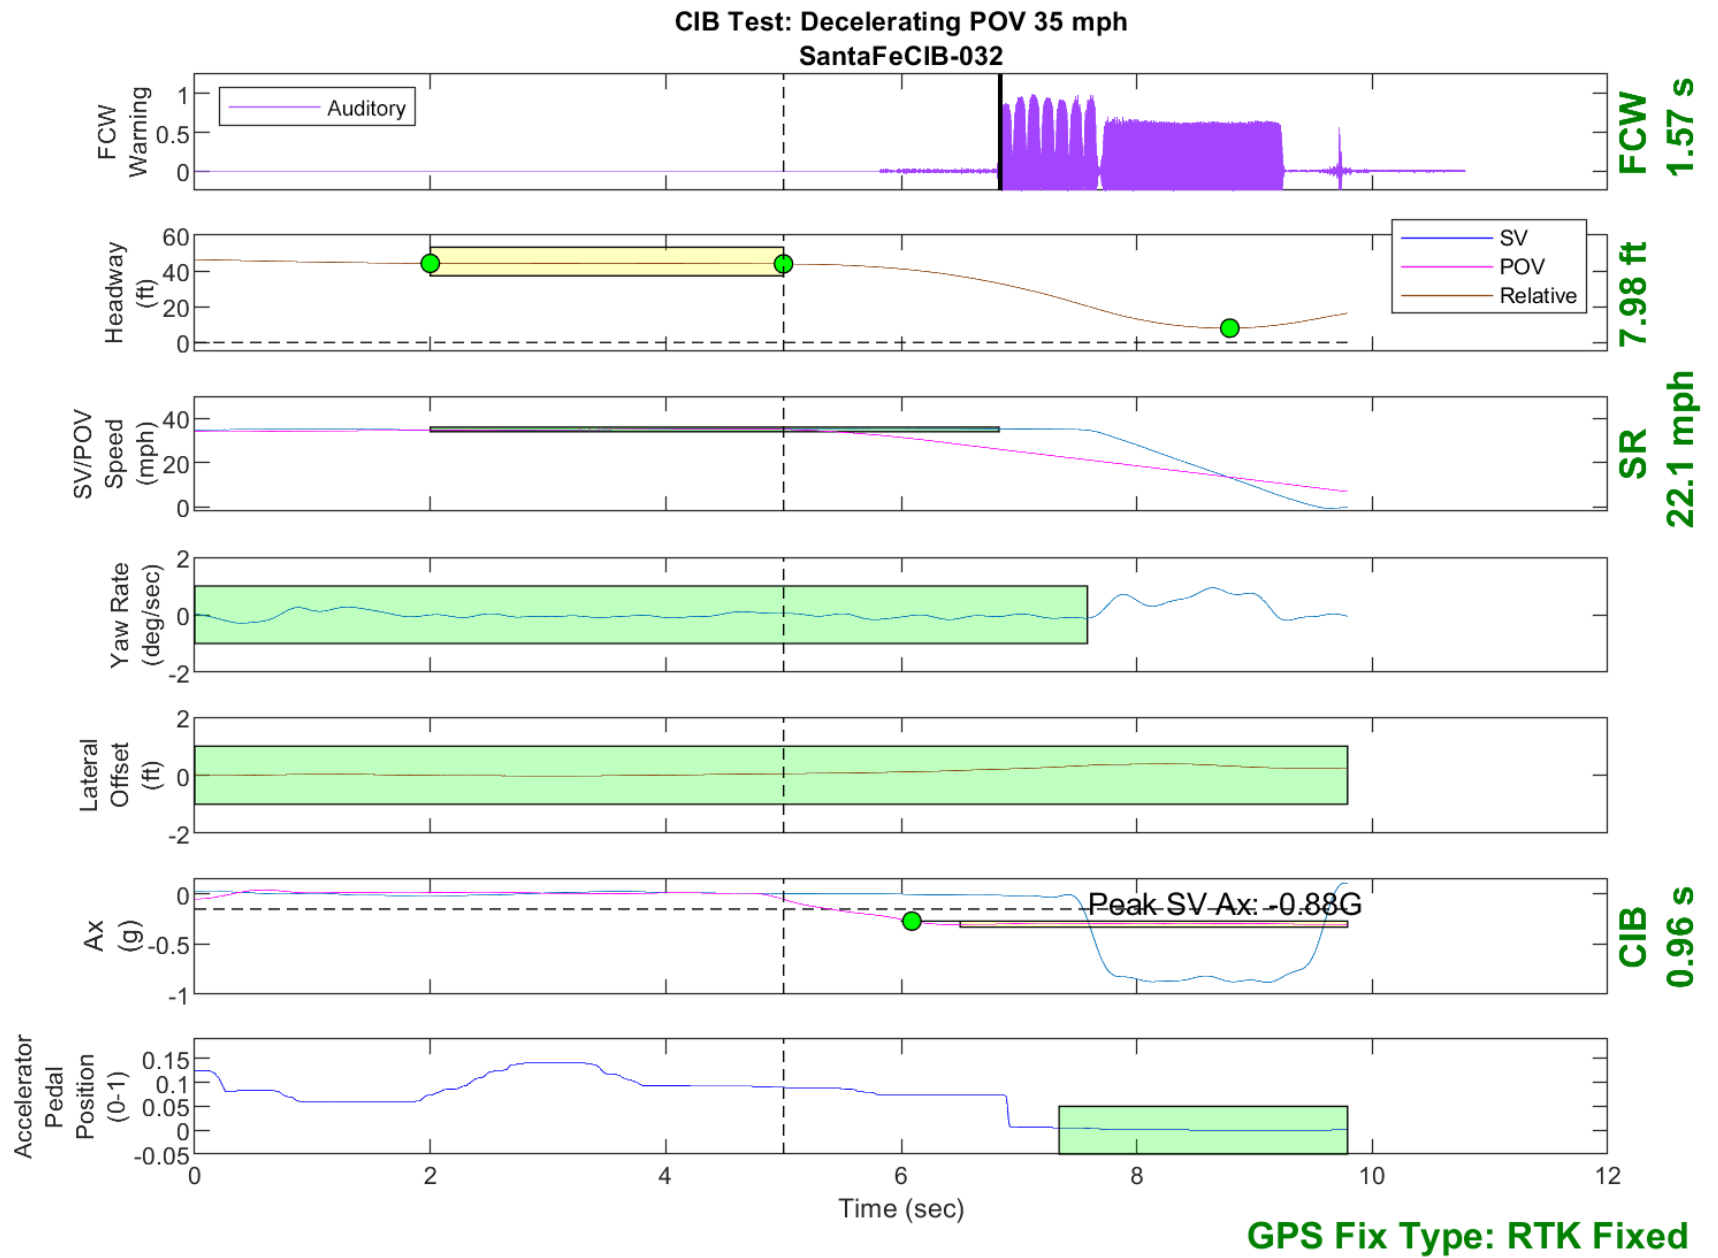


Figure D32. Time History for CIB Run 32, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

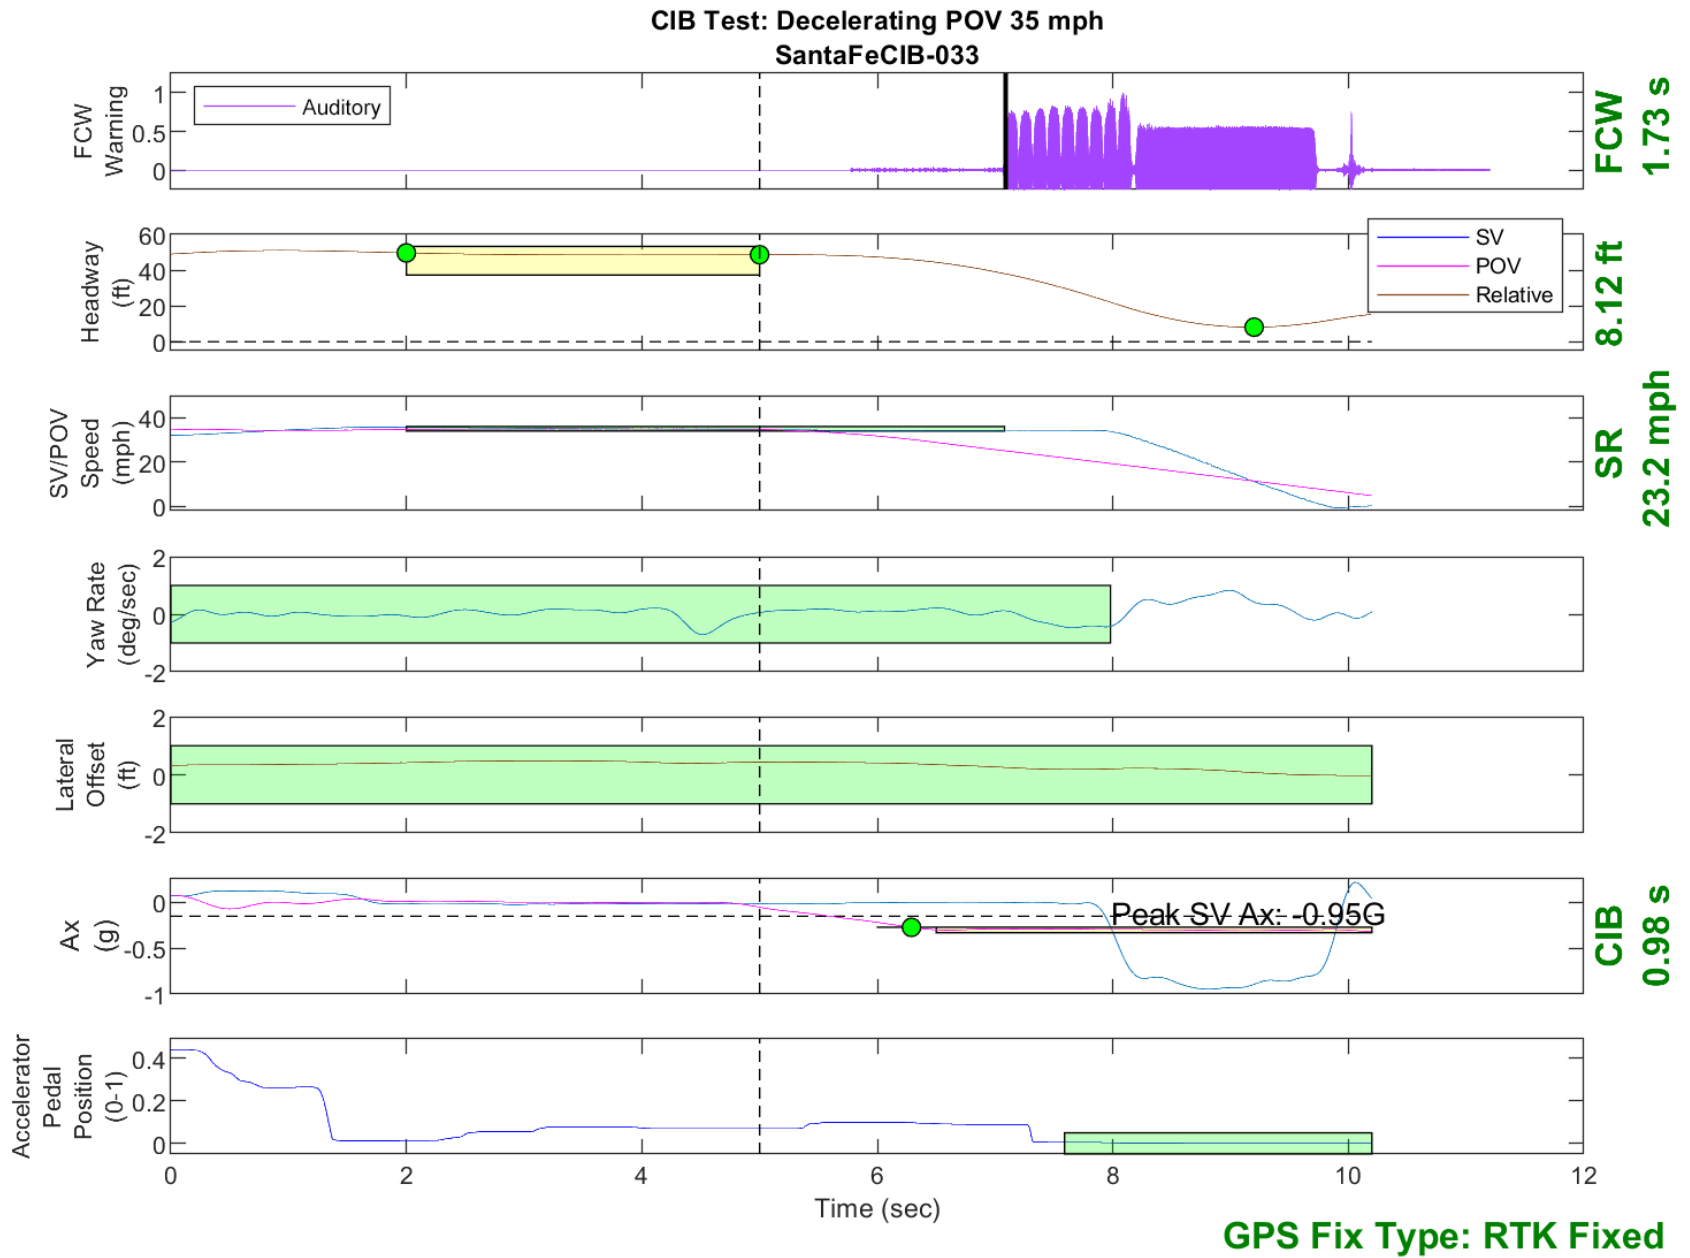


Figure D33. Time History for CIB Run 33, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

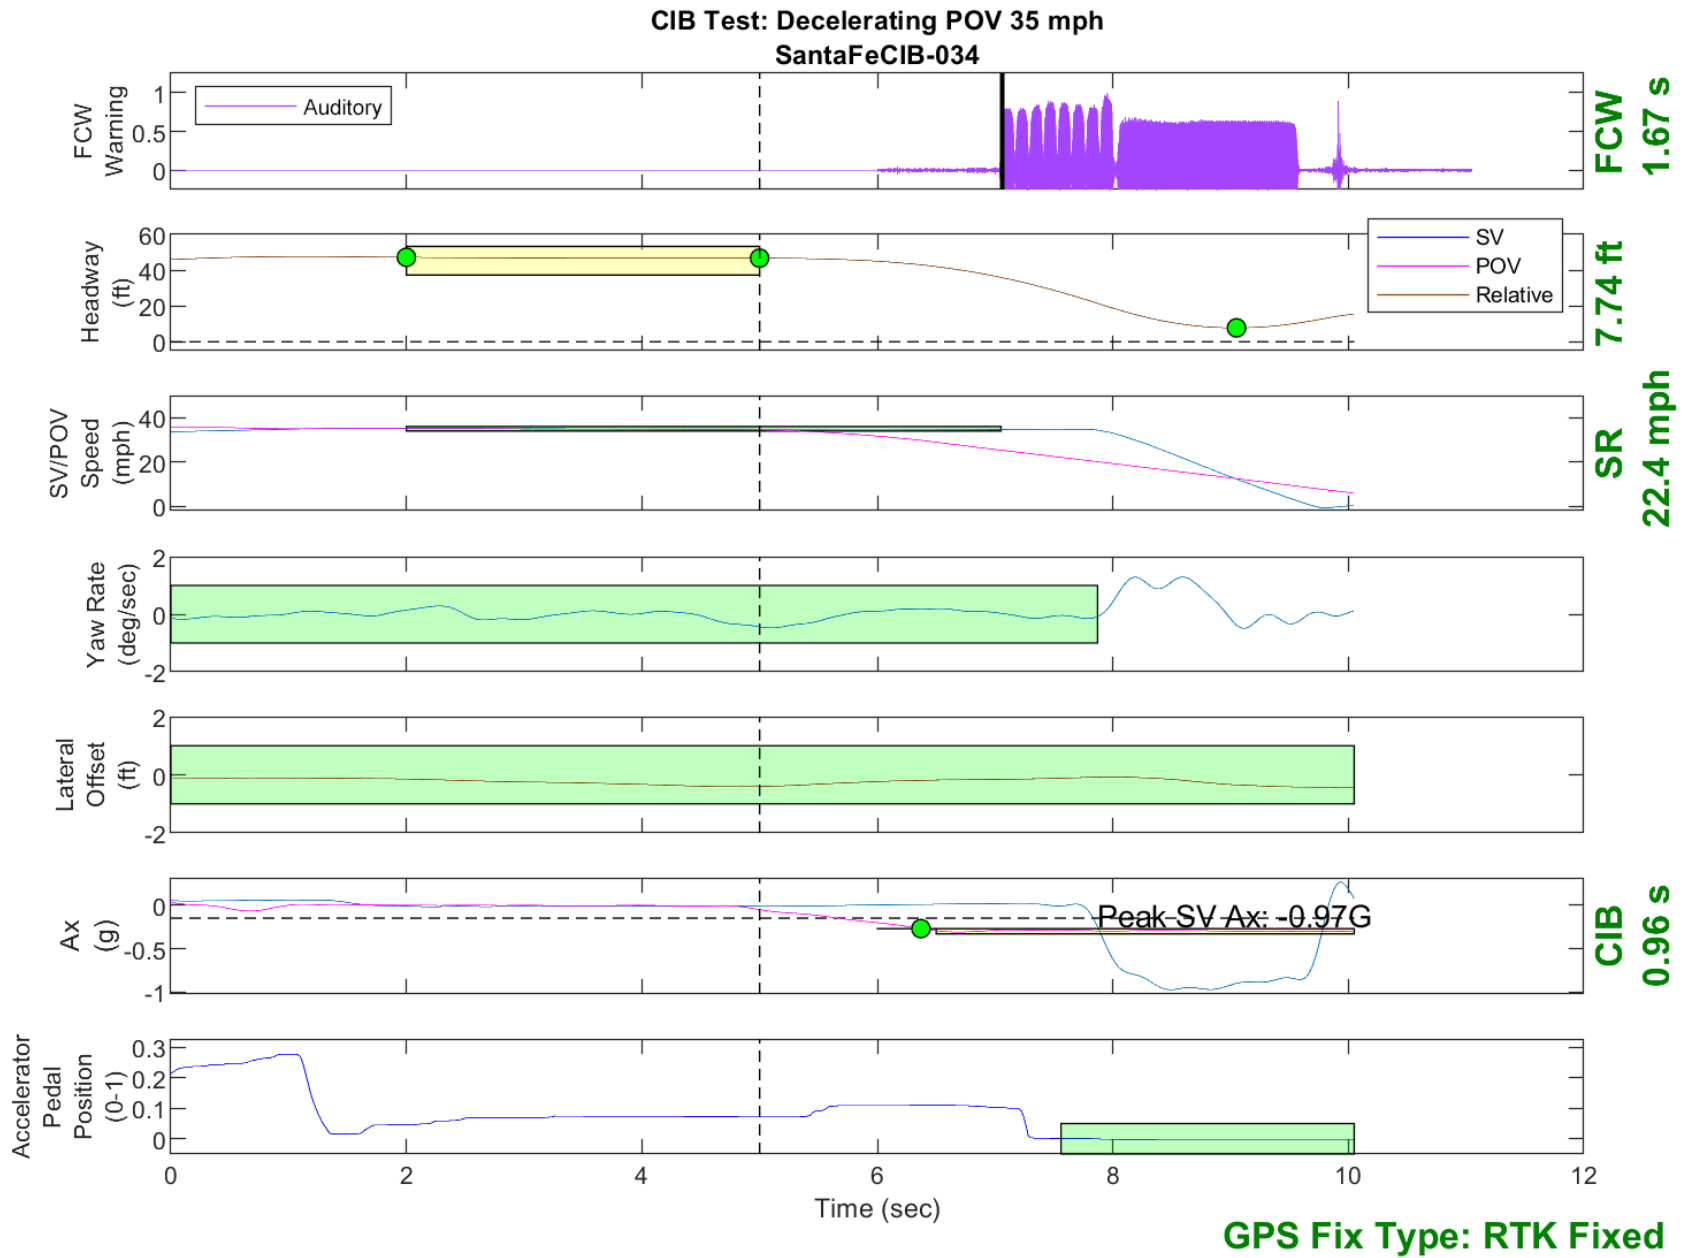


Figure D34. Time History for CIB Run 34, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

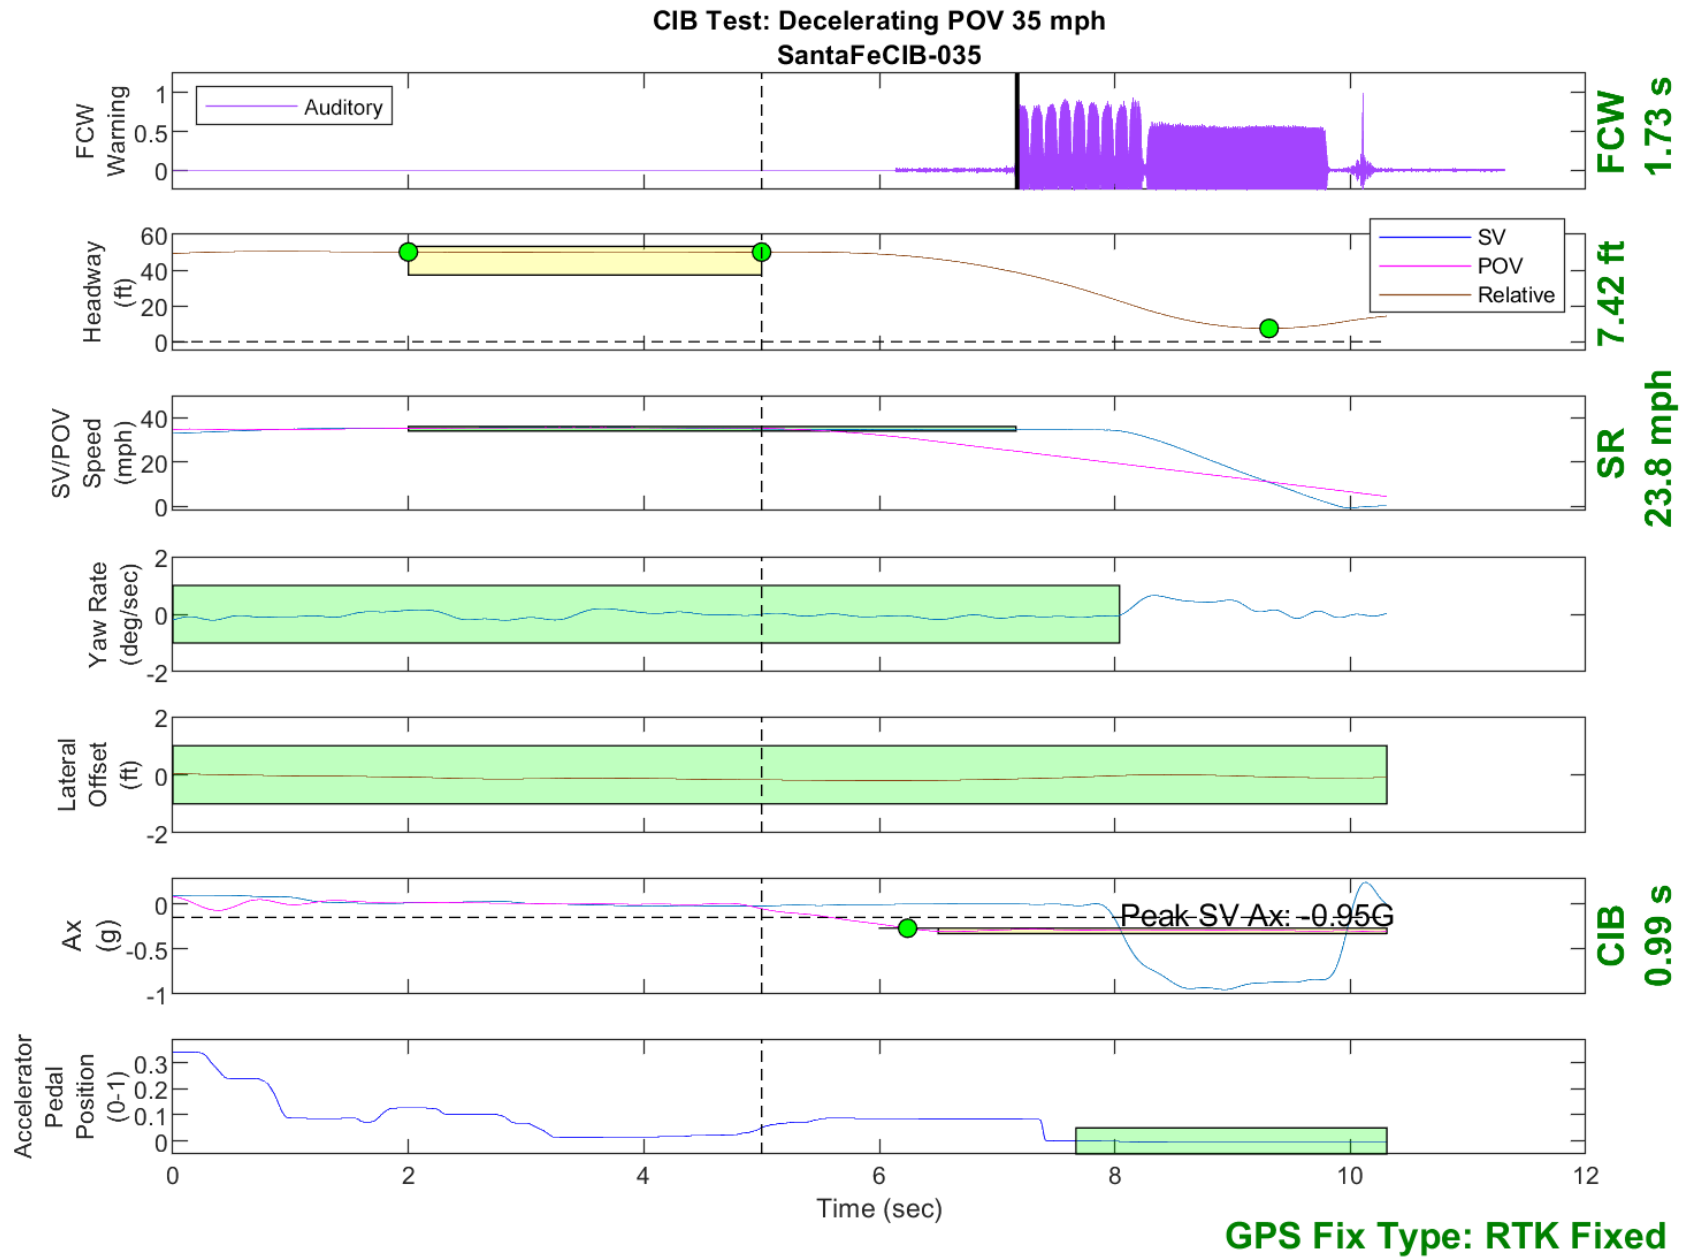


Figure D35. Time History for CIB Run 35, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

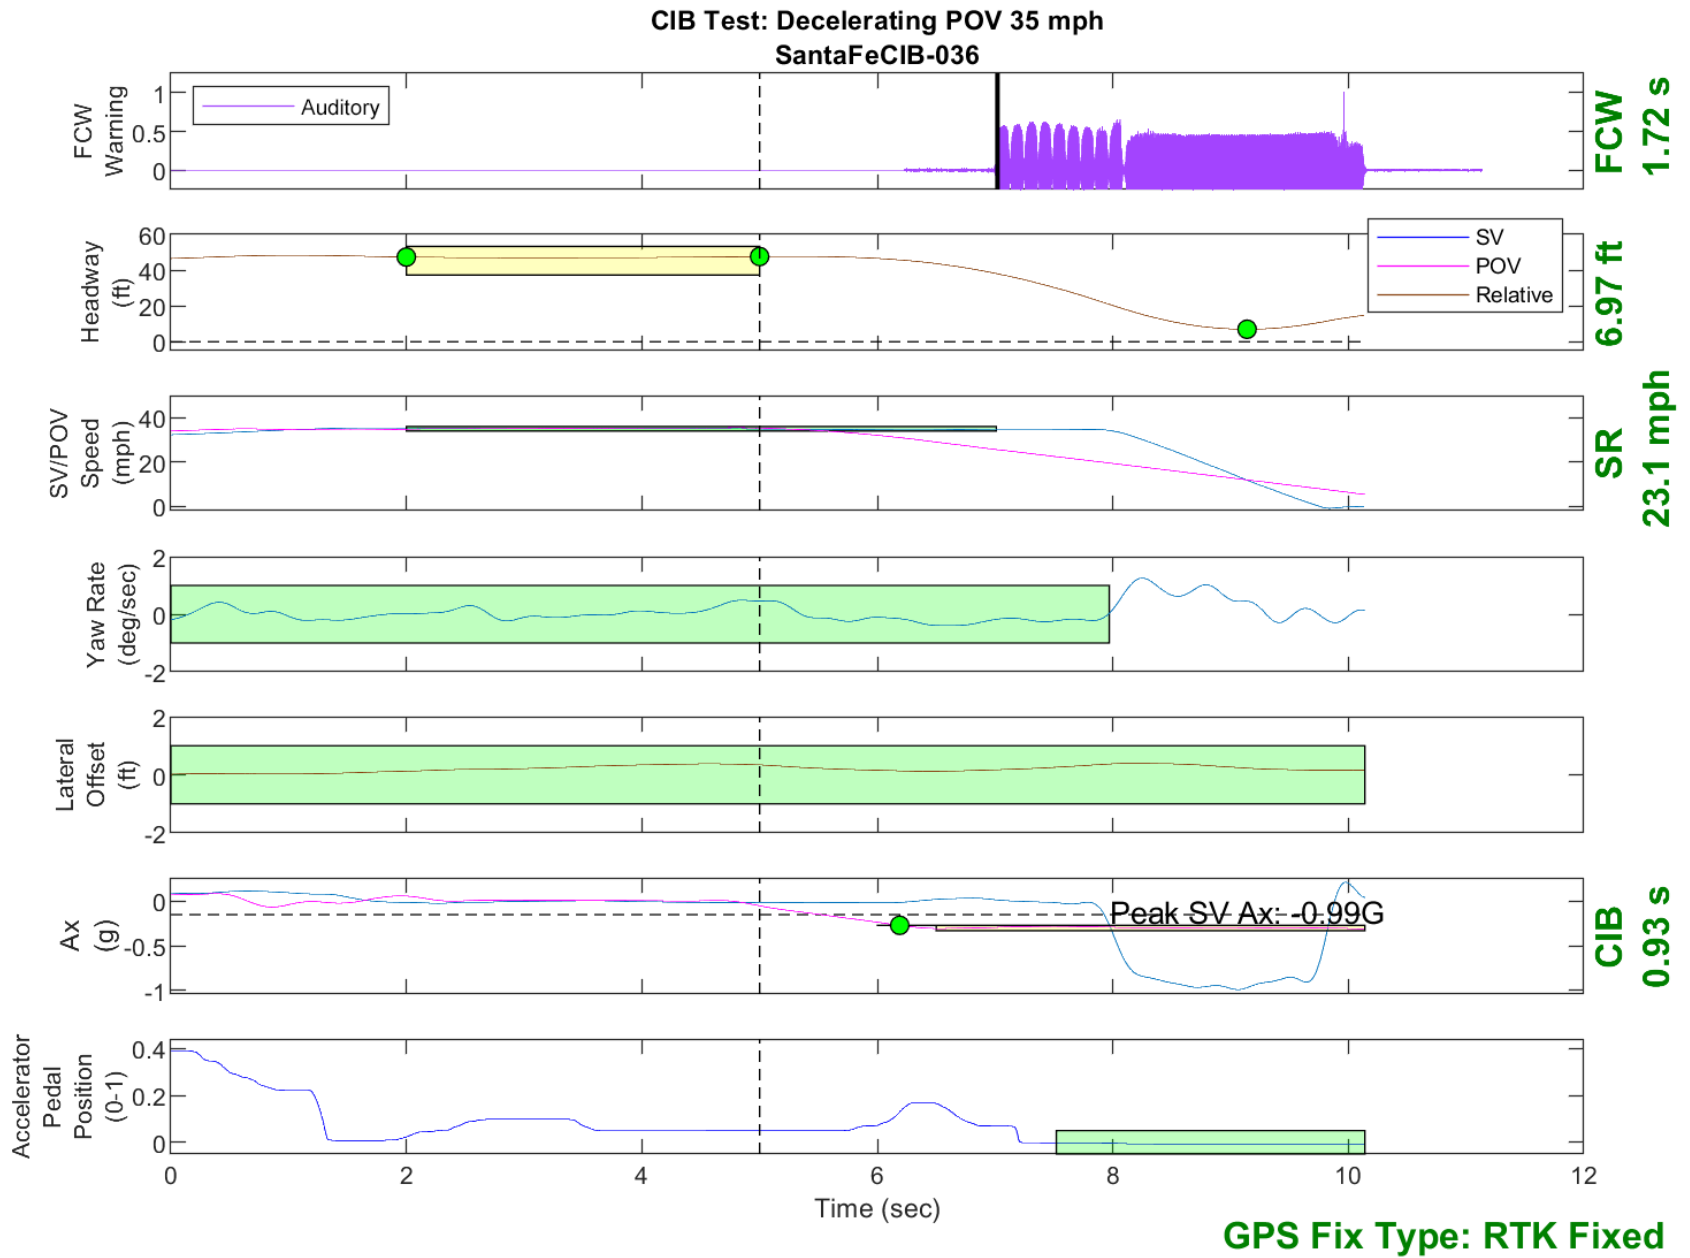


Figure D36. Time History for CIB Run 36, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

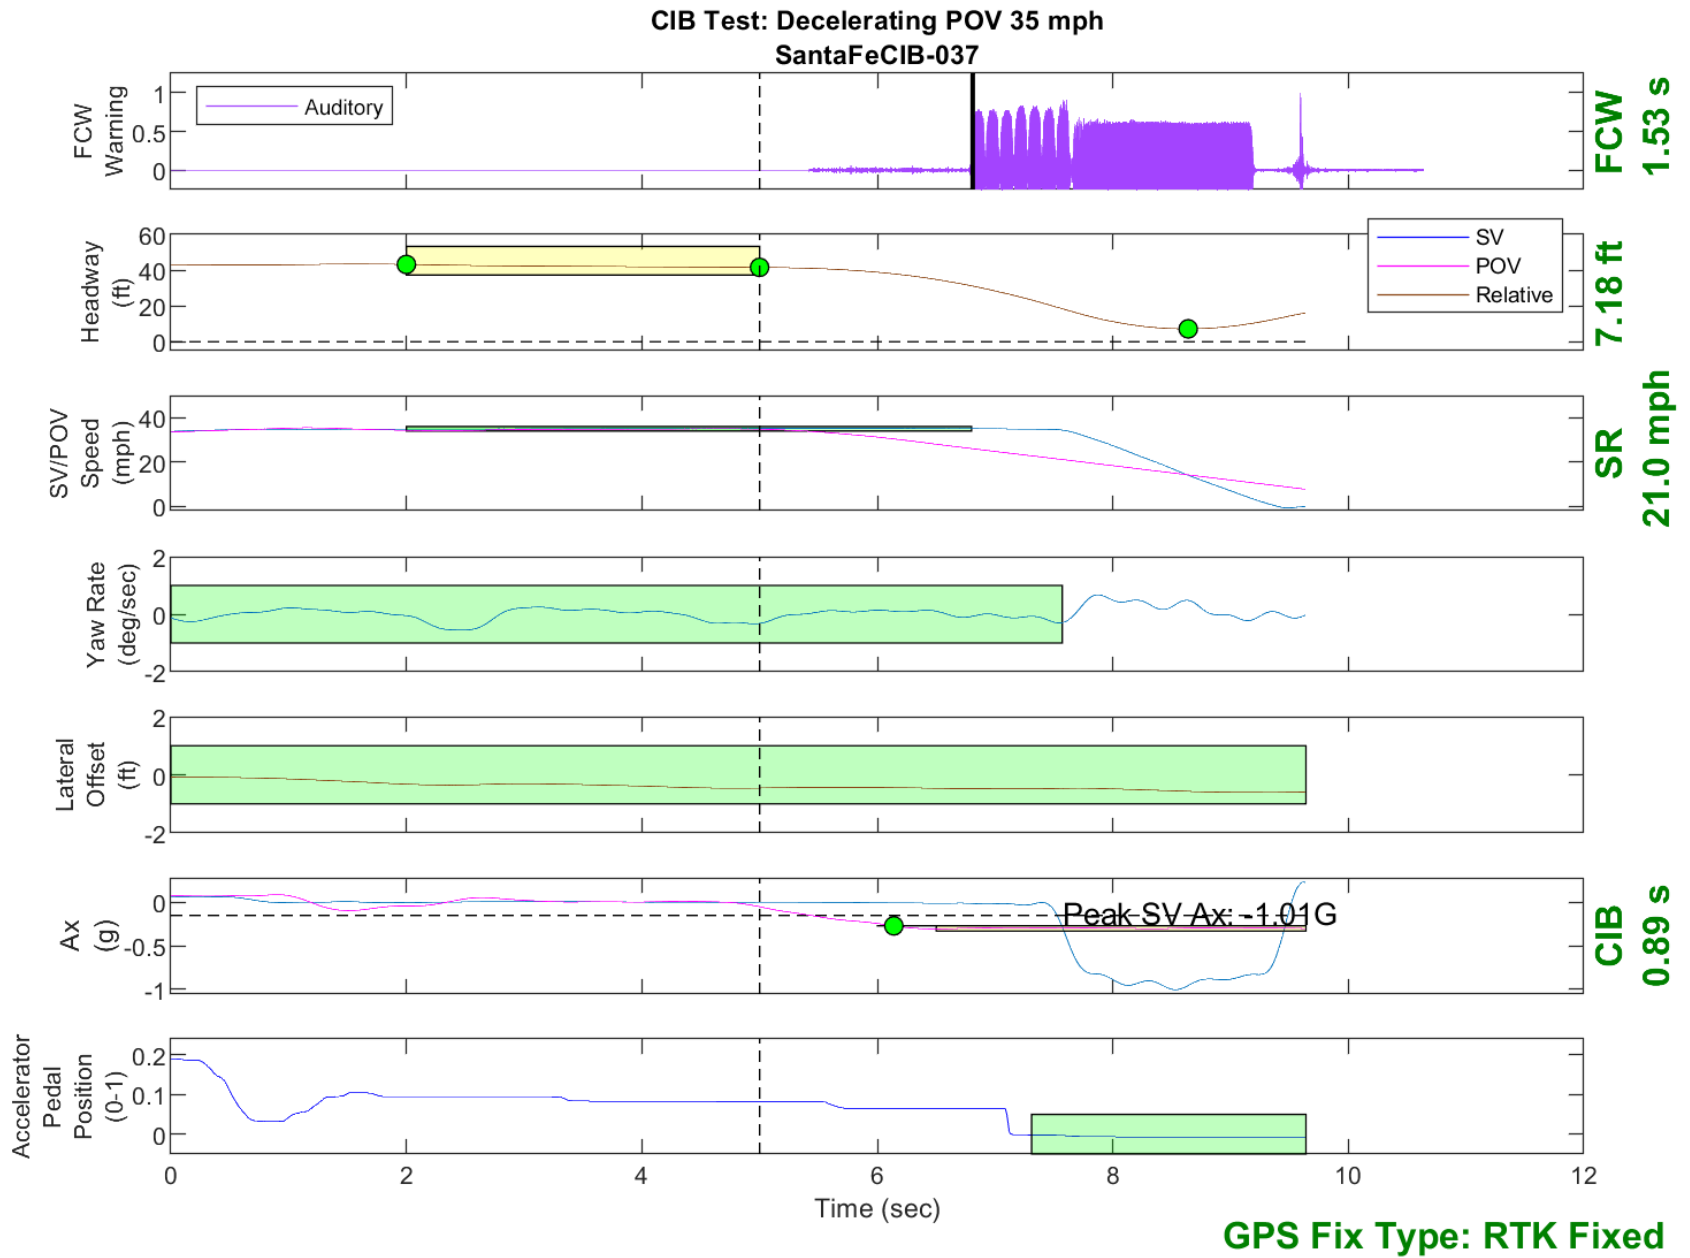


Figure D37. Time History for CIB Run 37, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

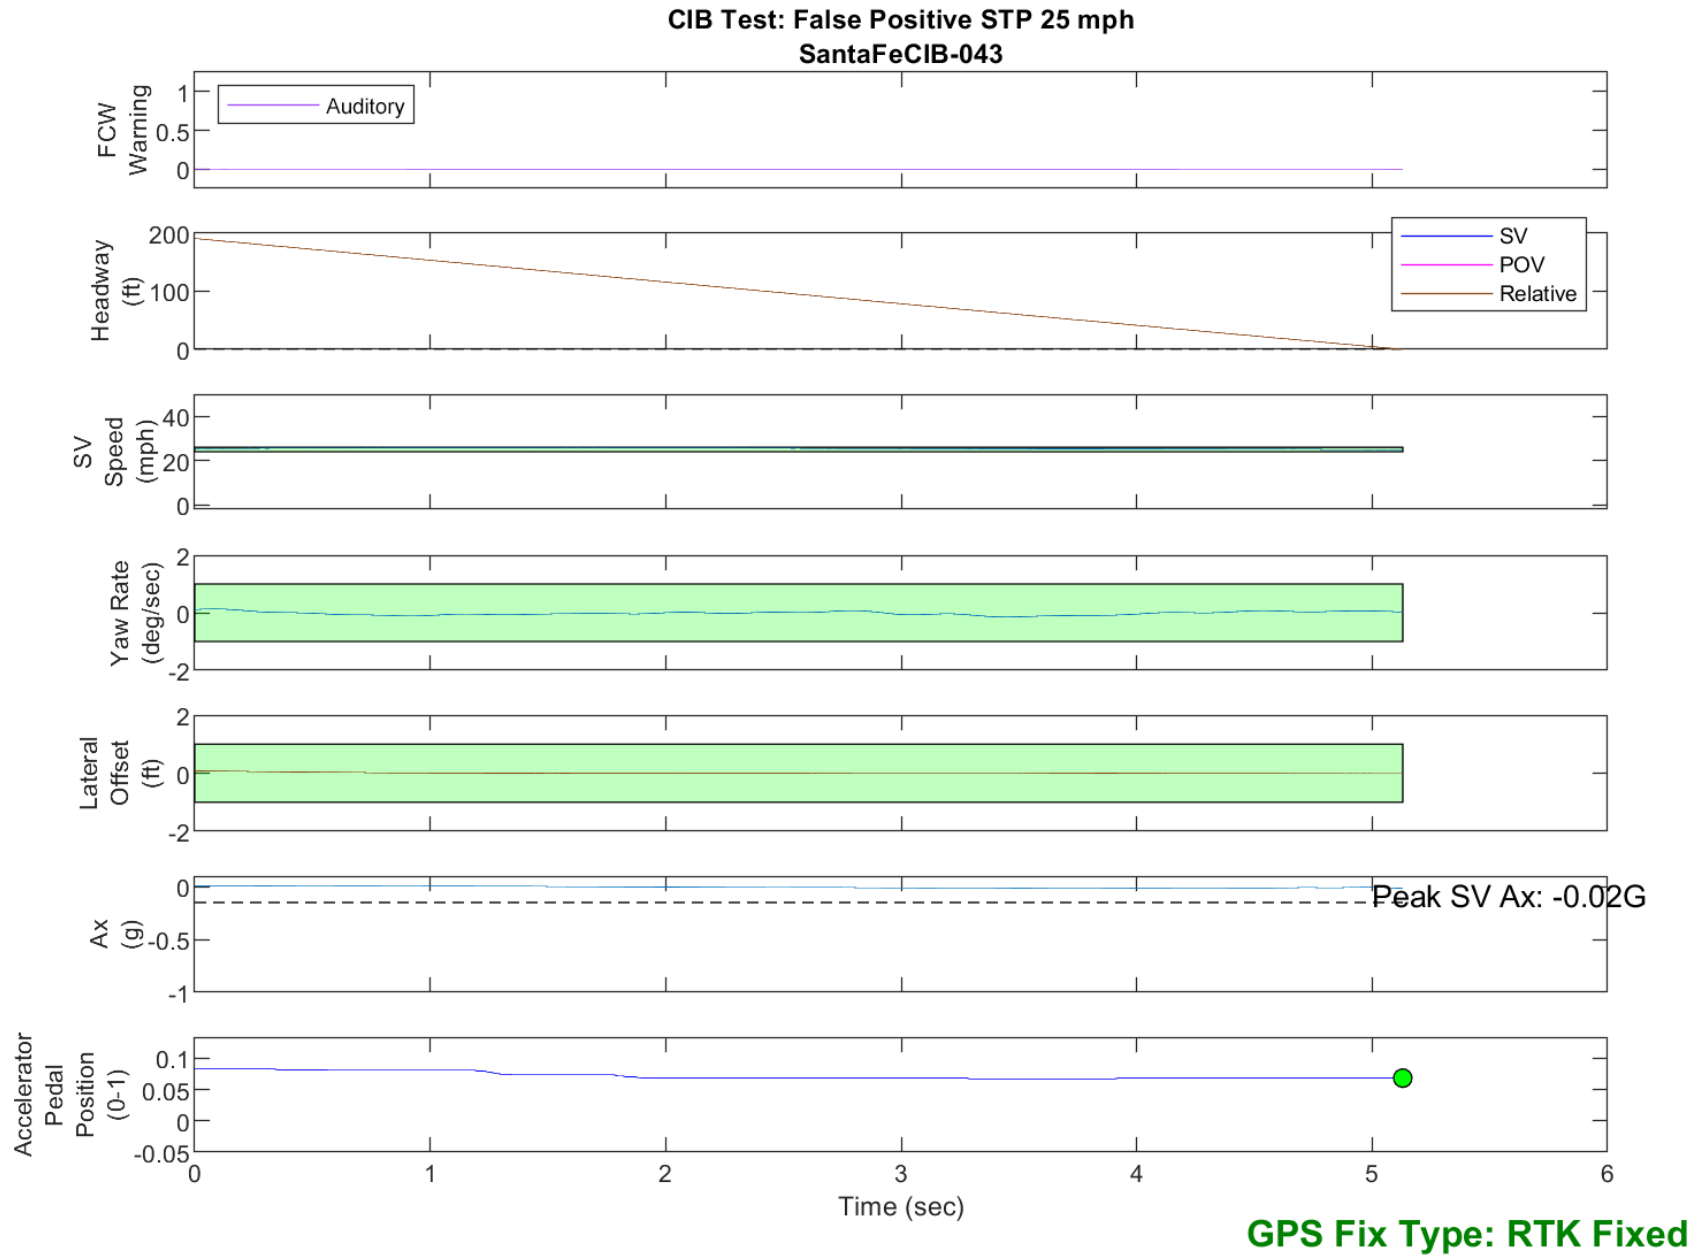


Figure D38. Time History for CIB Run 43, SV Encounters Steel Trench Plate, SV 25 mph



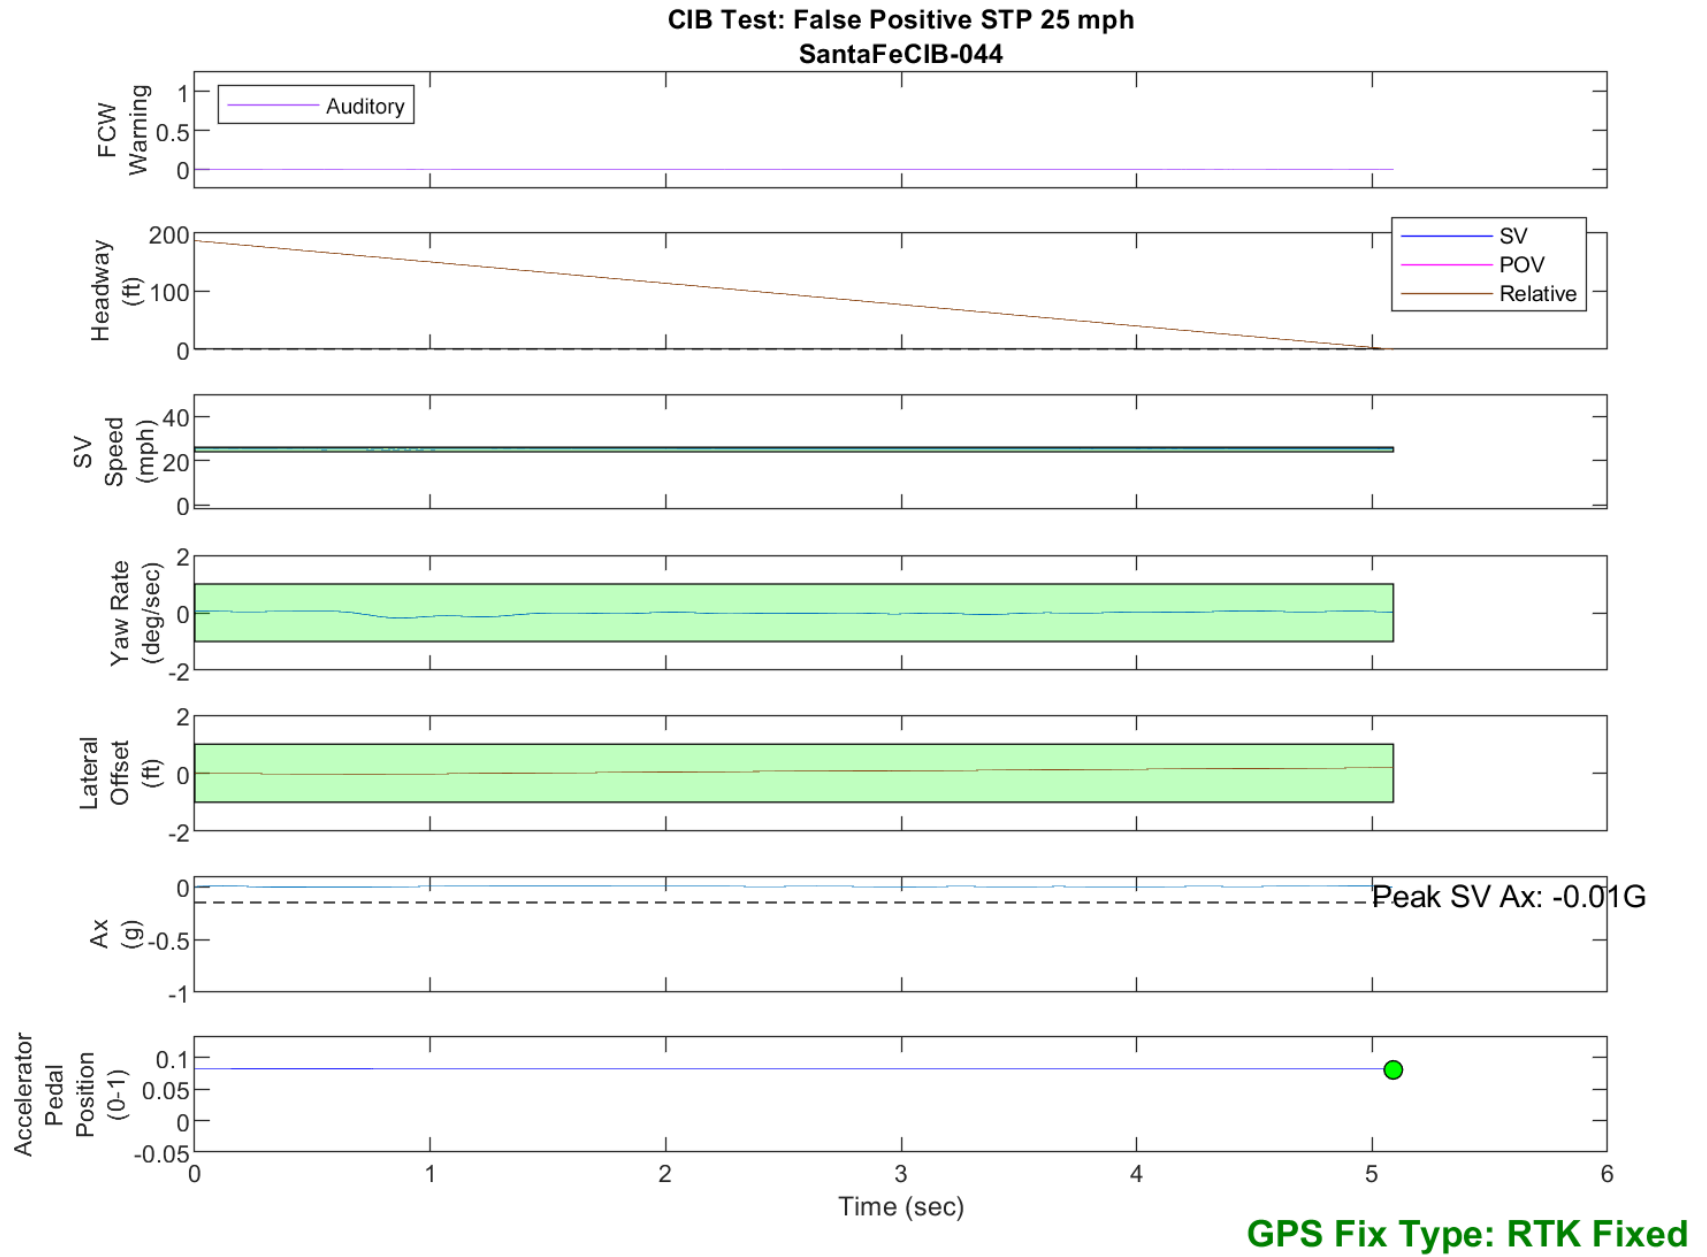


Figure D39. Time History for CIB Run 44, SV Encounters Steel Trench Plate, SV 25 mph

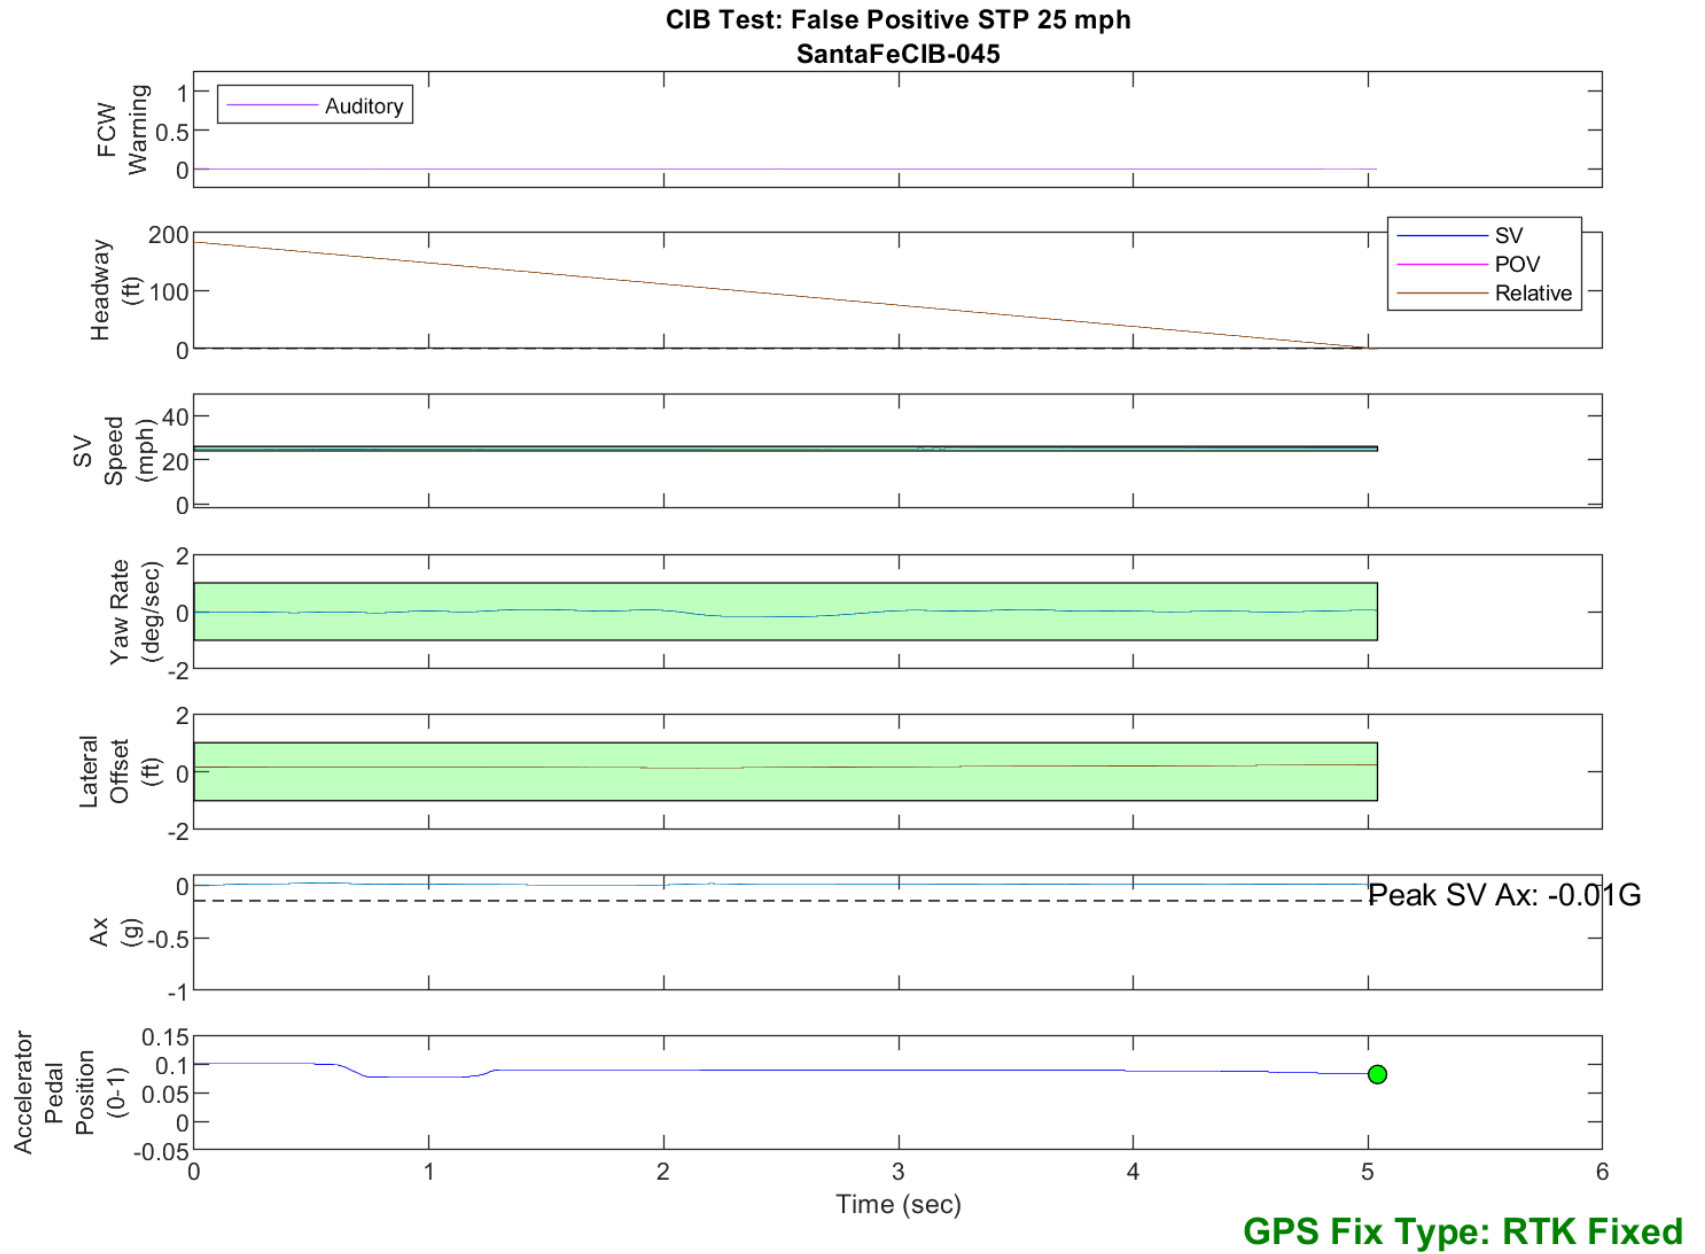


Figure D40. Time History for CIB Run 45, SV Encounters Steel Trench Plate, SV 25 mph

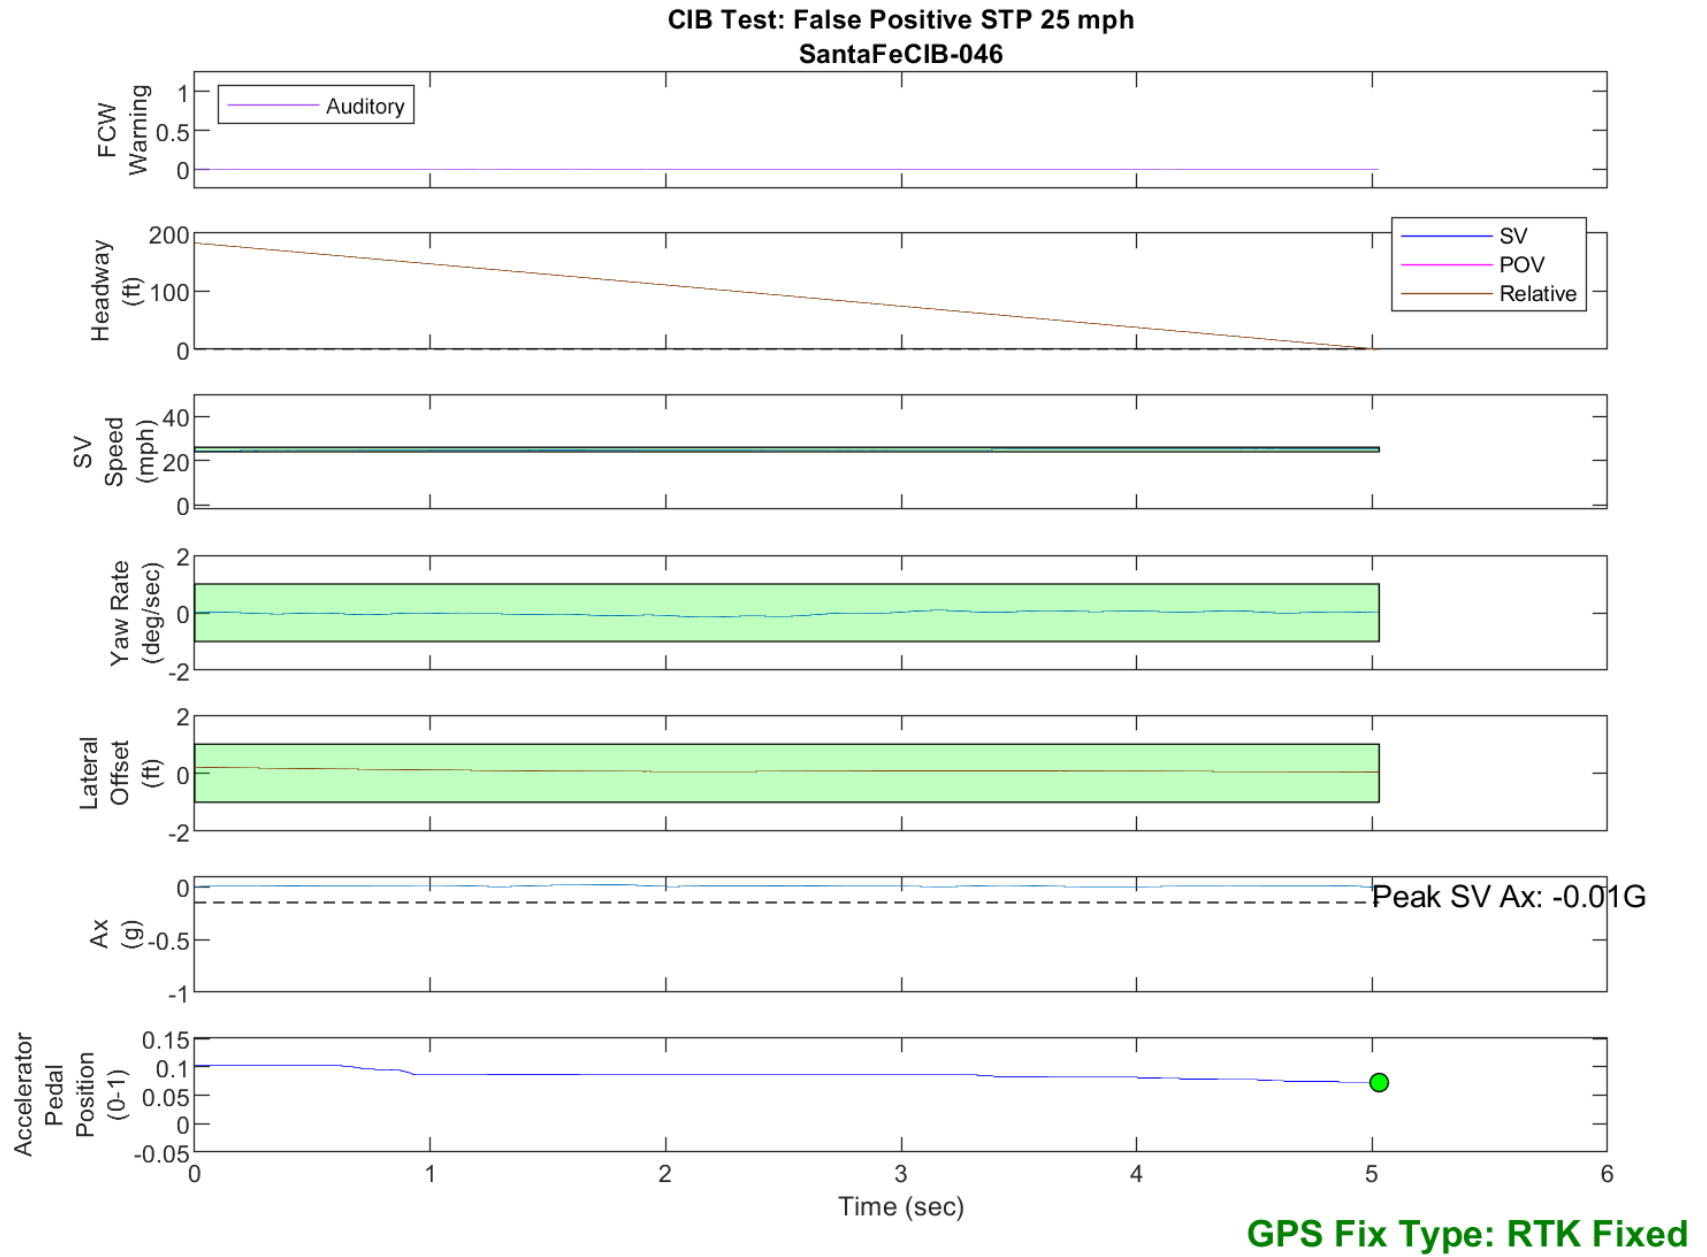


Figure D41. Time History for CIB Run 46, SV Encounters Steel Trench Plate, SV 25 mph

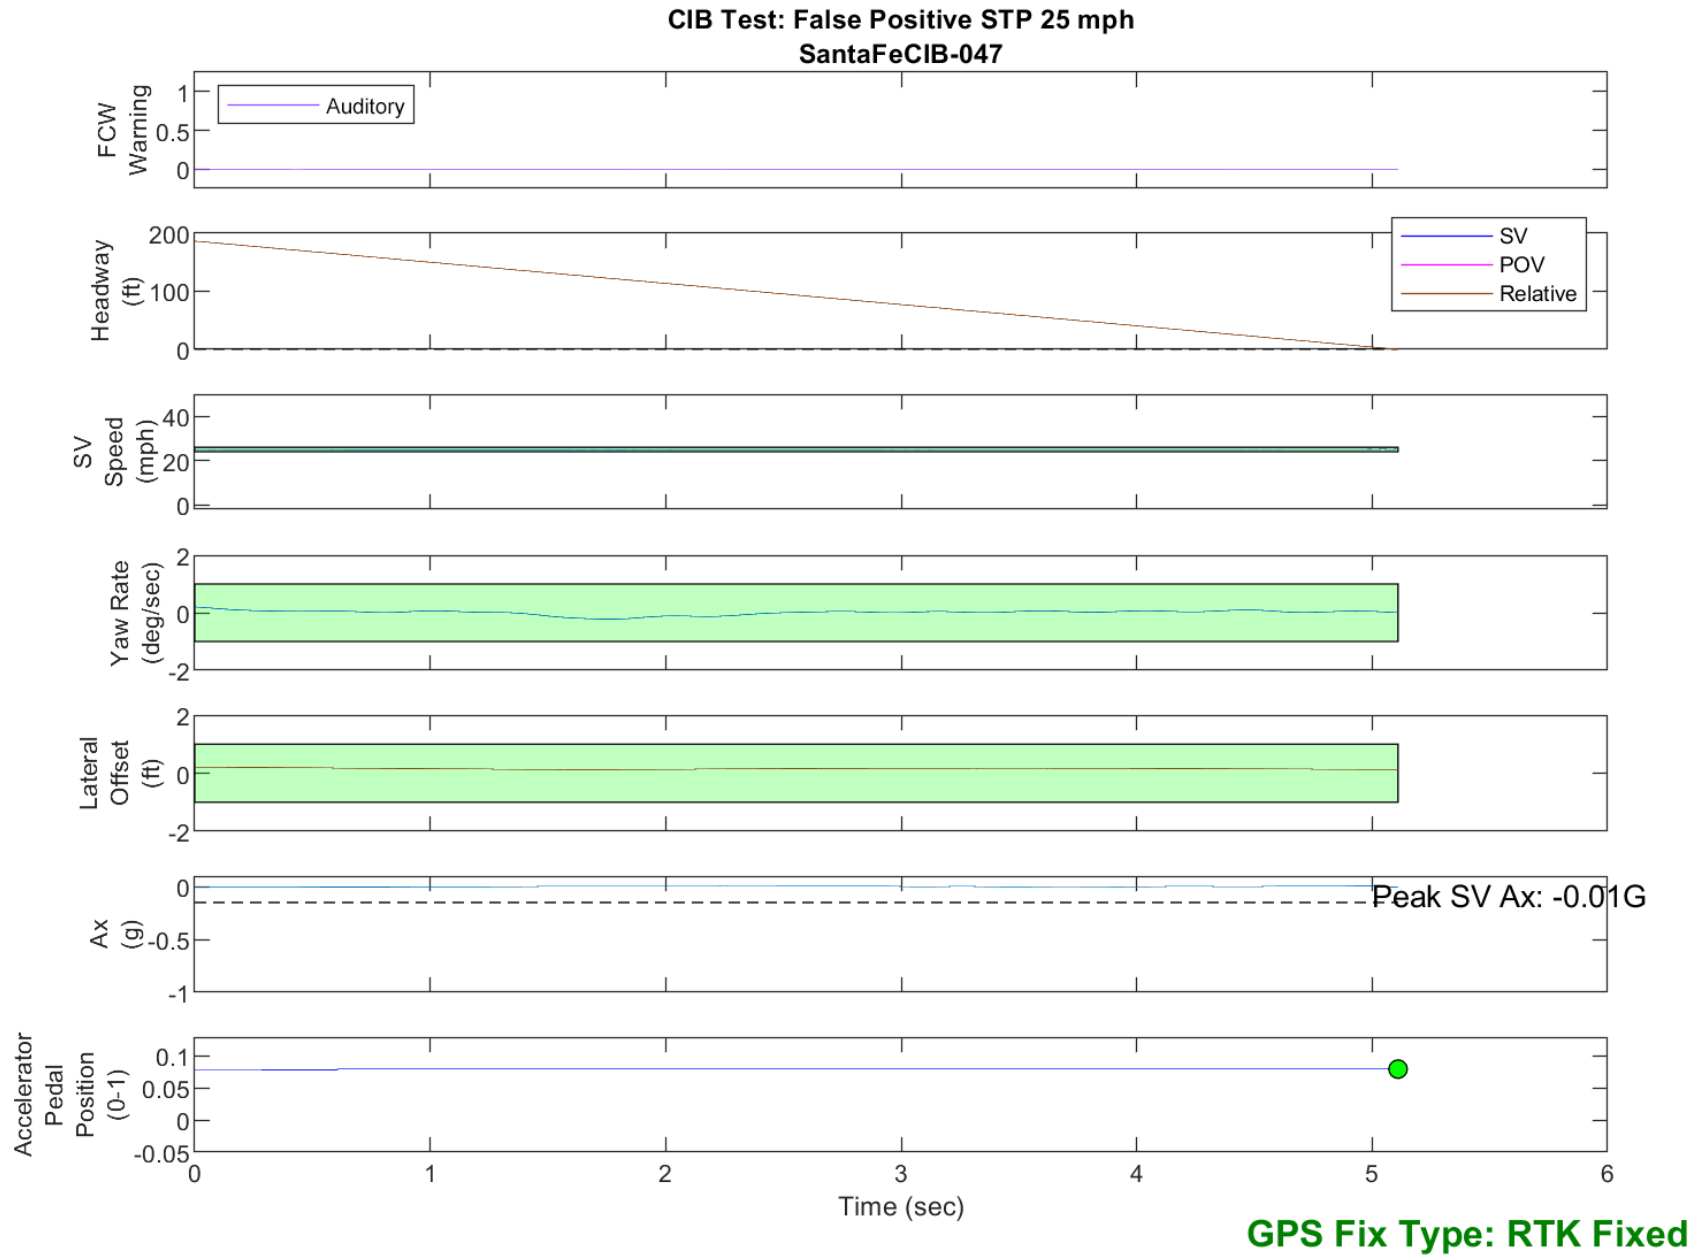


Figure D42. Time History for CIB Run 47, SV Encounters Steel Trench Plate, SV 25 mph

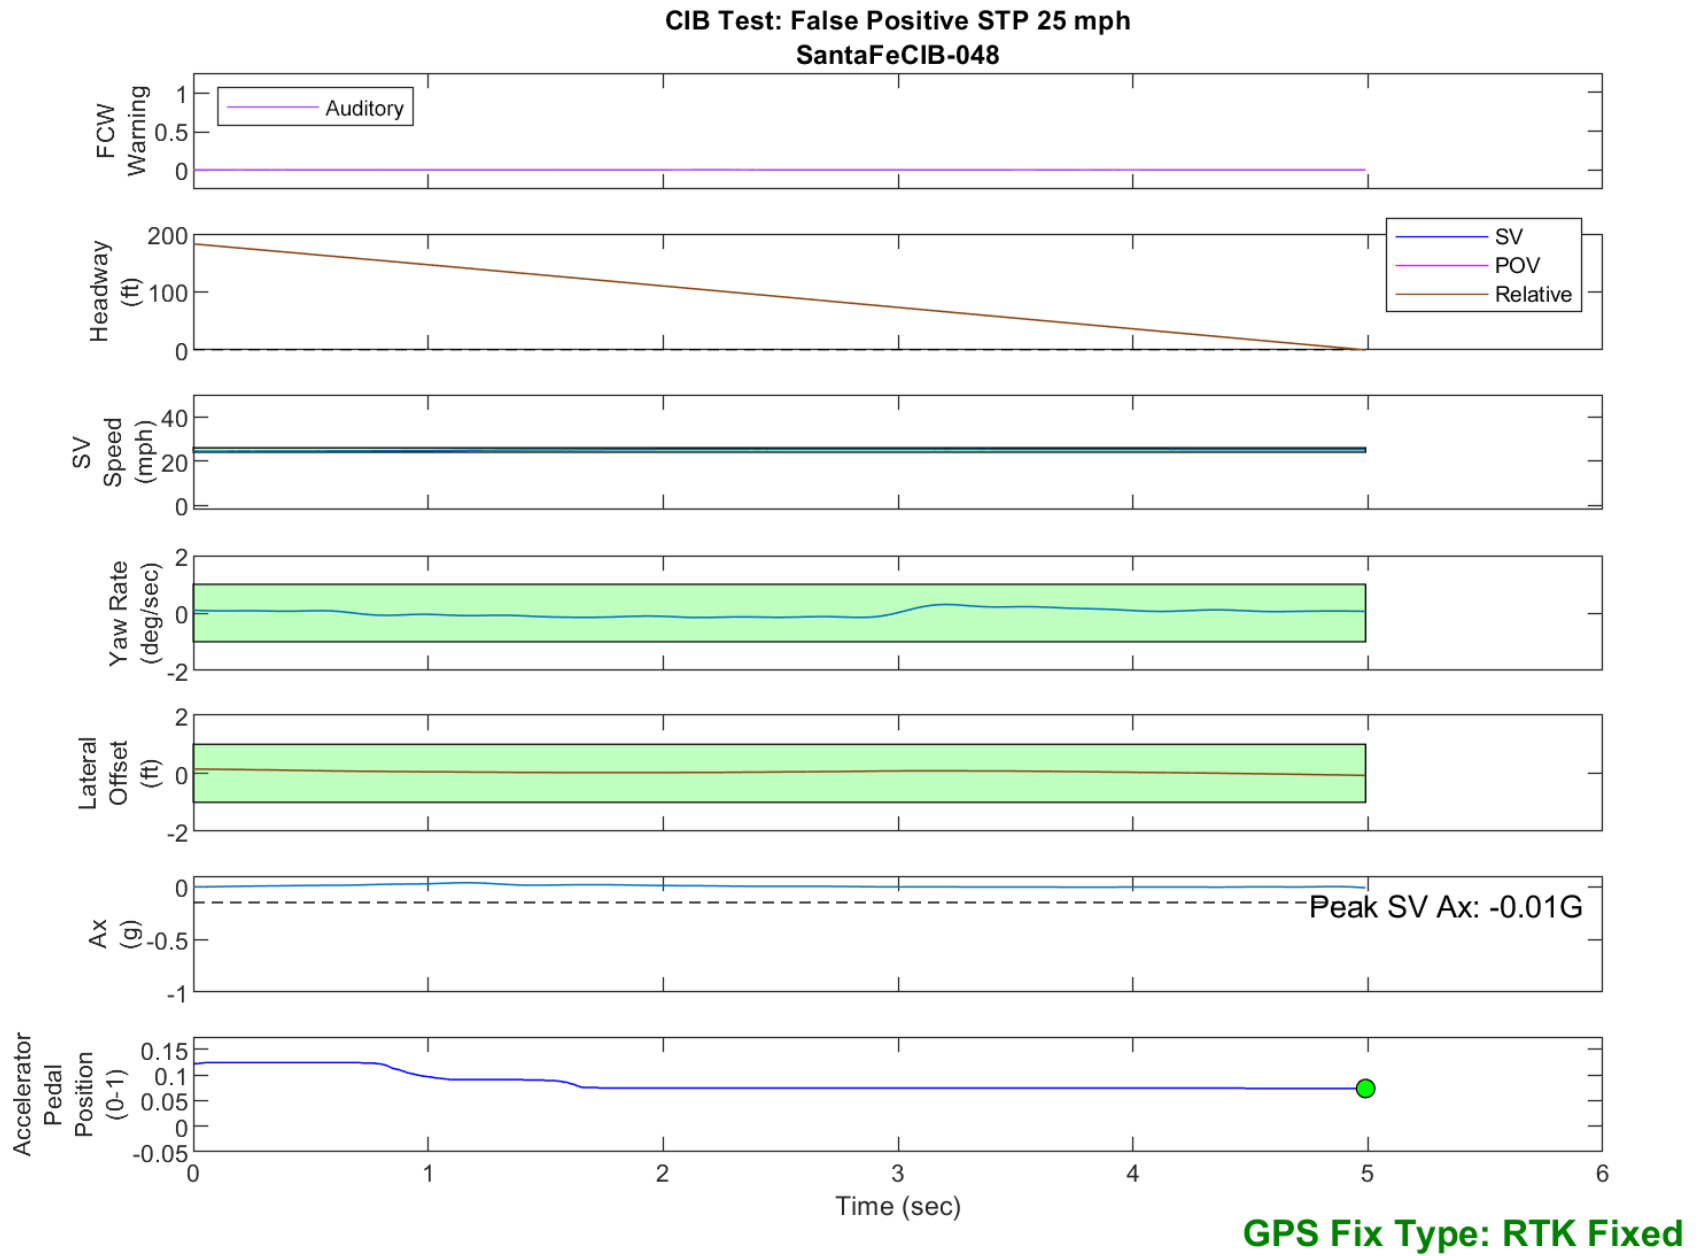


Figure D43. Time History for CIB Run 48, SV Encounters Steel Trench Plate, SV 25 mph

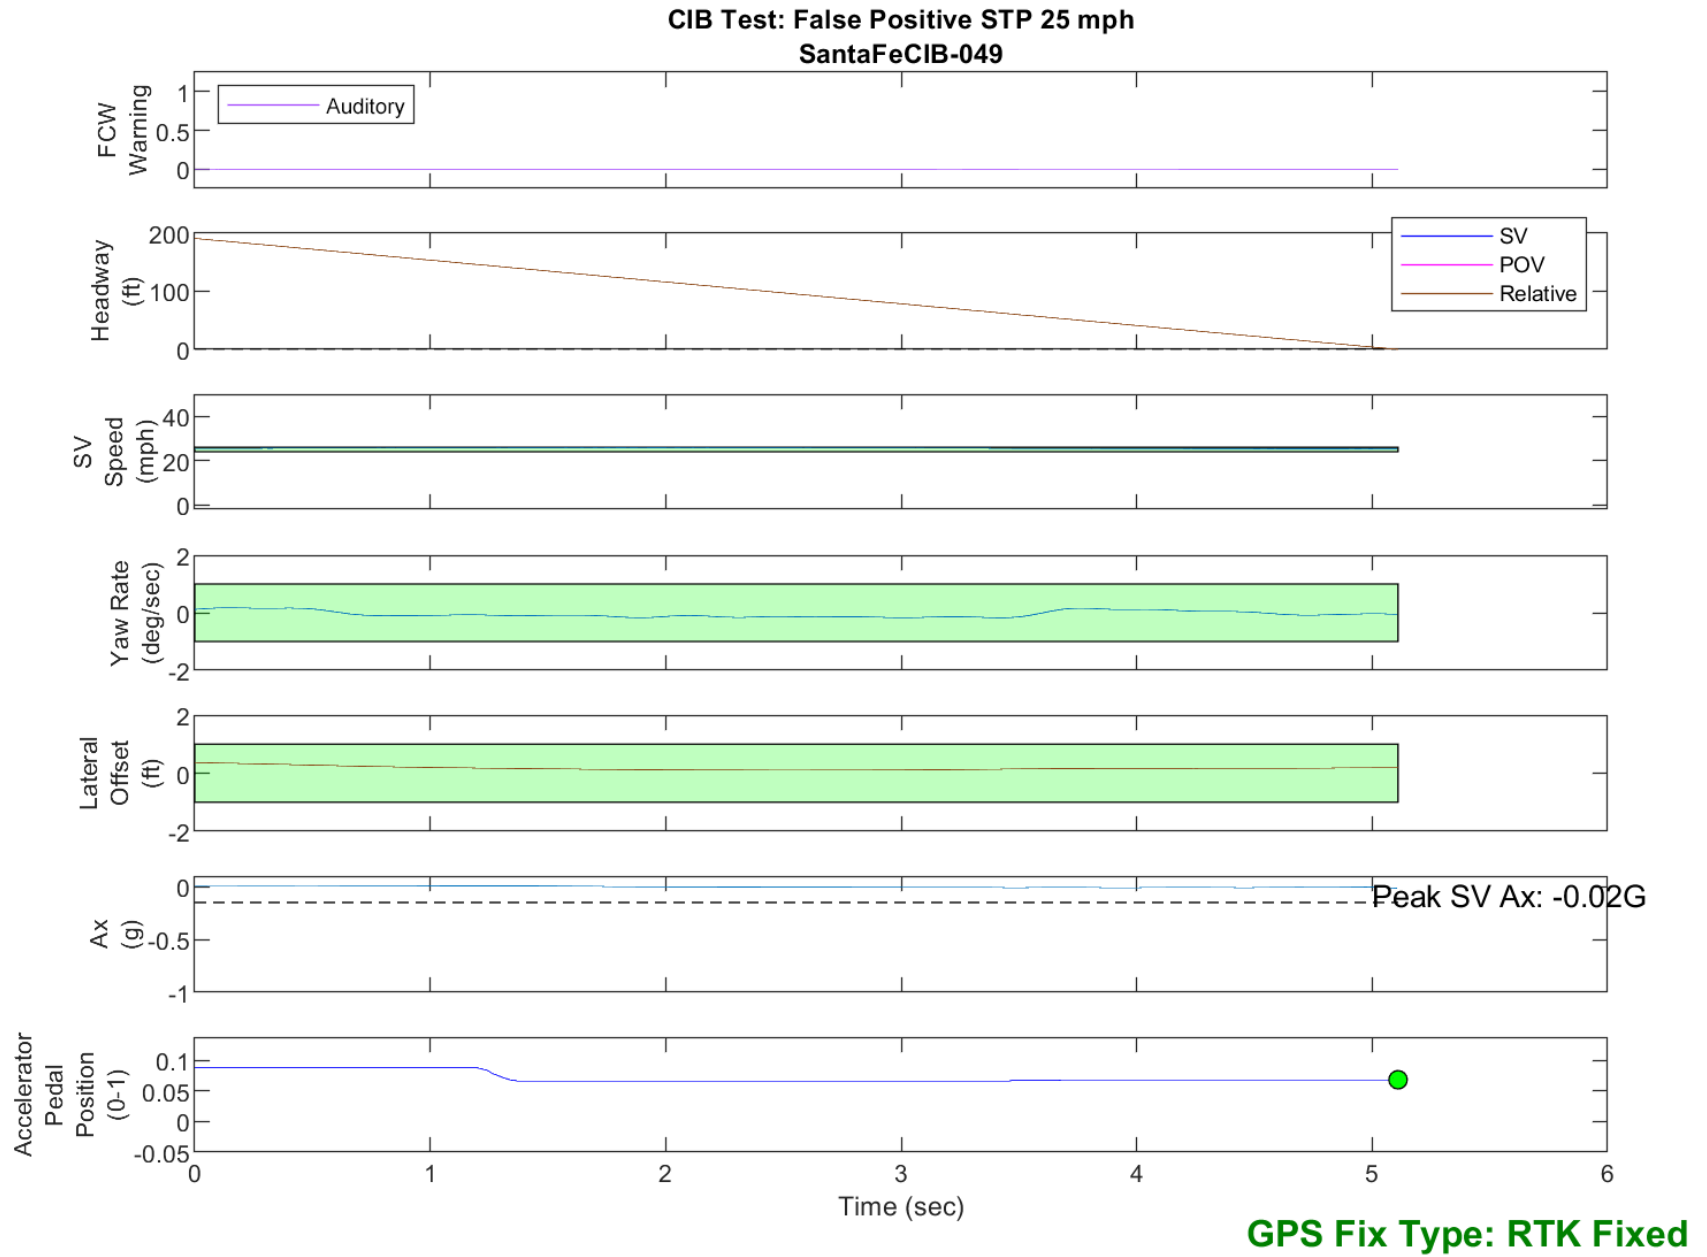


Figure D44. Time History for CIB Run 49, SV Encounters Steel Trench Plate, SV 25 mph

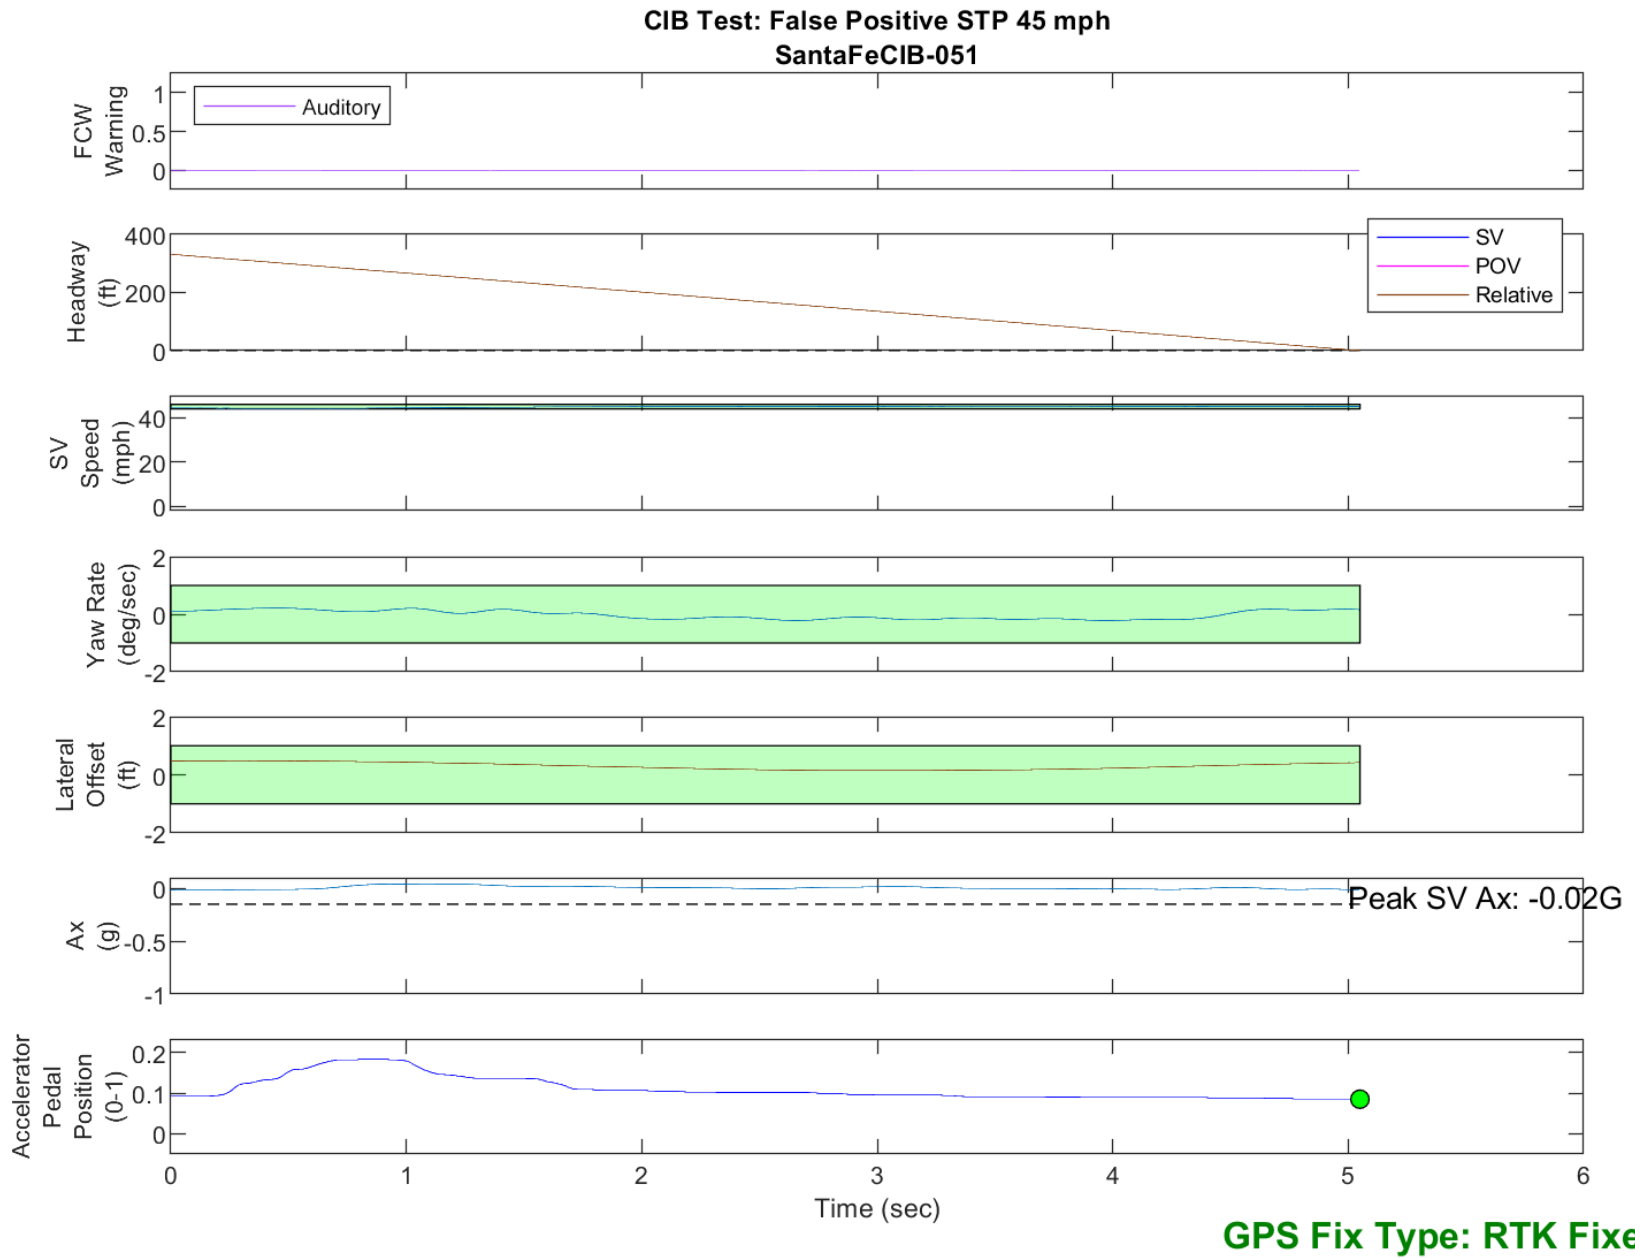


Figure D45. Time History for CIB Run 51, SV Encounters Steel Trench Plate, SV 45 mph

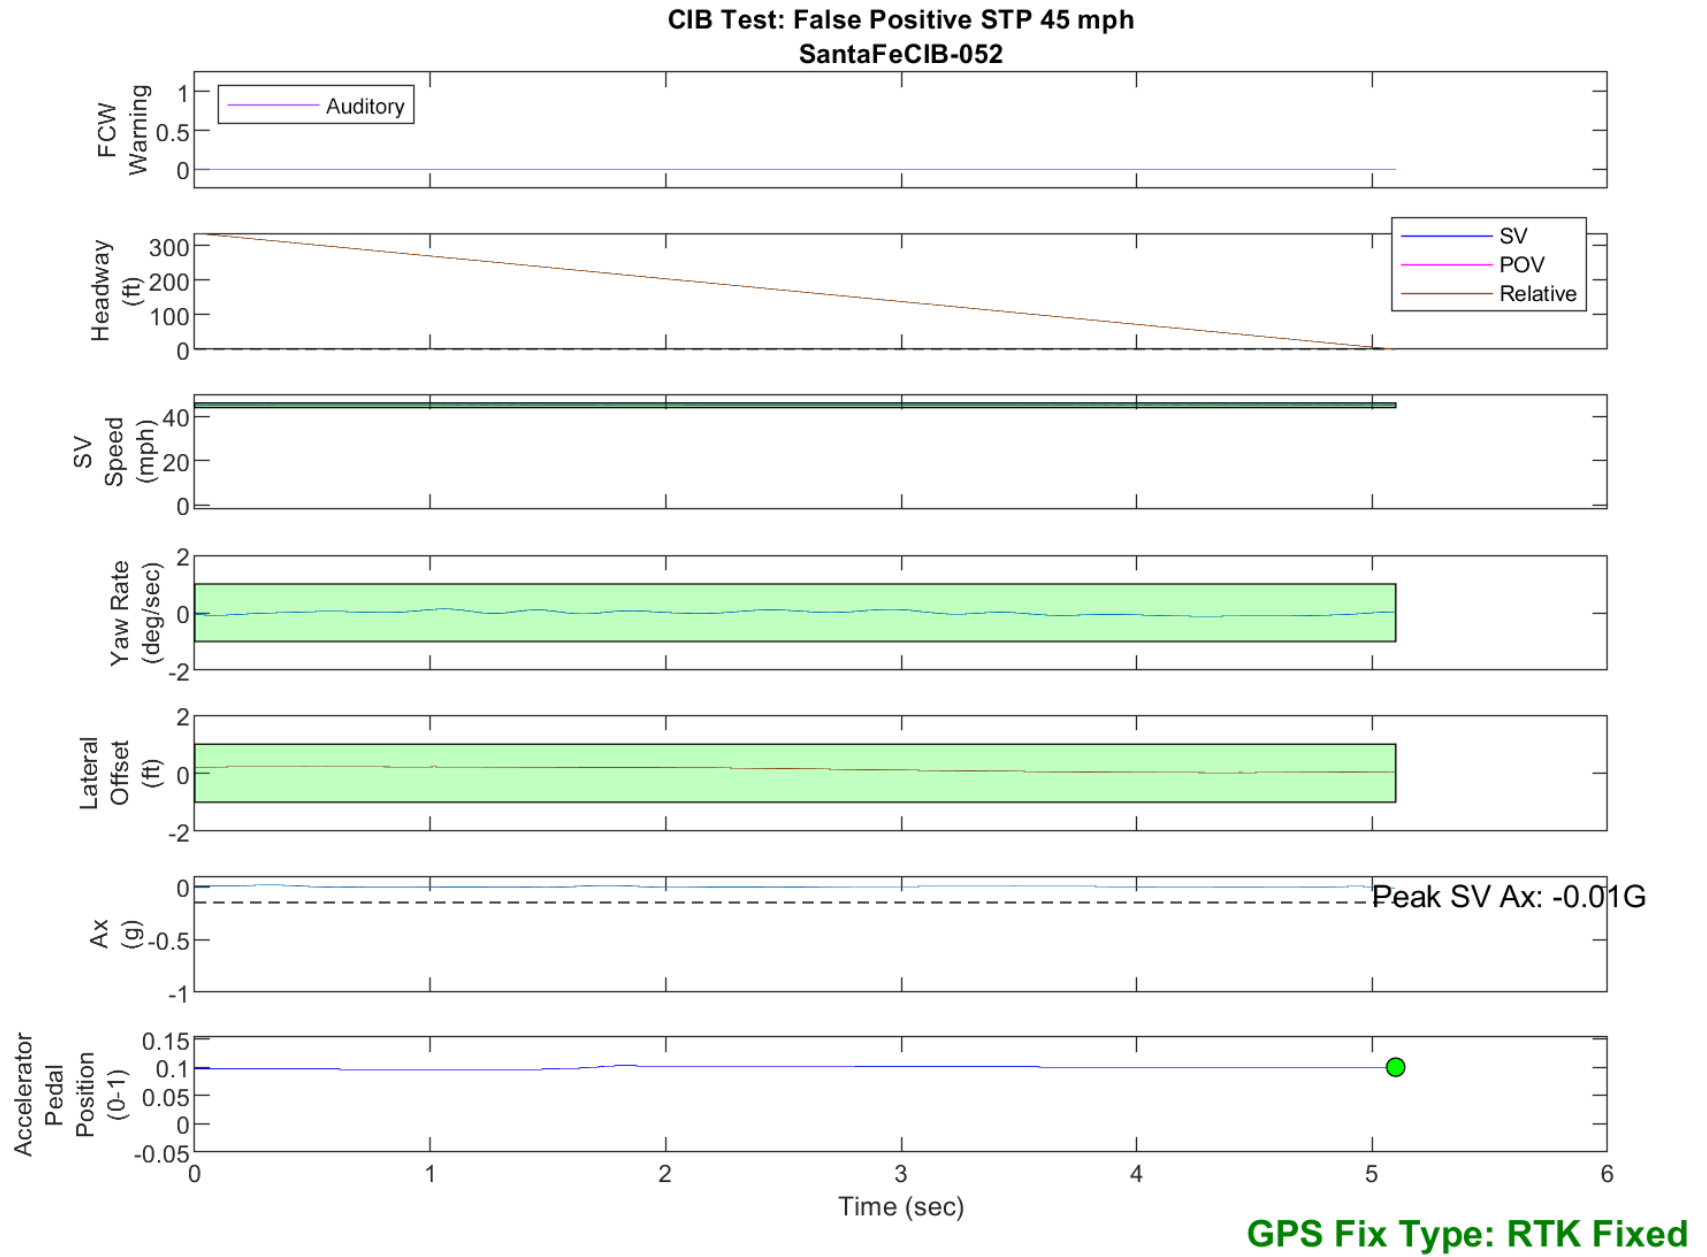


Figure D46. Time History for CIB Run 52, SV Encounters Steel Trench Plate, SV 45 mph



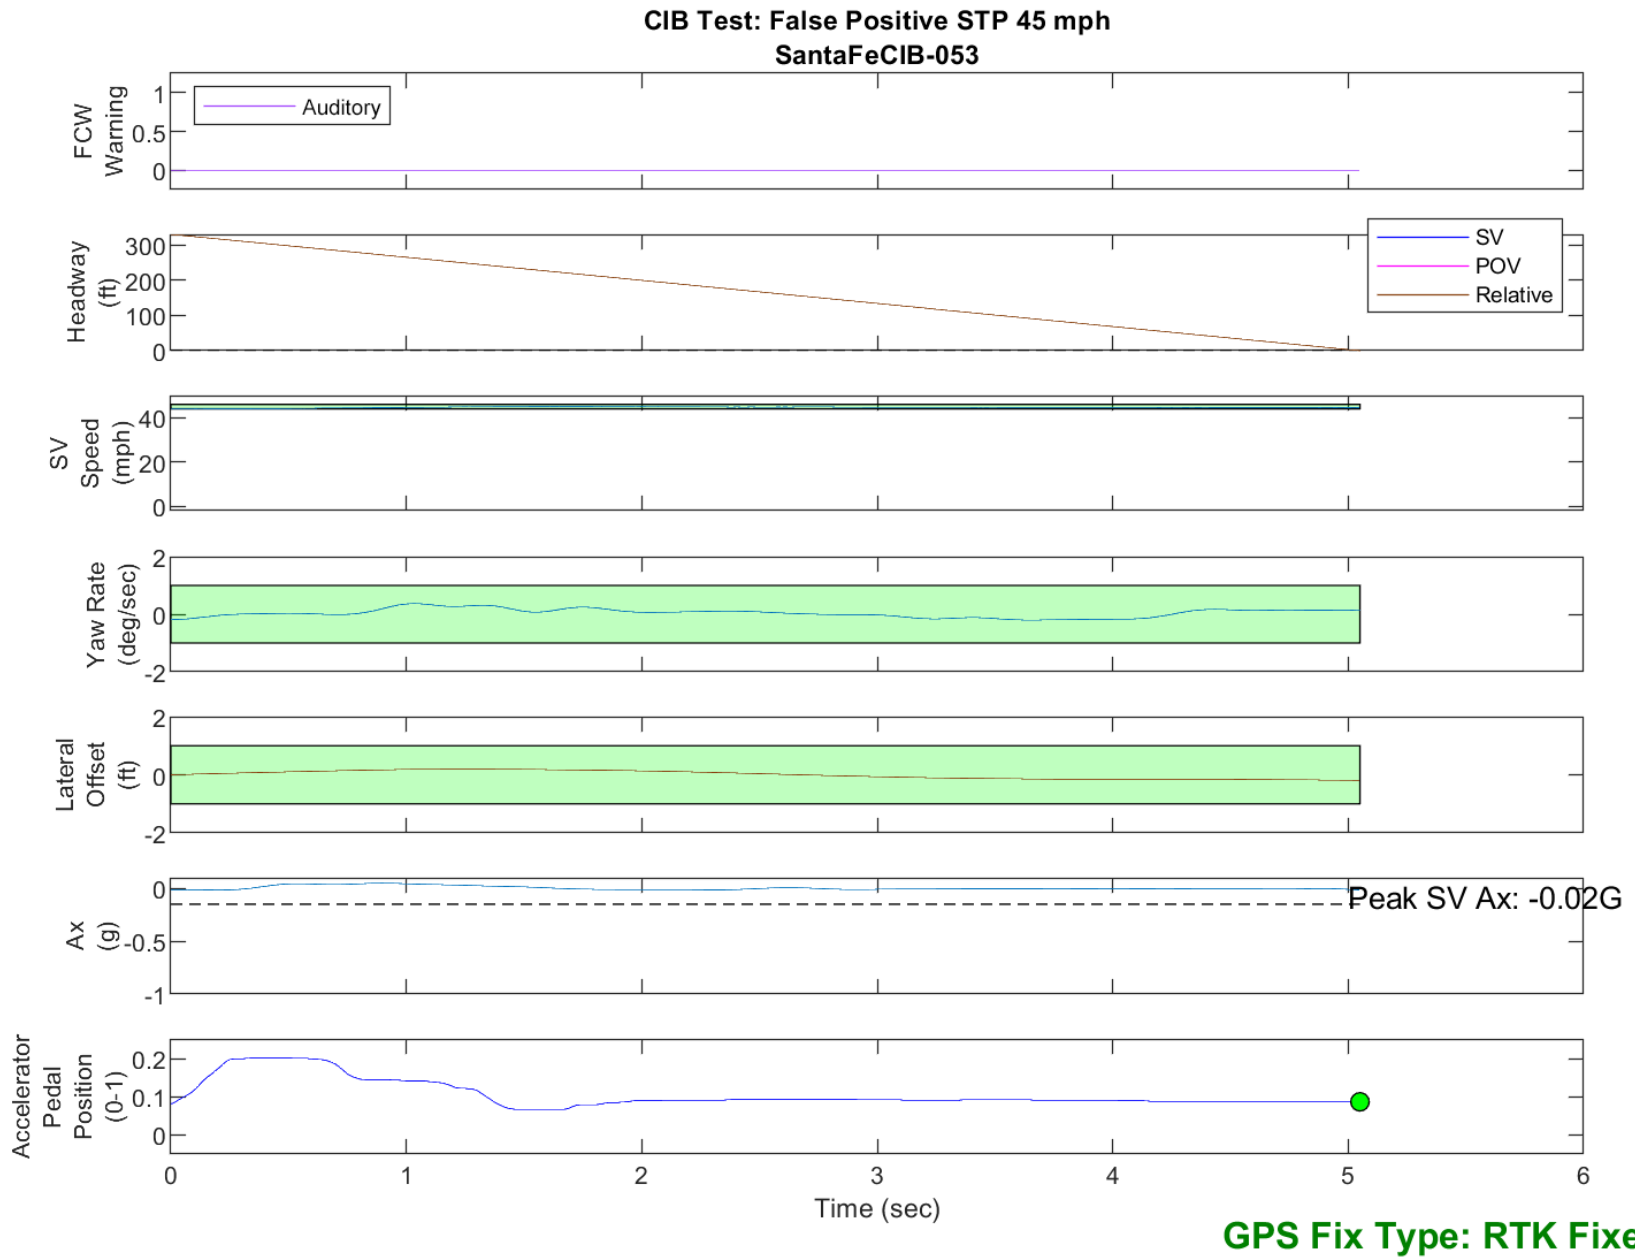


Figure D47. Time History for CIB Run 53, SV Encounters Steel Trench Plate, SV 45 mph

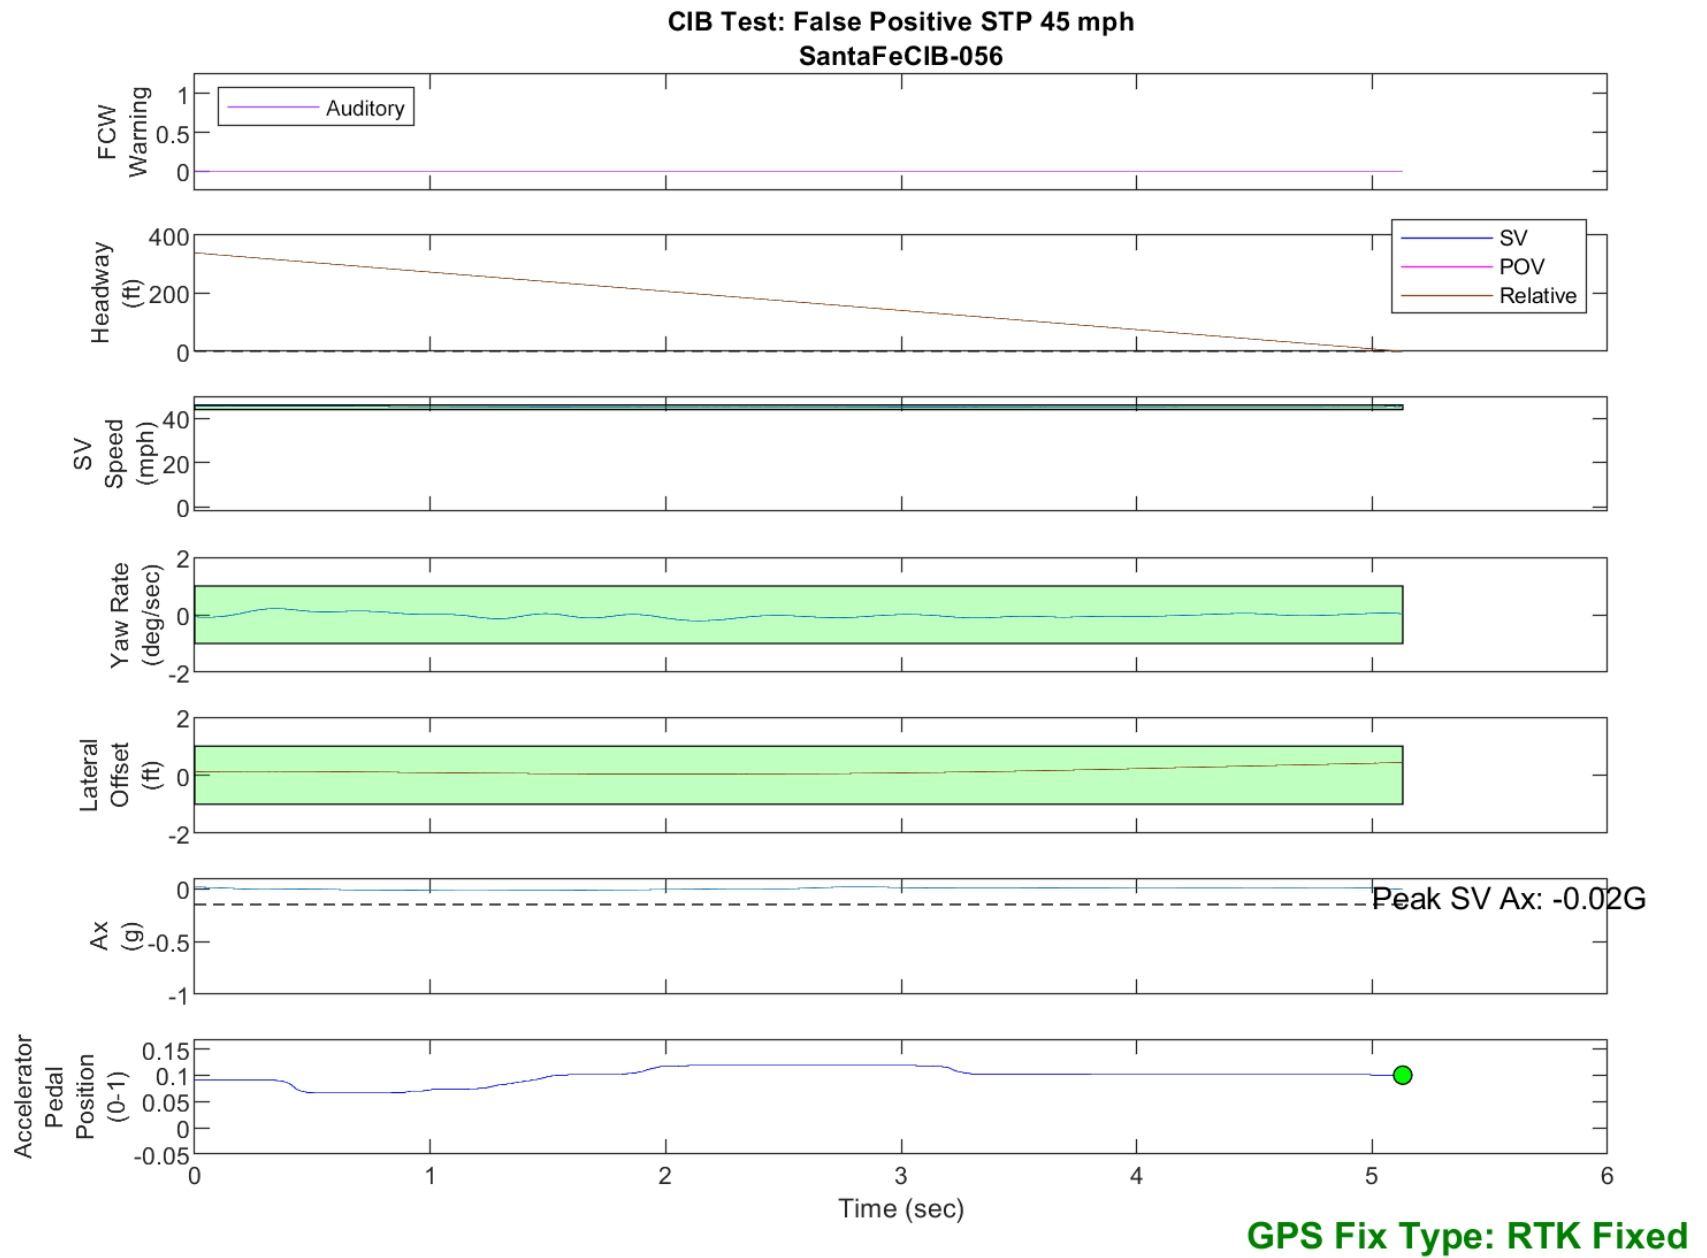


Figure D48. Time History for CIB Run 56, SV Encounters Steel Trench Plate, SV 45 mph

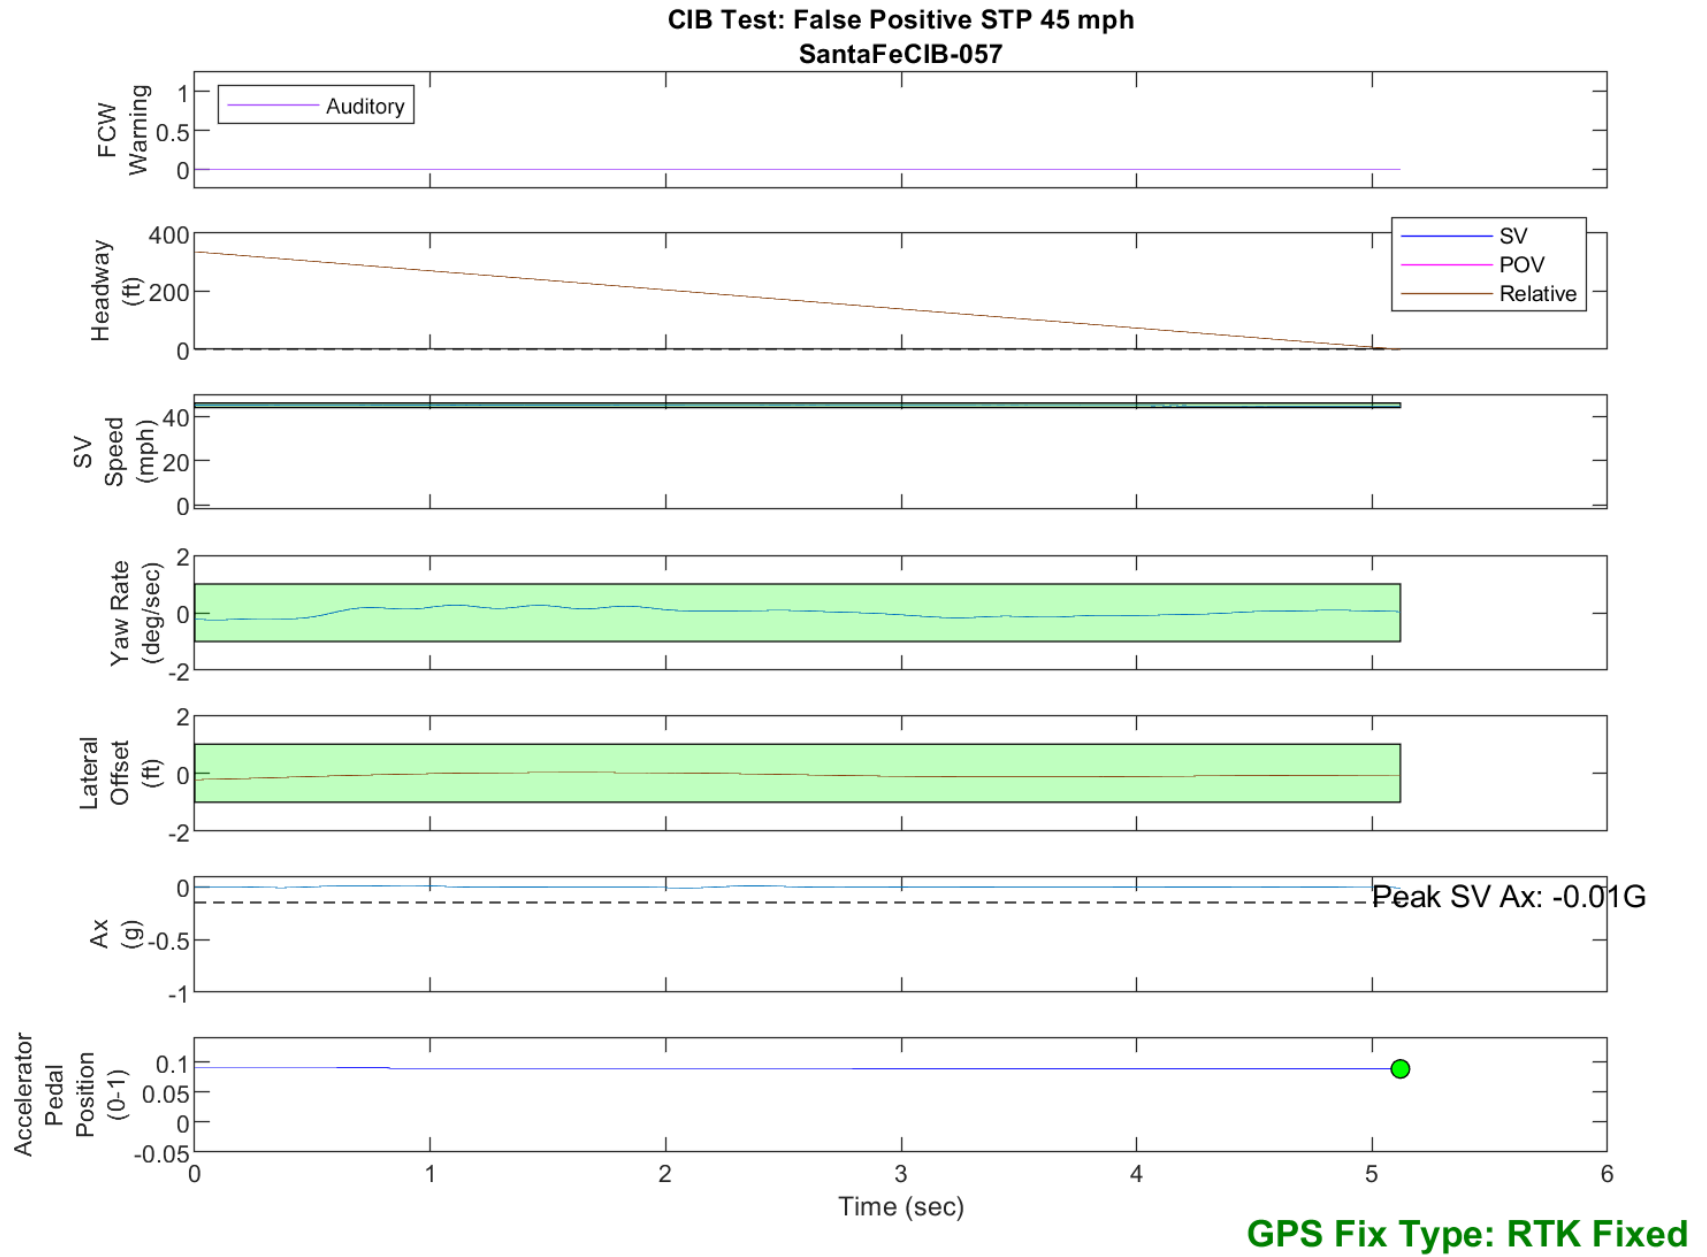


Figure D49. Time History for CIB Run 57, SV Encounters Steel Trench Plate, SV 45 mph

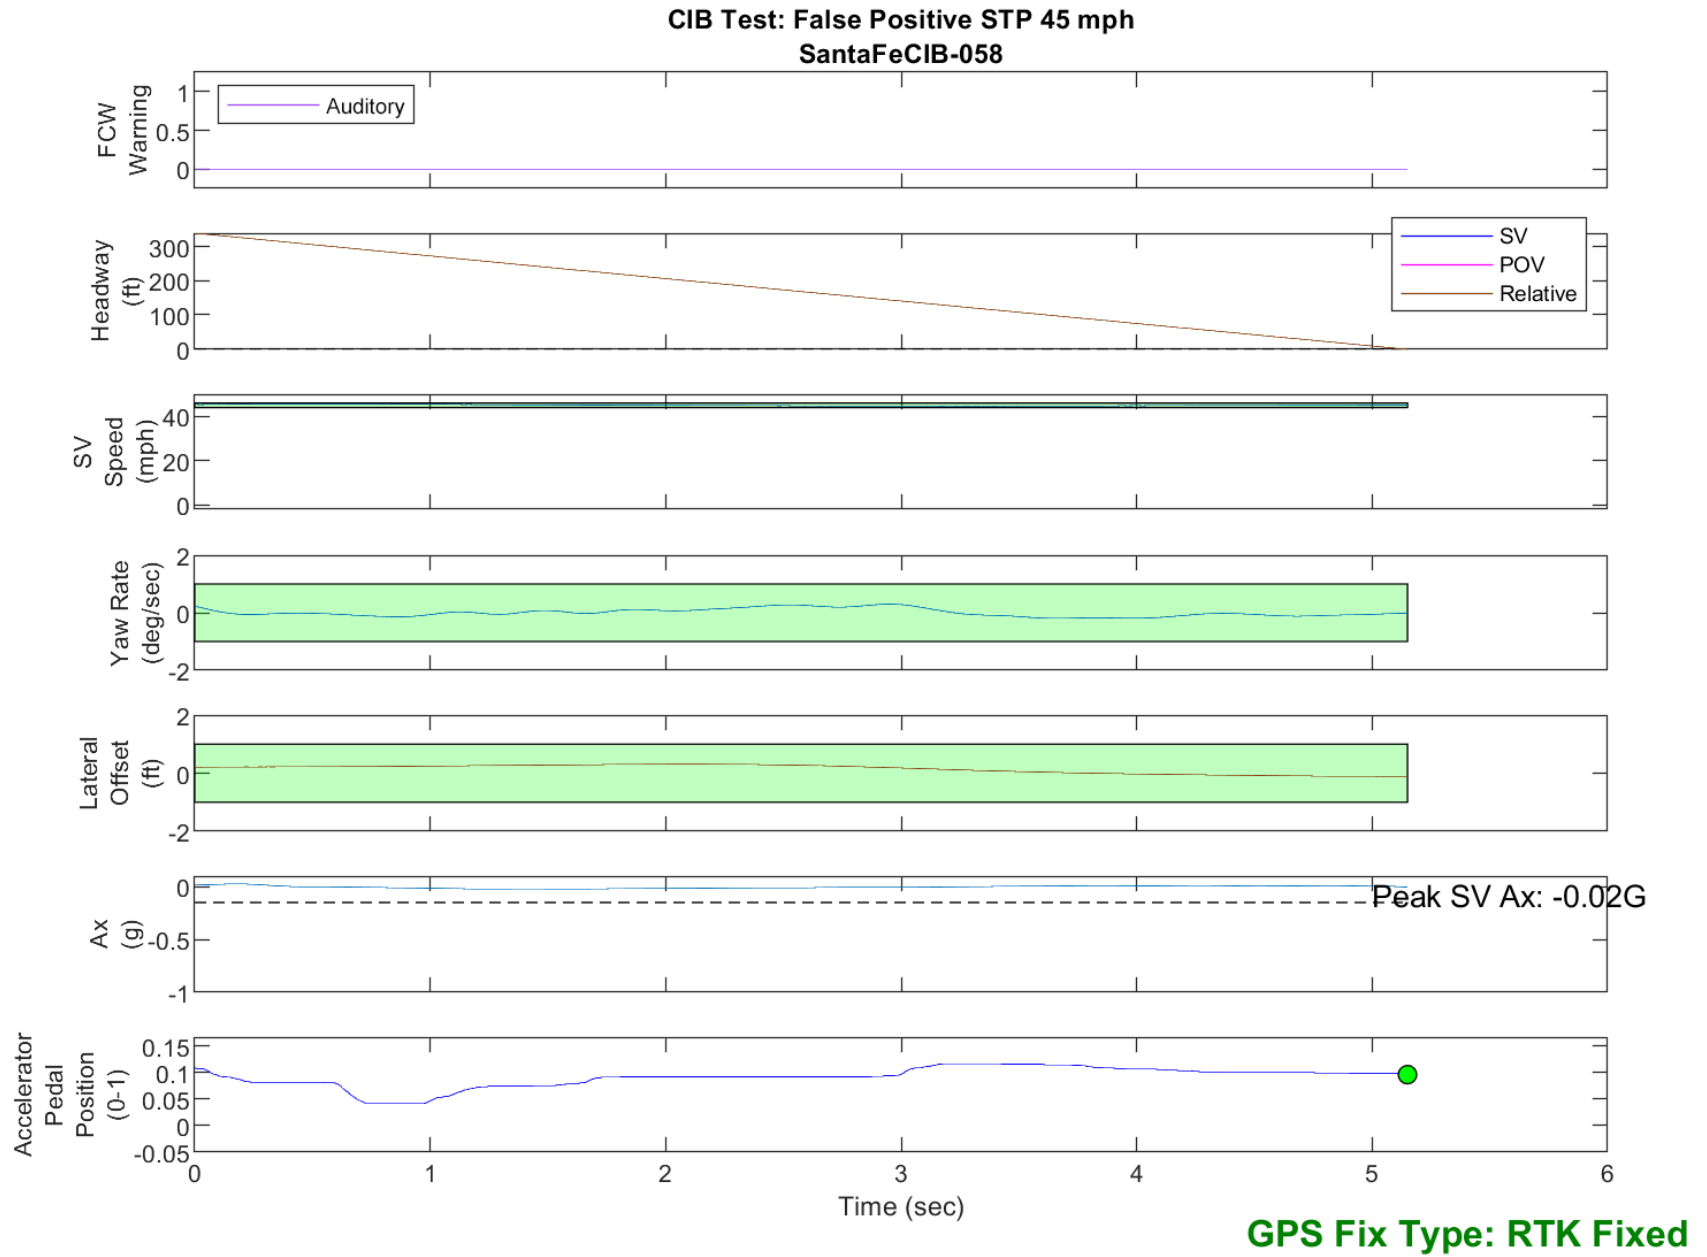


Figure D50. Time History for CIB Run 58, SV Encounters Steel Trench Plate, SV 45 mph

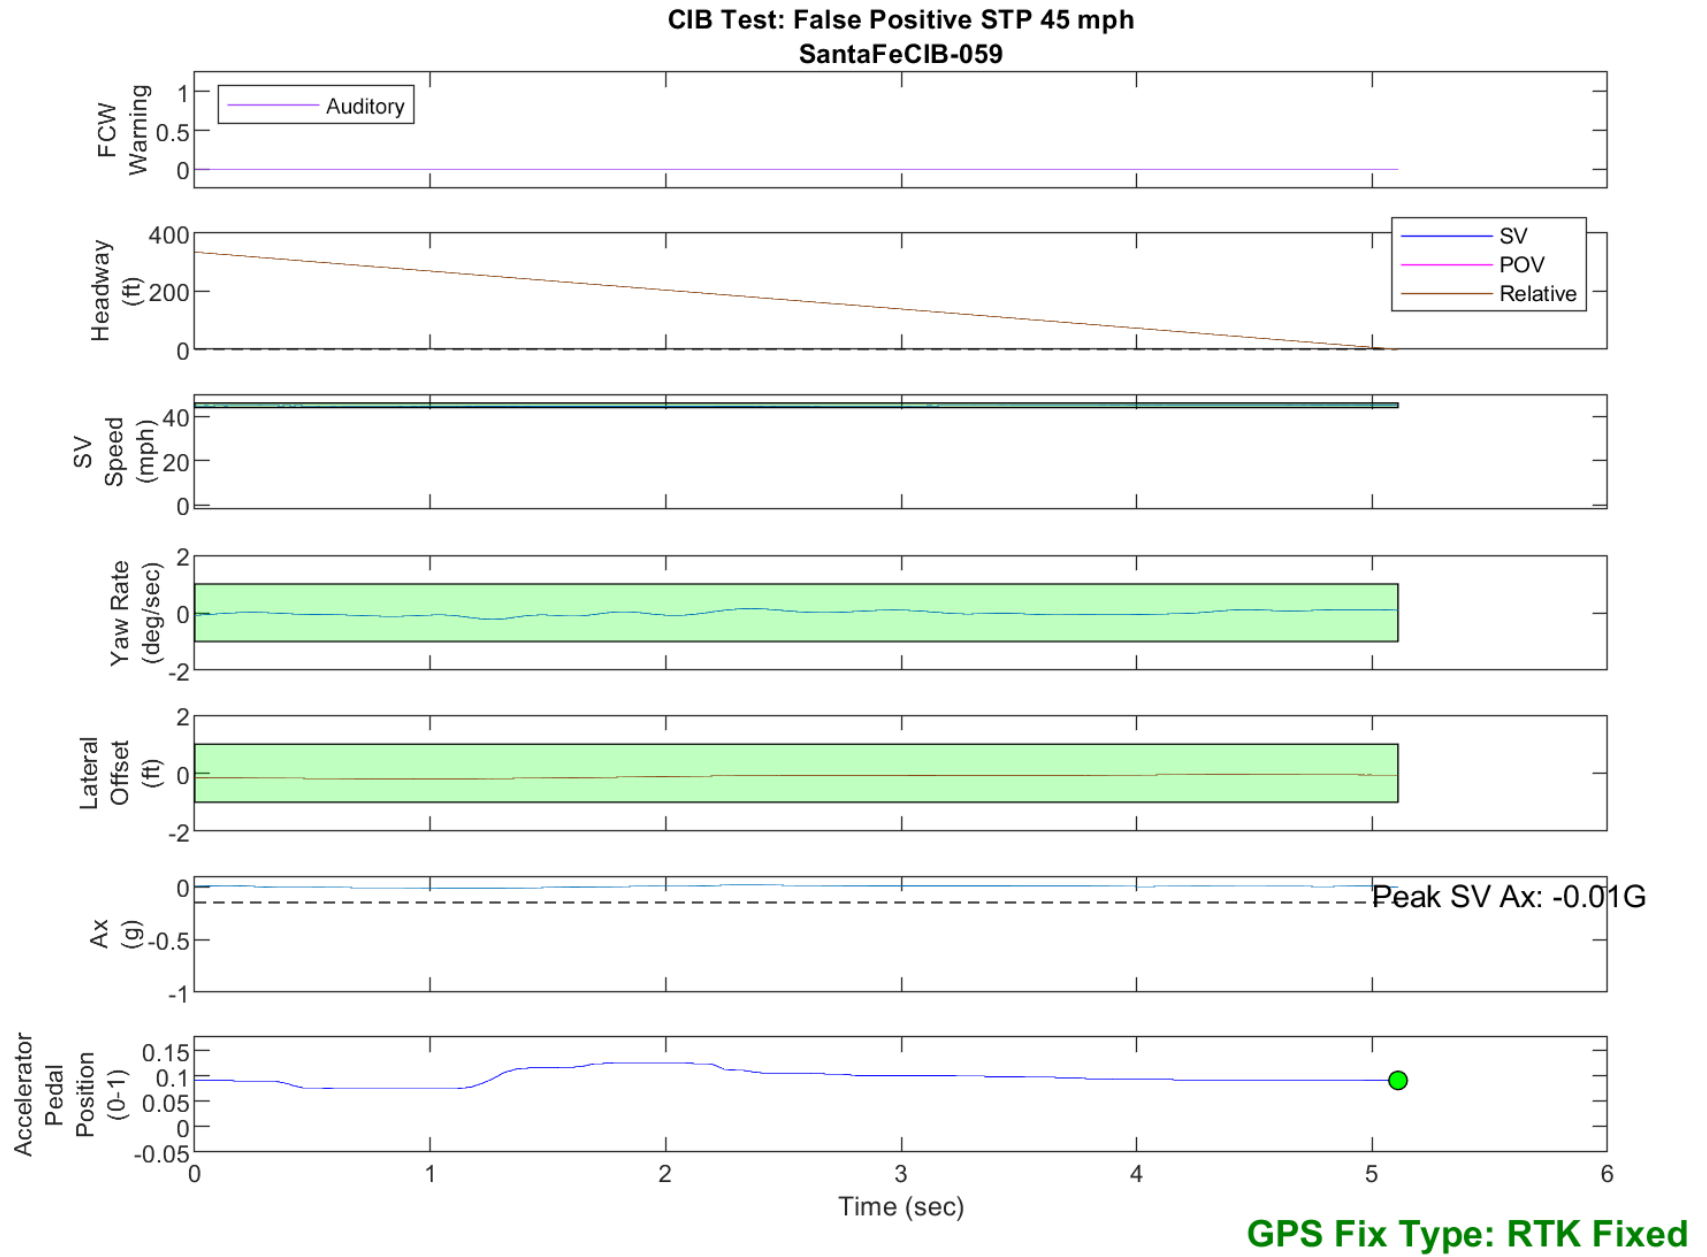


Figure D51. Time History for CIB Run 59, SV Encounters Steel Trench Plate, SV 45 mph