

**NEW CAR ASSESSMENT PROGRAM  
FORWARD COLLISION WARNING CONFIRMATION TEST  
NCAP-DRI-FCW-20-19**

**2020 Toyota Corolla LE**

**DYNAMIC RESEARCH, INC.**

355 Van Ness Avenue, STE 200  
Torrance, California 90501



**11 June 2020**

**Final Report**

**Prepared Under Contract No. DTNH22-14-D-00333**

**U.S. DEPARTMENT OF TRANSPORTATION  
National Highway Traffic Safety Administration  
New Car Assessment Program  
1200 New Jersey Avenue, SE  
West Building, 4<sup>th</sup> Floor (NRM-110)  
Washington, DC 20590**

Prepared for the Department of Transportation, National Highway Traffic Safety Administration, under Contract No. DTNH22-14-D-00333.

This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturer's names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products of manufacturers.

Prepared By: J. Lenkeit and A. Ricci  
Program Manager Test Engineer  
Date: 11 June 2020

1. Report No. NCAP-DRI-FCW-20-19	2. Government Accession No.	3. Recipient's Catalog No.	
4. Title and Subtitle Final Report of Forward Collision Warning Confirmation Test of a 2020 Toyota Corolla LE.		5. Report Date 11 June 2020	
		6. Performing Organization Code DRI	
7. Author(s) J. Lenkeit, Program Manager A. Ricci, Test Engineer		8. Performing Organization Report No. DRI-TM-19-187	
9. Performing Organization Name and Address  Dynamic Research, Inc. 355 Van Ness Ave, STE 200 Torrance, CA 90501		10. Work Unit No.	
		11. Contract or Grant No. DTNH22-14-D-00333	
12. Sponsoring Agency Name and Address U.S. Department of Transportation National Highway Traffic Safety Administration New Car Assessment Program 1200 New Jersey Avenue, SE, West Building, 4th Floor (NRM-110) Washington, DC 20590		13. Type of Report and Period Covered Final Test Report April - May 2020	
		14. Sponsoring Agency Code NRM-110	
15. Supplementary Notes			
16. Abstract These tests were conducted on the subject 2020 Toyota Corolla LE in accordance with the specifications of the New Car Assessment Program's (NCAP) most current Test Procedure in docket NHTSA-2006-26555-0134 to confirm the performance of a Forward Collision Warning system. The vehicle passed the requirements of the test for all three FCW test scenarios.			
17. Key Words  Forward Collision Warning, FCW, New Car Assessment Program, NCAP		18. Distribution Statement Copies of this report are available from the following:  NHTSA Technical Reference Division National Highway Traffic Safety Administration 1200 New Jersey Avenue, SE Washington, DC 20590	
19. Security Classif. (of this report) Unclassified	20. Security Classif. (of this page) Unclassified	21. No. of Pages 118	22. Price

## TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
I. INTRODUCTION .....	1
II. DATA SHEETS.....	2
Data Sheet 1: Test Results Summary.....	3
Data Sheet 2: Vehicle Data .....	4
Data Sheet 3: Test Conditions.....	5
Data Sheet 4: Forward Collision Warning System Operation .....	7
III. TEST PROCEDURES .....	10
A. Test Procedure Overview .....	10
B. Principal Other Vehicle .....	15
C. Automatic Braking System.....	15
D. Instrumentation .....	15
APPENDIX A Photographs .....	A-1
APPENDIX B Excerpts from Owner's Manual.....	B-1
APPENDIX C Run Logs .....	C-1
APPENDIX D Time Histories.....	D-1



## Section I

### **INTRODUCTION**

This test evaluates the ability of a Forward Collision Warning (FCW) system to detect and alert drivers to potential hazards in the path of the vehicle as specified in the New Car Assessment Program's "Forward Collision Warning Confirmation" test procedure, dated February 2013. Three driving scenarios are utilized to assess this technology. In the first test, a subject vehicle (SV) approaches a stopped principle other vehicle (POV) in the same lane of travel. The second test begins with the SV initially following the POV at the same constant speed. After a short while, the POV stops suddenly. The third test consists of the SV, traveling at a constant speed, approaching a slower moving POV, which is also being driven at a constant speed.

Section II  
**DATA SHEETS**

**FORWARD COLLISION WARNING**  
**DATA SHEET 1: TEST RESULTS SUMMARY**

(Page 1 of 1)

2020 Toyota Corolla LE

---

VIN: JTDEPRAE1LJ11xxxx

Test Date: 4/20/2020

Forward Collision Warning setting: Far

Test 1 - Subject Vehicle Encounters  
Stopped Principal Other Vehicle: Pass

Test 2 - Subject Vehicle Encounters  
Decelerating Principal Other Vehicle: Pass

Test 3 - Subject Vehicle Encounters  
Slower Principal Other Vehicle: Pass

Overall: Pass

Notes:

**FORWARD COLLISION WARNING**

**DATA SHEET 2: VEHICLE DATA**

(Page 1 of 1)

**2020 Toyota Corolla LE**

---

**TEST VEHICLE INFORMATION**

VIN: JTDEPRAE1LJ11xxxx

Body Style: Sedan

Color: Black Sand Pearl

Date Received: 4/13/2020

Odometer Reading: 22 mi

**DATA FROM VEHICLE'S CERTIFICATON LABEL**

Vehicle manufactured by: Toyota Motor Corporation

Date of manufacture: 02/20

Vehicle Type: Passenger Car

**DATA FROM TIRE PLACARD**

Tires size as stated on Tire Placard: Front: 205/55 R16

Rear: 205/55 R16

Recommended cold tire pressure: Front: 240 kPa (35 psi)

Rear: 230 kPa (33 psi)

**TIRES**

Tire manufacturer and model: Dunlop Enasave 01A/S

Front tire specification: 205/55 R16 91H

Rear tire specification: 205/55 R16 91H

Front tire DOT prefix: EU8K 3MMR

Rear tire DOT prefix: EU8K 3MMR

**FORWARD COLLISION WARNING**  
**DATA SHEET 3: TEST CONDITIONS**

(Page 1 of 2)

**2020 Toyota Corolla LE**

---

**GENERAL INFORMATION**

Test date: 4/20/2020

**AMBIENT CONDITIONS**

Air temperature: 23.3 C (74 F)

Wind speed: 1.0 m/s (2.3 mph)

X Wind speed  $\leq$  10 m/s (22 mph).

X Tests were not performed during periods of inclement weather. This includes, but is not limited to, rain, snow, hail, fog, smoke, or ash.

X Tests were conducted during daylight hours with good atmospheric visibility (defined as an absence of fog and the ability to see clearly for more than 5000 meters). The tests were not conducted with the vehicle oriented into the sun during very low sun angle conditions, where the sun is oriented 15 degrees or less from horizontal, and camera "washout" or system inoperability results.

**VEHICLE PREPARATION**

**Verify the following:**

All non-consumable fluids at 100% capacity: X

Fuel tank is full: X

Tire pressures are set to manufacturer's recommended cold tire pressure: X

Front: 240 kPa (35 psi)

Rear: 230 kPa (33 psi)

**FORWARD COLLISION WARNING**  
**DATA SHEET 3: TEST CONDITIONS**

(Page 2 of 2)

**2020 Toyota Corolla LE**

---

**WEIGHT**

Weight of vehicle as tested including driver and instrumentation:

Left Front: 447.7 kg (987 lb)

Right Front: 420.9 kg (928 lb)

Left Rear: 299.8 kg (661 lb)

Right Rear: 294.4 kg (649 lb)

Total: 1462.8 kg (3225 lb)

**FORWARD COLLISION WARNING**

**DATA SHEET 4: FORWARD COLLISION WARNING SYSTEM OPERATION**

(Page 1 of 3)

**2020 Toyota Corolla LE**

---

Name of the FCW option, option package, etc.:

Pre-Collision System (PCS) as part of Toyota Safety Sense 2.0 (TSS 2.0)

Forward Collision Warning Setting used in test: Far

Type and location of sensors the system uses:

Millimeter wave Radar located behind the front emblem (or grille) and mono camera located behind the windshield near the rearview mirror.

How is the Forward Collision Warning presented to the driver?  Warning light  
(Check all that apply)  Buzzer or audible alarm  
 Vibration  
 Other \_\_\_\_\_

Describe the method by which the driver is alerted. For example, if the warning is a light, where is it located, its color, size, words or symbol, does it flash on and off, etc. If it is a sound, describe if it is a constant beep or a repeated beep. If it is a vibration, describe where it is felt (e.g., pedals, steering wheel), the dominant frequency (and possibly magnitude), the type of warning (light, audible, vibration, or combination), etc.

When the system determines that the possibility of a frontal collision is high, a buzzer will sound, and a warning message will be displayed on the multi-information display. The visual alert is presented in the display area adjacent to the speedometer and displays BRAKE! In white on a red background.

The auditory alert is presented as a pulsed tone of 2389 Hz pulsed at approximately five times per second.

**FORWARD COLLISION WARNING**

**DATA SHEET 4: FORWARD COLLISION WARNING SYSTEM OPERATION**

(Page 2 of 3)

**2020 Toyota Corolla LE**

---

Is the vehicle equipped with a switch whose purpose is to render FCW inoperable?   X   Yes

       No

If yes, please provide a full description including the switch location and method of operation, any associated instrument panel indicator, etc.

Buttons on the left side of the steering wheel are used to interact with the system menus. The hierarchy is:

Settings

Vehicle

PCS (Pre-Collision System) - Select "On" or "Off"

See Appendix A, Figures A13 and A14, also Appendix B, Pages B-20 and B-21.

Is the vehicle equipped with a control whose purpose is to adjust the range setting or otherwise influence the operation of FCW?   X   Yes

       No

If yes, please provide a full description.

Buttons on the left side of the steering wheel are used to interact with the system menus (Appendix A, Figure A14). The hierarchy is:

Settings

Vehicle

PCS (Pre-Collision System)

Adjust alert timing - Select "Near", "Middle" or "Far"

See Appendix A, Figures A13 and A14, also Appendix B, Pages B-14 and B-15.



**FORWARD COLLISION WARNING**

**DATA SHEET 4: FORWARD COLLISION WARNING SYSTEM OPERATION**

(Page 3 of 3)

**2020 Toyota Corolla LE**

---

Are there other driving modes or conditions that render FCW inoperable or reduce its effectiveness?

  X   Yes  
       No

If yes, please provide a full description.

*Limitations of the system are described in the Owner's Manual, pages 188 and 189 shown in Appendix B, Pages B-13 and B-14.*

Notes:

## Section III

### TEST PROCEDURES

#### A. Test Procedure Overview

Three test procedures were used, as follows:

Test 1. Subject Vehicle (SV) Encounters Stopped Principal Other Vehicle (POV)

Test 2. Subject Vehicle Encounters Decelerating Principal Other Vehicle

Test 3. Subject Vehicle Encounters Slower Principal Other Vehicle

With the exception of trials associated with Test 1, all trials were performed with SV and POV automatic transmissions in “Drive” or with manual transmissions in the highest gear capable of sustaining the desired test speed. Manual transmission clutches remained engaged during all maneuvers. Except for Test 2, the brake lights of the POV were not illuminated.

In order to pass the test, if the FCW system provides a warning timing adjustment for the driver, at least one setting must meet the criterion of the test procedure. Therefore, if the vehicle was equipped with a warning timing adjustment, only the most “conservative” (earliest warning) setting was tested.

An overview of each of the test procedures follows.

#### 1. TEST 1 – SUBJECT VEHICLE ENCOUNTERS STOPPED PRINCIPAL OTHER VEHICLE ON A STRAIGHT ROAD

This test evaluates the ability of the FCW function to detect a stopped lead vehicle, as depicted in Figure 1.

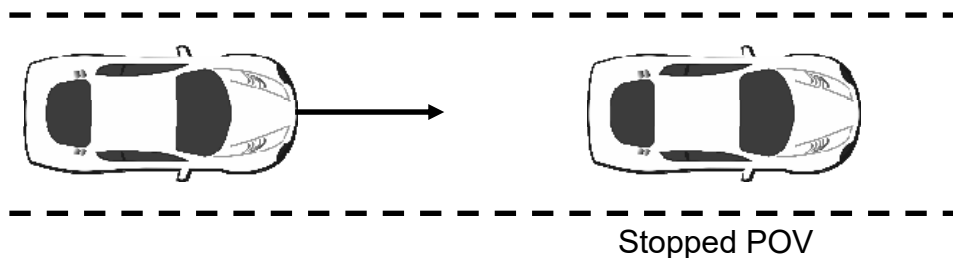


Figure 1. Depiction of Test 1

#### a. Alert Criteria

In order to pass the test, the FCW alert must be issued when the time-to-collision (TTC) is at least 2.1 seconds. The TTC for this test was calculated by considering the speeds of the SV and the POV at the time of the FCW alert (i.e., when the SV and POV speeds are nominally equal to 45 and 0 mph (72.4 and 0 km/h), respectively).

#### b. Procedure

The POV was parked in the center of a travel lane, with its longitudinal axis oriented parallel to the roadway edge and facing the same direction as the SV so that the SV approaches the rear of the POV.

The SV was driven at a nominal speed of 45 mph (72.4 km/h) in the center of the lane of travel, toward the parked POV. The test began when the SV was 492 ft (150 m) from the POV and ended when either of the following occurred:

- The required FCW alert occurred.
- The TTC to the POV fell to less than 90% of the minimum allowable range (i.e.,  $TTC = 1.9$  sec) for the onset of the required FCW alert.

The SV driver then steered and/or braked to keep the SV from striking the POV.

For an individual test trial to be valid, the following was required throughout the test:

- The SV vehicle speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of three seconds prior to (1) the required FCW alert or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- The SV driver could not apply any force to the brake pedal before (1) the required FCW alert occurred or (2) the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- The lateral distance between the centerline of the SV, relative to the centerline of the POV, in road coordinates, could not exceed 2.0 ft (0.6 m).
- The yaw rate of the SV could not exceed  $\pm 1$  deg/sec during the test.

Nominally, the Test 1 series was comprised of seven individual trials. The FCW system must satisfy the TTC alert criteria for at least five of the seven test trials.

## 2. TEST 2 – SUBJECT VEHICLE ENCOUNTERS DECELERATING PRINCIPAL OTHER VEHICLE

The SV in this test initially followed the POV at a constant time gap and then the POV suddenly decelerated, as depicted in Figure 2. The test evaluates the ability of the FCW to recognize a decelerating lead vehicle and to issue an alert to SV driver in a timely manner.

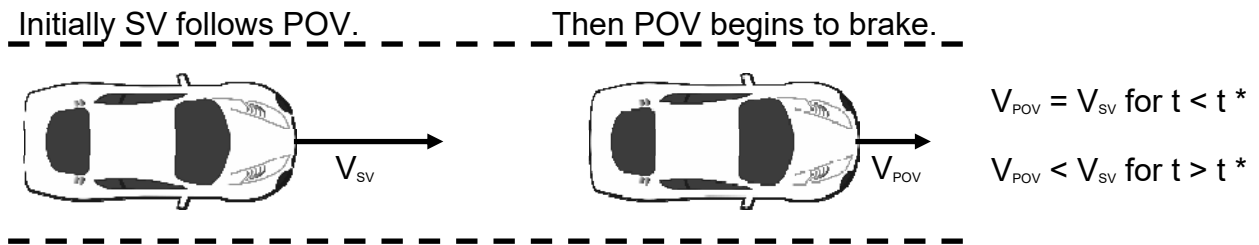


Figure 2. Depiction of Test 2

### a. Alert Criteria

In order to pass the test, the FCW alert must be issued when TTC is at least 2.4 seconds. The TTC for this test, a prediction of the time it would take for the SV to collide with the POV, was calculated by considering three factors at the time of the FCW alert: (1) the speed of the SV, (2) the speed of the POV, and (3) the deceleration of the POV<sup>1</sup>.

### b. Procedure

Test 2 began with the SV and the POV traveling on a straight, flat road at a constant speed of 45.0 mph (72.4 km/h), in the center of the lane of travel. The headway from the SV to the POV was nominally maintained at 98.4 ft (30 m) until the POV braking was initiated.

The test began approximately 7 seconds before the driver of the POV started a braking maneuver in which the POV brakes were rapidly applied and modulated such that a constant deceleration of 0.3 g was achieved within 1.5 seconds after braking is initiated. The test ended when either of the following conditions was satisfied:

- The required FCW alert occurred.
- The TTC to the POV fell to less than 90% of the minimum allowable range (i.e., TTC = 2.2 sec) for the onset of the required FCW alert.

The SV driver then steered and/or braked to keep the SV from striking the POV.

<sup>1</sup>To simplify calculation of the TTC for Test 2, the deceleration of the POV is assumed to remain constant from the time of the FCW alert until the POV comes to a stop (i.e., a "constant" rate of slowing is assumed).

For an individual test trial to be valid, the following was required throughout the test:

- The initial POV vehicle speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of 3 seconds prior to the initiation of POV braking.
- The speed of the SV could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of 3 seconds prior to (1) the required FCW alert or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- The lateral distance between the centerline of the SV, relative to the centerline of the POV, in road coordinates, could not exceed 2.0 ft (0.6 m).
- The yaw rates of the SV and POV could not exceed  $\pm 1$  deg/sec during the test.
- The POV deceleration level was nominally required to be 0.3 g within 1.5 seconds after initiation of POV braking. The acceptable error magnitude of the POV deceleration was  $\pm 0.03g$ , measured at the time the FCW alert first occurred. An initial overshoot beyond the deceleration target was acceptable, however the first local deceleration peak observed during an individual trial could not exceed 0.375 g for more than 50 ms. Additionally, the deceleration could not exceed 0.33 g over a period defined from 500 ms after the first local deceleration peak occurs, to the time when the FCW alert first occurred.
- The tolerance for the headway from the SV to the POV was  $\pm 8.2$  ft ( $\pm 2.5$  m), measured at two instants in time: (1) three seconds prior to the time the POV brake application was initiated and (2) at the time the POV brake application was initiated.
- SV driver could not apply any force to the brake pedal before (1) the required FCW alert occurred or (2) the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.

Nominally, the Test 2 series was comprised of seven individual trials. The FCW system must satisfy the TTC alert criteria for at least five of the seven test trials.

### 3. TEST 3 – SUBJECT VEHICLE ENCOUNTERS SLOWER PRINCIPAL OTHER VEHICLE

This test examines the ability of the FCW system to recognize a slower lead vehicle being driven with a constant speed and to issue a timely alert. As depicted in Figure 3, the scenario was conducted with a closing speed equal to 25.0 mph (40.2 km/h).

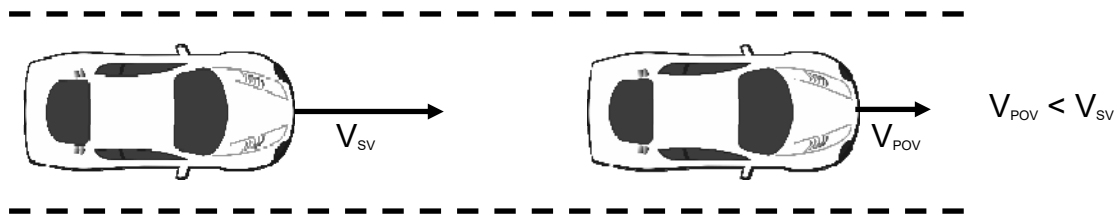


Figure 3. Depiction of Test 3

a. Alert Criteria

In order to pass the test, the FCW alert must be issued when TTC is at least 2.0 seconds. The TTC for this test, a prediction of the time it would take for the SV to collide with the POV, was calculated by considering the speeds of the SV and POV at the time of the FCW alert.

b. Procedure

Throughout the test, the POV was driven at a constant 20.0 mph (32.2 km/h) in the center of the lane of travel.

The SV was driven at 45.0 mph (72.4 km/h), in the center lane of travel, toward the slow-moving POV.

The test began when the headway from the SV to the POV was 329 ft (100 m) and ended when either of the following occurred:

- The required FCW alert occurred.
- The TTC to the POV fell to less than 90% of the minimum allowable range (i.e.,  $TT = 1.8$  sec) for the onset of the required FCW alert.

The SV driver then steered and/or braked to keep the SV from striking the POV.

For an individual test trial to be valid, the following was required throughout the test:

- The SV vehicle speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of 3 seconds prior to (1) the required FCW alert or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- Speed of the POV could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) during the test.
- The lateral distance between the centerline of the SV, relative to the centerline of the POV, in road coordinates, could not exceed 2.0 ft (0.6 m).
- The yaw rates of the SV and POV could not exceed  $\pm 1$  deg/sec during the test.
- SV driver could not apply any force to the brake pedal before (1) the required

FCW alert occurred or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.

Nominally, the Test 3 series was comprised of seven individual trials. The FCW system must satisfy the TTC alert criteria for at least five of the seven test trials.

## **B. Principal Other Vehicle**

The vehicle used as the Principal Other Vehicle (POV) was a 2006 Acura RL. This satisfied the test requirement that the POV be a mid-size sedan. The vehicle had a rear license plate in order to provide a suitable representative radar profile. Vehicle loading consisted of the driver plus equipment and instrumentation.

## **C. Automatic Braking System**

The POV was equipped with an automatic braking system, which was used in Test 2. The braking system consisted of the following components:

- High pressure nitrogen bottle, strapped to the front passenger seat, with regulator and pressure gauges
- Pneumatic piston-type actuator, with solenoid valve
- “Pickle” switch to activate brakes

## **D. Instrumentation**

Table 1 lists the sensors, signal conditioning, and data acquisition equipment used for these tests.

**Table 1. Test Instrumentation and Equipment**

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Tire Pressure Gauge	Vehicle Tire Pressure	0-100 psi 0-690 kPa	< 1% error between 20 and	Omega DPG8001	17042707002	By: DRI Date: 7/3/2019 Due: 7/3/2020
Platform Scales	Vehicle Total, Wheel, and Axle Load	2200 lb/platform 5338 N/	0.5% of applied load	Intercomp SWI	1110M206352	By: DRI Date: 1/6/2020 Due: 1/6/2021
Differential Global Positioning System	Position, Velocity	Latitude: ±90 deg Longitude: ±180 deg Altitude: 0-18 km Velocity: 0-1000 knots	Horizontal Position: ±1 cm Vertical Position: ±2 cm Velocity: 0.05 km/h	Trimble GPS Receiver, 5700 (base station and in-vehicle)	00440100989	NA
Multi-Axis Inertial Sensing System	Position; Longitudinal, Lateral, and Vertical Accels; Lateral, Longitudinal and Vertical Velocities; Roll, Pitch, Yaw Rates; Roll, Pitch, Yaw Angles	Accels ± 10g, Angular Rate ±100 deg/s, Angle >45 deg, Velocity >200 km/h	Accels .01g, Angular Rate 0.05 deg/s, Angle 0.05 deg, Velocity 0.1 km/h	Oxford Inertial +		By: Oxford Technical Solutions
					2258	Date: 5/3/2019 Due: 5/3/2021
					2182	Date: 9/16/2019 Due: 9/16/2021
Real-Time Calculation of Position and Velocity Relative to Lane Markings (LDW) and POV (FCW)	Distance and Velocity to lane markings (LDW) and POV (FCW)	Lateral Lane Dist: ±30 m Lateral Lane Velocity: ±20 m/sec Longitudinal Range to POV: ±200 m Longitudinal Range Rate: ±50 m/sec	Lateral Distance to Lane Marking: ±2 cm Lateral Velocity to Lane Marking: ±0.02m/sec Longitudinal Range: ±3 cm Longitudinal Range Rate: ±0.02 m/sec	Oxford Technical Solutions (OXTS), RT-Range	97	NA



**Table 1. Test Instrumentation and Equipment (continued)**

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Microphone	Sound (to measure time at auditory alert)	Frequency Response: 80 Hz – 20 kHz	Signal-to-noise: 64 dB, 1 kHz at 1 Pa	Audio-Technica AT899	NA	NA
Light Sensor	Light intensity (to measure time at visual alert)	Spectral Bandwidth: 440-800 nm	Rise time < 10 msec	DRI designed and developed Light Sensor	NA	NA
Accelerometer	Acceleration (to measure time at haptic alert)	±5g	≤ 3% of full range	Silicon Designs, 2210-005	NA	NA
Coordinate Measurement Machine	Inertial Sensing System Coordinates	0-8 ft 0-2.4 m	±.0020 in. ±.051 mm (Single point articulation accuracy)	Faro Arm, Fusion	UO8-05-08-06636	By: DRI Date: 1/6/2020 Due: 1/6/2021
Type	Description			Mfr, Model	Serial Number	
Data Acquisition System	Data acquisition is achieved using a dSPACE MicroAutoBox II. Data from the Oxford IMU, including Longitudinal, Lateral, and Vertical Acceleration, Roll, Yaw, and Pitch Rate, Forward and Lateral Velocity, Roll and Pitch Angle are sent over Ethernet to the MicroAutoBox. The Oxford IMUs are calibrated per the manufacturer's recommended schedule (listed above).			dSPACE Micro-Autobox II 1401/1513		
				Base Board	549068	
				I/O Board	588523	

For systems that implement audible or haptic alerts, part of the pre-test instrumentation verification process is to determine the tonal frequency of the audible warning or the vibration frequency of the tactile warning through use of the PSD (Power Spectral Density) function in Matlab. This is accomplished in order to identify the center frequency around which a band-pass filter is applied to subsequent audible or tactile warning data so that the beginning of such warnings can be programmatically determined. The band-pass filter used for these warning signal types is a phaseless, forward-reverse pass, elliptical (Cauer) digital filter, with filter parameters as listed in Table 2.

**Table 2. Audible and Tactile Warning Filter Parameters**

<b>Warning Type</b>	<b>Filter Order</b>	<b>Peak-to-Peak Ripple</b>	<b>Minimum Stop Band Attenuation</b>	<b>Passband Frequency Range</b>
Audible	5 <sup>th</sup>	3 dB	60 dB	Identified Center Frequency $\pm$ 5%
Tactile	5 <sup>th</sup>	3 dB	60 dB	Identified Center Frequency $\pm$ 20%

## APPENDIX A

### Photographs

## LIST OF FIGURES

	Page
Figure A1. Front View of Subject Vehicle .....	A-3
Figure A2. Rear View of Subject Vehicle .....	A-4
Figure A3. Window Sticker (Monroney Label).....	A-5
Figure A4. Vehicle Certification Label .....	A-6
Figure A5. Tire Placard .....	A-7
Figure A6. Front View of Principal Other Vehicle .....	A-8
Figure A7. Rear View of Principal Other Vehicle.....	A-9
Figure A8. DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle.....	A-10
Figure A9. Sensor for Detecting Visual Alerts .....	A-11
Figure A10. Sensor for Detecting Auditory Alerts.....	A-12
Figure A11. Computer Installed in Subject Vehicle .....	A-13
Figure A12. Brake Actuation System Installed in Principal Other Vehicle .....	A-14
Figure A13. System Setting Menus.....	A-15
Figure A14. Controls for Changing System Setup Parameters .....	A-16
Figure A15. Visual Alert .....	A-17



Figure A1. Front View of Subject Vehicle



Figure A2. Rear View of Subject Vehicle





DESC: **COROLLA** LE  
 VIN: **JTDEPRAE1LJ11**  
 YR/MDL: 2020/1852C  
 CLR: BLACK SAND PEARL/FB20 (0209/20)  
 FINAL ASSEMBLY POINT: TOYOTA, AICHI, JAPAN

**GOVERNMENT 5-STAR SAFETY RATINGS**

**Overall Vehicle Score** ★★★★★  
 Based on the combined ratings of frontal, side and rollover.  
 Should ONLY be compared to other vehicles of similar size and weight.

**Frontal Crash** Driver Passenger ★★★★★  
 Based on the risk of injury in a frontal impact.  
 Should ONLY be compared to other vehicles of similar size and weight.

**Side Crash** Front seat Rear seat ★★★★★  
 Based on the risk of injury in a side impact.

**Rollover** ★★★★★  
 Based on the risk of rollover in a single-vehicle crash.

Star ratings range from 1 to 5 stars (★★★★★) with 5 being the highest.  
 Source: National Highway Traffic Safety Administration (NHTSA)  
[www.safercar.gov](http://www.safercar.gov) or 1-888-327-4236

**STANDARD EQUIPMENT**

- MECHANICAL & PERFORMANCE**
- 1.8L 4-cyl DOHC 16-Valve Engine with Valvetronic Technology, CVT
  - 16-in. Wide Vent Steel Wheels And P205/55R16 Tires
  - Front & Rear Disc Brakes
- SAFETY & CONVENIENCE**
- Toyota Safety Sense 2.0: Pre-Collision Sys w/Pedestrian Detection, Full-Speed Range Dynamic Radar Cruise Control, Lane Departure Alert w/Steering Assist, Lane Tracing Assist, Automatic High Beams, Road Sign Assist
  - Electronic Parking Brake (EPB)
  - Star Safety System: VSC, TRAC, ABS, Elect Brake-Force Distribution, Brake Assist(BA) & Smart Stop Technology (SST)
  - 8 Airbags: Dr & Fr Pass Adv Airbag Sys, Dr & Fr Pass Seat-Mounted Side Airbags, Dr Knee Airbag, Pass Seat Cushion Airbag
  - Front & Rear Side Curtain Airbags
  - LATCH (Lwr Anchors&Tethers for Children) for Outboard Rear Seating Positions Only
  - Whiplash-Injury Lessening Front Seats
  - Remote Keyless Entry System
  - Integrated Backup Camera
  - Fr & Rr Pwr Windows w/1-tch auto up/down
- EXTERIOR**
- Black Front Grille w/Sport Mesh Insert
  - Bi-LED Headlights with DRLs
  - LED tail and stoplights
  - Color-Keyed Heated Power Outside Mirrors
  - Color-Keyed Roof-Mntd Shark-Fin Antenna
- INTERIOR**
- Fabric 6-Way Adjustable Driver seat, 4-Way Adjustable Front Passenger seat
  - Audio, 8" Touch Screen, 6 Speakers, Hands-Free Bluetooth, USB Media Port, 1 USB Charge Port
  - Siri Eyes Free, Apple CarPlay Compatible
  - 60/40 split fold-down rear seat
  - 4.2-in. Color TFT Multi-Info Display
  - Auto Climate Control w/ Push Btn Cntrls
  - \*\*\*Full Tank of Gas\*\*\*

MANUFACTURER'S SUGGESTED RETAIL PRICE **\$20,050.00**

**OPTIONAL EQUIPMENT**

FE	50 State Emissions	
CF	Carpet Mat Package	249.00
D5	Door Edge Guards	125.00
EF	Rear Bumper Protector	79.00

**EPA DOT Fuel Economy and Environment**

**Fuel Economy**

**33 MPG** combined city/hwy  
 30 city 38 highway  
 3.0 gallons per 100 miles

Compacts range from 14 to 113 MPG  
 The best vehicle rates 136 MPG.

**You save \$1,250**  
 in fuel costs over 5 years compared to the average new vehicle.

**Annual fuel cost \$1,250**

**Fuel Economy & Greenhouse Gas Rating** (tailpipe only) **7**

**Smog Rating** (tailpipe only) **5**

Actual results will vary for many reasons, including driving conditions and how you drive and maintain your vehicle. The average new vehicle gets 27 MPG and costs \$7,500 to fuel over 5 years. Cost estimates are based on 15,000 miles per year at \$2.70 per gallon. MPGe is miles per gasoline gallon equivalent. Vehicle emissions are a significant cause of climate change and smog.

**fuel economy.gov**  
 Calculate personalized estimates and compare vehicles

Smartphone QR Code

DELIVERY PROCESSING AND HANDLING FEE 955.00

**TOTAL \$21,458.00**

The New Vehicle Limited Warranty provides 3-year/36,000 mile basic coverage, 5-year/60,000 mile powertrain coverage, plus 5-year/unlimited mile corrosion perforation coverage. See Warranty and Maintenance Guide for details. An extended service contract may be available for the vehicle. Manufacturer's suggested retail price includes manufacturer's recommended pre-delivery service. Gasoline, license and title fees, applicable federal, state and local taxes and dealer and distributor installed options and accessories are not included in the manufacturer's suggested retail price. ToyotaCare, which covers normal factory scheduled maintenance for two years or 25,000 miles, whichever occurs first, is included as part of the sales price of the vehicle for qualifying buyers. See participating dealer for eligibility and coverage details.



Figure A3. Window Sticker (Monroney Label)





Figure A4. Vehicle Certification Label





### TIRE AND LOADING INFORMATION

SEATING CAPACITY: TOTAL 5  
FRONT 2: REAR 3

The combined weight of occupants and cargo should never exceed 375 kg or 825 lbs.

SEE OWNER'S  
MANUAL FOR  
ADDITIONAL  
INFORMATION.

TIRE	SIZE	COLD TIRE PRESSURE
FRONT	205/55R16	240kPa, 35PSI
REAR	205/55R16	230kPa, 33PSI
SPARE	T125/70D17	420kPa, 60PSI

### RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT

NOMBRE DE PLACES: TOTAL 5  
AVANT 2: ARRIÈRE 3

Le poids total des occupants et du chargement ne doit jamais dépasser 375 kg ou 825 lb.

PNEU	DIMENSIONS	PRESSION DES PNEUS À FROID
AVANT	205/55R16	240kPa, 35PSI
ARRIÈRE	205/55R16	230kPa, 33PSI
DE SECOURS	T125/70D17	420kPa, 60PSI

VOIR LE MANUEL  
DE L'USAGER  
POUR PLUS DE  
RENSEIGNEMENTS.

SG<sup>12S00</sup>

Figure A5. Tire Placard





Figure A6. Front View of Principal Other Vehicle





Figure A7. Rear View of Principal Other Vehicle



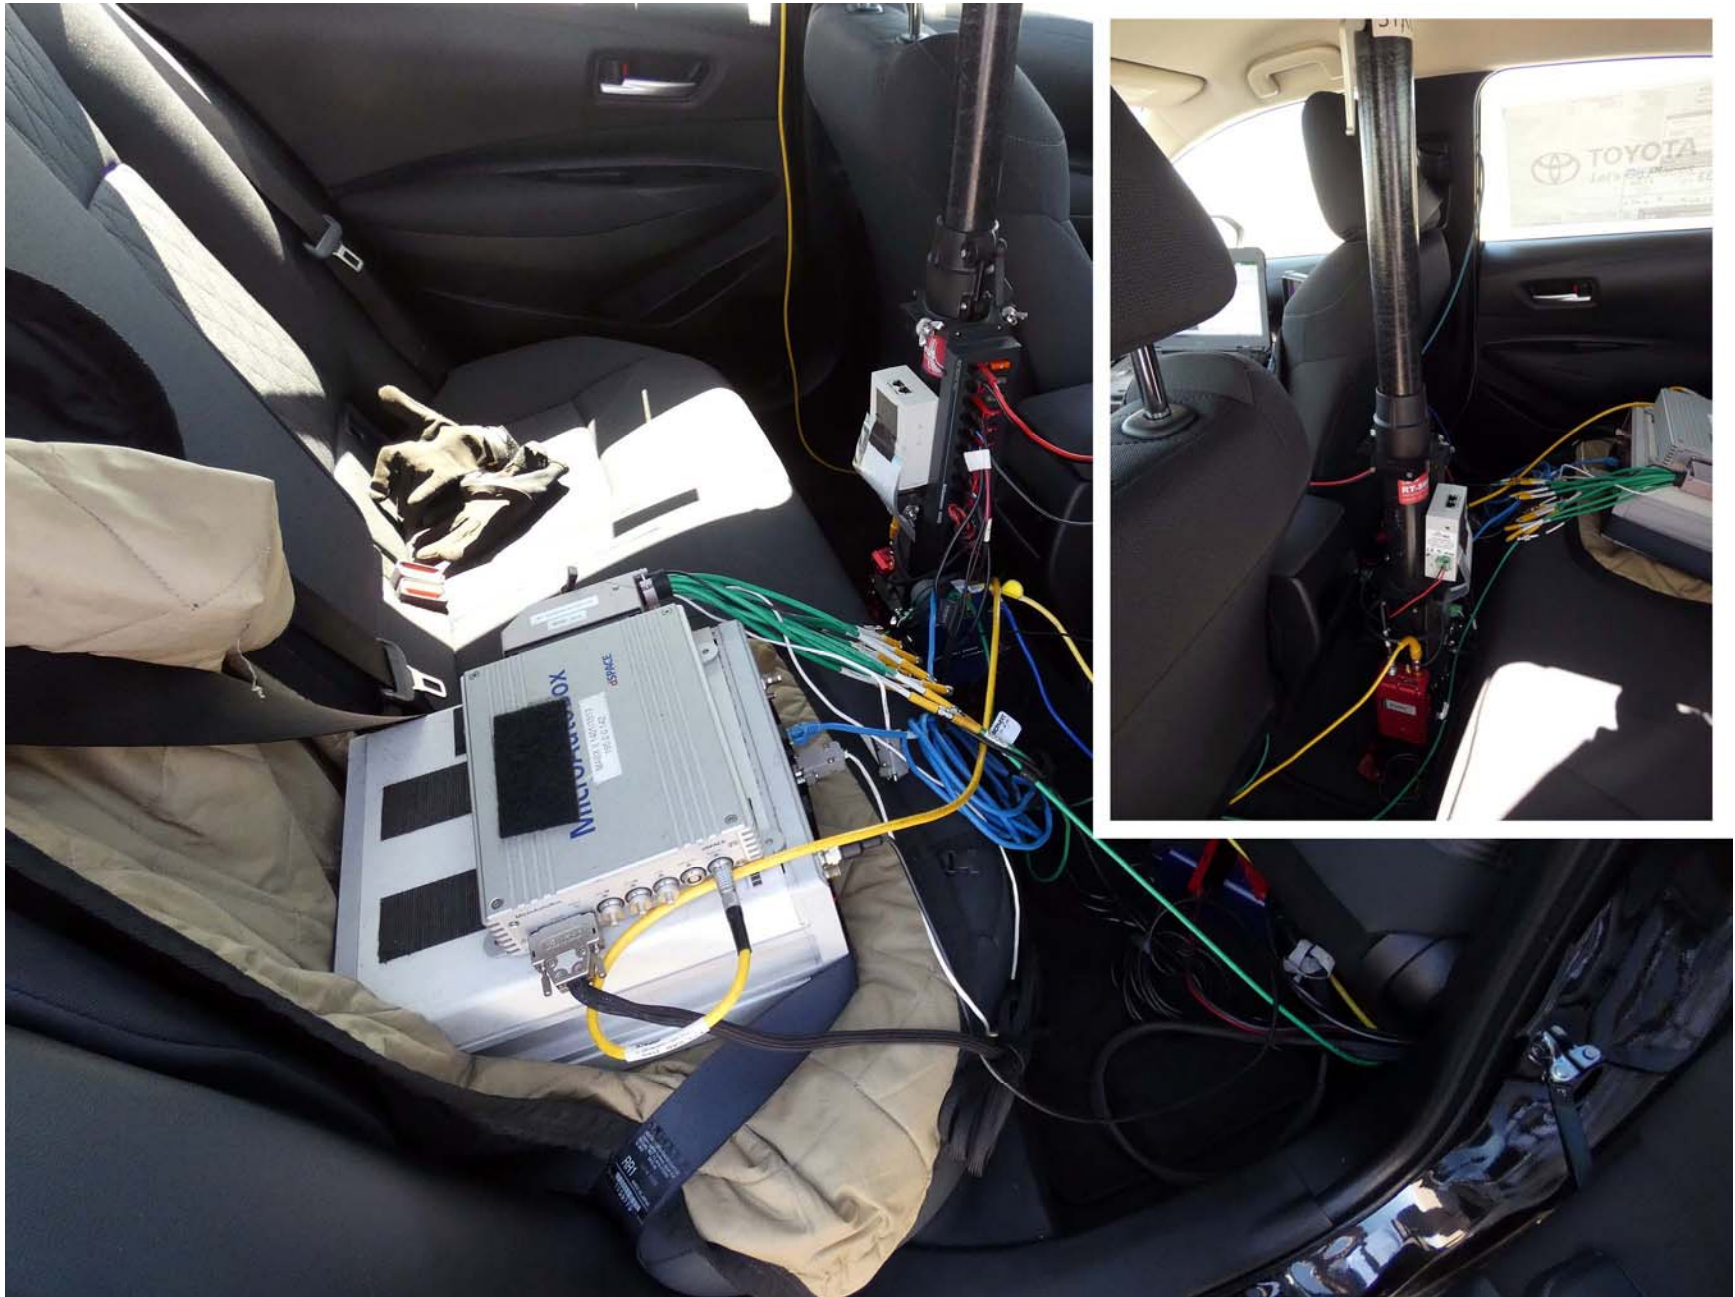


Figure A8. DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle



Figure A9. Sensor for Detecting Visual Alerts





Figure A10. Sensor for Detecting Auditory Alerts



Figure A11. Computer Installed in Subject Vehicle



Figure A12. Brake Actuation System Installed in Principal Other Vehicle





Figure A13. System Setting Menus





Figure A14. Controls for Changing System Setup Parameters

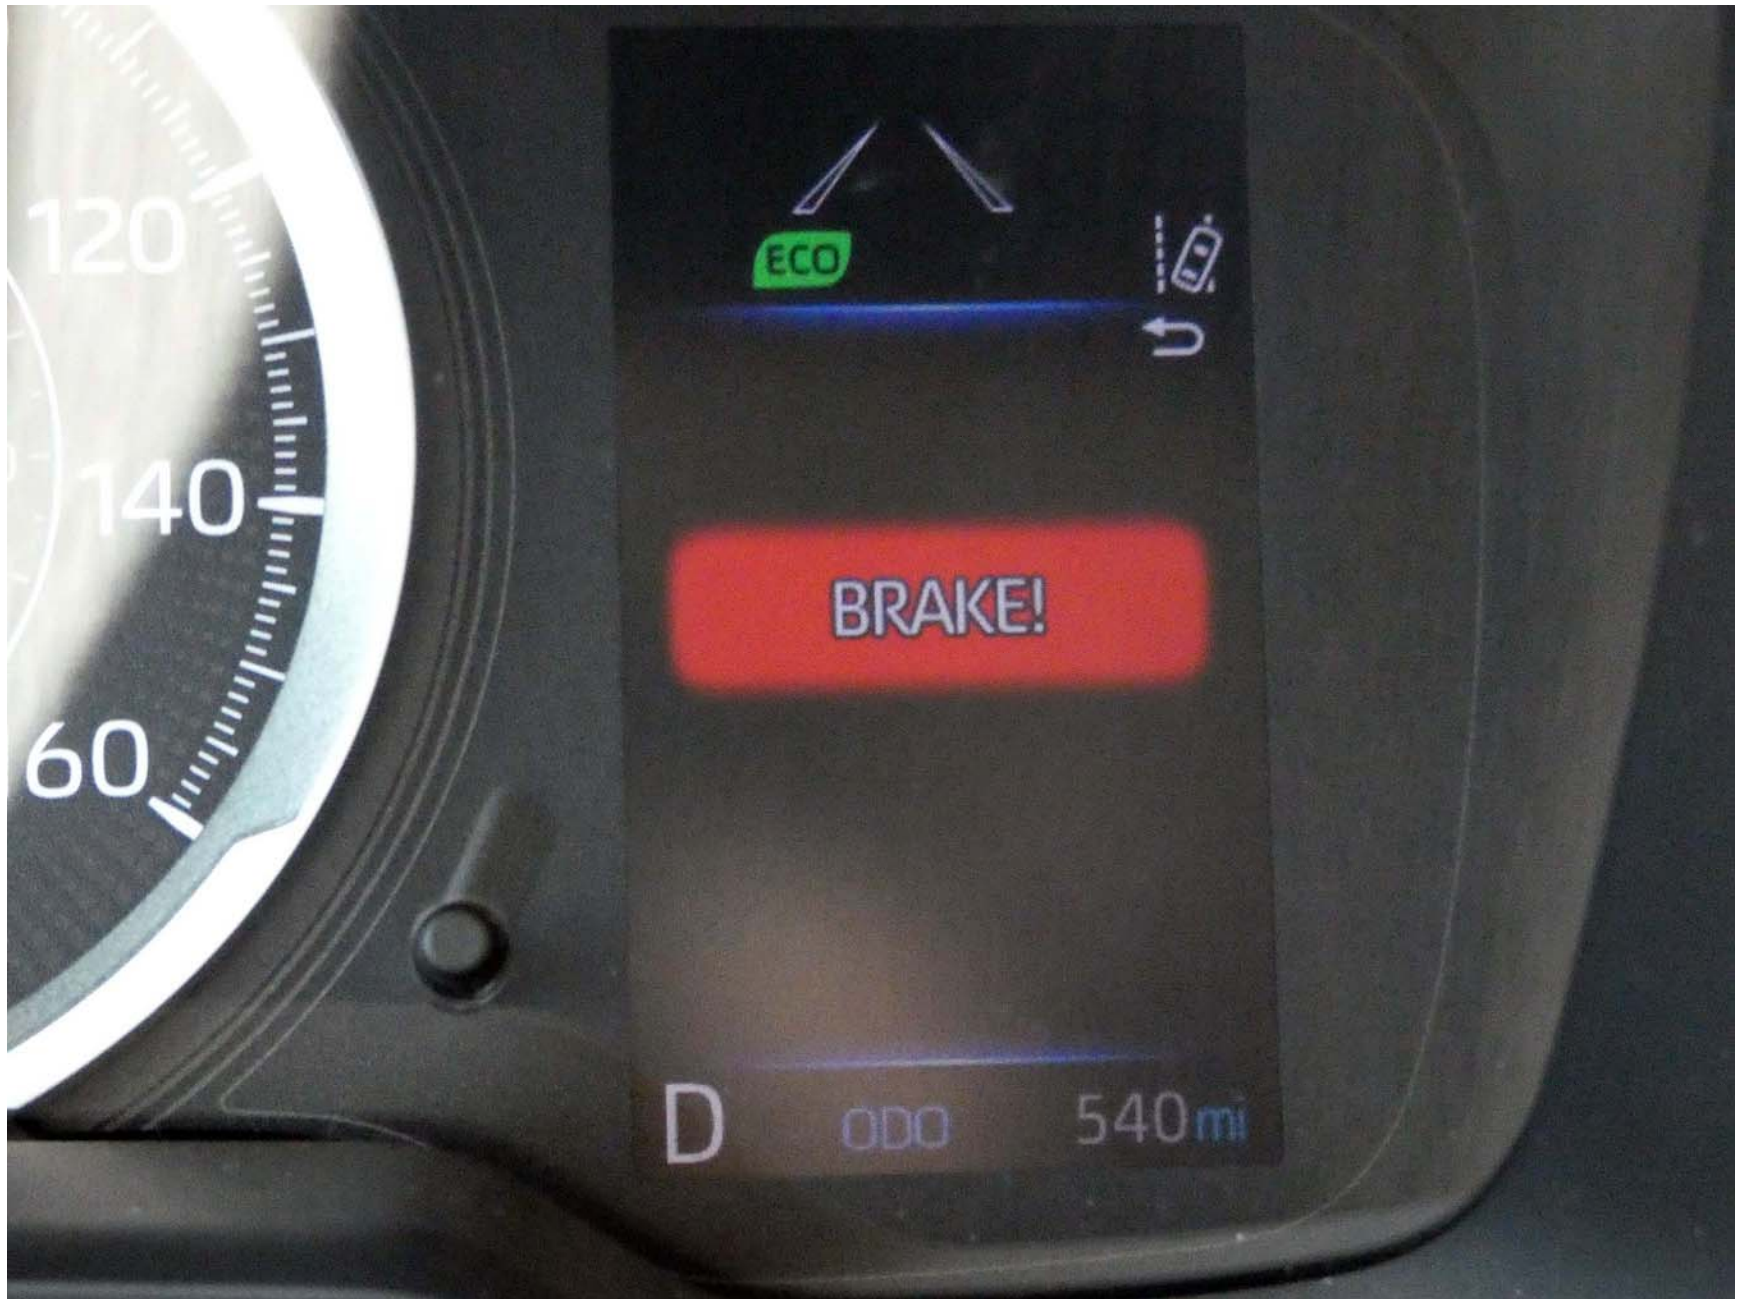



Figure A15. Visual Alert

## APPENDIX B

Excerpts from Owner's Manual



**Instrument panel**

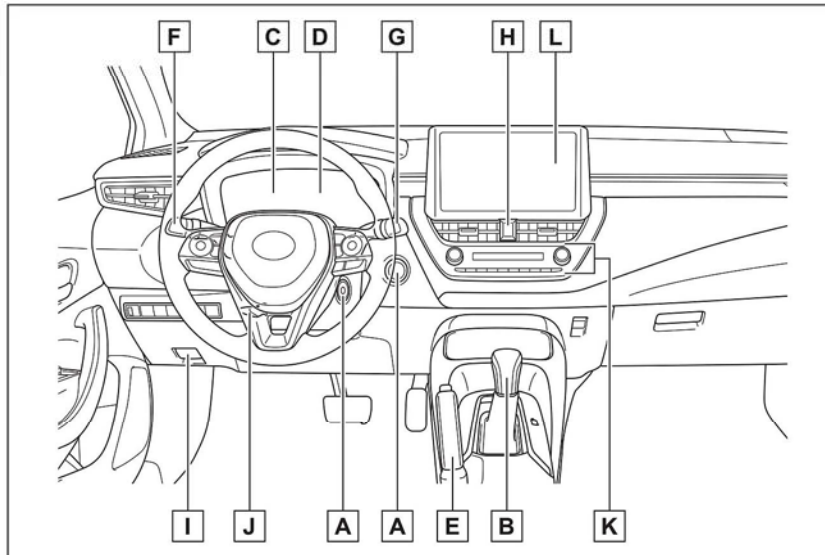

- A Engine switch** ..... **P.147, 148**
  - Starting the engine/changing the positions<sup>\*1</sup> ..... P.147
  - Starting the engine/changing the modes<sup>\*2</sup> ..... P.148
  - Emergency stop of the engine ..... P.472
  - When the engine will not start ..... P.511
  - Warning messages ..... P.490
- B Shift lever** ..... **P.153, 155, 160**
  - Changing the shift position ..... P.153, 155, 160
  - Precautions for towing ..... P.475
  - When the shift lever does not move<sup>\*3</sup> ..... P.154
- C Meters** ..... **P.77, 81**
  - Reading the meters/adjusting the instrument panel light . P.77, 81
  - Warning lights/indicator lights ..... P.72
  - When a warning light turns on ..... P.481
- D Multi-information display** ..... **P.86**
  - Display ..... P.86

▶ 7-inch display (when digital speedometer is displayed)



















2











Vehicle status information and indicators

### Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.

-  Brake system warning light\*<sup>1</sup> (→P.481)
-  Brake system warning light\*<sup>1</sup> (→P.481) (Canada)
-  Brake system warning light\*<sup>1</sup> (→P.481) (Yellow)
-  High coolant temperature warning light\*<sup>2</sup> (→P.481)
-  Charging system warning light\*<sup>1</sup> (→P.482)
-  Low engine oil pressure warning light\*<sup>2</sup> (→P.482)
-  Malfunction indicator lamp\*<sup>1</sup> (→P.482) (U.S.A.)

-  Malfunction indicator lamp\*<sup>1</sup> (→P.482) (Canada)
-  SRS warning light\*<sup>1</sup> (→P.482)
-  ABS warning light\*<sup>1</sup> (→P.483) (U.S.A.)
-  ABS warning light\*<sup>1</sup> (→P.483) (Canada)
-  Brake Override System warning light/Drive-Start Control warning light\*<sup>2</sup> (→P.483)
-  Electric power steering system warning light\*<sup>1</sup> (Red) (→P.484)
-  Electric power steering system warning light\*<sup>1</sup> (Yellow) (→P.484)
-  Low fuel level warning light (→P.484)
-  Driver's and front passenger's seat belt reminder light (→P.484)

-  Rear passengers' seat belt reminder lights (→P.485)
-  Tire pressure warning light\*<sup>1</sup> (if equipped) (→P.485)
-  LTA indicator (if equipped) (→P.485)
-  LDA indicator (if equipped) (→P.485)
-  PCS warning light\*<sup>1</sup> (Flashes or illuminates) (→P.486)
-  Slip indicator\*<sup>1</sup> (→P.486)
-  Parking brake indicator (Flashes) (→P.486) (U.S.A.)
-  Parking brake indicator (Flashes) (→P.486) (Canada)
-  Brake hold operated indicator\*<sup>1</sup> (if equipped) (Flashes) (→P.487)
-  iMT indicator\*<sup>1</sup> (if equipped) (→P.487) (Orange)

\*<sup>1</sup>: These lights come on when the engine switch is turned to ON to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by your Toyota dealer.

\*<sup>2</sup>: This light illuminates on the multi-information display.










**WARNING**

**■ If a safety system warning light does not come on**

Should a safety system light such as the ABS and SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Toyota dealer immediately if this occurs.

**Indicators**


The indicators inform the driver of the operating state of the vehicle's various systems.

-  Turn signal indicator (→P.162)
-  Headlight indicator (→P.170) (U.S.A.)
-  Tail light indicator (→P.170) (Canada)
-  Headlight high beam indicator (→P.172)
-  Automatic High Beam indicator (→P.173)
-  PCS warning light\*<sup>1, 2</sup> (→P.189)
-  Cruise control indicator (→P.213, 223)
-  Dynamic radar cruise control indicator (→P.213, 223)
-  Cruise control "SET" indicator (→P.213, 223)

## Gauges and meters (4.2-inch display)

### Meter display

#### ■ Locations of gauges and meters

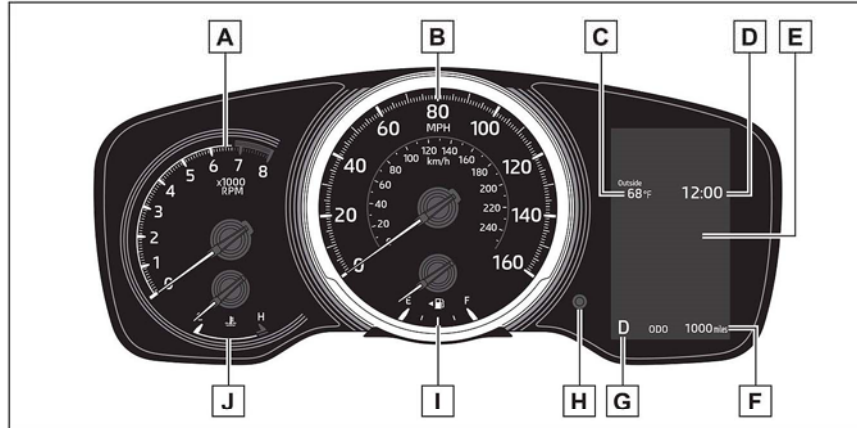

The units of measure may differ depending on the intended destination of the vehicle.

**A** Tachometer

Displays the engine speed in revolutions per minute

**B** Speedometer

**C** Outside temperature

Displays the outside temperature within the range of -40°F (-40°C) to 122°F (50°C)

**D** Clock (→P.79)

**E** Multi-information display

Presents the driver with a variety of vehicle data (→P.86)

Displays warning messages if a malfunction occurs (→P.490)

**F** Odometer and trip meter display (→P.78)

**G** Shift position indicator (→P.153)

**H** Display change button (→P.78)

**I** Fuel gauge

Displays the quantity of fuel remaining in the tank

**J** Engine coolant temperature gauge

Displays the engine coolant temperature



## Toyota Safety Sense 2.0

The Toyota Safety Sense 2.0 consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

### Driving assist system

- **PCS (Pre-Collision System)**

→P.187

- **LTA (Lane Tracing Assist)\***

→P.195

\*: If equipped

- **LDA (Lane Departure Alert with steering control)\***

→P.205

\*: If equipped

- **Automatic High Beam**

→P.173

- **RSA (Road Sign Assist)\***

→P.233

\*: If equipped

- **Dynamic radar cruise control with full-speed range\***

→P.213

\*: If equipped

- **Dynamic radar cruise control\***

→P.223

\*: If equipped

### ⚠ WARNING


#### ■ Toyota Safety Sense 2.0

The Toyota Safety Sense 2.0 is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

### Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

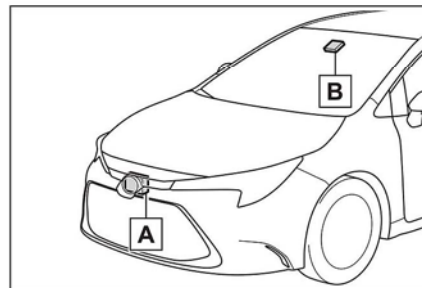

**A** Radar sensor

**B** Front camera


**⚠ WARNING**

**■ To avoid malfunction of the radar sensor**

Observe the following precautions. Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the radar sensor and the grille cover clean at all times.

▶ 1.8 L 4-cylinder (2ZR-FAE) engine

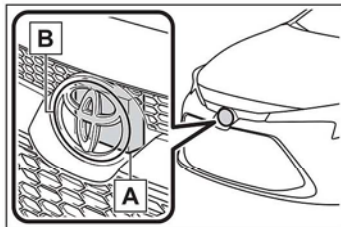


**A** Radar sensor

**B** Grille cover

If the front of the radar sensor or the front or back of the grille cover is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and grille cover with a soft cloth to avoid damaging them.

▶ 2.0 L 4-cylinder (M20A-FKS) engine

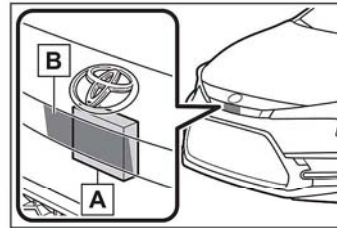

**A** Radar sensor

**B** Grille cover

If the front of the radar sensor or the front or back of the grille cover is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and grille cover with a soft cloth to avoid damaging them.

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, grille cover or surrounding area.
- Do not subject the radar sensor or its surrounding area to a strong impact. If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by your Toyota dealer.
- Do not disassemble the radar sensor.
- Do not modify or paint the radar sensor or grille cover.
- If the radar sensor, front grille, or front bumper needs to be removed and installed, or replaced, contact your Toyota dealer.




**WARNING**

■ **To avoid malfunction of the front camera**

Observe the following precautions. Otherwise, the front camera may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
- If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.
- If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera.
- If the inner side of the windshield where the front camera is installed is dirty, contact your Toyota dealer.

- Do not attach objects, such as stickers, transparent stickers, etc., to the outer side of the windshield in front of the front camera (shaded area in the illustration).

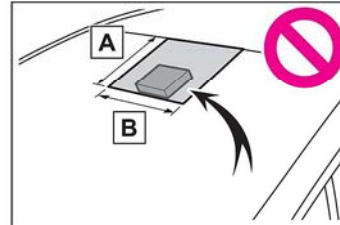

- A** From the top of the windshield to approximately 0.4 in. (1 cm) below the bottom of the front camera
- B** Approximately 7.9 in. (20 cm) (Approximately 4.0 in. [10 cm] to the right and left from the center of the front camera)

- If the part of the windshield in front of the front camera is fogged up or covered with condensation, or ice, use the windshield defogger to remove the fog, condensation, or ice. (→P.387, 392)
- If water droplets cannot be properly removed from the area of the windshield in front of the front camera by the windshield wipers, replace the wiper insert or wiper blade.

If the wiper inserts or wiper blades need to be replaced, contact your Toyota dealer.

- Do not attach window tint to the windshield.
- Replace the windshield if it is damaged or cracked. If the windshield needs to be replaced, contact your Toyota dealer.

**WARNING**

- Do not allow liquids to contact the front camera.
- Do not allow bright lights to shine into the front camera.
- Do not dirty or damage the front camera.  
When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Also, do not touch the lens.  
If the lens is dirty or damaged, contact your Toyota dealer.
- Do not subject the front camera to a strong impact.
- Do not change the installation position or direction of the front camera or remove it.
- Do not disassemble the front camera.
- Do not modify any components of the vehicle around the front camera (inside rear view mirror, etc.) or ceiling.
- Do not attach any accessories to the hood, front grille or front bumper that may obstruct the front camera. Contact your Toyota dealer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera.
- Do not modify the headlights or other lights.

**NOTE:**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps.

**■ If a warning message is displayed on the multi-information display**

A system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, perform the actions specified in the table. When the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact your Toyota dealer.

Situation	Actions
When the area around a sensor is covered with dirt, moisture (fogged up, covered with condensation, ice, etc.), or other foreign matter	To clean the part of the windshield in front of the front camera, use the windshield wipers or the windshield defogger of the air conditioning system (→P.387, 392).

Situation	Actions
<p>When the temperature around the front camera is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment</p>	<p>If the front camera is hot, such as after the vehicle had been parked in the sun, use the air conditioning system to decrease the temperature around the front camera.</p> <p>If a sunshade was used when the vehicle was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high.</p> <p>If the front camera is cold, such after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera.</p>
<p>The area in front of the front camera is obstructed, such as when the hood is open or a sticker is attached to the part of the windshield in front of the front camera.</p>	<p>Close the hood, remove the sticker, etc. to clear the obstruction.</p>

● In the following situations, if the situation has changed (or the vehicle has been driven for some time) and the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact your Toyota dealer.

- When the temperature around the radar sensor is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment
- When the front camera cannot detect objects in front of the vehicle, such as when driving in the dark, snow, or fog, or when bright lights are shining into the front camera



## PCS (Pre-Collision System)

The pre-collision system uses a radar sensor and front camera to detect objects (→P.190) in front of the vehicle. When the system determines that the possibility of a frontal collision with an object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with an object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P.189)

## Detectable objects


The system can detect the following:

- Vehicles
- Bicyclists
- Pedestrians

## System functions

### ■ Pre-collision warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

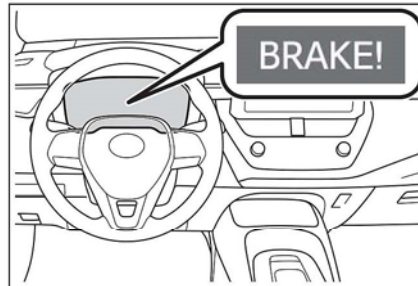

### ■ Pre-collision brake assist

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

### ■ Pre-collision braking

If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.



**WARNING**

**■ Limitations of the pre-collision system**

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.  
Do not use the pre-collision system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.  
Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
- Conditions under which the system may operate even if there is no possibility of a collision:  
→P.191
- Conditions under which the system may not operate properly:  
→P.192
- Do not attempt to test the operation of the pre-collision system yourself.  
Depending on the objects used for testing (dummies, cardboard objects imitating detectable objects, etc.), the system may not operate properly, possibly leading to an accident.

**■ Pre-collision braking**

- When the pre-collision braking function is operating, a large amount of braking force will be applied.
- If the vehicle is stopped by the operation of the pre-collision braking function, the pre-collision braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- In some situations, while the pre-collision braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision braking function.

**■ When to disable the pre-collision system**

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:


- When the vehicle is being towed



- ⚠ WARNING**
- When your vehicle is towing another vehicle
  - When transporting the vehicle via truck, boat, train or similar means of transportation
  - When the vehicle is raised on a lift with the engine running and the tires are allowed to rotate freely
  - When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
  - When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
  - If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
  - When the vehicle is driven in a sporty manner or off-road
  - When the tires are not properly inflated
  - When the tires are very worn
  - When tires of a size other than specified are installed
  - When tire chains are installed
  - When a compact spare tire or an emergency tire puncture repair kit is used
  - If equipment (snow plow, etc.) that may obstruct the radar sensor or front camera is temporarily installed to the vehicle


**Changing settings of the pre-collision system**

■ **Enabling/disabling the pre-collision system**


The pre-collision system can be enabled/disabled on  (→P.548) of the multi-information display.

The system is automatically enabled each time the engine switch is turned to ON.

If the system is disabled, the PCS warning light will turn on and a message will be displayed on the multi-information display.

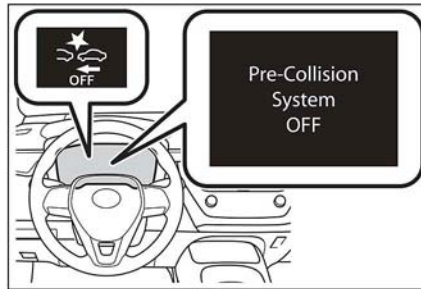


■ **Changing the pre-collision warning timing**

The pre-collision warning timing can be changed on  (→P.548) of the multi-information display.

The warning timing setting is retained when the engine switch is turned off. However, if the pre-collision system is disabled and re-enabled, the operation timing will return to the default setting (middle).

4

Driving

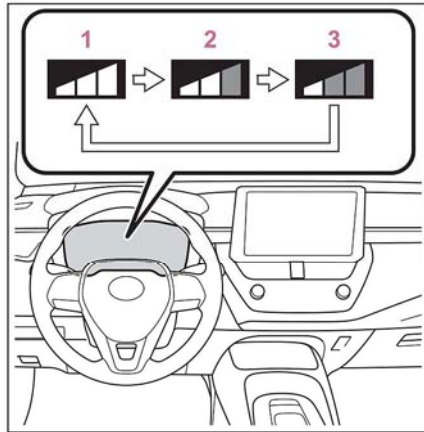

- 2 Middle  
This is the default setting.
- 3 Late

1 Early

■ Operational conditions

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high. Each function is operational at the following speed

● Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 7 to 110 mph (10 to 180 km/h)	Approx. 7 to 110 mph (10 to 180 km/h)
Bicyclists and pedestrians	Approx. 7 to 50 mph (10 to 80 km/h)	Approx. 7 to 50 mph (10 to 80 km/h)

● Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 20 to 110 mph (30 to 180 km/h)	Approx. 20 to 110 mph (30 to 180 km/h)
Bicyclists and pedestrians	Approx. 20 to 50 mph (30 to 80 km/h)	Approx. 20 to 50 mph (30 to 80 km/h)

● Pre-collision braking


Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 7 to 110 mph (10 to 180 km/h)	Approx. 7 to 110 mph (10 to 180 km/h)
Bicyclists and pedestrians	Approx. 7 to 50 mph (10 to 80 km/h)	Approx. 7 to 50 mph (10 to 80 km/h)

The system may not operate in the following situations:

- If a battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- When the VSC OFF indicator is illuminated (only the pre-collision warning function will be operational)

■ **Object detection function**

The system detects objects based on their size, profile, motion, etc. However, an object may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P.192)  
The illustration shows an image of detectable objects.

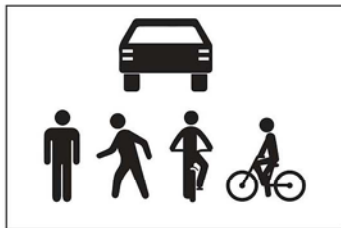


■ **Cancellation of the pre-collision braking**

If either of the following occur while the pre-collision braking function is operating, it will be canceled:


- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.

■ **Conditions under which the system may operate even if there is no possibility of a collision**


- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.
  - When passing a detectable object, etc.
  - When changing lanes while overtaking a detectable object, etc.
  - When approaching a detectable object in an adjacent lane or on the roadside, such as when changing the course of travel or driving on a winding road

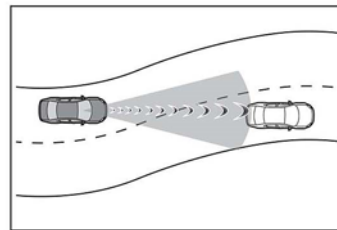


- When rapidly closing on a detectable object, etc.
- When approaching objects on the roadside, such as detectable objects, guardrails, utility poles, trees, or walls
- When there is a detectable object or other object by the roadside at the entrance of a curve

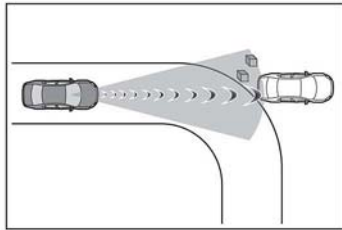

- When there are patterns or paint in front of your vehicle that may be mistaken for a detectable object
- When the front of your vehicle is hit by water, snow, dust, etc.
- When overtaking a detectable object that is changing lanes or making a right/left turn

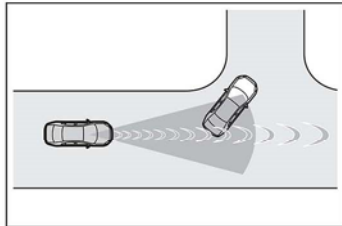


- When passing a detectable object in an oncoming lane that is stopped to make a right/left turn

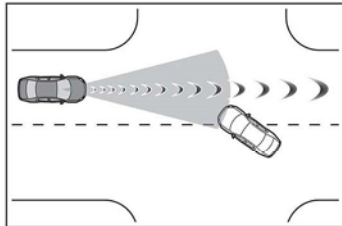


- When a detectable object approaches very close and then stops before entering the path of your vehicle
- If the front of your vehicle is raised or lowered, such as when on an uneven or undulating road surface
- When driving on a road surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a metal object (manhole cover, steel plate, etc.), steps, or a protrusion in front of your vehicle
- When passing under an object

(road sign, billboard, etc.)

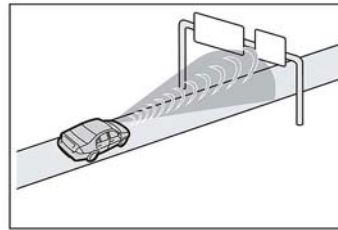

- When approaching an electric toll gate barrier, parking area barrier, or other barrier that opens and closes
- When using an automatic car wash
- When driving through or under objects that may contact your vehicle, such as thick grass, tree branches, or a banner

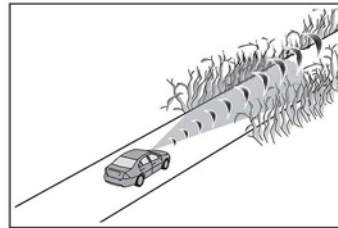

- When driving through steam or smoke
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present


■ **Situations in which the system may not operate properly**

- In some situations such as the following, an object may not be detected by the radar sensor and front camera, preventing the system from operating properly:
  - When a detectable object is approaching your vehicle
  - When your vehicle or a detectable object is wobbling
  - If a detectable object makes an abrupt maneuver (such as sudden




swerving, acceleration or deceleration)

- When your vehicle approaches a detectable object rapidly
- When a detectable object is not directly in front of your vehicle

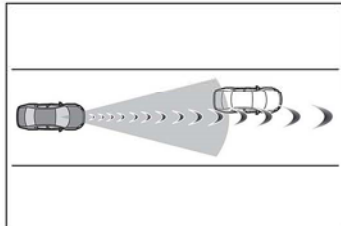


- When a detectable object is near a wall, fence, guardrail, manhole cover, vehicle, steel plate on the road, etc.
- When a detectable object is under a structure
- When part of a detectable object is hidden by an object, such as large baggage, an umbrella, or guardrail
- When multiple detectable objects are close together
- If the sun or other light is shining directly on a detectable object
- When a detectable object is a shade of white and looks extremely bright
- When a detectable object appears to be nearly the same color or brightness as its surroundings
- If a detectable object cuts or suddenly emerges in front of your vehicle
- When the front of your vehicle is hit by water, snow, dust, etc.
- When a very bright light ahead, such as the sun or the headlights of oncoming traffic, shines directly into the front camera
- When approaching the side or front of a vehicle ahead
- If a vehicle ahead is a motorcycle
- If a vehicle ahead is narrow, such as a personal mobility vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low

rear end, such as a low bed trailer

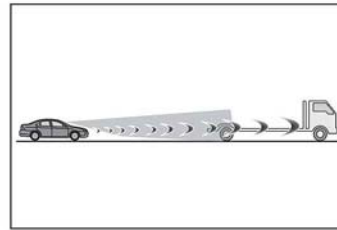

- If a vehicle ahead has extremely high ground clearance

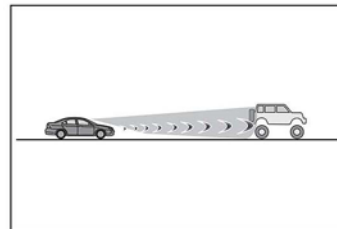

- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If a vehicle ahead is a child sized bicycle, a bicycle that is carrying a large load, a bicycle ridden by more than one person, or a uniquely shaped bicycle (bicycle with a child seat, tandem bicycle, etc.)
- If a pedestrian/or the riding height of a bicyclist ahead is shorter than approximately 3.2 ft. (1 m) or taller than approximately 6.5 ft. (2 m)
- If a pedestrian/bicyclist is wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure
- If a pedestrian is bending forward or squatting or bicyclist is bending forward
- If a pedestrian/bicyclist is moving fast
- If a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm




## 194 4-5. Using the driving support systems

- When driving through steam or smoke
  - When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel, making a detectable object appear to be nearly the same color as its surroundings
  - When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
  - After the engine has started the vehicle has not been driven for a certain amount of time
  - While making a left/right turn and for a few seconds after making a left/right turn
  - While driving on a curve and for a few seconds after driving on a curve
  - If your vehicle is skidding
  - If the front of the vehicle is raised or lowered
- sively worn, improper tire inflation pressure, etc.)
- When the vehicle is being driven on a gravel road or other slippery surface

### ■ If VSC is disabled

- If VSC is disabled (→P.252), the pre-collision brake assist and pre-collision braking functions are also disabled.
- The PCS warning light will turn on and “VSC Turned OFF Pre-Collision Brake System Unavailable” will be displayed on the multi-information display.

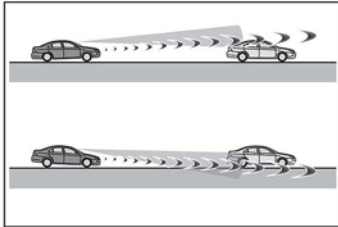

- If the wheels are misaligned
- If a wiper blade is blocking the front camera
- The vehicle is being driven at extremely high speeds
- When driving on a hill
- If the radar sensor or front camera is misaligned
- In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:
  - If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
  - If the vehicle is not properly maintained (brakes or tires are exces-

### Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, the audio system screen, or at your Toyota dealer.


### Customizing vehicle features

#### ■ Changing by using the audio system screen

- 1 Press the "MENU" button.
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "General" or "Vehicle" on the "Setup" screen.

Various setting can be changed. Refer to the list of settings that can be changed for details.

#### ■ Changing by using the meter control switches

- 1 Press < or > of the meter control switch to select .

- 2 Press ^ or v of the meter control switch to select the desired item to be customized.

- 3 Press or press and hold OK .

The available settings will differ depending on if OK is pressed or pressed and held. Follow the instructions on the display.

#### WARNING

##### ■ During customization

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

#### NOTICE

##### ■ During customization

To prevent battery discharge, ensure that the engine is running while customizing features.

### Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer for further details.

- A** Settings that can be changed using the audio system screen
- B** Settings that can be changed using the meter control switches

■ **Lights (→P.170)**

Function	Default setting	Customized setting	A	B	C
Daytime running light system	On	Off* <sup>1</sup>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
AFS (Adaptive Front-lighting System)* <sup>2</sup>	On	Off	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

\*<sup>1</sup>: Except for Canada

\*<sup>2</sup>: If equipped

■ **PCS (Pre-Collision System) (→P.187)**

Function	Default setting	Customized setting	A	B	C
PCS (Pre-Collision System)	On	Off	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Adjust alert timing	Middle	Far	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		Near	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

■ **LTA (Lane Tracing Assist)\* /LDA (Lane Departure Alert with steering control)\* (→P.195, 205)**

Function	Default setting	Customized setting	A	B	C
Lane centering function*	On	Off	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Steering assist function	On	Off	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Alert sensitivity	High	Standard	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Vehicle sway warning function	On	Off	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Vehicle sway warning sensitivity	Standard	High	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		Low	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

\*: If equipped

■ **RSA (Road Sign Assist)\* (→P.233)**

Function	Default setting	Customized setting	A	B	C
RSA (Road Sign Assist)	On	Off	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>



Vehicle specifications

APPENDIX C

Run Log

Subject Vehicle: **2020 Toyota Corolla LE**

Test Date: **4/20/2020**

Principal Other Vehicle: **2006 Acura RL**

Run	Test Type	Valid Run?	TTCW Sound (sec)	TTCW Light (sec)	TTCW Margin (sec)	Pass/Fail	Notes
1	<b>Stopped POV</b>	Y	2.73	2.62	0.63	Pass	
2		Y	2.78	2.66	0.68	Pass	
3		Y	2.77	2.68	0.67	Pass	
4		Y	2.72	2.62	0.62	Pass	
5		Y	2.80	2.73	0.70	Pass	
6		Y	2.76	2.68	0.66	Pass	
7		Y	2.81	2.73	0.71	Pass	
15	<b>Decelerating POV, 45</b>	N					POV Speed
16		Y	2.45	2.36	0.05	Pass	
17		Y	2.46	2.38	0.06	Pass	
18		Y	2.44	2.36	0.04	Pass	
19		Y	2.45	2.35	0.05	Pass	
20		Y	2.20	2.11	-0.20	Fail	
21		Y	2.32	2.23	-0.08	Fail	
22		Y	2.42	2.33	0.02	Pass	



Run	Test Type	Valid Run?	TTCW Sound (sec)	TTCW Light (sec)	TTCW Margin (sec)	Pass/Fail	Notes
8	Slower POV, 45 vs 20	Y	2.83	2.75	0.83	Pass	
9		Y	2.83	2.72	0.83	Pass	
10		Y	2.79	2.72	0.79	Pass	
11		Y	2.82	2.74	0.82	Pass	
12		Y	2.81	2.68	0.81	Pass	
13		Y	2.83	2.73	0.83	Pass	
14		Y	2.77	2.70	0.77	Pass	

## APPENDIX D

### Time History Plots

## LIST OF FIGURES

	Page
Figure D1. Example Time History for Test Type 1, Passing .....	D-8
Figure D2. Example Time History for Test Type 1, Failing .....	D-9
Figure D3. Example Time History for Test Type 2, Passing .....	D-10
Figure D4. Example Time History for Test Type 2, Failing .....	D-11
Figure D5. Example Time History for Test Type 3, Passing .....	D-12
Figure D6. Example Time History Showing Invalid Lateral Offset Criteria.....	D-13
Figure D7. Time History for Run 1, FCW Test 1, Audible Warning .....	D-14
Figure D8. Time History for Run 1, FCW Test 1, Visual Warning.....	D-15
Figure D9. Time History for Run 2, FCW Test 1, Audible Warning .....	D-16
Figure D10. Time History for Run 2, FCW Test 1, Visual Warning.....	D-17
Figure D11. Time History for Run 3, FCW Test 1, Audible Warning.....	D-18
Figure D12. Time History for Run 3, FCW Test 1, Visual Warning.....	D-19
Figure D13. Time History for Run 4, FCW Test 1, Audible Warning.....	D-20
Figure D14. Time History for Run 4, FCW Test 1, Visual Warning.....	D-21
Figure D15. Time History for Run 5, FCW Test 1, Audible Warning.....	D-22
Figure D16. Time History for Run 5, FCW Test 1, Visual Warning.....	D-23
Figure D17. Time History for Run 6, FCW Test 1, Audible Warning.....	D-24
Figure D18. Time History for Run 6, FCW Test 1, Visual Warning.....	D-25
Figure D19. Time History for Run 7, FCW Test 1, Audible Warning.....	D-26
Figure D20. Time History for Run 7, FCW Test 1, Visual Warning.....	D-27
Figure D21. Time History for Run 16, FCW Test 2, Audible Warning.....	D-28
Figure D22. Time History for Run 16, FCW Test 2, Visual Warning.....	D-29
Figure D23. Time History for Run 17, FCW Test 2, Audible Warning.....	D-30
Figure D24. Time History for Run 17, FCW Test 2, Visual Warning.....	D-31
Figure D25. Time History for Run 18, FCW Test 2, Audible Warning.....	D-32
Figure D26. Time History for Run 18, FCW Test 2, Visual Warning.....	D-33
Figure D27. Time History for Run 19, FCW Test 2, Audible Warning.....	D-34
Figure D28. Time History for Run 19, FCW Test 2, Visual Warning.....	D-35
Figure D29. Time History for Run 20, FCW Test 2, Audible Warning.....	D-36
Figure D30. Time History for Run 20, FCW Test 2, Visual Warning.....	D-37
Figure D31. Time History for Run 21, FCW Test 2, Audible Warning.....	D-38
Figure D32. Time History for Run 21, FCW Test 2, Visual Warning.....	D-39
Figure D33. Time History for Run 22, FCW Test 2, Audible Warning.....	D-40
Figure D34. Time History for Run 22, FCW Test 2, Visual Warning.....	D-41
Figure D35. Time History for Run 8, FCW Test 3, Audible Warning.....	D-42
Figure D36. Time History for Run 8, FCW Test 3, Visual Warning.....	D-43
Figure D37. Time History for Run 9, FCW Test 3, Audible Warning.....	D-44
Figure D38. Time History for Run 9, FCW Test 3, Visual Warning.....	D-45
Figure D39. Time History for Run 10, FCW Test 3, Audible Warning.....	D-46
Figure D40. Time History for Run 10, FCW Test 3, Visual Warning.....	D-47
Figure D41. Time History for Run 11, FCW Test 3, Audible Warning.....	D-48

Figure D42. Time History for Run 11, FCW Test 3, Visual Warning.....	D-49
Figure D43. Time History for Run 12, FCW Test 3, Audible Warning.....	D-50
Figure D44. Time History for Run 12, FCW Test 3, Visual Warning.....	D-51
Figure D45. Time History for Run 13, FCW Test 3, Audible Warning.....	D-52
Figure D46. Time History for Run 13, FCW Test 3, Visual Warning.....	D-53
Figure D47. Time History for Run 14, FCW Test 3, Audible Warning.....	D-54
Figure D48. Time History for Run 14, FCW Test 3, Visual Warning.....	D-55

## Description of Time History Plots

A set of time history plots is provided for each valid run in the test series. Each set of plots comprises time varying data from both the Subject Vehicle (SV) and the Principal Other Vehicle (POV), as well as pass/fail envelopes and thresholds. The following is a description of data types shown in the time history plots, as well as a description of the color code indicating to which vehicle the data pertain.

Each time history plot consists of data pertinent to the test type under consideration, and therefore the data channels plotted vary according to test type. The test types (shown in the plot titles) include:

- FCW Test 1 – Stopped POV (SV at 45 mph)
- FCW Test 2 – Decelerating POV (Both vehicles at 45 mph with a 30 m gap, POV brakes at 0.3 g)
- FCW Test 3 – Slower Moving POV (SV at 45 mph, POV at 20 mph)

Time history figures include the following sub-plots:

- Warning – Displays the Forward Collision Warning Alert (which can be audible, visual, or haptic). Depending on the type of FCW alert or instrumentation used to measure the alert, this can be any of the following:
  - Filtered, rectified, and normalized sound signal. The vertical scale is 0 to 1.
  - Filtered, rectified, and normalized acceleration (e.g., haptic alert, such as steering wheel vibration). The vertical scale is 0 to 1.
  - Light sensor signal.
- TTC (sec) – Indicates the Time to Collision as calculated up to the point of FCW alert issuance. The value of TTCW (Time to Collision at Warning) is given numerically on the right side of the figure. A passing value is indicated in green, while a failing value is indicated in red.
- SV Speed (mph) – Speed of the Subject Vehicle
- POV Speed (mph) – Speed of the Principal Other Vehicle
- Yaw Rate (deg/sec) – Yaw rate of both the Subject Vehicle and Principal Other Vehicle



- Lateral Offset (ft) – Lateral offset within the lane from the Subject Vehicle to the Principal Other Vehicle
- Ax (g) – Longitudinal acceleration of both the Subject Vehicle and Principal Other Vehicle
- Headway (ft) – Longitudinal separation between front of Subject Vehicle to rear of Principal Other Vehicle (Exclusive to test type 2)

Note that the minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then “RTK Fixed OR LESS!!” is displayed in red.

### **Envelopes and Thresholds**

Each of the time history plot figures can contain either green or yellow envelopes and/or black threshold lines. These envelopes and thresholds are used to programmatically and visually determine the validity of a given test run. Envelope and threshold exceedances are indicated with either red shading or red asterisks, and red text is placed to the right side of the plot indicating the type of exceedance.

Green envelopes indicate that the time-varying data should not exceed the envelope boundaries at any time within the envelope. Exceedances of a green envelope are indicated by red shading in the area between the measured time-varying data and the envelope boundaries.

Yellow envelopes indicate that the time-varying data should not exceed the envelope only at the left and/or right ends. Exceedances at the left or right extent of a yellow envelope are indicated by red asterisks.

For the warning plot, a dashed black threshold line indicates the threshold used to determine the onset of the FCW alert. The alert is considered on the first time the alert signal crosses this threshold line.

For the TTC plot, a dashed black threshold line indicates the minimum allowable TTC for the given test scenario. If the FCW alert occurs before this minimum allowable TTC, a green dot appears. However, if there is no alert or the alert occurs after the minimum allowable TTC, a red asterisk is shown on the plot.

For the Ax plot, a dashed black threshold line is given for at a value of -0.05 g. For a test run to be valid, the longitudinal acceleration of the Subject Vehicle must not fall below this threshold (i.e. the driver cannot apply any brakes). Additionally, for test type 2, the plot indicating the longitudinal acceleration of the Principal Other Vehicle

includes a yellow envelope indicating the deceleration ( $0.3 \text{ g} \pm 0.03 \text{ g}$ ) allowed while braking. Exceedance of this threshold is indicated with red asterisks at the beginning and/or end of the threshold boundary.

## Color Codes

Color codes have been adopted to easily identify which data correspond to which vehicle, as well as to indicate the types of envelopes and thresholds used in the plots.

Color codes can be broken into four categories:

1. Time-varying data
2. Validation envelopes and thresholds
3. Instantaneous samplings
4. Text

1. Time-varying data color codes:

- Blue = Subject Vehicle data
- Magenta = Principal Other Vehicle data
- Brown = Relative data between SV and POV (i.e., TTC, lateral offset and headway distance)

2. Validation envelope and threshold color codes:

- Green envelope = time varying data must be within the envelope at all times in order to be valid
- Yellow envelope = time varying data must be within limits at left and/or right ends
- Black threshold (Solid) = time varying data must not exceed this threshold in order to be valid
- Black threshold (Dashed) = for reference only – this can include warning level thresholds, TTC thresholds, and acceleration thresholds

3. Instantaneous sampling color codes:

- Green circle = passing or valid value at a given moment in time
- Red asterisk = failing or invalid value at a given moment in time

#### 4. Text color codes:

- Green = passing or valid value
- Red = failing or invalid value

#### Other Notations

- ENV – For Ax plots only, indicates that the envelope for the POV braking was exceeded.
- NG – Indicates that the value for that variable was outside of bounds and therefore “No Good”.
- No Wng – No warning was detected.
- POV – Indicates that the value for the Principal Other Vehicle was out of bounds.
- SV – Indicates that the value for the Subject Vehicle was out of bounds.
- SR – Shows the speed reduction value.
- Thr – Indicates that the requirements for the throttle were not met.

The minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then “RTK Fixed OR LESS!!” is displayed in red.

Examples of time history plots for each test type (including passing, failing and invalid runs) are shown in Figure D1 through Figure D6. Actual time history data plots for the vehicle under consideration are provided subsequently.

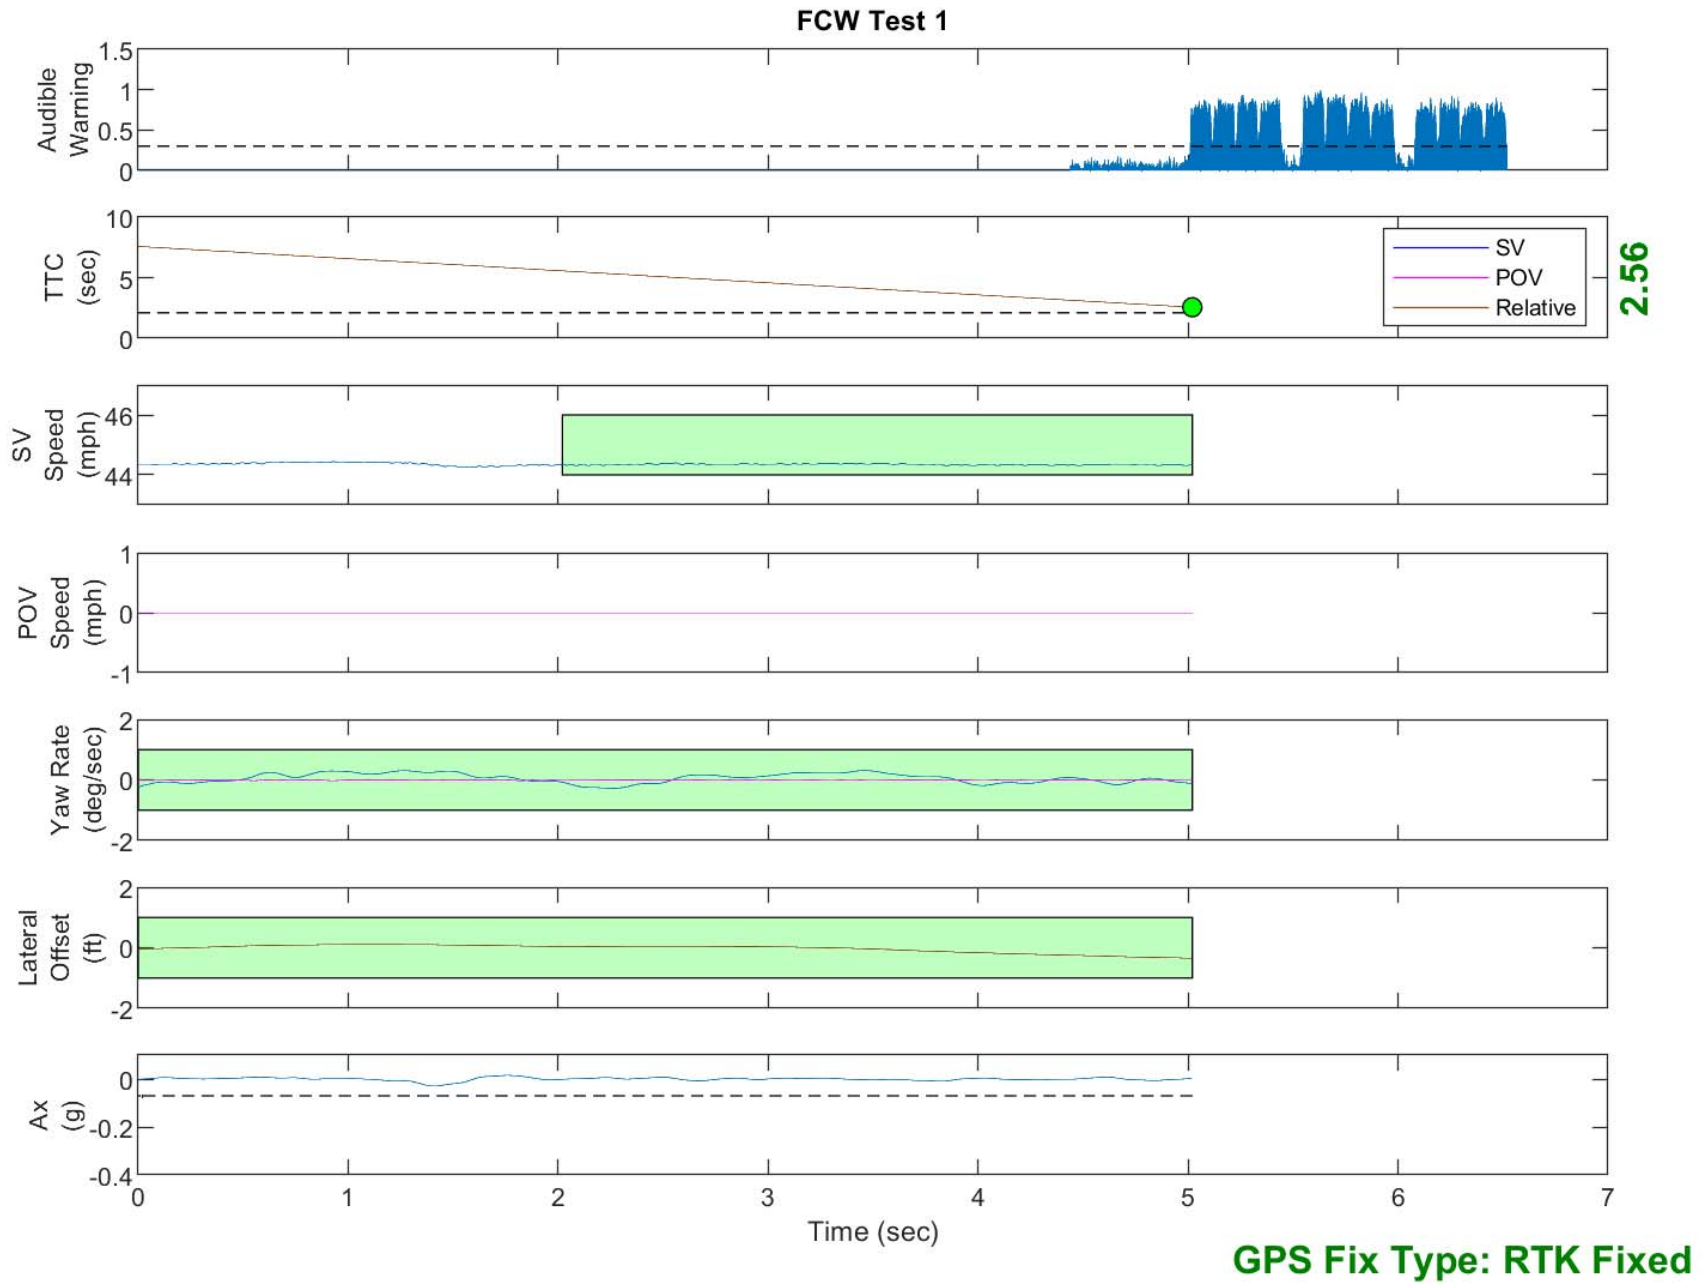


Figure D1. Example Time History for Test Type 1, Passing


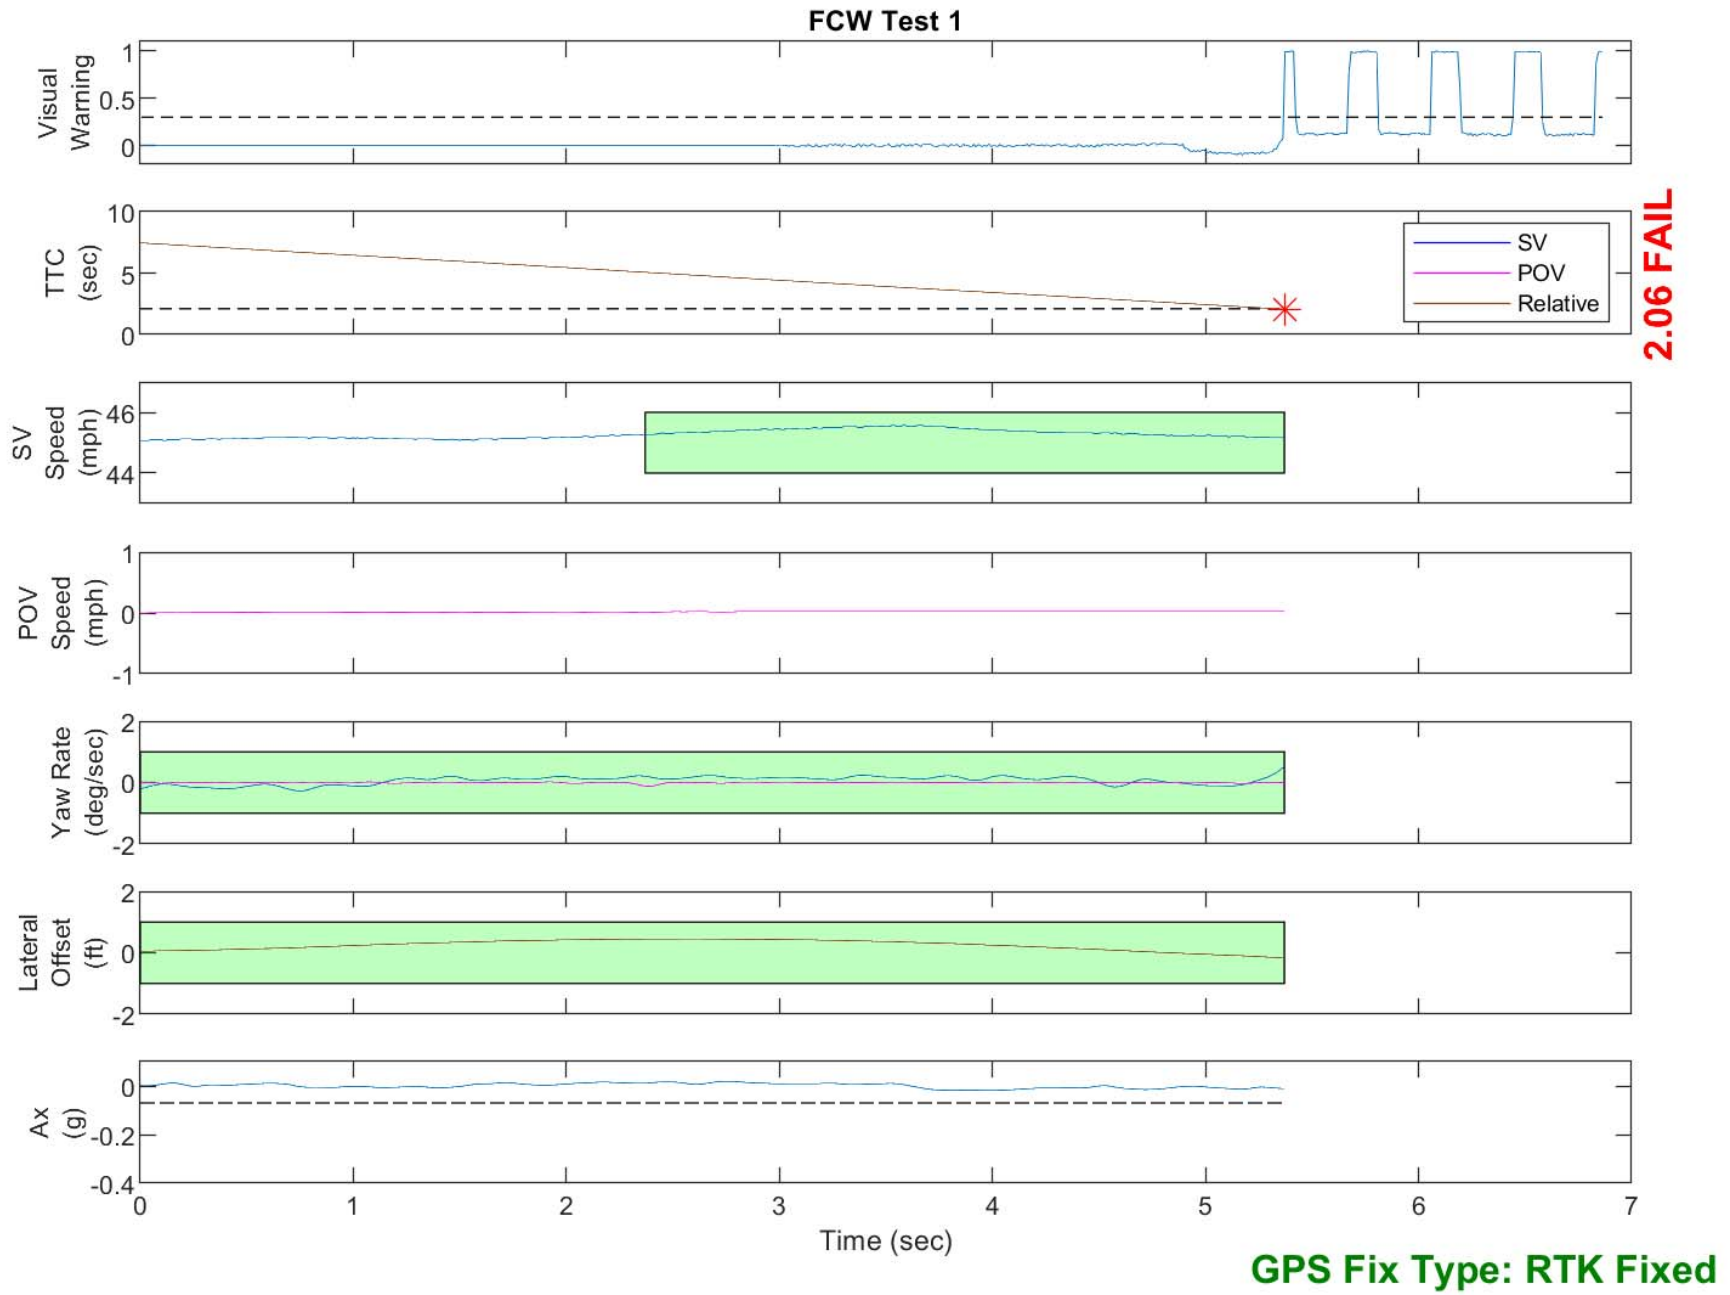



Figure D2. Example Time History for Test Type 1, Failing



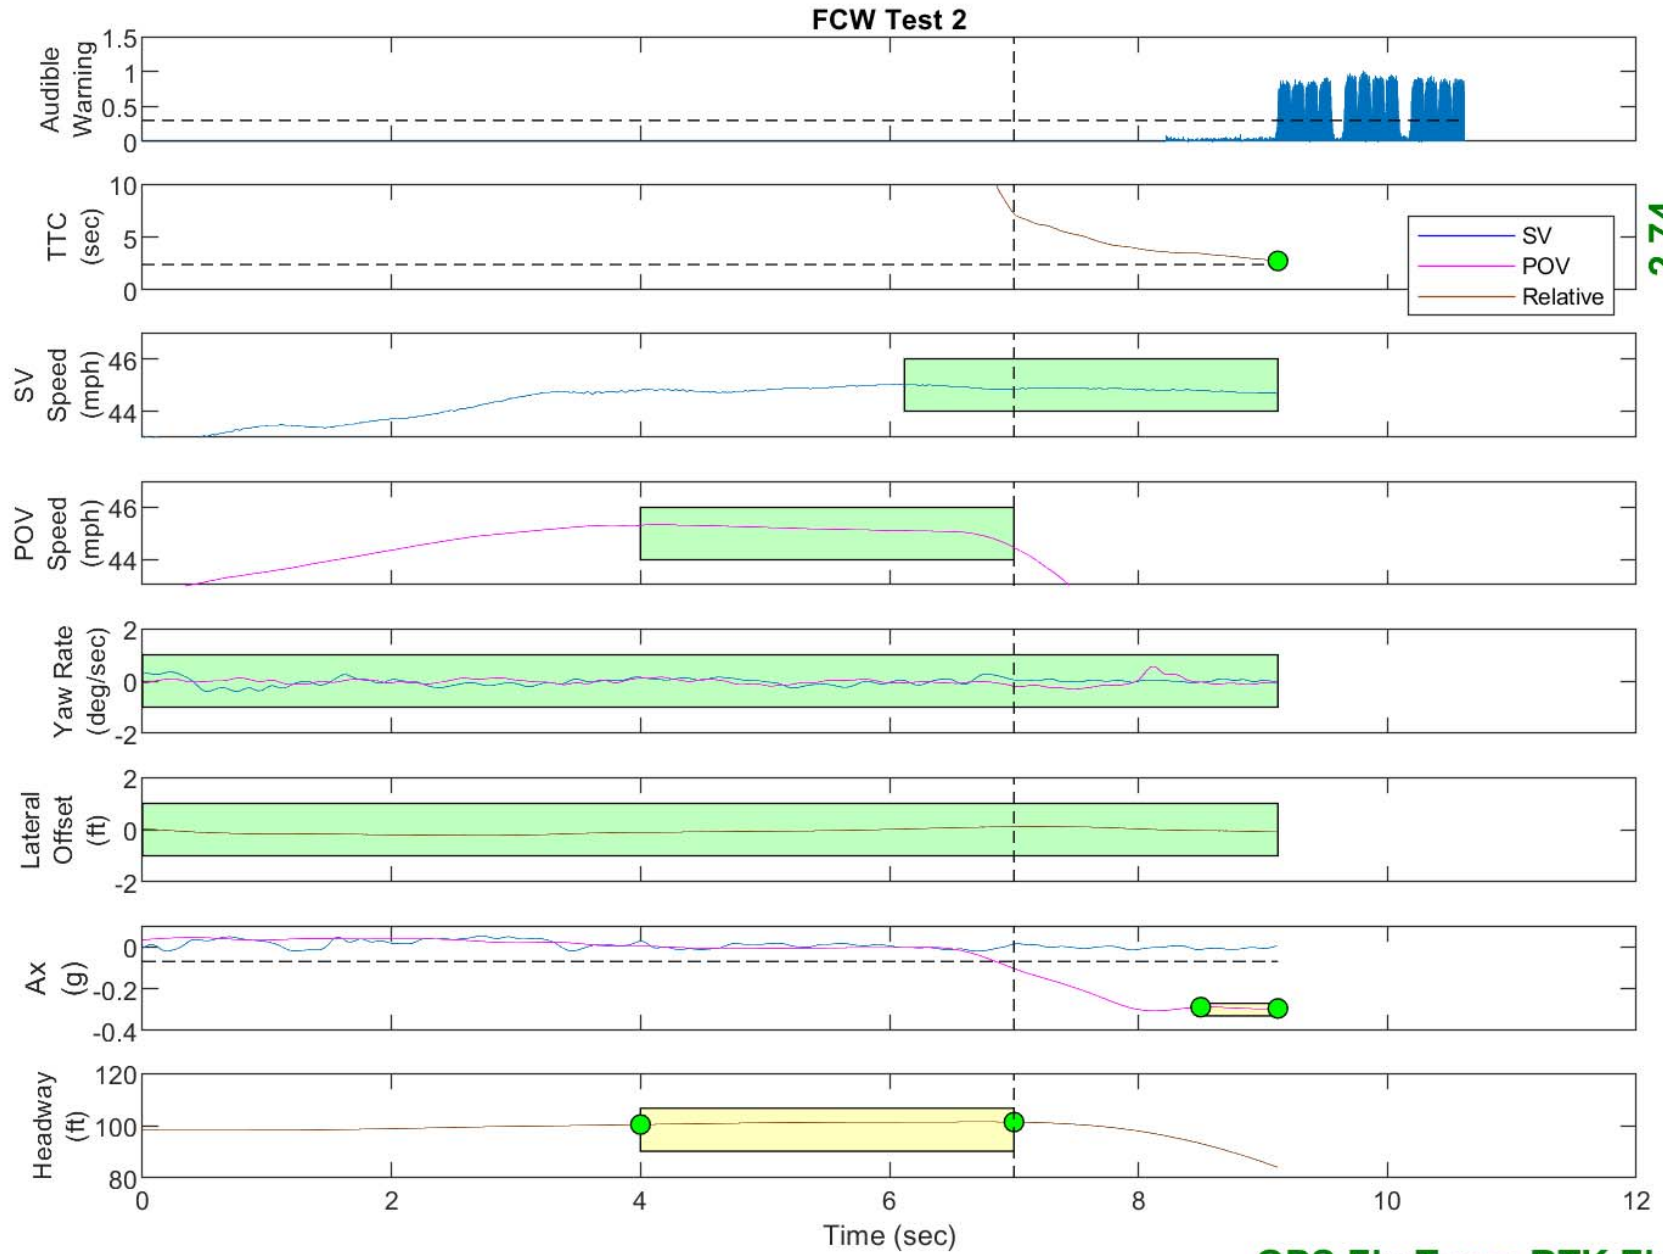

GPS Fix Type: RTK Fixed


Figure D3. Example Time History for Test Type 2, Passing

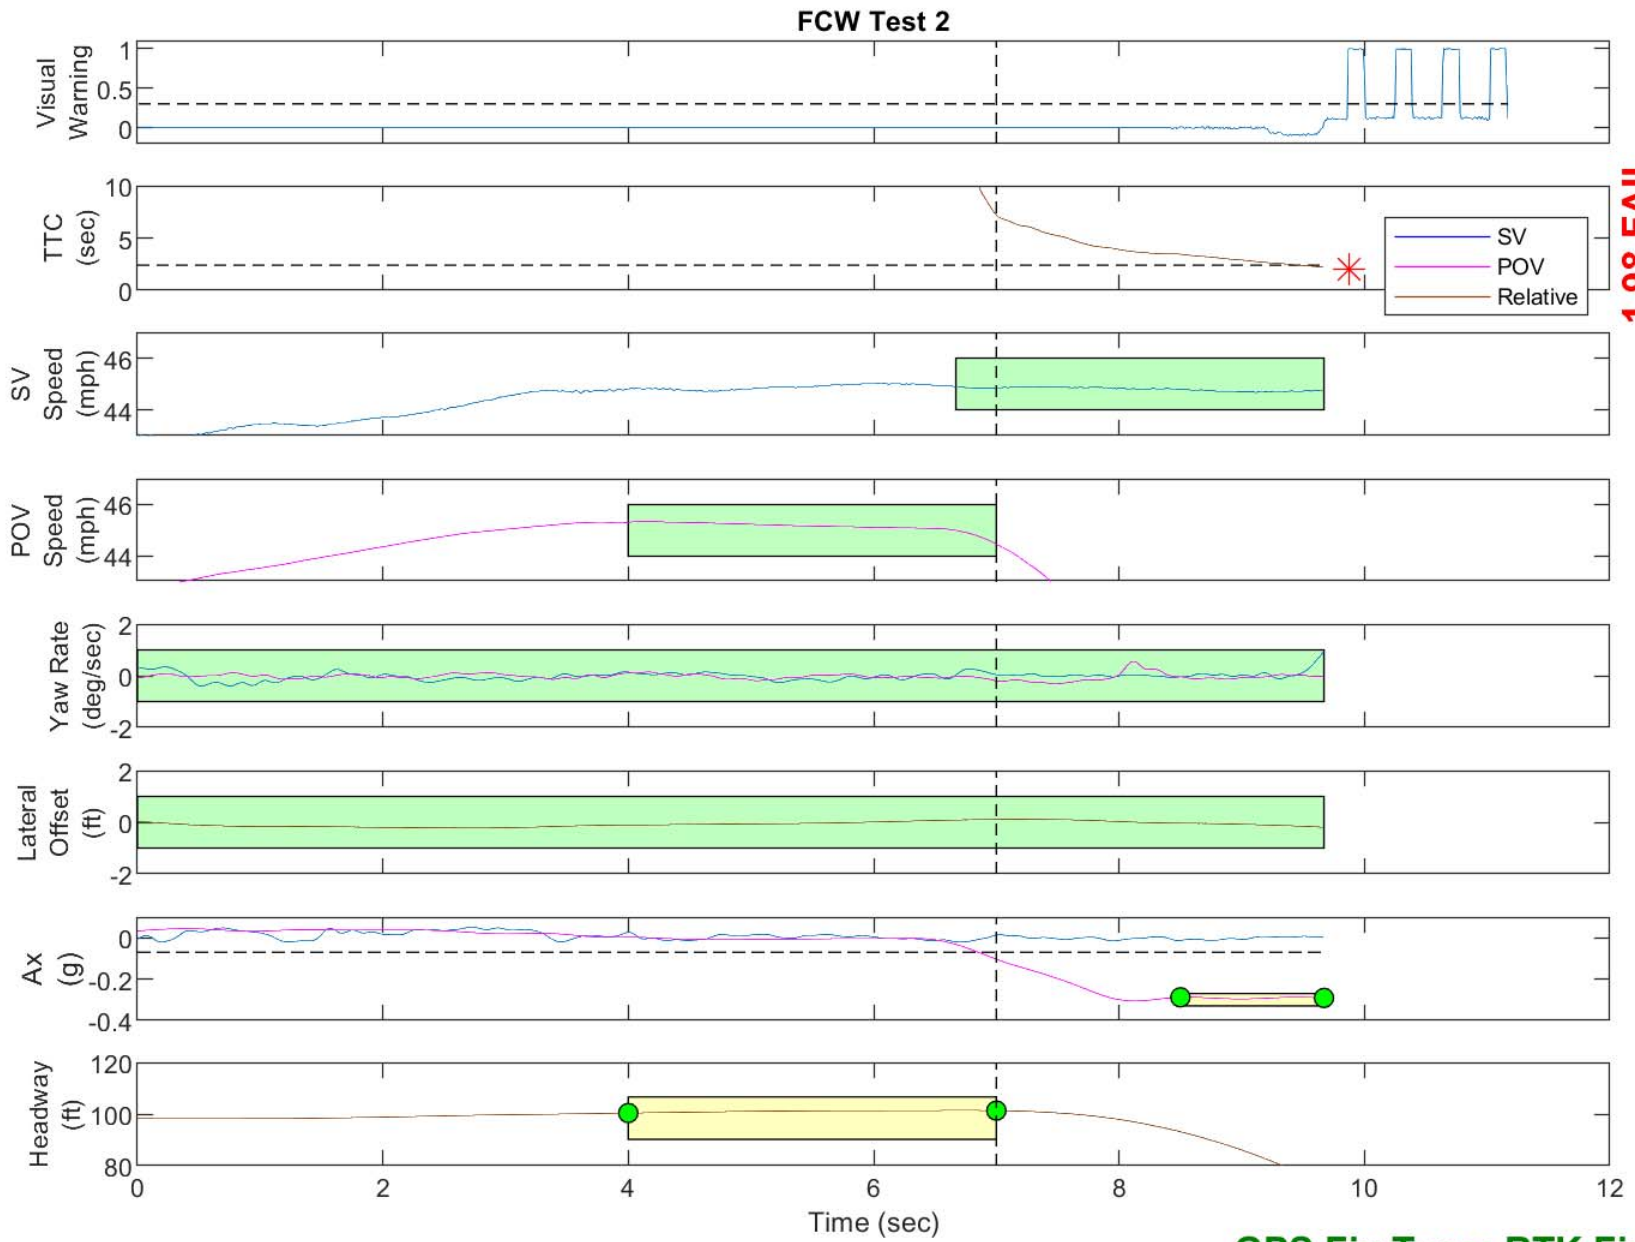

1.98 FAIL

GPS Fix Type: RTK Fixed

Figure D4. Example Time History for Test Type 2, Failing

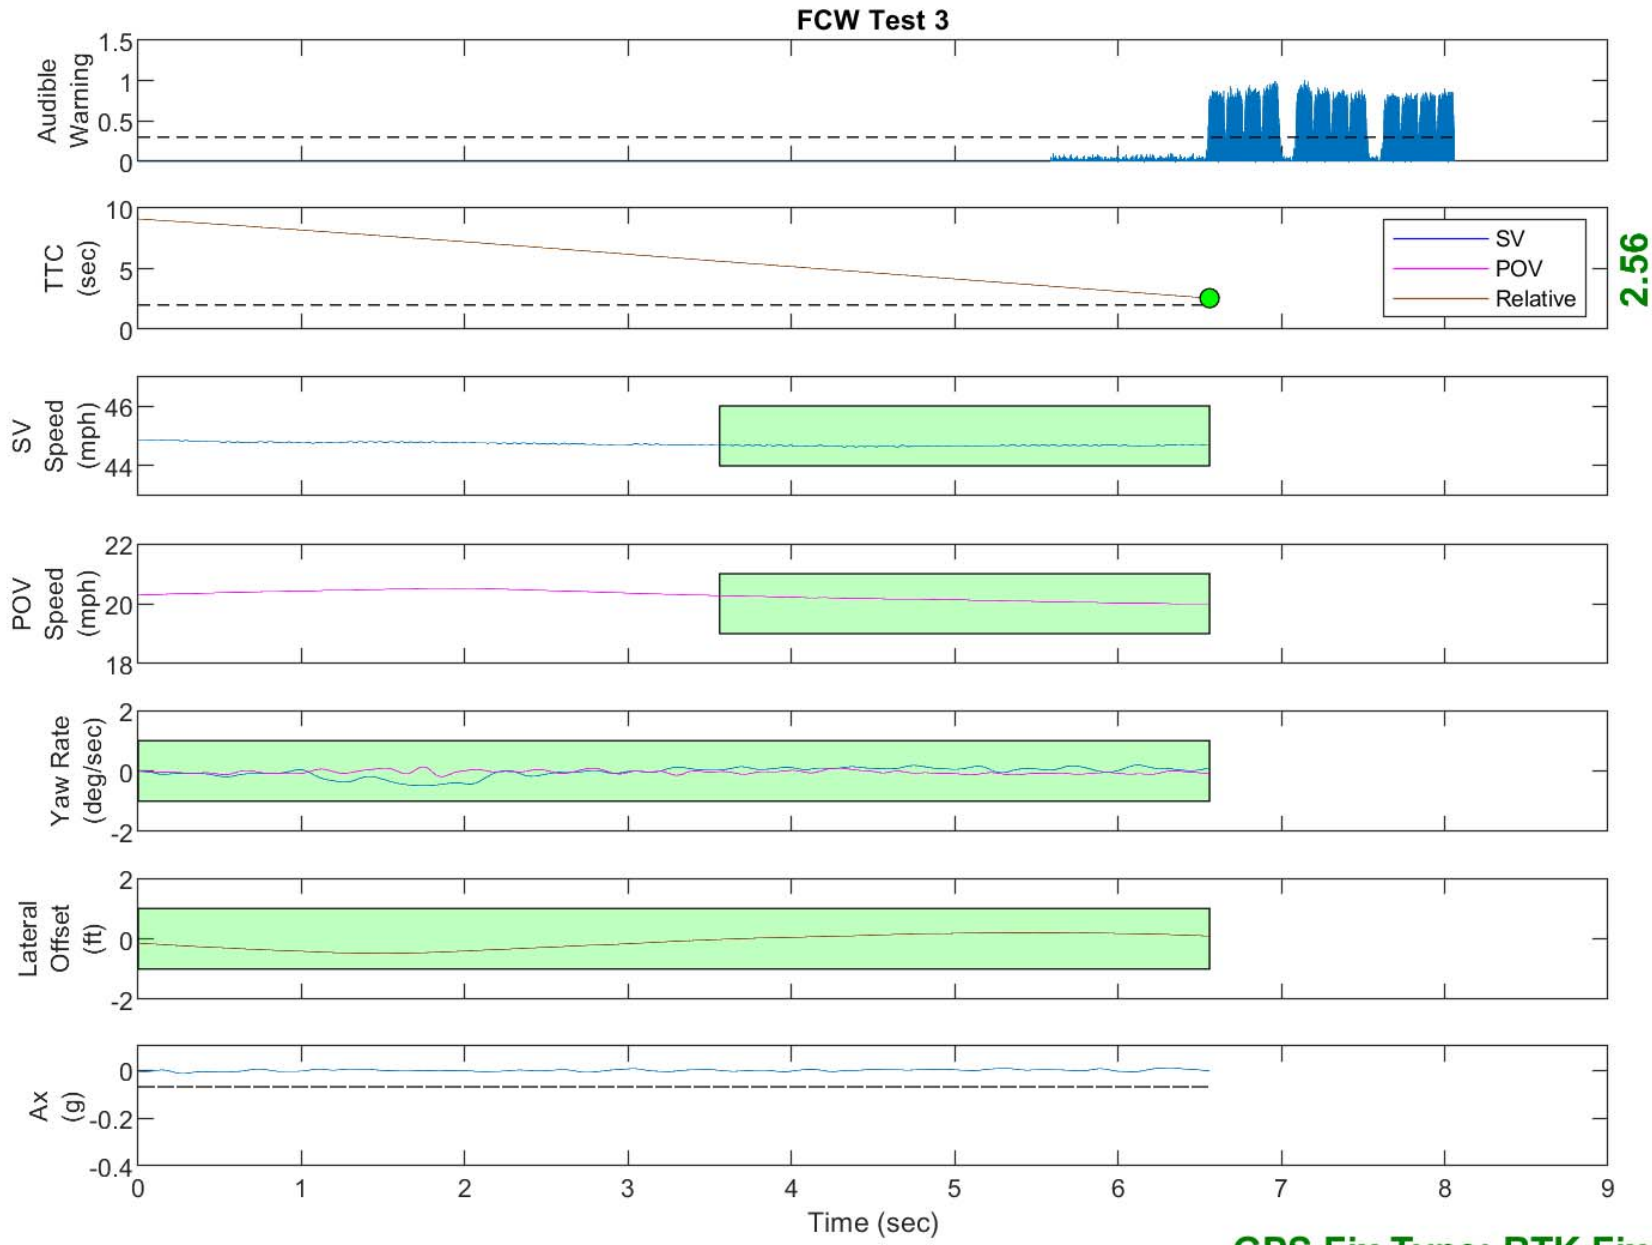

GPS Fix Type: RTK Fixed

Figure D5. Example Time History for Test Type 3, Passing

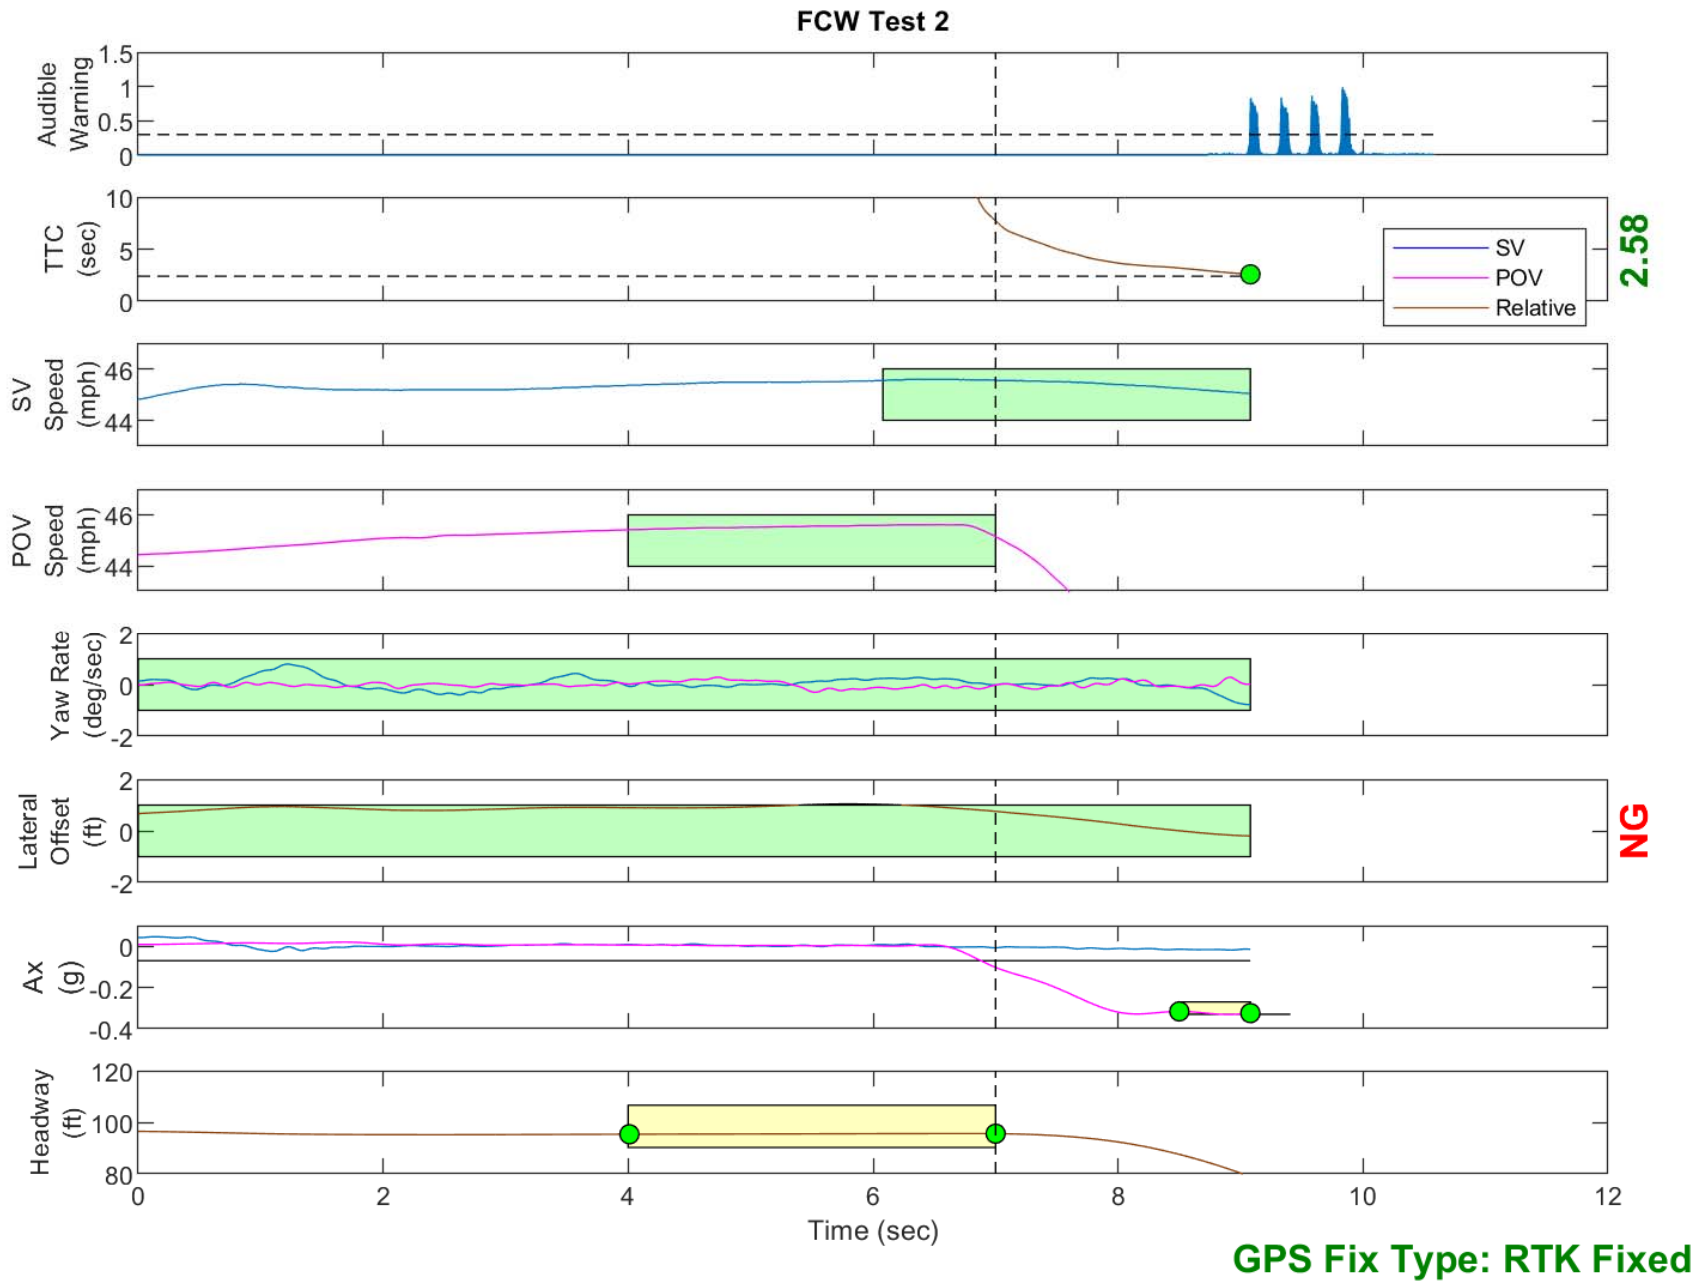


Figure D6. Example Time History Showing Invalid Lateral Offset Criteria

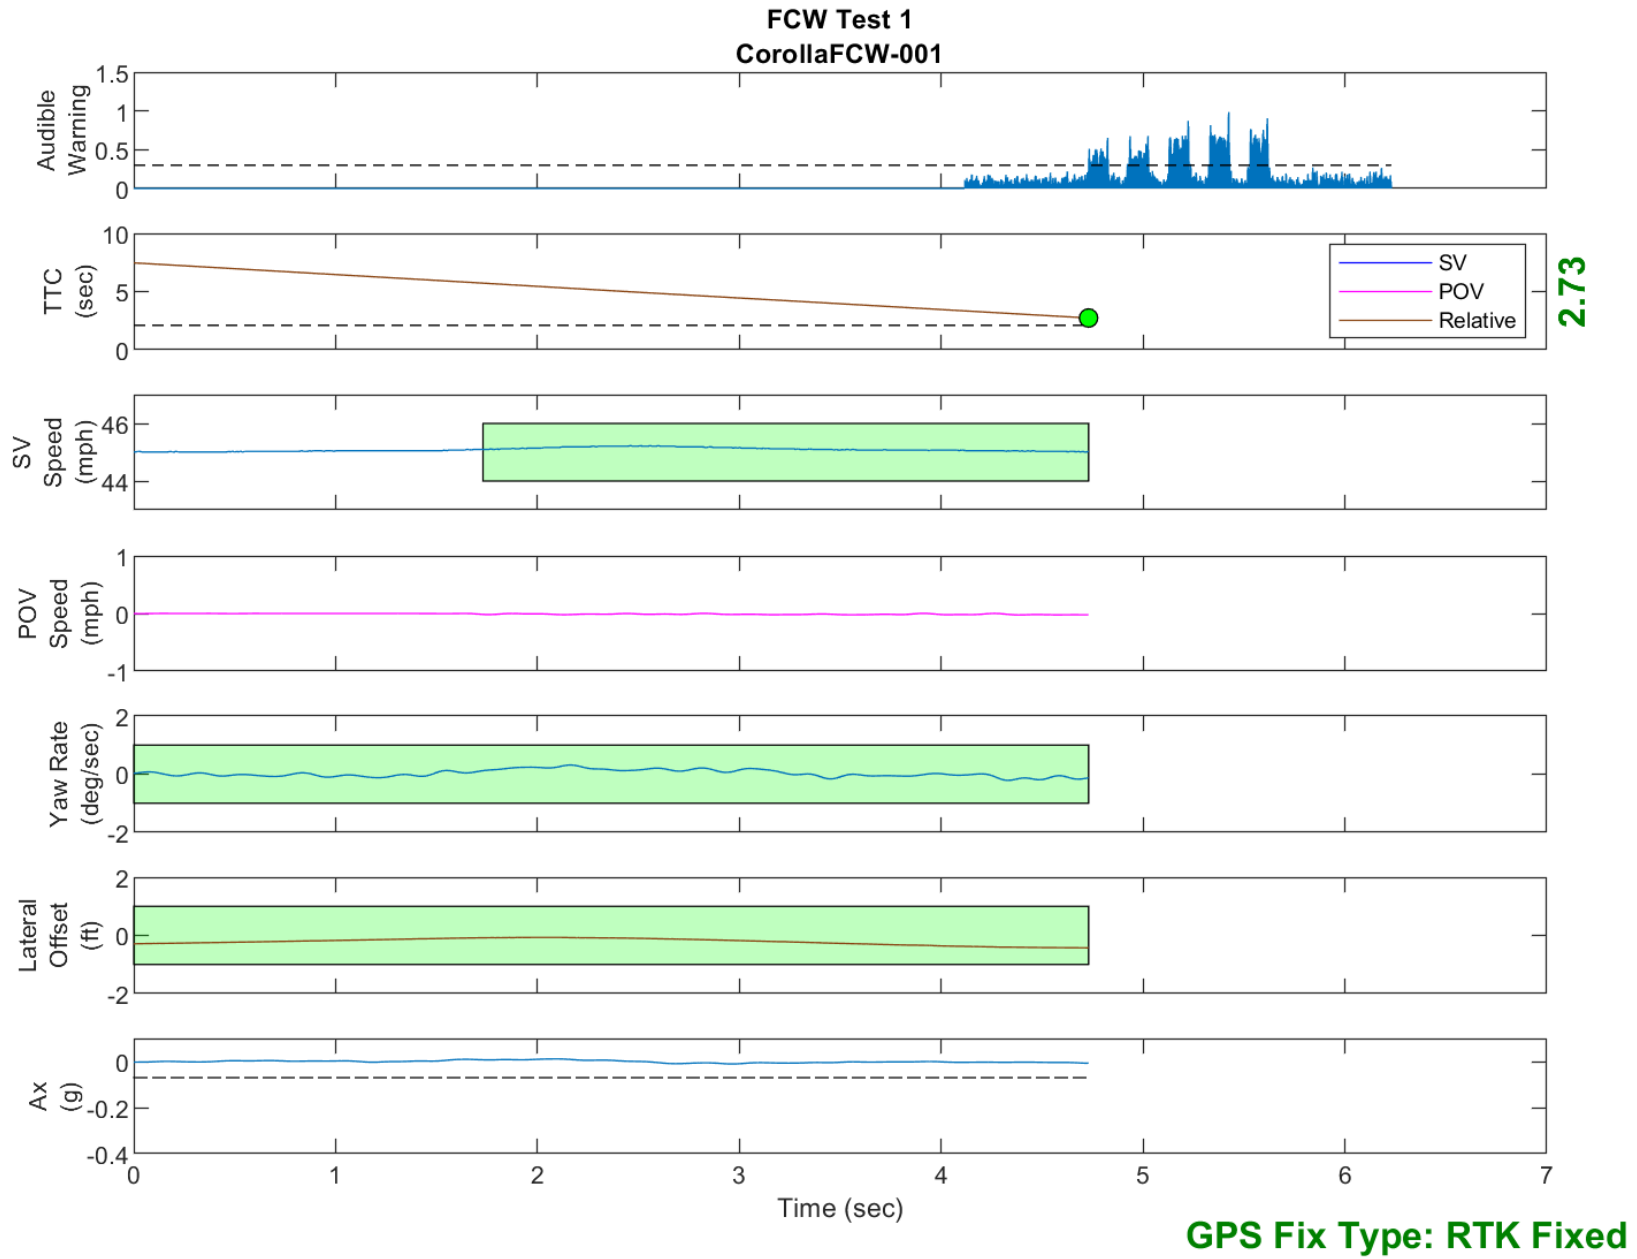


Figure D7. Time History for Run 1, FCW Test 1, Audible Warning



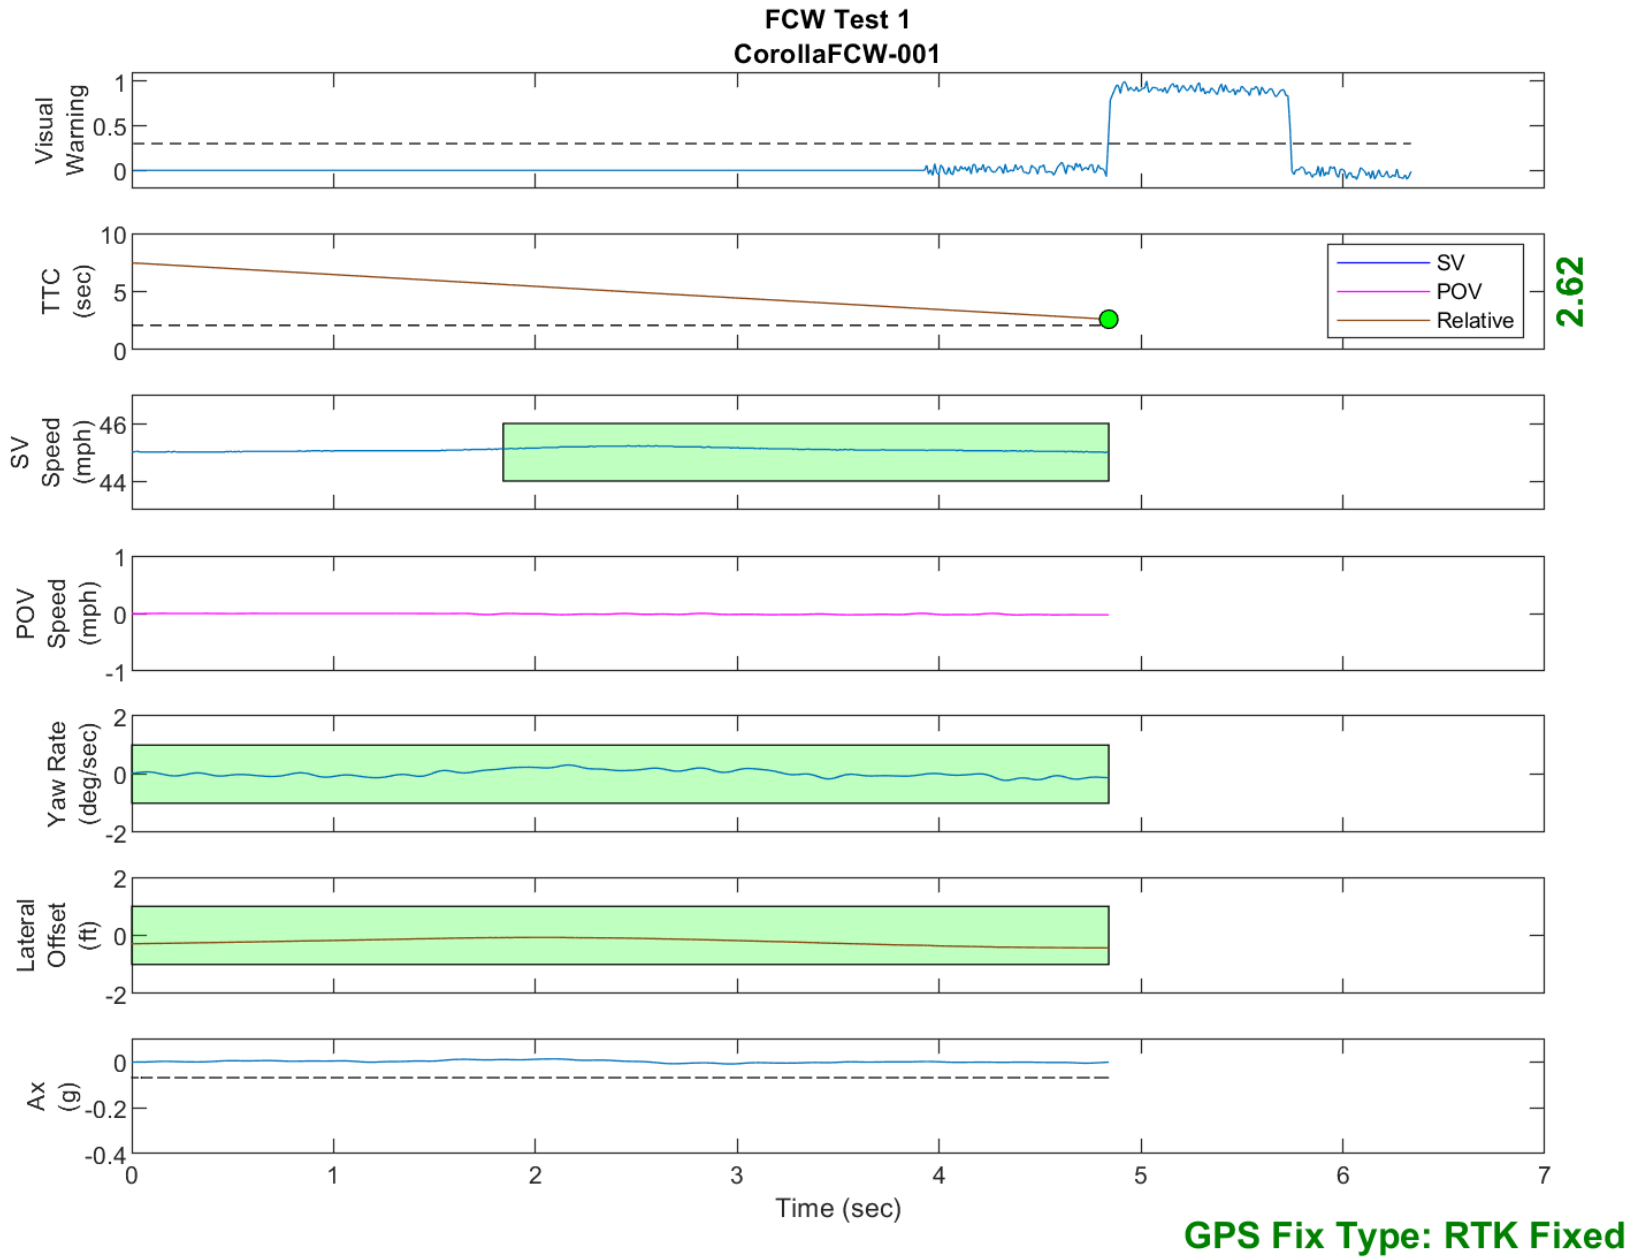


Figure D8. Time History for Run 1, FCW Test 1, Visual Warning

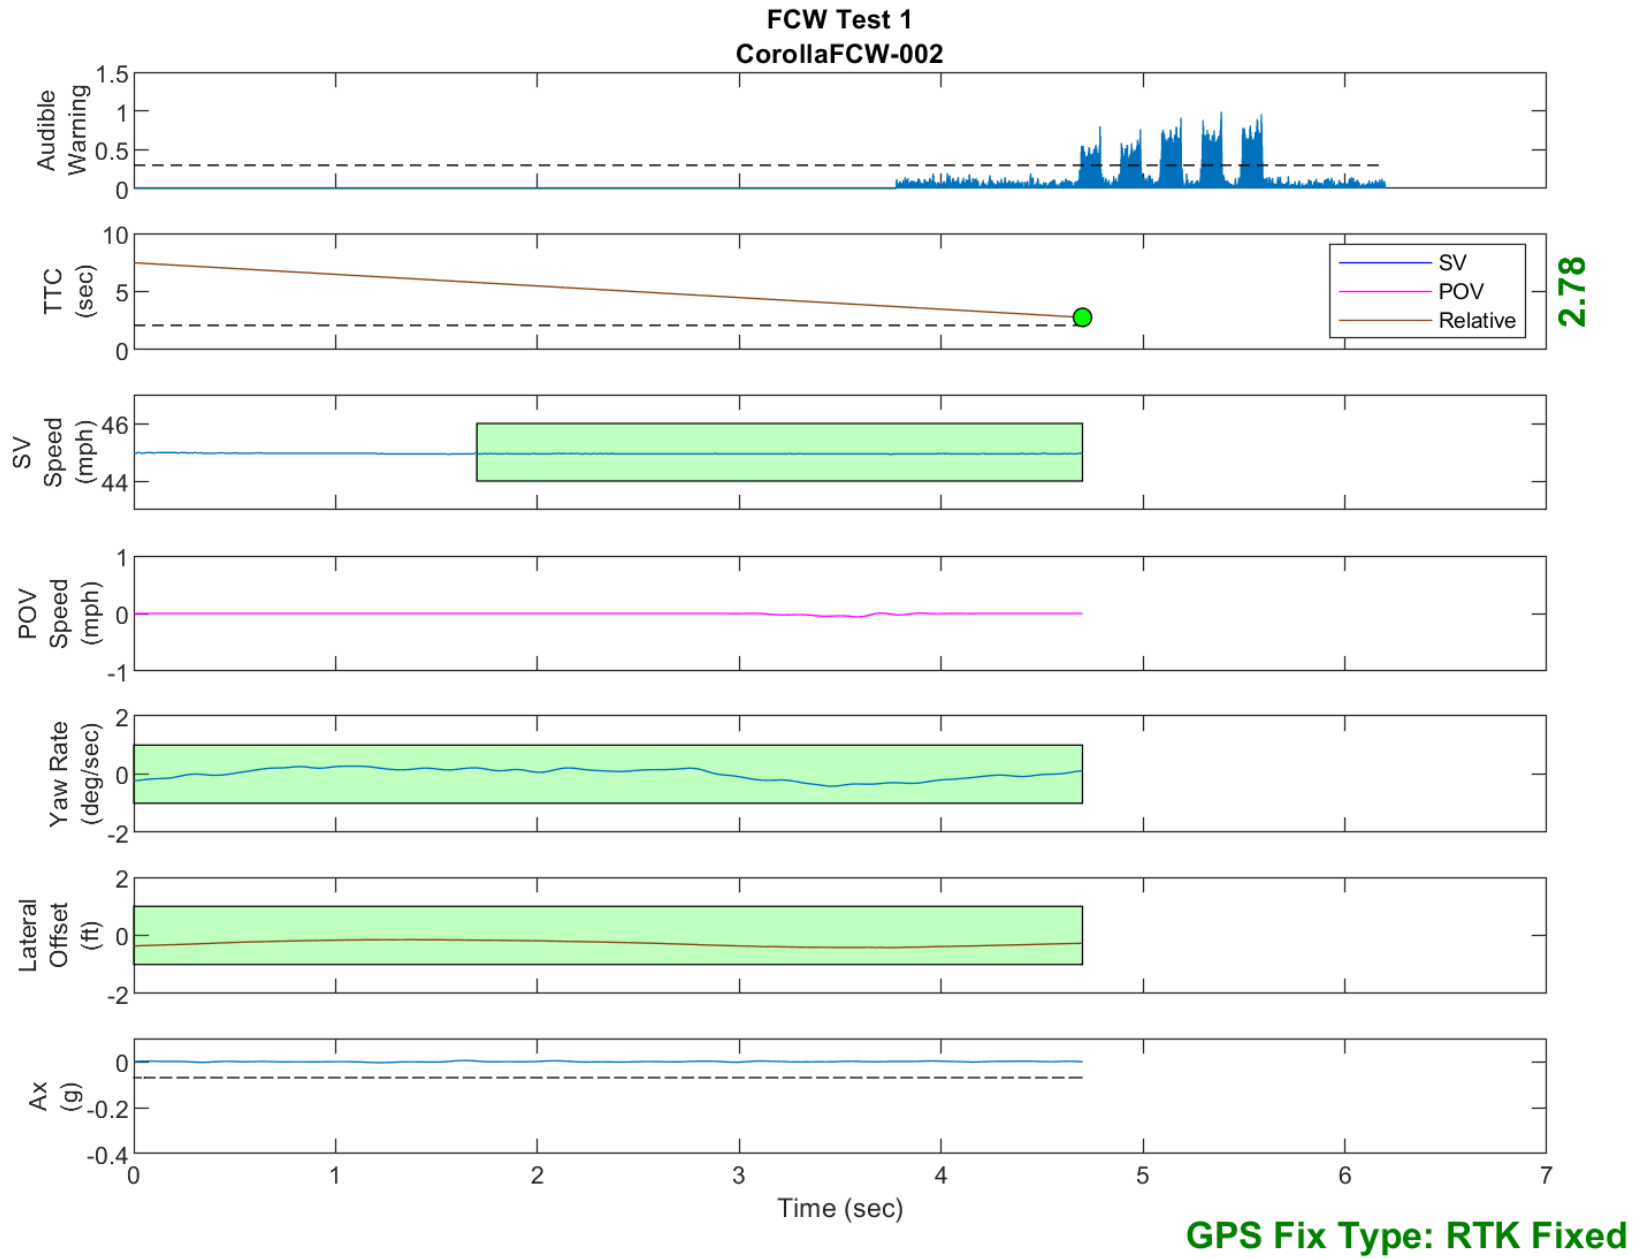


Figure D9. Time History for Run 2, FCW Test 1, Audible Warning

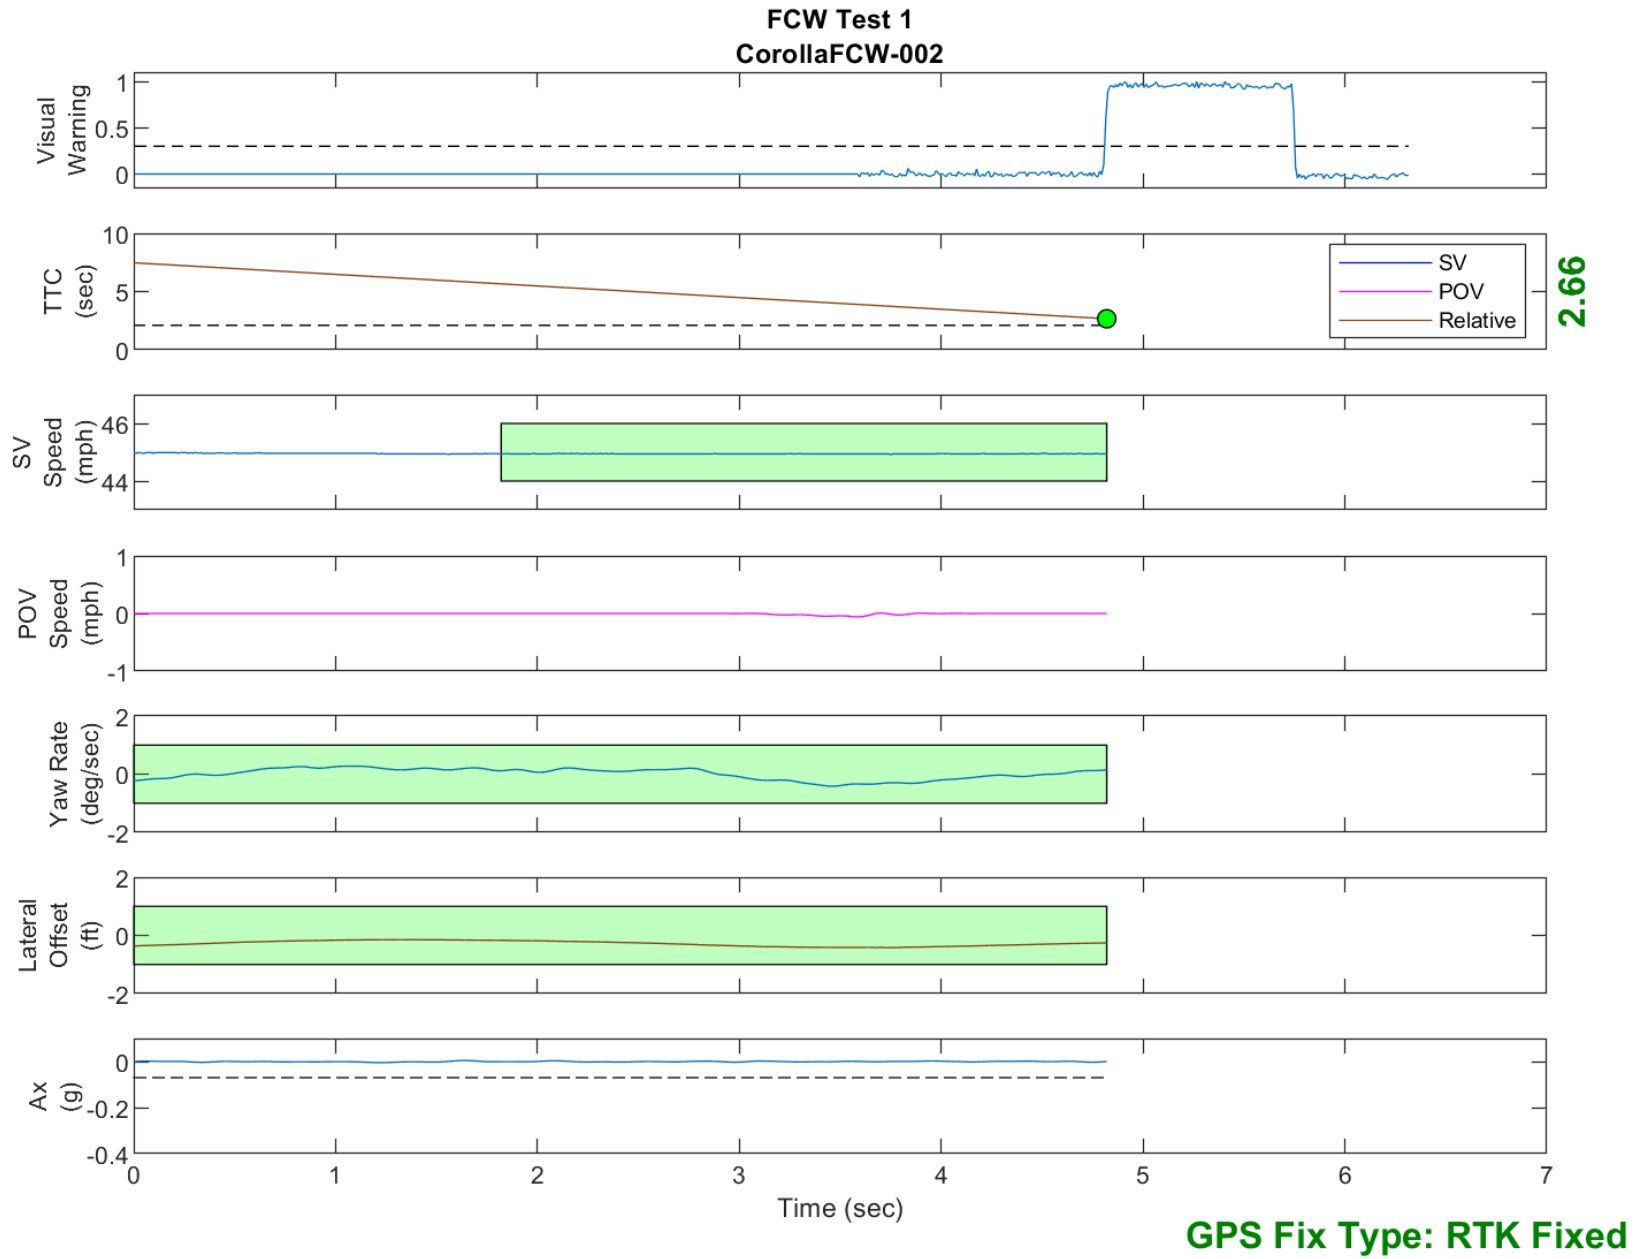


Figure D10. Time History for Run 2, FCW Test 1, Visual Warning

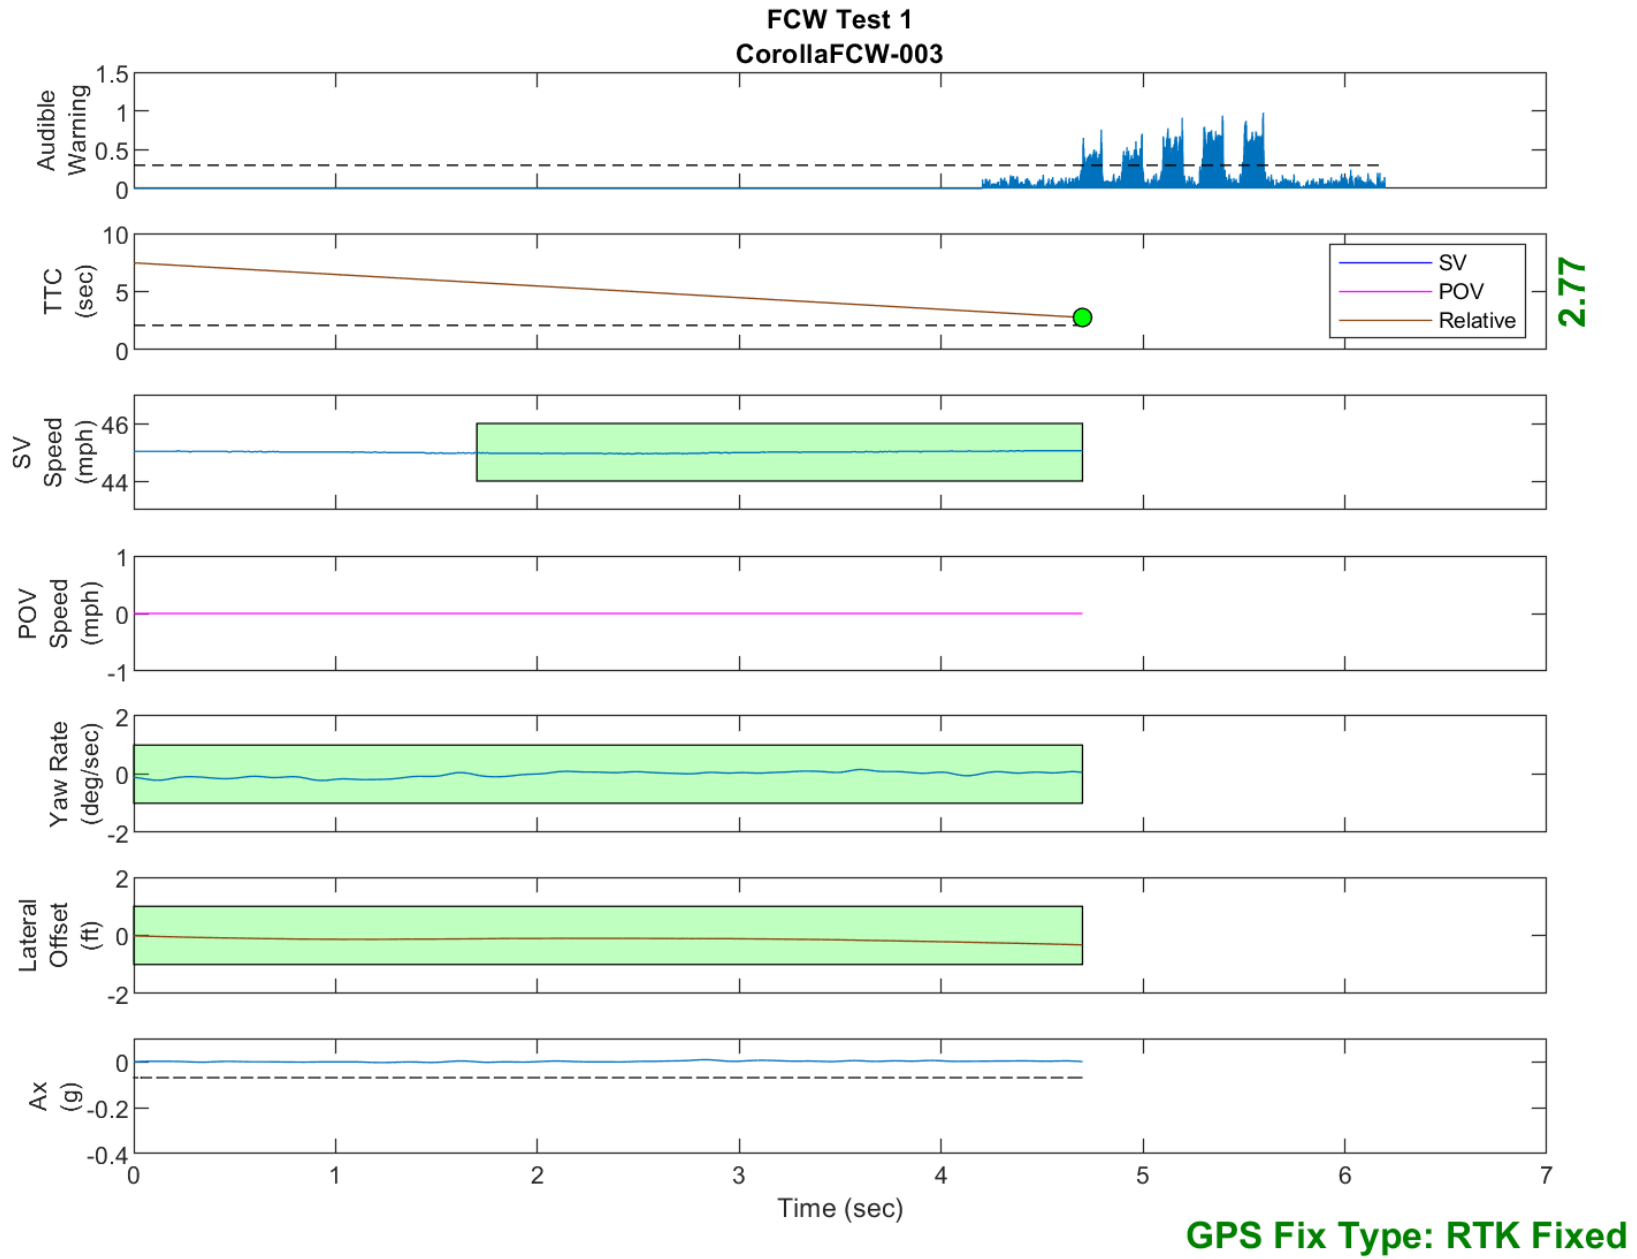


Figure D11. Time History for Run 3, FCW Test 1, Audible Warning

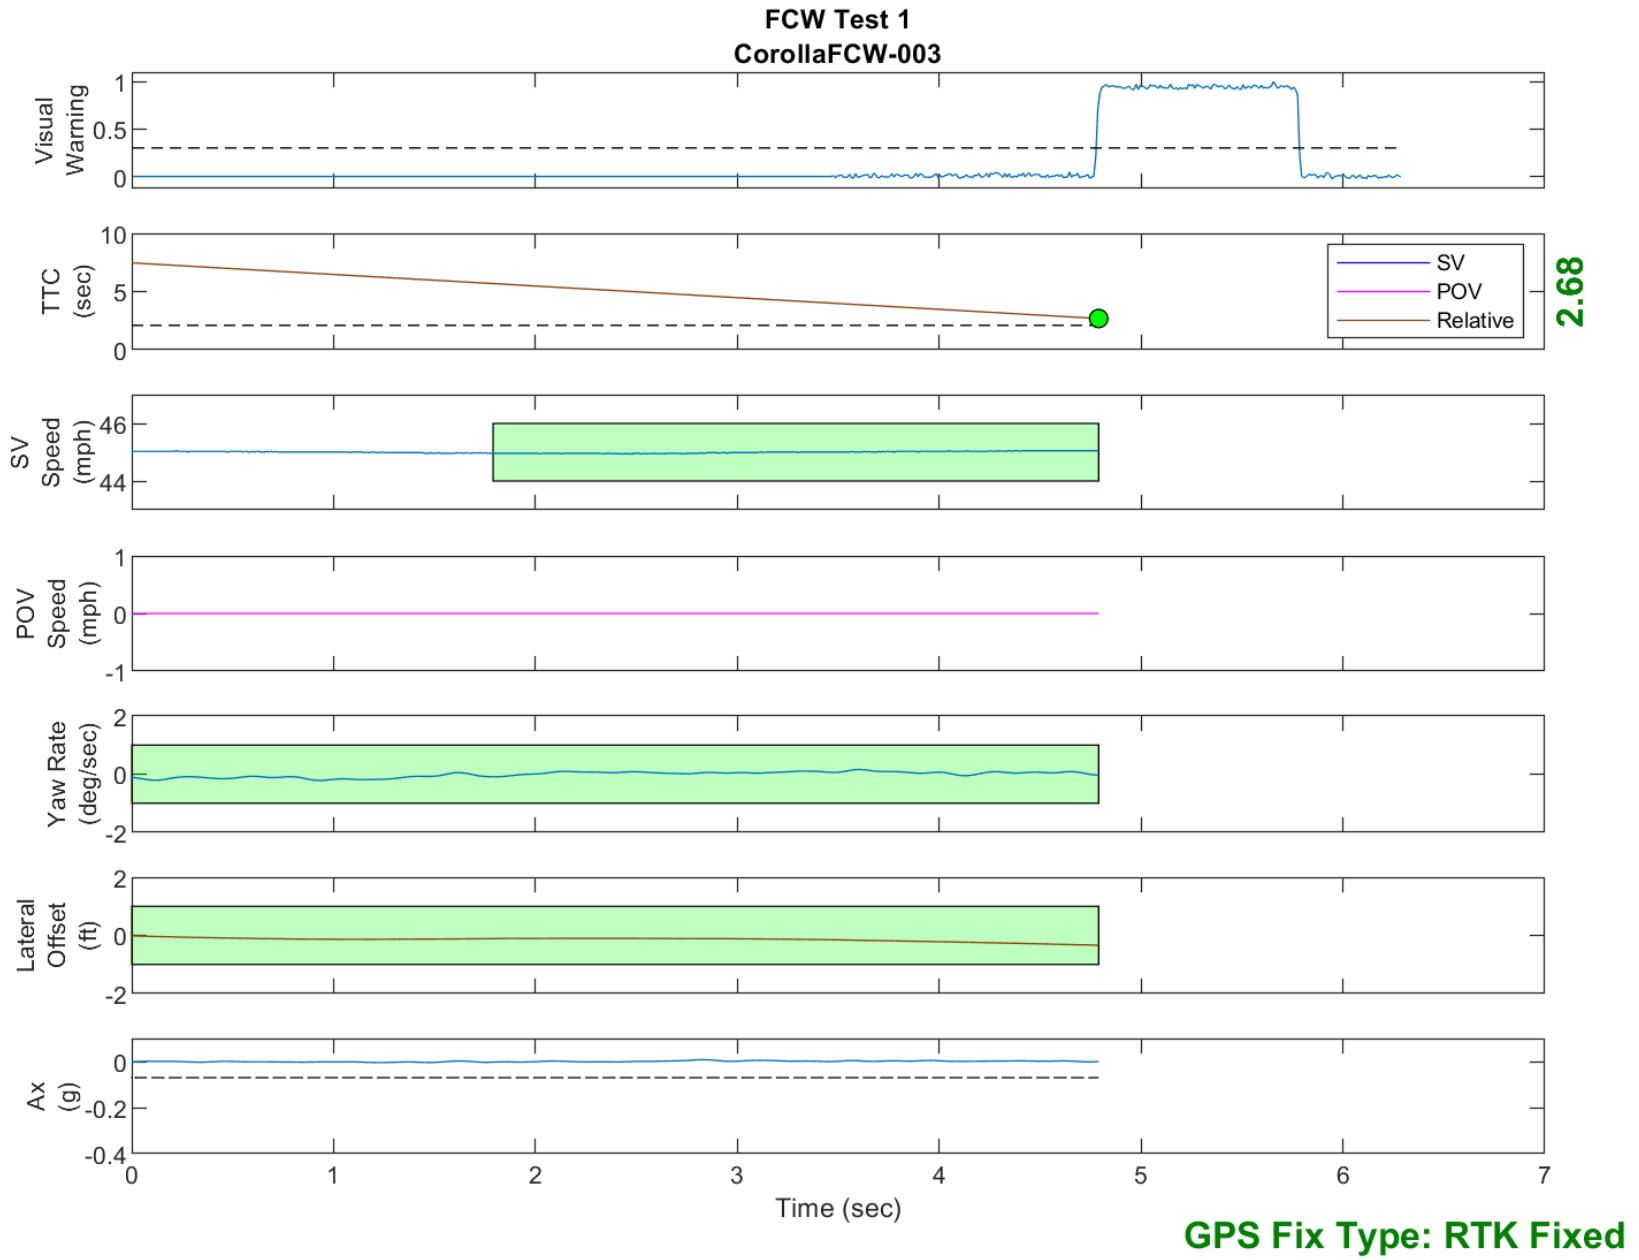


Figure D12. Time History for Run 3, FCW Test 1, Visual Warning



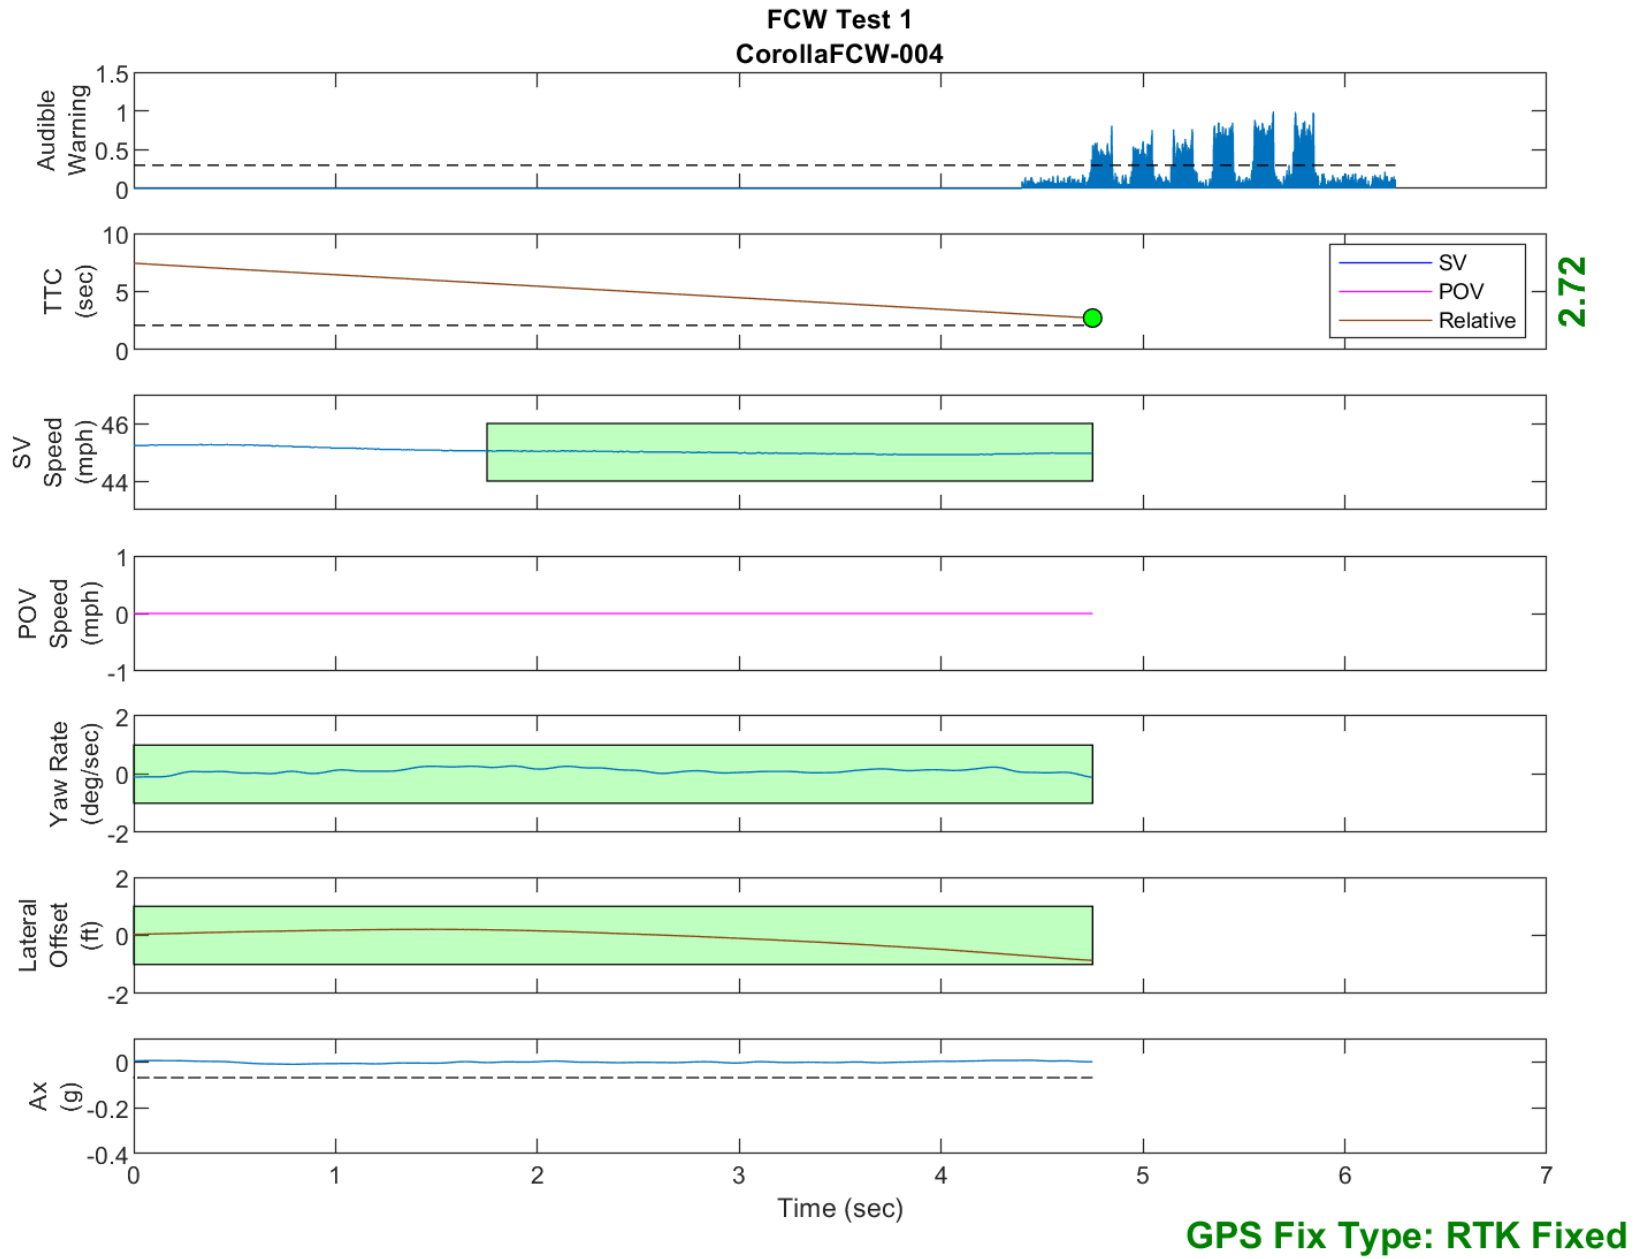


Figure D13. Time History for Run 4, FCW Test 1, Audible Warning

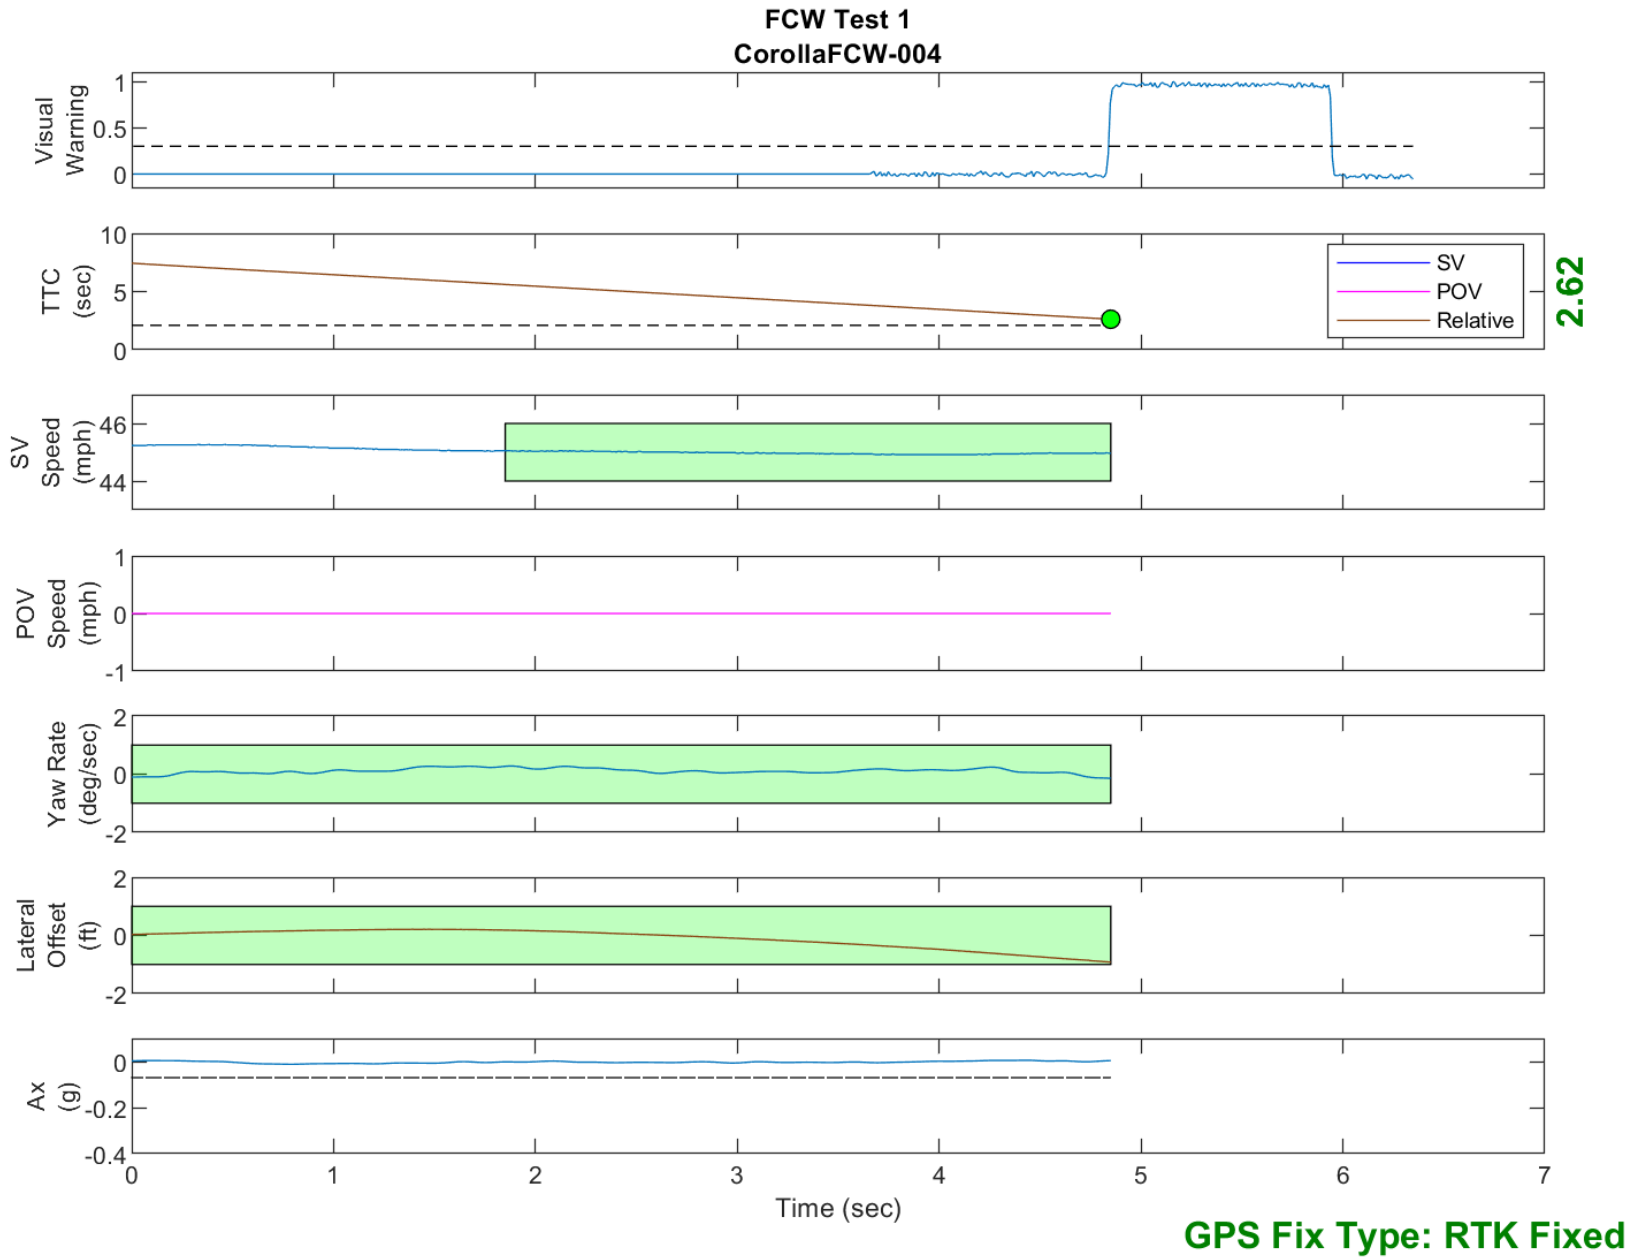


Figure D14. Time History for Run 4, FCW Test 1, Visual Warning

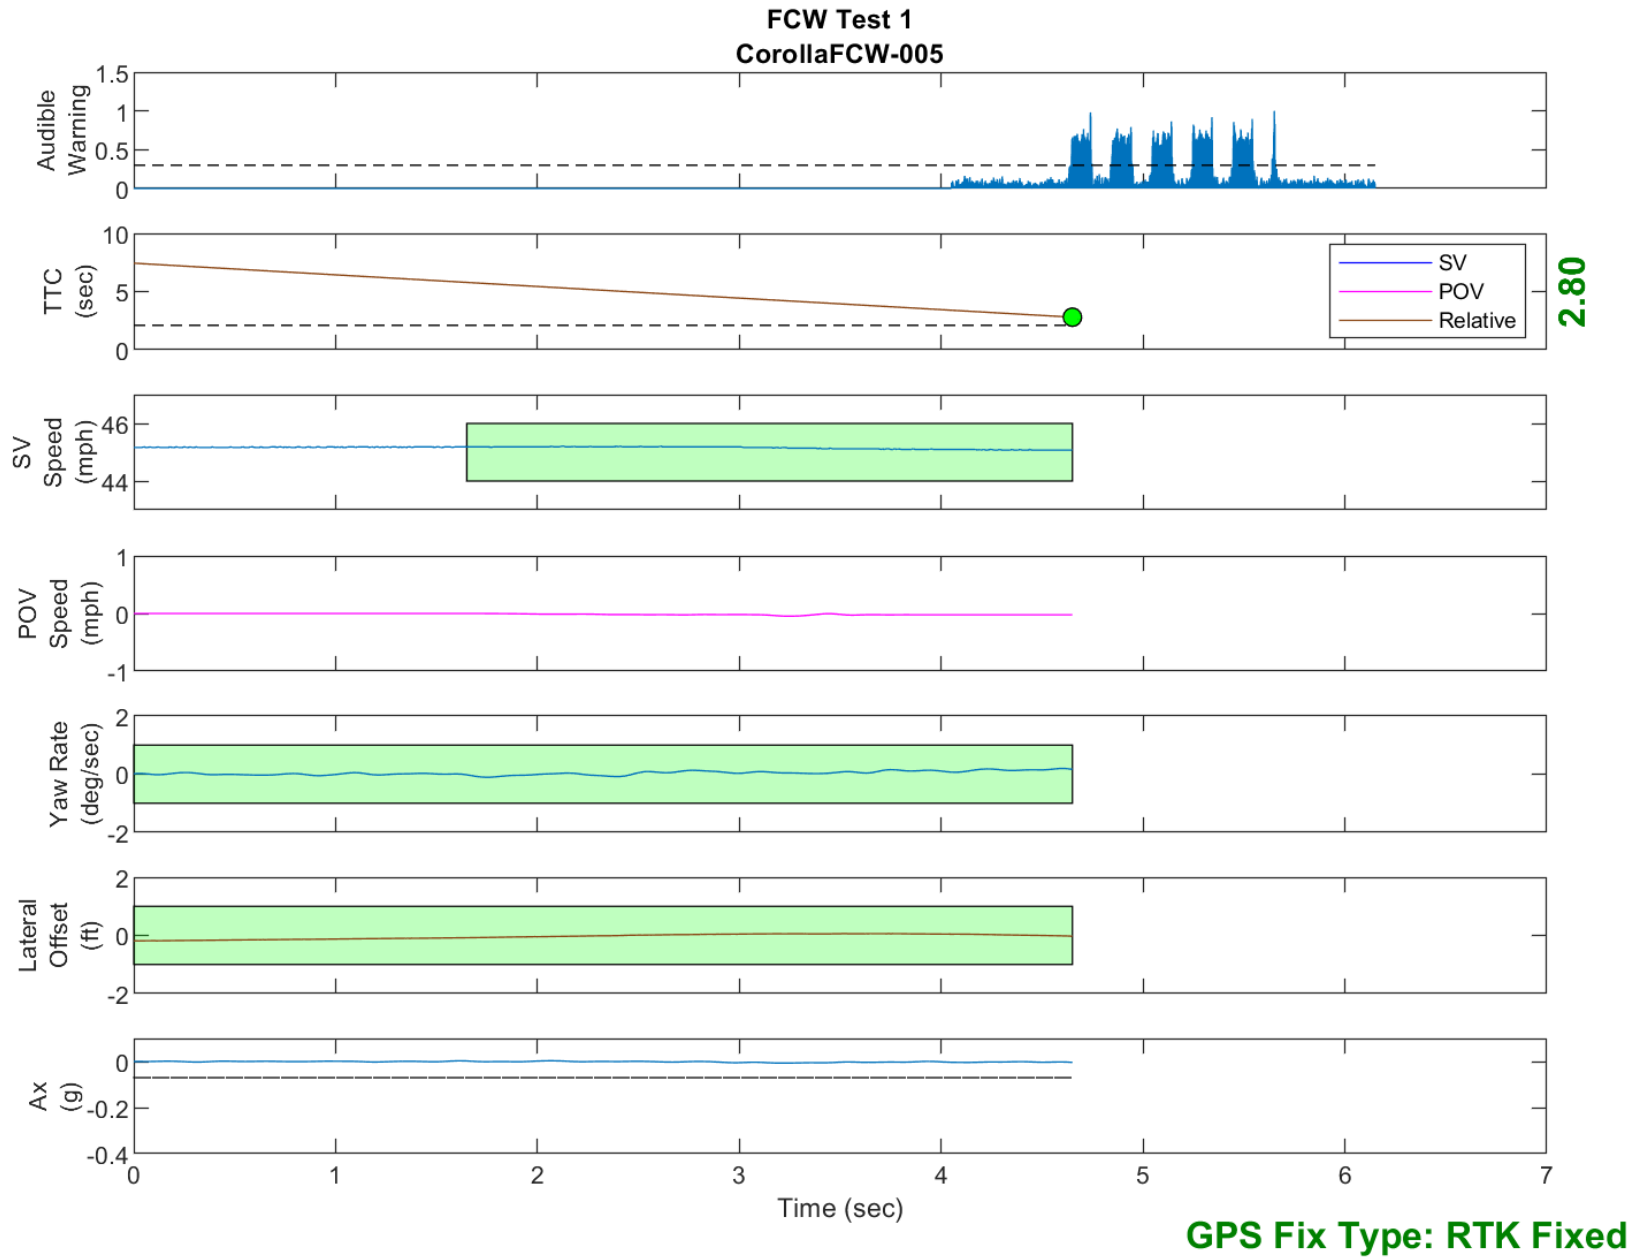


Figure D15. Time History for Run 5, FCW Test 1, Audible Warning

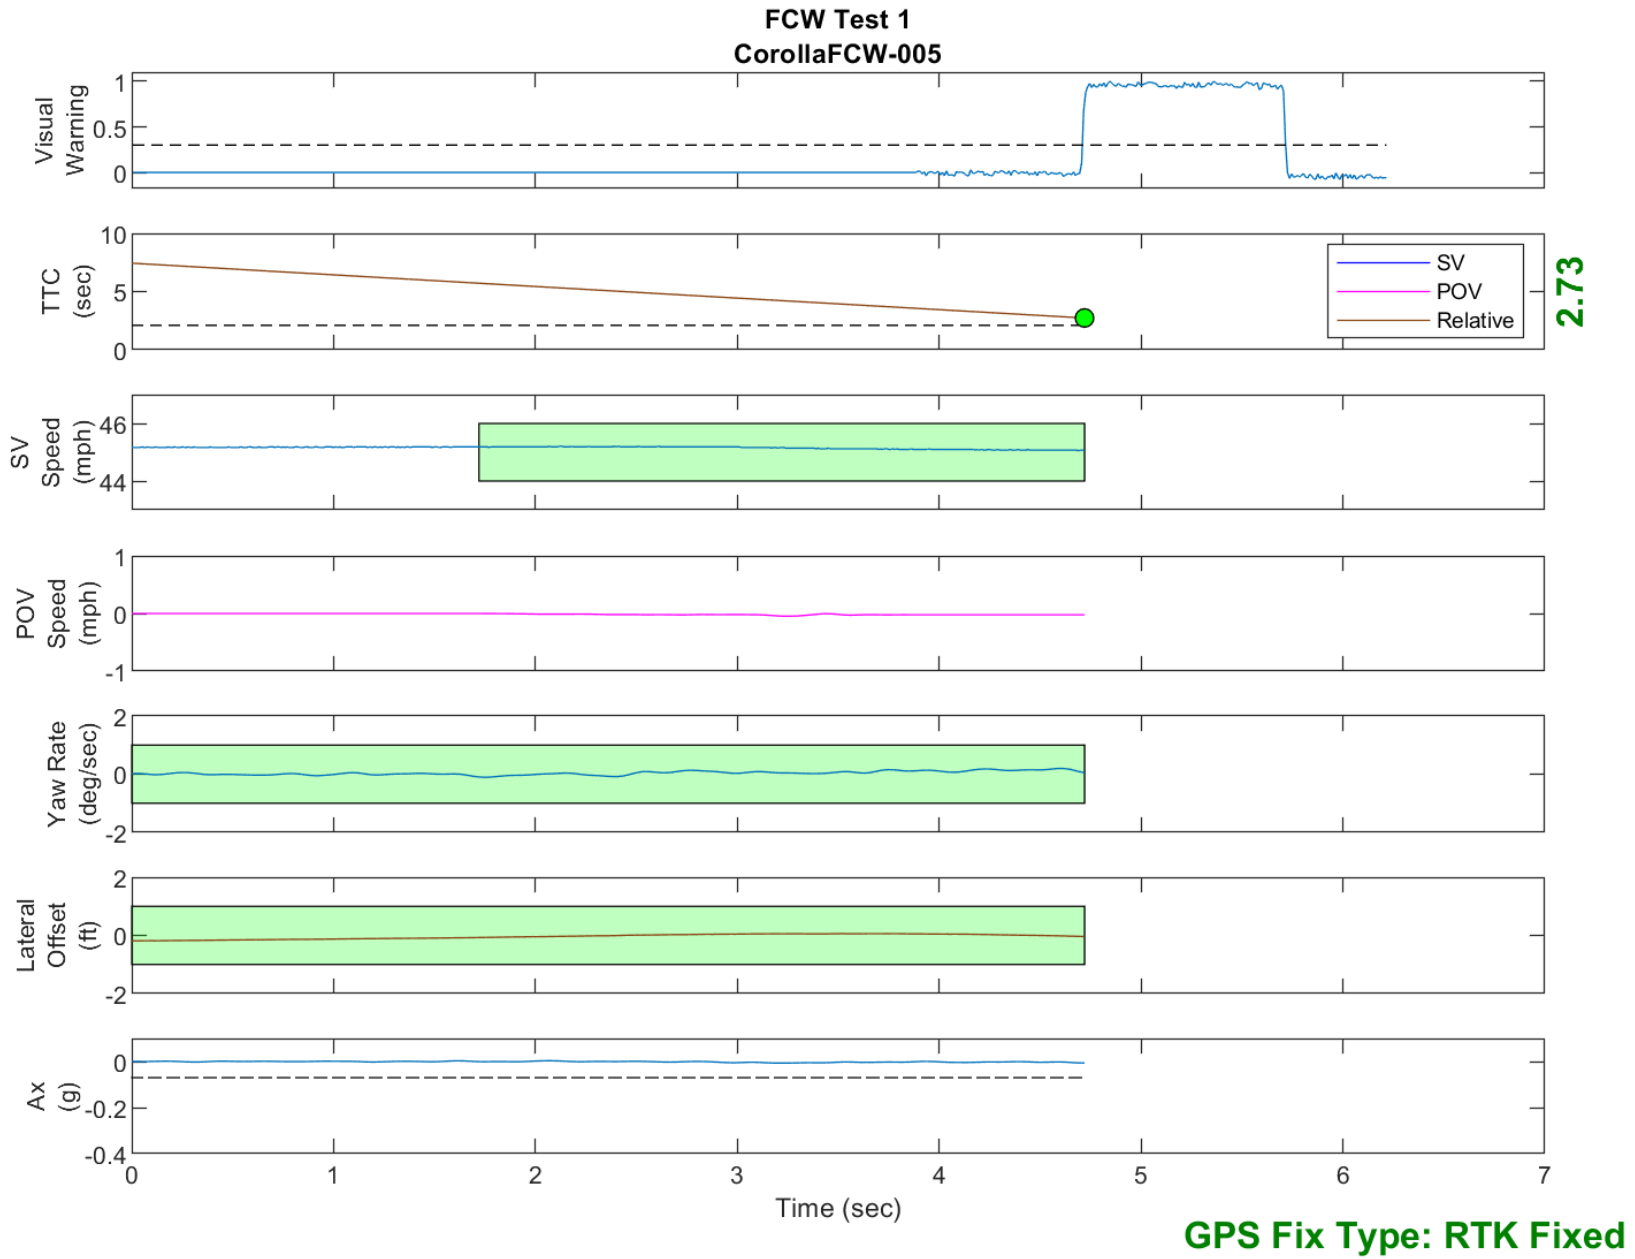


Figure D16. Time History for Run 5, FCW Test 1, Visual Warning

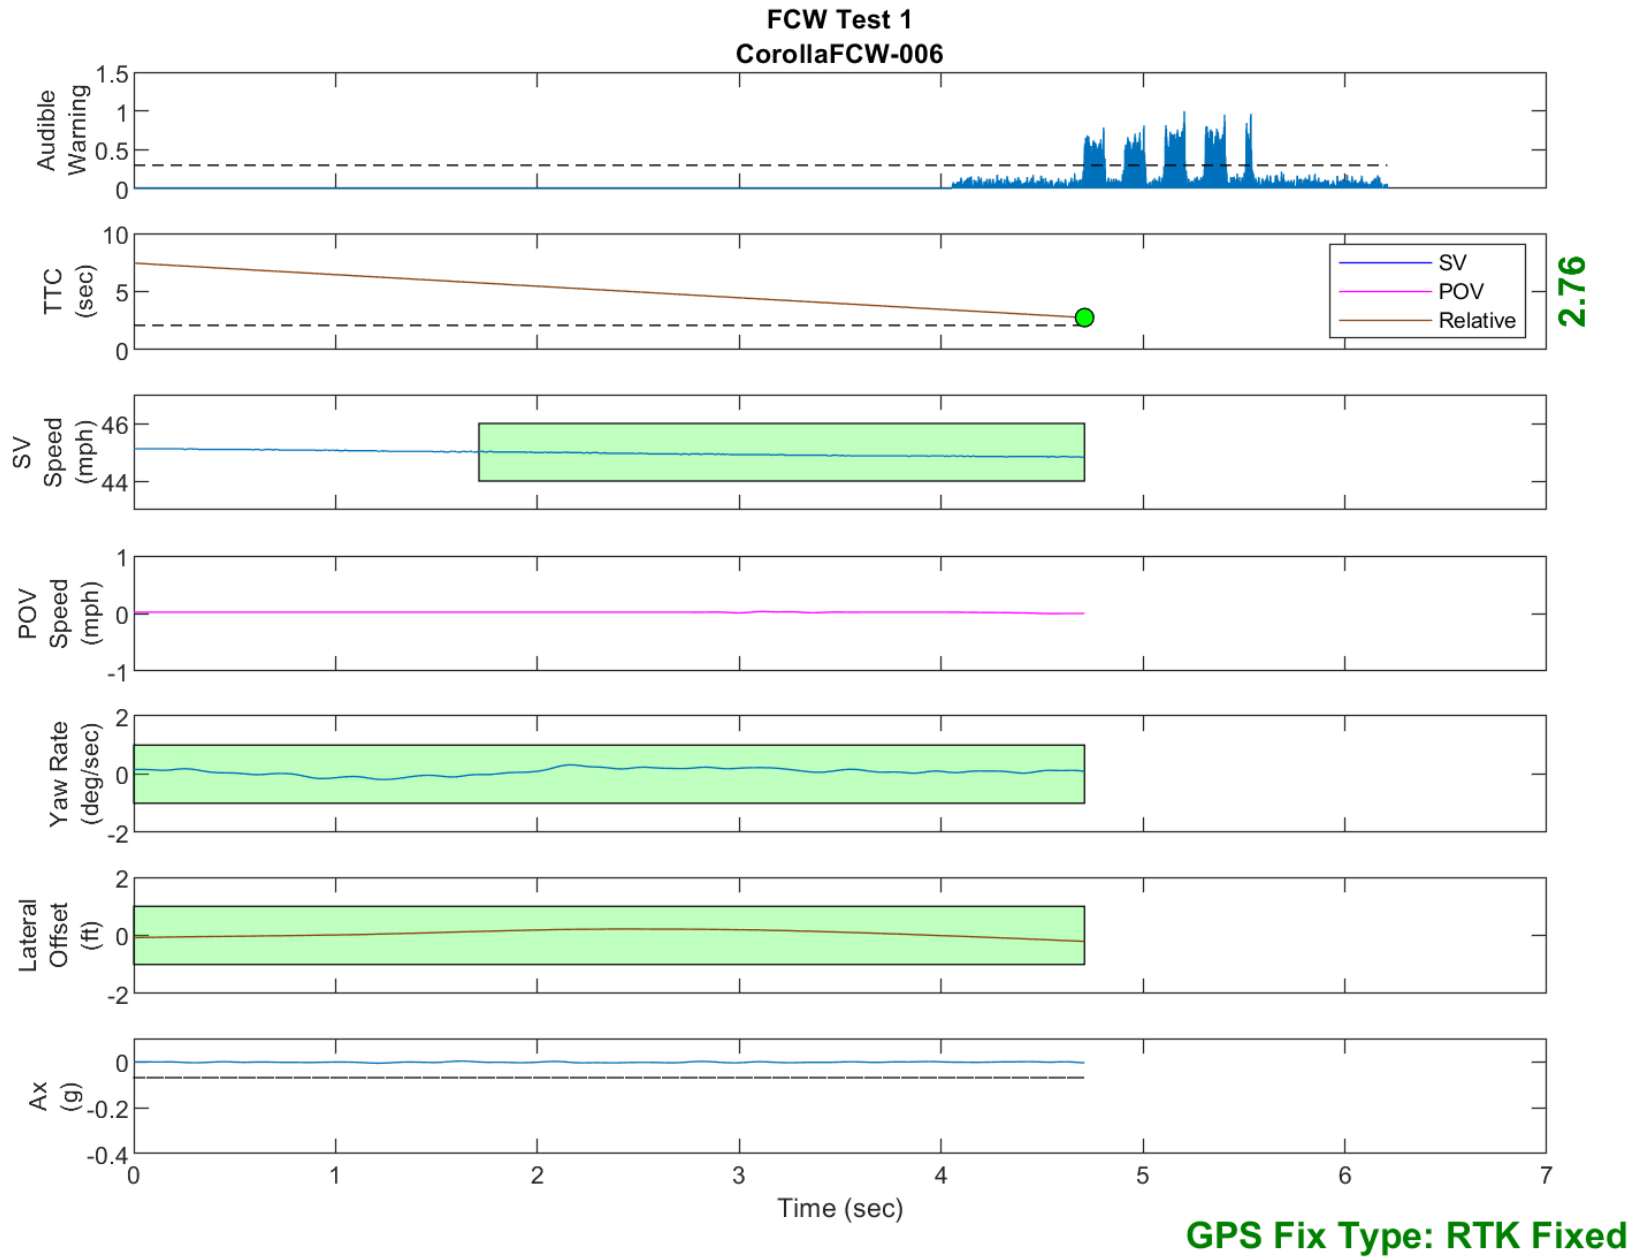


Figure D17. Time History for Run 6, FCW Test 1, Audible Warning

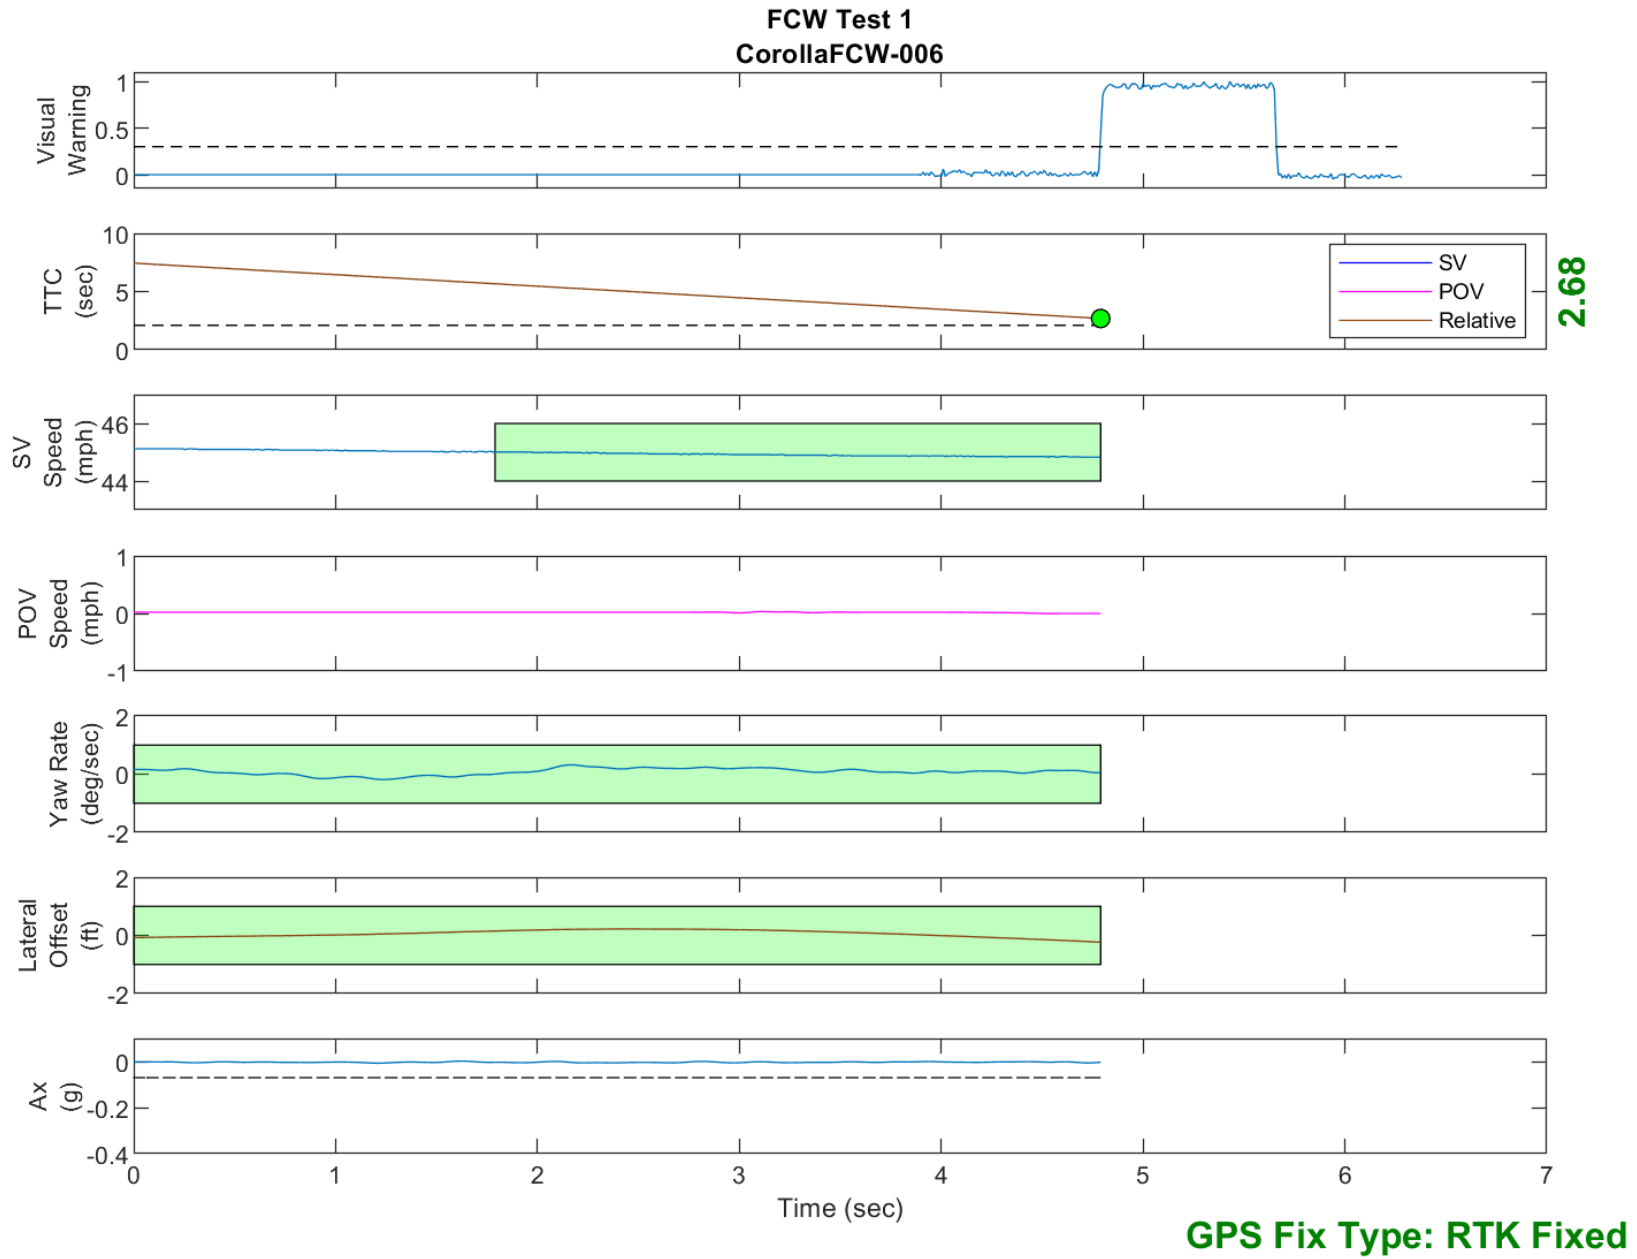


Figure D18. Time History for Run 6, FCW Test 1, Visual Warning



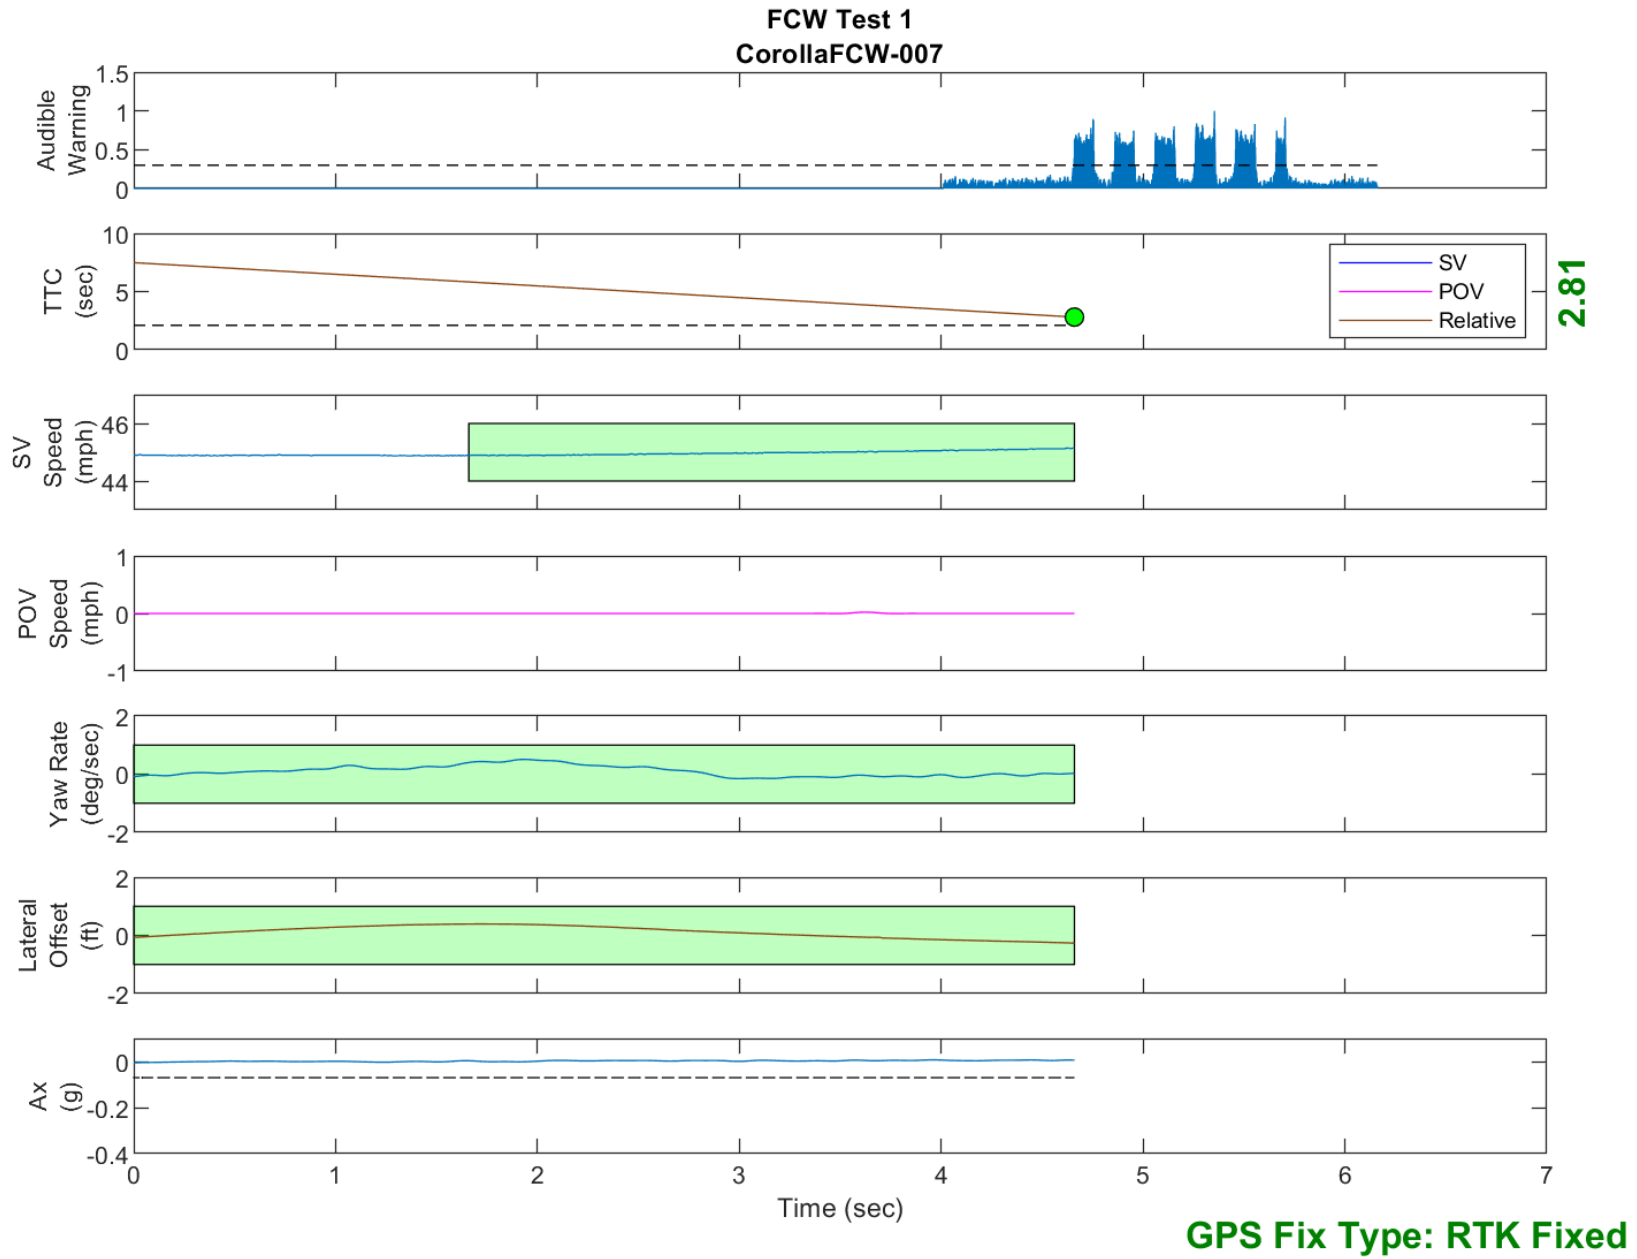


Figure D19. Time History for Run 7, FCW Test 1, Audible Warning

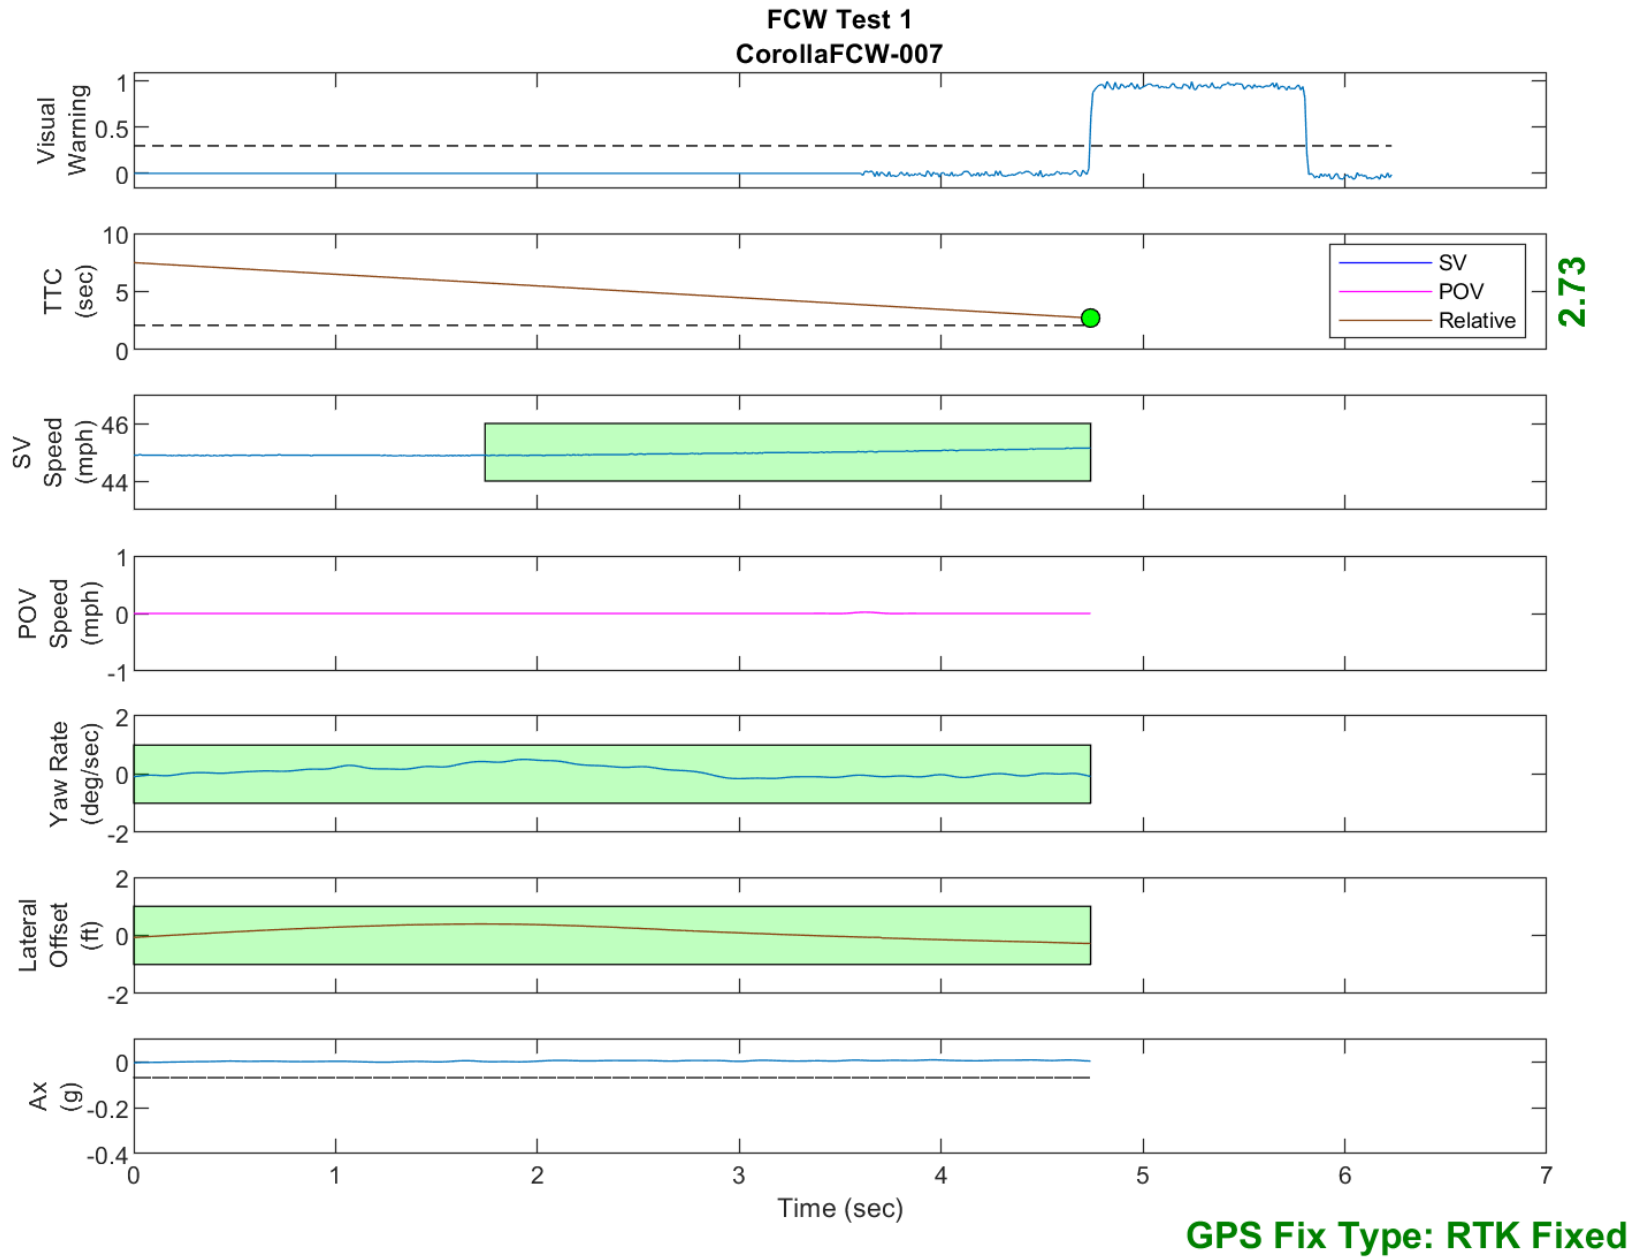


Figure D20. Time History for Run 7, FCW Test 1, Visual Warning

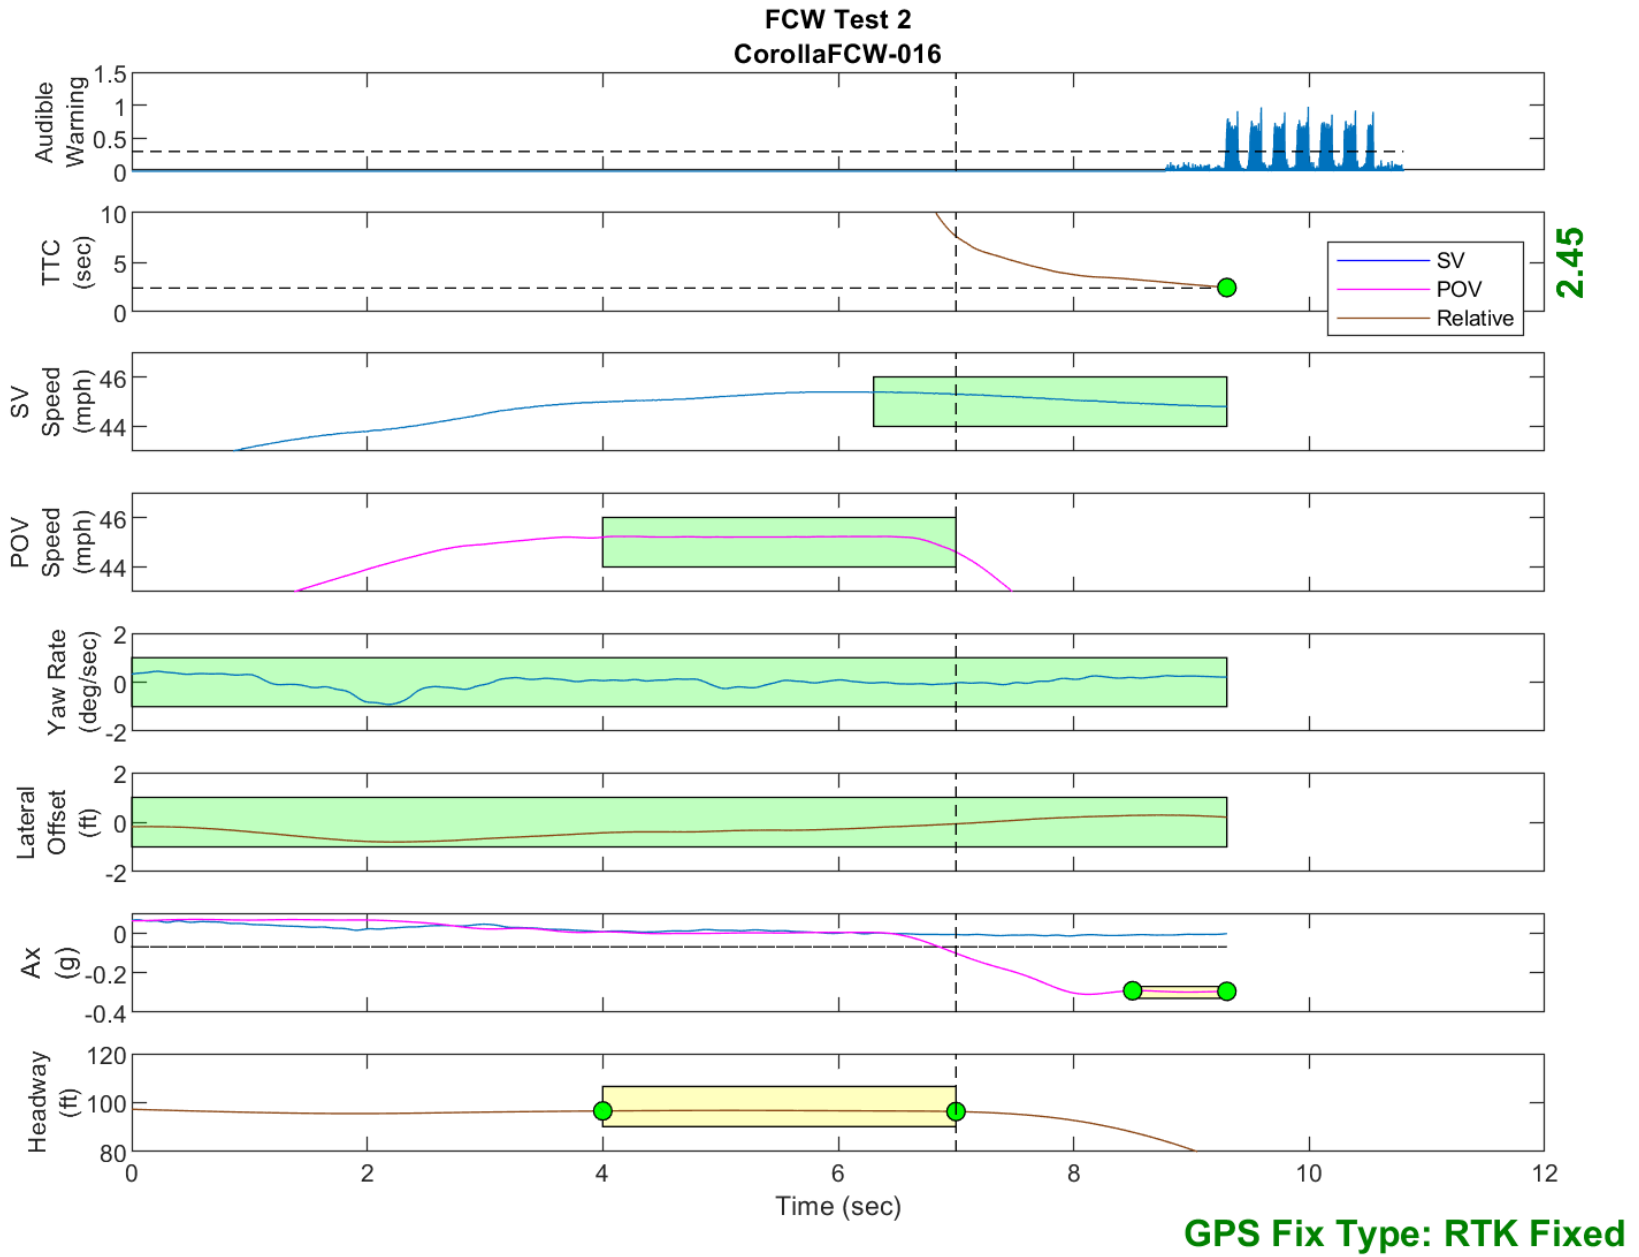


Figure D21. Time History for Run 16, FCW Test 2, Audible Warning

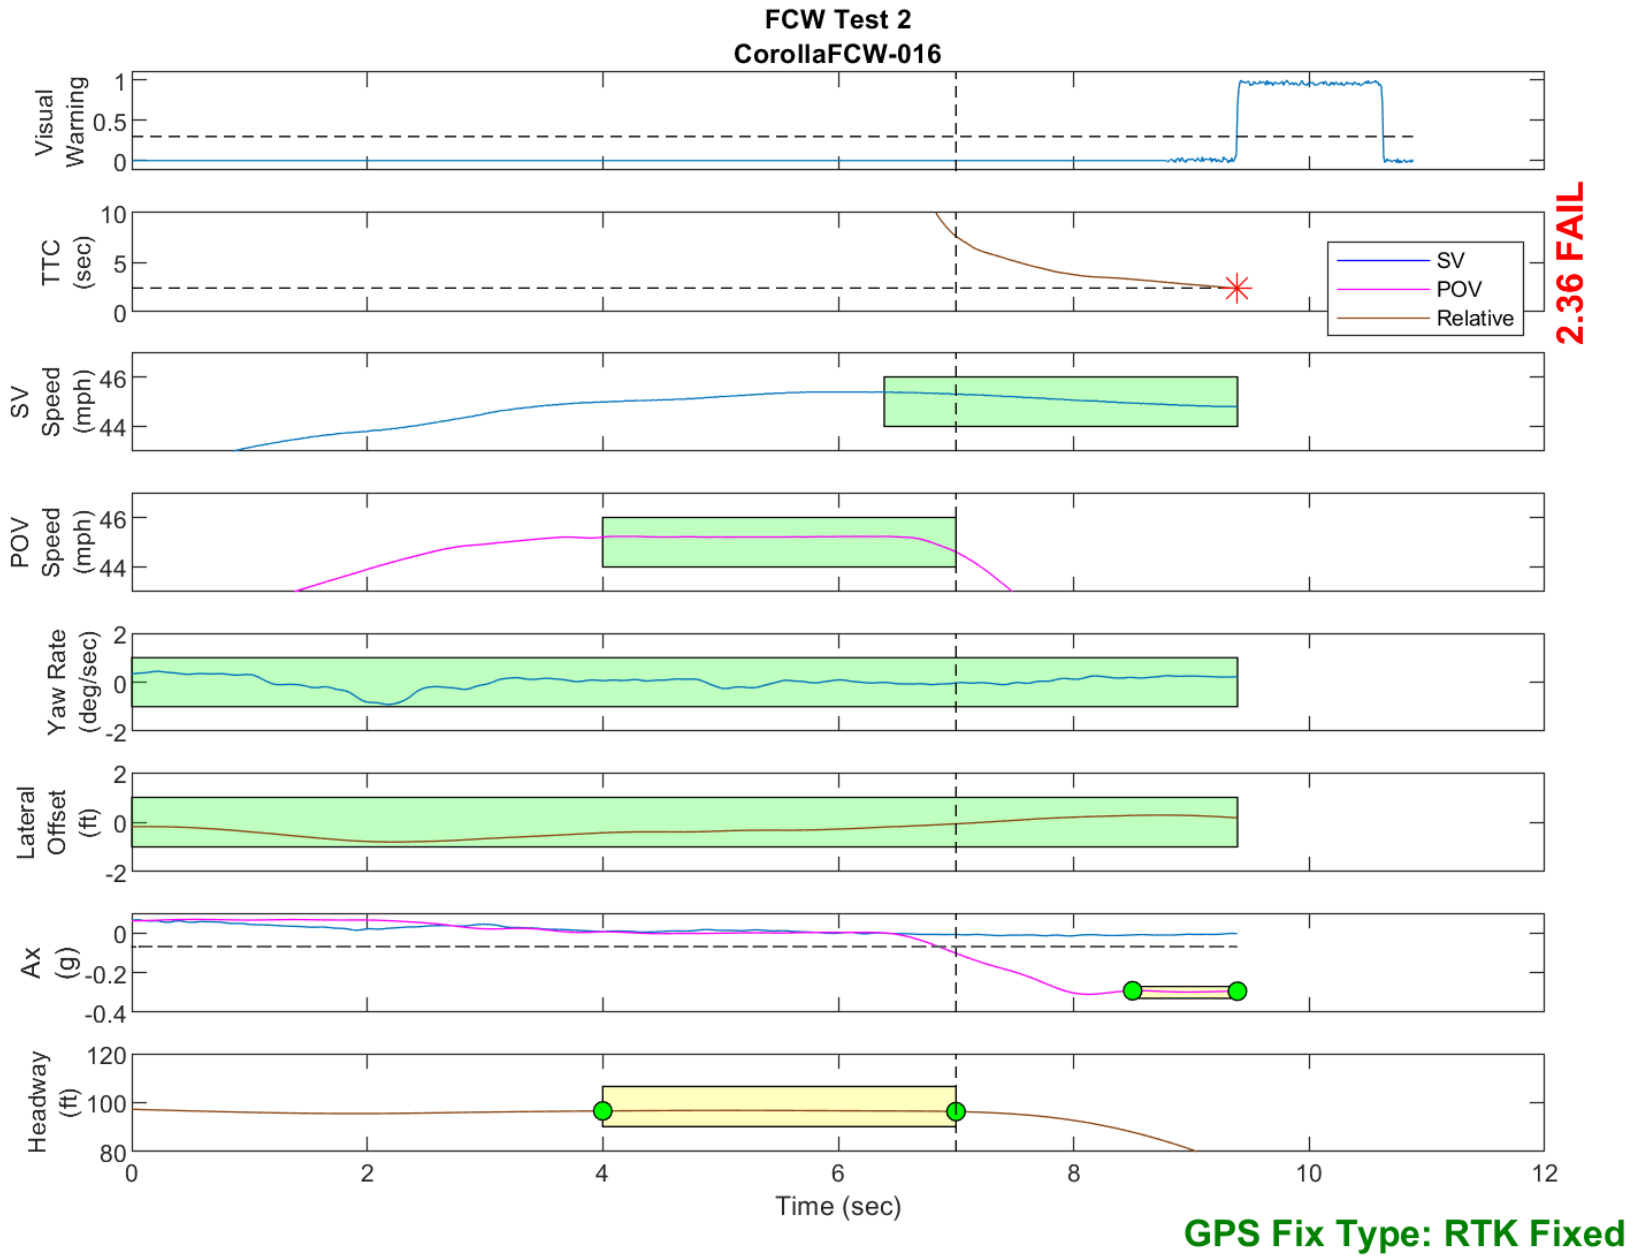


Figure D22. Time History for Run 16, FCW Test 2, Visual Warning

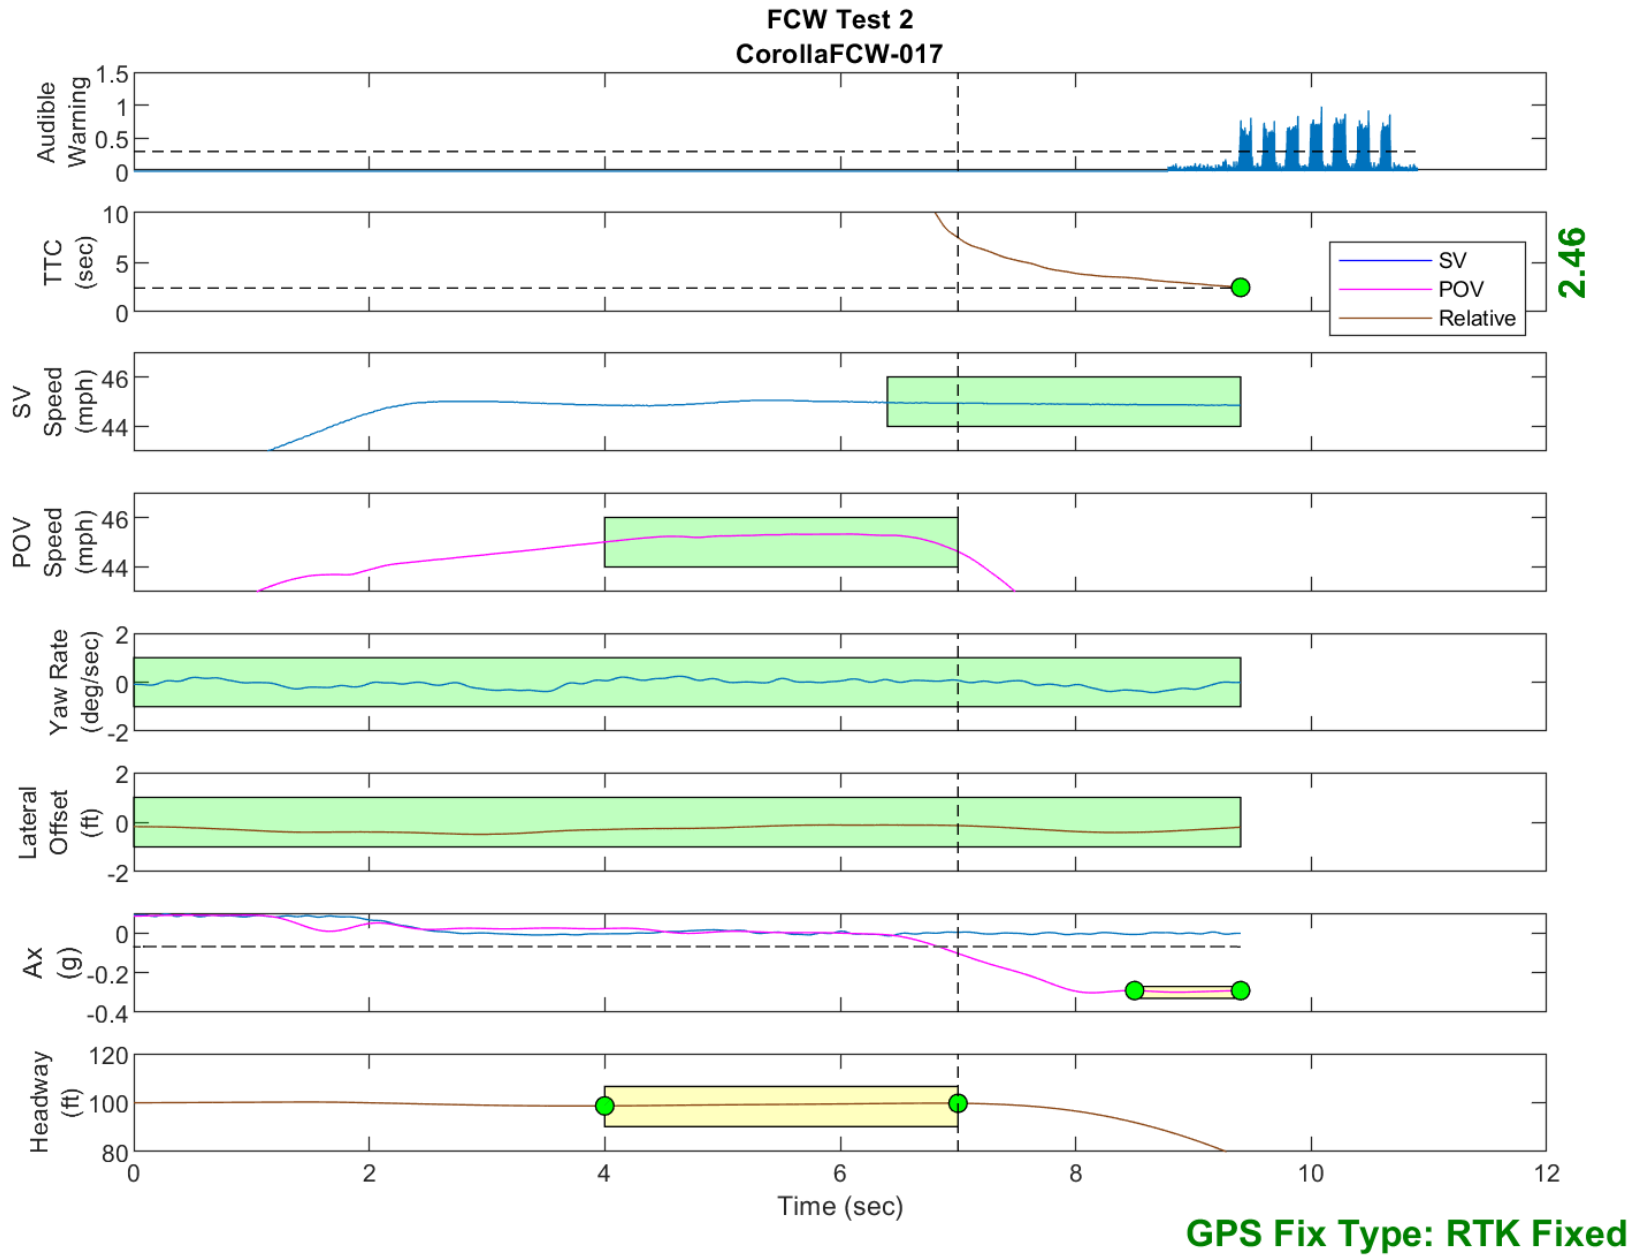


Figure D23. Time History for Run 17, FCW Test 2, Audible Warning

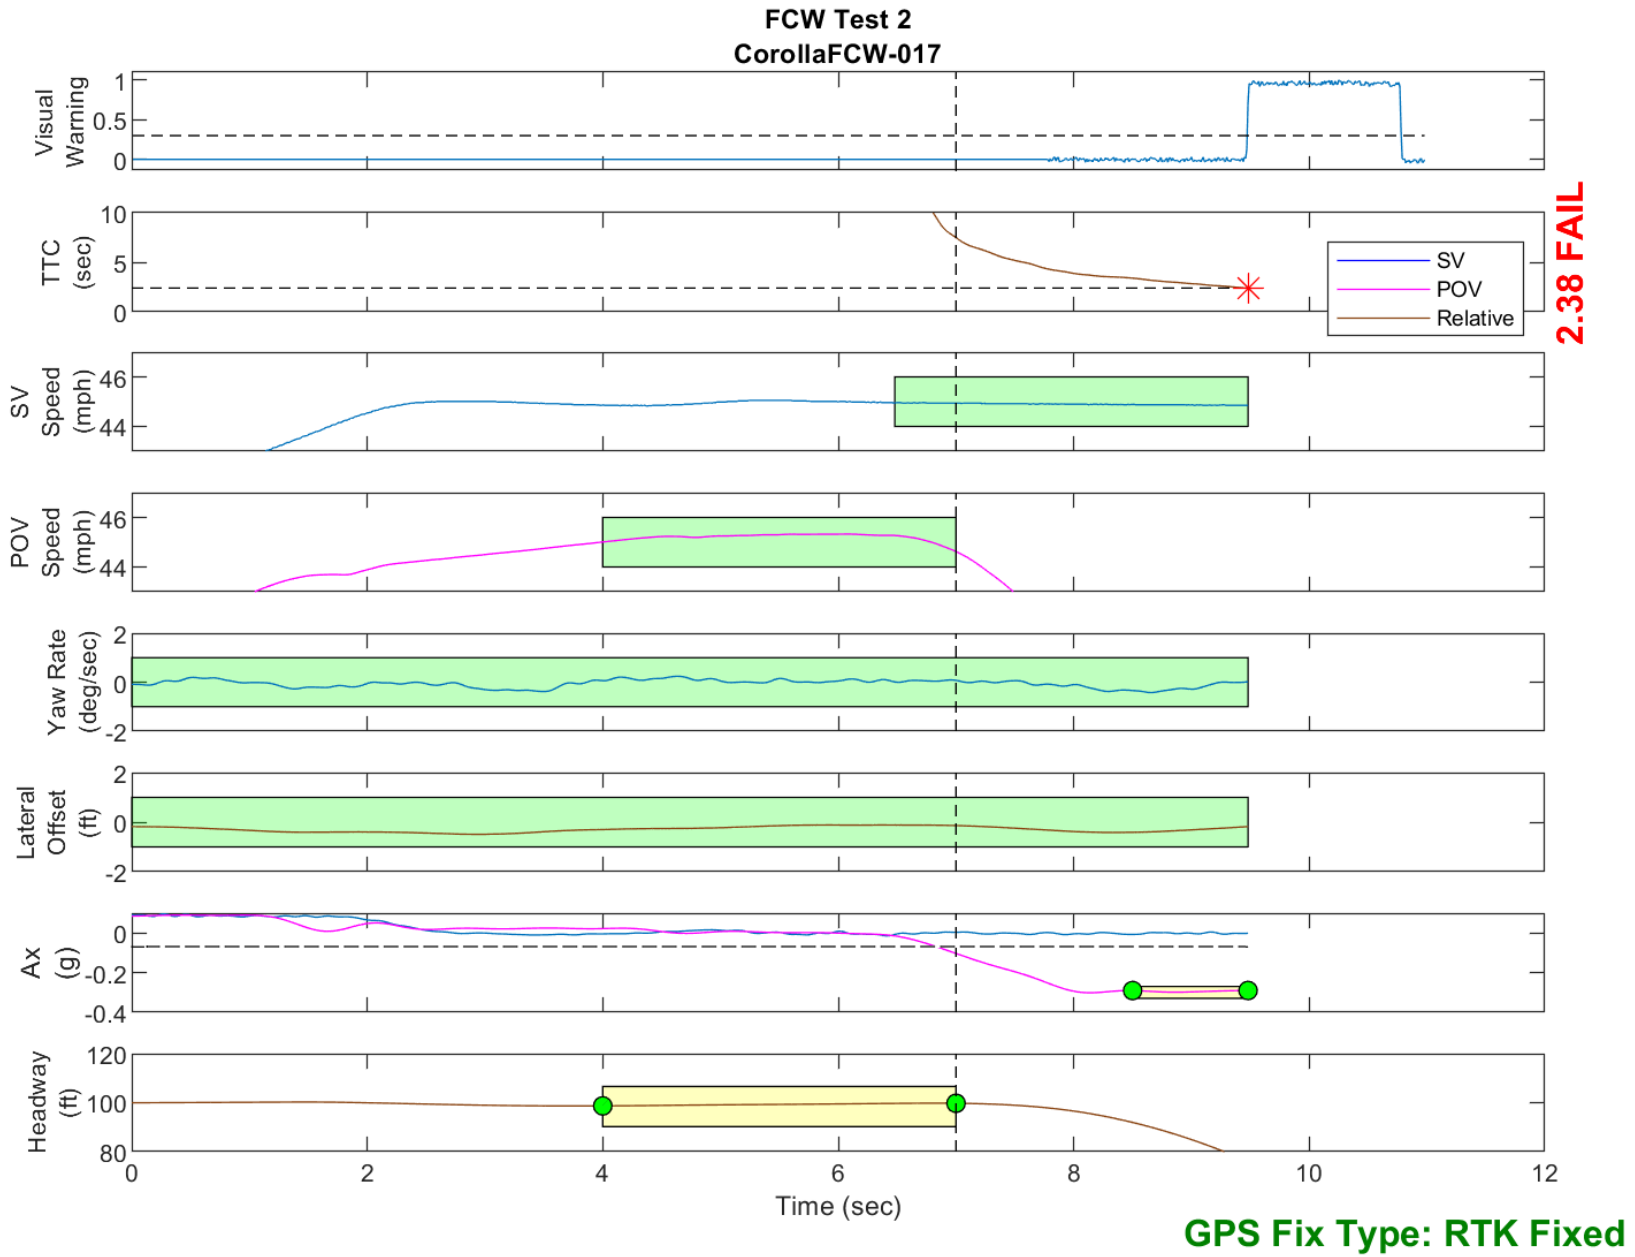


Figure D24. Time History for Run 17, FCW Test 2, Visual Warning



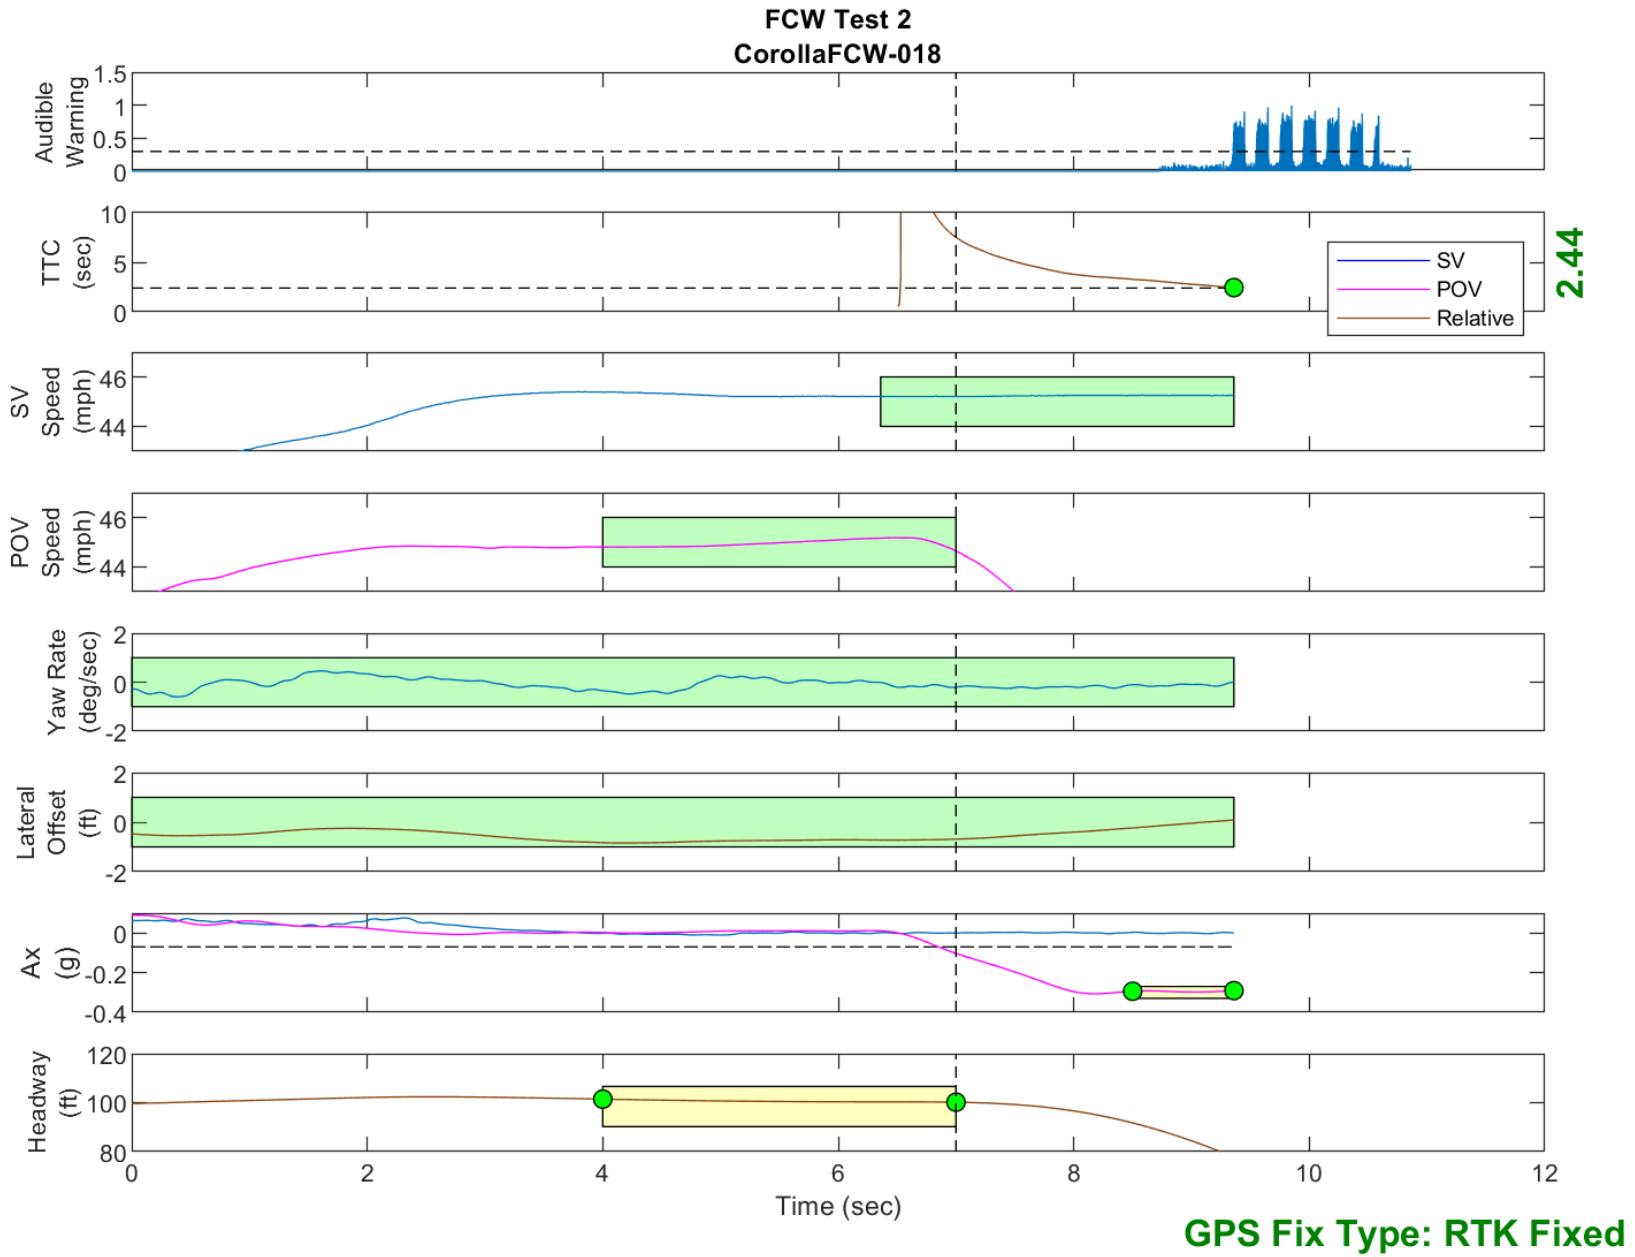


Figure D25. Time History for Run 18, FCW Test 2, Audible Warning

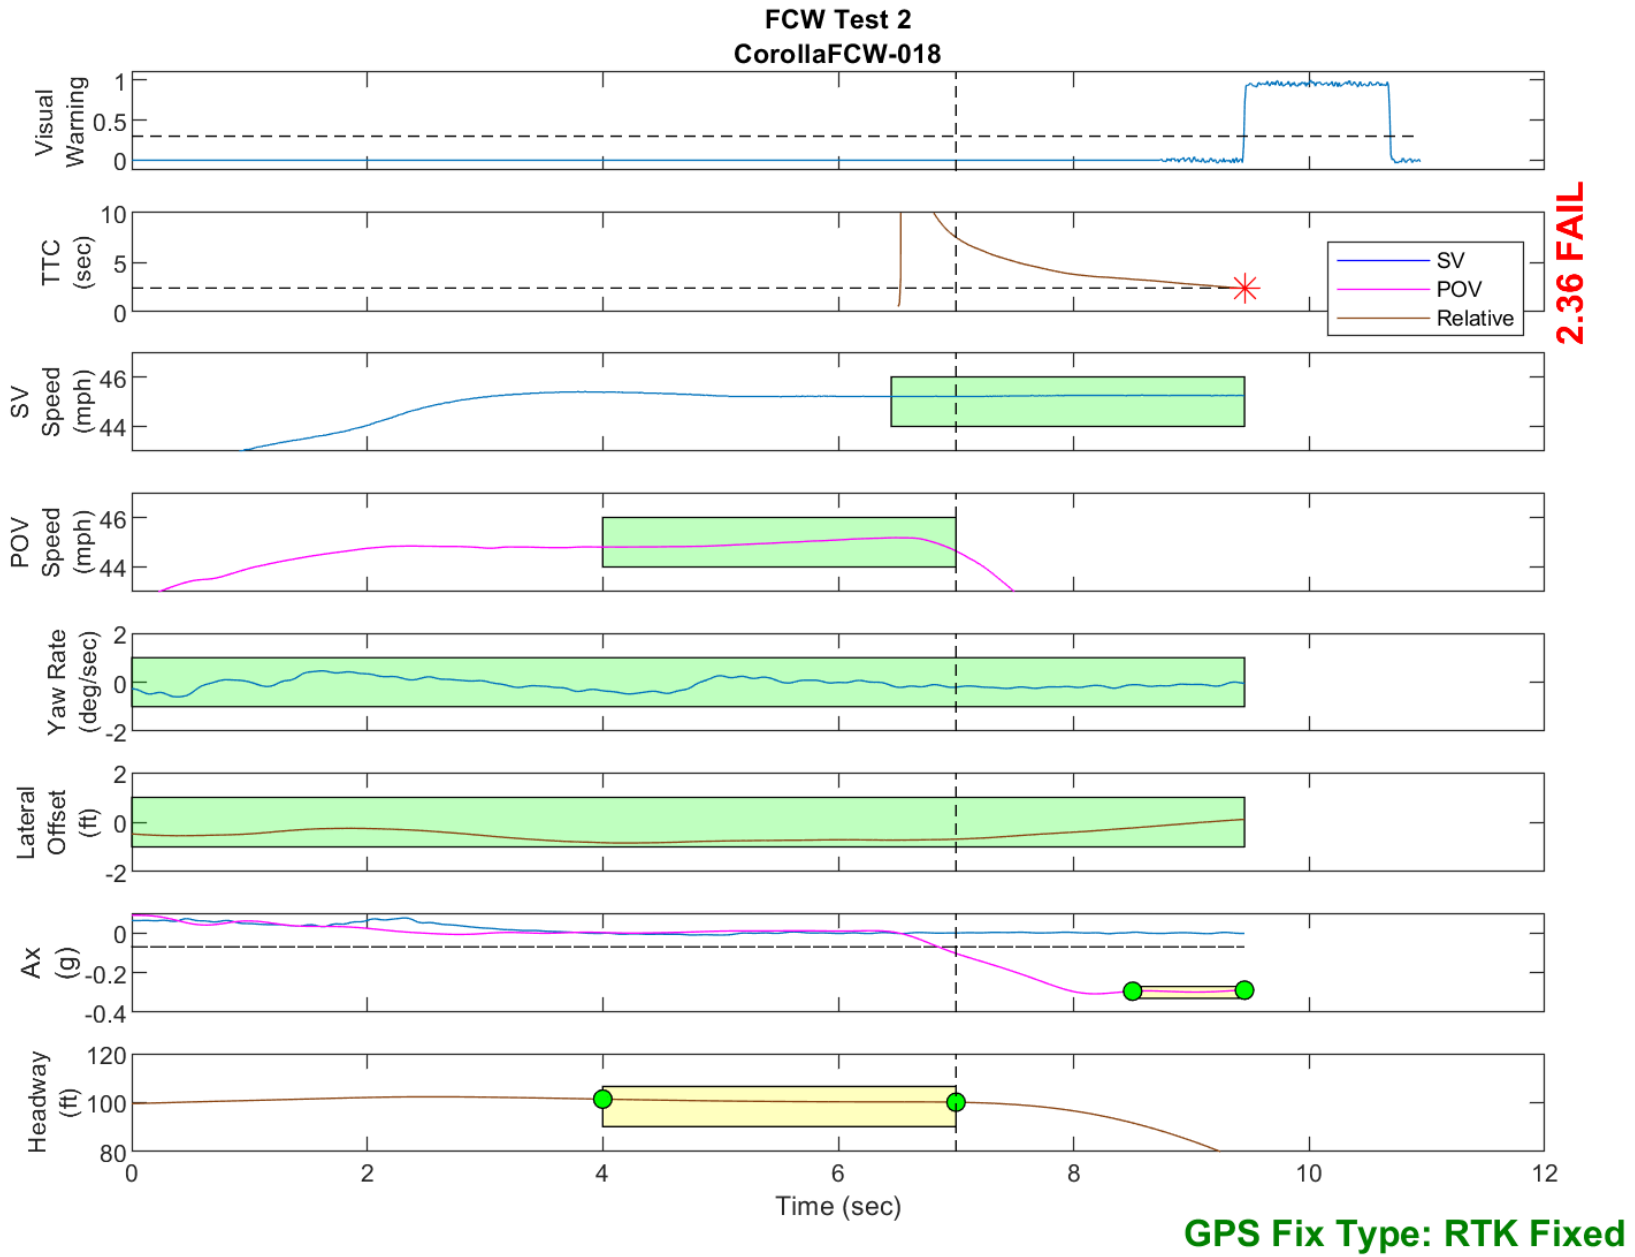


Figure D26. Time History for Run 18, FCW Test 2, Visual Warning

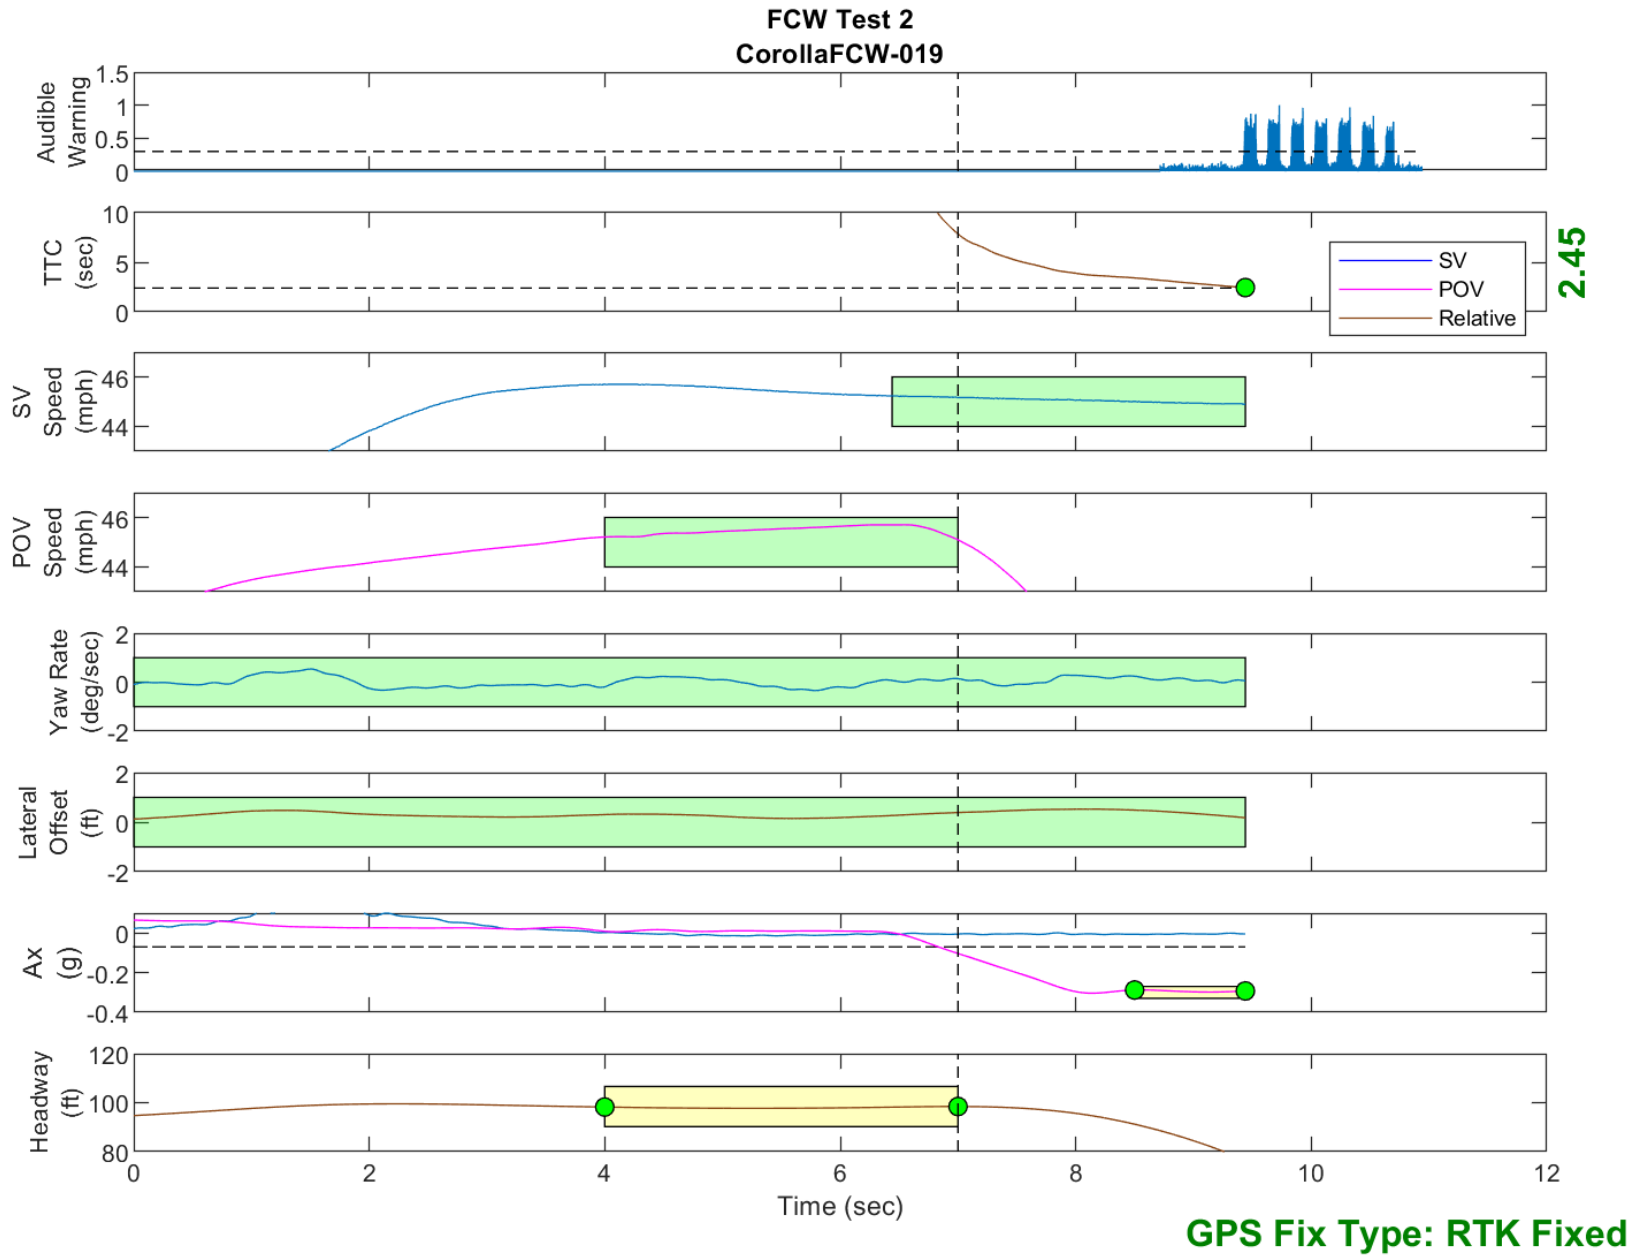


Figure D27. Time History for Run 19, FCW Test 2, Audible Warning

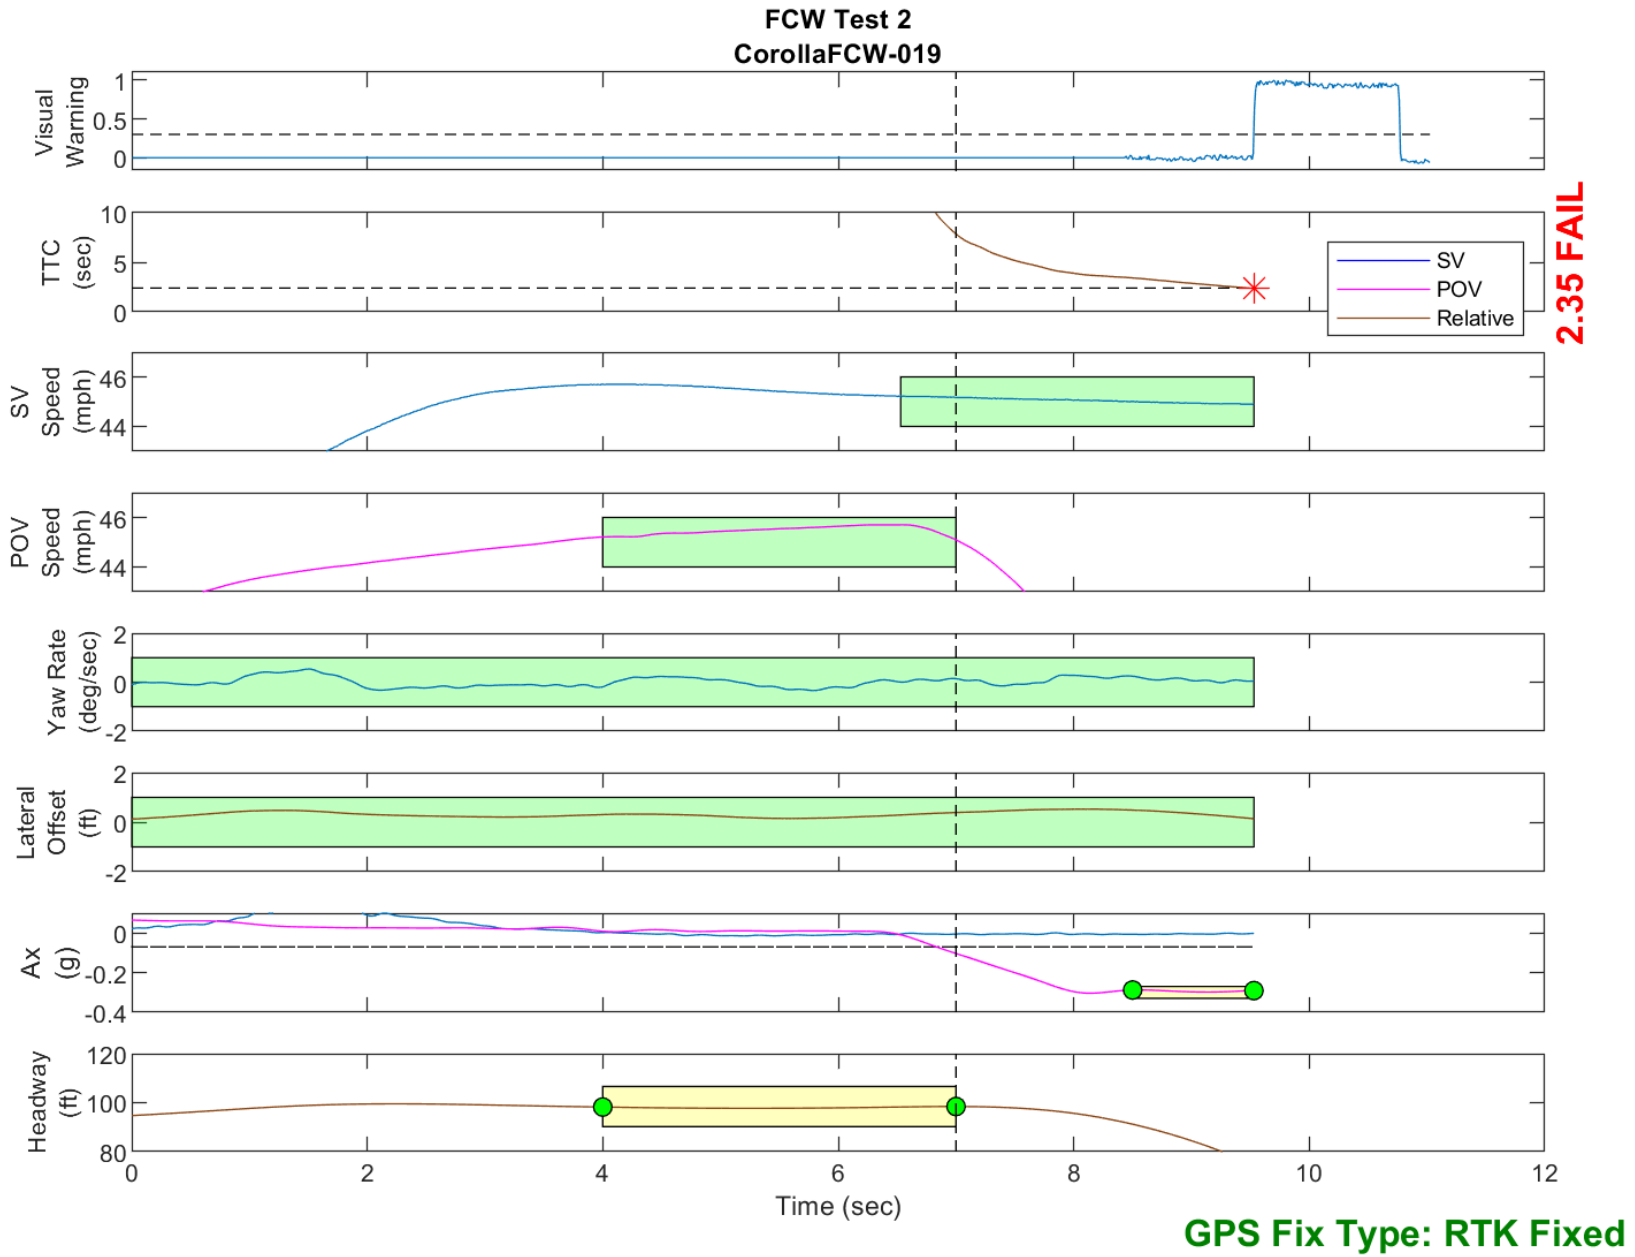


Figure D28. Time History for Run 19, FCW Test 2, Visual Warning

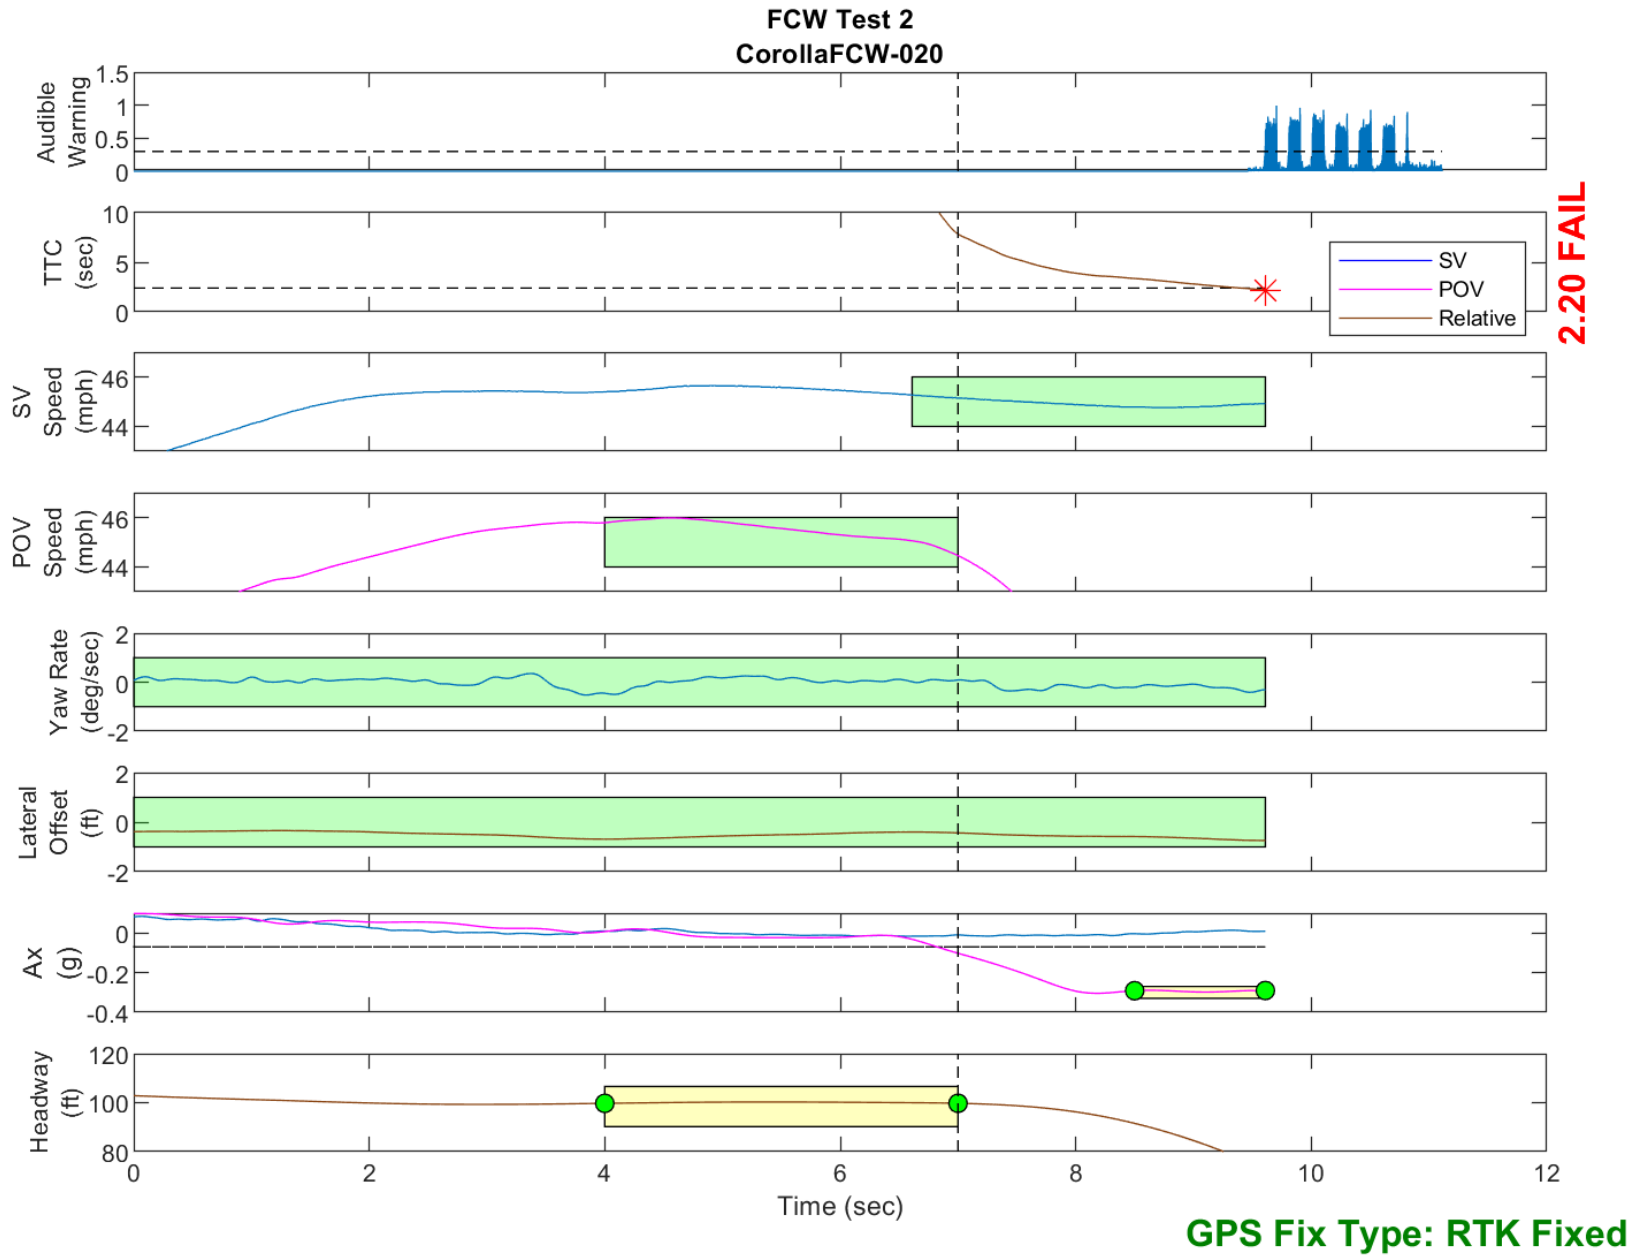


Figure D29. Time History for Run 20, FCW Test 2, Audible Warning

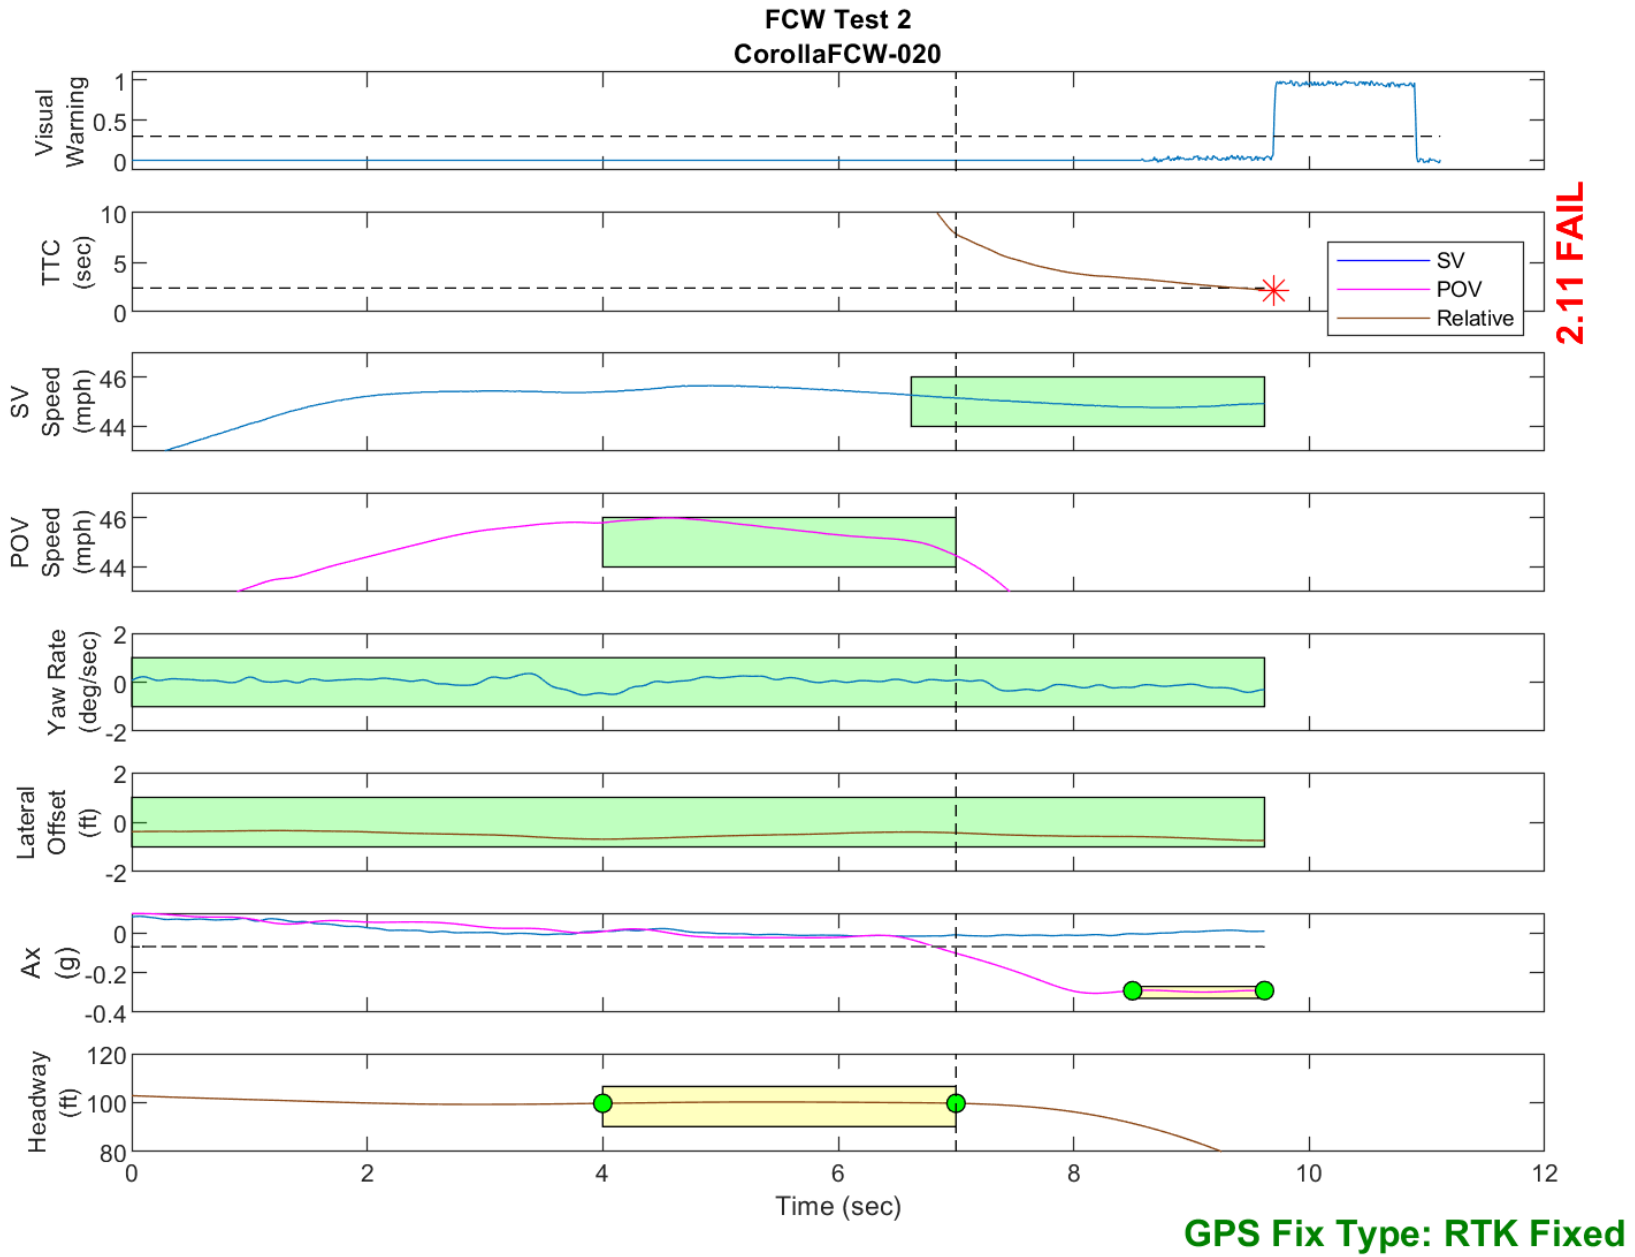


Figure D30. Time History for Run 20, FCW Test 2, Visual Warning





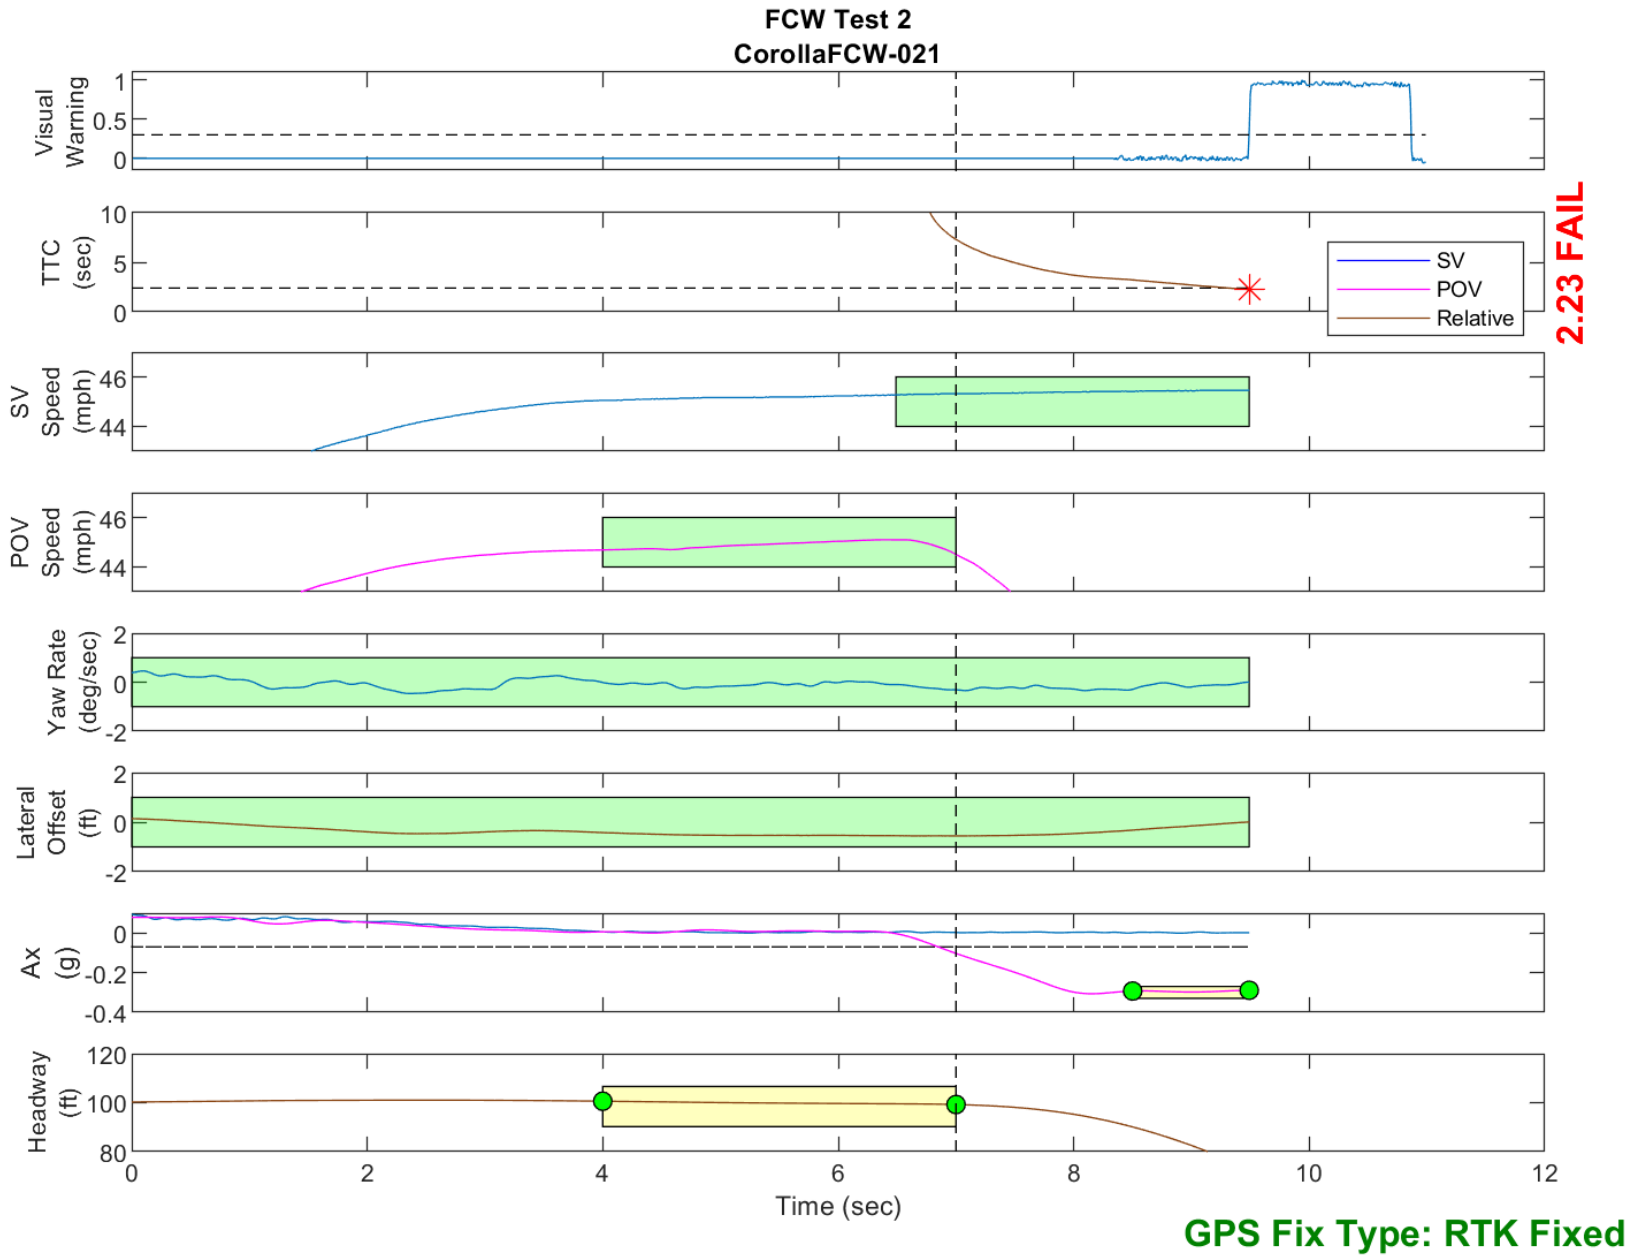


Figure D32. Time History for Run 21, FCW Test 2, Visual Warning

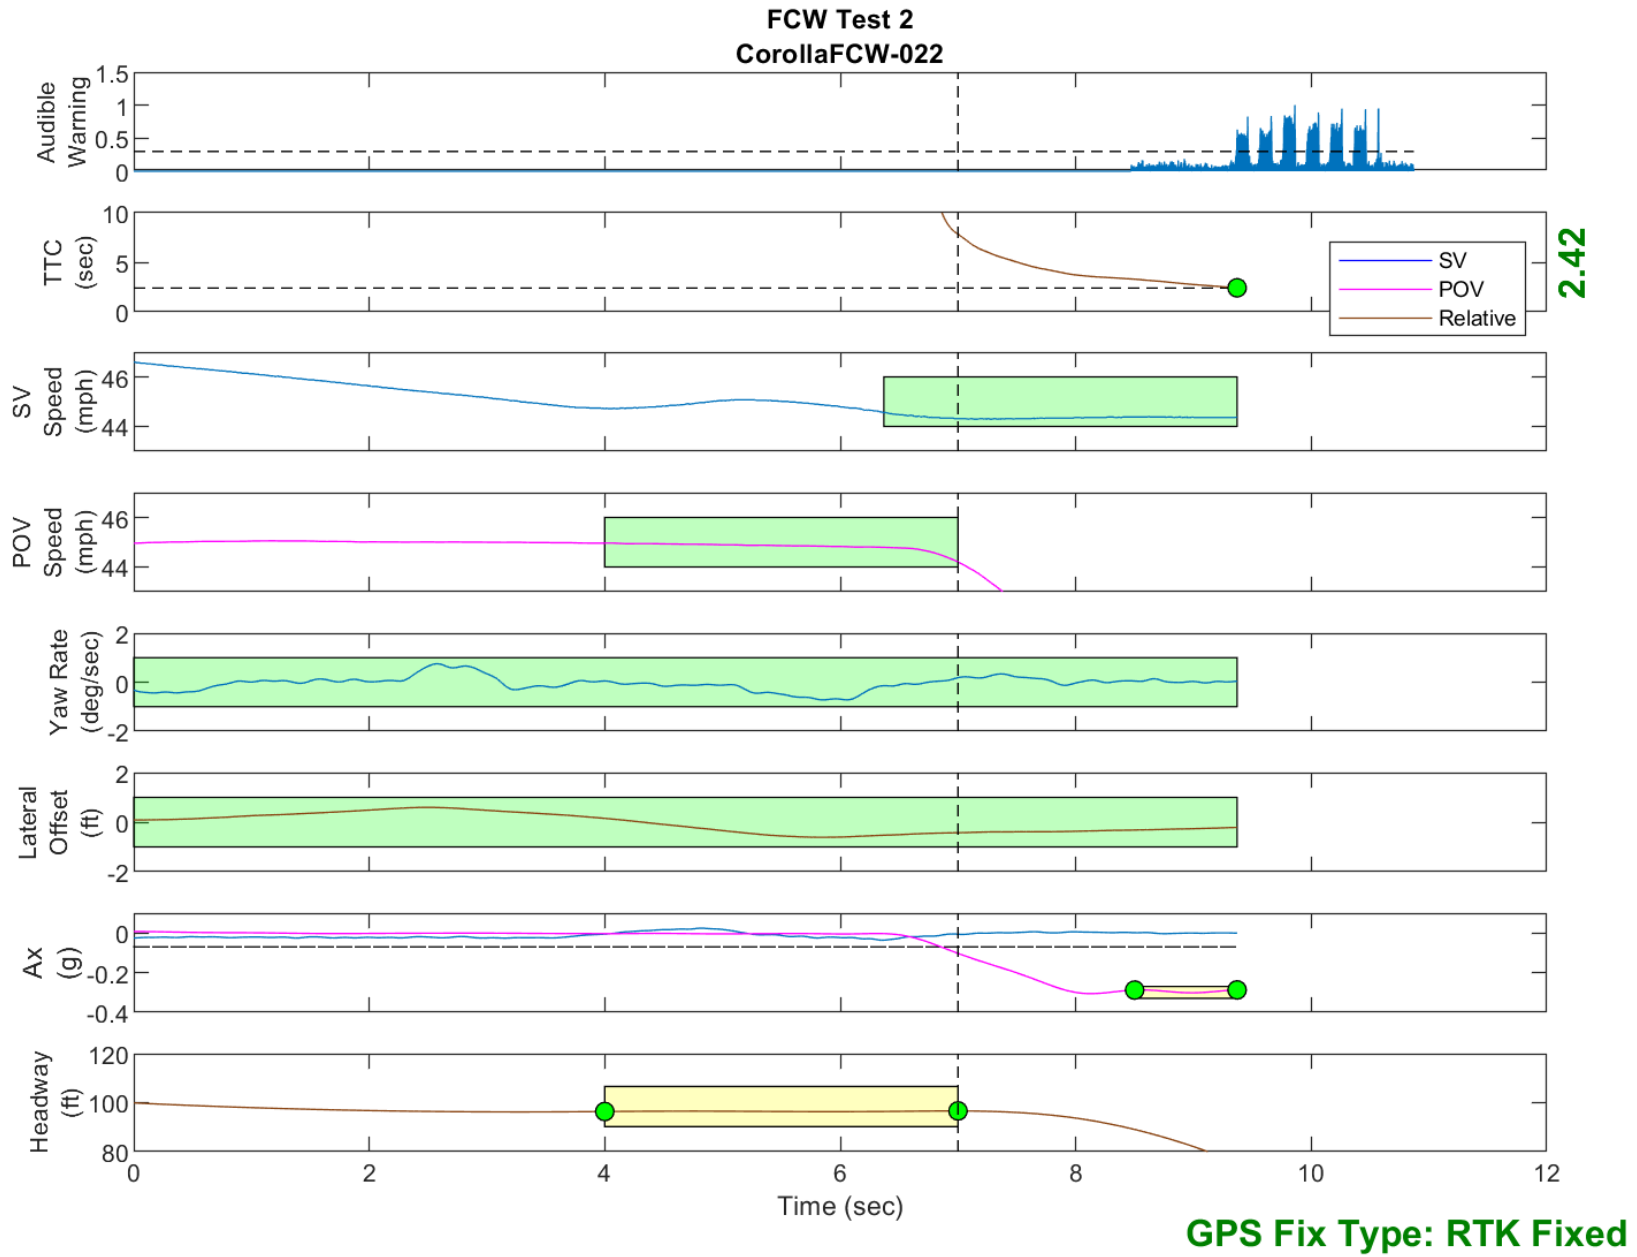


Figure D33. Time History for Run 22, FCW Test 2, Audible Warning

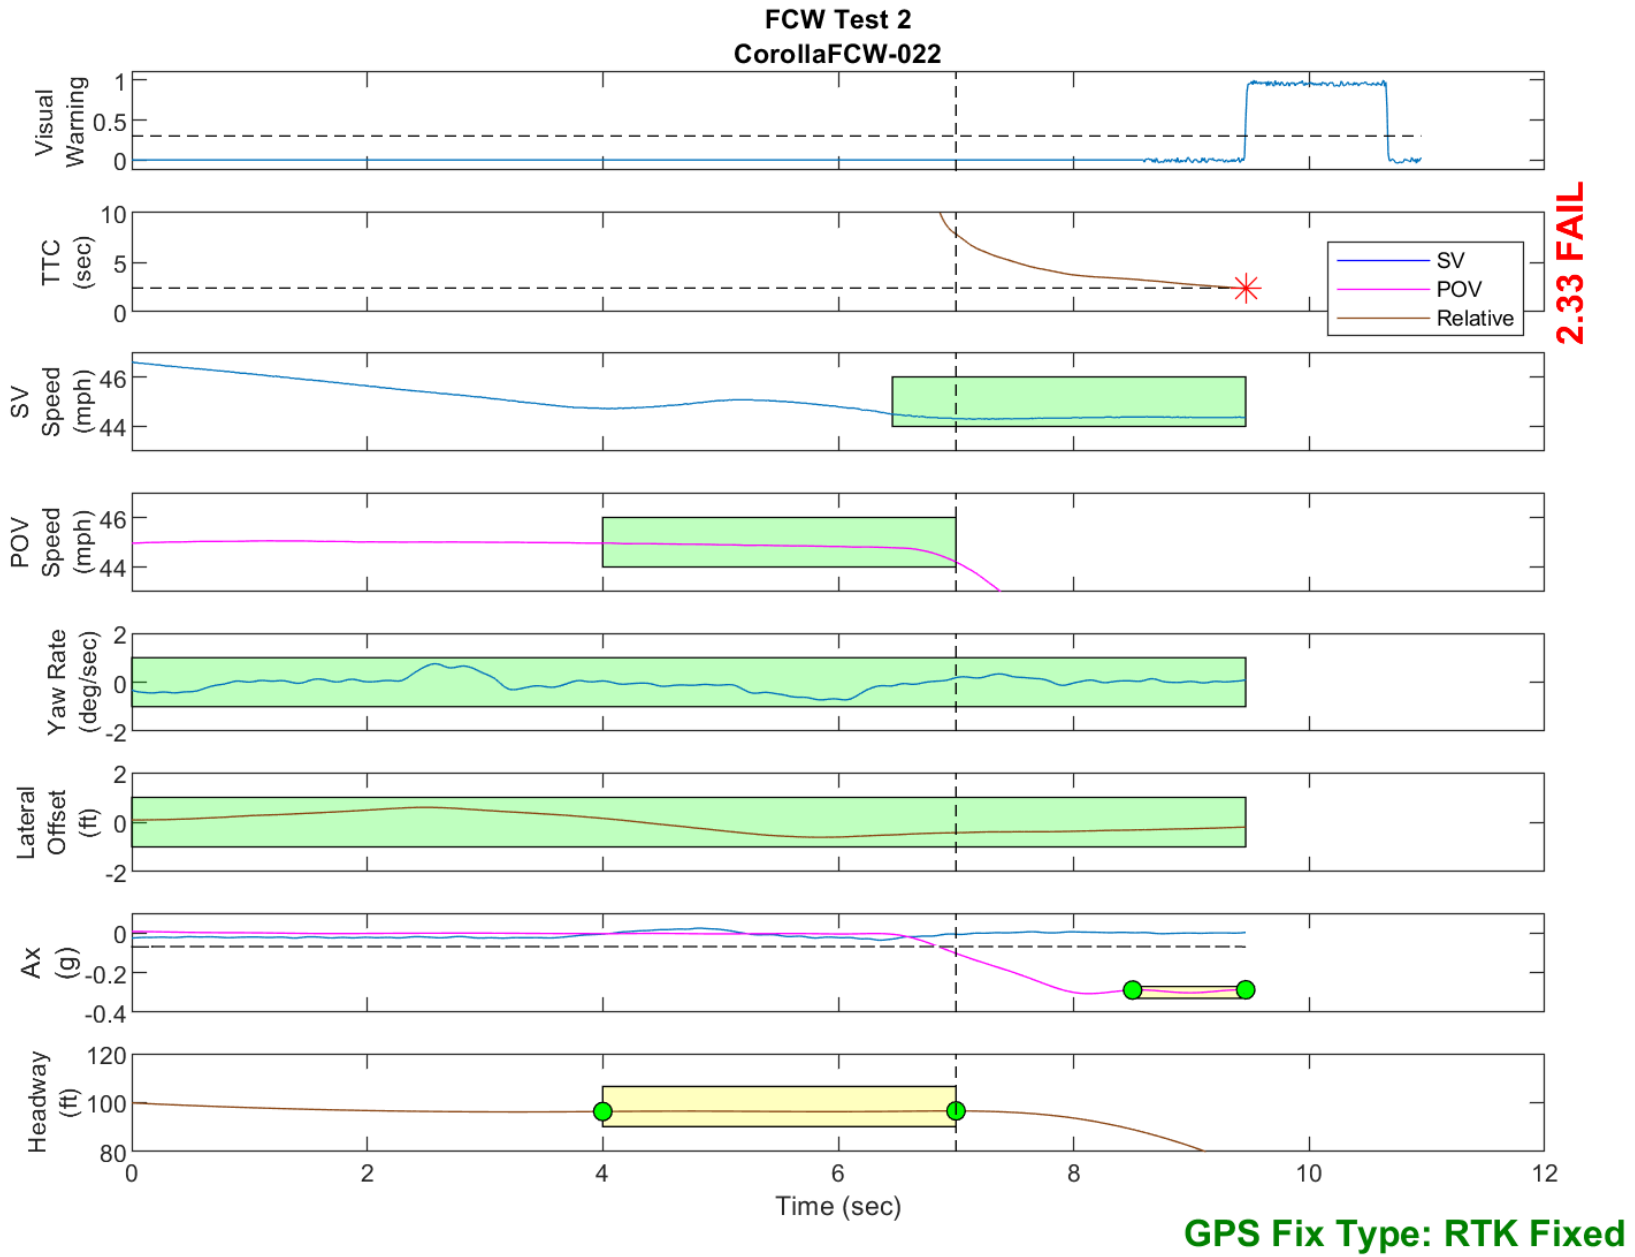


Figure D34. Time History for Run 22, FCW Test 2, Visual Warning

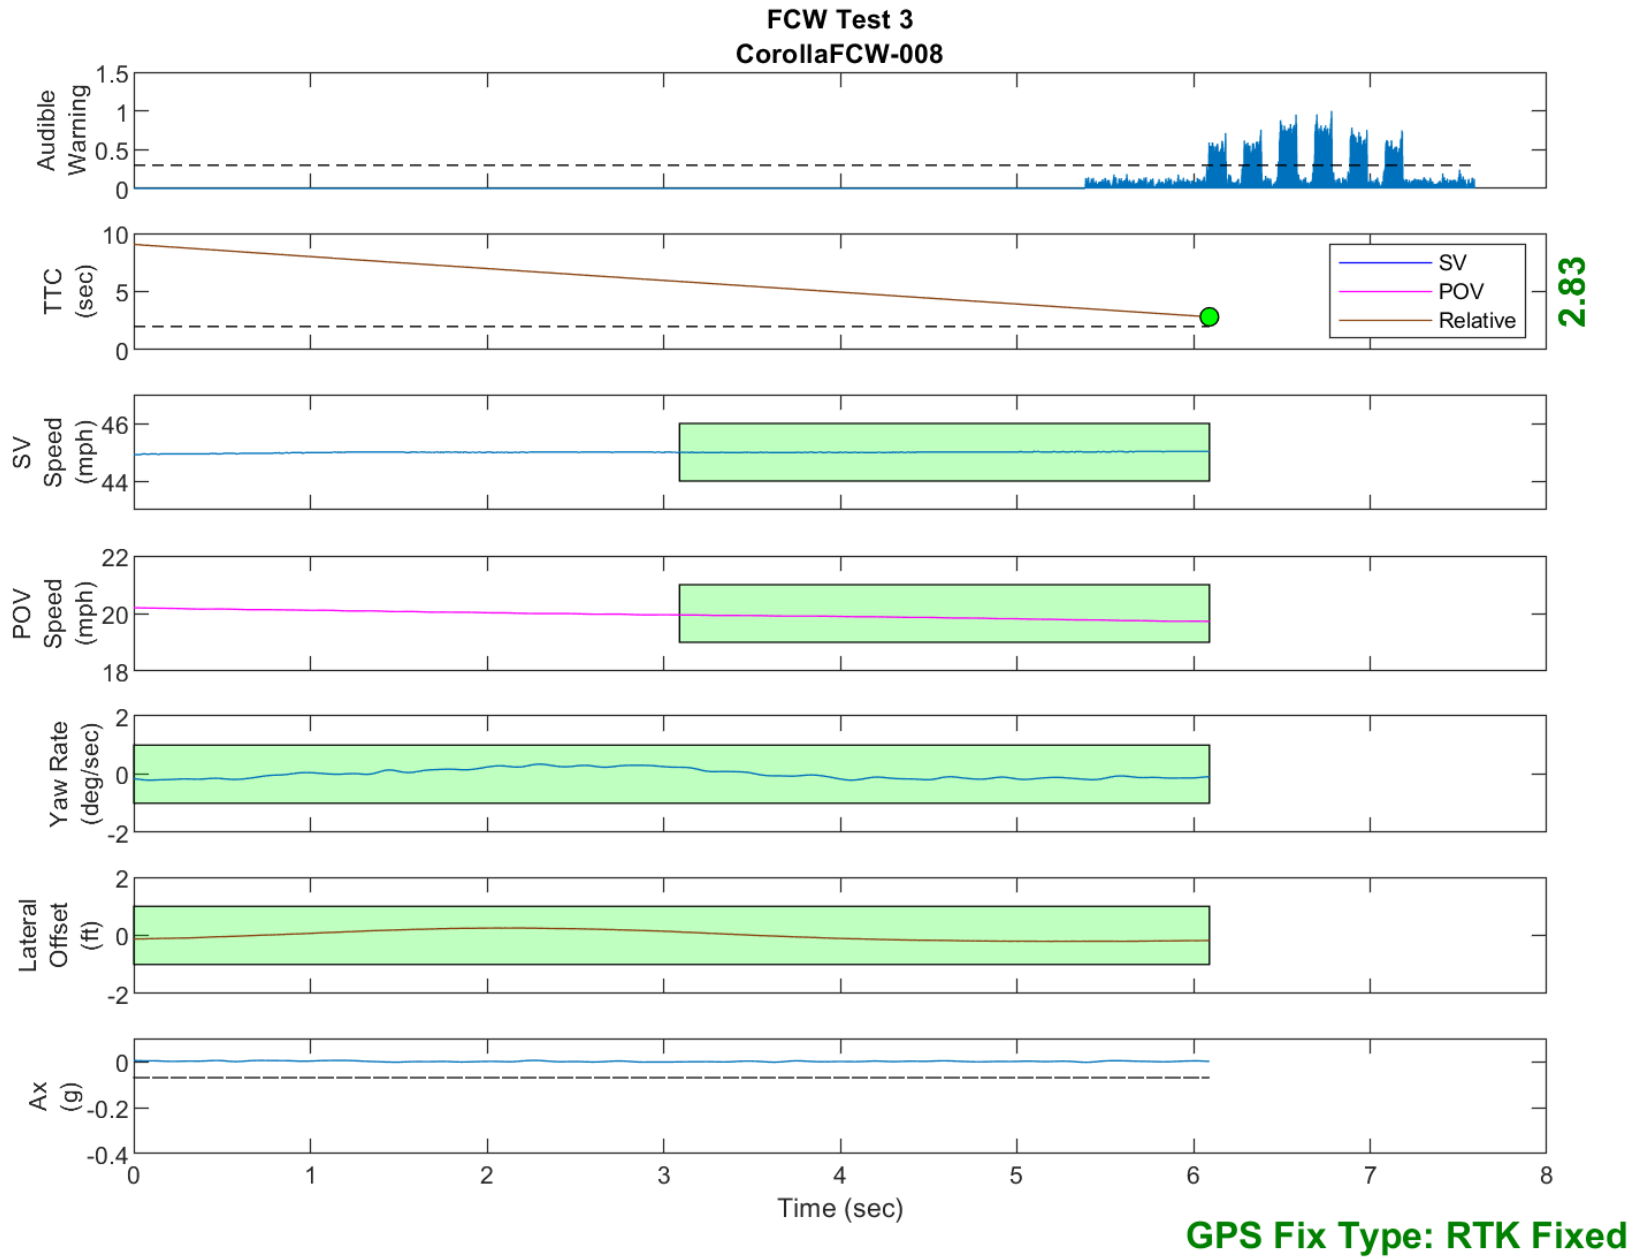


Figure D35. Time History for Run 8, FCW Test 3, Audible Warning

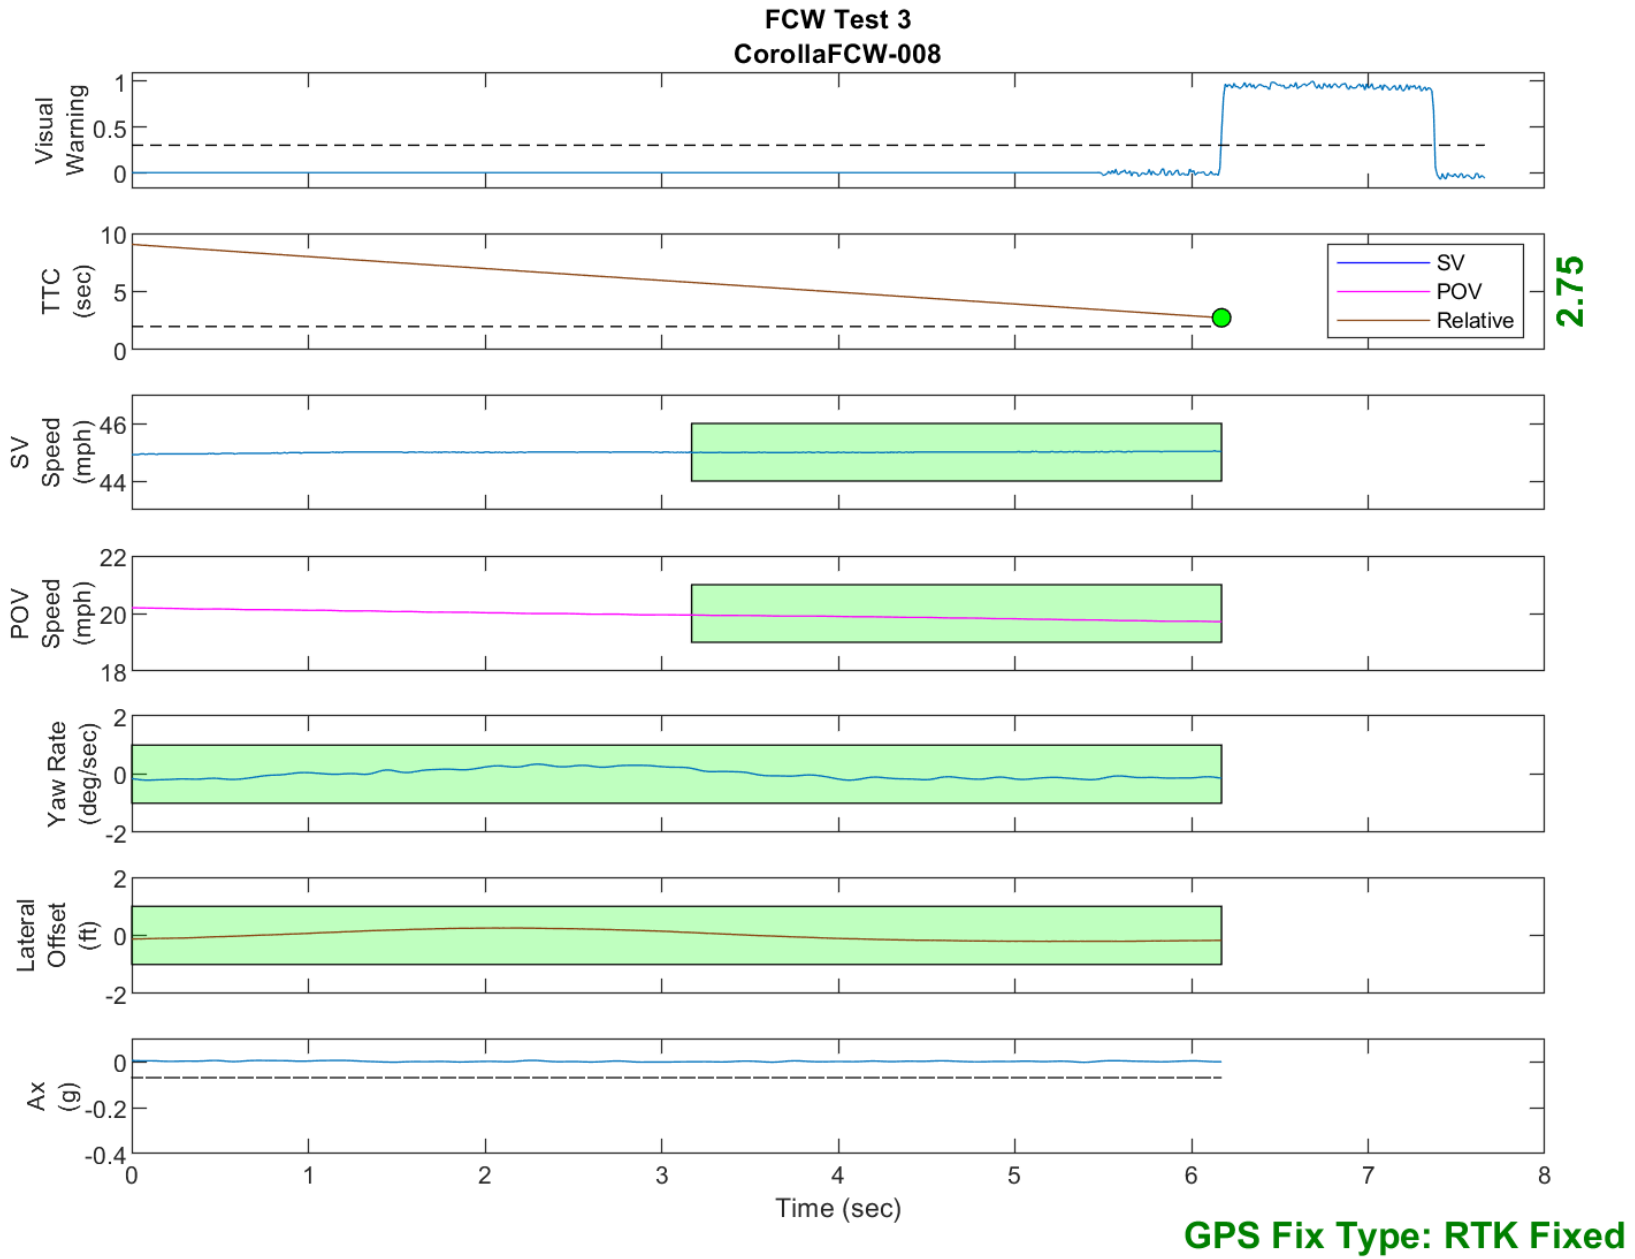


Figure D36. Time History for Run 8, FCW Test 3, Visual Warning

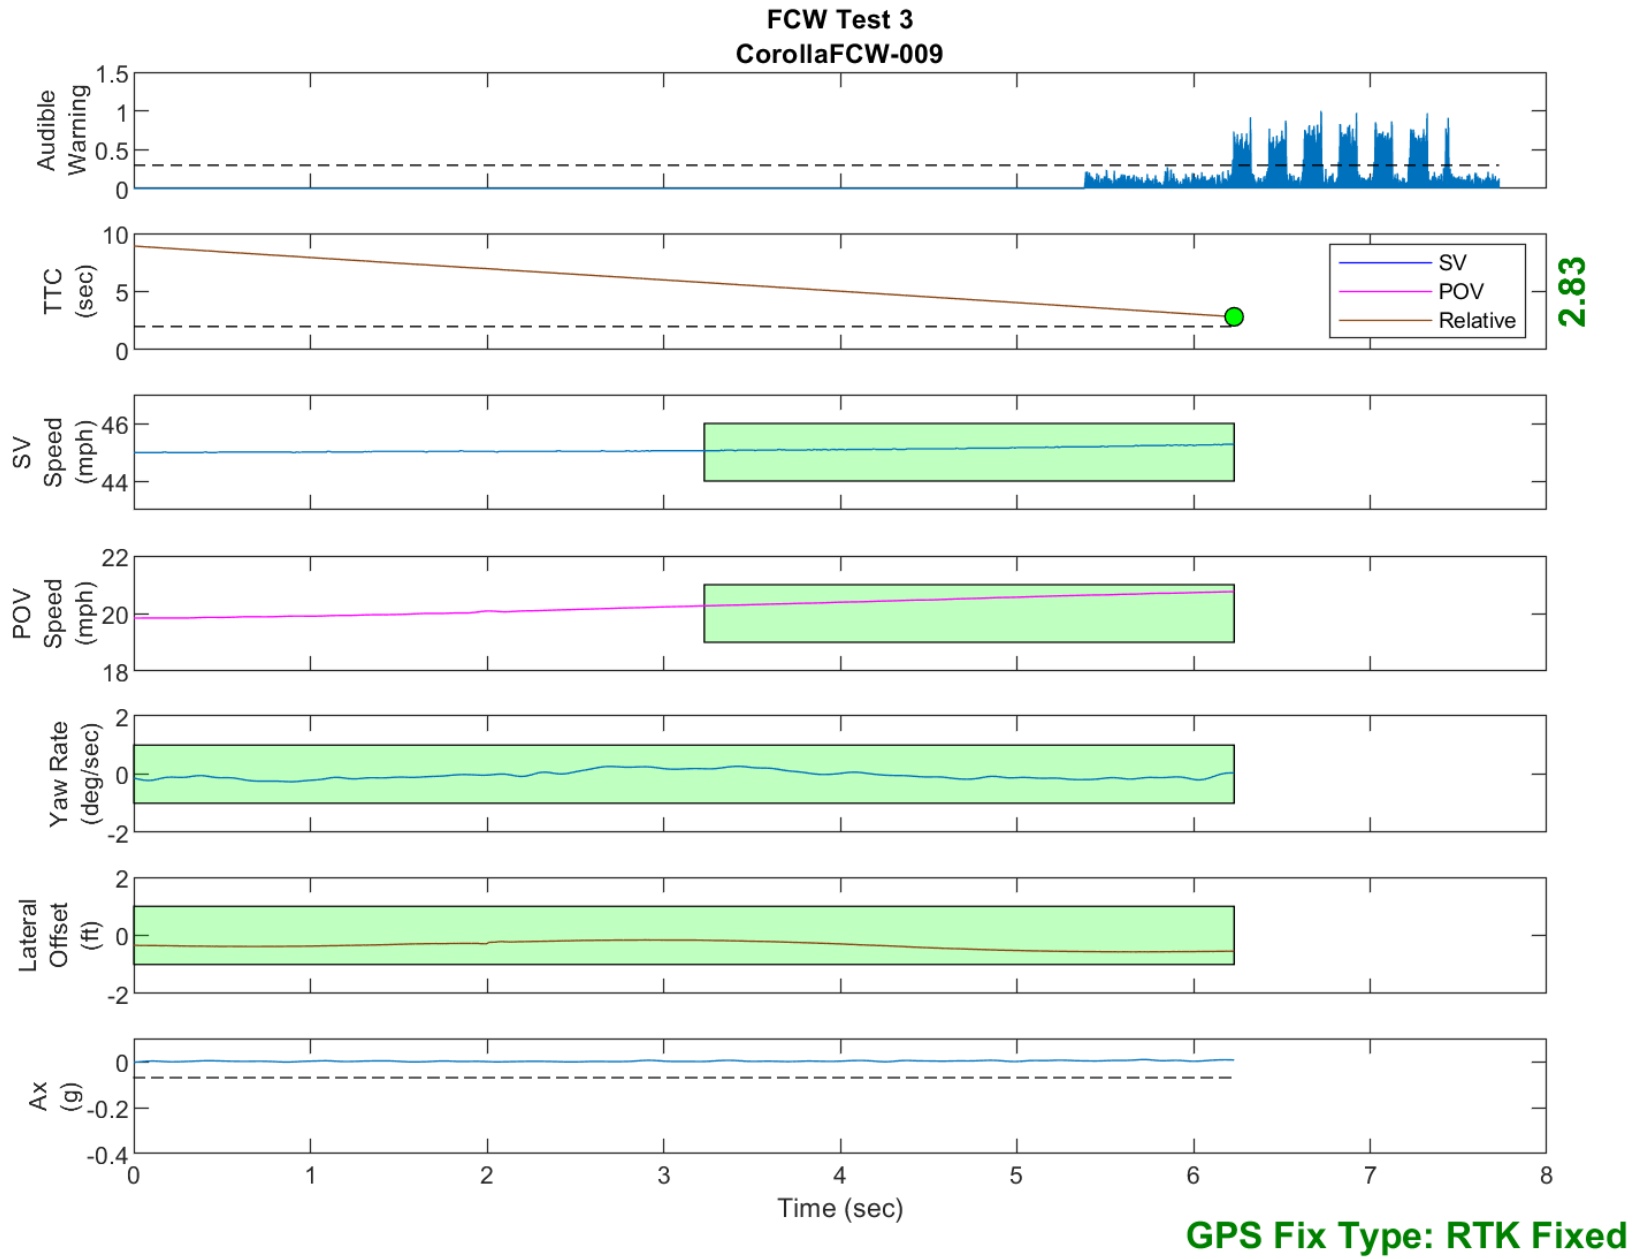


Figure D37. Time History for Run 9, FCW Test 3, Audible Warning



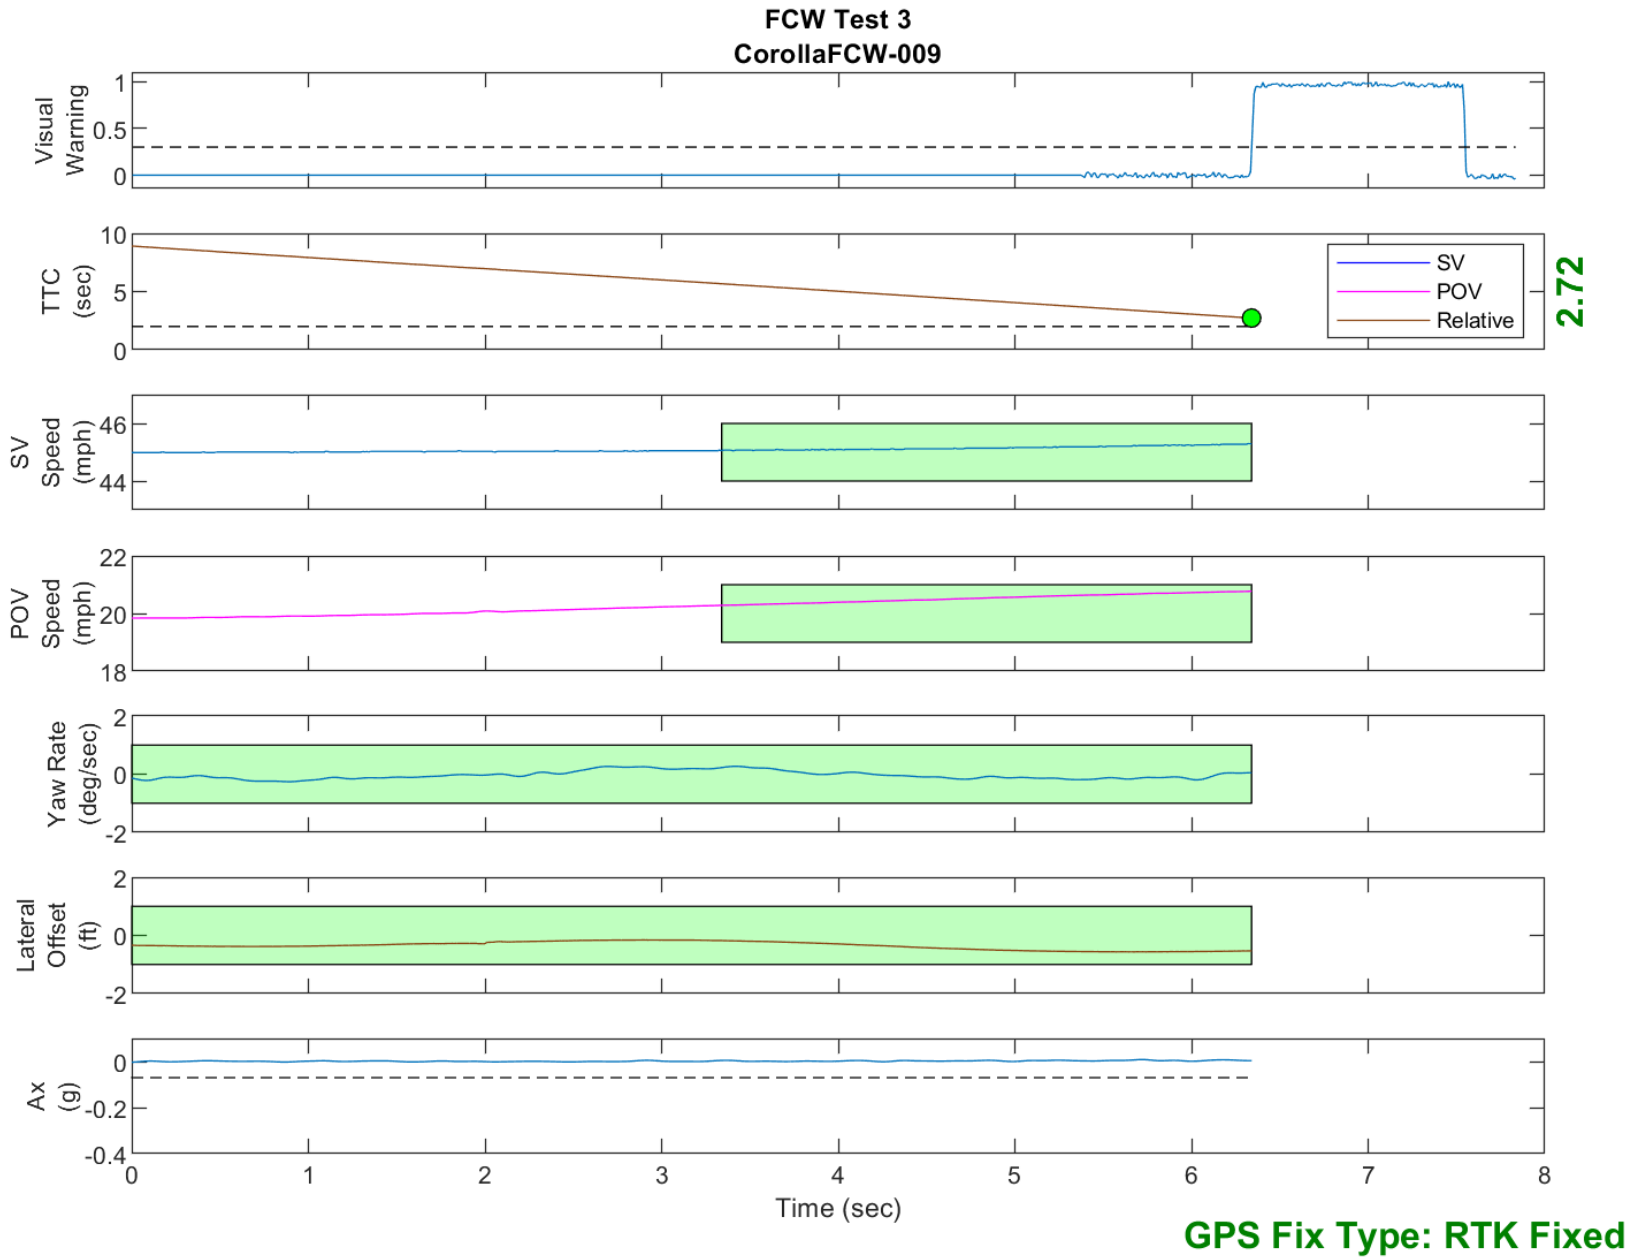


Figure D38. Time History for Run 9, FCW Test 3, Visual Warning

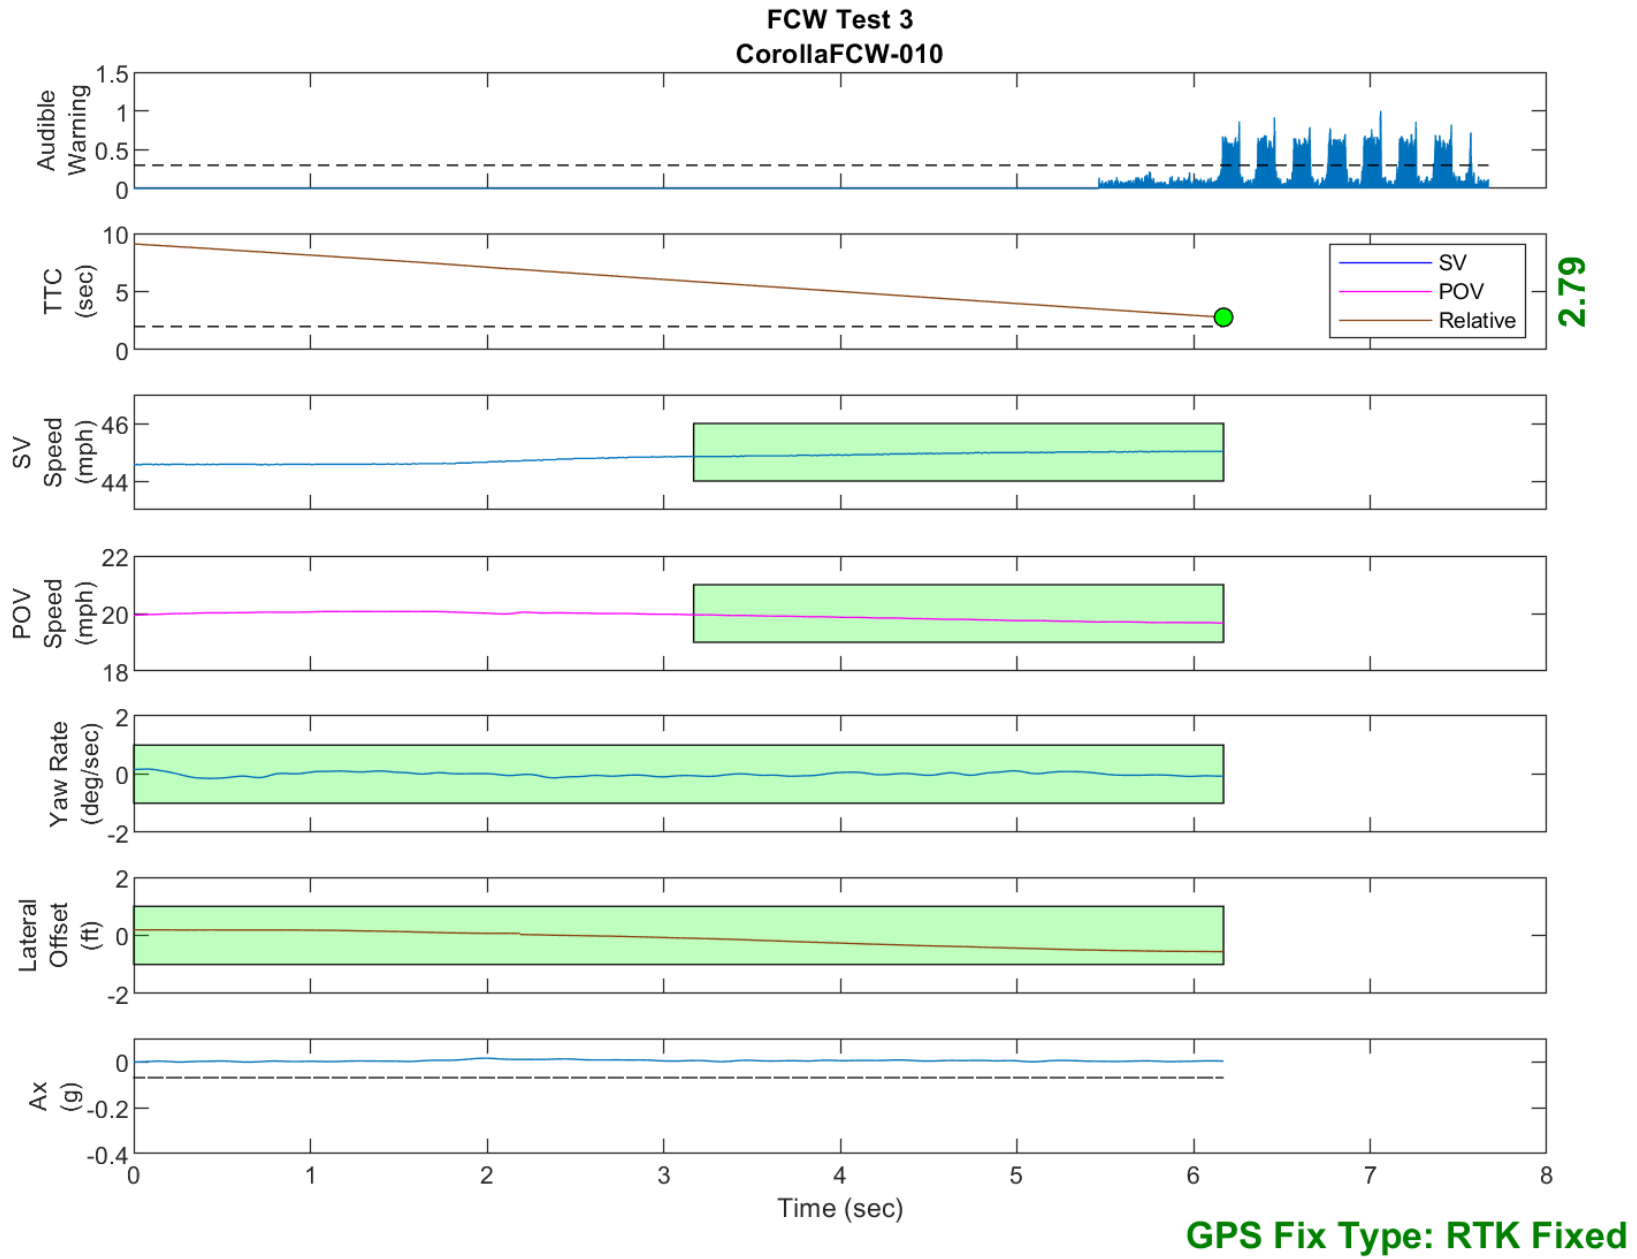


Figure D39. Time History for Run 10, FCW Test 3, Audible Warning

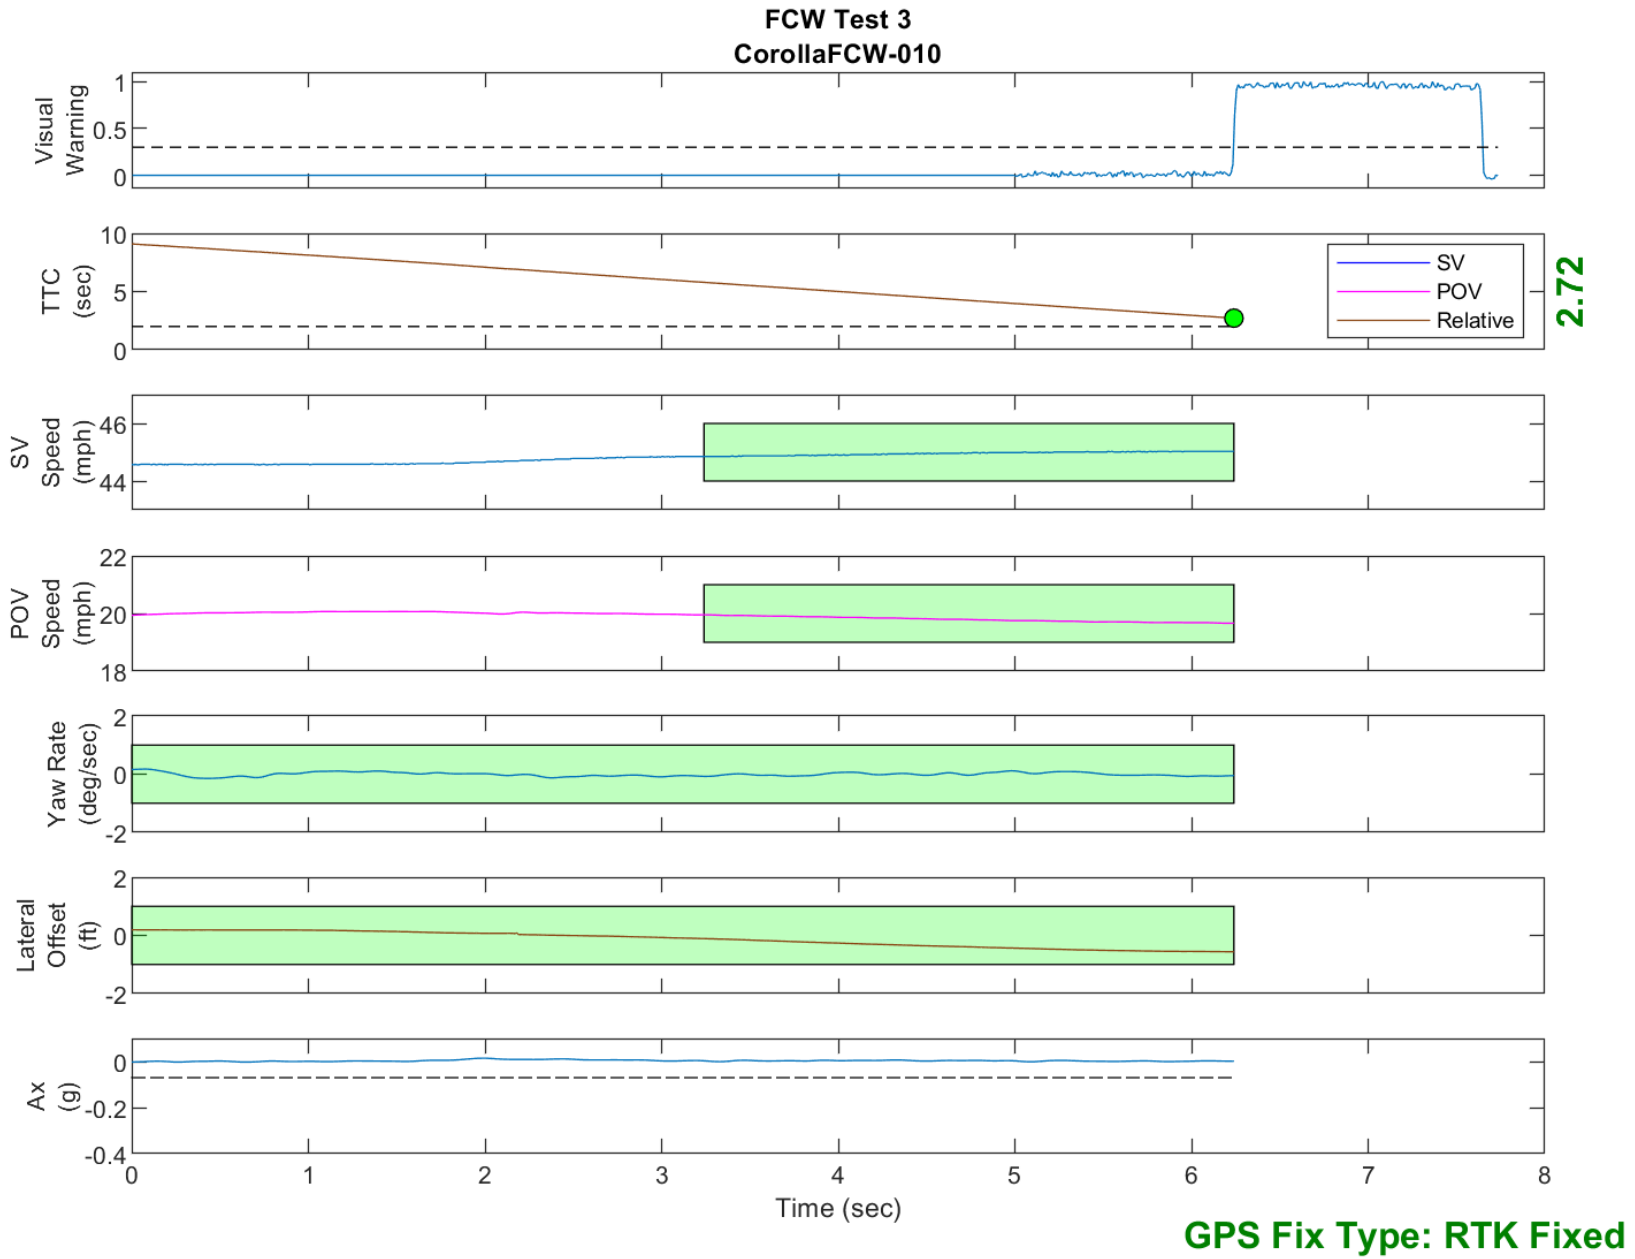


Figure D40. Time History for Run 10, FCW Test 3, Visual Warning

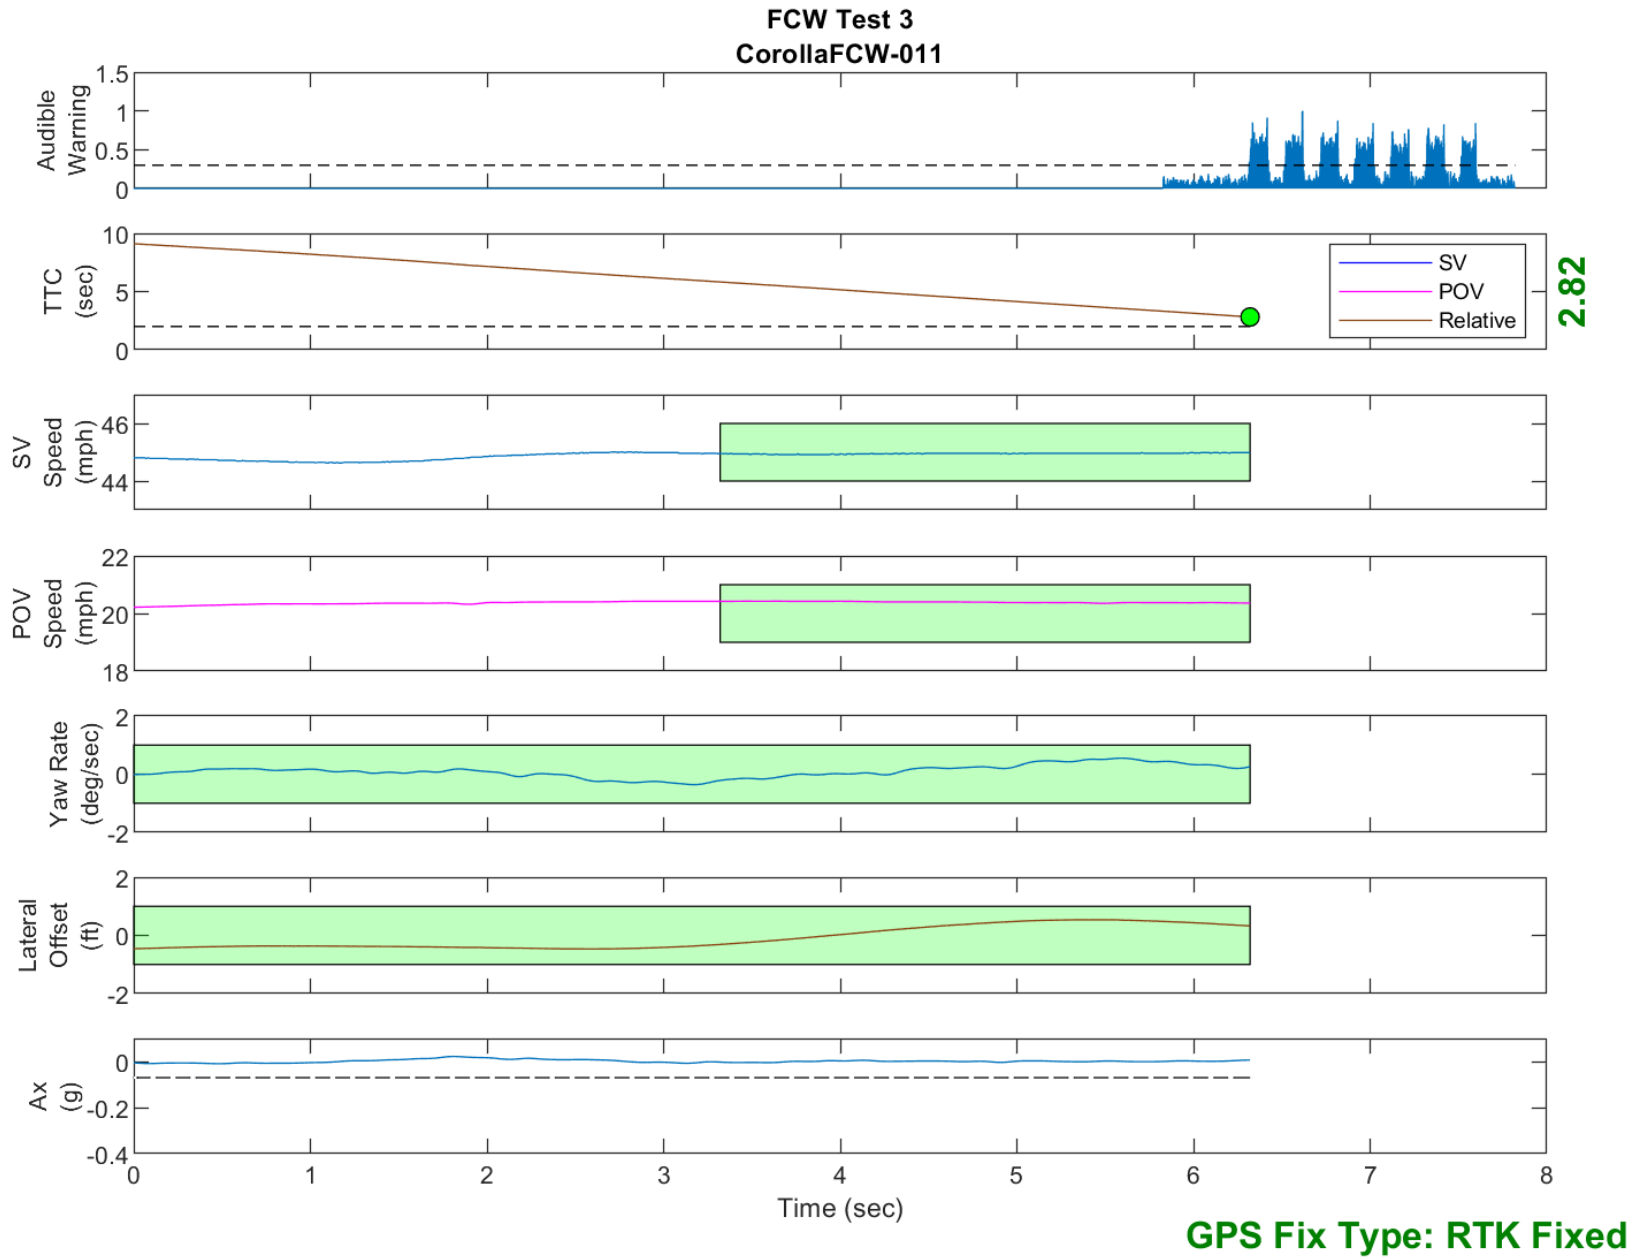


Figure D41. Time History for Run 11, FCW Test 3, Audible Warning

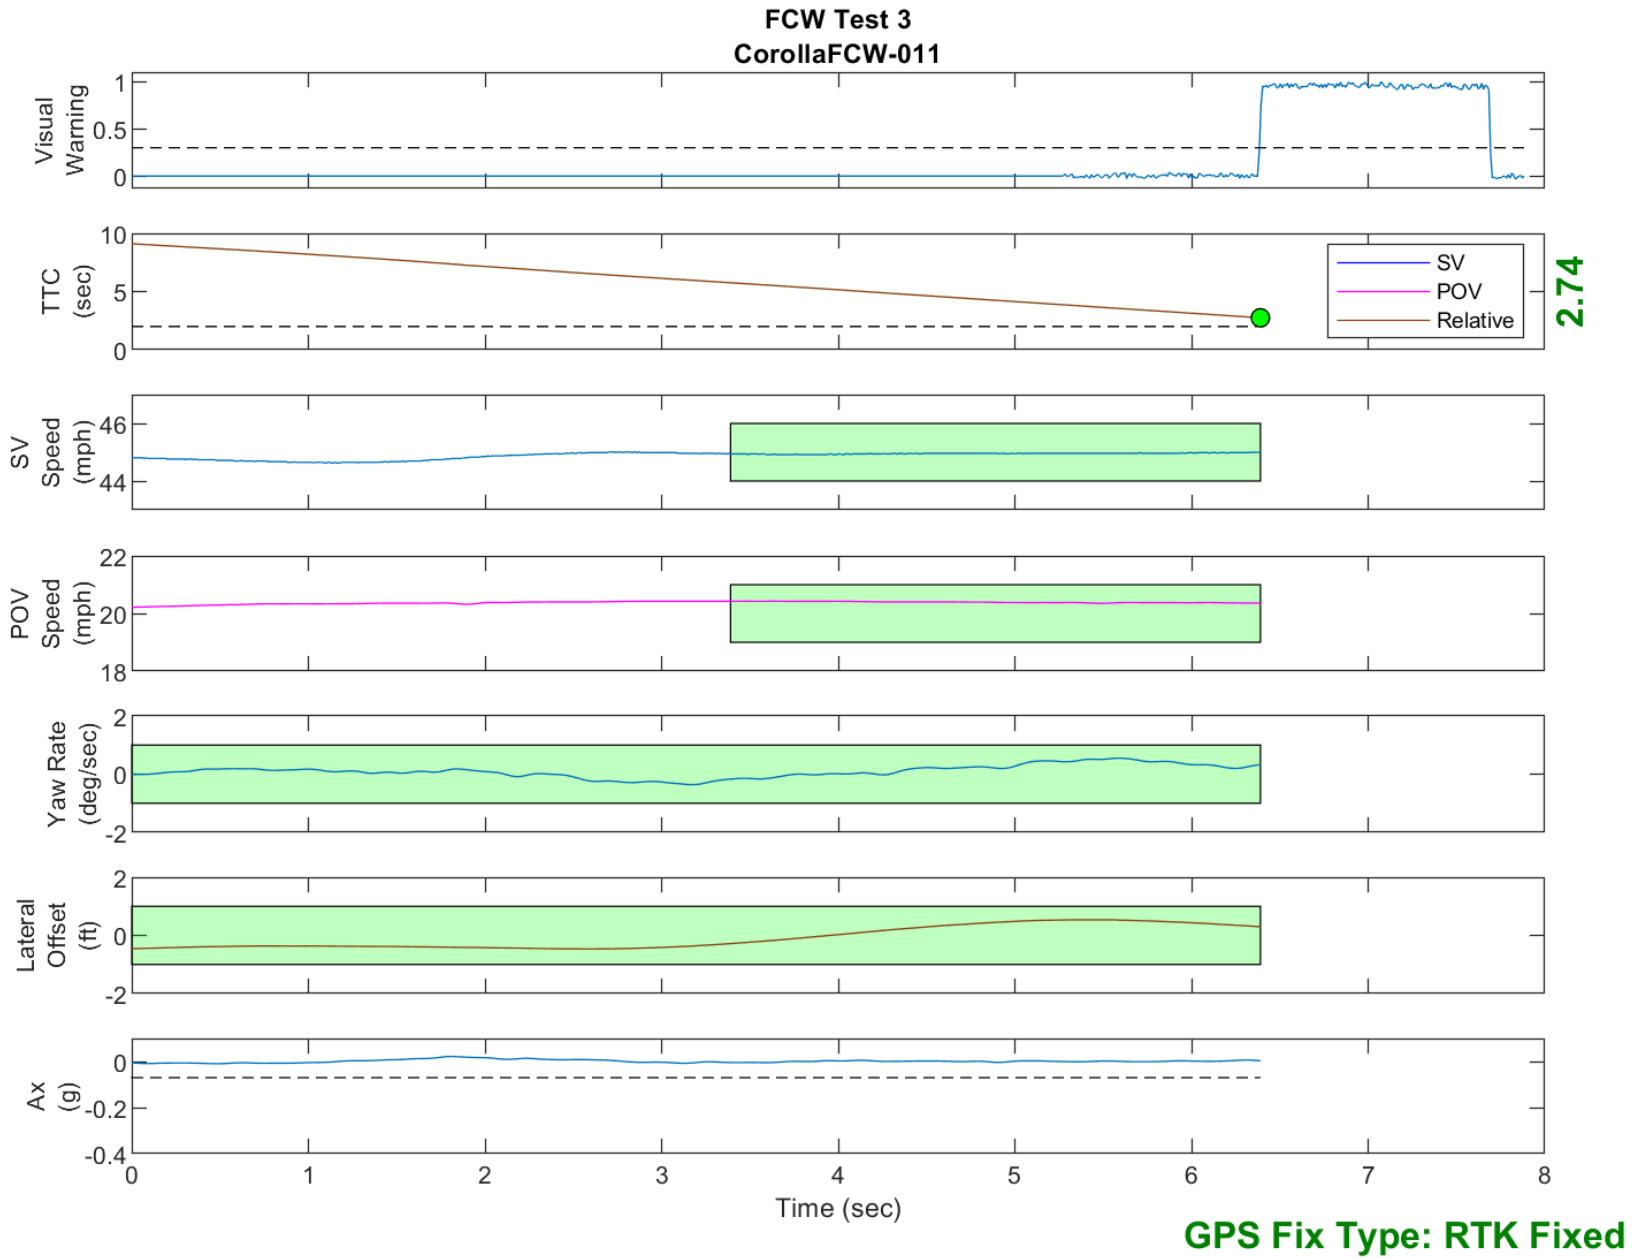


Figure D42. Time History for Run 11, FCW Test 3, Visual Warning

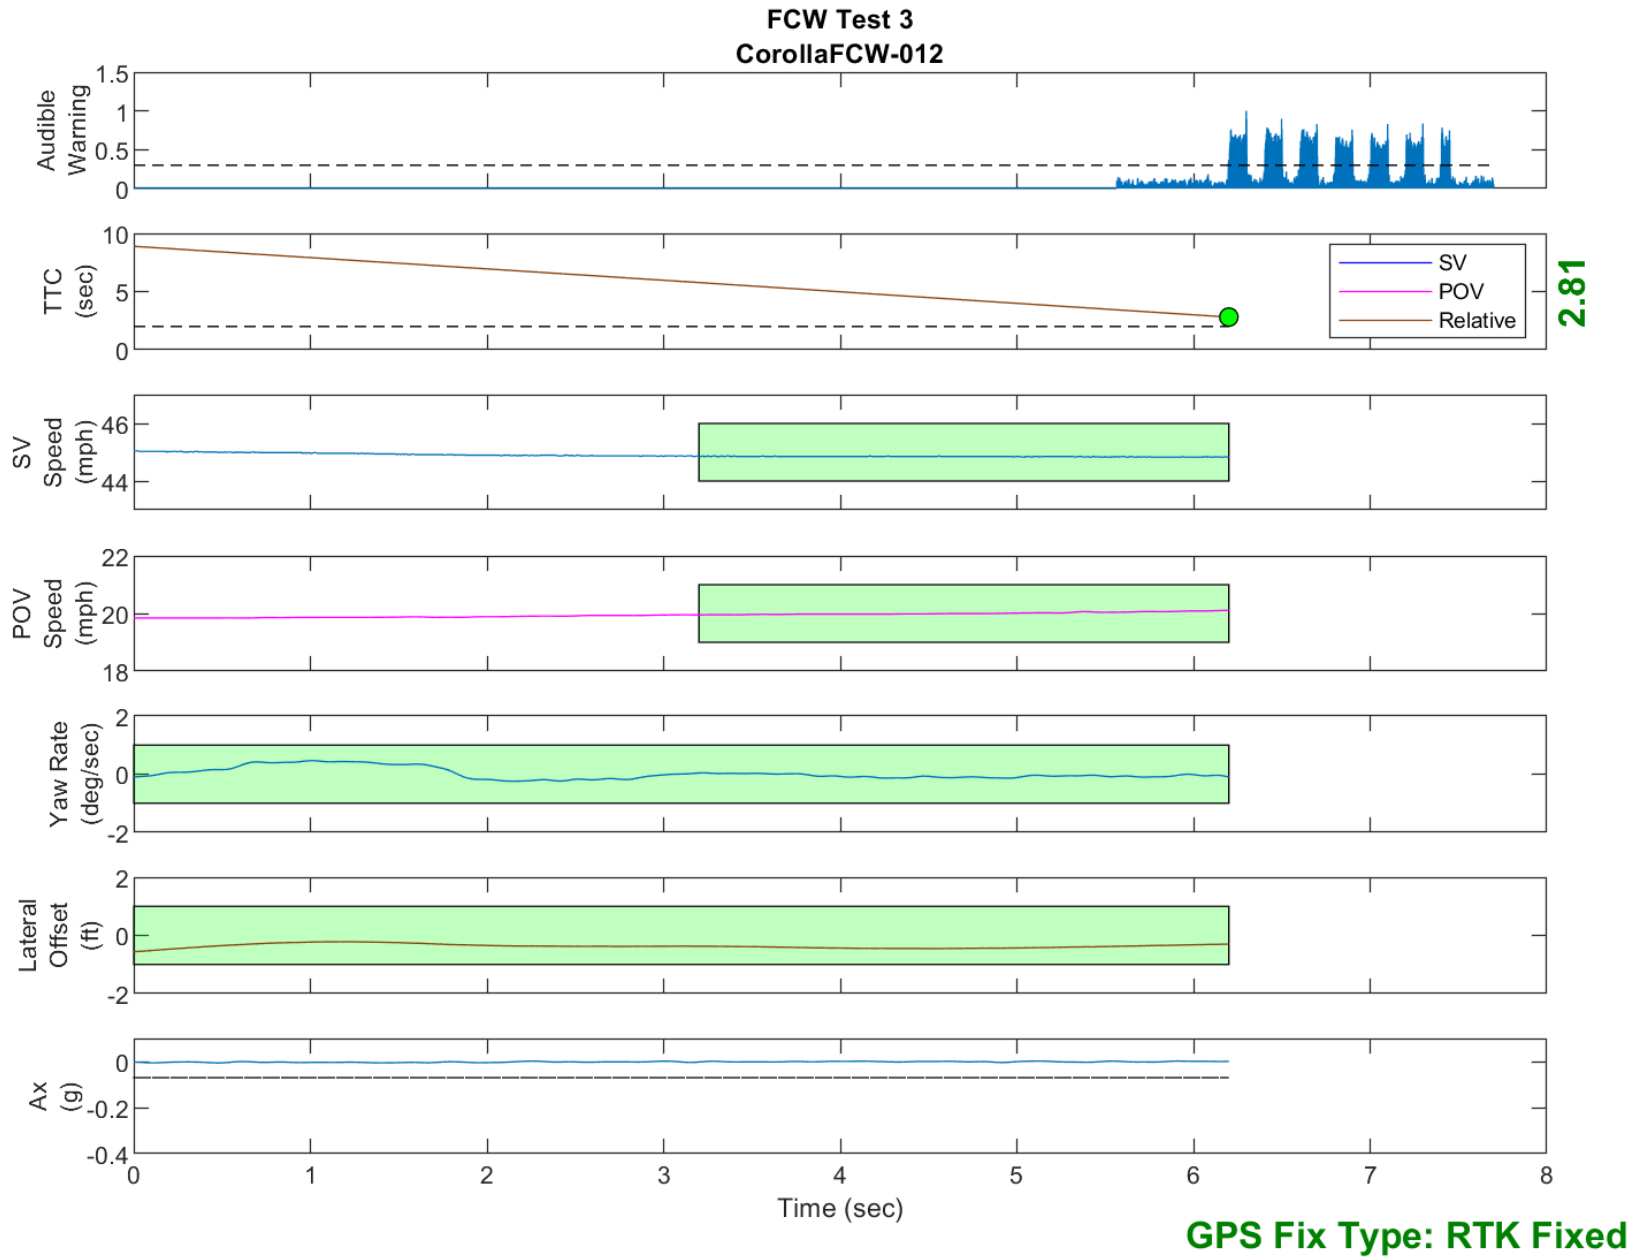


Figure D43. Time History for Run 12, FCW Test 3, Audible Warning

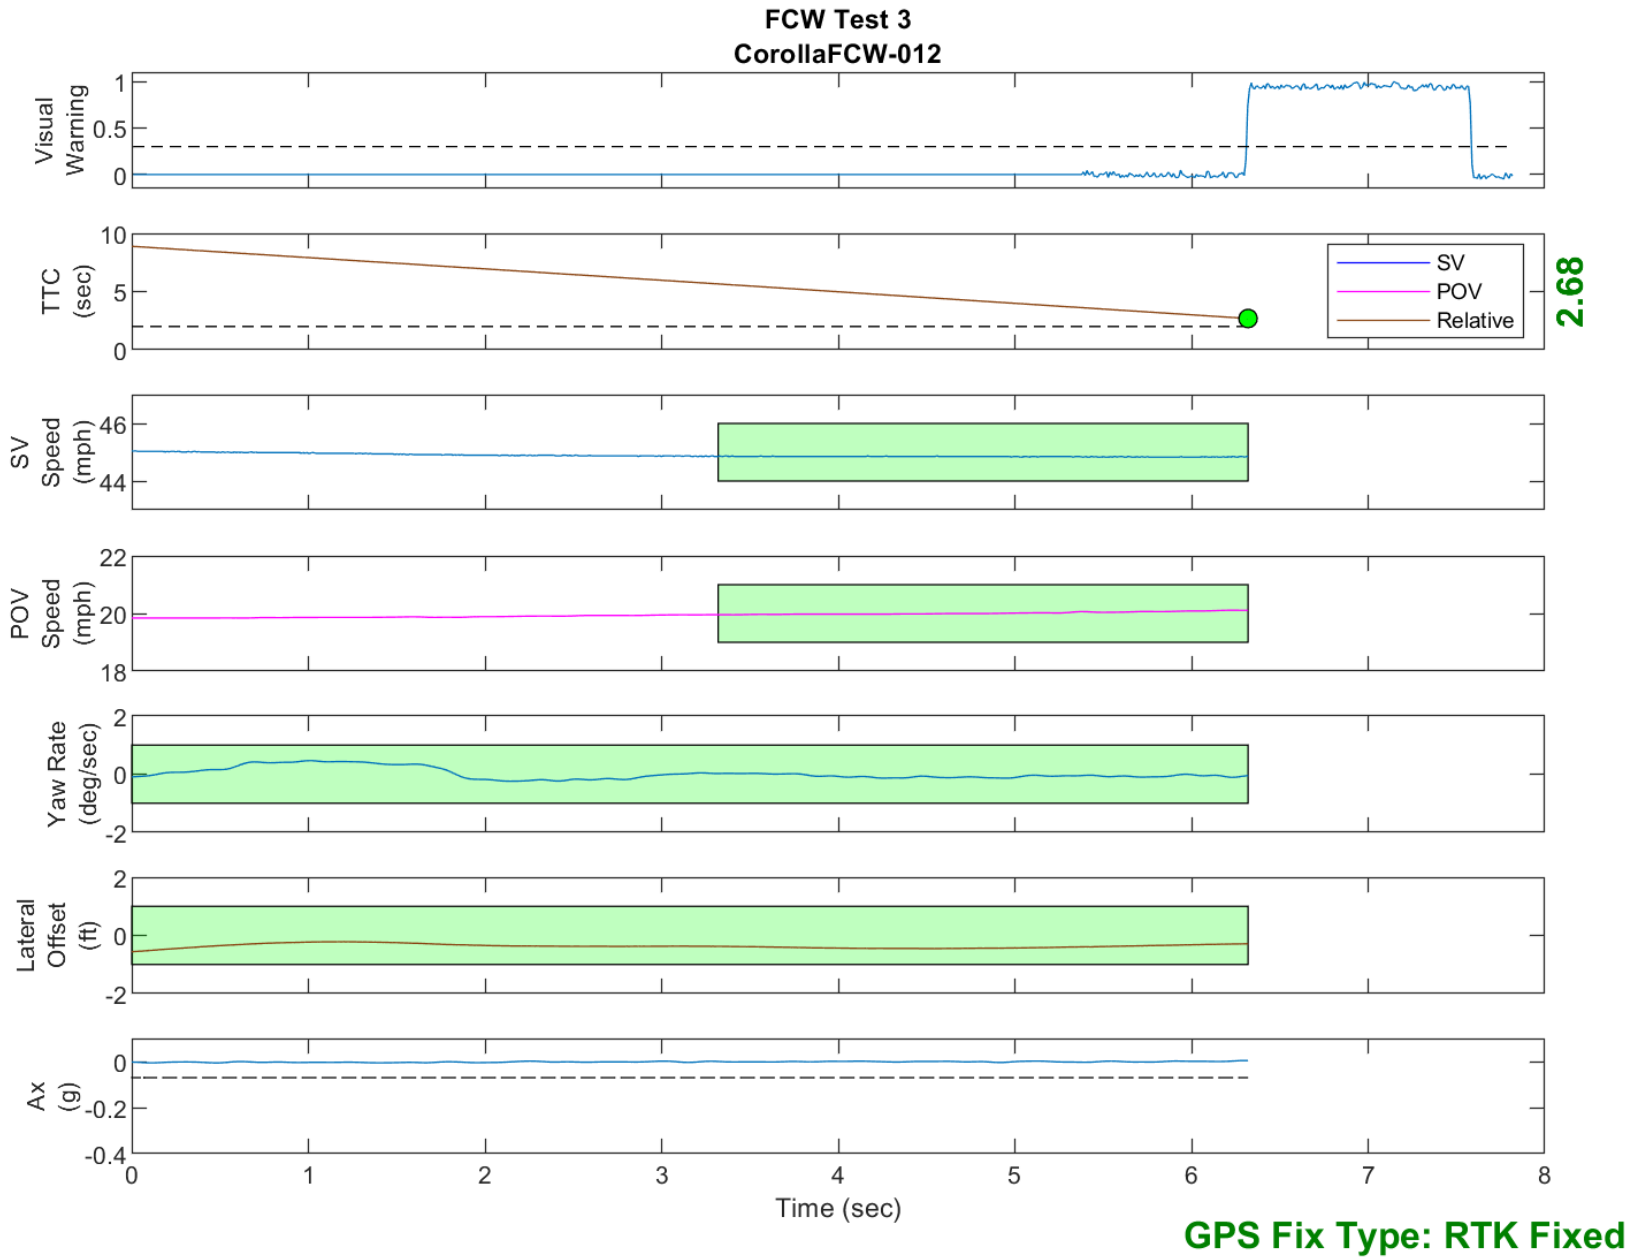


Figure D44. Time History for Run 12, FCW Test 3, Visual Warning



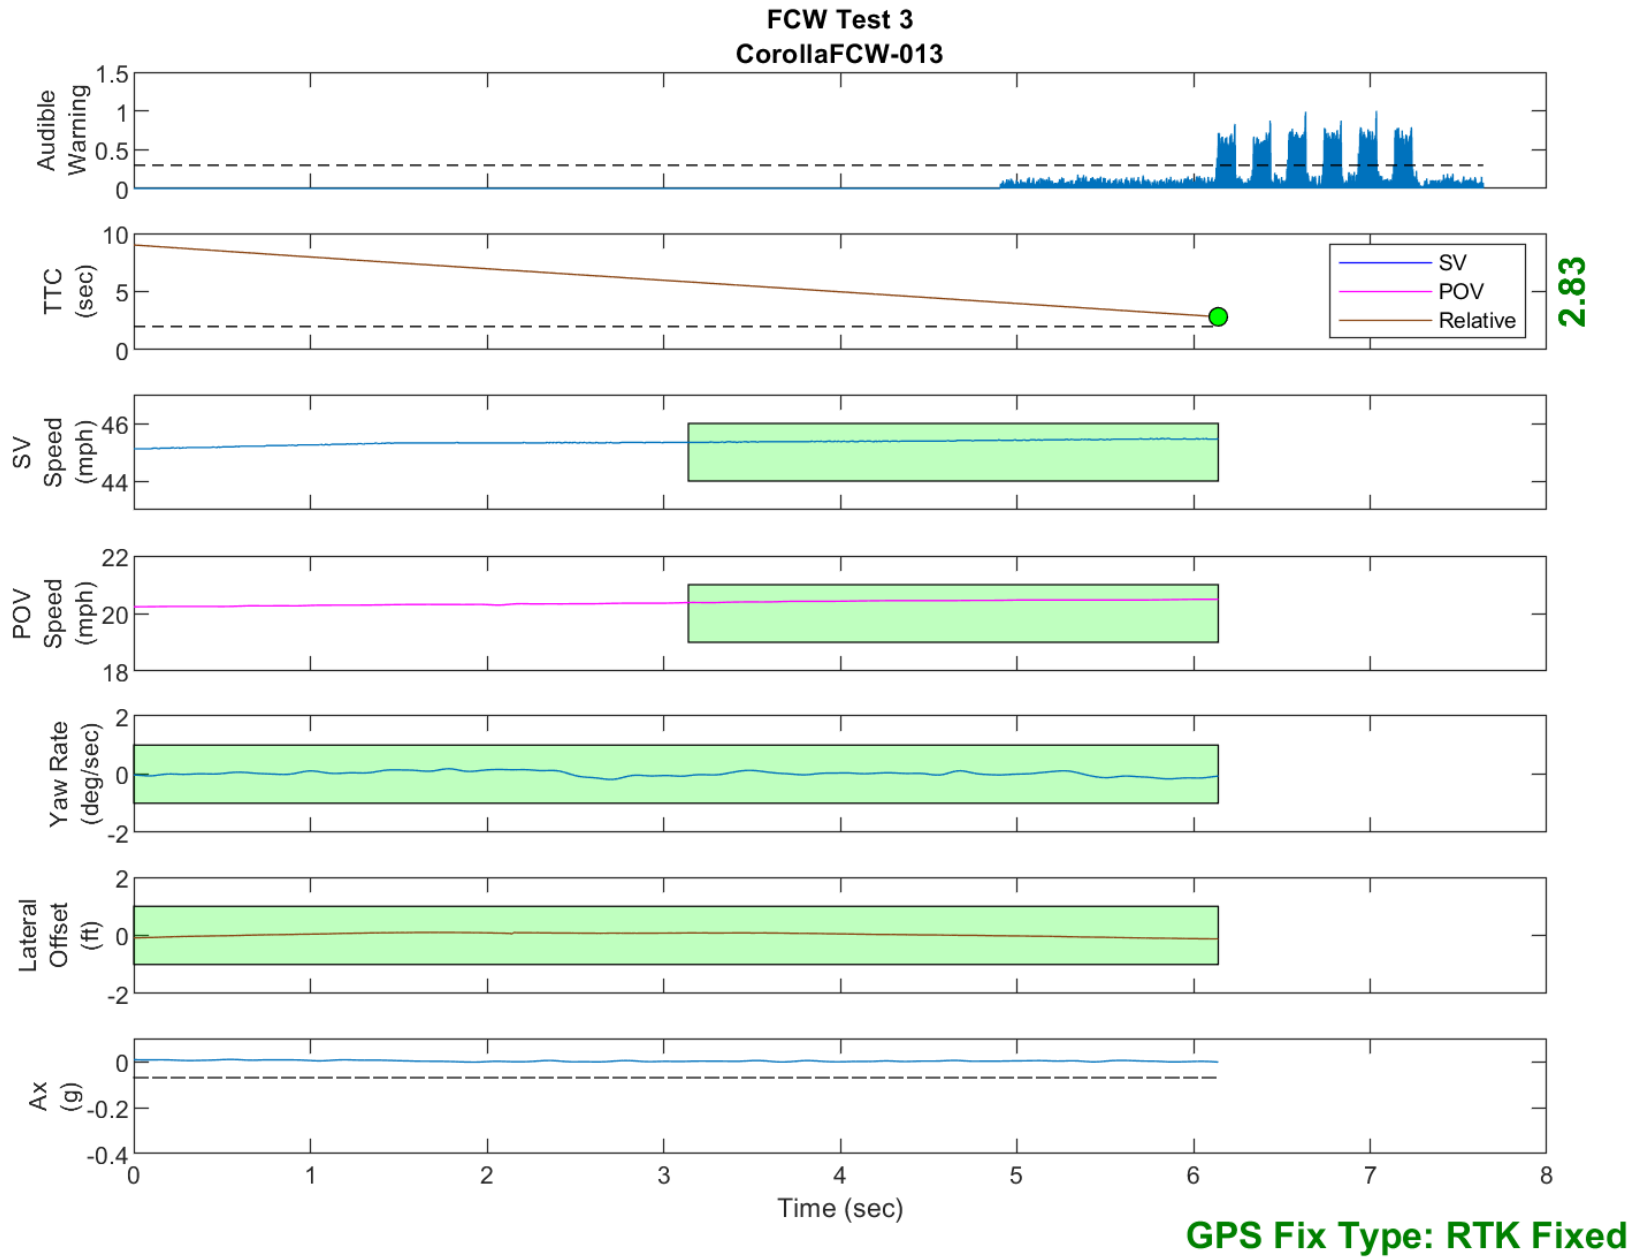


Figure D45. Time History for Run 13, FCW Test 3, Audible Warning

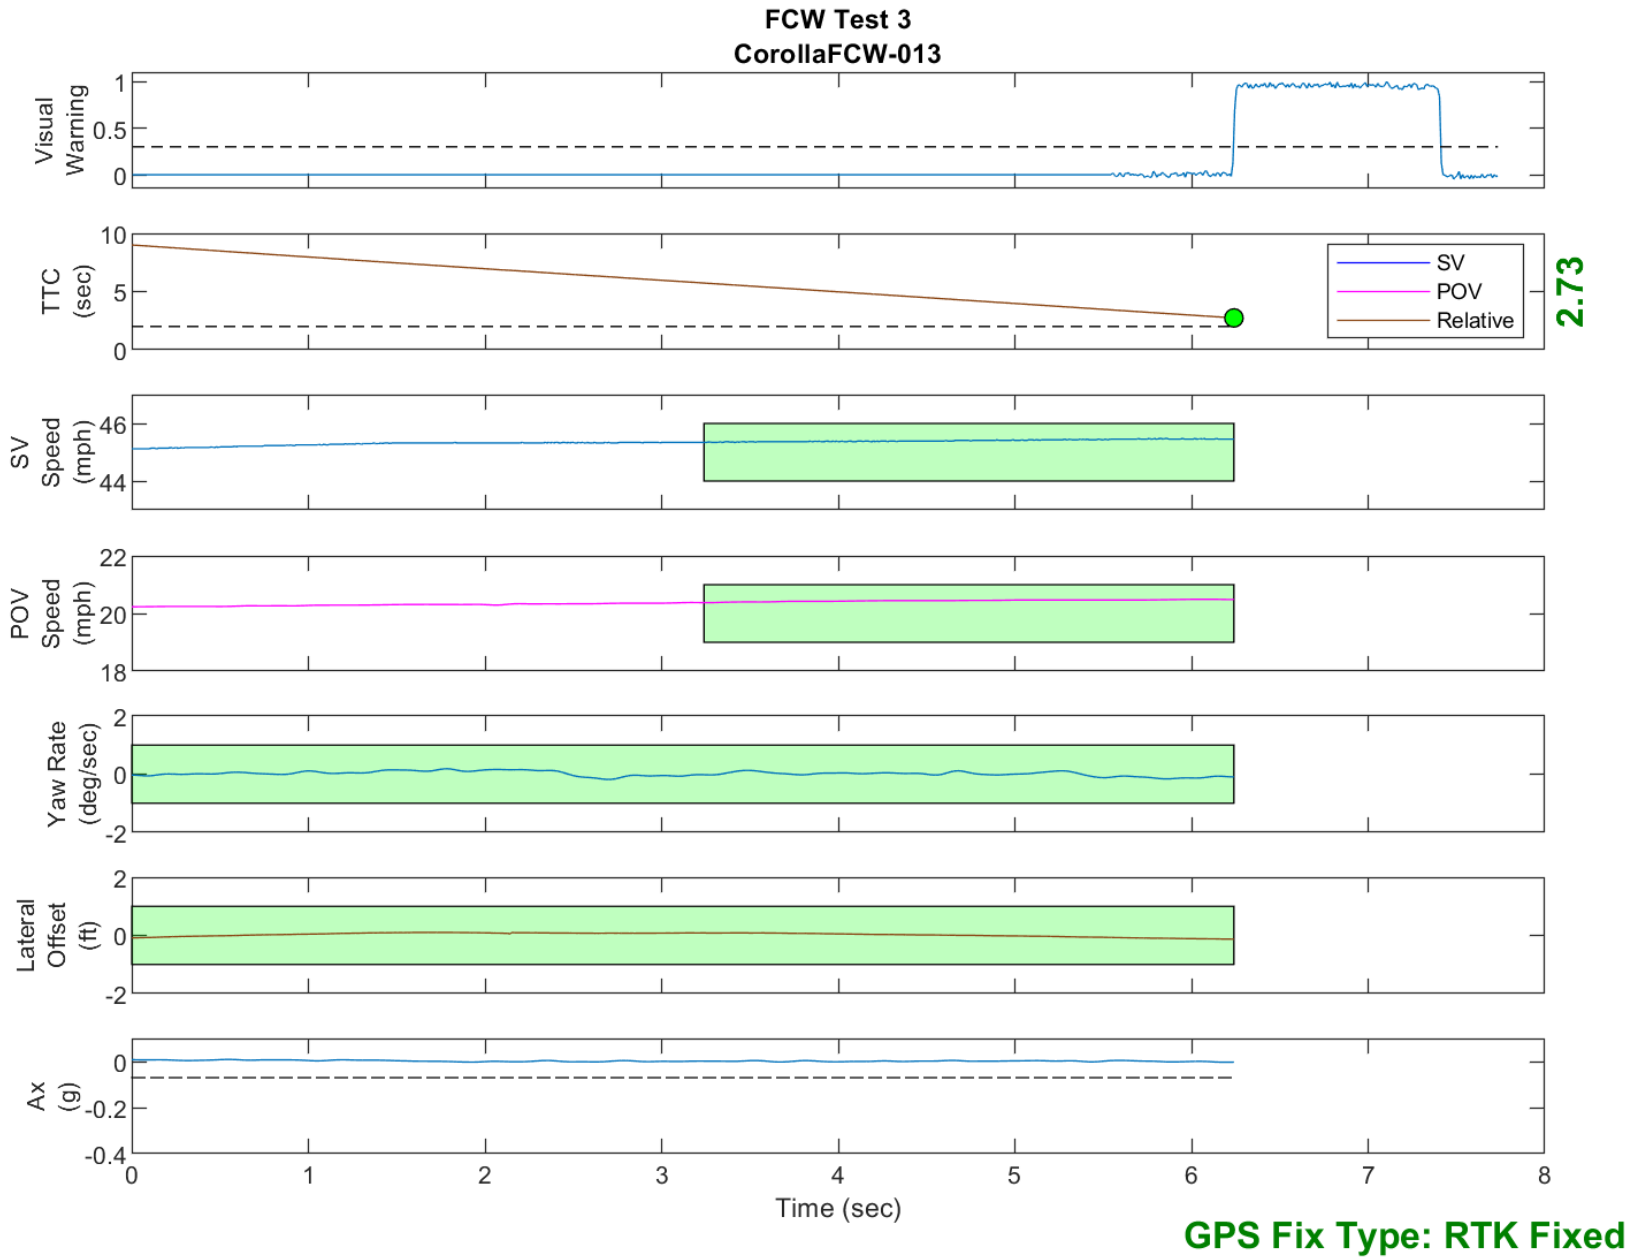


Figure D46. Time History for Run 13, FCW Test 3, Visual Warning

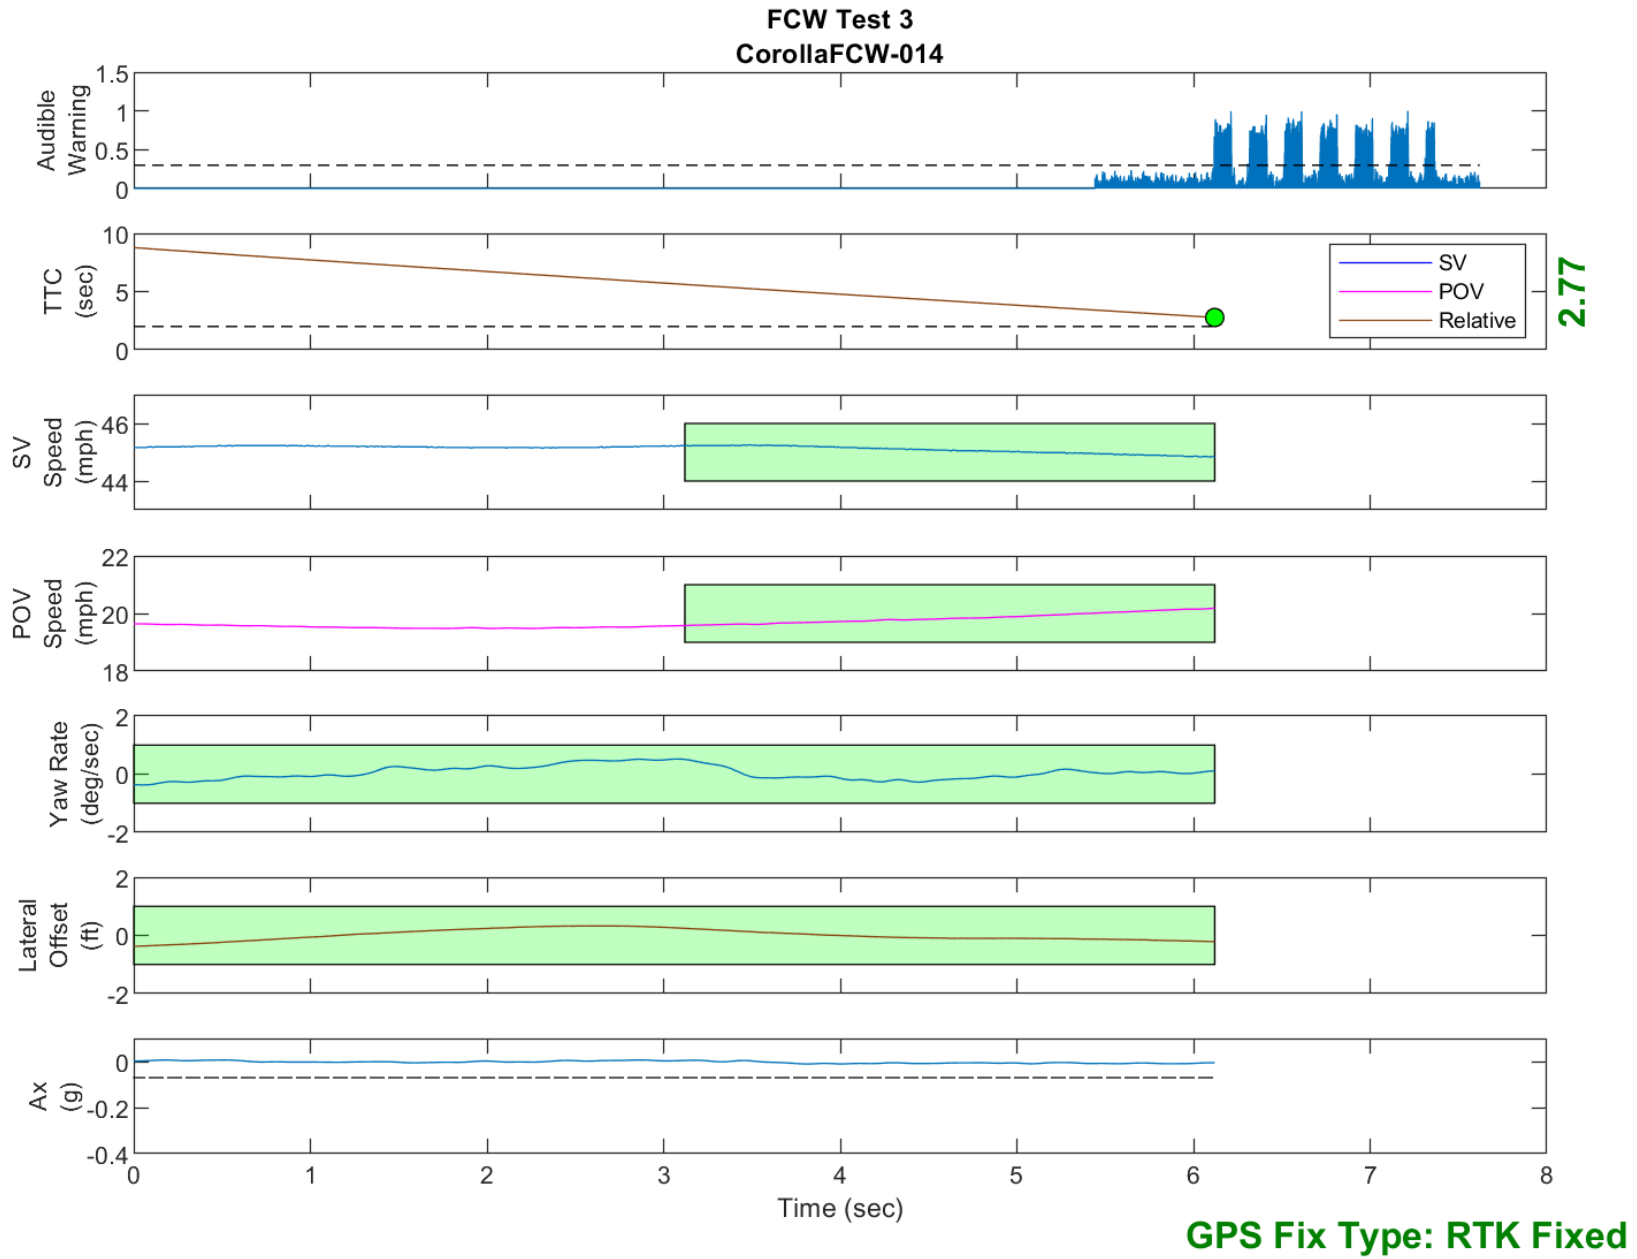


Figure D47. Time History for Run 14, FCW Test 3, Audible Warning

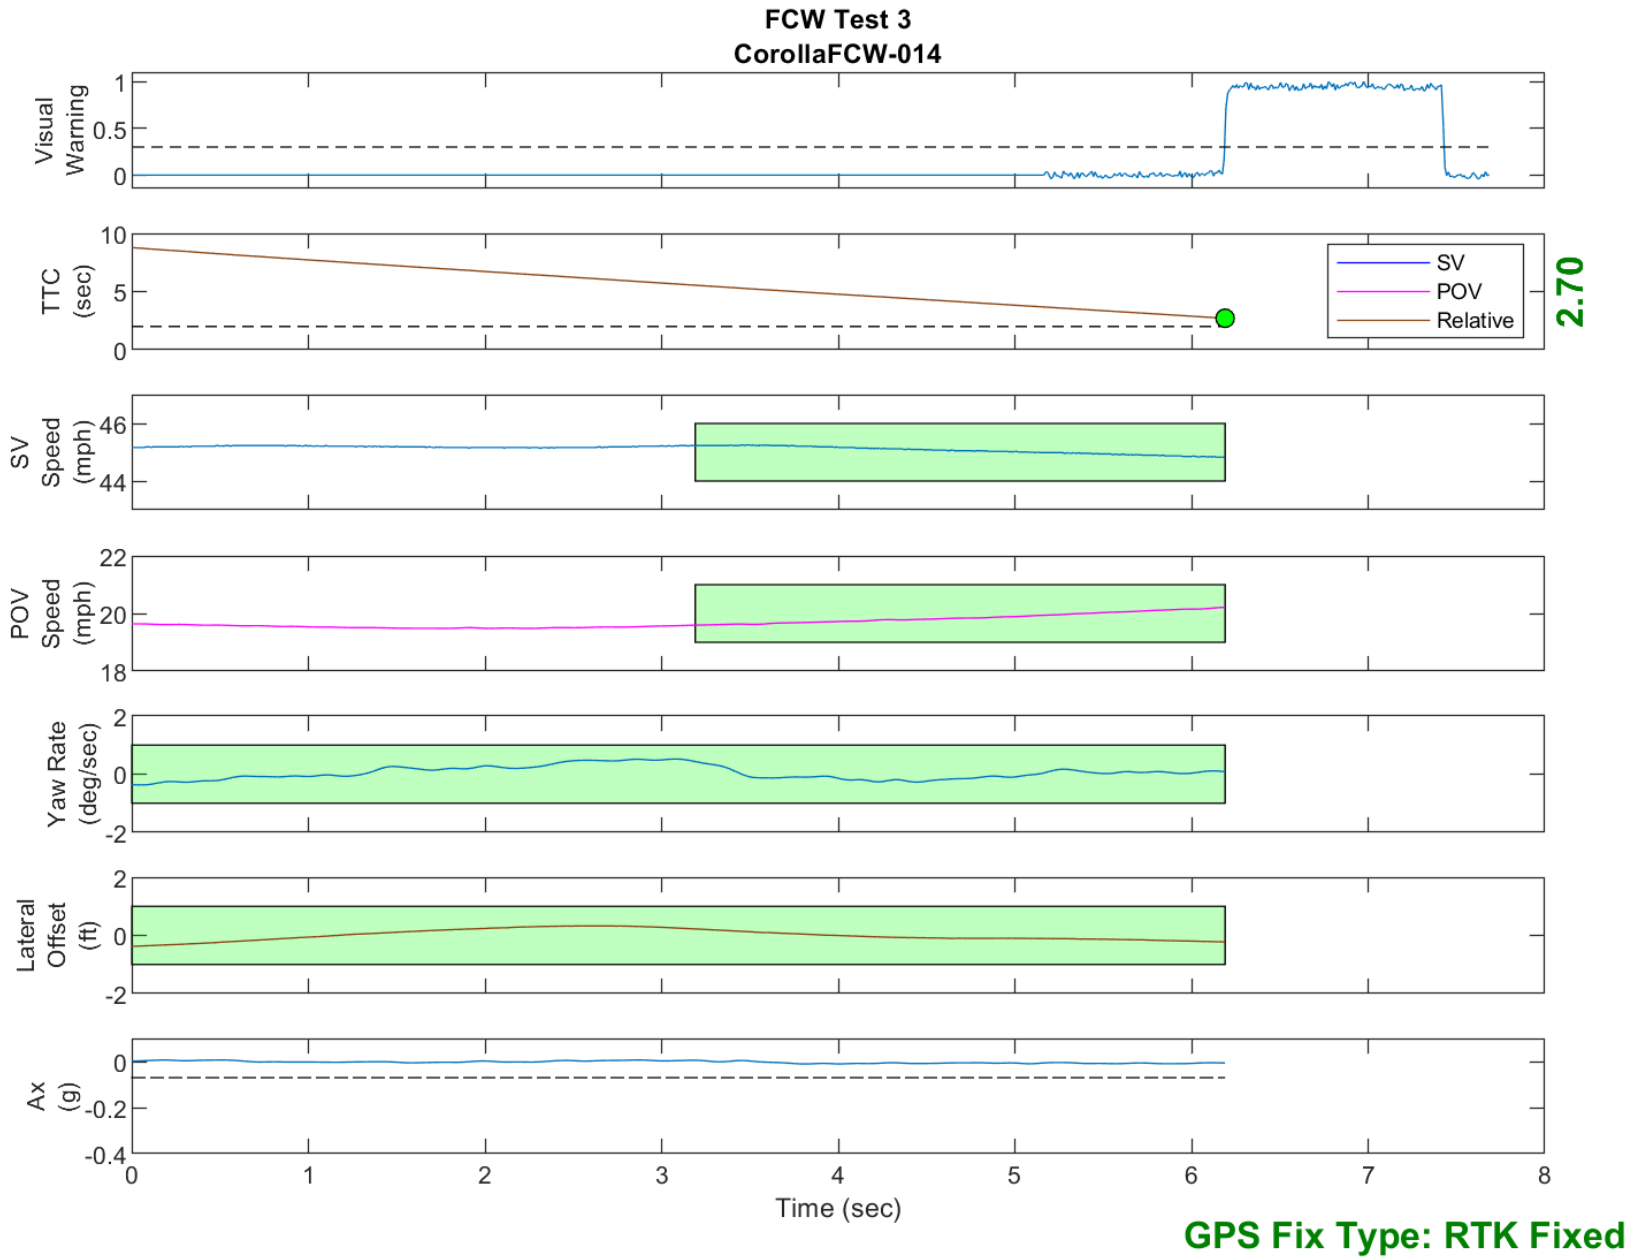


Figure D48. Time History for Run 14, FCW Test 3, Visual Warning