

**NEW CAR ASSESSMENT PROGRAM
CRASH IMMINENT BRAKING SYSTEM CONFIRMATION TEST
NCAP-DRI-CIB-20-05**

2020 Audi Q5 45 TFSI quattro

DYNAMIC RESEARCH, INC.
355 Van Ness Avenue, STE 200
Torrance, California 90501



3 August 2020

Final Report

Prepared Under Contract No. DTNH22-14-D-00333

**U.S. DEPARTMENT OF TRANSPORTATION
National Highway Traffic Safety Administration
New Car Assessment Program
1200 New Jersey Avenue, SE
West Building, 4th Floor (NRM-110)
Washington, DC 20590**

Prepared for the Department of Transportation, National Highway Traffic Safety Administration, under Contract No. DTNH22-14-D-00333.

This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings, and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturer's names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products of manufacturers.

Prepared By: J. Lenkeit

Program Manager

Date: 3 August 2020

S. Rhim

Test Engineer

1. Report No. NCAP-DRI-CIB-20-05	2. Government Accession No.	3. Recipient's Catalog No.	
4. Title and Subtitle Final Report of Crash Imminent Braking System Confirmation Test of a 2020 Audi Q5 45 TFSI quattro.		5. Report Date 3 August 2020	
		6. Performing Organization Code DRI	
7. Author(s) J. Lenkeit, Program Manager S. Rhim, Test Engineer		8. Performing Organization Report No. DRI-TM-20-59	
9. Performing Organization Name and Address Dynamic Research, Inc. 355 Van Ness Ave, STE 200 Torrance, CA 90501		10. Work Unit No.	
		11. Contract or Grant No. DTNH22-14-D-00333	
12. Sponsoring Agency Name and Address U.S. Department of Transportation National Highway Traffic Safety Administration New Car Assessment Program 1200 New Jersey Avenue, SE, West Building, 4th Floor (NRM-110) Washington, DC 20590		13. Type of Report and Period Covered Final Test Report June - July 2020	
		14. Sponsoring Agency Code NRM-110	
15. Supplementary Notes			
16. Abstract These tests were conducted on the subject 2020 Audi Q5 45 TFSI quattro in accordance with the specifications of the New Car Assessment program's most current Test Procedure in docket NHTSA-2015-0006-0025; CRASH IMMINENT BRAKE SYSTEM PERFORMANCE EVALUATION FOR THE NEW CAR ASSESSMENT PROGRAM, October 2015. The vehicle passed the requirements of the test for all four CIB test scenarios and all speeds.			
17. Key Words Crash Imminent Braking, CIB, AEB, New Car Assessment Program, NCAP		18. Distribution Statement Copies of this report are available from the following: NHTSA Technical Reference Division National Highway Traffic Safety Administration 1200 New Jersey Avenue, SE Washington, DC 20590	
19. Security Classif. (of this report) Unclassified	20. Security Classif. (of this page) Unclassified	21. No. of Pages 117	22. Price

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
I. INTRODUCTION	1
II. DATA SHEETS.....	2
Data Sheet 1: Test Results Summary.....	3
Data Sheet 2: Vehicle Data	4
Data Sheet 3: Test Conditions.....	5
Data Sheet 4: Crash Imminent Braking System Operation.....	7
III. TEST PROCEDURES	10
A. Test Procedure Overview	10
B. General Information.....	15
C. Principal Other Vehicle	18
D. Automatic Braking System.....	19
E. Instrumentation	20
APPENDIX A Photographs	A-1
APPENDIX B Excerpts from Owner's Manual	B-1
APPENDIX C Run Logs	C-1
APPENDIX D Time Histories.....	D-1

Section I

INTRODUCTION

Crash Imminent Braking (CIB) systems are a subset of Automatic Emergency Braking (AEB) systems. CIB systems are designed to avoid, or mitigate rear-end crashes, by automatically applying subject vehicle brakes when the system determines that, without intervention, a rear-end crash will occur. CIB systems typically work as an extension of Forward Collision Warning (FCW) systems, which alert the driver to the possibility of a collision unless driver action is taken. CIB systems employ sensors capable of detecting vehicles in the forward path. Current CIB technology typically involves RADAR, LIDAR, or vision-based (camera) sensors, and measurement of vehicle operating conditions such as speed, driver steering and brake application, etc. Algorithms in the system's Central Processing Unit (CPU) use this information to continuously monitor the likelihood of a rear-end crash and command a brake actuator to apply the brakes when necessary.

The method prescribed by the National Highway Traffic Safety Administration (NHTSA) to evaluate CIB performance on the test track¹ involves three rear-end type crash configurations and a "false positive" test. In the rear-end scenarios, a subject vehicle (SV) approaches a stopped, slower-moving, or decelerating principal other vehicle (POV) in the same lane of travel. For these tests, the POV is a strikeable object with the characteristics of a compact passenger car. The false positive scenarios are used to evaluate the propensity of a CIB system to inappropriately activate in a non-critical driving scenario that does not involve a forward vehicle or present a safety risk to the SV occupant(s).

The purpose of the testing reported herein was to objectively quantify the performance of a Crash Imminent Braking system installed on a 2020 Audi Q5 45 TFSI quattro. This test is part of the New Car Assessment Program to assess Crash Imminent Braking Systems sponsored by the National Highway Traffic Safety Administration under Contract No. DTNH22-14-D-00333.

¹ NHTSA-2015-0006-0025; Crash Imminent Brake System Performance Evaluation for the New Car Assessment Program, October 2015.

Section II
DATA SHEETS

CRASH IMMINENT BRAKING
DATA SHEET 1: TEST RESULTS SUMMARY

(Page 1 of 1)

2020 Audi Q5 45 TFSI quattro

VIN: WA1BNAFY0L200xxxx

Test Date: 6/24/2020

Crash Imminent Braking System setting: Early

**Test 1 – Subject Vehicle Encounters
Stopped Principal Other Vehicle**

SV 25 mph: Pass

**Test 2 – Subject Vehicle Encounters
Slower Principal Other Vehicle**

SV 25 mph POV 10 mph: Pass

SV 45 mph POV 20 mph: Pass

**Test 3 – Subject Vehicle Encounters
Decelerating Principal Other Vehicle**

SV 35 mph POV 35 mph: Pass

**Test 4 – Subject Vehicle Encounters
Steel Trench Plate**

SV 25 mph: Pass

SV 45 mph: Pass

Overall: Pass

Notes:

CRASH IMMINENT BRAKING
DATA SHEET 2: VEHICLE DATA

(Page 1 of 1)

2020 Audi Q5 45 TFSI quattro

TEST VEHICLE INFORMATION

VIN: WA1BNAFY0L200xxxx

Body Style: SUV

Color: Monsoon Gray Metallic

Date Received: 5/18/2020

Odometer Reading: 55 mi

DATA FROM VEHICLE'S CERTIFICATON LABEL

Vehicle manufactured by: Audi AG

Date of manufacture: 08/19

Vehicle Type: MPV

DATA FROM TIRE PLACARD

Tires size as stated on Tire Placard: Front: 255/45R20

Rear: 255/45R20

Recommended cold tire pressure: Front: 230 kPa (33 psi)

Rear: 250 kPa (36 psi)

TIRES

Tire manufacturer and model: Continental Cross Contact LX Sport

Front tire designation: 255/45R20 101H

Rear tire designation: 255/45R20 101H

Front tire DOT prefix: P512WC1L

Rear tire DOT prefix: P512WC1L

CRASH IMMINENT BRAKING
DATA SHEET 3: TEST CONDITIONS

(Page 1 of 2)

2020 Audi Q5 45 TFSI quattro

GENERAL INFORMATION

Test date: 6/24/2020

AMBIENT CONDITIONS

Air temperature: 32.2 C (90 F)

Wind speed: 1.8 m/s (4.0 mph)

X Windspeed \leq 10 m/s (22 mph)

X Tests were not performed during periods of inclement weather. This includes, but is not limited to, rain, snow, hail, fog, smoke, or ash.

X Tests were conducted during daylight hours with good atmospheric visibility (defined as an absence of fog and the ability to see clearly for more than 5000 meters). The tests were not conducted with the vehicle oriented into the sun during very low sun angle conditions, where the sun is oriented 15 degrees or less from horizontal, and camera "washout" or system inoperability results.

VEHICLE PREPARATION

Verify the following:

All non-consumable fluids at 100% capacity: X

Fuel tank is full: X

Tire pressures are set to manufacturer's recommended cold tire pressure: X

Front: 230 kPa (33 psi)

Rear: 250 kPa (36 psi)

CRASH IMMINENT BRAKING
DATA SHEET 3: TEST CONDITIONS

(Page 2 of 2)

2020 Audi Q5 45 TFSI quattro

WEIGHT

Weight of vehicle as tested including driver and instrumentation

Left Front: 533.0 kg (1175 lb)

Right Front: 527.1 kg (1162 lb)

Left Rear: 477.2 kg (1052 lb)

Right Rear: 477.2 kg (1052 lb)

Total: 2014.5 kg (4441 lb)

CRASH IMMINENT BRAKING
DATA SHEET 4: CRASH IMMINENT BRAKING SYSTEM OPERATION

(Page 1 of 3)

2020 Audi Q5 45 TFSI quattro

Name of the CIB option, option package, etc.:

Pre Sense City

Type and location of sensors the system uses:

Single camera located behind the windshield near the rearview mirror.

System setting used for test (if applicable):

Early

What is the minimum vehicle speed at which the CIB system becomes active?

9.6 km/h (6 mph) (Per manufacturer supplied information)

What is the maximum vehicle speed at which the CIB system functions?

80 km/h (50 mph) (Per manufacturer supplied information)

Does the vehicle system require an initialization sequence/procedure?

Yes
 No

If yes, please provide a full description.

Will the system deactivate due to repeated CIB activations, impacts, or near-misses?

Yes
 No

If yes, please provide a full description.

CRASH IMMINENT BRAKING

DATA SHEET 4: CRASH IMMINENT BRAKING SYSTEM OPERATION

(Page 2 of 3)

2020 Audi Q5 45 TFSI quattro

How is the Forward Collision Warning system alert presented to the driver?
(Check all that apply)

Warning light
 Buzzer or audible alarm
 Vibration
 Other: Brake Jerk

The visual warning is presented in the center of the instrument cluster. See Appendix A, Figure A17.*

The auditory warning is a constant tone centered at 1800 Hz.

In addition to these, there is a brake jerk as part of the warning cascade.

*For these tests the visual alert could not reliably be detected.

Is there a way to deactivate the system? Yes
 No

If yes, please provide a full description including the switch location and method of operation, any associated instrument panel indicator, etc.

Select in the Infotainment system: button left control button >

Vehicle

Audi drive select

Driver assistance

Audi pre sense

Turn on/off Audi pre sense - select or deselect

If the system is switched off, it switches on again automatically once the ignition is switched on again.

See Appendix A, Figures A14 and A15

CRASH IMMINENT BRAKING

DATA SHEET 4: CRASH IMMINENT BRAKING SYSTEM OPERATION

(Page 3 of 3)

2020 Audi Q5 45 TFSI quattro

Is the vehicle equipped with a control whose purpose is to adjust the range setting or otherwise influence the operation of CIB? Yes
 No

If yes, please provide a full description.

Select in the Infotainment system (left control button):

Vehicle

Audi drive select

Driver assistance

Audi pre sense

Prewarning select Off, Early, Medium or Late

See Appendix A, Figures A14 and A15

Are there other driving modes or conditions that render CIB inoperable or reduce its effectiveness? Yes
 No

If yes, please provide a full description.

The system has a self-test algorithm, which will reduce the system performance or deactivate completely if the following conditions are observed:

- Mud/dirt/snow accumulation on the sensor
- If the ESC is turned off or in sport mode

If the systems detects sensor blockage, FCW, DBS, CIB will not be available and the system will show a notification in the vehicle cluster.

Additional system limitations are described in the Owner's Manual, pages 134 and 135, shown in Appendix B, pages B-7 and B-8.

Notes:

For these tests the visual alert could not reliably be detected.

Section III

TEST PROCEDURES

A. Test Procedure Overview

Four test scenarios were used, as follows:

Test 1. Subject Vehicle (SV) Encounters Stopped Principal Other Vehicle (POV)

Test 2. Subject Vehicle Encounters Slower Principal Other Vehicle

Test 3. Subject Vehicle Encounters Decelerating Principal Other Vehicle

Test 4. Subject Vehicle Encounters Steel Trench Plate

An overview of each of the test procedures follows.

1. TEST 1 – SUBJECT VEHICLE ENCOUNTERS STOPPED PRINCIPAL OTHER VEHICLE ON A STRAIGHT ROAD

This test evaluates the ability of the CIB system to detect and respond to a stopped lead vehicle in the immediate forward path of the SV, as depicted in Figure 1.

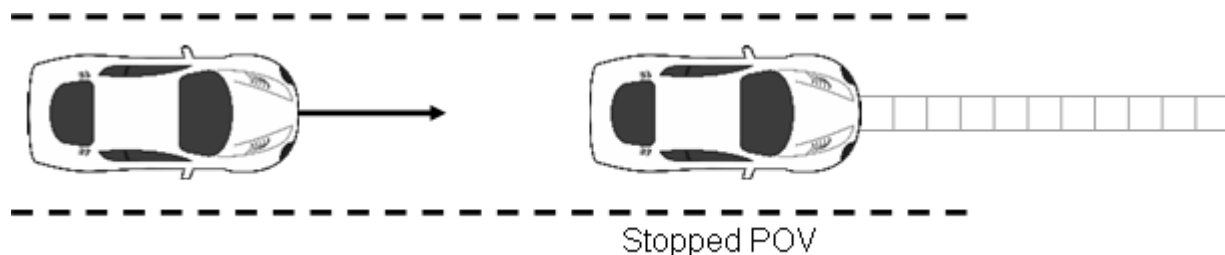


Figure 1. Depiction of Test 1

a. Procedure

The POV was parked in the center of a travel lane, with its longitudinal axis oriented parallel to the roadway edge and facing the same direction as the SV so that the SV approached the rear of the POV.

The SV ignition was cycled prior to each test run. The SV was driven at a nominal speed of 25 mph (40.2 km/h) in the center of the lane of travel, toward the parked POV. The SV throttle pedal was released within 500 ms after t_{FCW} , i.e. within 500 ms of the FCW alert. The test concluded when either:

- The SV came into contact with the POV or
- The SV came to a stop before making contact with the POV.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The SV speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) during an interval defined by a Time to Collision (TTC) = 5.1 seconds to t_{FCW} . For this test, TTC = 5.1 seconds is taken to occur at an SV-to-POV distance of 187 ft (57 m).

b. Criteria

In order to pass the test, the magnitude of the SV speed reduction attributable to CIB intervention must have been ≥ 9.8 mph (15.8 km/h) for at least five of seven valid test trials.

The magnitude of the SV speed reduction attributable to CIB intervention was calculated in one of two ways, depending on whether a test trial concluded with the SV colliding with the POV.

- If SV-to-POV contact occurred during a test trial, the CIB speed reduction was calculated by subtracting the SV speed at the time of SV-to-POV contact (i.e., when longitudinal range became zero) from the average SV speed calculated from $t_{FCW}-100$ ms to t_{FCW} .
- If SV-to-POV contact did not occur during a test trial (i.e., CIB intervention prevented the crash), the SV speed at a time of SV-to-POV contact was taken to be zero. The speed reduction is therefore equal to the SV speed at t_{FCW} .

2. TEST 2 – SUBJECT VEHICLE ENCOUNTERS SLOWER PRINCIPAL OTHER VEHICLE

- This test evaluates the ability of the CIB system to detect and respond to a slower-moving lead vehicle traveling at a constant speed in the immediate forward path of the SV, as depicted in Figure 2.

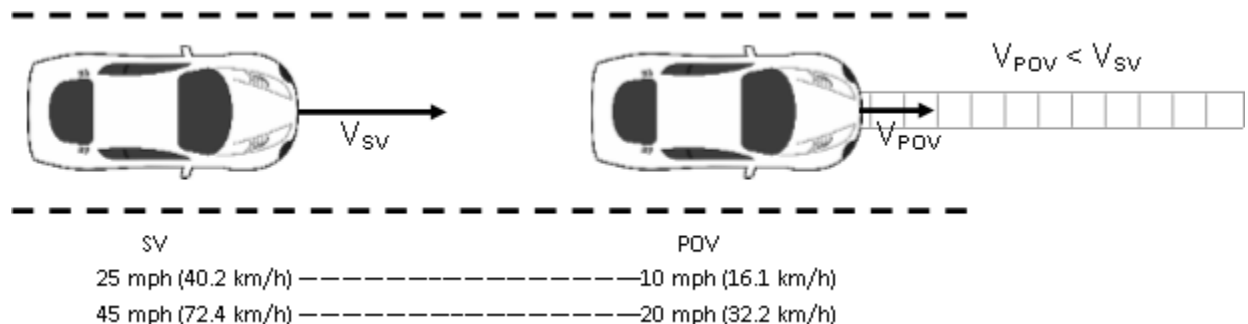


Figure 2. Depiction of Test 2

a. Procedure

The SV ignition was cycled prior to each test run. The tests were conducted two ways. In the first, the POV was driven at a constant 10.0 mph (16.1 km/h) in the center of the lane of travel while the SV was driven at 25.0 mph (40.2 km/h), in the center lane of travel, toward the slower-moving POV. In the second, the POV was driven at a constant 20.0 mph (32.2 km/h) in the center of the lane of travel while the SV was driven at 45.0 mph (72.4 km/h), in the center lane of travel, toward the slower-moving POV. In both cases, the SV throttle pedal was released within 500 ms after t_{FCW} , i.e. within 500 ms of the FCW alert. The test concluded when either:

- The SV came into contact with the POV or
- 1 second after the speed of the SV becomes less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than ± 1 ft (0.3 m) during the validity period.
- The lateral distance between the centerline of the SV and the center of the travel lane could not deviate more than ± 1 ft (0.3 m) during the validity period.
- The SV speed could not deviate more than ± 1.0 mph (± 1.6 km/h) during an interval defined by $TTC = 5.0$ seconds to t_{FCW} .
- The POV speed could not deviate more than ± 1.0 mph (± 1.6 km/h) during the validity period.

b. Criteria

For the test series in which the initial SV speed was 25 mph, the condition for passing was that there be no SV-to-POV impact for at least five of the seven valid test trials.

In order to pass the test series for which the initial speed of the SV was 45 mph, the magnitude of the SV speed reduction attributable to CIB intervention must have been ≥ 9.8 mph (15.8 km/h) for at least five of seven valid test trials. The magnitude of the SV speed reduction attributable to CIB intervention was calculated in one of two ways, depending on whether a test trial concluded with the SV colliding with the POV.

- If SV-to-POV contact occurred during a test trial, the CIB speed reduction was calculated by subtracting the SV speed at the time of SV-to-POV contact (i.e., when longitudinal range became zero) from the average SV speed calculated from $t_{FCW}-100$ ms to t_{FCW} .
- If SV-to-POV contact did not occur during a test trial (i.e., CIB intervention

prevented the crash), the CIB speed reduction was calculated by subtracting the SV speed at the minimum longitudinal SV-to-POV range during the validity period from the SV speed at t_{FCW} .

3. TEST 3 – SUBJECT VEHICLE ENCOUNTERS DECELERATING PRINCIPAL OTHER VEHICLE

This test evaluates the ability of the CIB system to detect and respond to a lead vehicle slowing with a constant deceleration in the immediate forward path of the SV, as depicted in Figure 3.

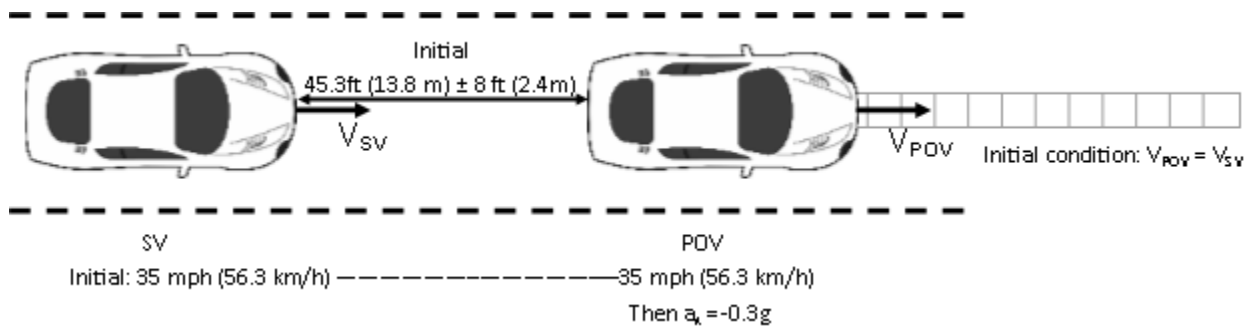


Figure 3. Depiction of Test 3

a. Procedure

The SV ignition was cycled prior to each test run. For this test scenario, both the POV and SV were driven at a constant 35.0 mph (56.3 km/h) in the center of the lane, with a headway of 45.3 ft (13.8 m) ± 8 ft (2.4 m). Once these conditions were met, the POV tow vehicle brakes were applied to achieve 0.3 ± 0.03 g of deceleration. The test concluded when either:

- The SV came into contact with the POV or
- For the decelerating POV, 1 second after minimal longitudinal SV-to-POV distance occurred or
- For the POV decelerating to stop case, 1 second after the velocity of the SV became less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than ±1 ft (0.3 m) during the validity period.
- The lateral distance between the centerline of the SV and the center of the travel lane could not deviate more than ±1 ft (0.3 m) during the validity period.

- The headway between the SV and POV must have been constant from the onset of the applicable validity period to the onset of POV braking.
- The SV and POV speed could not deviate more than ± 1.0 mph (1.6 km/h) during an interval defined by the onset of the validity period to the onset of POV braking.
- The SV-to-POV headway distance could not deviate more than ± 8 ft (2.4 m) during an interval defined by the onset of the validity period to the onset of POV braking.
- The average POV deceleration could not deviate by more than ± 0.03 g from the nominal 0.3 g deceleration during the interval beginning at 1.5 seconds after the onset of POV braking and ending either 250 ms prior to the POV coming to a stop or the SV coming into contact with the POV.

b. Criteria

In order to pass the decelerating POV test series, the magnitude of the SV speed reduction attributable to CIB intervention must have been ≥ 10.5 mph (16.9 km/h) for at least five of seven valid test trials. The magnitude of the SV speed reduction attributable to CIB intervention was calculated in one of two ways, depending on whether a test trial concluded with the SV colliding with the POV.

- If SV-to-POV contact occurred during a test trial, the CIB speed reduction was calculated by subtracting the SV speed at the time of SV-to-POV contact (i.e., when longitudinal range becomes zero) from the average SV speed calculated from $t_{FCW} - 100$ ms to t_{FCW} .
- If SV-to-POV contact did not occur during a test trial (i.e., CIB intervention prevents the crash), the CIB speed reduction was calculated by subtracting the SV speed at the minimum longitudinal SV-to-POV range during the applicable validity period from the SV speed at t_{FCW} .

4. TEST 4 – FALSE POSITIVE SUPPRESSION

The false positive suppression test series evaluates the ability of a CIB system to differentiate a steel trench plate (STP) from an object presenting a genuine safety risk to the SV. Although the STP is large and metallic, it is designed to be driven over without risk of injury to the driver or damage to the SV. Therefore, in this scenario, the automatic braking available from CIB is not necessary and should be suppressed. The test condition is nearly equivalent to that previously defined for Test 1, the stopped POV condition, but with an STP in the SV forward path in lieu of a POV.

a. Procedure

This test was conducted at two speeds, 25 mph (40.2 km/h) and 45 mph (72.4 km/h). The SV was driven directly towards, and over, the STP, which was positioned in the center of a travel lane, with its longest sides parallel to the road edge.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The SV speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) during an interval defined by a Time to Collision (TTC) = 5.1 seconds to t_{FCW} where:
 - For SV test speed of 25 mph, TTC = 5.1 seconds is taken to occur at an SV-to-STP distance of 187 ft (57 m).
 - For SV test speed of 45 mph, TTC = 5.1 seconds is taken to occur at an SV-to-STP distance of 337 ft (106 m).
- If the SV did not present an FCW alert before the end of the validity period, SV speed could not deviate more than ± 1.0 mph (± 1.6 km/h) from TTC = 5.1 s to the end of the validity period.

If an FCW alert was presented, the driver released the throttle pedal within 500 ms of the alert. If no alert was presented, the driver did not release the throttle pedal until the end of the validity period. The SV driver then braked to a stop.

b. Criteria

In order to pass the False Positive test series, the magnitude of the SV deceleration reduction attributable to CIB intervention must have been ≤ 0.50 g for at least five of seven valid test trials.

B. General Information

1. T_{FCW}

The time at which the Forward Collision Warning (FCW) activation flag indicates that the system has issued an alert to the SV driver is designated as t_{FCW} . FCW alerts are typically either visual, haptic or audible, and the onset of the alert was determined by post-processing the test data.

For systems that implement audible or haptic alerts, part of the pre-test instrumentation verification process was to determine the tonal frequency of the audible warning or the vibration frequency of the tactile warning through use of the PSD (Power Spectral Density) function in Matlab. This was accomplished in order to identify the center frequency around which a band-pass filter was applied to subsequent audible or tactile warning data so that the beginning of such warnings can be programmatically determined. The band-pass filter used for these warning signal types was a phaseless, forward-reverse pass, elliptical (Cauer) digital filter, with filter parameters as listed in Table 1.

Table 1. Audible and Tactile Warning Filter Parameters

Warning Type	Filter Order	Peak-to-Peak Ripple	Minimum Stop Band Attenuation	Passband Frequency Range
Audible	5 th	3 dB	60 dB	Identified Center Frequency \pm 5%
Tactile	5 th	3 dB	60 dB	Identified Center Frequency \pm 20%

2. GENERAL VALIDITY CRITERIA

In addition to any validity criteria described above for the individual test scenarios, for an individual trial to be valid, it must have met the following criteria throughout the test:

- The SV driver seatbelt was latched.
- If any load had been placed on the SV front passenger seat (e.g., for instrumentation), the vehicle's front passenger seatbelt was latched.
- The SV was driven at the nominal speed in the center of the travel lane, toward the POV or STP.
- The driver used the least amount of steering input necessary to maintain SV position in the center of the travel lane during the validity period; use of abrupt steering inputs or corrections was avoided.
- The yaw rate of the SV did not exceed ± 1.0 deg/s from the onset of the validity period to the instant SV deceleration exceeded 0.25g.
- The SV driver did not apply any force to the brake pedal during the applicable validity period.
- The lateral distance between the centerline of the SV and the centerline of the POV or STP did not deviate more than ± 1 ft (0.3 m) during the applicable validity period.

3. VALIDITY PERIOD

The valid test interval began:

- Test 1: When the SV-to-POV TTC = 5.1 seconds
- Test 2: When the SV-to-POV TTC = 5.0 seconds
- Test 3: 3 seconds before the onset of POV braking
- Test 4: When the SV-to-STP TTC = 5.1 seconds

The valid test interval ended:

- Test 1: When either of the following occurred:
 - The SV came into contact with the POV (SV-to-POV contact was assessed by using GPS-based range data or by measurement of direct contact sensor output); or
 - The SV came to a stop before making contact with the POV.

Tests 2 and 3: When either of the following occurred:

- The SV came into contact with the POV; or
- 1 second after the velocity of the SV became less than or equal to that of the POV.
- 1 second after minimal longitudinal SV-to-POV distance occurred.

Test 4: At the instant the front-most part of SV reached a vertical plane defined by the leading edge of the STP first encountered by the SV (i.e., just before it was driven onto the STP).

4. STATIC INSTRUMENTATION CALIBRATION

To assist in resolving uncertain test data, static calibration data was collected prior to each of the test series.

For Tests 1, 2, and 3, the SV, POV, POV moving platform, and tow vehicle were centered in the same travel lane with the same orientation (i.e., facing the same direction). For Test 4, the SV and STP were centered in the same travel lane.

For Tests 1, 2, and 3, the SV was positioned such that it just contacted a vertical plane that defines the rearmost location of the POV. For Test 4, the front-most location of the SV was positioned such that it just reached a vertical plane defined by the leading edge of the STP first encountered by the SV (i.e., just before it is driven onto the STP). This is the “zero position.”

The zero position was documented prior to, and immediately after, conduct of each test series.

If the zero position reported by the data acquisition system was found to differ by more than ± 2 in (± 5 cm) from that measured during collection of the pre-test static calibration data file, the pre-test longitudinal offset was adjusted to output zero and another pre-test static calibration data file was collected. If the zero position reported by the data acquisition system was found to differ by more than ± 2 in (± 5 cm) from that measured during collection of the post-test static calibration data file, the test trials performed between collection of that post-test static calibration data file and the last valid pre-test static calibration data file were repeated.

Static data files were collected prior to, and immediately after, conducting each of the test series. The pre-test static files were reviewed prior to test conduct to confirm that all data channels were operational and were properly configured.

5. NUMBER OF TRIALS

A target total of seven (7) valid trials were performed for each scenario. In cases where the test driver performed more than seven trials, the first seven trials satisfying all test tolerances were used to assess the SV performance.

6. TRANSMISSION

All trials were performed with SV automatic transmissions in “Drive” or with manual transmissions in the highest gear capable of sustaining the desired test speed. Manual transmission clutches remained engaged during all maneuvers. The brake lights of the POV were not illuminated.

C. Principal Other Vehicle

CIB testing requires a POV that realistically represents typical vehicles, does not suffer damage or cause damage to a test vehicle in the event of collision, and can be accurately positioned and moved during the tests. The tests reported herein made use of the NHTSA developed Strikeable Surrogate Vehicle (SSV).

This SSV system was designed specifically for common rear-end crash scenarios which AEB systems address. The key components of the SSV system are:

- A POV shell which is a visually and dimensionally accurate representation of a passenger car.
- A slider and load frame assembly to which the shell is attached.
- A two-rail track on which the slider operates.
- A road-based lateral restraint track.
- A tow vehicle.

The key requirements of the POV element are to:

- Provide an accurate representation of a real vehicle to CIB sensors, including cameras and radar.
- Be resistant to damage and inflict little or no damage to the SV as a result of repeated SV-to-POV impacts.

The key requirements of the POV delivery system are to:

- Accurately control the nominal POV speed up to 35 mph (56 km/h).
- Accurately control the lateral position of the POV within the travel lane.
- Allow the POV to move away from the SV after an impact occurs.

Operationally, the POV shell is attached to the slider and load frame which includes rollers that allows the entire assembly to move longitudinally along the guide rail. The guide rail is coupled to a tow vehicle and guided by the lateral restraint track secured to the test track surface. The rail includes a provision for restraining the shell and roller assembly in the ward direction. In operation, the shell and roller assembly engage the rail assembly through detents to prevent relative motion during run-up to test speeds and deceleration of the tow vehicle. The combination of rearward stops and forward motion detents allows the test conditions, such as relative SV-to-POV headway distance, speed, etc., to be achieved and adjusted as needed in the preliminary part of a test. If during the test, the SV strikes the rear of the POV shell, the detents are overcome and the entire shell/roller assembly moves forward in a two-stage manner along the rail and away from the SV. The forward end of the rail has a cushioned stop to restrain forward motion of the shell/roller assembly. After impacting the SSV, the SV driver uses the steering wheel to maintain SV position in the center of the travel lane, thereby straddling the two-rail track. The SV driver must manually apply the SV brakes after impact. The SSV system is shown in Figures A6 through A8 and a detailed description can be found in the NHTSA report: NHTSA'S STRIKEABLE SURROGATE VEHICLE PRELIMINARY DESIGN+OVERVIEW, May 2013.

D. Automatic Braking System

The POV was equipped with an automatic braking system, which was used in Test 3. The braking system consisted of the following components:

- Electronically controlled linear actuator, mounted on the seat rail and attached to the brake pedal. The actuator can be programmed for control of stroke and rate.
- PC module programmed for control of the stroke and rate of the linear actuator.
- Switch to activate actuator.

In some cases, the subject vehicle is also equipped with an automatic braking system (E-brake) for the purpose of slowing the subject vehicle before impact with the SSV in

cases where the subject vehicle is likely to fail a test. The system fires when TTC is below 0.7 sec. It is typically enabled when an SV has already impacted the SSV one or two times.

E. Instrumentation

Table 2 lists the sensors, signal conditioning, and data acquisition equipment used for these tests.

Table 2. Test Instrumentation and Equipment

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Tire Pressure Gauge	Vehicle Tire Pressure	0-100 psi 0-690 kPa	< 1% error between 20 and	Omega DPG8001	17042707002	By: DRI Date: 7/3/2019 Due: 7/3/2020
Platform Scales	Vehicle Total, Wheel, and Axle Load	1500 lb/platform 6672 N	0.5% of applied load	Intercomp SW II	NT2888	By: DRI Date: 1/16/2020 Due: 1/16/2021
Linear (string) encoder	Throttle pedal travel	10 in 254 mm	0.1 in 2.54 mm	UniMeasure LX-EP	49041189	By: DRI Date: 5/22/2020 Due: 5/22/2021
Differential Global Positioning System	Position, Velocity	Latitude: ±90 deg Longitude: ±180 deg Altitude: 0-18 km Velocity: 0-1000 knots	Horizontal Position: ±1 cm Vertical Position: ±2 cm Velocity: 0.05 km/h	Trimble GPS Receiver, 5700 (base station and in-vehicle)	00440100989	NA
Multi-Axis Inertial Sensing System	Position; Longitudinal, Lateral, and Vertical Accels; Lateral, Longitudinal and Vertical Velocities; Roll, Pitch, Yaw Rates; Roll, Pitch, Yaw Angles	Accels ± 10g, Angular Rat	Accels .01g, Angular Rate	Oxford Inertial +		By: Oxford Technical Solutions
					2258	Date: 5/3/2019 Due: 5/3/2021
					2182	Date: 9/16/2019 Due: 9/16/2021

Table 2. Test Instrumentation and Equipment (continued)

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Real-Time Calculation of Position and Velocity Relative to Lane Markings (LDW) and POV (FCW)	Distance and Velocity to lane markings (LDW) and POV (FCW)	Lateral Lane Dist: ±30 m Lateral Lane Velocity: ±20 m/sec Longitudinal Range to POV: ±200 m Longitudinal Range Rate: ±50 m/sec	Lateral Distance to Lane Marking: ±2 cm Lateral Velocity to Lane Marking: ±0.02m/sec Longitudinal Range: ±3 cm Longitudinal Range Rate: ±0.02 m/sec	Oxford Technical Solutions (OXTS), RT-Range	97	NA
Microphone	Sound (to measure time at alert)	Frequency Response: 80 Hz – 20 kHz	Signal-to-noise: 64 dB, 1 kHz at 1 Pa	Audio-Technica AT899	NA	NA
Light Sensor	Light intensity (to measure time at alert)	Spectral Bandwidth: 440-800 nm	Rise time < 10 msec	DRI designed and developed Light Sensor	NA	NA
Accelerometer	Acceleration (to measure time at alert)	±5g	≤ 3% of full range	Silicon Designs, 2210-005	NA	NA
Coordinate Measurement Machine	Inertial Sensing System Coordinates	0-8 ft 0-2.4 m	±.0020 in. ±.051 mm (Single point articulation accuracy)	Faro Arm, Fusion	UO8-05-08-06636	By: DRI Date: 1/6/2020 Due: 1/6/2021
Type	Description			Mfr, Model	Serial Number	
Data Acquisition System	Data acquisition is achieved using a dSPACE MicroAutoBox II. Data from the Oxford IMU, including Longitudinal, Lateral, and Vertical Acceleration, Roll, Yaw, and Pitch Rate, Forward and Lateral Velocity, Roll and Pitch Angle are sent over Ethernet to the MicroAutoBox. The Oxford IMUs are calibrated per the manufacturer's recommended schedule (listed above).			dSPACE Micro-Autobox II 1401/1513		
				Base Board		549068
				I/O Board		588523

APPENDIX A

Photographs

LIST OF FIGURES

	Page
Figure A1. Front View of Subject Vehicle	A-3
Figure A2. Rear View of Subject Vehicle.....	A-4
Figure A3. Window Sticker (Monroney Label)	A-5
Figure A4. Vehicle Certification Label	A-6
Figure A5. Tire Placard	A-7
Figure A6. Rear View of Principal Other Vehicle (SSV)	A-8
Figure A7. Load Frame/Slider of SSV	A-9
Figure A8. Two-Rail Track and Road-Based Lateral Restraint Track.....	A-10
Figure A9. Steel Trench Plate	A-11
Figure A10. DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle	A-12
Figure A11. Sensor for Detecting Auditory Alerts	A-13
Figure A12. Computer Installed in Subject Vehicle	A-14
Figure A13. Brake Actuator Installed in POV System.....	A-15
Figure A14. System Setup Menus (1 of 2)	A-16
Figure A15. System Setup Menus (2 of 2)	A-17
Figure A16. Controls for Interacting with System Menus.....	A-18
Figure A17. Visual Alert.....	A-19



Figure A1. Front View of Subject Vehicle



Figure A2. Rear View of Subject Vehicle

2020 Audi Q5 45 TFSI quattro



STANDARD EQUIPMENT (unless replaced by options)

TECHNICAL

- 2.0 TFSI® 14 engine
- quattro® all-wheel drive system
- 7-speed S tronic® transmission
- 18" 5-arm-turbine design wheels with all-season tires
- Energy recuperation system with start-stop
- Space-saving spare tire

COMFORT/TECHNOLOGY

- Audi connect® CARE (limited time subscription)
- Audi drive select
- Audi sound system
- Audi xenon plus headlights
- Aluminum high-gloss window surrounds
- Aluminum roof rails with crossbars
- Auto-dimming interior mirror w/ compass
- Garage door opener (HomeLink®)
- Driver information system w/ 7" color display
- Heated front seats
- Heated, power exterior mirrors
- High beam assist
- High-gloss Burl Walnut Wood inlays
- Hill descent control
- Leather seating surfaces
- Power tailgate
- Preparation for mobile phone (Bluetooth®) with audio streaming
- Rear privacy glass
- Sliding 40/20/40 split-folding 2nd row with adjustable recline
- Three-zone automatic climate control with digital rear display
- USB Audi music interface w/ Audi smartphone interface
- 3-spoke multi-function steering wheel w/ shift paddles
- 8-way power front seats, 4-way power lumbar for driver

SAFETY/CONVENIENCE

- Advanced Airbag Protection System with 6 airbags
- Anti-lock Braking System (ABS) w/ Brake Assist
- Audi pre sense basic (preventative occupant protection)
- Audi pre sense city (low speed collision assist)
- Child safety locks in rear doors, power
- Electronic Stabilization Control (ESC) w/ Offroad mode
- Electronic vehicle immobilization w/ anti-theft alarm & interior motion sensor
- LED Daytime Running Lights (DRLs) and taillights
- Lower Anchors and Tethers for Children (LATCH)
- Rearview camera
- Tire Pressure Monitoring System (TPMS)

WARRANTY/MAINTENANCE

- 4 Year/50,000 mile (whichever occurs first) New Vehicle Limited Warranty*
 - 12 Year Limited Warranty Against Corrosion Perforation
 - 4 Years Roadside Assistance coverage provided by a third party supplier
- *Please refer to the 2020 Audi Warranty and Maintenance Booklet for complete coverage information.

MANUFACTURER'S SUGGESTED RETAIL PRICE

2020 Audi Q5 45 TFSI quattro	\$43,300.00
PACKAGES / OPTIONS	
Monsoon Gray metallic	\$595.00
Black interior	Included
Premium Plus package	\$6,650.00
19" 5-spoke-dynamic design wheels with all-season tires	
Auto-dimming, power-folding exterior mirrors with memory	
SinusXM® All Access service w/3-month trial subscription	
Audi advanced key & memory for driver's seat	
LED headlights	
Panoramic sunroof	
Parking system plus	
Leatherette covered center console and door armrests	
Aluminum front door sill inlays	
Audi side assist with pre sense rear	
MMI® Navigation plus with MMI® all-in-touch	
Audi virtual cockpit	
Audi connect PRIME and PLUS (6 month trial subscription)	
Audi phone box & rear USB charge ports	
Driver assistance package	\$1,500.00
Adaptive cruise control with Traffic Jam assist	
Audi active lane assist	
Black optic package	\$1,300.00
Titanium black exterior package w/ matte black roof rails	
20" 5-arm-offroad design wheels with all-season tires	
Bang & Olufsen® sound system with 3D sound	\$950.00
Apple® Lightning® and USB Type-C cables	\$110.00
Destination Charge	\$995.00
Subtotal:	\$55,400.00
Convenience package plus credit	-\$750.00
Convenience package credit	-\$1,500.00
Total Price:	\$53,150.00

Fuel, license, title fees, taxes and dealer-installed accessories are not included.

MODEL: FYB5NY

VIN: WA1BNAFY0L200

GOVERNMENT 5-STAR SAFETY RATINGS

Overall Vehicle Score ★★★★★

Based on the combined ratings of frontal, side and rollover. Should ONLY be compared to other vehicles of similar size and weight.

Frontal Crash Driver ★★★★★
Passenger ★★★★★

Based on the risk of injury in a frontal impact. Should ONLY be compared to other vehicles of similar size and weight.

Side Crash Front Seat ★★★★★
Rear Seat ★★★★★

Based on the risk of injury in a side impact.

Rollover ★★★★★

Based on the risk of rollover in a single-vehicle crash.

Star ratings range from 1 to 5 stars (★★★★★) with 5 being the highest.

Source: National Highway Traffic Safety Administration (NHTSA).

www.safercar.gov or 1-888-327-4236



Fuel Economy and Environment



Gasoline Vehicle

Fuel Economy



24 MPG

Small Sport Utility Vehicles range from 18 to 120 MPG. The best vehicle rates 136 MPGe.

You spend \$2,750

22 28
combined city/hwy city highway

4.2 gallons per 100 miles

more in fuel costs over 5 years compared to the average new vehicle.


Annual fuel cost

\$2,050

Fuel Economy & Greenhouse Gas Rating (tailpipe only)



Smog Rating (tailpipe only)



This vehicle emits 364 grams of CO₂ per mile. The best emits 0 grams per mile (tailpipe only). Producing and distributing fuel also create emissions; learn more at fueleconomy.gov.

Actual results will vary for many reasons, including driving conditions and how you drive and maintain your vehicle. The average new vehicle gets 27 MPG and costs \$7,500 to fuel over 5 years. Cost estimates are based on 15,000 miles per year at \$3.25 per gallon. MPGe is miles per gasoline gallon equivalent. Vehicle emissions are a significant cause of climate change and smog.

fueleconomy.gov

Calculate personalized estimates and compare vehicles



Smartphone QR Code™



PARTS CONTENT INFORMATION

For Vehicles In This Carline
U.S./Canadian Parts Content:
Major Sources Of Foreign
Parts Content: **MEXICO:**

For This Vehicle:
Final Assembly Point: **SAN JOSE CHIAPA, MEXICO**
Country Of Origin:
ENGINE: MEXICO
TRANSMISSION: GERMANY

NOTE: PARTS CONTENT DOES NOT INCLUDE FINAL ASSEMBLY, DISTRIBUTION OR OTHER NON-PARTS COSTS.

Figure A3. Window Sticker (Monroney Label)

MFD. BY AUDI AG

0819



Audi

GVWR LBS 5456, KG 2475

GAWR FRONT LBS 2679, KG 1215

FRONT-TIRES 255/45 R20

8JX20 RIMS, AT 230 KPA 33 PSI COLD

GAWR REAR LBS 3042, KG 1380

REAR-TIRES 255/45 R20

8JX20 RIMS, AT 250 KPA 36 PSI COLD


THIS VEHICLE CONFORMS TO ALL APPLICABLE
U.S. FEDERAL MOTOR VEHICLE SAFETY AND
THEFT PREVENTION STANDARDS IN EFFECT ON
THE DATE OF MANUFACTURE SHOWN ABOVE.
MEXICO

WA1BNAFY0L200

TYPE:
MPV



Figure A4. Vehicle Certification Label



TIRE AND LOADING INFORMATION


RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT

SEATING CAPACITY NOMBRE DE PLACES	TOTAL	5	FRONT AVANT	2	REAR ARRIERE	3
--------------------------------------	-------	----------	----------------	----------	-----------------	----------

80A 010
502 P

The combined weight of occupants and cargo should never exceed **480** kg or **1058** lbs.
 Le poids total des occupants et du chargement ne doit jamais dépasser **480** kg ou **1058** lb.

TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS A FROID	
FRONT AVANT	255/45 R20 101H	230 KPA, 33 PSI	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION VOIR LE MANUEL DU PROPRIETAIRE POUR PLUS DE RENSEIGNEMENTS
REAR ARRIERE	255/45 R20 101H	250 KPA, 36 PSI	
SPARE DE SECOURS	195/75-18	350 KPA, 51 PSI	


 Audi





RESET


8K0 010 500 D

Figure A5. Tire Placard



Figure A6. Rear View of Principal Other Vehicle (SSV)



Figure A7. Load Frame/Slider of SSV

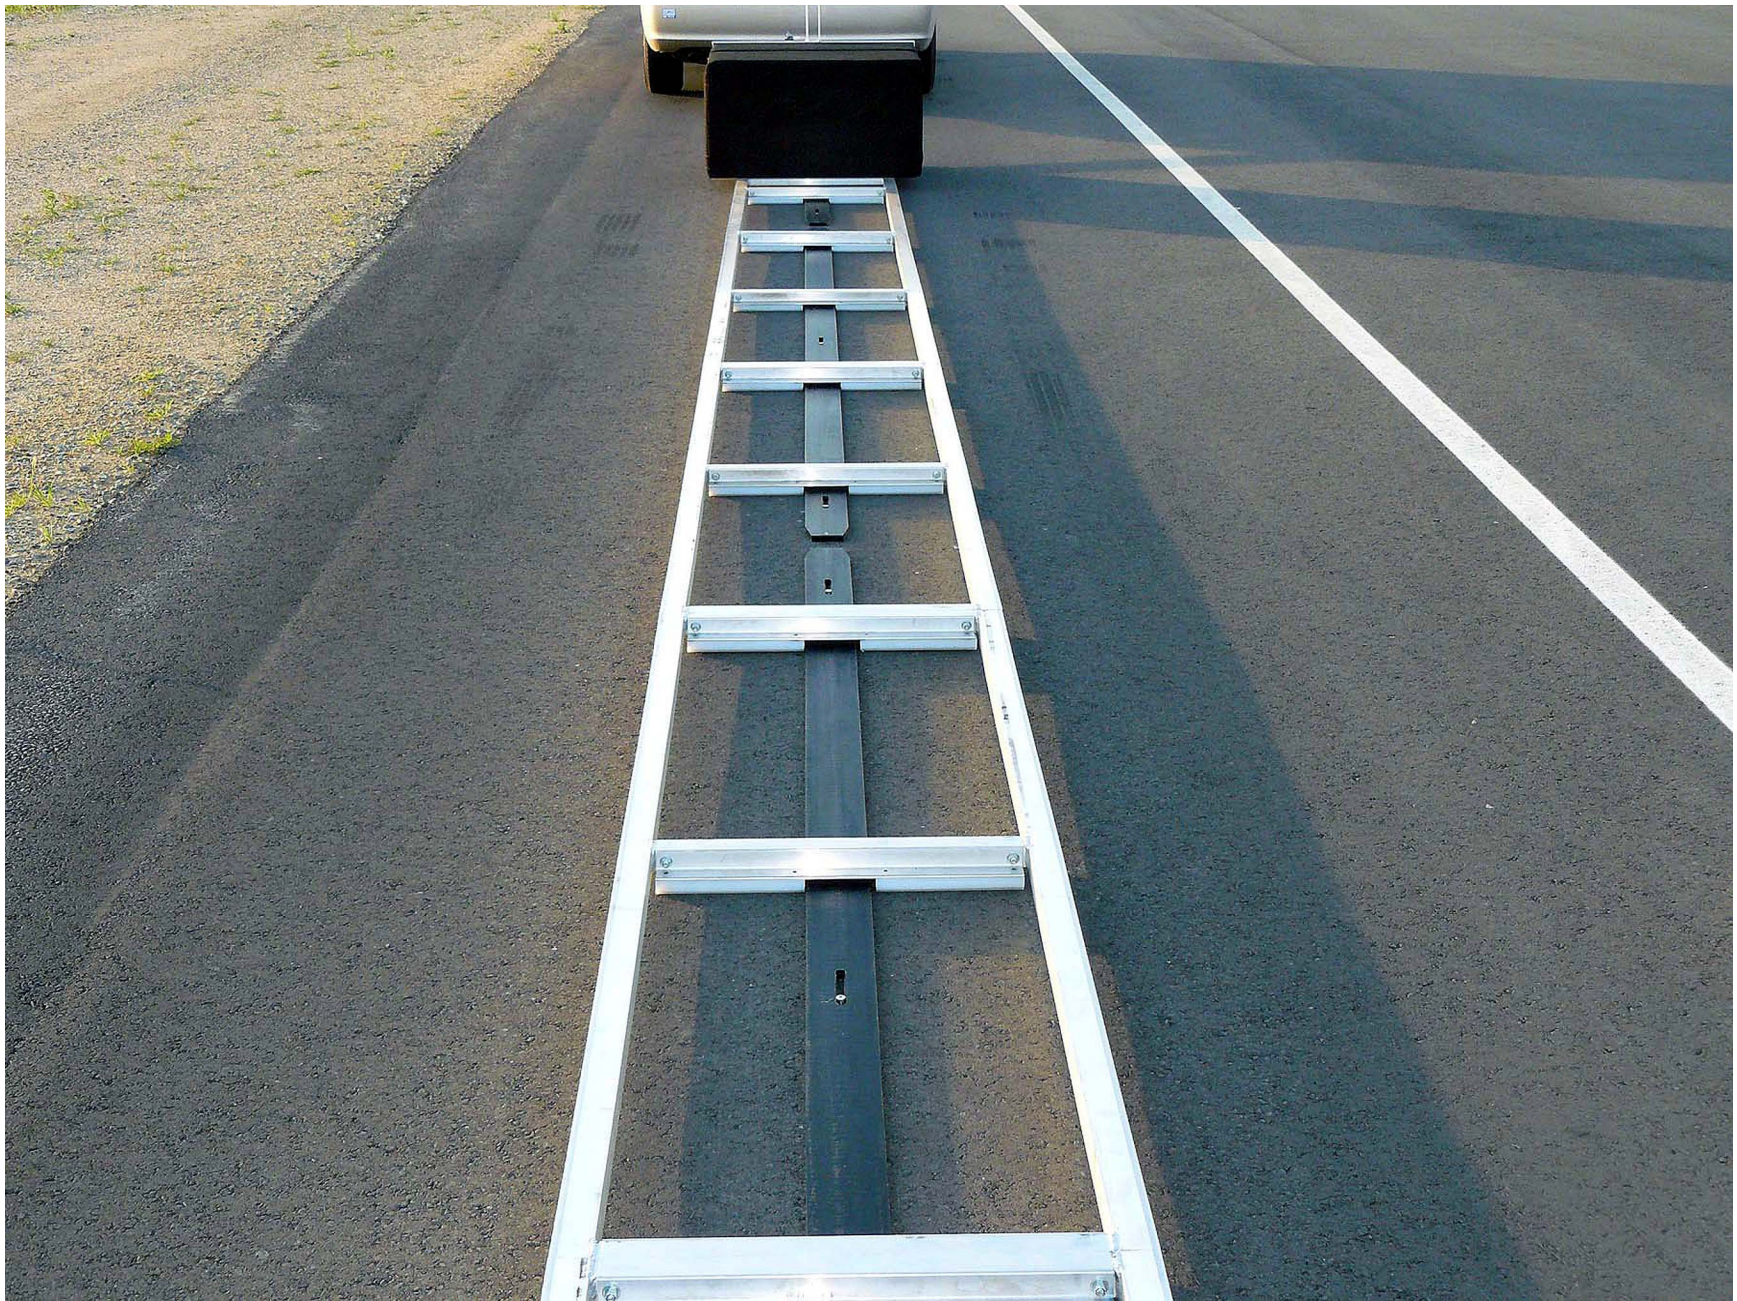


Figure A8. Two-Rail Track and Road-Based Lateral Restraint Track



Figure A9. Steel Trench Plate



Figure A10. DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle



Figure A11. Sensor for Detecting Auditory Alerts



Figure A12. Computer Installed in Subject Vehicle



Figure A13. Brake Actuator Installed in POV System



Figure A14. System Setup Menus (1 of 2)



Figure A15. System Setup Menus (2 of 2)



Figure A16. Controls for Interacting with System Menus



Figure A17. Visual Alert

APPENDIX B

Excerpts from Owner's Manual

Quick access

Indicator lights overview



Description

The indicator lights in the instrument cluster blink or turn on. They indicate functions or malfunctions.

Messages may appear with some indicator lights. A warning signal will sound at the same time. The indicator lights and messages may be covered by other displays. To show them again, select the second tab for messages with the multi-function steering wheel ⇨ *page 17* or ⇨ *page 20*.



Some indicator lights in the display can display in several colors.

Central indicator light

If the  or  indicator light turns on, check the message in the instrument cluster.



Overview







Some indicator lights turn on briefly as a function check when you switch the ignition on. These systems are marked with a ✓ in the following tables. If one of these indicator lights does not turn on, there is a malfunction in that system.









Your vehicle has either a monochrome display or a multicolored display, depending on vehicle equipment. Some indicator lights appear white on a monochrome display. The  or  central indicator light turns on at the same time to indicate the priority of these indicator lights.

The following indicator lights may be available, depending on the vehicle equipment:




Red indicator lights

	Central indicator light ⇨ <i>page 10</i> , Audi pre sense ⇨ <i>page 131</i> , instrument cluster ⇨ <i>page 14</i>
	Safety belt ⇨ <i>page 273</i>


	Engine start system ⇨ <i>page 76</i>
	Transmission ⇨ <i>page 82</i>
	Drive system ⇨ <i>page 86</i>
PARK	Electromechanical parking brake ⇨ <i>page 89</i>
	Electromechanical parking brake ⇨ <i>page 89</i>
	Brake system ✓ ⇨ <i>page 90</i> , ⇨ <i>page 89</i> , ⇨ <i>page 335</i>
BRAKE	Brake system ✓ ⇨ <i>page 90</i> , ⇨ <i>page 89</i> , ⇨ <i>page 335</i>
	Steering ✓ ⇨ <i>page 166</i>

	Air suspension ⇨ <i>page 23</i>
	Electrical system ⇨ <i>page 336</i>
	Engine oil pressure ⇨ <i>page 330</i>
	Engine oil level (MIN) ⇨ <i>page 330</i>
	Cooling system ⇨ <i>page 333</i>
	Hood ⇨ <i>page 328</i>
	Adaptive cruise control ✓ ⇨ <i>page 123</i>
	Traffic jam assist ⇨ <i>page 128</i>

Yellow indicator lights

	Central indicator light ⇨ <i>page 10</i>
	Safety systems ✓ ⇨ <i>page 269</i>
	Transmission ⇨ <i>page 82</i>

Quick access

	Drive system ⇒ page 86, ⇒ page 333		Engine oil level (MAX) ⇒ page 330
	Vehicle sound ⇒ page 86		Engine oil sensor ⇒ page 330
	Engine start system ⇒ page 76		Malfunction Indicator Lamp (MIL) ✓ ⇒ page 326
	Keys ⇒ page 76		Engine warm-up request ⇒ page 330
	Electromechanical parking brake ⇒ page 90		Washer fluid level ⇒ page 339
	Brake system ⇒ page 89		Windshield wipers ⇒ page 50
	Electronic Stabilization Control (ESC) ⇒ page 22		Charging system ⇒ page 100
	Electronic Stabilization Control (ESC) ✓ ⇒ page 22		Parking aid ⇒ page 163
	Electronic Stabilization Control (ESC) ⇒ page 165		Tire pressure ⇒ page 359
	Anti-lock braking system (ABS) ✓ ⇒ page 22		TPMS Tire pressure ⇒ page 359
	Anti-lock braking system (ABS) ✓ ⇒ page 22		Bulb failure indicator ⇒ page 44
	Steering ⇒ page 166		Headlight range control system ⇒ page 44
	All wheel drive/sport differential ⇒ page 23		Adaptive light ⇒ page 44
	Suspension control ⇒ page 23		Light/rain sensor ⇒ page 44, ⇒ page 50
	Air suspension ⇒ page 23		Driver's door ⇒ page 30
	Engine speed limitation ⇒ page 16		Battery in vehicle key ⇒ page 27
	Tank system ⇒ page 324		Audi side assist ⇒ page 145
	Electrical system ⇒ page 336		Active lane assist ⇒ page 137
	Engine oil level (MIN) ⇒ page 330		Audi pre sense ⇒ page 135
			Emergency call function ⇒ page 217

80A012721BJ

General information

Applies to: vehicles with Audi adaptive cruise control



Fig. 110 Front of the vehicle: sensors and video camera

The areas with the radar and ultrasonic sensors and the video camera ⇒ *fig. 110* must not be covered by stickers, deposits or any other objects, because this can interfere with the adaptive cruise control function. For information on cleaning, see ⇒ *page 361*. The same applies for any modifications made in the front area.

In some driving situations, the adaptive cruise control function is restricted:

- Vehicles can only be detected when they are within the sensor detection zones ⇒ *page 121, fig. 109*.
- The system has a limited ability to detect vehicles that are a short distance ahead, off to the side of your vehicle or moving into your lane.
- Objects that are difficult to detect such as motorcycles, vehicles with high ground clearance or an overhanging load are detected late or not detected at all.
- When driving through curves ⇒ *page 123*.
- When the vehicle is stationary ⇒ *page 123*.

⚠ WARNING

Always pay attention to the traffic around you when adaptive cruise control is switched on. As the driver, you are still responsible for your own speed and the distance to other vehicles. The adaptive cruise control is used to assist you. The driver must always take action to avoid a collision. The driver is always responsible for braking at the correct time.

- For safety reasons, do not use adaptive cruise control when the road surface is in

poor condition and/or in bad weather conditions (such as ice, fog, gravel, heavy rain and hydroplaning). Using the system under these conditions increases the risk of an accident.

- Switch adaptive cruise control off temporarily when driving in turning lanes, on expressway exits (except if predictive control is switched on) or in construction zones. This prevents the vehicle from accelerating to the stored speed when in these situations.
- The adaptive cruise control system will not brake by itself if you put your foot on the accelerator pedal. Doing so can override the speed and distance regulation.
- When approaching stationary obstacles such as stopped traffic, adaptive cruise control will respond with limited function.
- Adaptive cruise control does not respond to people, animals, or crossing or oncoming objects.
- The function of the radar sensors can be affected by reflective objects such as guard rails, the entrance to a tunnel, heavy rain or ice.

ⓘ Note

The sensors can be displaced by impacts or damage to the bumper, wheel housing and underbody. This can impair the adaptive cruise control. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

ⓘ Tips

For an explanation on conformity with the FCC regulations in the United States and the Industry Canada regulations, see ⇒ *page 390*.

Distance warning: currently unavailable. See owner's manual

This message appears if the system has a temporary failure. If this occurs multiple times, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

ACC: Please fasten seat belt

The system is not completely available if the driver's seat belt is unfastened.

Stationary object ahead

This message appears if you would like to switch the system on and there is a stationary object directly in front of your vehicle.

Door open

The system is not available when the door is open.

Audi pre sense**Introduction**

Applies to: vehicles with Audi pre sense



Within the limits of the system, the pre sense functions can initiate measures in particularly dangerous situations to protect the vehicle passengers and other road users.

- Due to the interlinking of various vehicle systems, critical driving situations can be detected by **pre sense basic** and measures for preventative occupant protection are can be initiated.
- The **pre sense front** system uses the data from the adaptive cruise control* radar sensors and the camera to calculate the probability of a collision. Within the limits of the system, an impending collision with vehicles can be detected in both urban and rural speed ranges. In this case, the system warns the driver visually, acoustically and with a jerk on the brakes if necessary. If needed, it can initiate a partial or full deceleration to reduce the collision speed or to avoid the collision under certain circumstances. In conjunction with pre sense basic/rear, the front safety belts are also reversibly tensioned

when needed. The pre sense front is also active when adaptive cruise control* is switched off.

- **Pre sense rear** contains pre sense basic functions. It uses the data from the side assist* radar sensors and calculates within the limits of the system the probability of a rear end collision with the vehicle behind you. Pre sense rear is also active when side assist* is switched off.
- Within the limits of the system, **pre sense city** uses the camera data and can detect an impending collision with vehicles and pedestrians. In this case, the system warns the driver visually, acoustically and with a jerk on the brakes if necessary. If needed, it can initiate a full deceleration to reduce the collision speed or to avoid the collision under certain circumstances. In conjunction with pre sense basic/rear, the front safety belts are also reversibly tensioned when needed.

WARNING

Read the general information in ⇨  *in General information on page 122*, ⇨  *in General information on page 141*.

Tips

- Certain pre sense functions switch off when driving in reverse.
- The pre sense functions may not be available if there is a malfunction in the ESC system or the airbag control module.
- Note that the reversible belt tensioner on the front passenger's side deactivates when the front passenger's airbag is deactivated.
- Switch the pre sense off when you are not using public streets or when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation. This can prevent an undesired intervention from the pre sense system.

Audi pre sense basic


Applies to: vehicles with Audi pre sense basic

The pre sense basic functions are activated at a speed of approximately 20 mph (30 km/h) or higher. ▶

Assist systems

The following functions can be triggered under certain conditions within the limits of the system:

- Tensioning of the safety belts (for example, during heavy braking): the front safety belts have reversible belt tensioners. If a collision does not occur, the safety belts loosen slightly and are ready to trigger again.
- Closing the windows and sunroof*
- Activation of the emergency flashers¹⁾

The message **Audi pre sense**  ⇒ page 132, fig. 123 will warn you about the danger.

Audi drive select*: the trigger times are adjusted depending on the mode selected.

Audi pre sense front

Applies to: vehicles with Audi pre sense front



Fig. 123 Instrument cluster: approach warning

Description

Within the limits of the system, pre sense front can warn you of impending collisions and initiate the corresponding braking maneuvers or the supporting measures when avoiding a collision.

If detected in time, the system can rank the dangerous situation as critical if a vehicle driving ahead brakes suddenly, if your own vehicle is approaching a significantly slower vehicle at high speed or when there is an oncoming vehicle during a turning maneuver.


If detection is not possible, then pre sense front does not react.

¹⁾ This is not available in some countries.

Warnings

The system recognizes various dangerous situations. The **early warning** occurs if:

- A vehicle driving ahead brakes suddenly
- Your own vehicle approaches a significantly slower vehicle or stationary vehicle in the direction of travel

When this warning occurs, it may only be possible to avoid a collision by swerving or braking strongly. The message **Audi pre sense**  ⇒ fig. 123 and a warning tone will warn you about the danger.

If you do not react enough or not at all to a dangerous situation that was detected by the system, pre sense front provides assistance by applying the brakes.

If a collision is imminent, the system will first provide an **acute warning** by braking sharply. You will also be warned by an indicator in the instrument cluster display ⇒ fig. 123. If you do not react to the acute warning, pre sense front can brake with increasing force within the limits of the system ¹⁾. This reduces the vehicle speed in the event of a collision. At low vehicle speeds, pre sense front can initiate a complete deceleration shortly before a collision with a vehicle driving ahead ¹⁾. If pre sense front determines that you are not braking strongly enough when a collision is imminent, it can increase the braking force.

The following functions trigger in conjunction with pre sense basic/rear at corresponding vehicle speeds:

- Reversible tensioning of the front safety belts
- Closing the windows and sunroof*

Audi drive select*: depending on the selected mode, the reversible belt tensioner and the closing of the windows and sunroof* are not active.

Swerve assist

Swerve assist helps you to steer the vehicle around an obstacle in a critical situation. If you avoid an obstacle after the acute warning, then the swerve assist assists you by applying slight

Assist systems

underbody. Pre sense rear can be impaired by this. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Tips

- The pre sense rear functions switch off when towing a trailer.
- The pre sense rear functions may also switch off if there is a malfunction in the side assist* system.

Audi pre sense city

Applies to: vehicles with Audi pre sense city

Description


Within the limits of the system, pre sense city can warn you of impending collisions with vehicles and pedestrians and initiate the applicable braking maneuver if needed. Pre sense city is active at speeds of approximately 6 mph (10 km/h) and higher.

A pedestrian warning can occur at speeds up to 50 mph (85 km/h), and vehicle warnings can occur at speeds up to 155 mph (250 km/h). A pre sense city braking maneuver is possible at speeds up to 50 mph (85 km/h).


Warnings

The system recognizes various dangerous situations. The **early warning** occurs if:

- A vehicle driving ahead brakes suddenly
- Your own vehicle approaches a vehicle in front of you that is traveling at a significantly slower speed or that is stationary
- A pedestrian is standing in the lane or is moving into the lane

When this warning occurs, it may only be possible to avoid a collision by swerving or braking strongly. The message **Audi pre sense**  ⇒ page 132, fig. 123 and a warning tone will warn you about the danger.

The brakes may also be applied as an **acute warning** when there is an impending collision. If you do not react to the acute warning, pre sense city can brake to the point of complete deceleration


within the limits of the system. This reduces the vehicle speed in the event of a collision. The message **Audi pre sense**  also appears.

The following functions are triggered in conjunction with pre sense basic/rear:

- Reversible tensioning of the front safety belts
- Closing the windows and sunroof*

Audi drive select*: the function is not active depending on the mode selected.

WARNING

- Pre sense city cannot overcome the laws of physics. It is a system designed to assist and it cannot prevent a collision in every circumstance. The driver must always intervene. The driver is always responsible for braking at the correct time. Do not let the increased safety provided tempt you into taking risks. This could increase your risk of a collision.
- The system can deploy incorrectly due to system-specific limits.
- To reduce the risk of an accident, please note that the camera does not always detect every object.
- Pre sense city does not react to animals, crossing or oncoming vehicles, objects such as bars, railings or railcars, and objects that are difficult to detect ⇒  in *General information on page 122*.
- In trailer mode, the braking behavior of the trailer can be different than usual during automatic braking.

WARNING

- Pre sense city may be restricted or unavailable in the following types of situations:
- In heavy fog, rain, spray, or snow
 - When there are visual obstructions, such as glare, reflections or variations in light
 - When it is dark
 - If the camera window or the windshield is dirty, iced over, damaged or covered
 - When driving on snow, ice or loose ground
 - In curves
 - If the ESC was restricted or switched off
 - When towing a trailer

- When the driver's seat belt is unfastened
- For several seconds after the ignition is switched on

Note
Impacts or damage to the camera mount on the windshield can displace the sensor. Pre sense city can be impaired by this. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Tips

- You can cancel the system braking intervention if you accelerate considerably or swerve away.
- Keep in mind that pre sense city can brake unexpectedly. Always secure any cargo or objects that you are transporting to reduce the risk of damage or injury.
- Specific pre sense city functions switch off when the ESC is limited or switched off ⇒ *page 165* or the hill descent assist is switched on ⇒ *page 92*.
- When there is a malfunction in the camera, the pre sense city functions also switch off.

Settings in the Infotainment system

Applies to: vehicles with Audi pre sense

► Select in the Infotainment system: **MENU** button > **Vehicle** > left control button > **Driver assistance** > **Audi pre sense**.

Turn on/off Audi pre sense - The pre sense functions can be turned on and off.

If the system is switched off, it switches on again automatically once the ignition is switched on again.

Prewarning - The early warning can be switched off or the pre sense city/front warning point can be set (**Early/Medium/Late**).

Set the warning time for the early warning to **Early** at first. If this causes undesired early warnings to appear, then set the warning time to **Medium**. The **Late** warning time should only be set in special circumstances.

Tips
Your settings are automatically stored and assigned to the vehicle key being used.

Messages

Applies to: vehicles with Audi pre sense

Audi pre sense: malfunction! Please contact Service

This message appears when the pre sense function is affected. For example, this could be caused by a faulty sensor. Drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Audi pre sense: currently limited. Sensor view limited due to surroundings. See owner's manual

This message appears if the radar sensor and camera view is obstructed, for example by leaves, snow, heavy spray or dirt. If necessary, clean the sensors and the area around the camera ⇒ *page 122, fig. 110* or ⇒ *page 141, fig. 131*.

Audi pre sense: currently limited. Trailer towing mode

For vehicles with a trailer hitch installed at the factory, the pre sense rear functions switch off when the electrical connector at the socket is plugged in. There is no guarantee the functions will switch off when using a retrofitted trailer hitch.

Audi pre sense: currently limited

This message appears if the ESC is restricted or switched off, for example.

Audi pre sense: currently limited. See owner's manual

This message appears when there is a temporary failure in a subsystem, such as the ESC. If this message appears repeatedly, drive to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Audi pre sense: emergency braking system off

80A012721BJ

Assist systems

This message appears if the pre sense functions are switched off through the Infotainment system or if the system is not ready.

Audi active lane assist

Description

Applies to: vehicles with Audi active lane assist

Active lane assist (lane departure warning) detects lane marker lines within the limits of the system using a camera in the windshield. If you are approaching a detected lane marker line and it appears likely that you will leave the lane, the system will warn you with corrective steering. You can override this steering at any time. If you pass over a line, the steering wheel will vibrate lightly. In order for this warning vibration to occur, it must first be switched on in the Infotainment system. Active lane assist is ready for operation when the lane marker line is detected on at least one side of the vehicle.

The system is designed for driving on expressways and highways and therefore only activates at speeds above approximately 40 mph (65 km/h).

Applies to: vehicles with side assist: If you activate a turn signal when active lane assist is ready and it classifies a lane change as critical because of vehicles traveling alongside you or approaching you, there will be noticeable corrective steering shortly before you leave the lane. This will attempt to keep your vehicle in the lane.

Applies to: vehicles without side assist: When the system is ready, it will not warn you if you activate a turn signal before crossing the lane marker line. In this case, it assumes that you are changing lanes intentionally.

Applies to: vehicles with adaptive cruise control: There is no corrective steering or warnings if the system recognizes a distinct passing maneuver. If the conditions are met, traffic jam assist switches on at speeds under approximately 40 mph (65 km/h) ⇒ *page 128*.

WARNING

- The system warns the driver that the vehicle is leaving the lane using corrective steering. The driver is always responsible for keeping the vehicle within the lane.
- The system can help you keep the vehicle in the lane, but it does not drive by itself. Always keep your hands on the steering wheel.
- Corrective steering may not occur in certain situations, such as during heavy braking.
- There may be cases where the camera does not recognize all lane marker lines. Corrective steering can only take place on the side of the vehicle where lane marker lines are detected.
- Other road structures or objects could possibly be identified unintentionally as lane marker lines. As a result, corrective steering may be unexpected or may not occur.
- The camera view can be restricted, for example by vehicles driving ahead or by rain, snow, heavy spray or light shining into the camera. This can result in active lane assist not detecting the lane marker lines or detecting them incorrectly.
- In certain situations where visibility is low, the vehicle may switch from an “early” to “late” steering correction.
- Under certain conditions such as ruts in the road, an inclined roadway or crosswinds, the corrective steering alone may not be enough to keep the vehicle in the middle of the lane.
- For safety reasons, active lane assist must not be used when there are poor road and/or weather conditions such as slippery roads, fog, gravel, heavy rain, snow and the potential for hydroplaning. Using active lane assist under these conditions may increase the risk of a crash.

APPENDIX C

Run Log

Subject Vehicle: **2020 Audi Q5 45 TFSI quattro**

Test Date: **6/24/2020**

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Min. Distance (ft)	Speed Reduction (mph)	Peak Decel. (g)	CIB TTC (s)	Pass/Fail	Notes
18	Static Run								
19	Stopped POV	Y	2.03	0.00	18.0	0.92	1.03	Pass	
20		Y	2.03	0.00	16.6	0.87	1.06	Pass	
21		Y	1.98	5.27	24.9	1.01	1.26	Pass	
22		Y	2.06	3.48	25.0	0.93	1.08	Pass	
23		Y	2.09	1.45	25.3	0.92	1.10	Pass	
24		Y	2.11	0.00	20.9	0.99	1.11	Pass	
25		Y	2.12	0.00	21.8	1.06	1.12	Pass	
26	Static Run								
27	Slower POV, 25 vs 10	Y	2.10	0.73	15.3	0.76	1.02	Pass	
28		Y	2.37	1.29	14.6	0.60	1.03	Pass	
29		Y	2.44	2.34	15.1	0.93	0.97	Pass	
30		Y	2.29	3.50	14.9	0.90	1.06	Pass	
31		Y	2.50	2.36	16.0	0.82	1.19	Pass	
32		Y	2.43	2.93	15.0	0.87	1.01	Pass	
33		Y	2.43	2.31	15.0	0.86	0.94	Pass	

Run	Test Type	Valid Run?	FCW TTC (s)	Min. Distance (ft)	Speed Reduction (mph)	Peak Decel. (g)	CIB TTC (s)	Pass/Fail	Notes
34	Static Run								
35	Slower POV, 45 vs 20	Y	2.75	1.06	25.0	0.90	1.30	Pass	
36		Y	2.76	2.70	24.6	0.86	1.33	Pass	
37		Y	2.33	2.54	25.0	0.97	1.32	Pass	
38		Y	2.76	0.01	25.7	1.04	1.31	Pass	
39		Y	2.85	1.74	25.8	0.89	1.28	Pass	
40		Y	2.69	0.00	22.7	1.08	1.33	Pass	
41		Y	2.80	3.39	26.0	0.94	1.20	Pass	
42	Static run								
43	Decelerating POV, 35	Y	1.83	0.00	31.3	0.70	1.89	Pass	
44		Y	1.89	0.00	31.9	0.67	1.78	Pass	
45		Y	1.84	0.00	32.0	0.69	1.83	Pass	
46		Y	1.94	0.00	32.5	0.67	1.85	Pass	
47		Y	1.84	0.00	32.4	0.68	1.82	Pass	
48		Y	1.61	4.38	24.0	0.94	1.26	Pass	
49		Y	1.74	0.00	32.7	0.68	1.74	Pass	
50	Static Run								

Run	Test Type	Valid Run?	FCW TTC (s)	Min. Distance (ft)	Speed Reduction (mph)	Peak Decel. (g)	CIB TTC (s)	Pass/Fail	Notes
2	STP False Positive, 25	Y				0.02		Pass	
3		Y				0.01		Pass	
4		Y				0.02		Pass	
5		Y				0.01		Pass	
6		Y				0.01		Pass	
7		Y				0.01		Pass	
8		Y				0.01		Pass	
9	STP - Static Run								
10	STP False Positive, 45	Y				0.01		Pass	
11		Y				0.01		Pass	
12		Y				0.02		Pass	
13		Y				0.01		Pass	
14		Y				0.01		Pass	
15		Y				0.01		Pass	
16		Y				0.01		Pass	
17	STP - Static Run								

APPENDIX D

Time History Plots

LIST OF FIGURES

	Page
Figure D1. Example Time History for Stopped POV, Passing	D-9
Figure D2. Example Time History for Slower POV 25 vs. 10, Passing	D-10
Figure D3. Example Time History for Slower POV 45 vs. 20, Passing	D-11
Figure D4. Example Time History for Decelerating POV 35, Passing.....	D-12
Figure D5. Example Time History for False Positive STP 25, Passing	D-13
Figure D6. Example Time History for False Positive STP 45, Passing	D-14
Figure D7. Example Time History Displaying Invalid Headway Criteria	D-15
Figure D8. Example Time History Displaying Various Invalid Criteria.....	D-16
Figure D9. Example Time History for a Failed Run.....	D-17
Figure D10. Time History for CIB Run 19, SV Encounters Stopped POV.....	D-18
Figure D11. Time History for CIB Run 20, SV Encounters Stopped POV.....	D-19
Figure D12. Time History for CIB Run 21, SV Encounters Stopped POV.....	D-20
Figure D13. Time History for CIB Run 22, SV Encounters Stopped POV.....	D-21
Figure D14. Time History for CIB Run 23, SV Encounters Stopped POV.....	D-22
Figure D15. Time History for CIB Run 24, SV Encounters Stopped POV.....	D-23
Figure D16. Time History for CIB Run 25, SV Encounters Stopped POV.....	D-24
Figure D17. Time History for CIB Run 27, SV Encounters Slower POV, SV 25 mph, POV 10 mph	D-25
Figure D18. Time History for CIB Run 28, SV Encounters Slower POV, SV 25 mph, POV 10 mph	D-26
Figure D19. Time History for CIB Run 29, SV Encounters Slower POV, SV 25 mph, POV 10 mph	D-27
Figure D20. Time History for CIB Run 30, SV Encounters Slower POV, SV 25 mph, POV 10 mph	D-28
Figure D21. Time History for CIB Run 31, SV Encounters Slower POV, SV 25 mph, POV 10 mph	D-29
Figure D22. Time History for CIB Run 32, SV Encounters Slower POV, SV 25 mph, POV 10 mph	D-30
Figure D23. Time History for CIB Run 33, SV Encounters Slower POV, SV 25 mph, POV 10 mph	D-31
Figure D24. Time History for CIB Run 35, SV Encounters Slower POV, SV 45 mph, POV 20 mph	D-32
Figure D25. Time History for CIB Run 36, SV Encounters Slower POV, SV 45 mph, POV 20 mph	D-33
Figure D26. Time History for CIB Run 37, SV Encounters Slower POV, SV 45 mph, POV 20 mph	D-34
Figure D27. Time History for CIB Run 38, SV Encounters Slower POV, SV 45 mph, POV 20 mph	D-35
Figure D28. Time History for CIB Run 39, SV Encounters Slower POV, SV 45 mph, POV 20 mph	D-36
Figure D29. Time History for CIB Run 40, SV Encounters Slower POV, SV 45 mph, POV 20 mph	D-37

Figure D30.	Time History for CIB Run 41, SV Encounters Slower POV, SV 45 mph, POV 20 mph	D-38
Figure D31.	Time History for CIB Run 43, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	D-39
Figure D32.	Time History for CIB Run 44, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	D-40
Figure D33.	Time History for CIB Run 45, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	D-41
Figure D34.	Time History for CIB Run 46, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	D-42
Figure D35.	Time History for CIB Run 47, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	D-43
Figure D36.	Time History for CIB Run 48, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	D-44
Figure D37.	Time History for CIB Run 49, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph.....	D-45
Figure D38.	Time History for CIB Run 2, SV Encounters Steel Trench Plate, SV 25 mph.....	D-46
Figure D39.	Time History for CIB Run 3, SV Encounters Steel Trench Plate, SV 25 mph.....	D-47
Figure D40.	Time History for CIB Run 4, SV Encounters Steel Trench Plate, SV 25 mph.....	D-48
Figure D41.	Time History for CIB Run 5, SV Encounters Steel Trench Plate, SV 25 mph.....	D-49
Figure D42.	Time History for CIB Run 6, SV Encounters Steel Trench Plate, SV 25 mph.....	D-50
Figure D43.	Time History for CIB Run 7, SV Encounters Steel Trench Plate, SV 25 mph.....	D-51
Figure D44.	Time History for CIB Run 8, SV Encounters Steel Trench Plate, SV 25 mph.....	D-52
Figure D45.	Time History for CIB Run 10, SV Encounters Steel Trench Plate, SV 45 mph...	D-53
Figure D46.	Time History for CIB Run 11, SV Encounters Steel Trench Plate, SV 45 mph...	D-54
Figure D47.	Time History for CIB Run 12, SV Encounters Steel Trench Plate, SV 45 mph...	D-55
Figure D48.	Time History for CIB Run 13, SV Encounters Steel Trench Plate, SV 45 mph...	D-56
Figure D49.	Time History for CIB Run 14, SV Encounters Steel Trench Plate, SV 45 mph...	D-57
Figure D50.	Time History for CIB Run 15, SV Encounters Steel Trench Plate, SV 45 mph...	D-58
Figure D51.	Time History for CIB Run 16, SV Encounters Steel Trench Plate, SV 45 mph...	D-59

Description of Time History Plots

A set of time history plots is provided for each valid run in the test series. Each set of plots comprises time varying data from both the Subject Vehicle (SV) and the Principal Other Vehicle (POV), as well as pass/fail envelopes and thresholds. The following is a description of data types shown in the time history plots, as well as a description of the color codes indicating to which vehicle the data pertain.

Time History Plot Description

Each time history plot consists of data relevant to the test type under consideration, and therefore the data channels plotted vary according to test type. The test types (shown in the plot titles) include:

- Stopped POV (SV at 25 mph)
- Slower POV, 25/10 (SV at 25 mph, POV at 10 mph)
- Slower POV, 45/20 (SV at 45 mph, POV at 20 mph)
- Decelerating POV 35 mph (Both vehicles at 35 mph with 13.8 m gap, POV brakes at 0.3 g)
- False Positive STP 25 mph (Steel trench plate run over at 25 mph)
- False Positive STP 45 mph (Steel trench plate run over at 45 mph)

Time history figures include the following sub-plots:

- FCW Warning – Displays the Forward Collision Warning alert (which can be audible, visual, or haptic). Depending on the type of FCW alert or instrumentation used to measure the alert, this can be any combination of the following:
 - Filtered, rectified, and normalized sound signal. The vertical scale is 0 to 1.
 - Filtered, rectified, and normalized acceleration (i.e., haptic alert, such as steering wheel vibration). The vertical scale is 0 to 1.
 - Normalized light sensor signal. The vertical scale is 0 to 1.

As only the audible or haptic alert is perceptible by the driver during a test run, the earliest of either of these alerts is used to define the onset of the FCW alert. A vertical black bar on the plot indicates the TTC (sec) at the first moment of the warning issued by the FCW system. The FCW TTC is displayed to the right of the subplot in green. For False Positive tests, when the FCW presents a warning “FCW” is shown in red at the right edge of the FCW plot.

- Headway (ft) – Longitudinal separation (gap) between the frontmost point of the Subject Vehicle and the rearmost point of the Strikeable Surrogate Vehicle (SSV) towed by the Principal Other Vehicle. The minimum headway during the run is displayed to the right of the subplot.
- SV/POV Speed (mph) – Speed of the Subject Vehicle and Principal Other Vehicle (if any). For CIB tests, the speed reduction experienced by the Subject Vehicle is displayed to the right of the subplot.
- Yaw Rate (deg/sec) – Yaw rate of the Subject Vehicle and Principal Other Vehicle (if any).
- Lateral Offset (ft) – Lateral offset within the lane of the Subject Vehicle to the center of the lane of travel. Note that for tests involving the Strikeable Surrogate Vehicle (SSV), the associated lateral restraint track is defined to be the center of the lane of travel. If testing is done with a different POV which does not have a lateral restraint track, lateral offset is defined to be the lateral offset between the SV and POV.
- Ax (g) – Longitudinal acceleration of the Subject Vehicle and Principal Other Vehicle (if any). For CIB tests, the TTC (sec) at the moment of first CIB activation is displayed to the right of the subplot in green. Also, the peak value of Ax for the SV is shown on the subplot.
- Accelerator Pedal Position (0-1) – Normalized position of the accelerator pedal.

Note that the minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then “RTK Fixed OR LESS!!” is displayed in red.

Envelopes and Thresholds

Some of the time history plot figures contain either green or yellow envelopes and/or black threshold lines. These envelopes and thresholds are used to programmatically and visually determine the validity of a given test run. Envelope and threshold exceedances are indicated with either red shading or red asterisks, and red text is placed to the right side of the plot indicating the type of exceedance. Such exceedances indicate either that the test was invalid or that the requirements of the test were not met (i.e., failure of the AEB system).

For plots with green envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope boundaries at any time. Exceedances of a green envelope are indicated by red shading in the area between the measured time-varying data and the envelope boundaries.

For plots with yellow envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope at the beginning (left edge of the boundary) and/or end (right edge), but may exceed the boundary during the time between the left and right edges. Exceedances at the left or right extent of a yellow envelope are indicated by red asterisks.

For the headway plot, a dashed black threshold line indicating a relative headway of zero is displayed. If no impact occurs, a green circle is displayed at the moment of minimum distance. If impact occurs, a red asterisk is displayed at the moment of impact.

For the Ax plot, if the scenario is an AEB brake-to-stop scenario, a vertical dashed black line is displayed for all plots indicating the moment of first POV braking. The yellow envelope in this case is relevant to the POV braking only. The left edge of the envelope is at 1.5 seconds after the first POV braking. A solid black threshold line extends horizontally 0.5 seconds to the left of the envelope. This threshold line represents the time during which the Ax of the Principal Other Vehicle must first achieve 0.27 g (the upper edge of the envelope). A green circle or red asterisk is displayed at the moment the POV brake level achieves 0.27 g. A green circle indicates that the test was valid (the threshold was crossed during the appropriate interval) and a red asterisk indicates that the test was invalid (the threshold was crossed outside of the appropriate interval). Additionally, for the CIB tests, a dashed black threshold line indicating an Ax of -0.15 g is given to define the onset of CIB activation. When the Subject Vehicle's Ax crosses this threshold, the CIB TTC is calculated and displayed.

For the accelerator pedal position plot, a green envelope is given starting 500 ms after the onset of the FCW warning to ensure that the accelerator pedal was released at the correct time and remained off for the duration of the CIB event. For false positive runs a green dot, rather than a green envelope is displayed. The green dot indicates that at the end of the run the accelerator pedal had not been released. If the accelerator had been released a red asterisk would appear.

Color Codes

Color codes have been adopted to easily identify which data correspond to which vehicle, as well as to indicate the types of envelopes and thresholds used in the plots.

Color codes can be broken into four categories:

1. Time-varying data
2. Validation envelopes and thresholds
3. Individual data points
4. Text

1. Time-varying data color codes:

- Blue = Subject Vehicle data
- Magenta = Principal Other Vehicle data
- Brown = Relative data between SV and POV (i.e., TTC, lateral offset and headway distance)

2. Validation envelope and threshold color codes:

- Green envelope = time varying data must be within the envelope at all times in order to be valid
- Yellow envelope = time varying data must be within limits at left and/or right ends
- Black threshold (Solid) = time varying data must cross this threshold in the time period shown in order to be valid
- Black threshold (Dashed) = for reference only – this can include warning level thresholds, TTC thresholds, and acceleration thresholds

3. Individual data point color codes:

- Green circle = passing or valid value at a given moment in time
- Red asterisk = failing or invalid value at a given moment in time

4. Text color codes:

- Green = passing or valid value
- Red = failing or invalid value

Other Notations

- NG – Indicates that the value for that variable was outside of bounds and therefore “No Good”.
- No Wng – No warning was detected.
- POV – Indicates that the value for the Principal Other Vehicle was out of bounds.
- SV – Indicates that the value for the Subject Vehicle was out of bounds.
- SR – Shows the speed reduction value.
- Thr – Indicates that the requirements for the throttle were not met.

The minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then “RTK Fixed OR LESS!!” is displayed in red.

Examples of time history plots for each test type (including passing, failing and invalid runs) are shown in Figure D1 through Figure D9. Figures D1 through D6 show passing runs for each of the 6 test types. Figures D7 and D8 show examples of invalid runs. Figure D9 shows an example of a valid test that failed the CIB requirements.

Time history data plots for the tests of the vehicle under consideration herein are provided beginning with Figure D10.

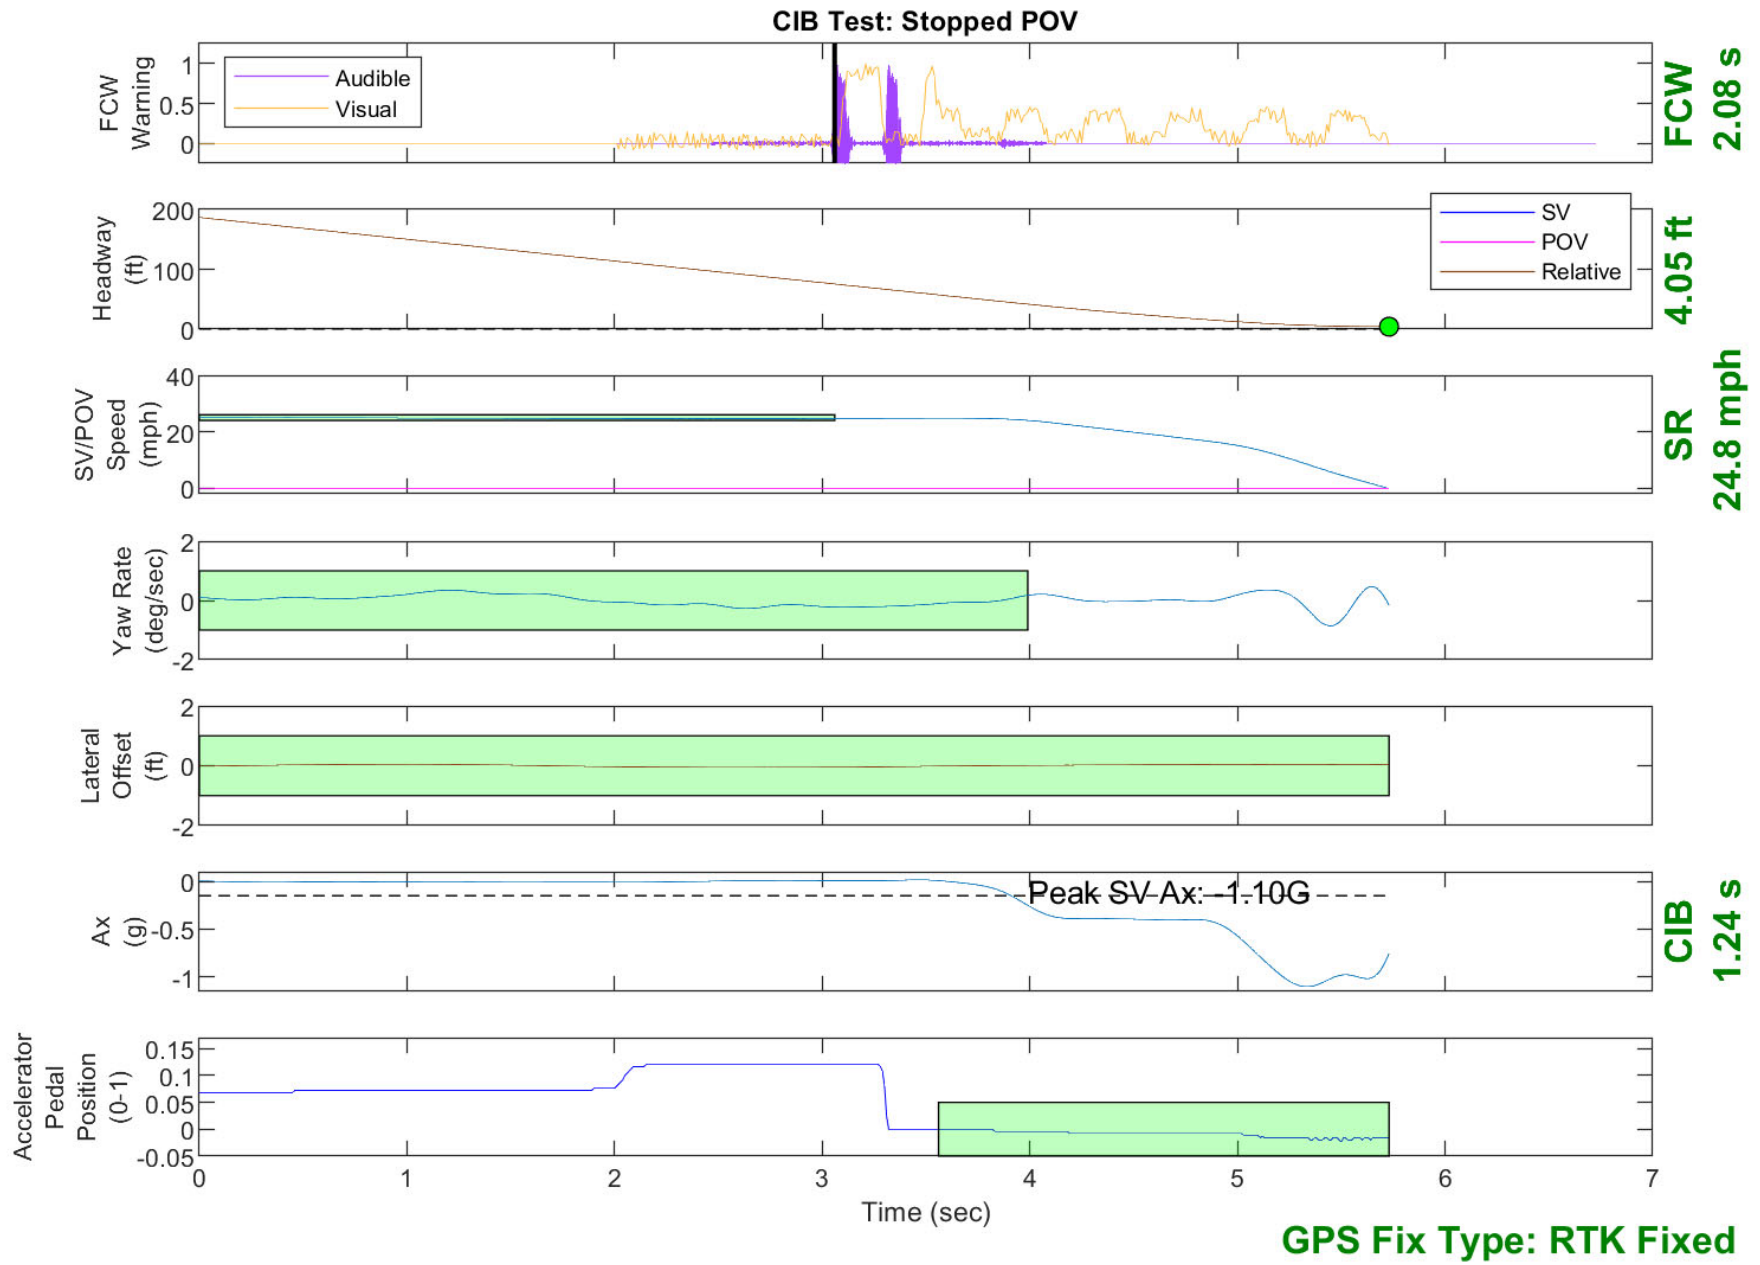


Figure D1. Example Time History for Stopped POV, Passing

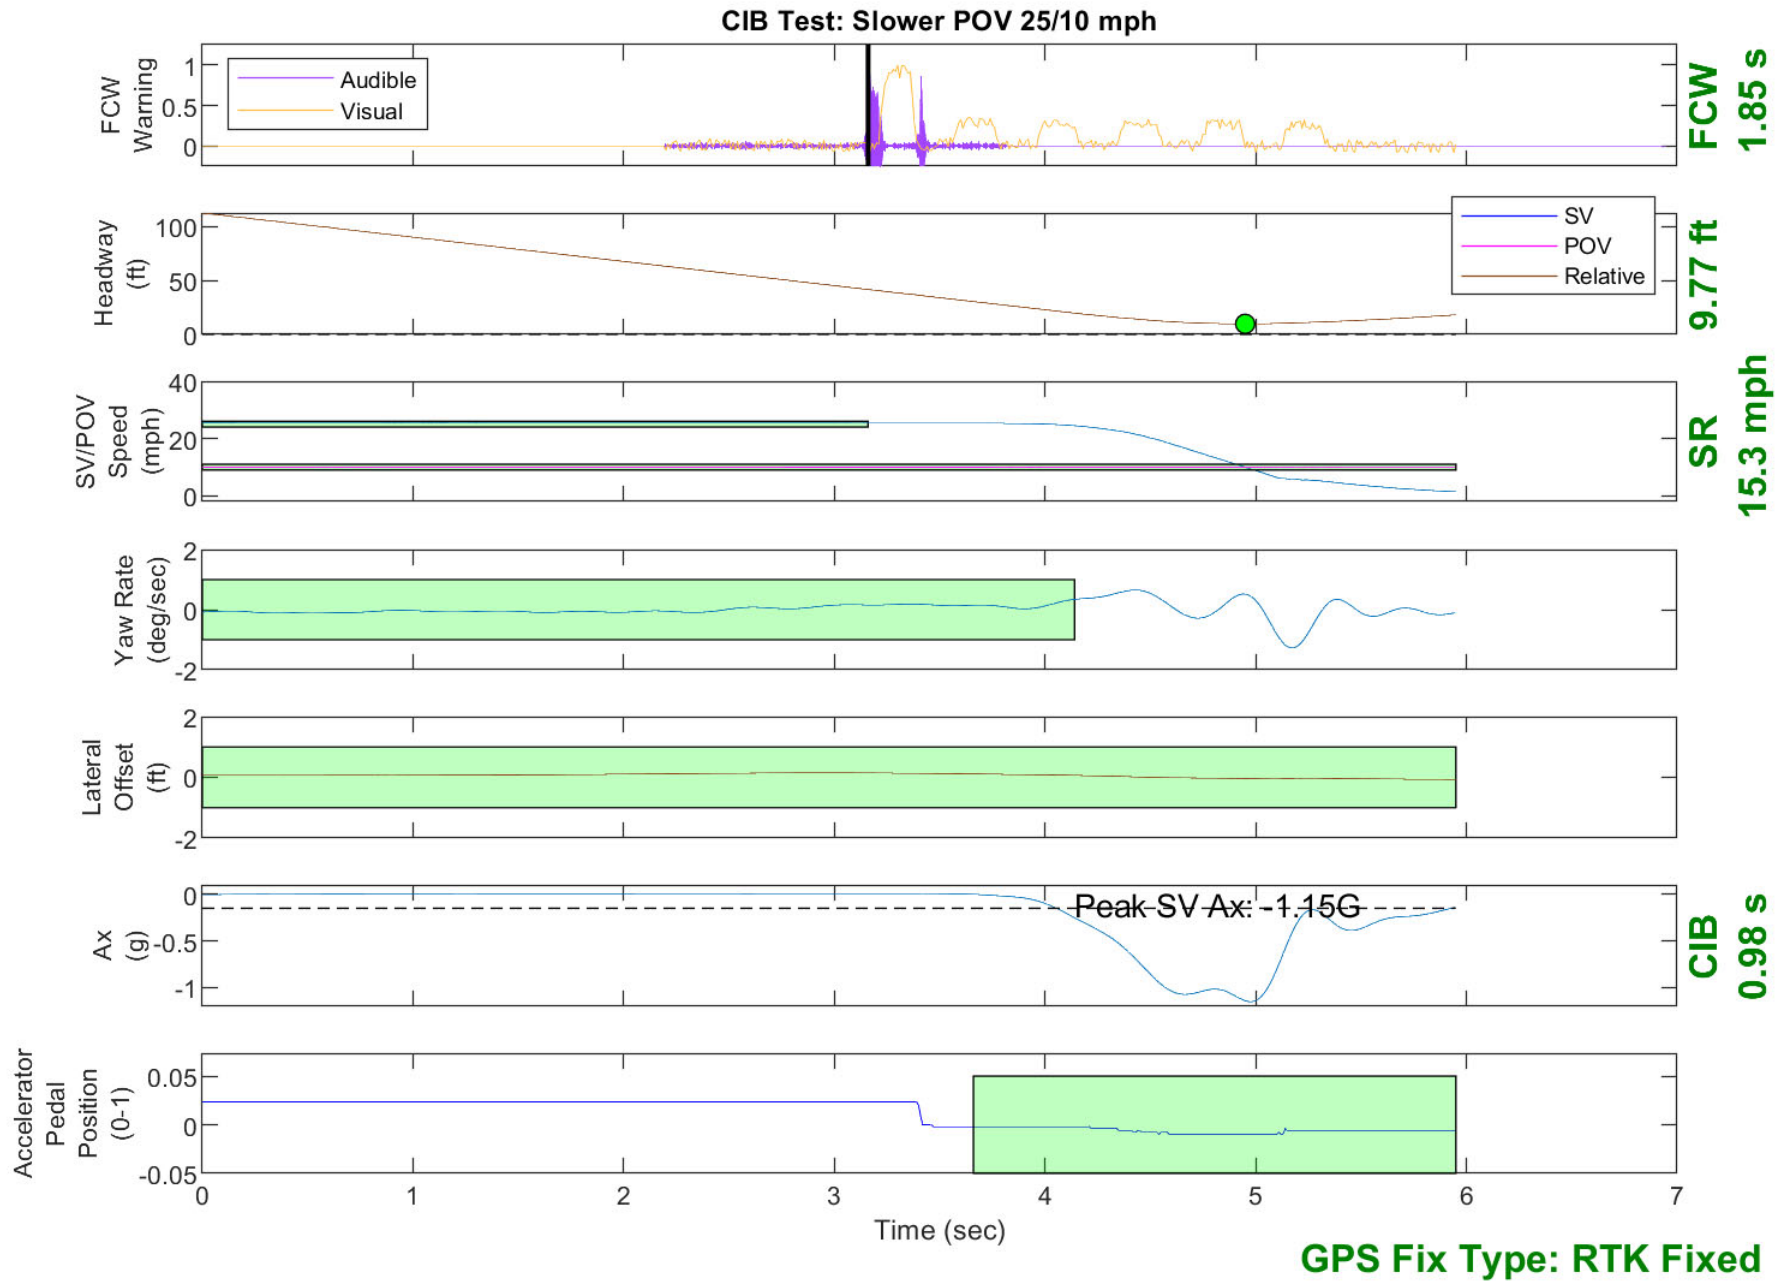


Figure D2. Example Time History for Slower POV 25 vs. 10, Passing

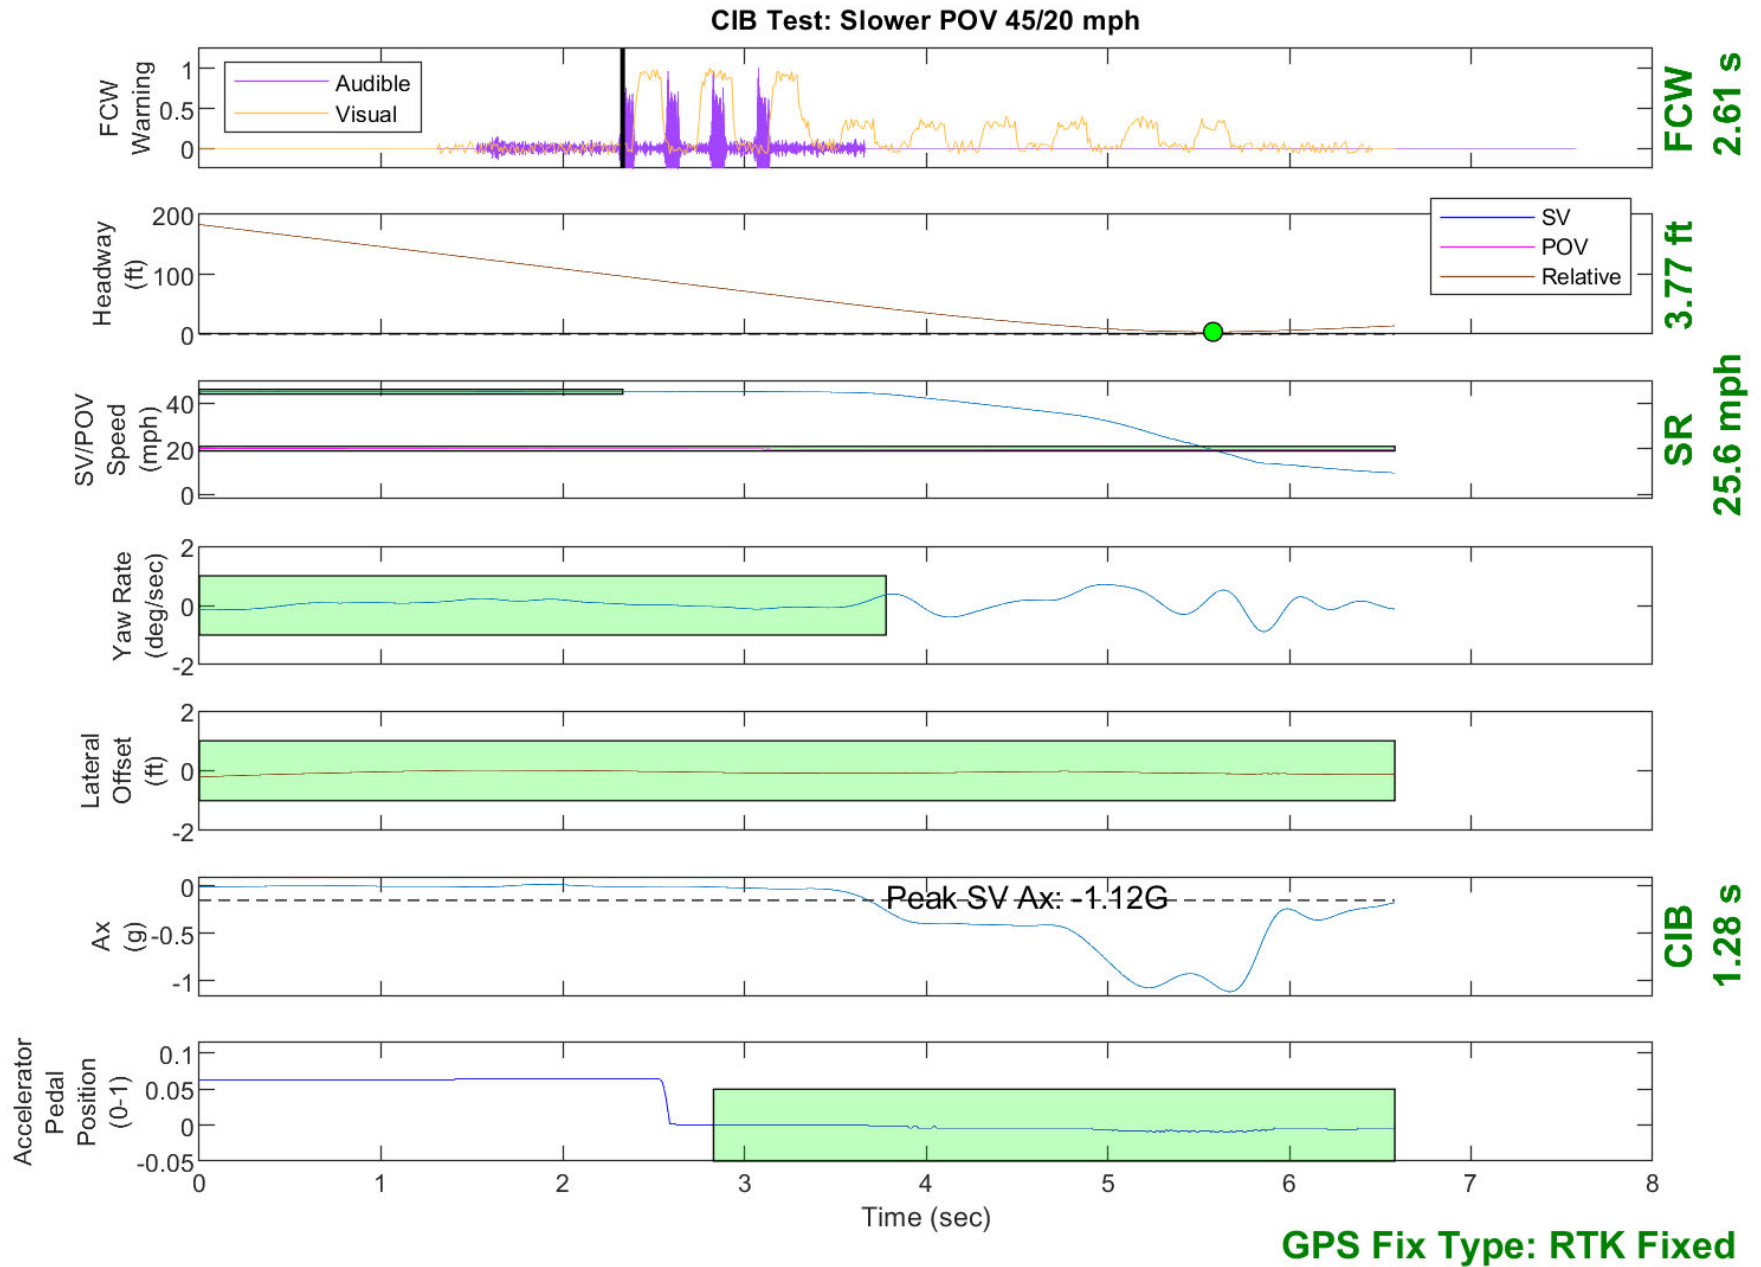


Figure D3. Example Time History for Slower POV 45 vs. 20, Passing

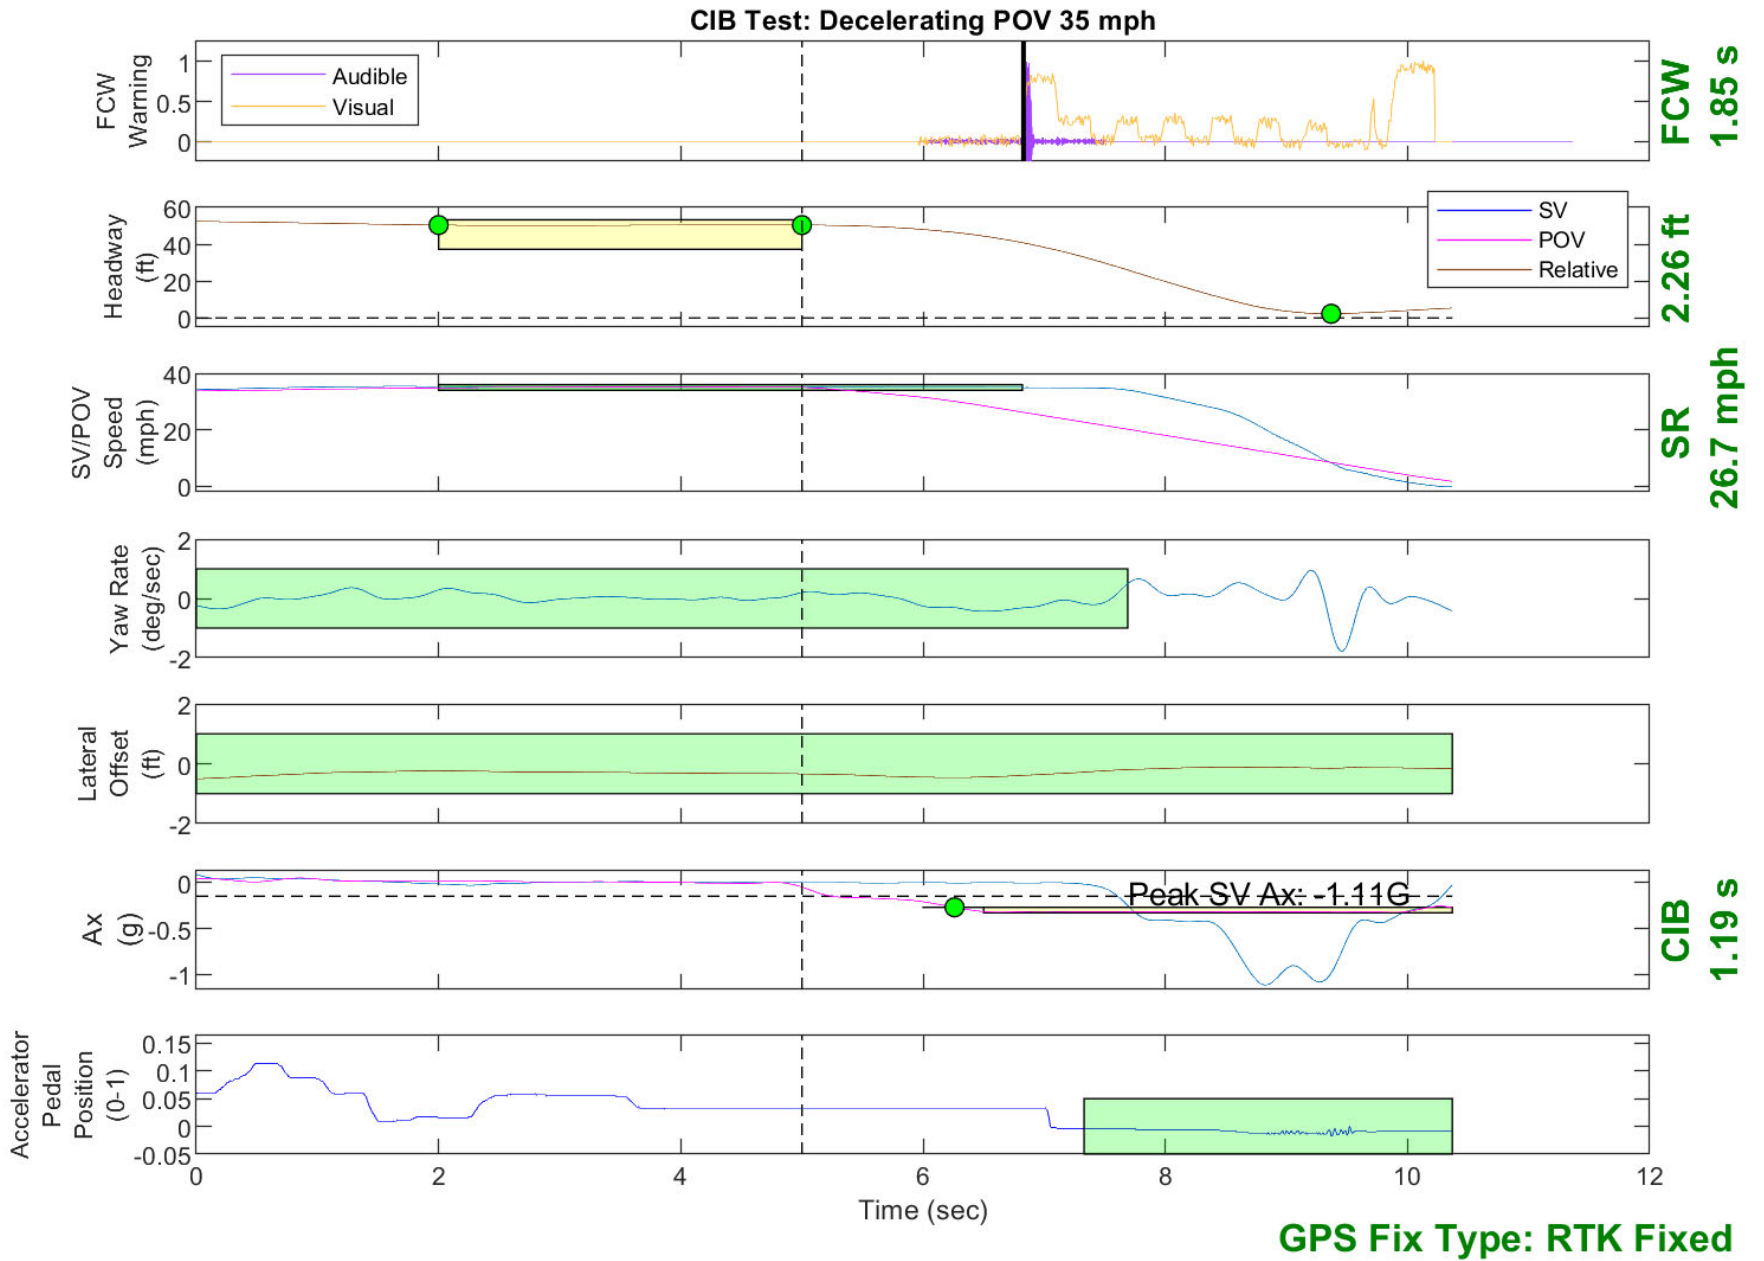


Figure D4. Example Time History for Decelerating POV 35, Passing

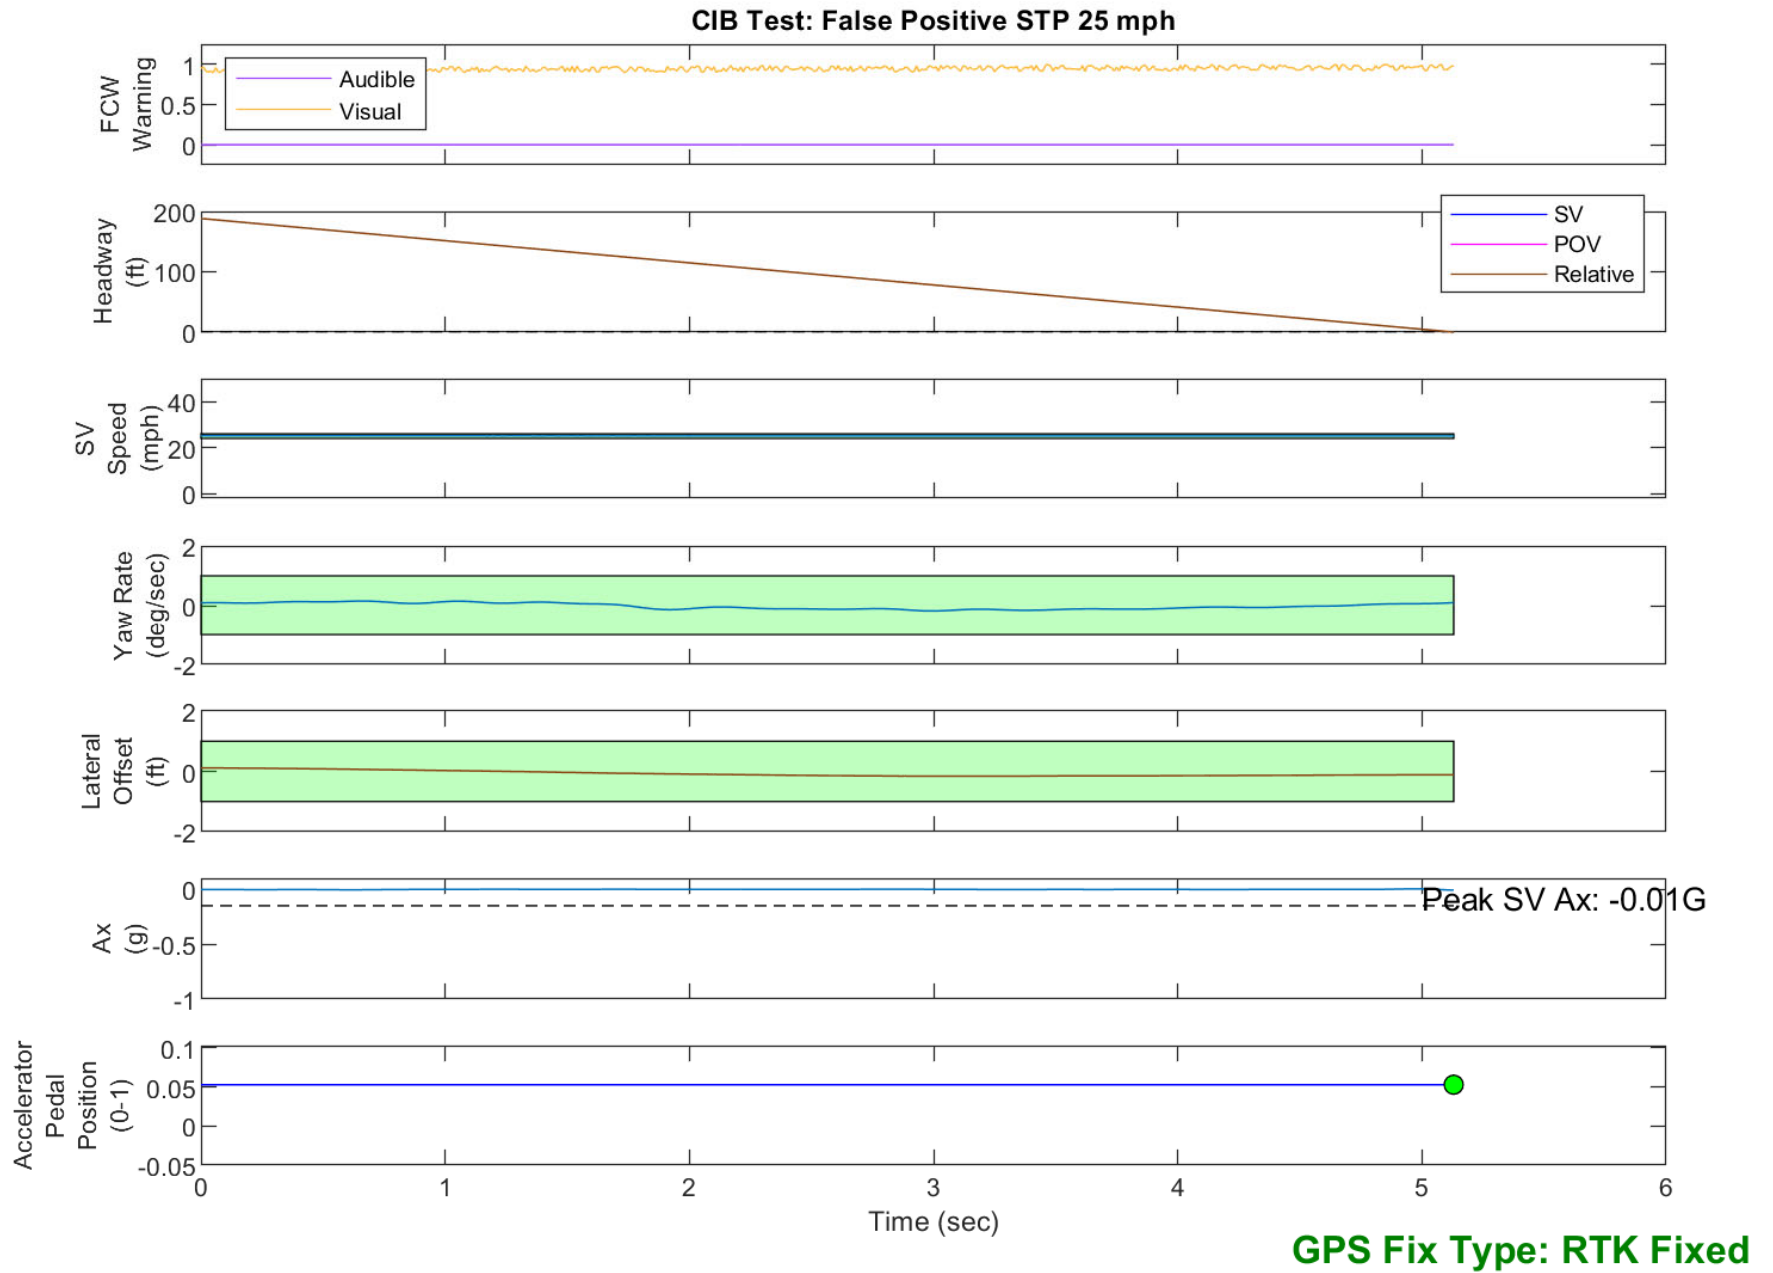


Figure D5. Example Time History for False Positive STP 25, Passing

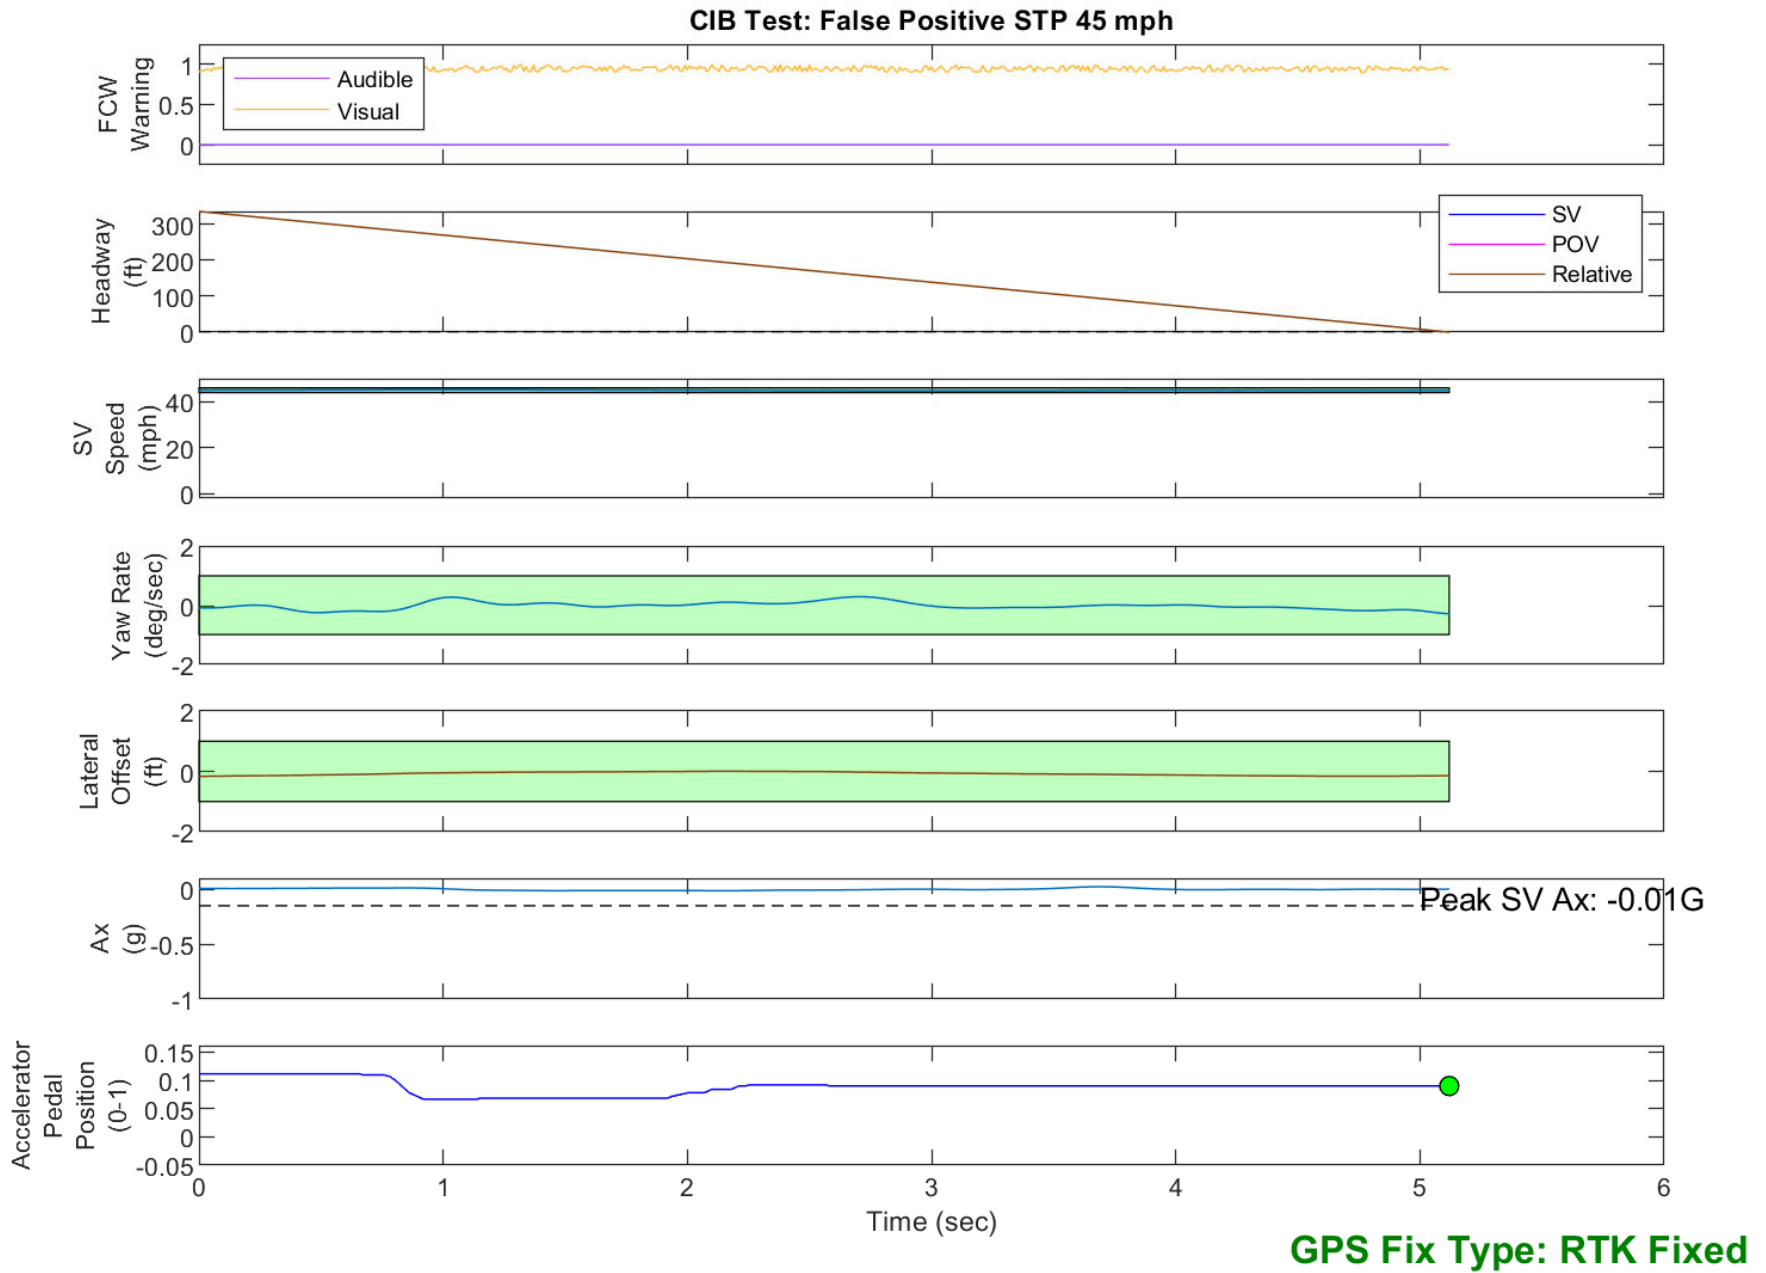


Figure D6. Example Time History for False Positive STP 45, Passing

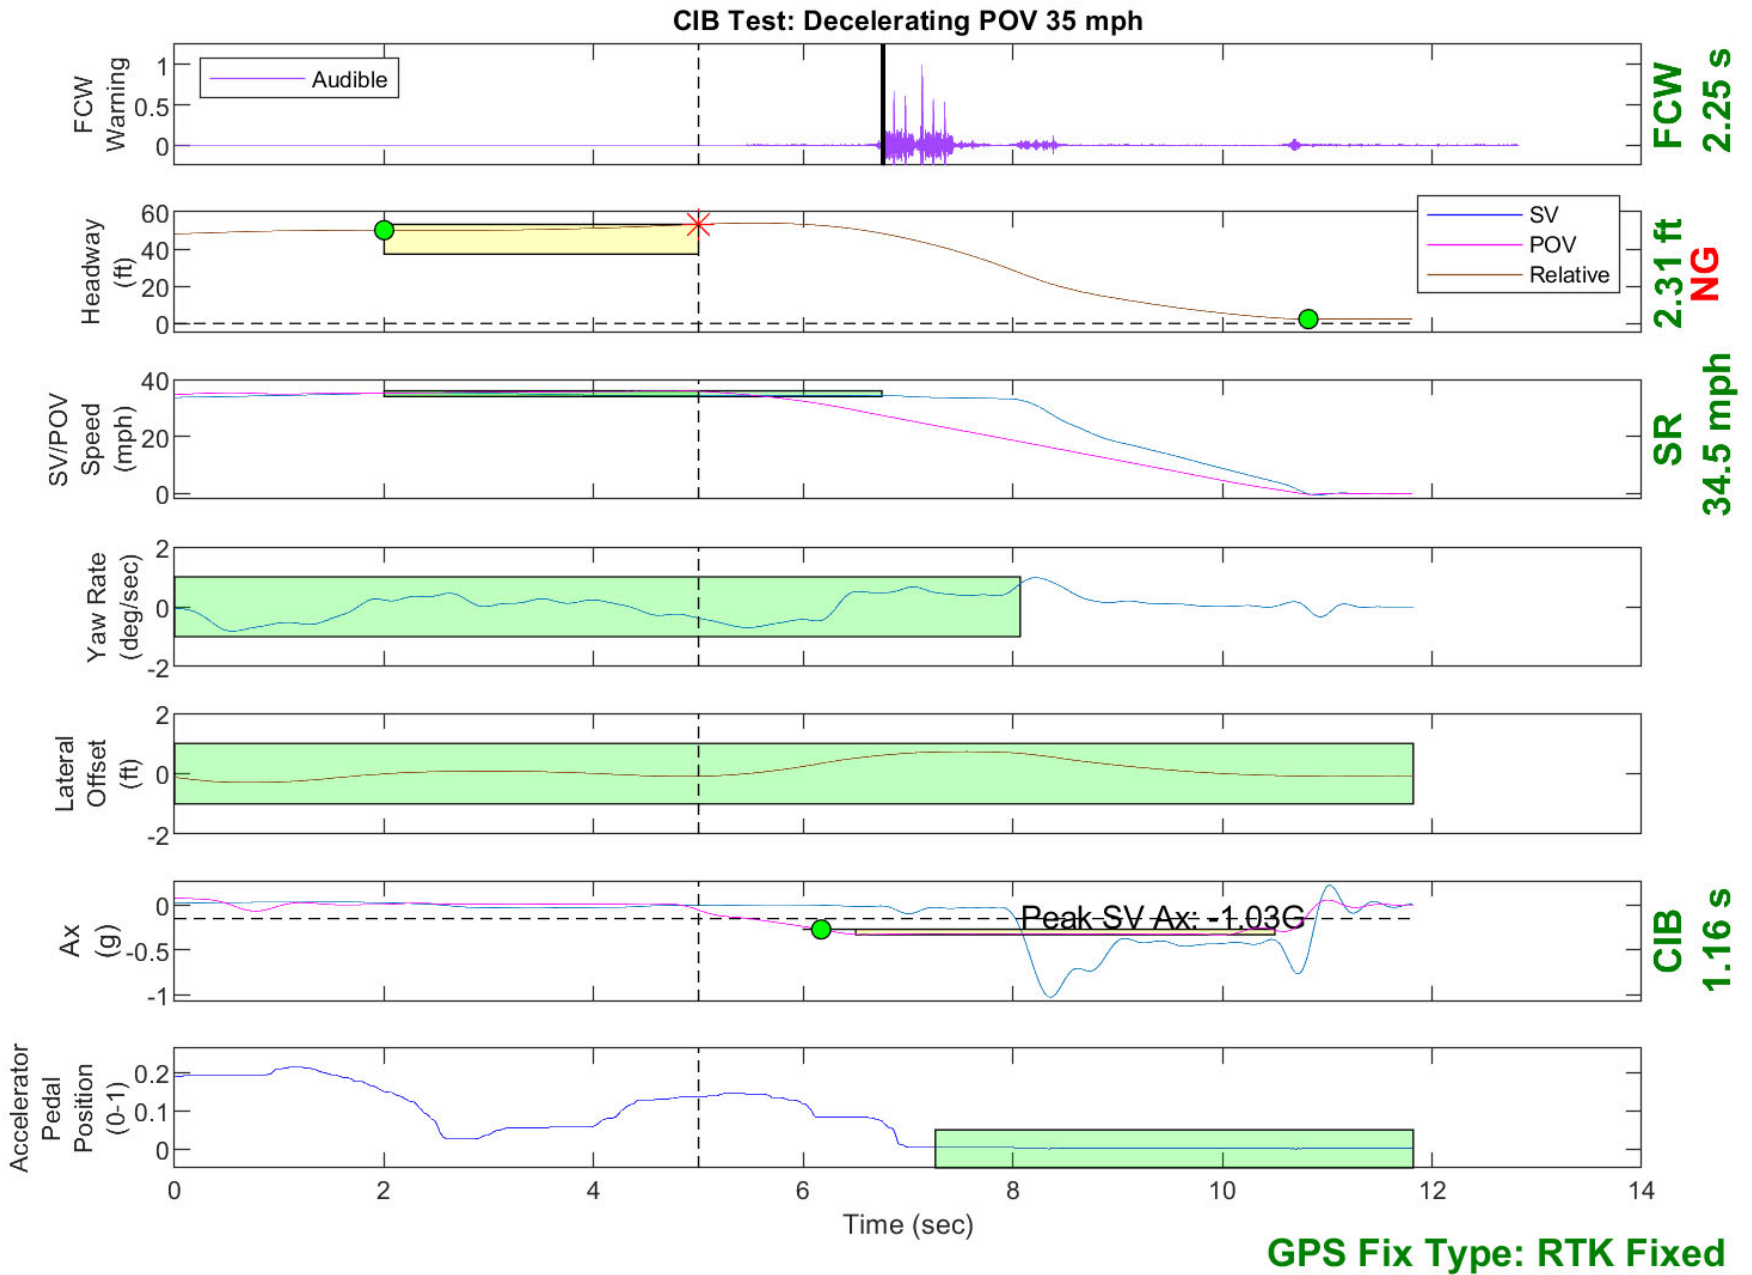


Figure D7. Example Time History Displaying Invalid Headway Criteria

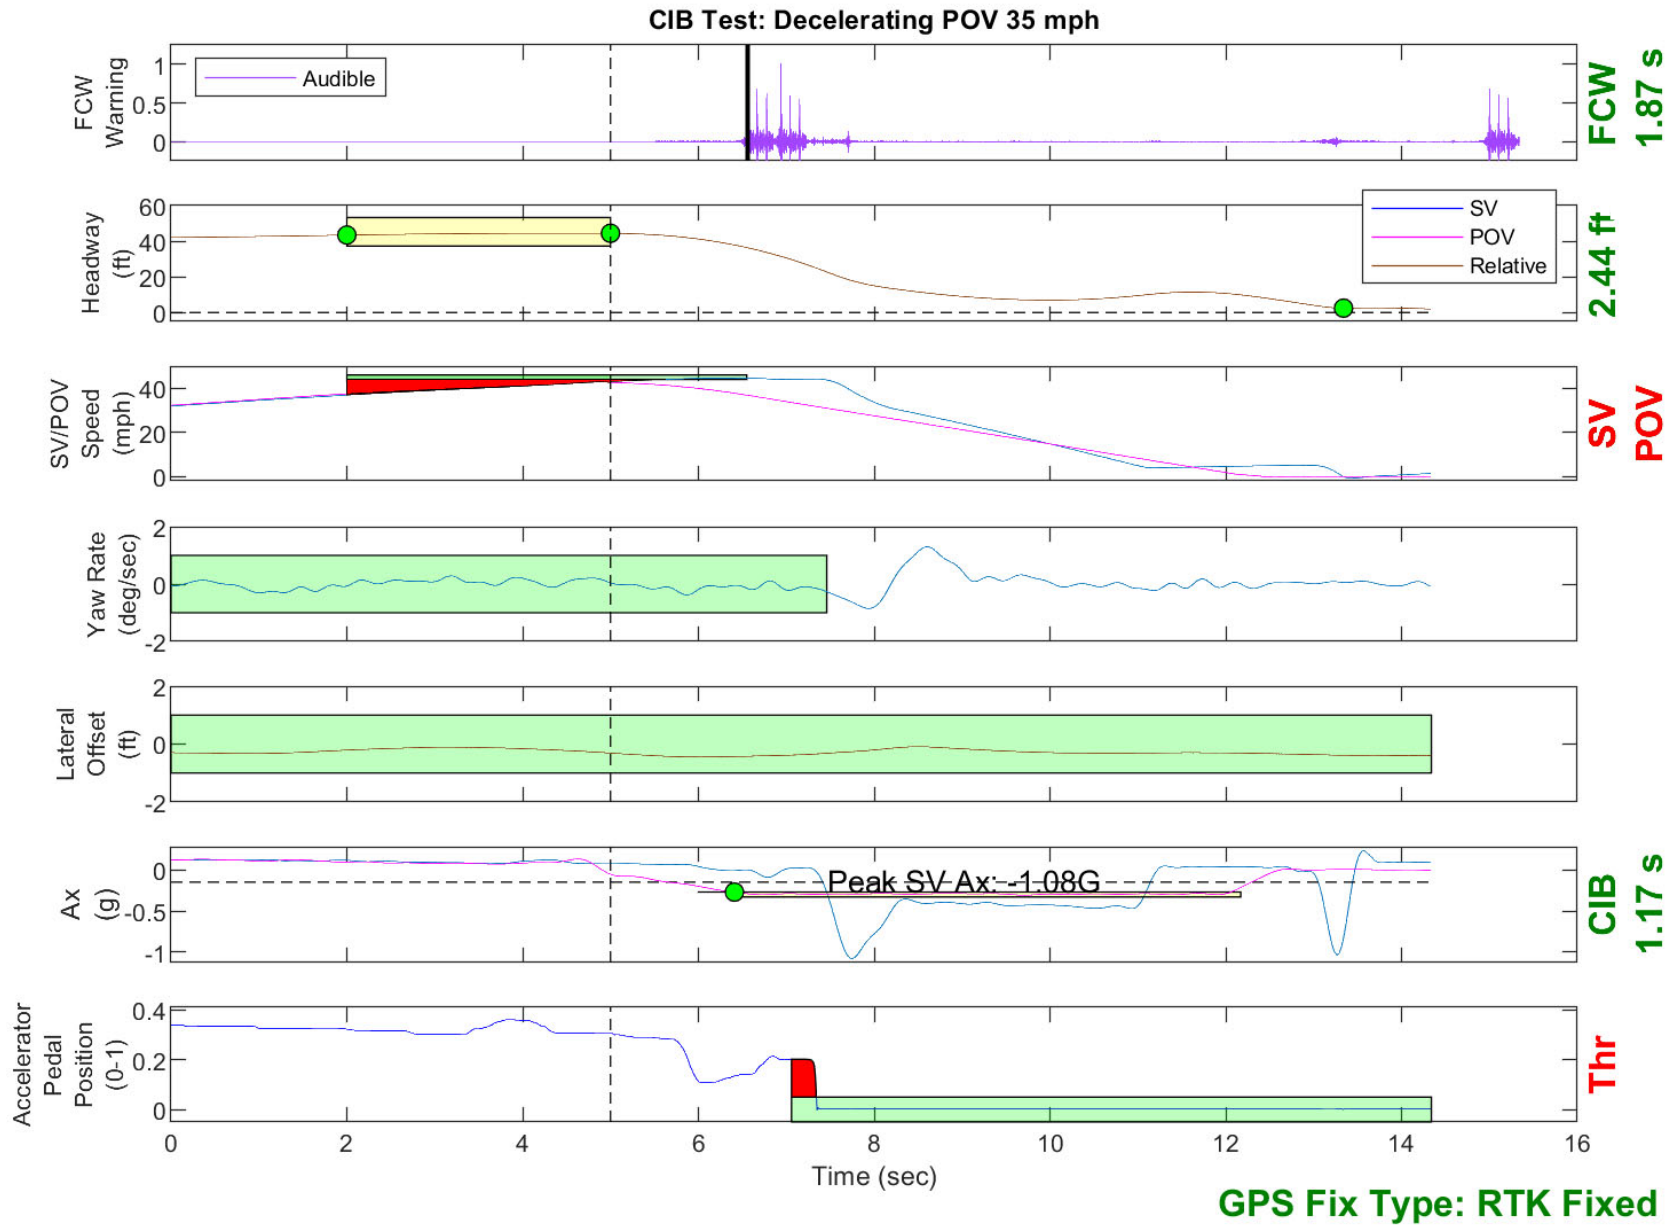


Figure D8. Example Time History Displaying Various Invalid Criteria

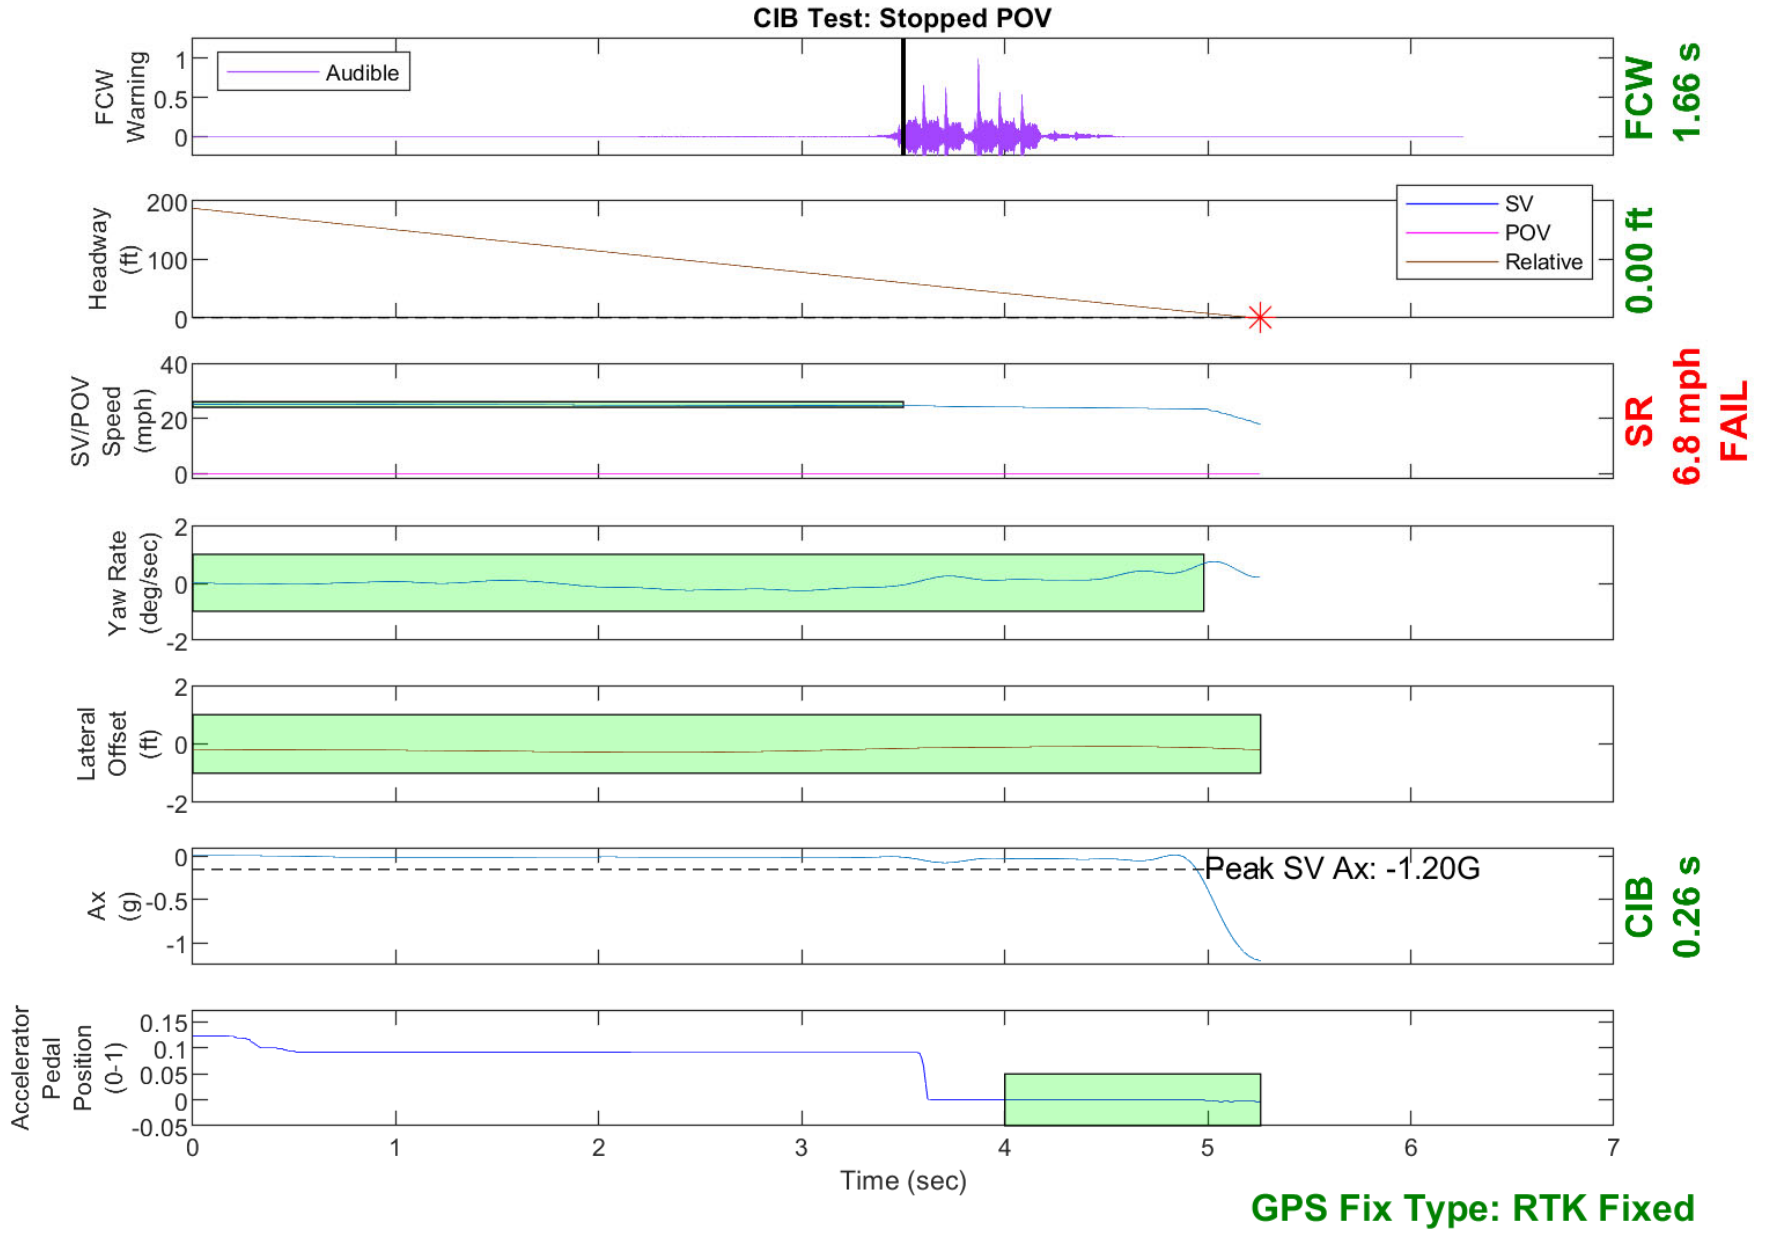


Figure D9. Example Time History for a Failed Run

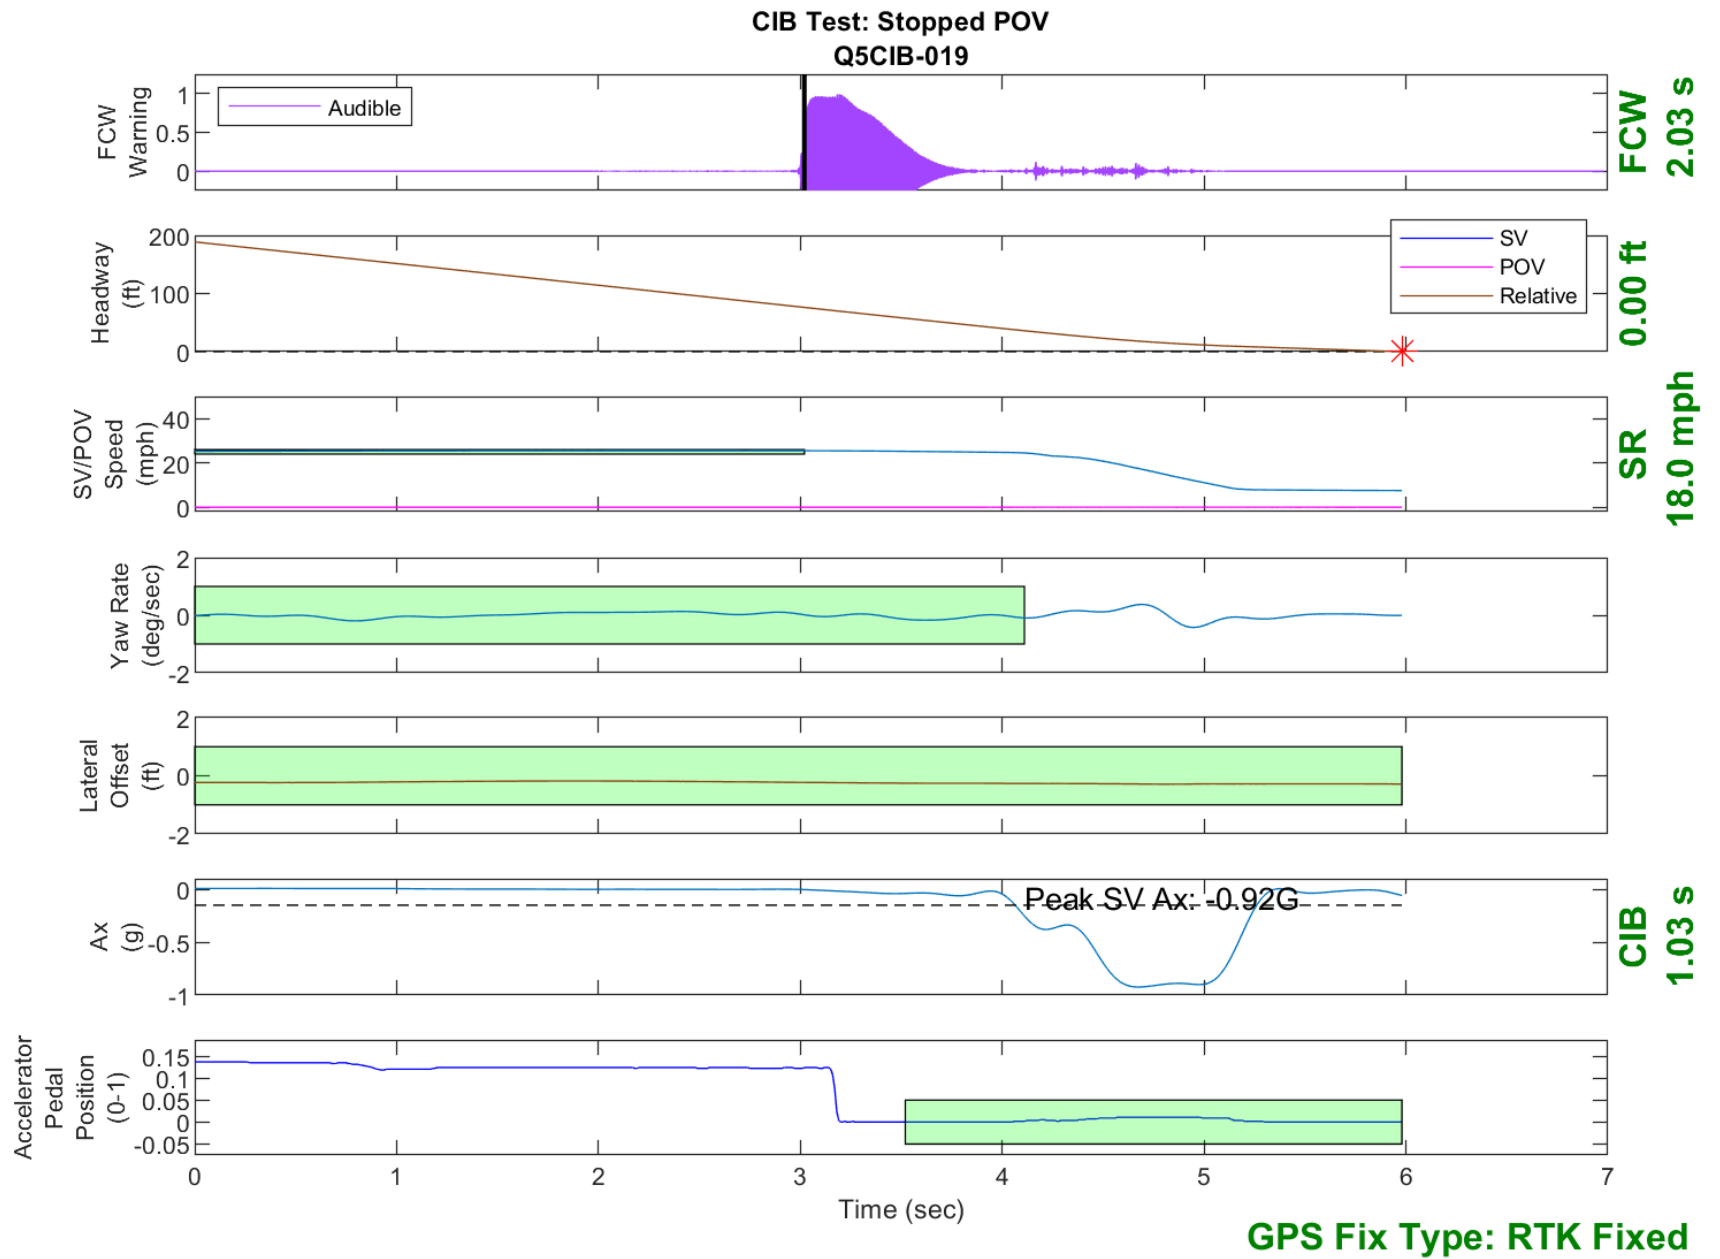


Figure D10. Time History for CIB Run 19, SV Encounters Stopped POV

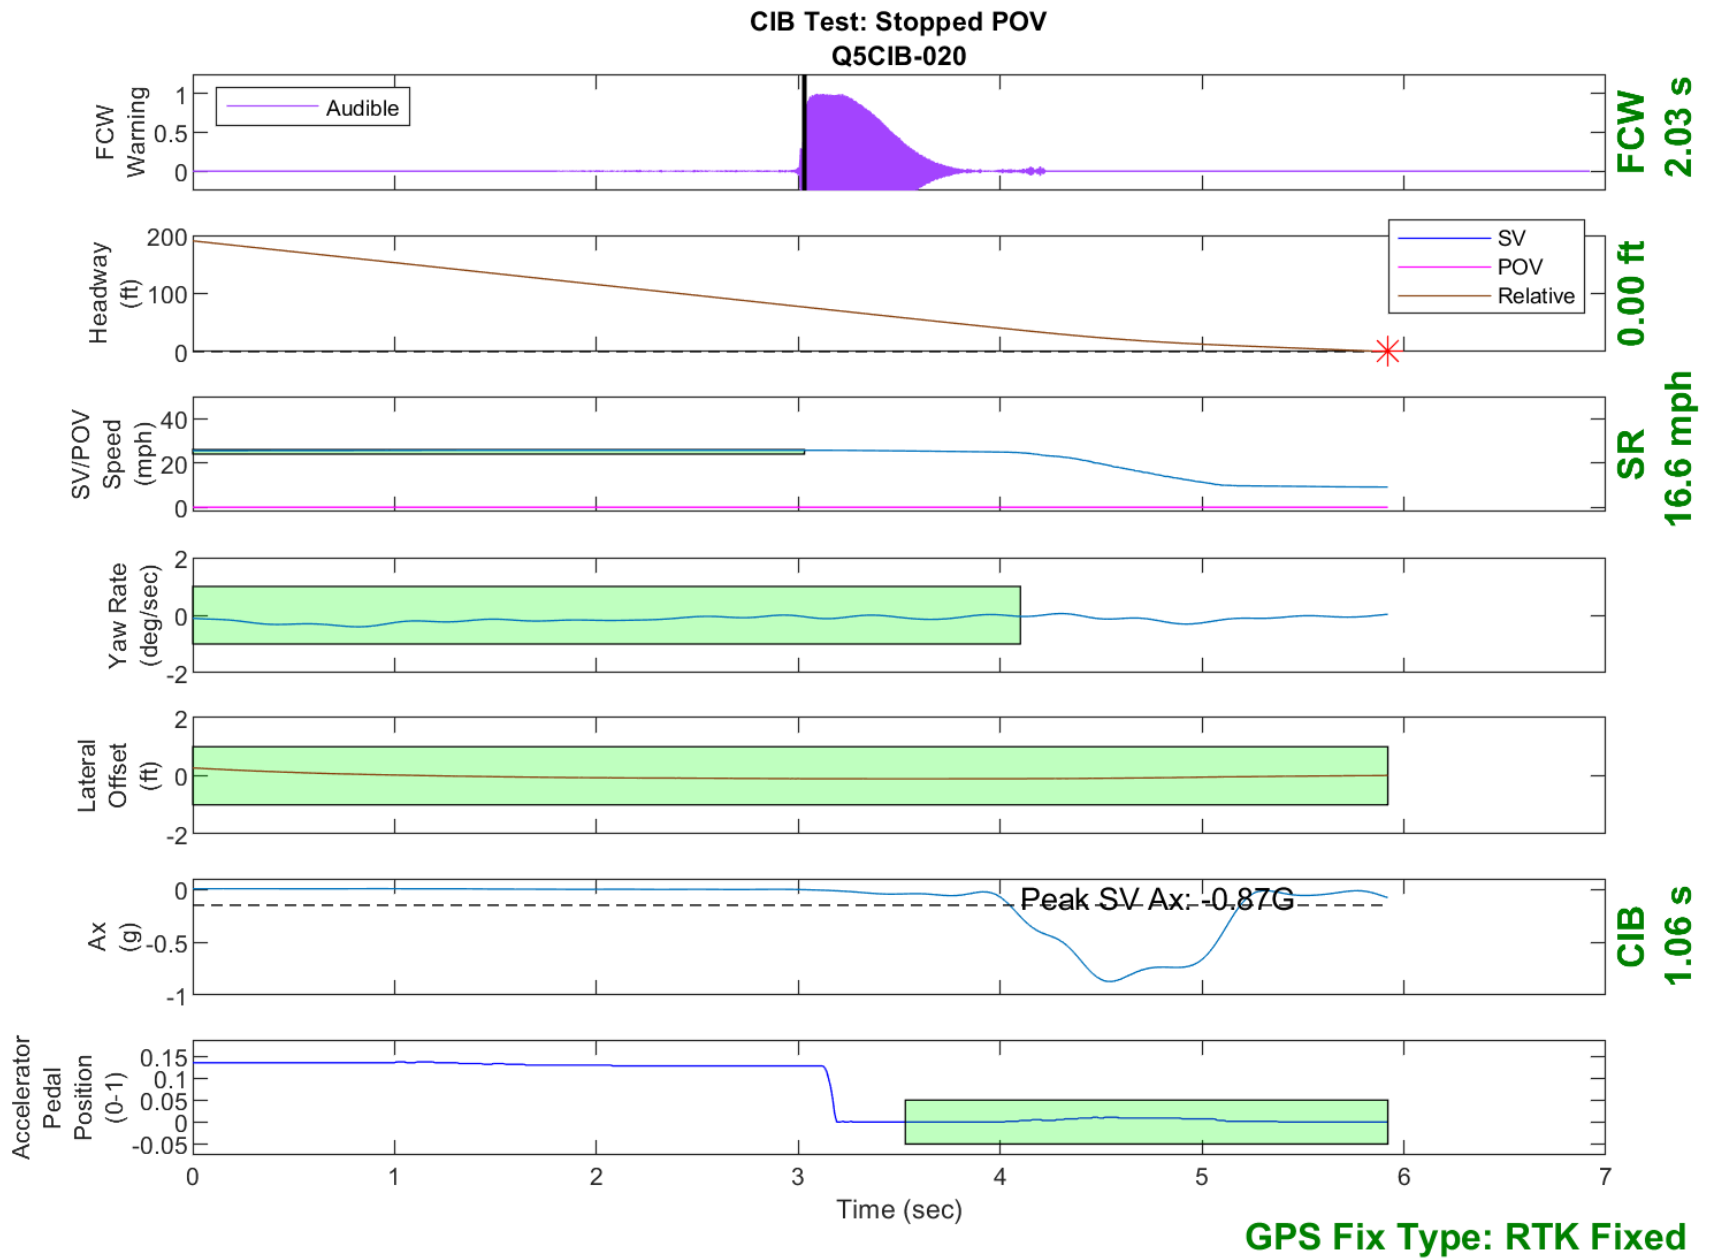


Figure D11. Time History for CIB Run 20, SV Encounters Stopped POV

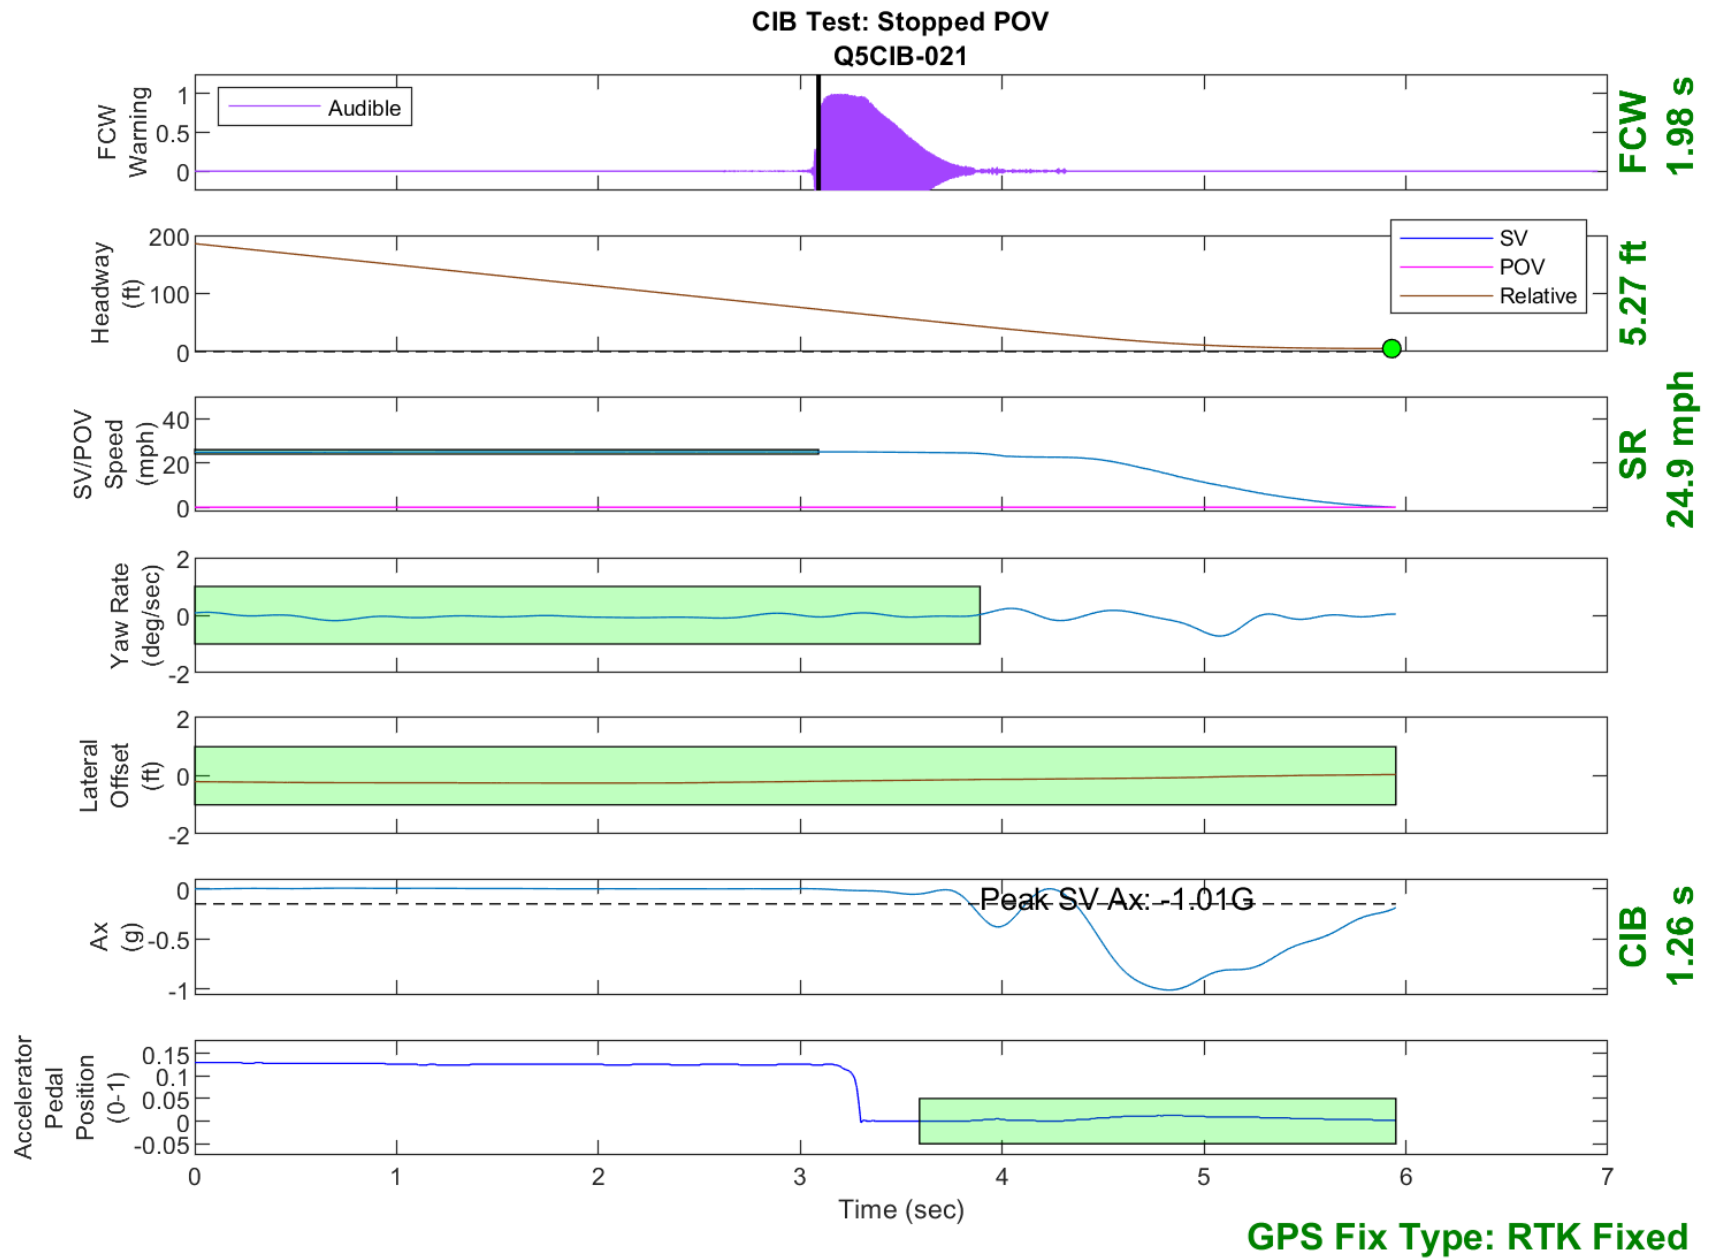


Figure D12. Time History for CIB Run 21, SV Encounters Stopped POV

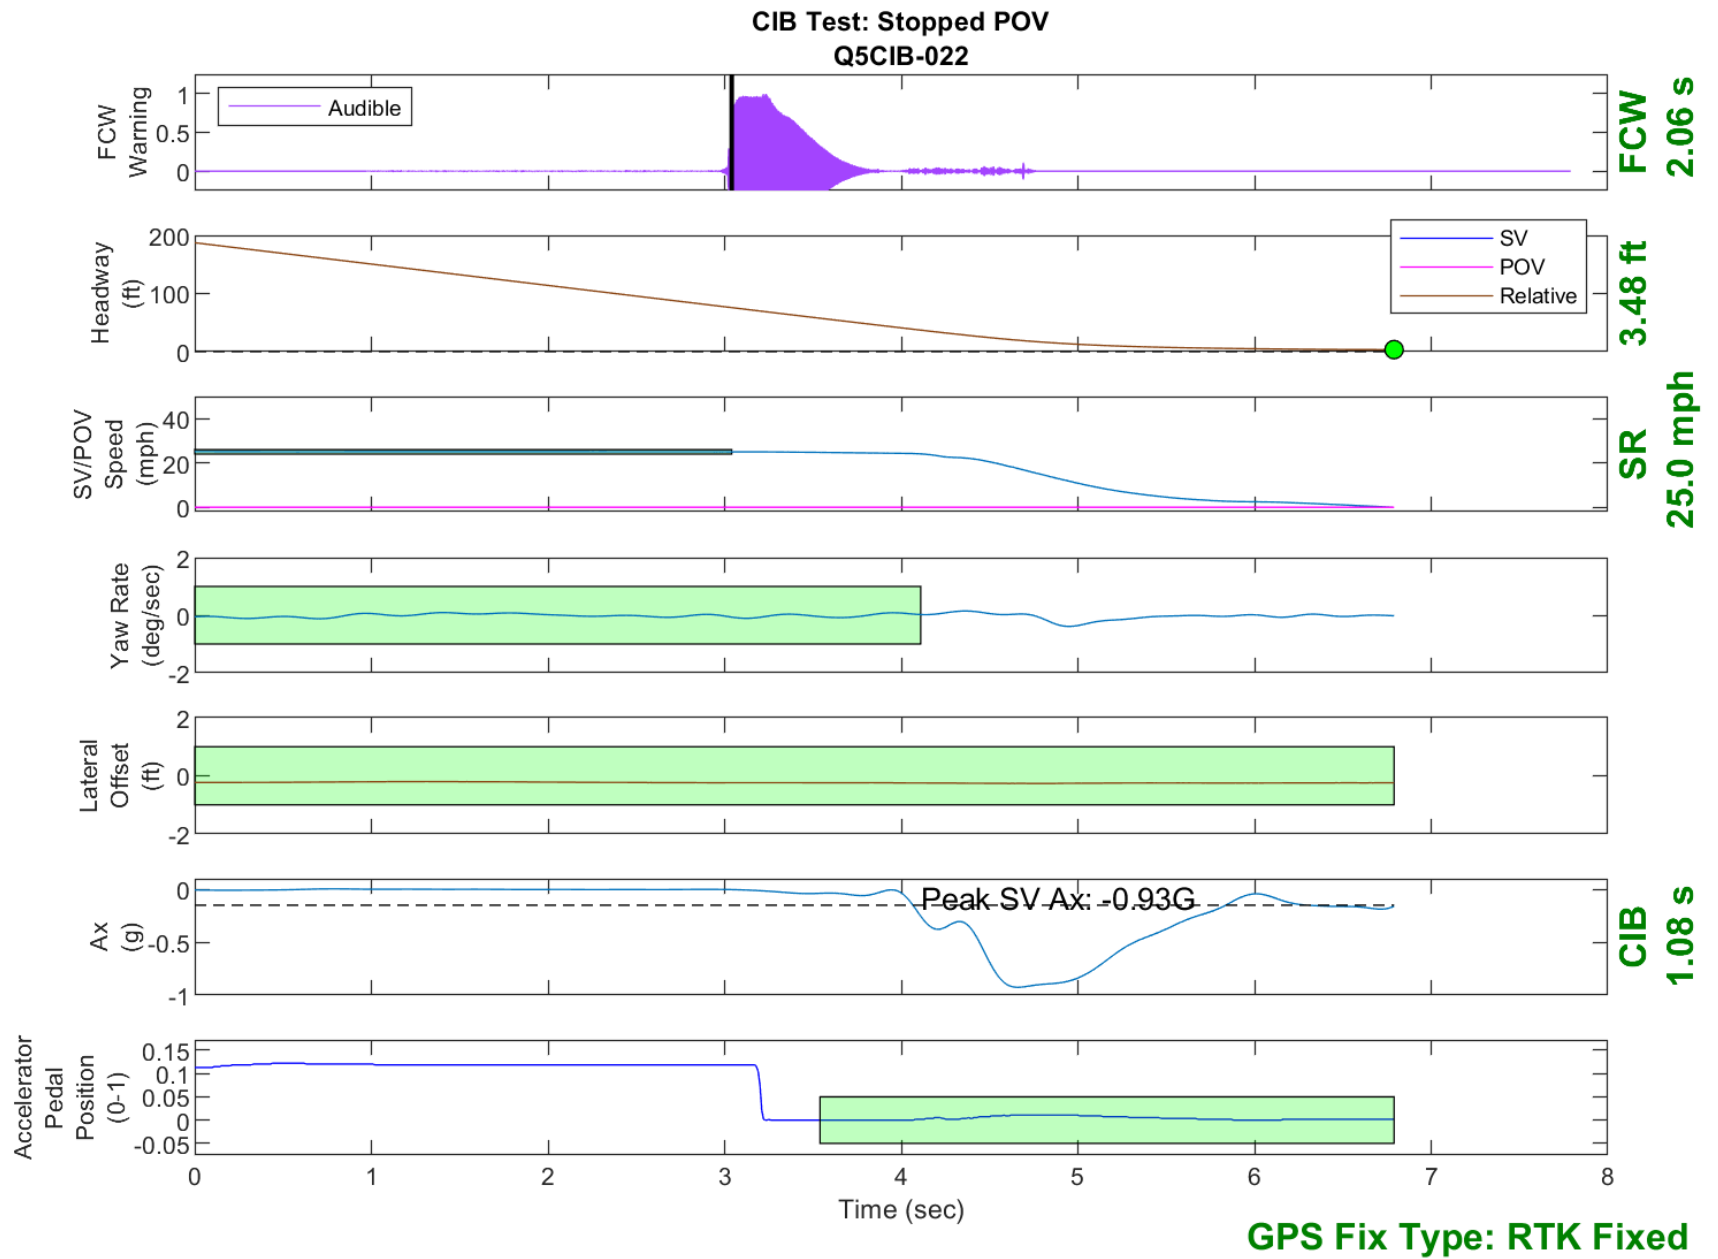


Figure D13. Time History for CIB Run 22, SV Encounters Stopped POV

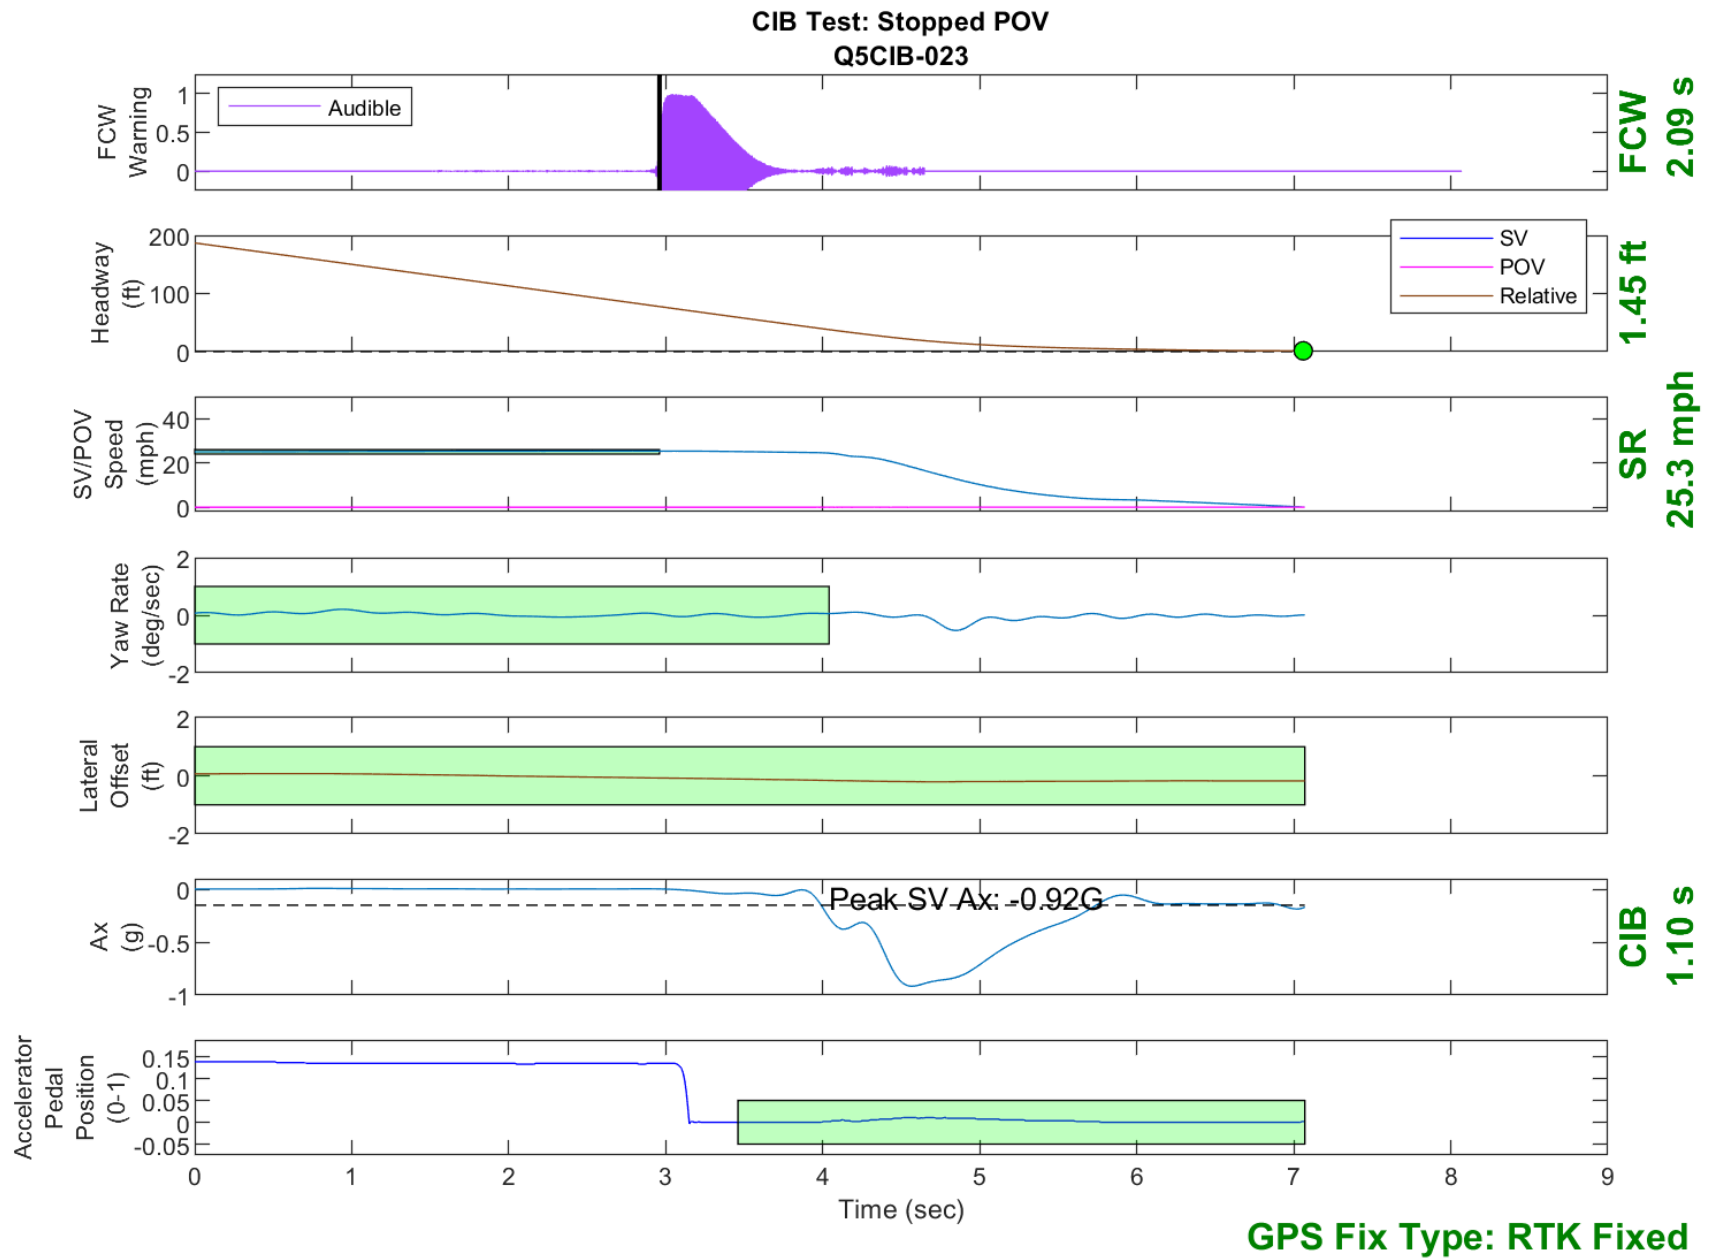


Figure D14. Time History for CIB Run 23, SV Encounters Stopped POV

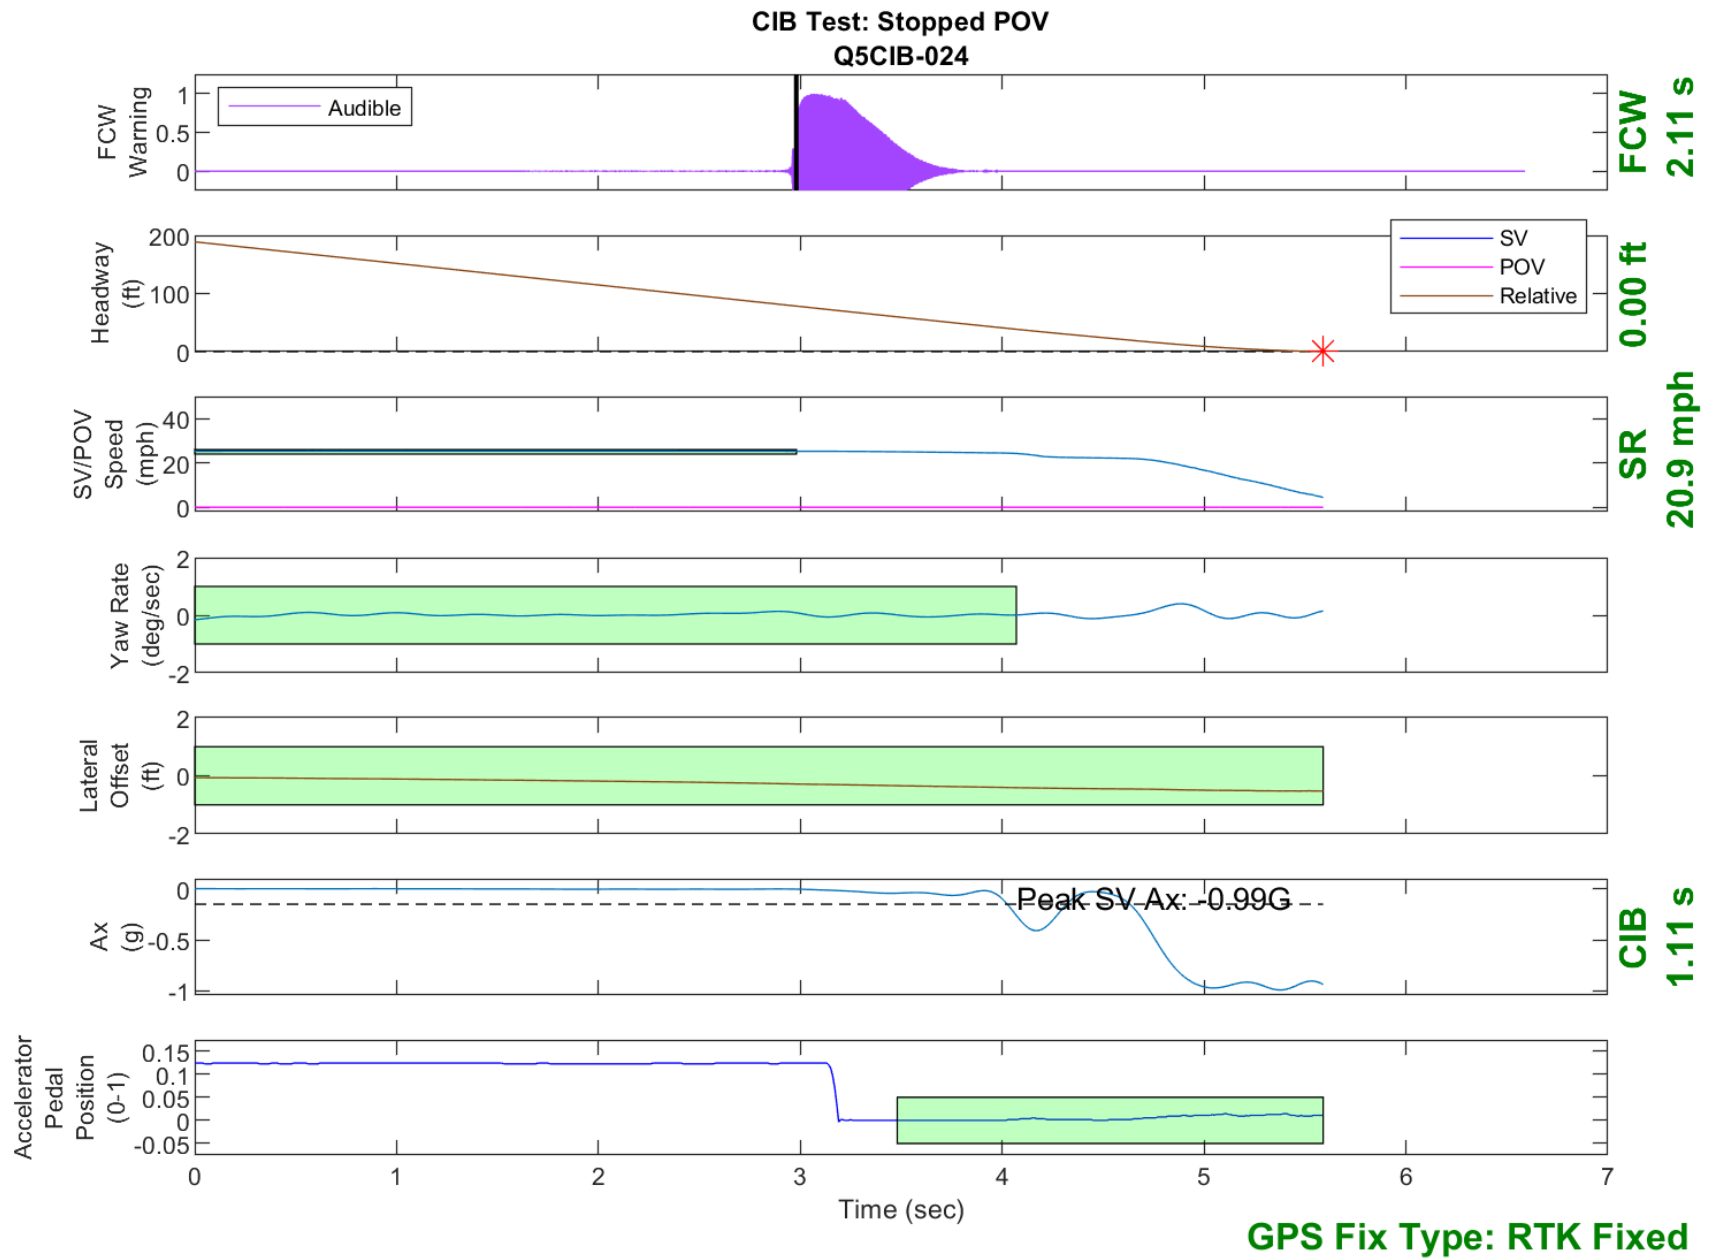


Figure D15. Time History for CIB Run 24, SV Encounters Stopped POV

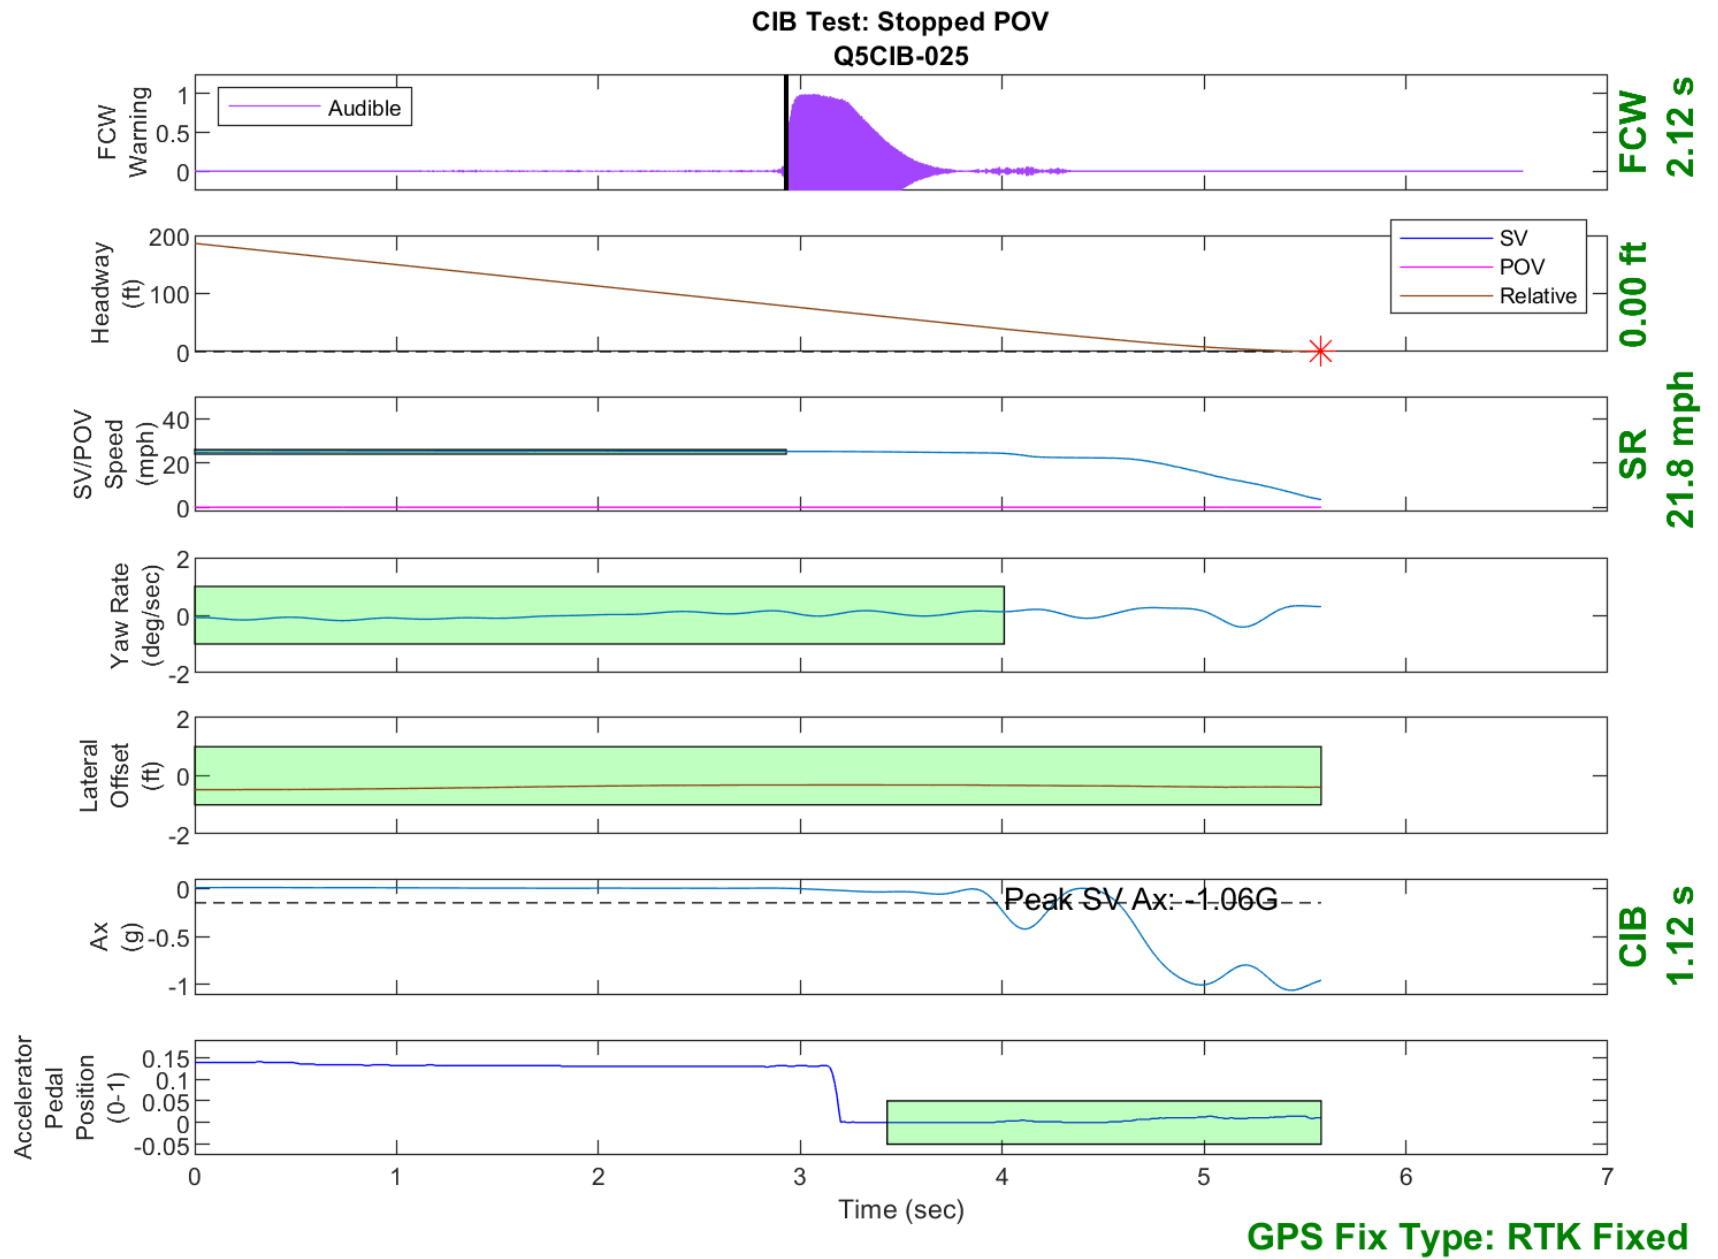


Figure D16. Time History for CIB Run 25, SV Encounters Stopped POV

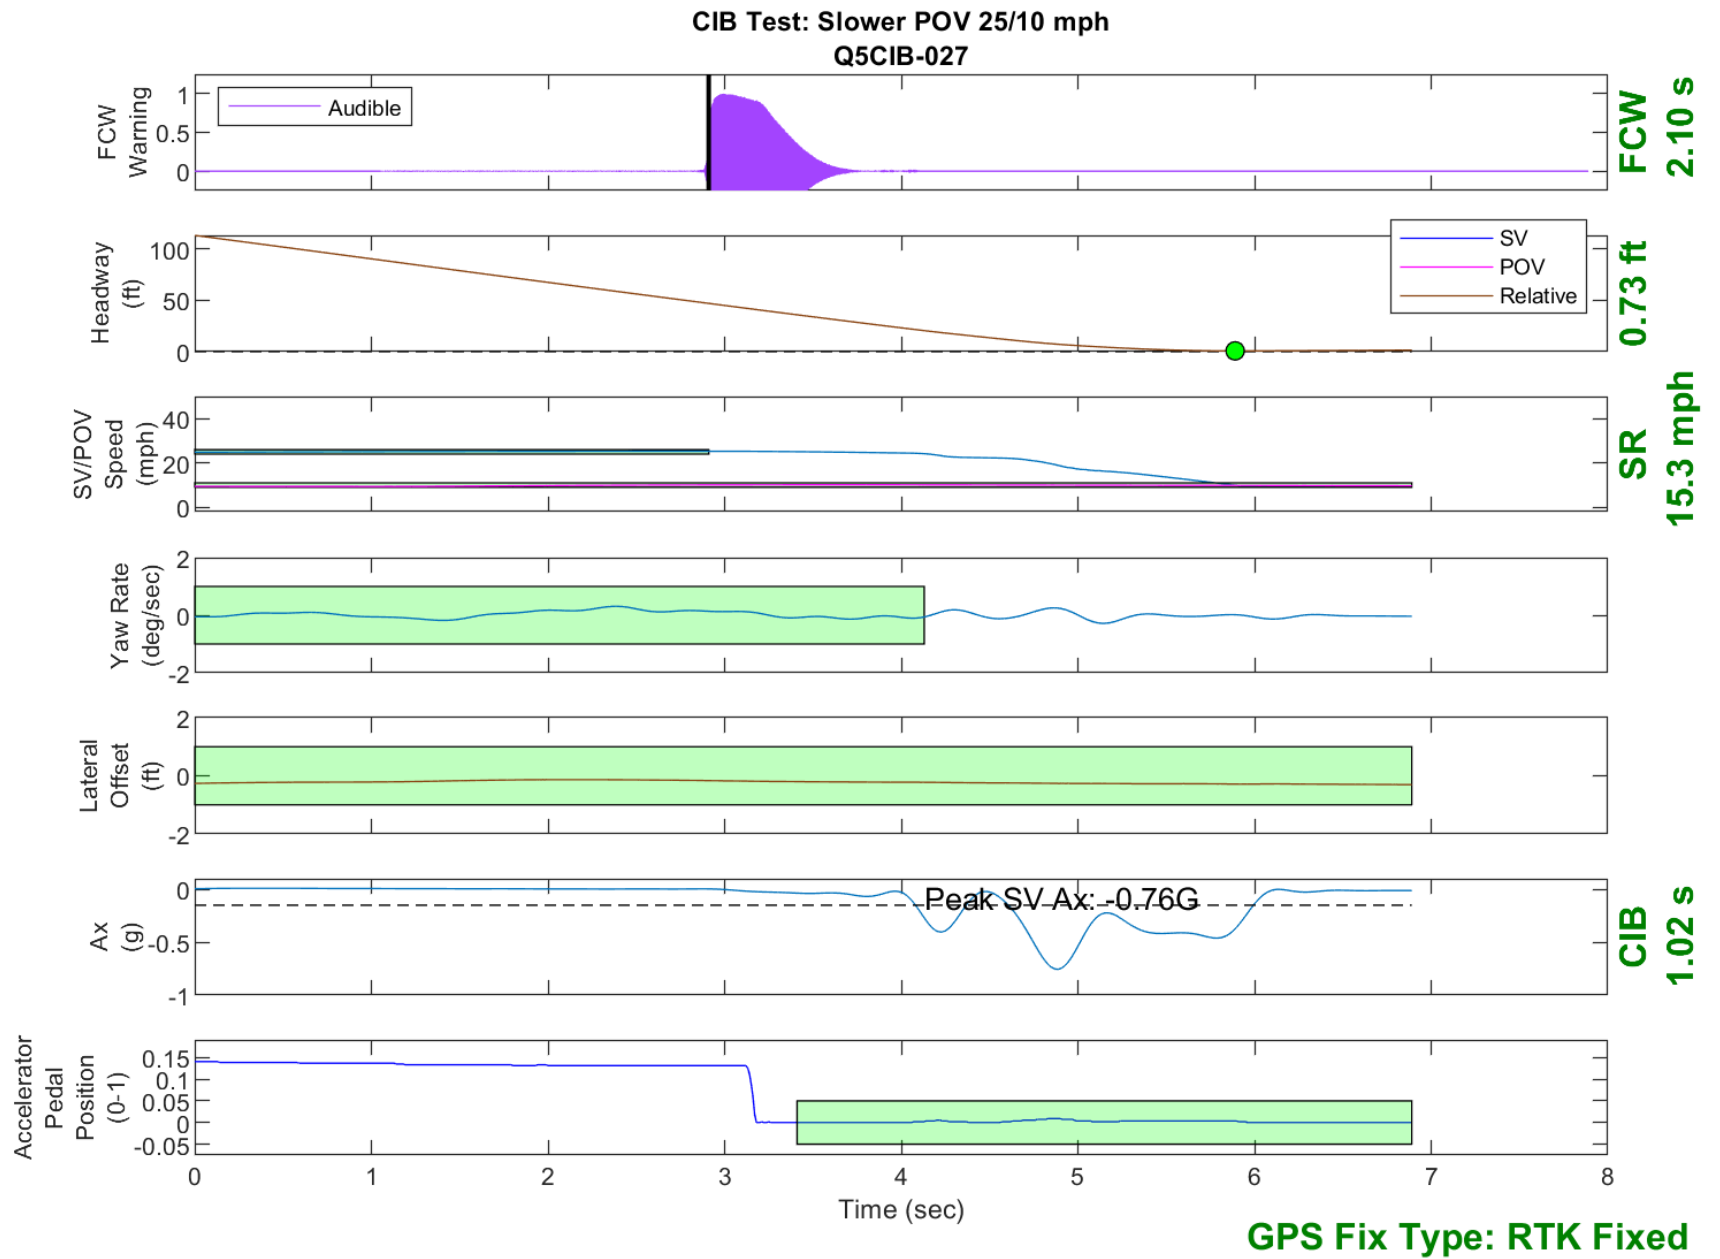


Figure D17. Time History for CIB Run 27, SV Encounters Slower POV, SV 25 mph, POV 10 mph

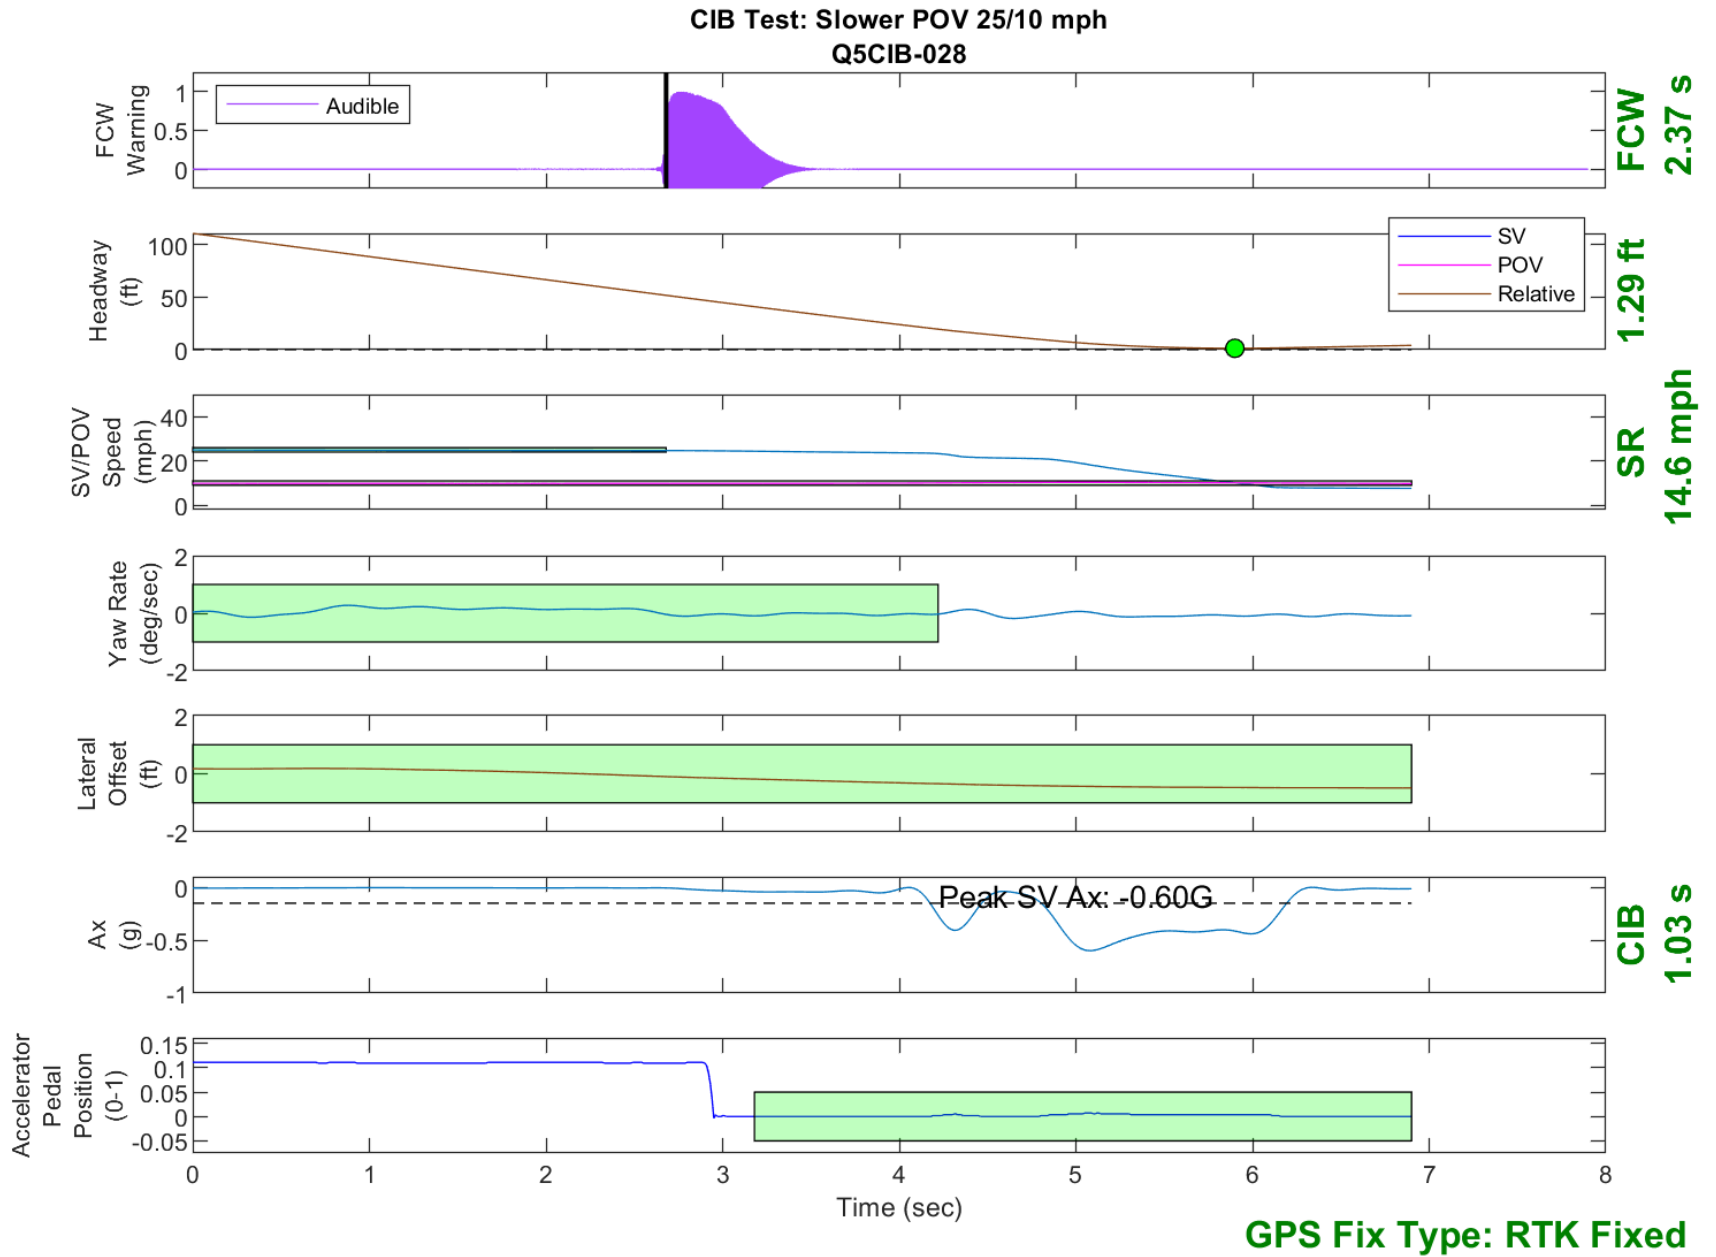


Figure D18. Time History for CIB Run 28, SV Encounters Slower POV, SV 25 mph, POV 10 mph

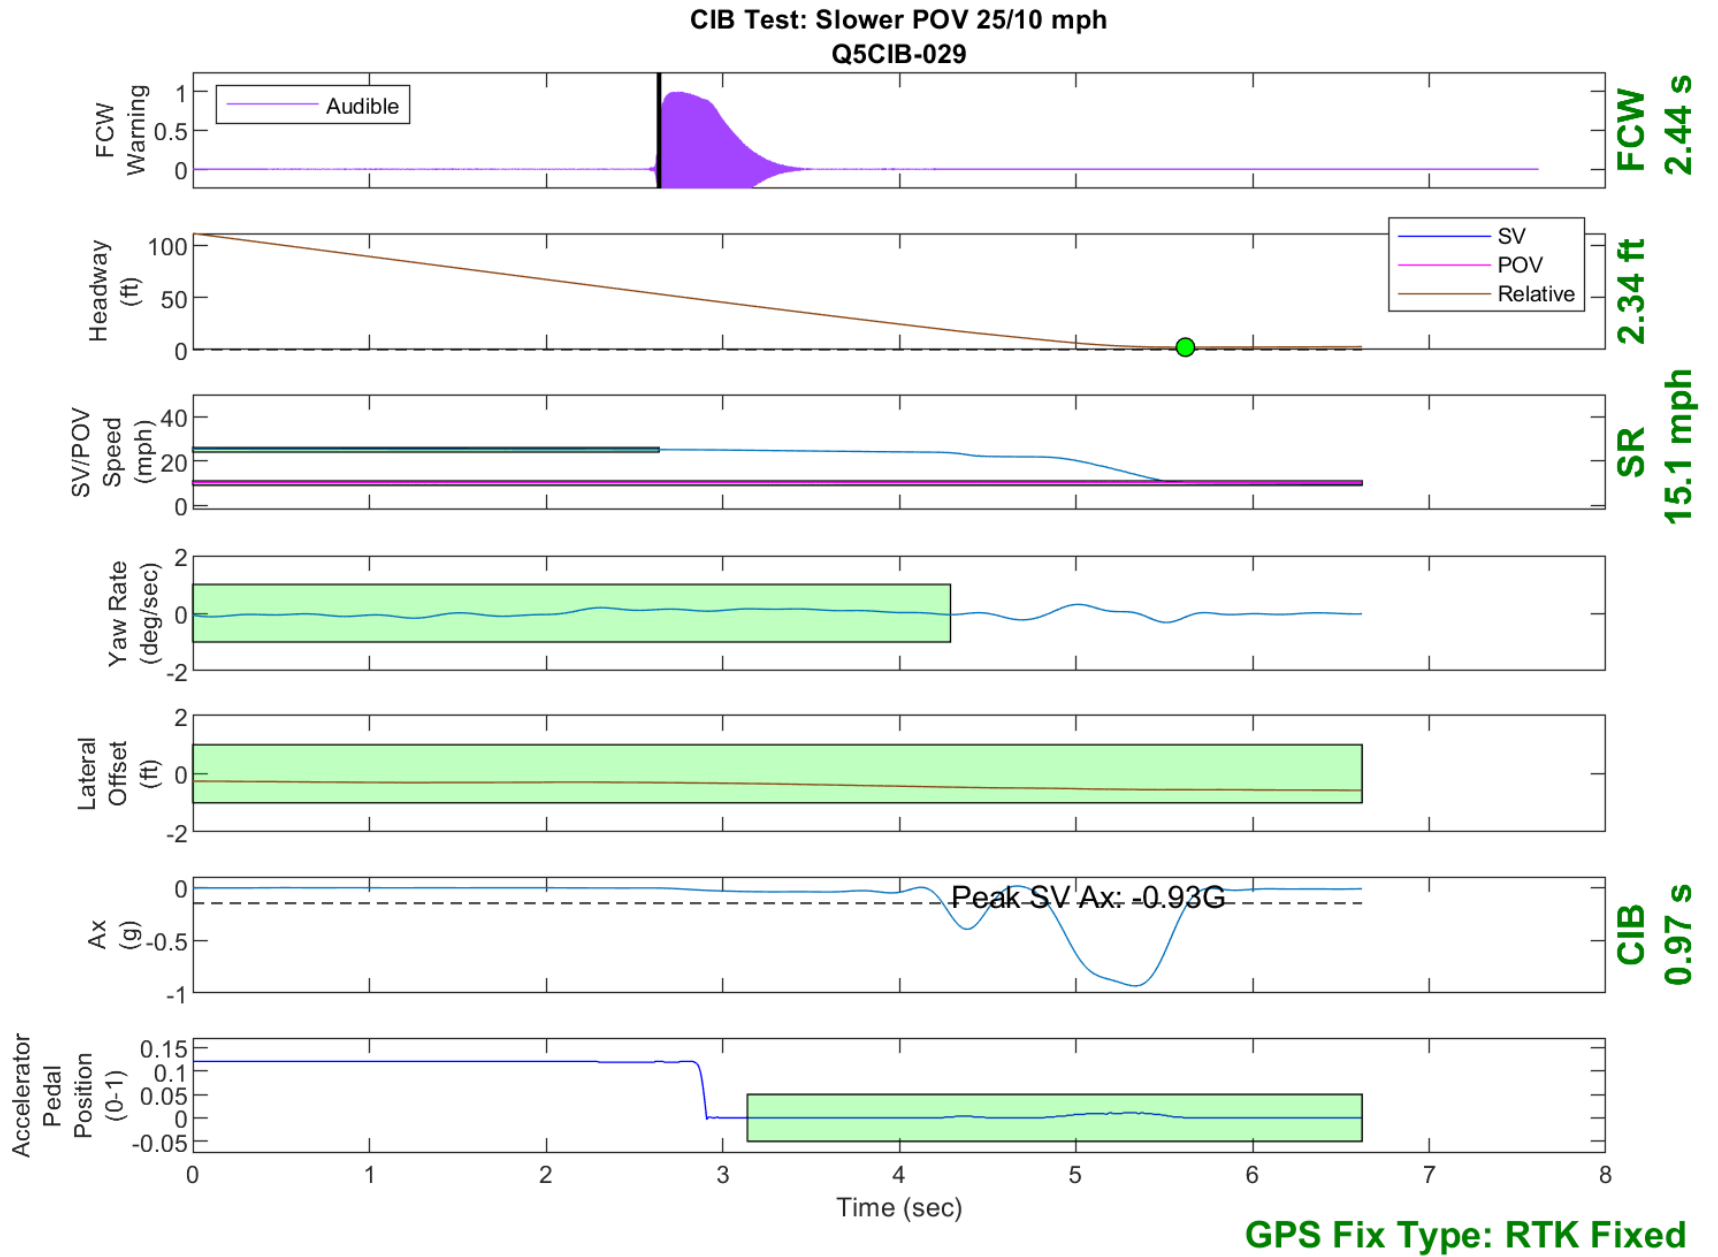


Figure D19. Time History for CIB Run 29, SV Encounters Slower POV, SV 25 mph, POV 10 mph

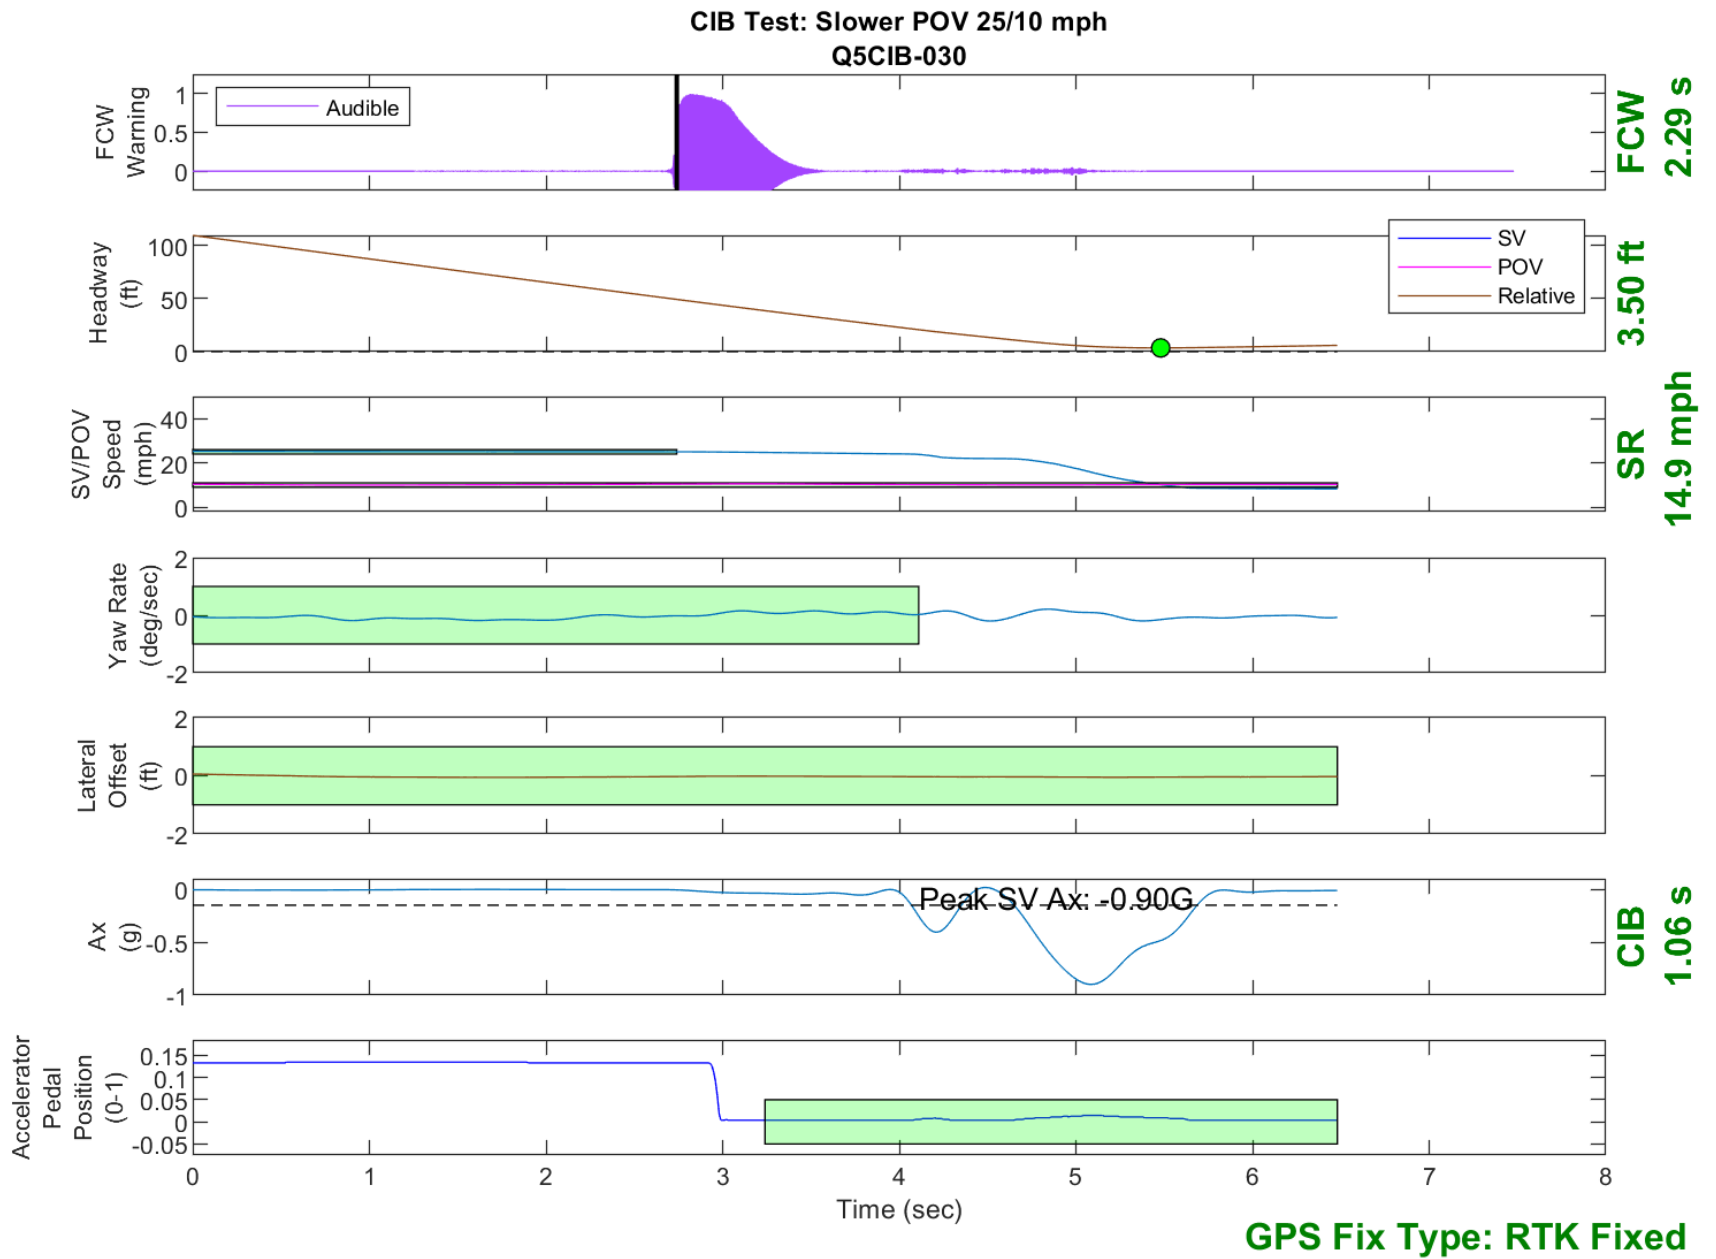


Figure D20. Time History for CIB Run 30, SV Encounters Slower POV, SV 25 mph, POV 10 mph

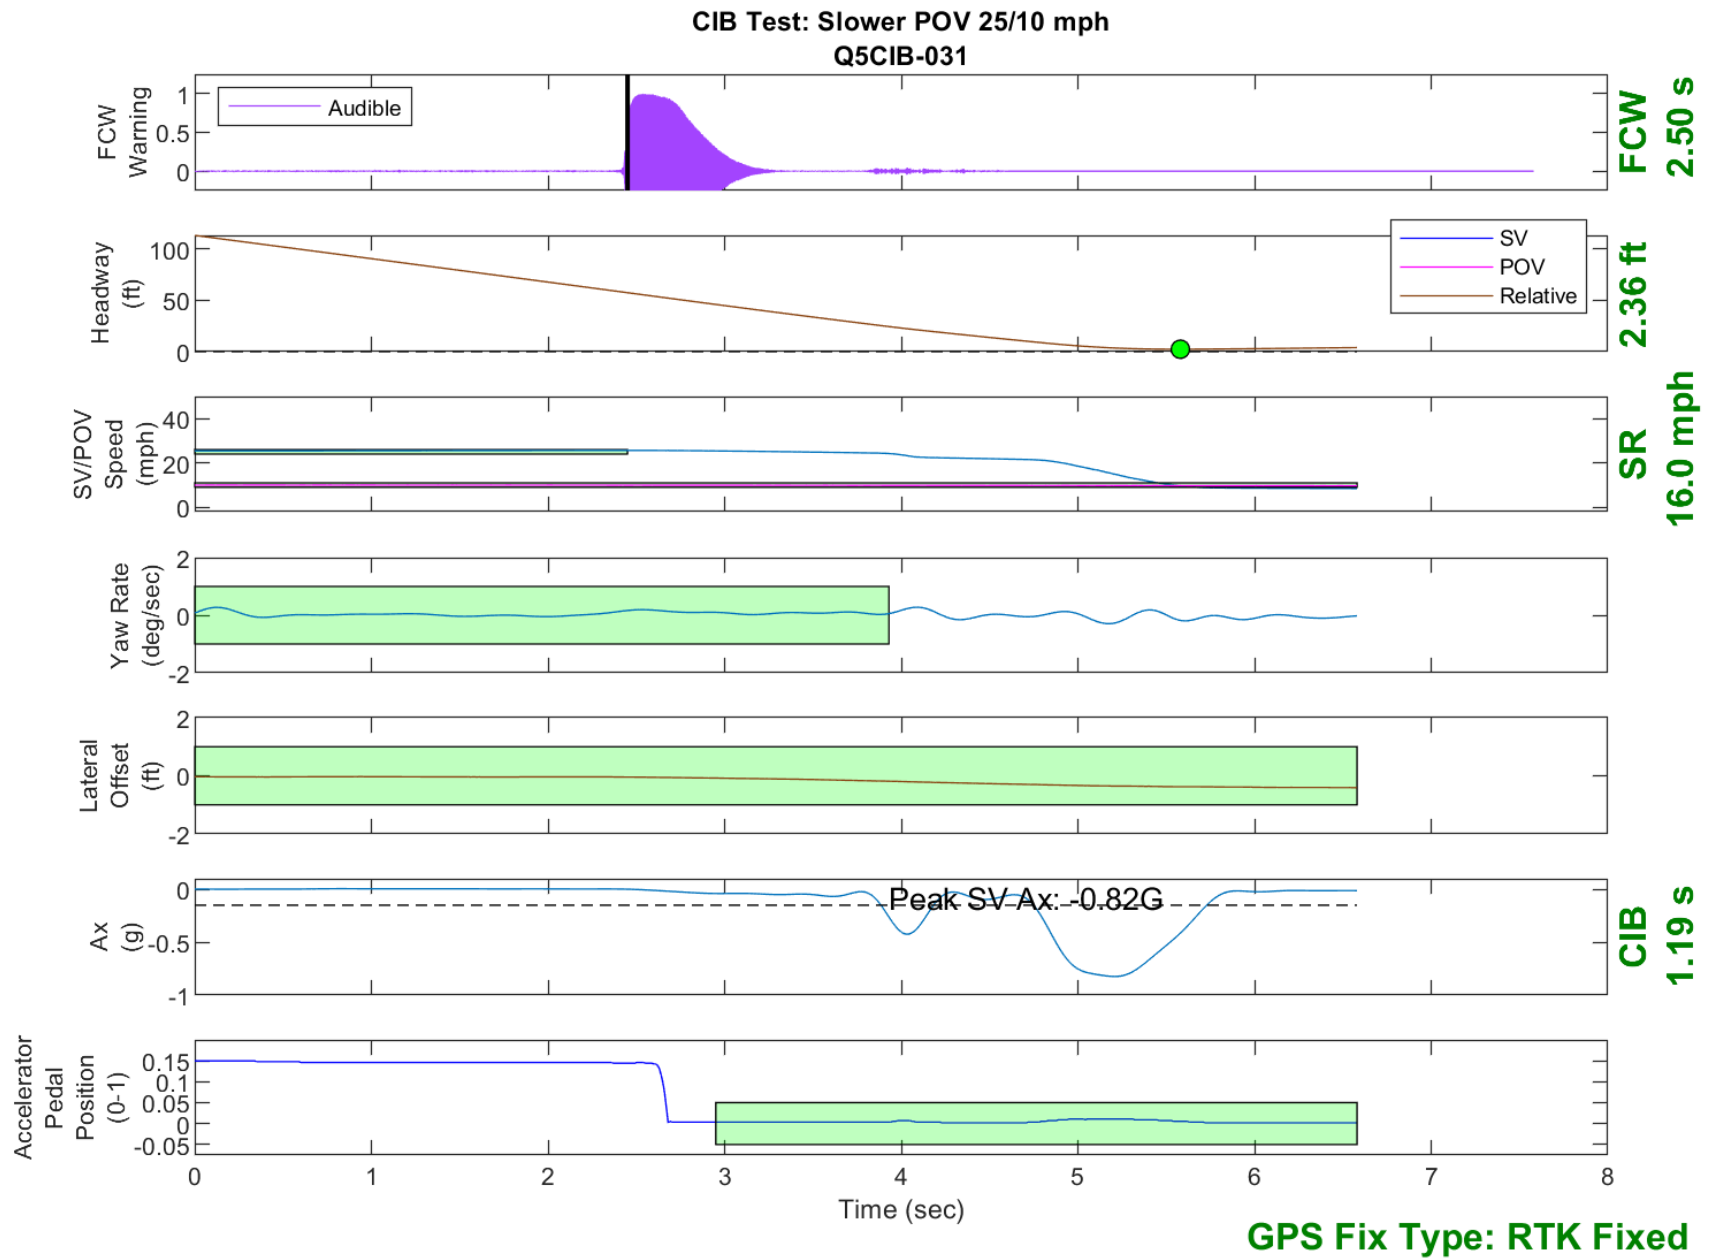


Figure D21. Time History for CIB Run 31, SV Encounters Slower POV, SV 25 mph, POV 10 mph

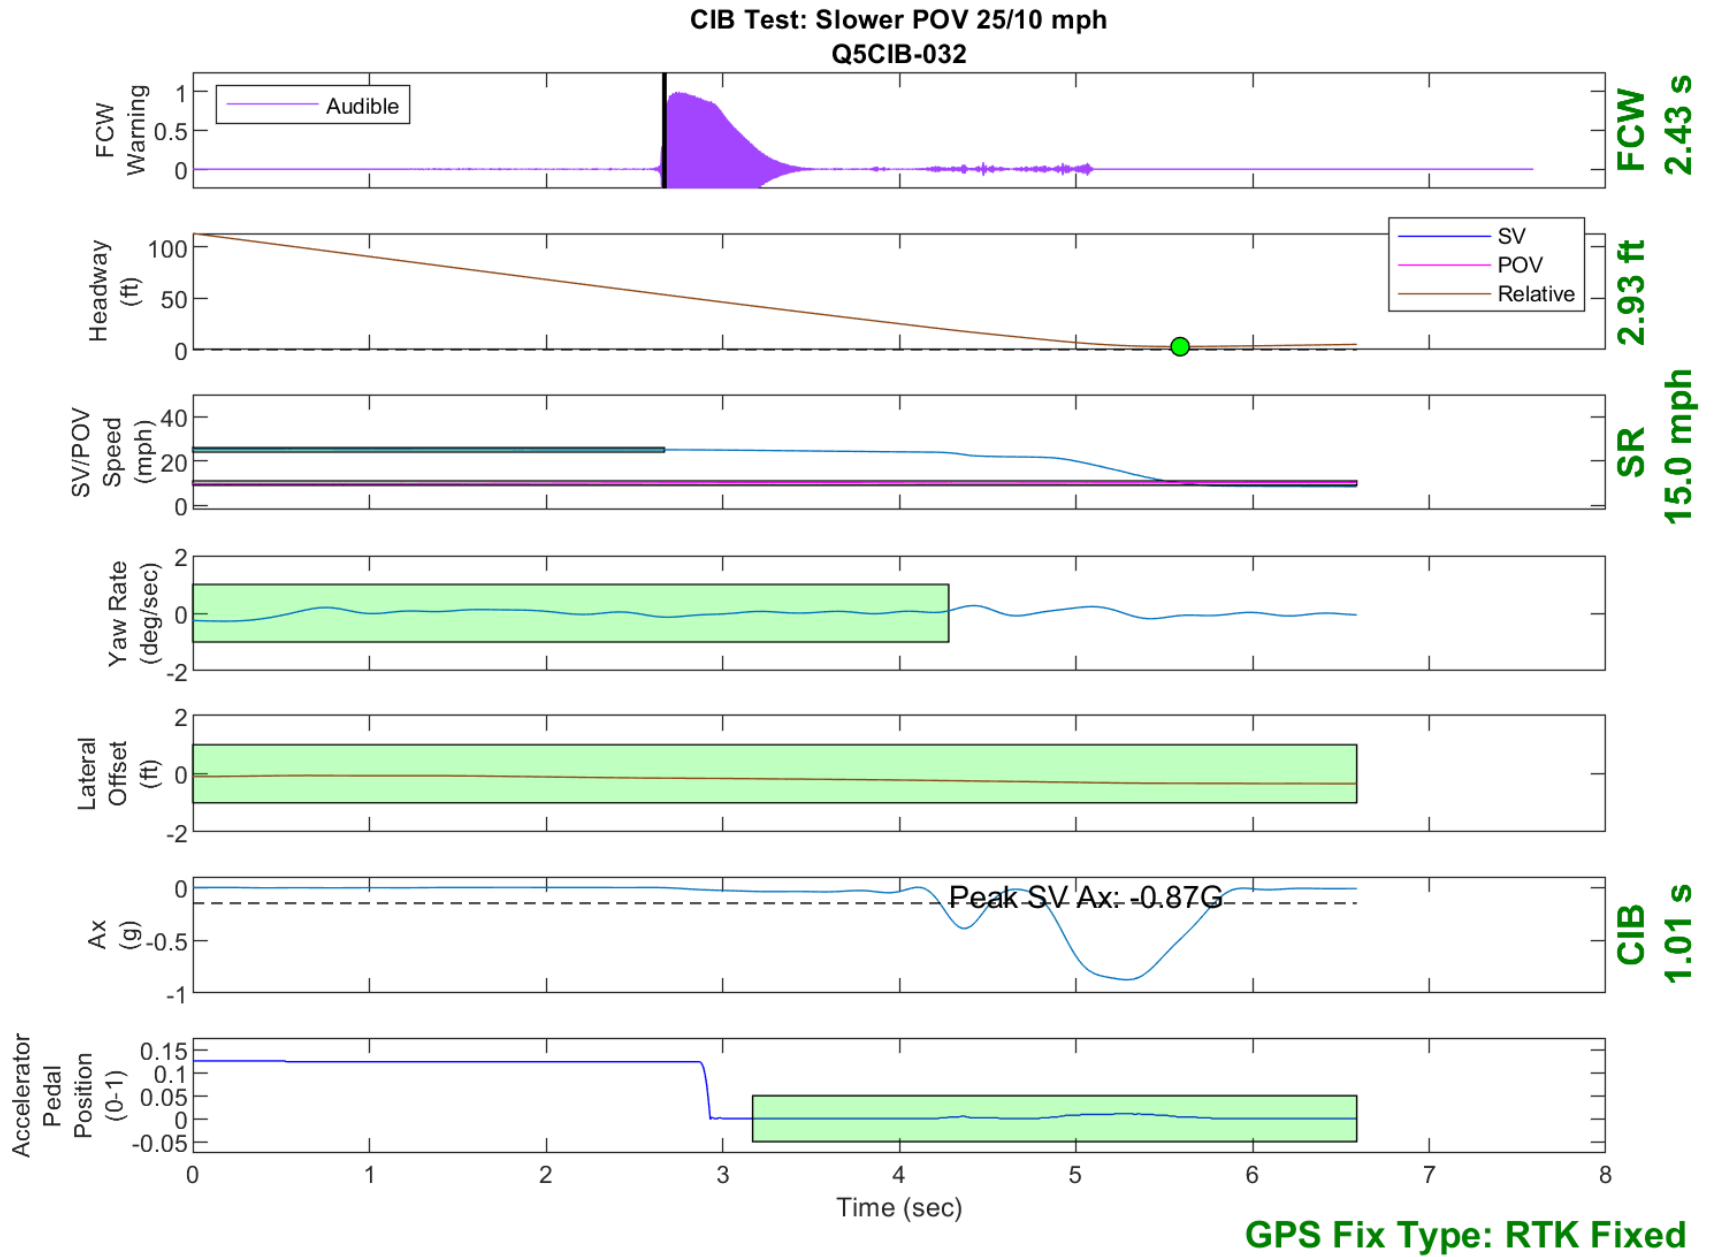


Figure D22. Time History for CIB Run 32, SV Encounters Slower POV, SV 25 mph, POV 10 mph

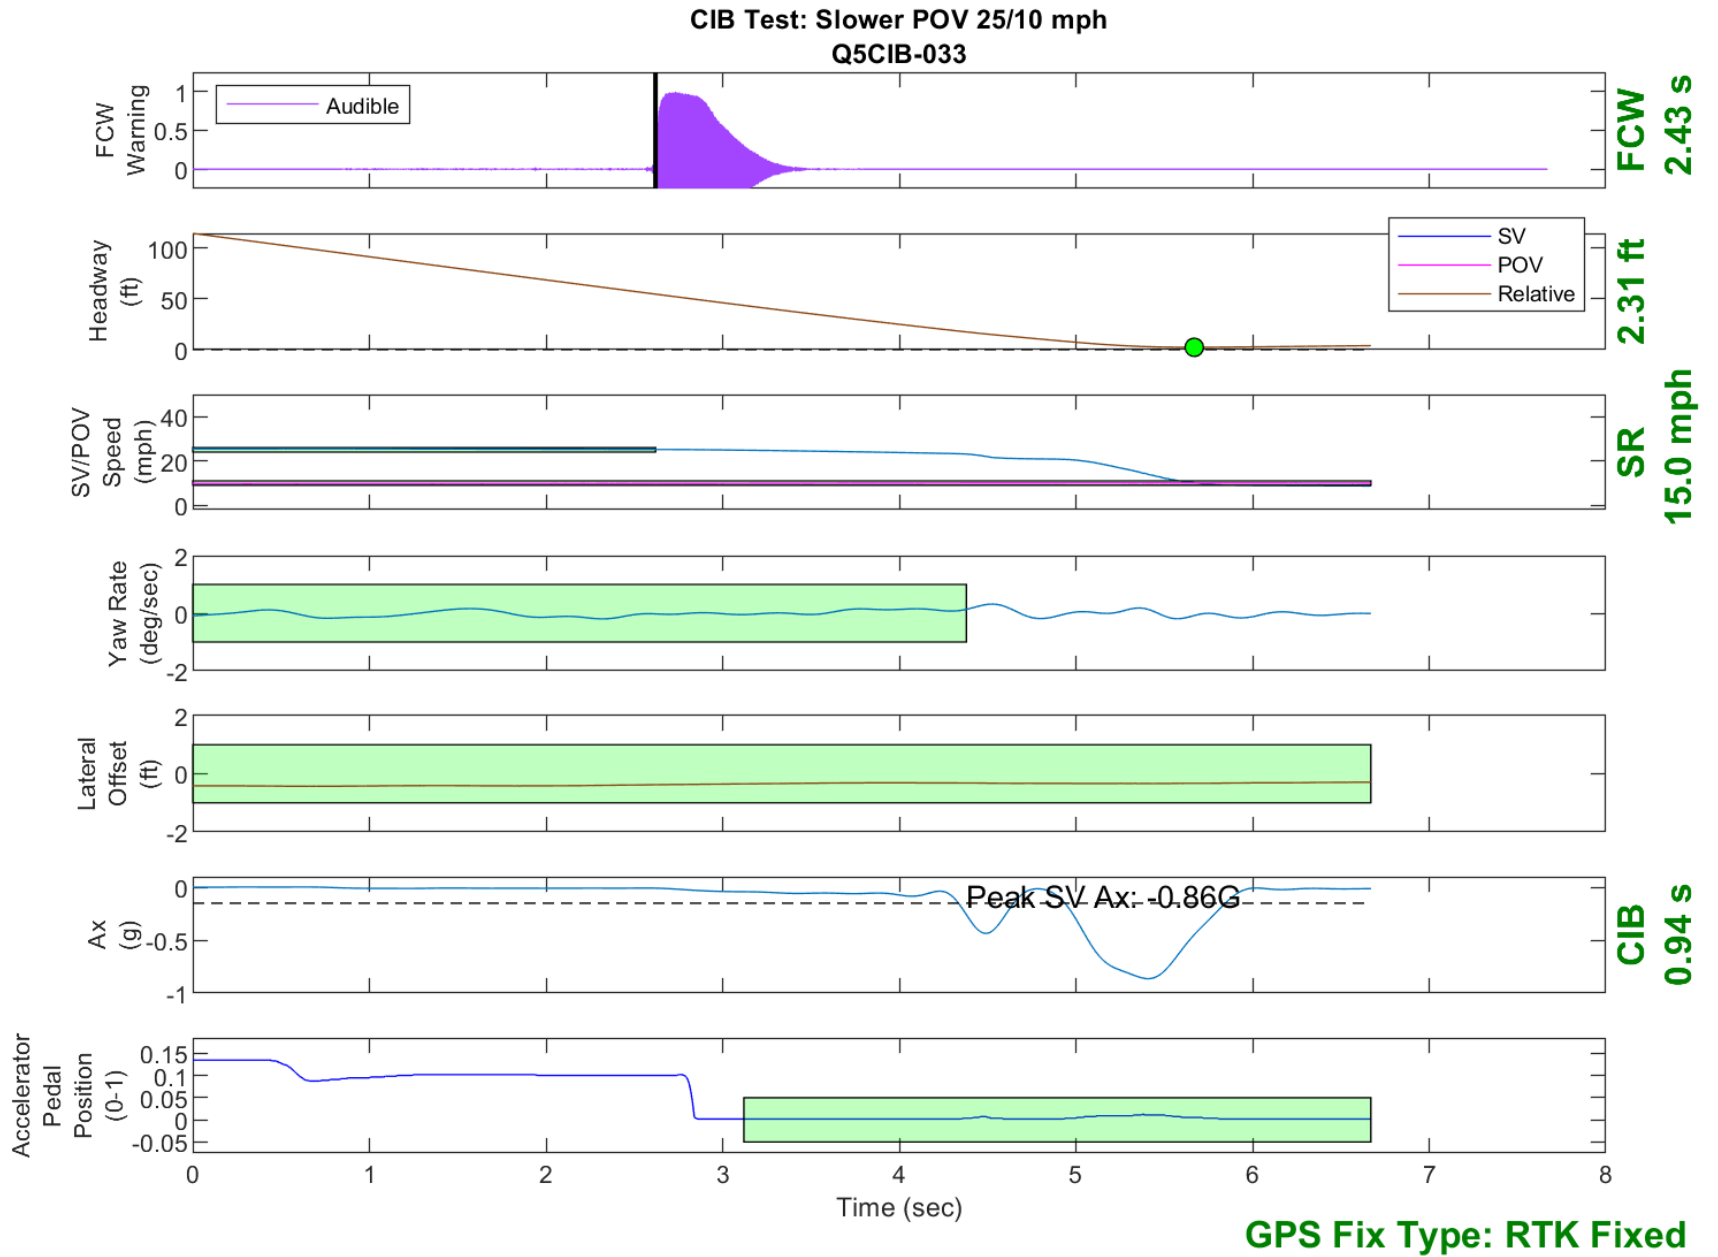


Figure D23. Time History for CIB Run 33, SV Encounters Slower POV, SV 25 mph, POV 10 mph

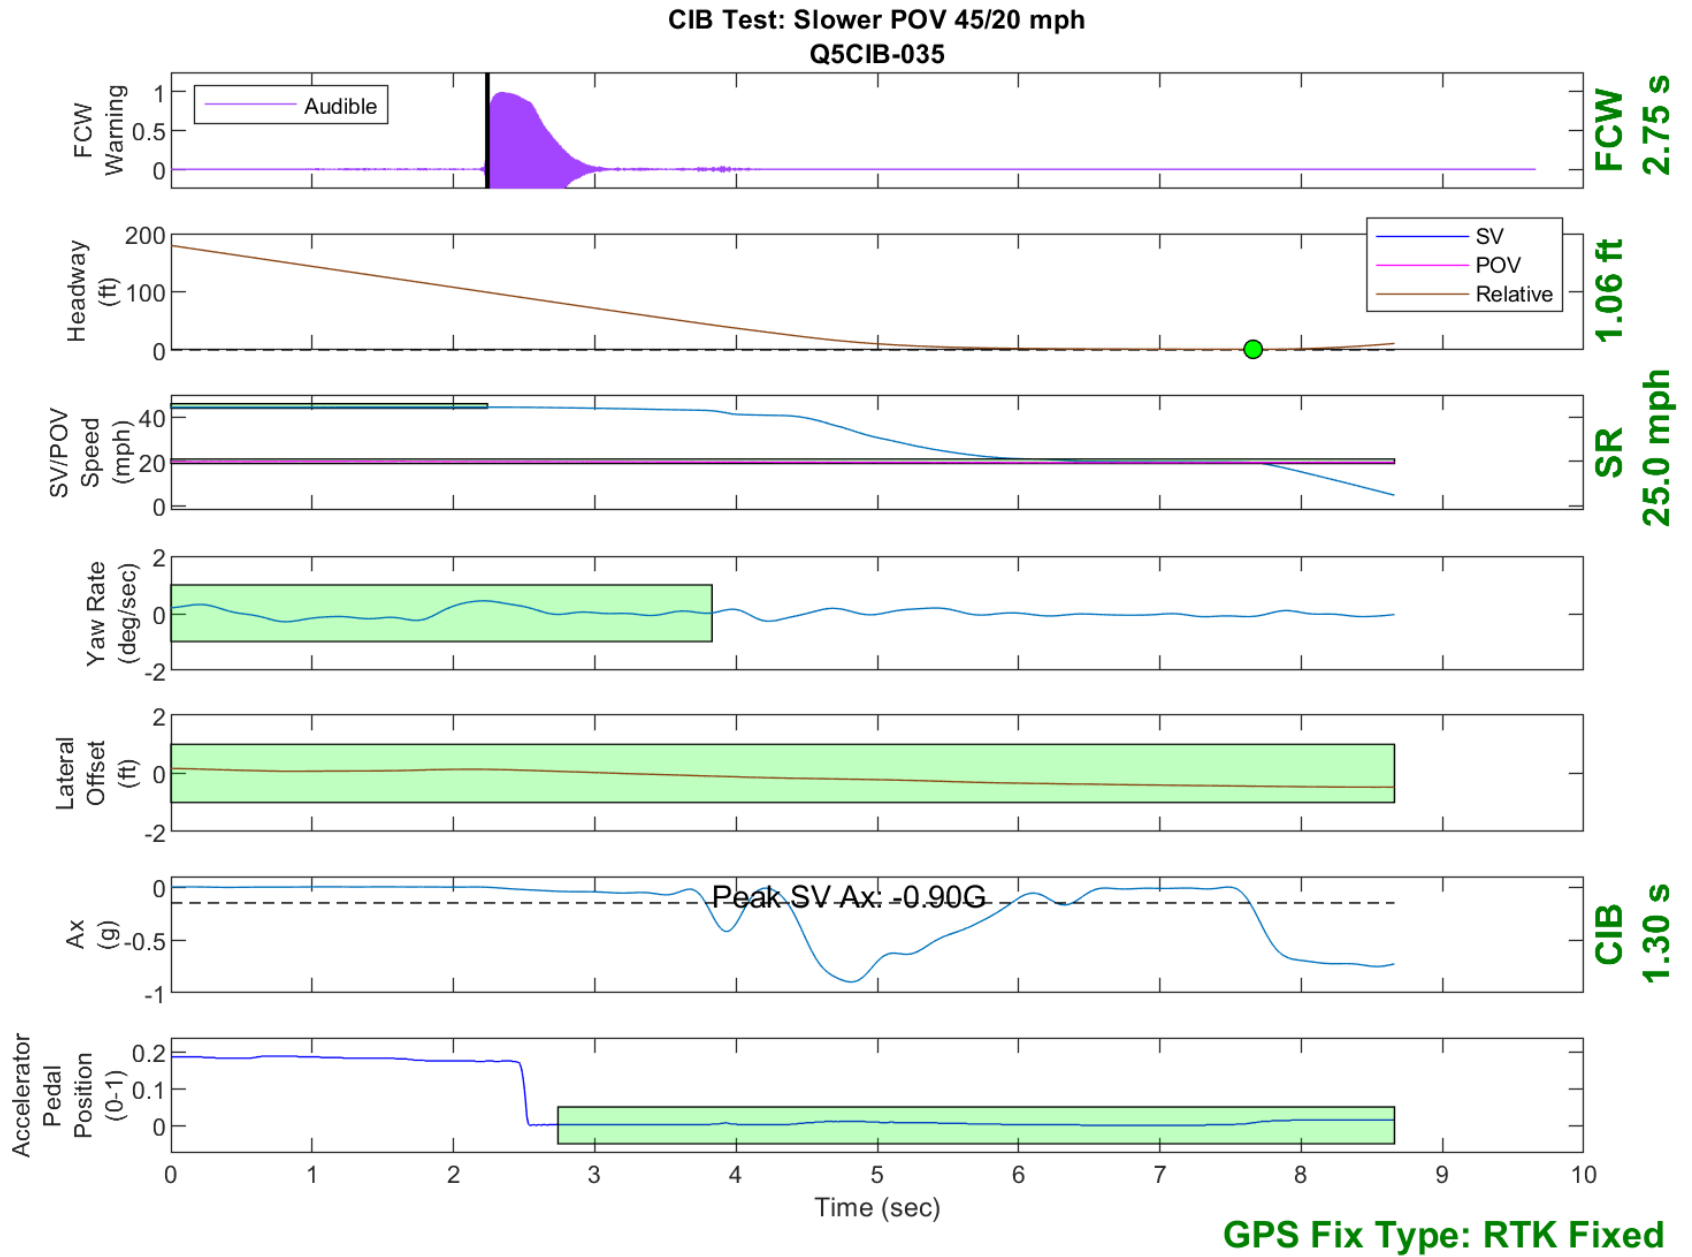


Figure D24. Time History for CIB Run 35, SV Encounters Slower POV, SV 45 mph, POV 20 mph

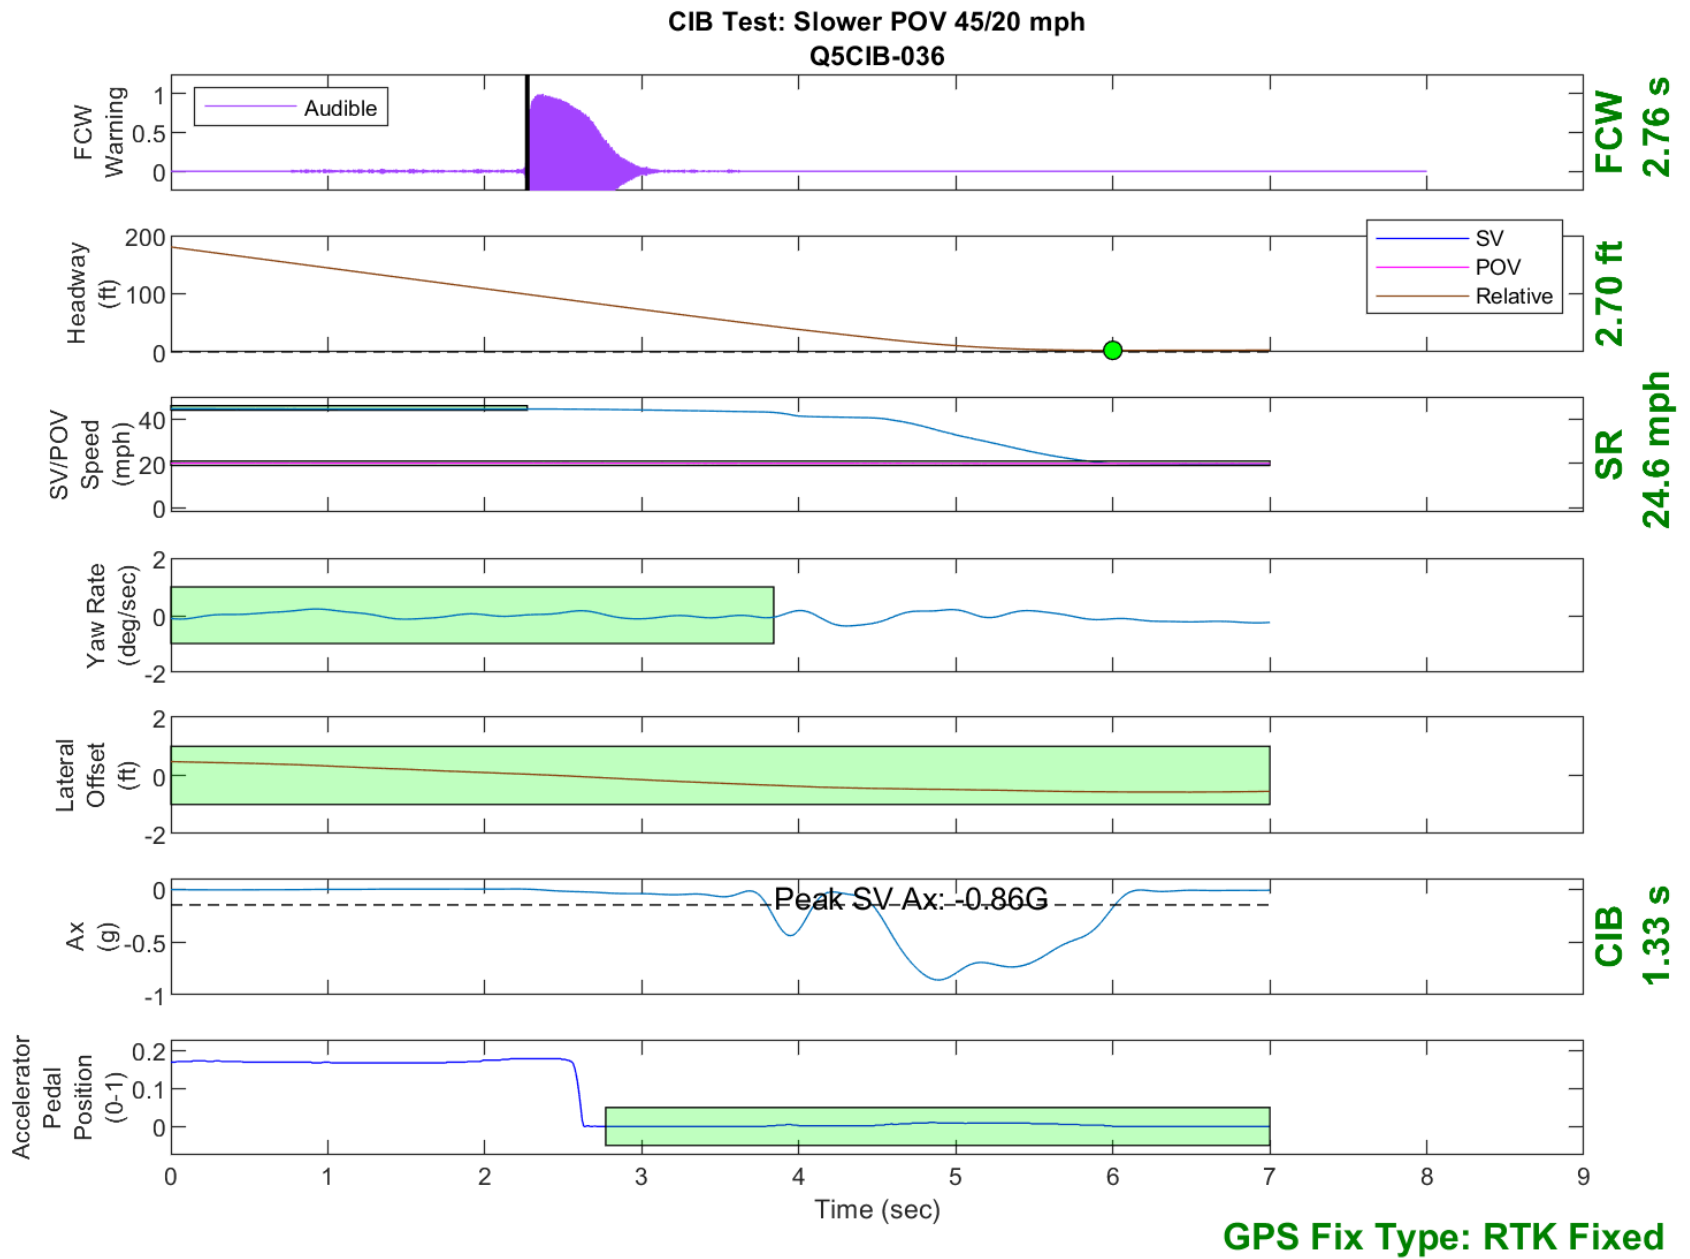


Figure D25. Time History for CIB Run 36, SV Encounters Slower POV, SV 45 mph, POV 20 mph

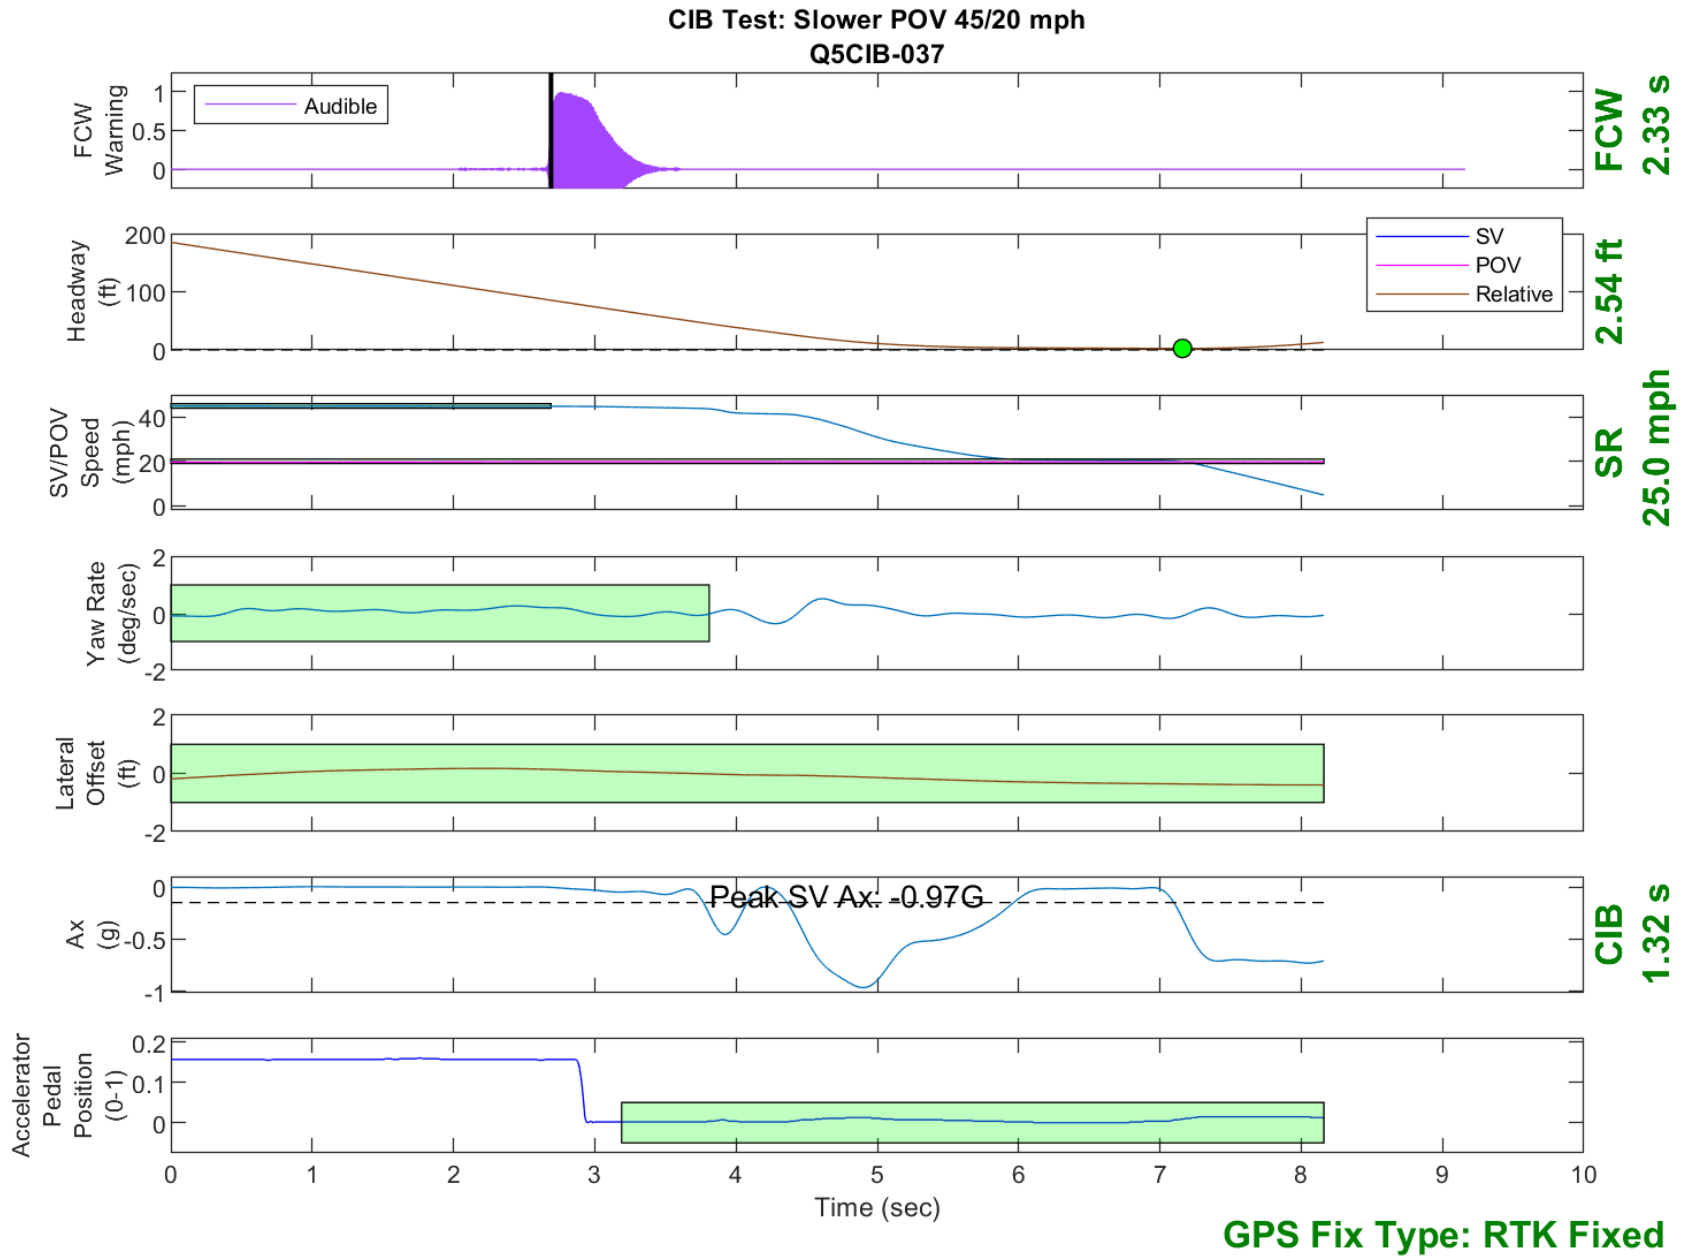


Figure D26. Time History for CIB Run 37, SV Encounters Slower POV, SV 45 mph, POV 20 mph

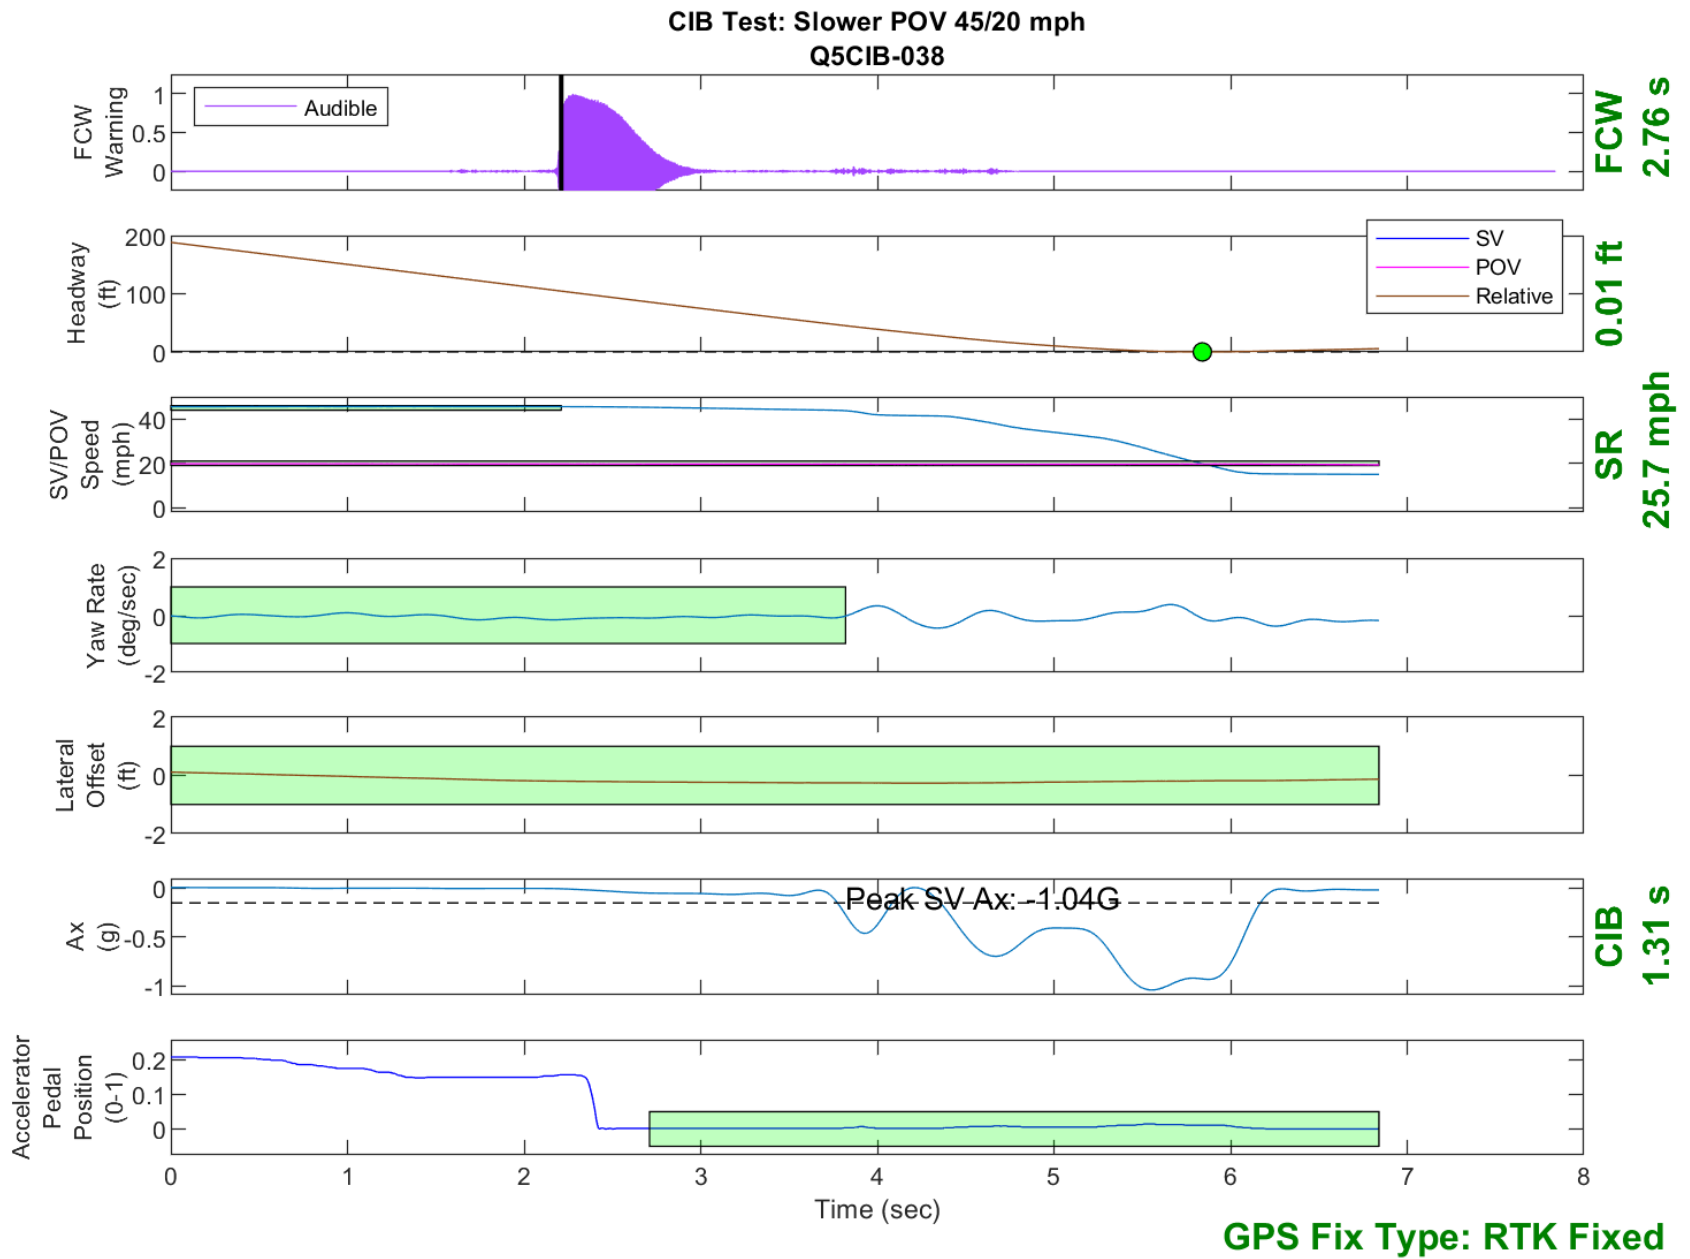


Figure D27. Time History for CIB Run 38, SV Encounters Slower POV, SV 45 mph, POV 20 mph

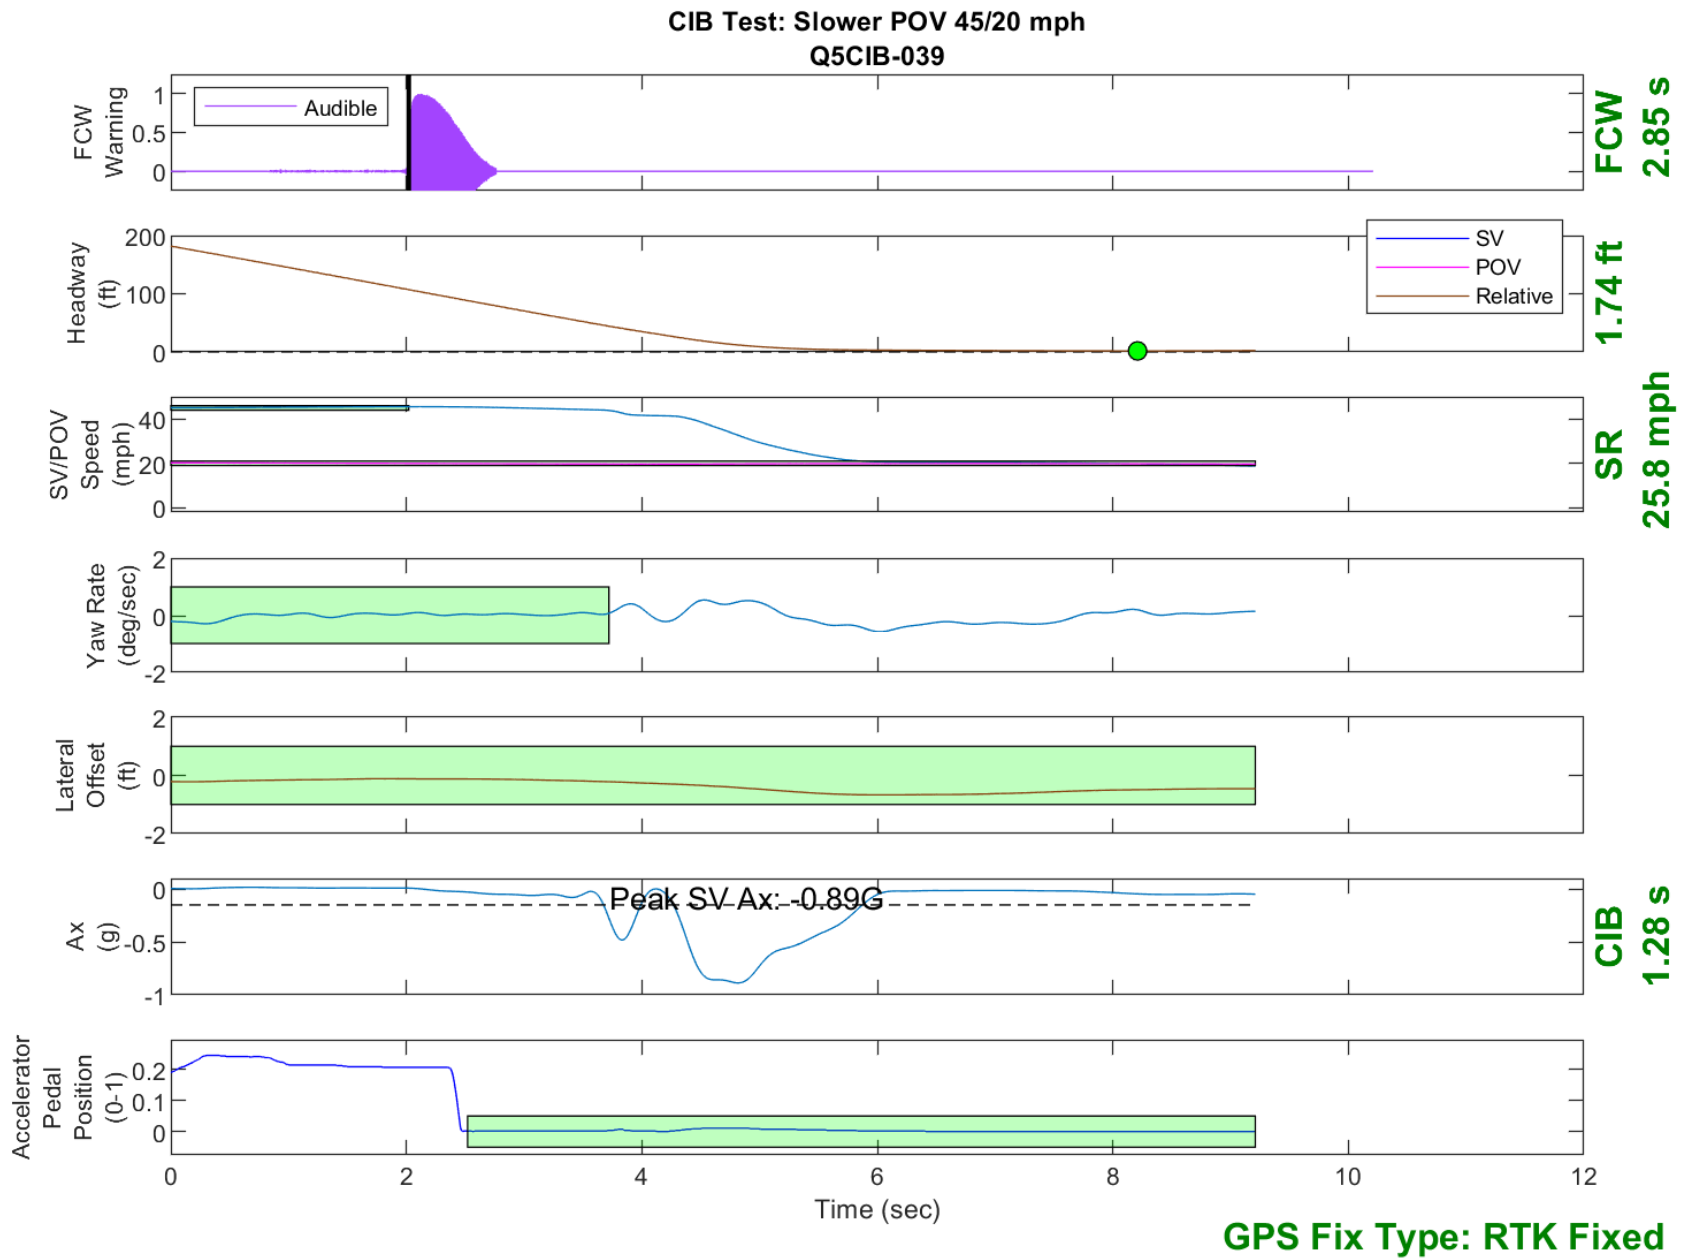


Figure D28. Time History for CIB Run 39, SV Encounters Slower POV, SV 45 mph, POV 20 mph

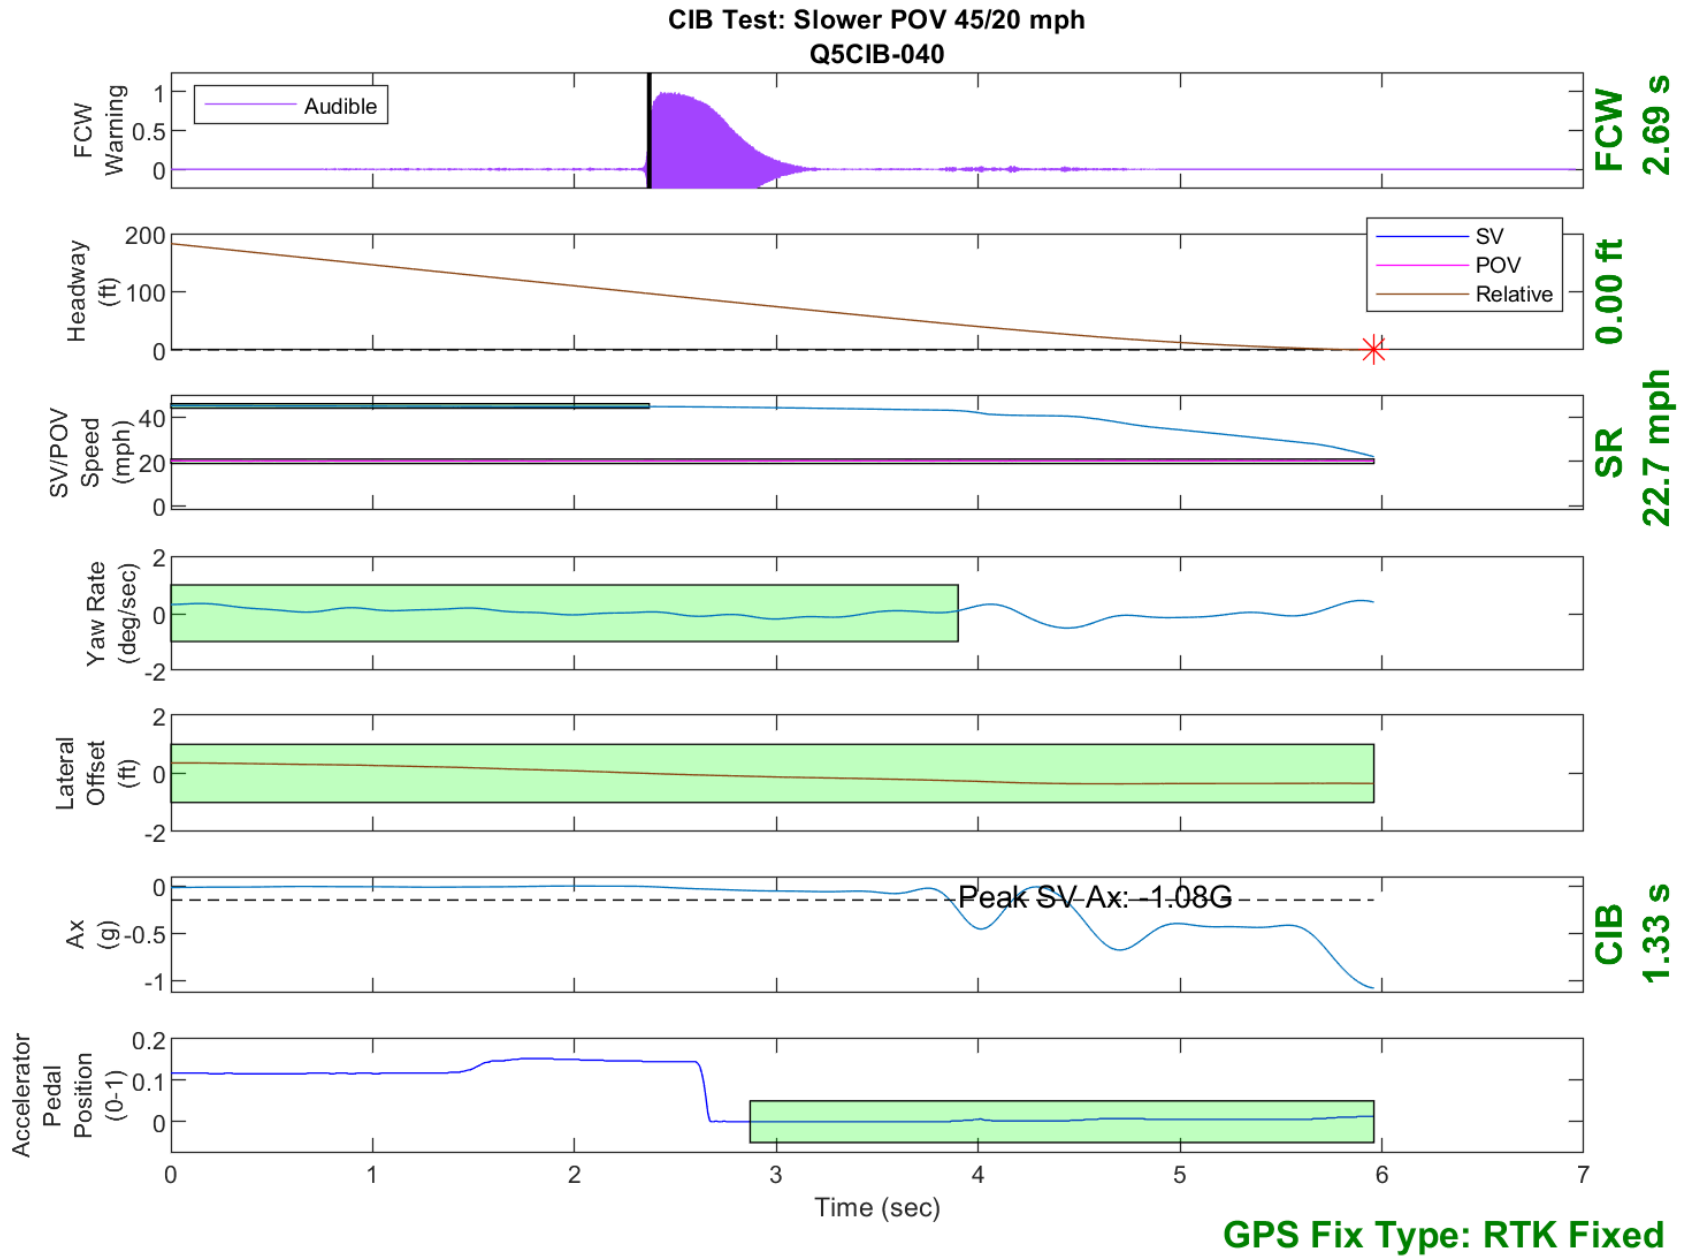


Figure D29. Time History for CIB Run 40, SV Encounters Slower POV, SV 45 mph, POV 20 mph

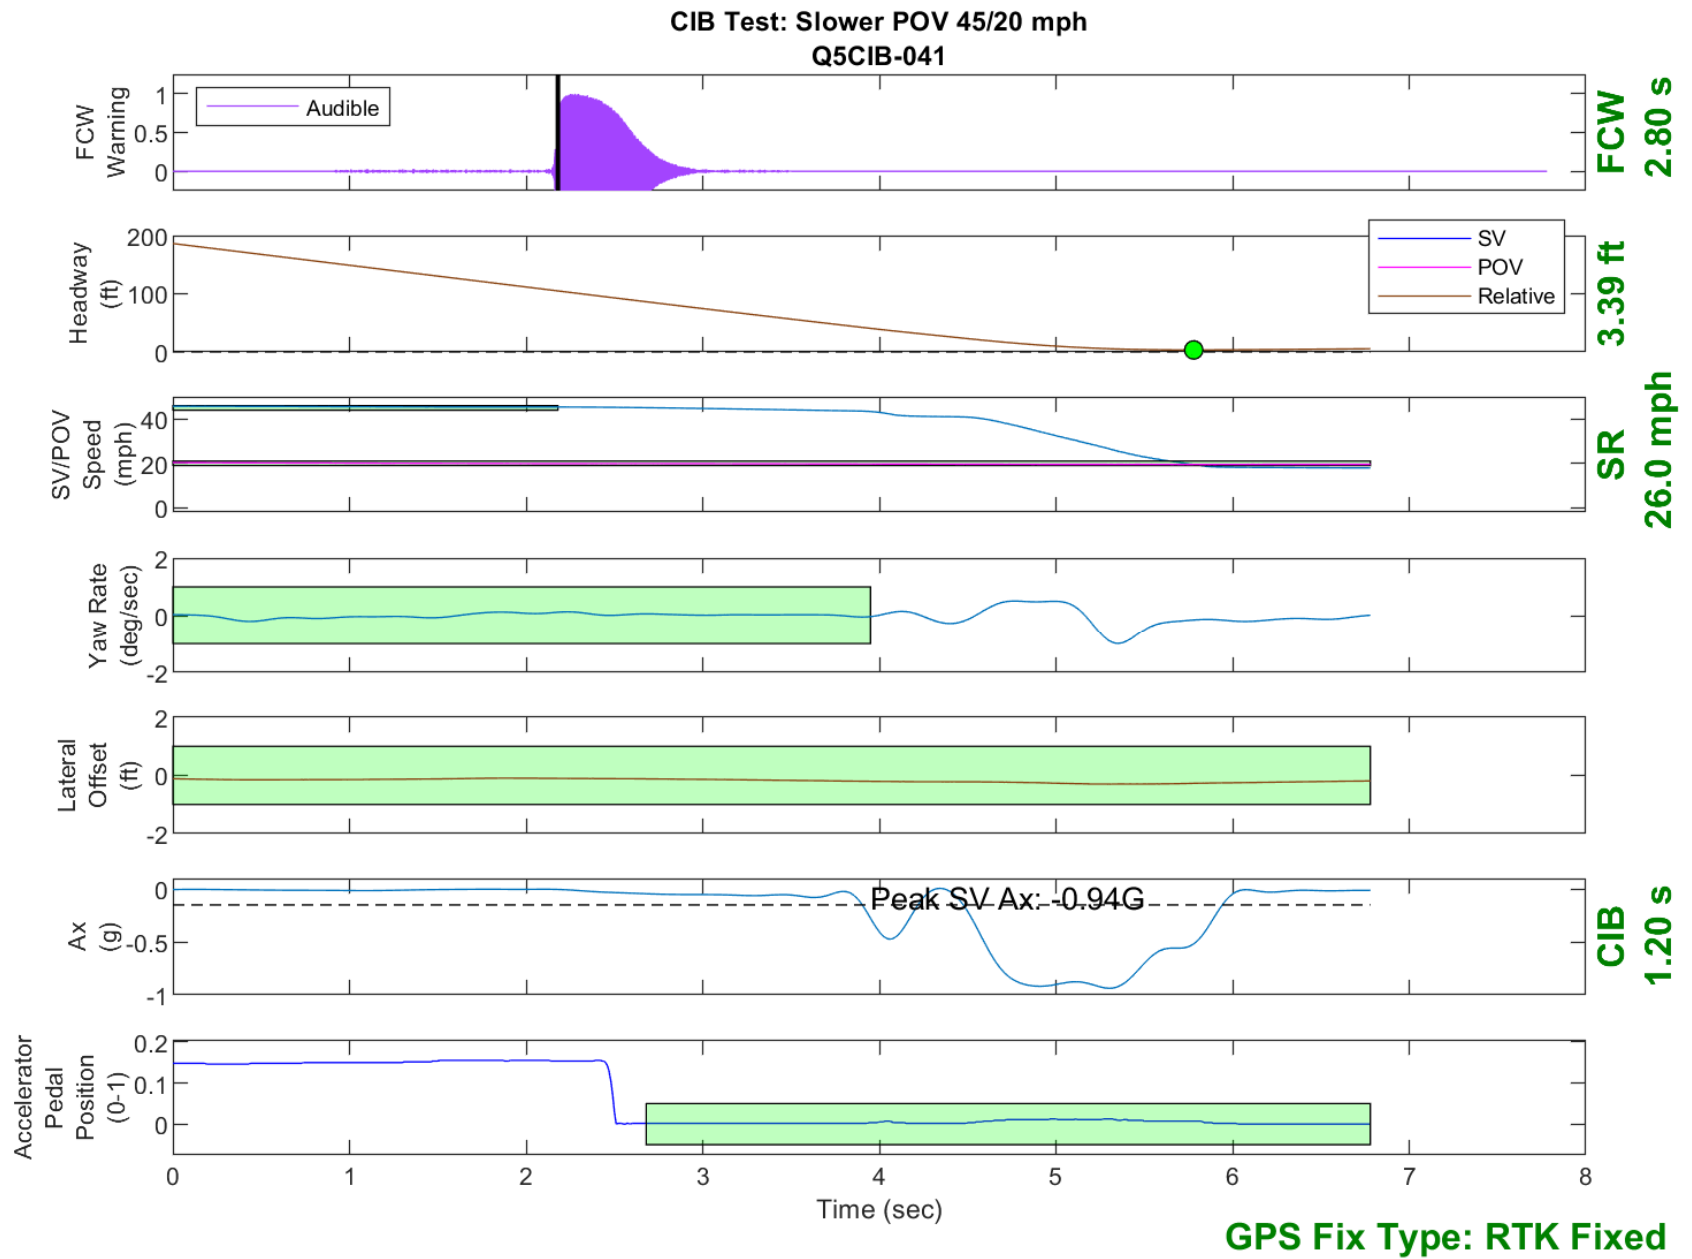


Figure D30. Time History for CIB Run 41, SV Encounters Slower POV, SV 45 mph, POV 20 mph

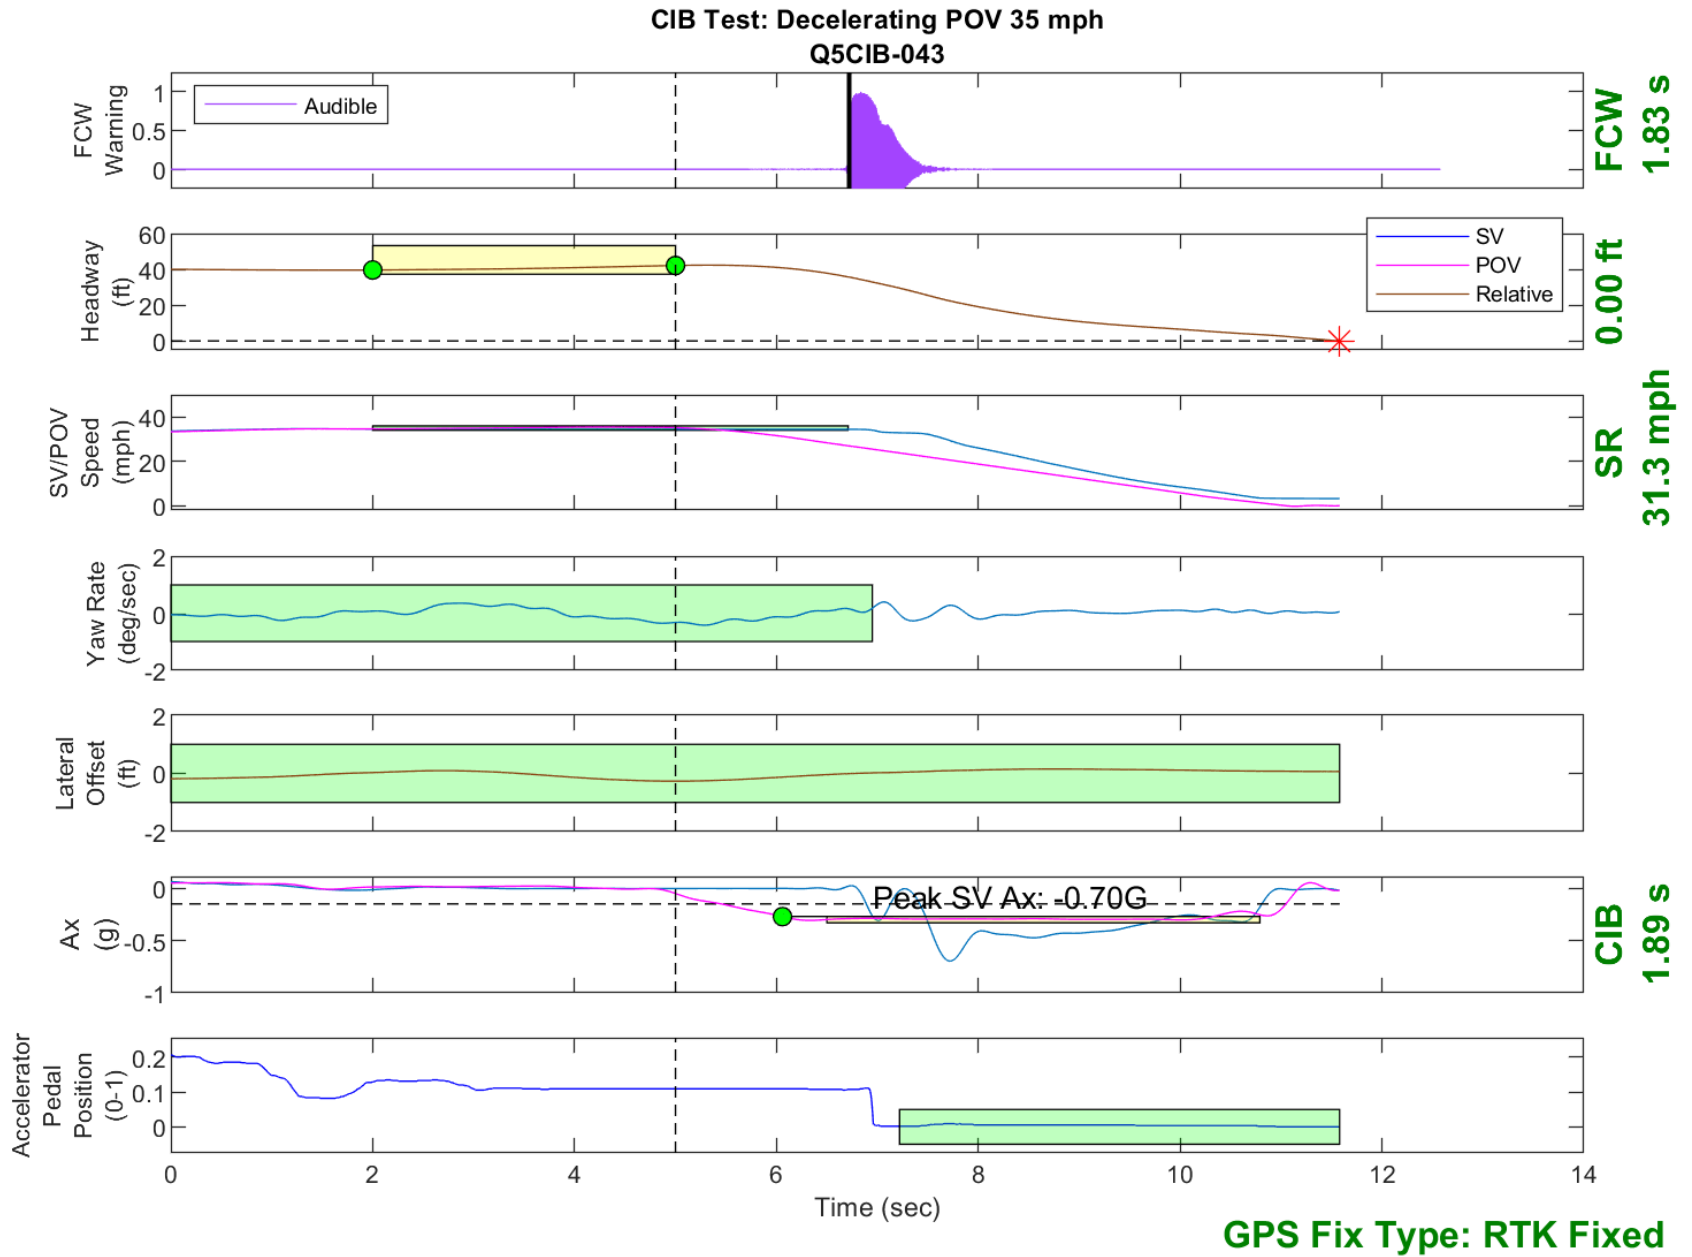


Figure D31. Time History for CIB Run 43, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

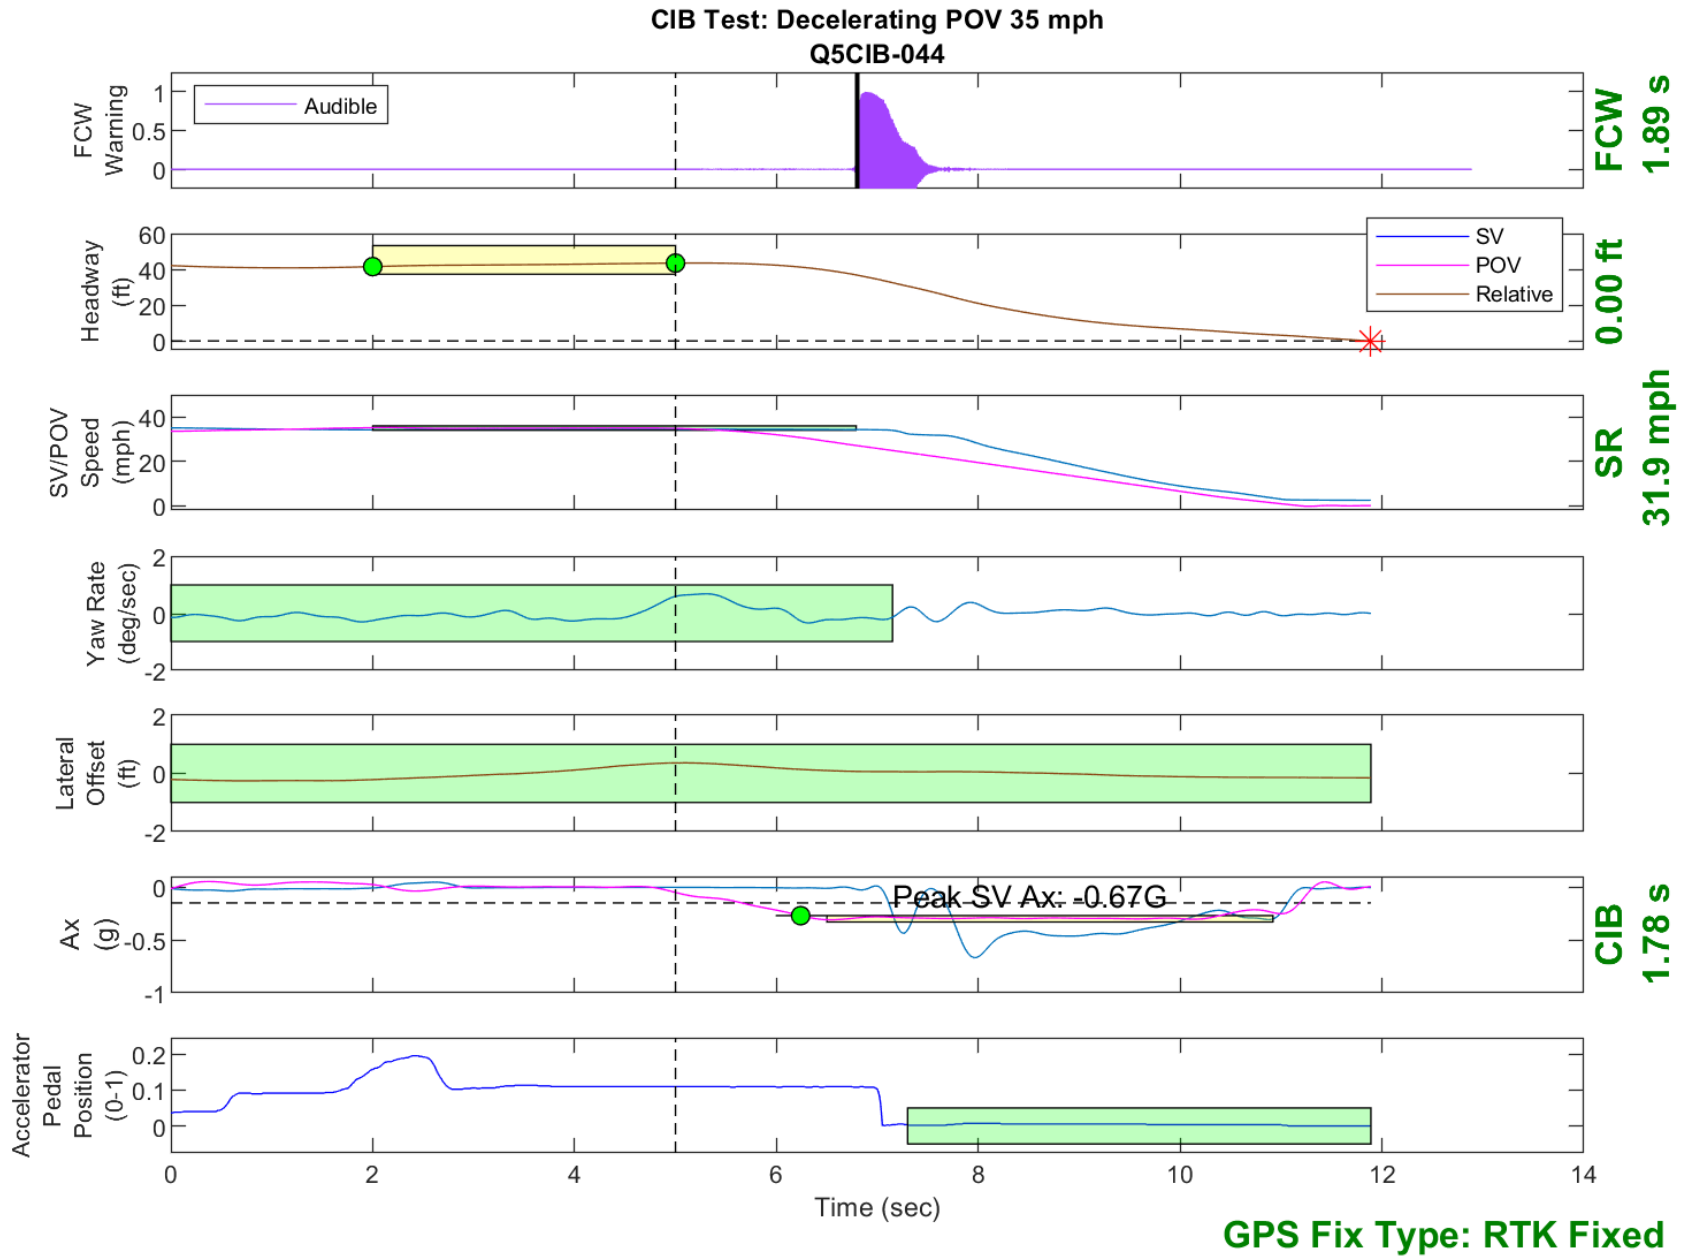


Figure D32. Time History for CIB Run 44, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

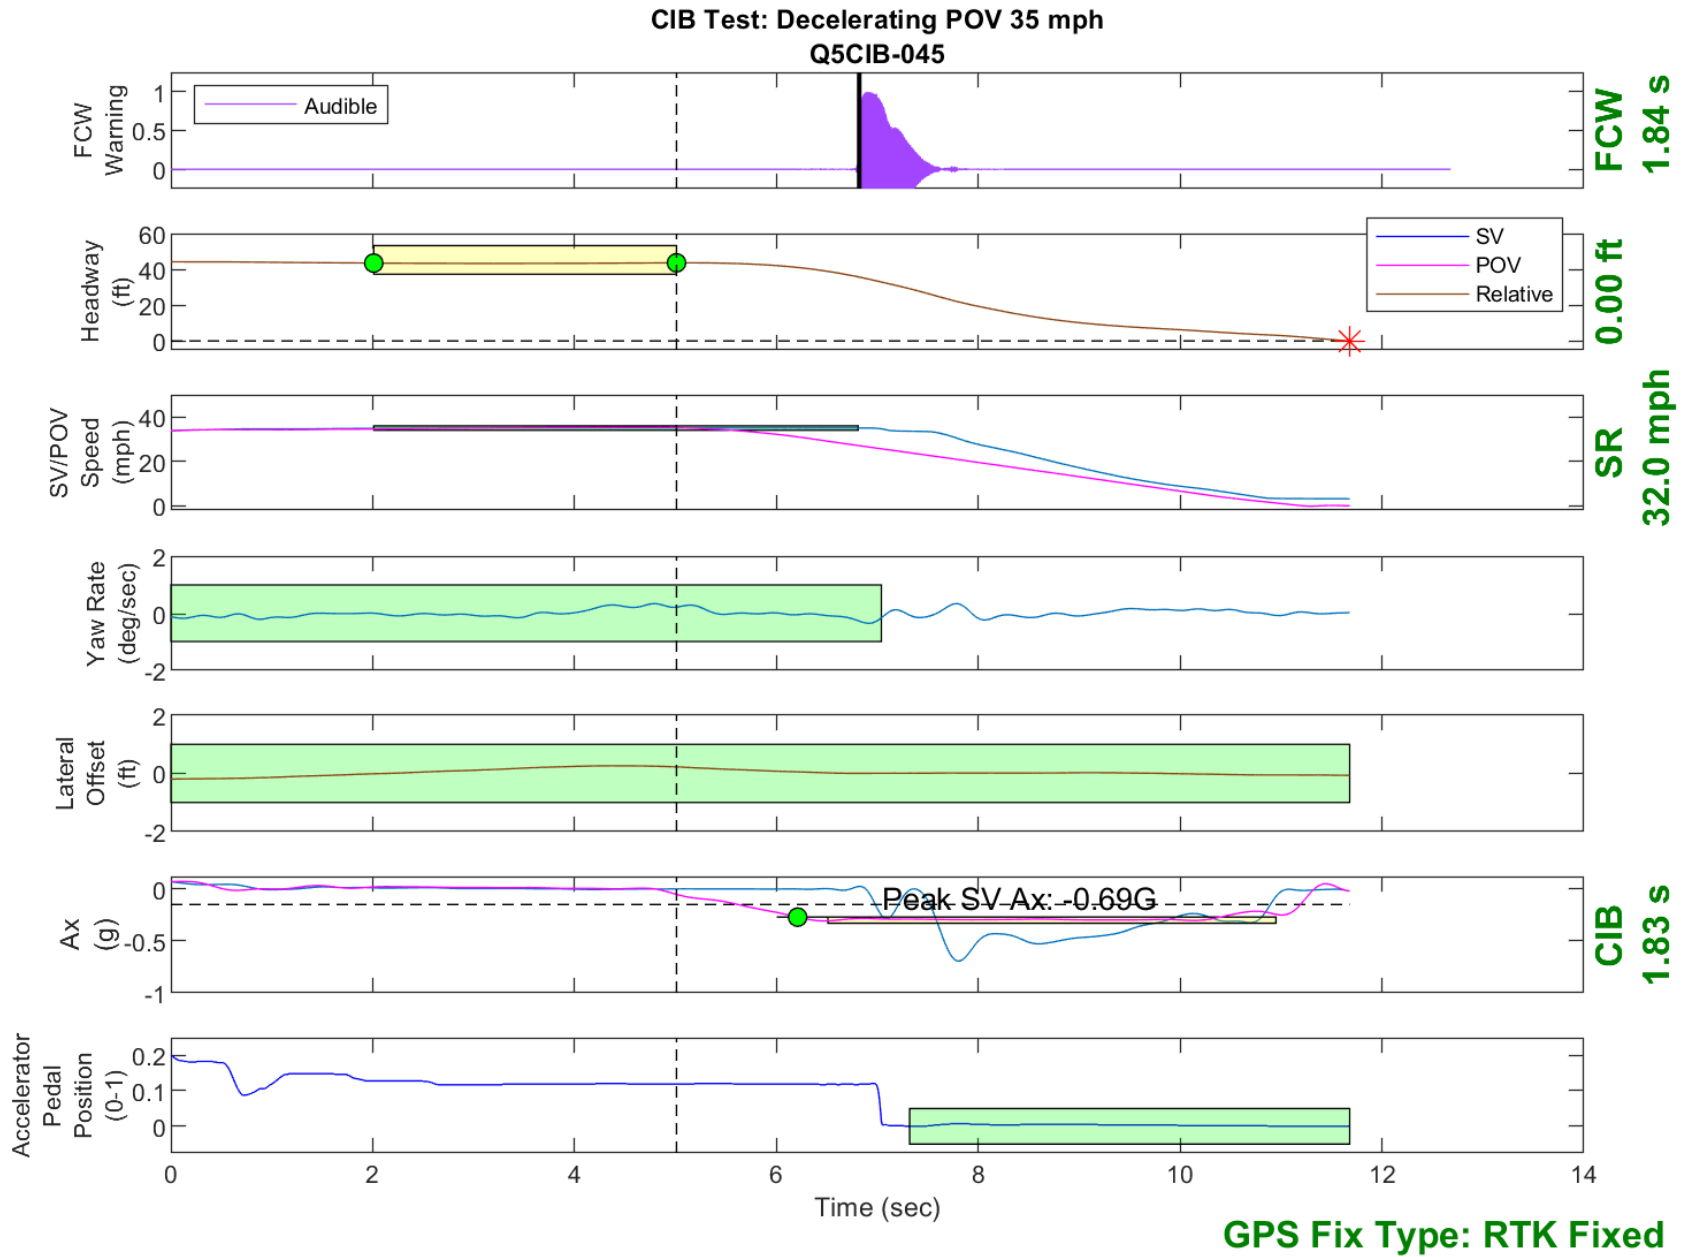


Figure D33. Time History for CIB Run 45, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

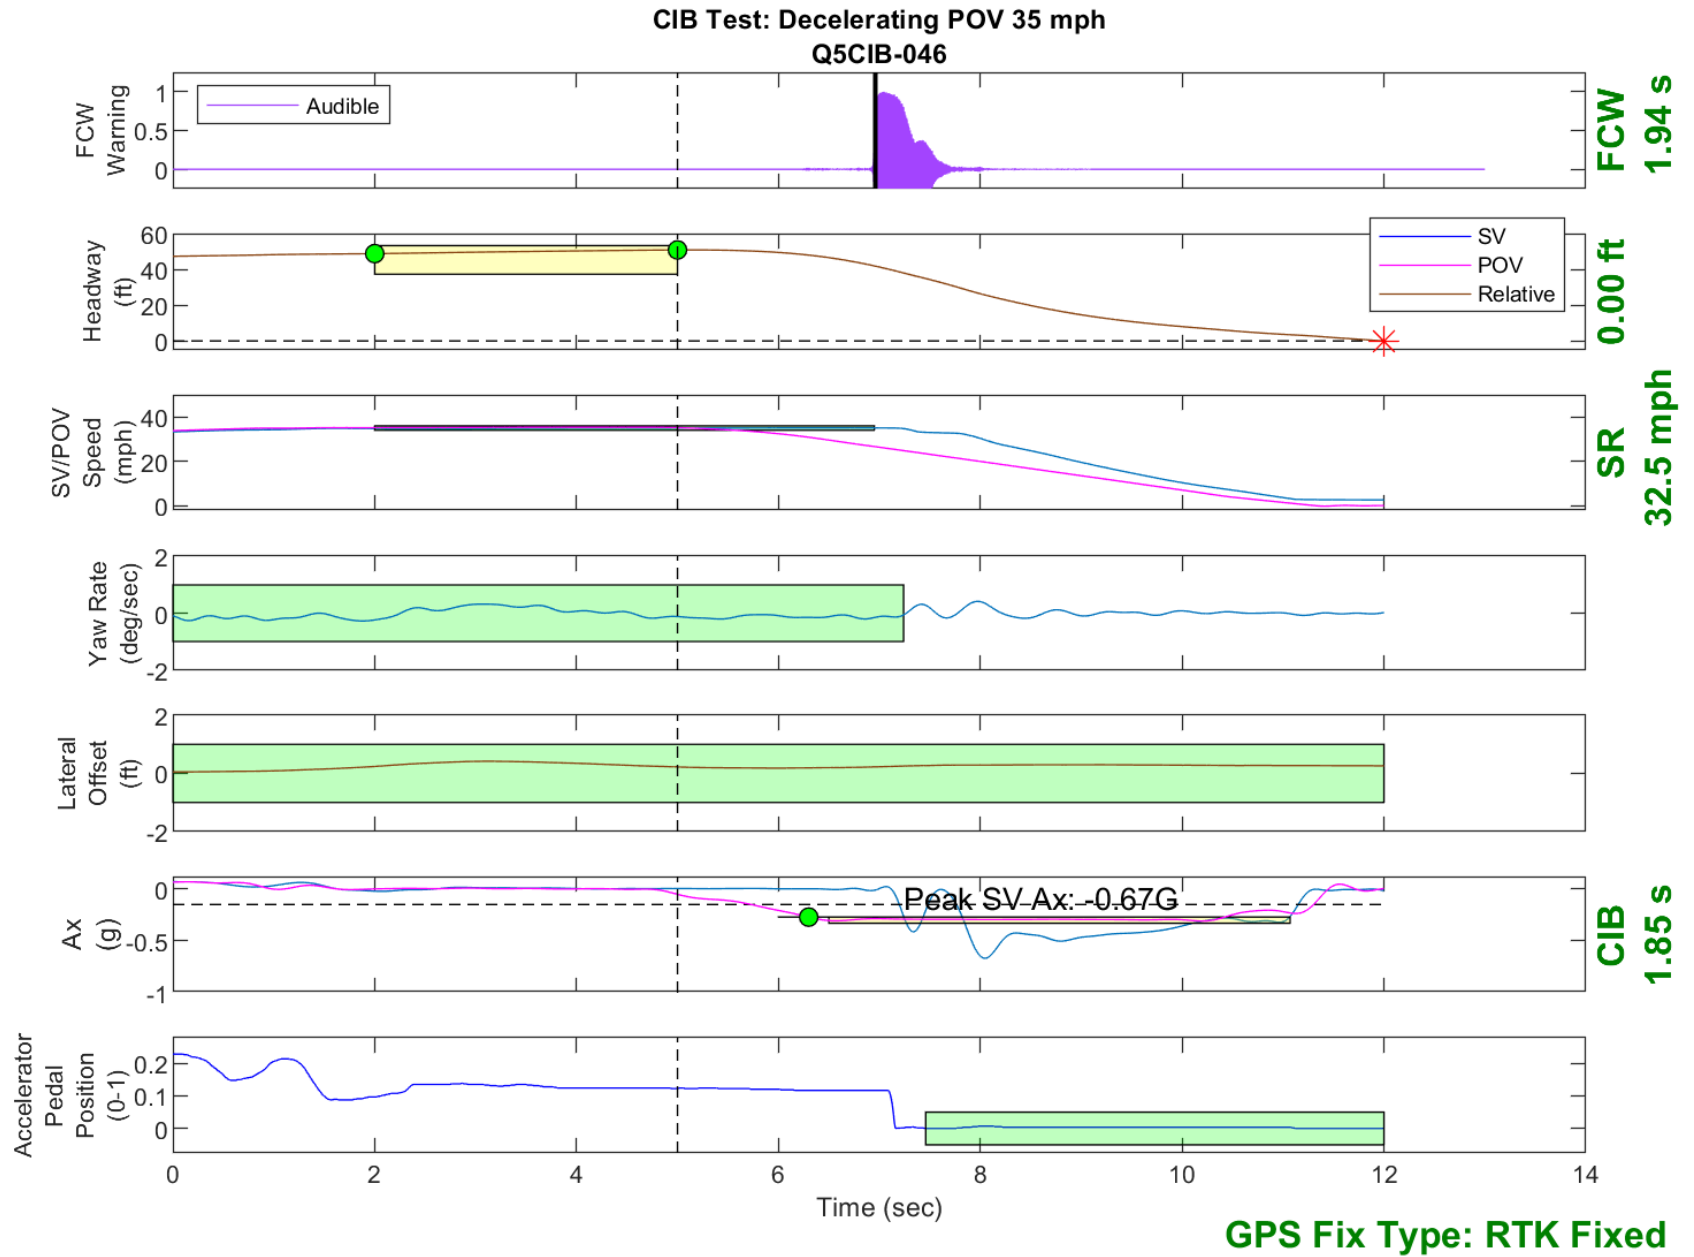


Figure D34. Time History for CIB Run 46, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

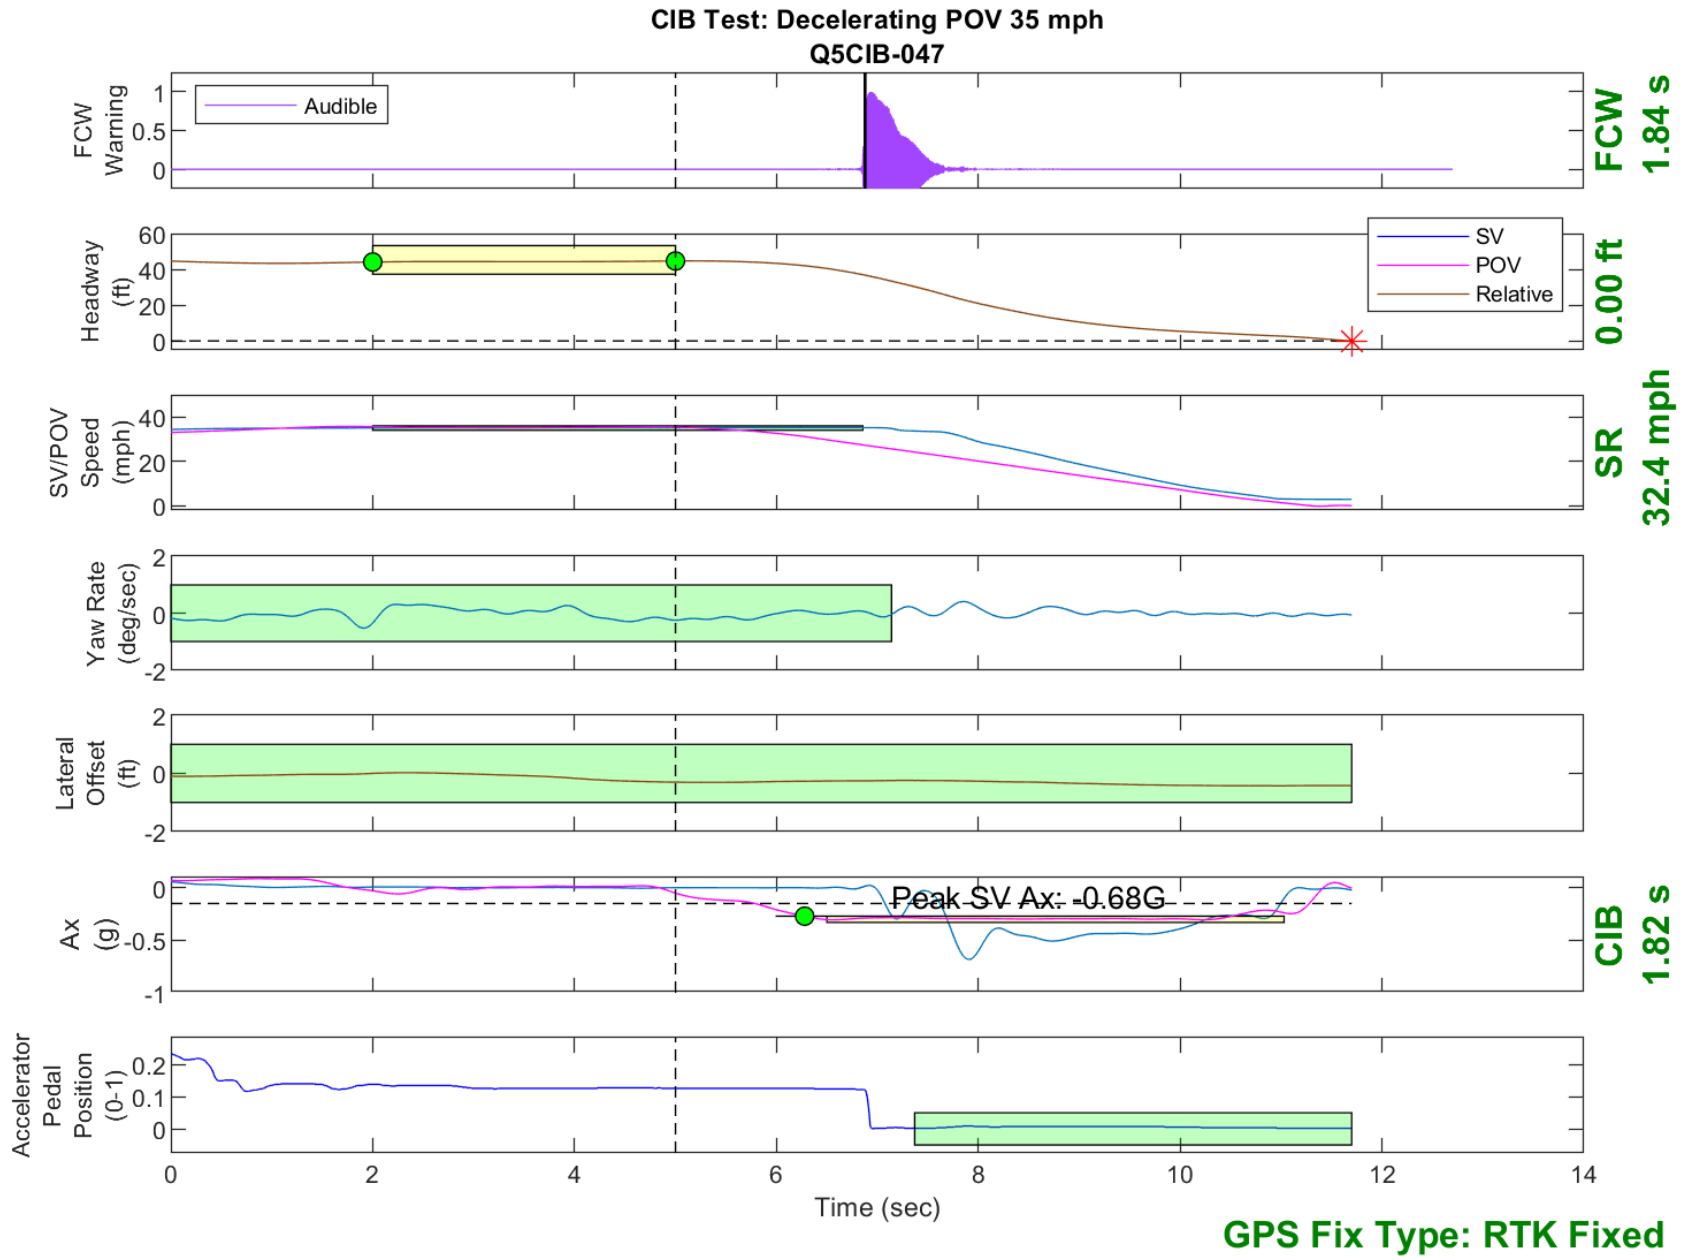


Figure D35. Time History for CIB Run 47, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

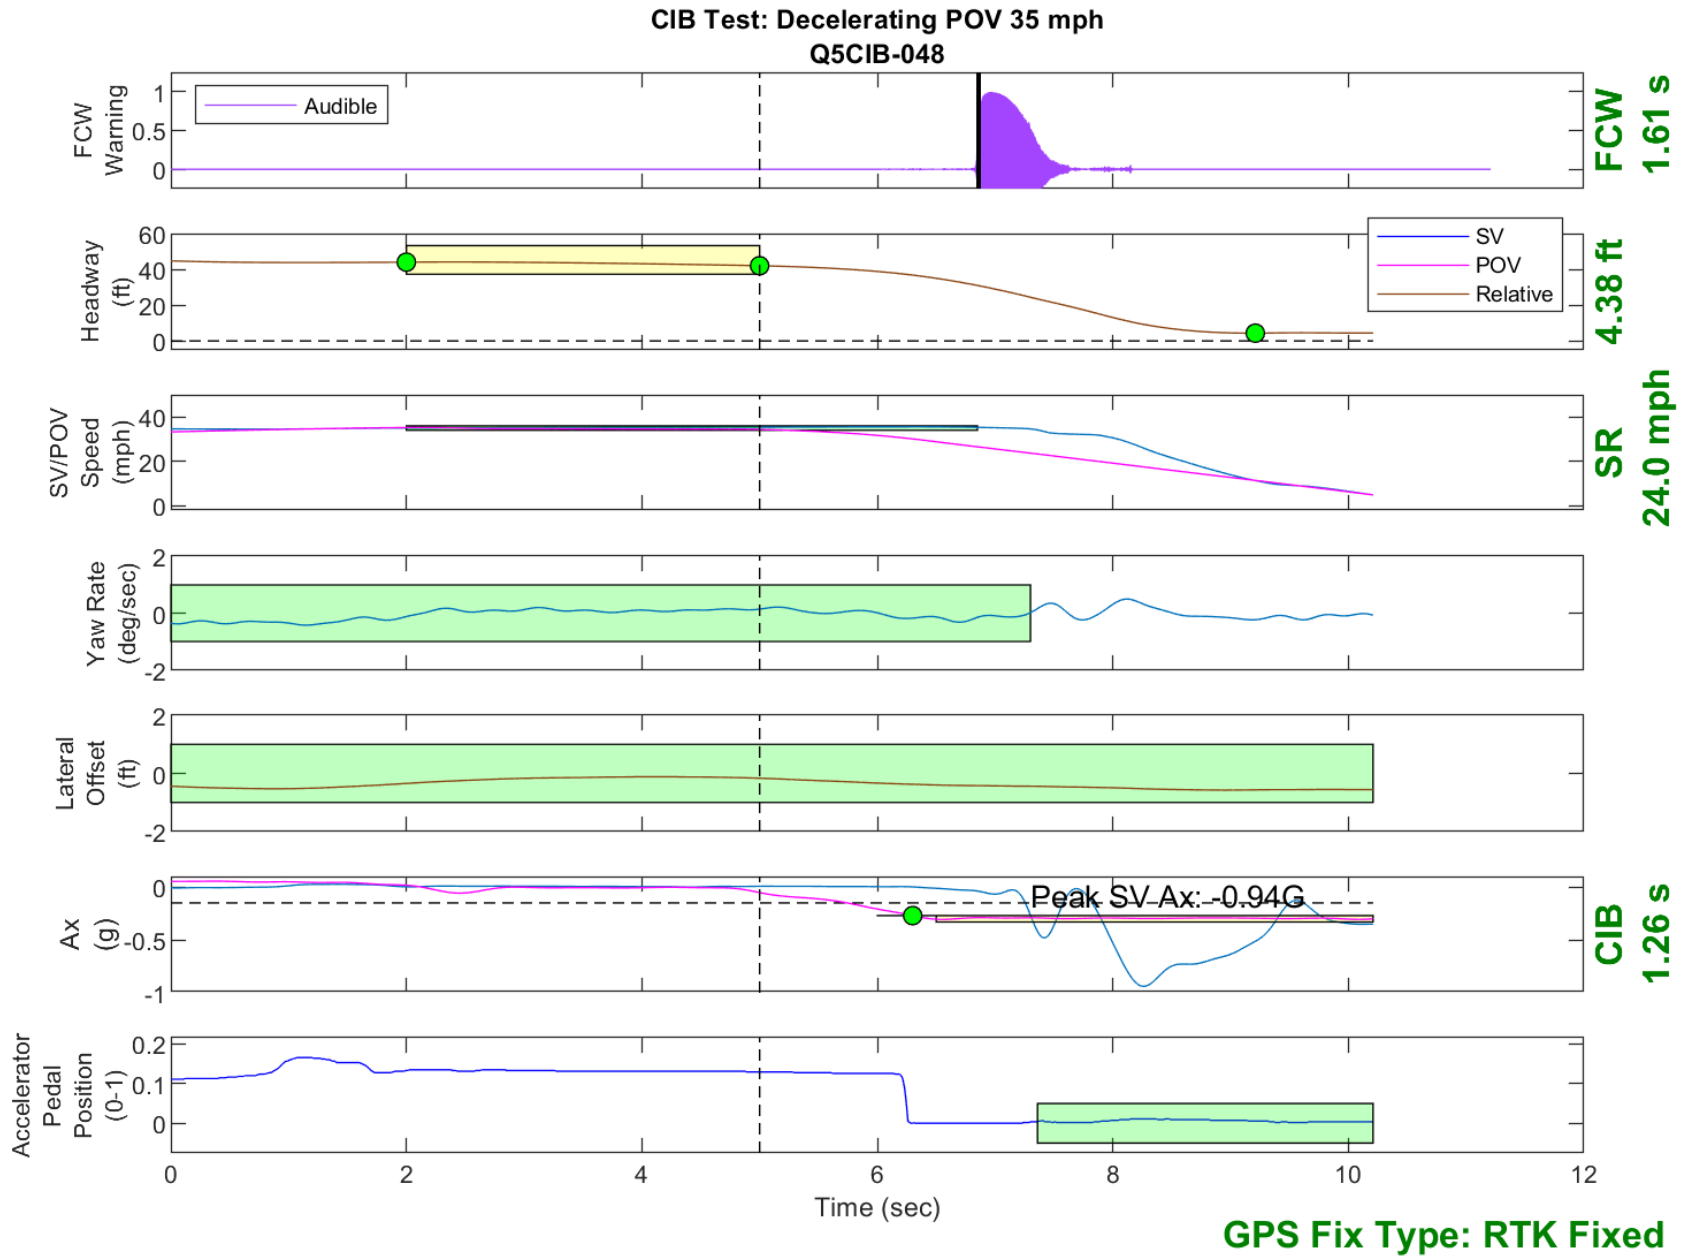


Figure D36. Time History for CIB Run 48, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

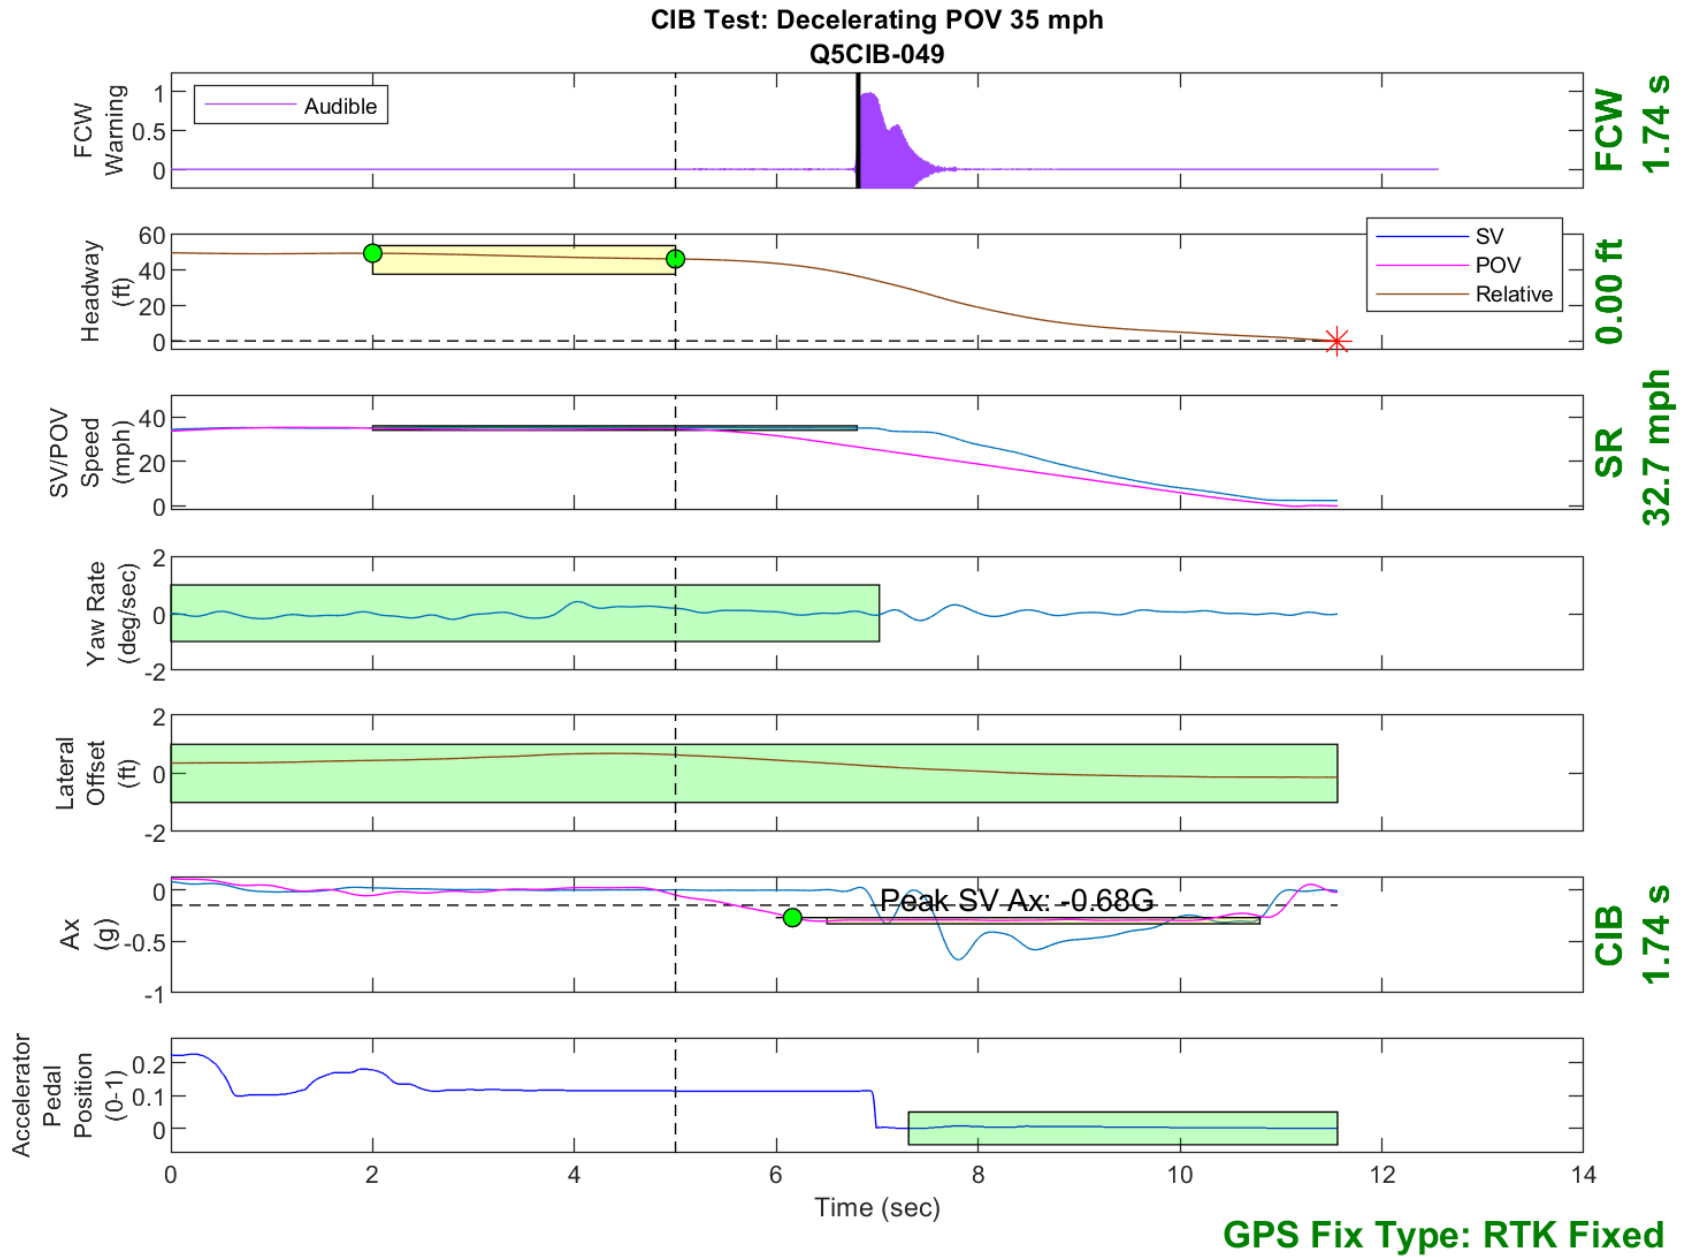


Figure D37. Time History for CIB Run 49, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

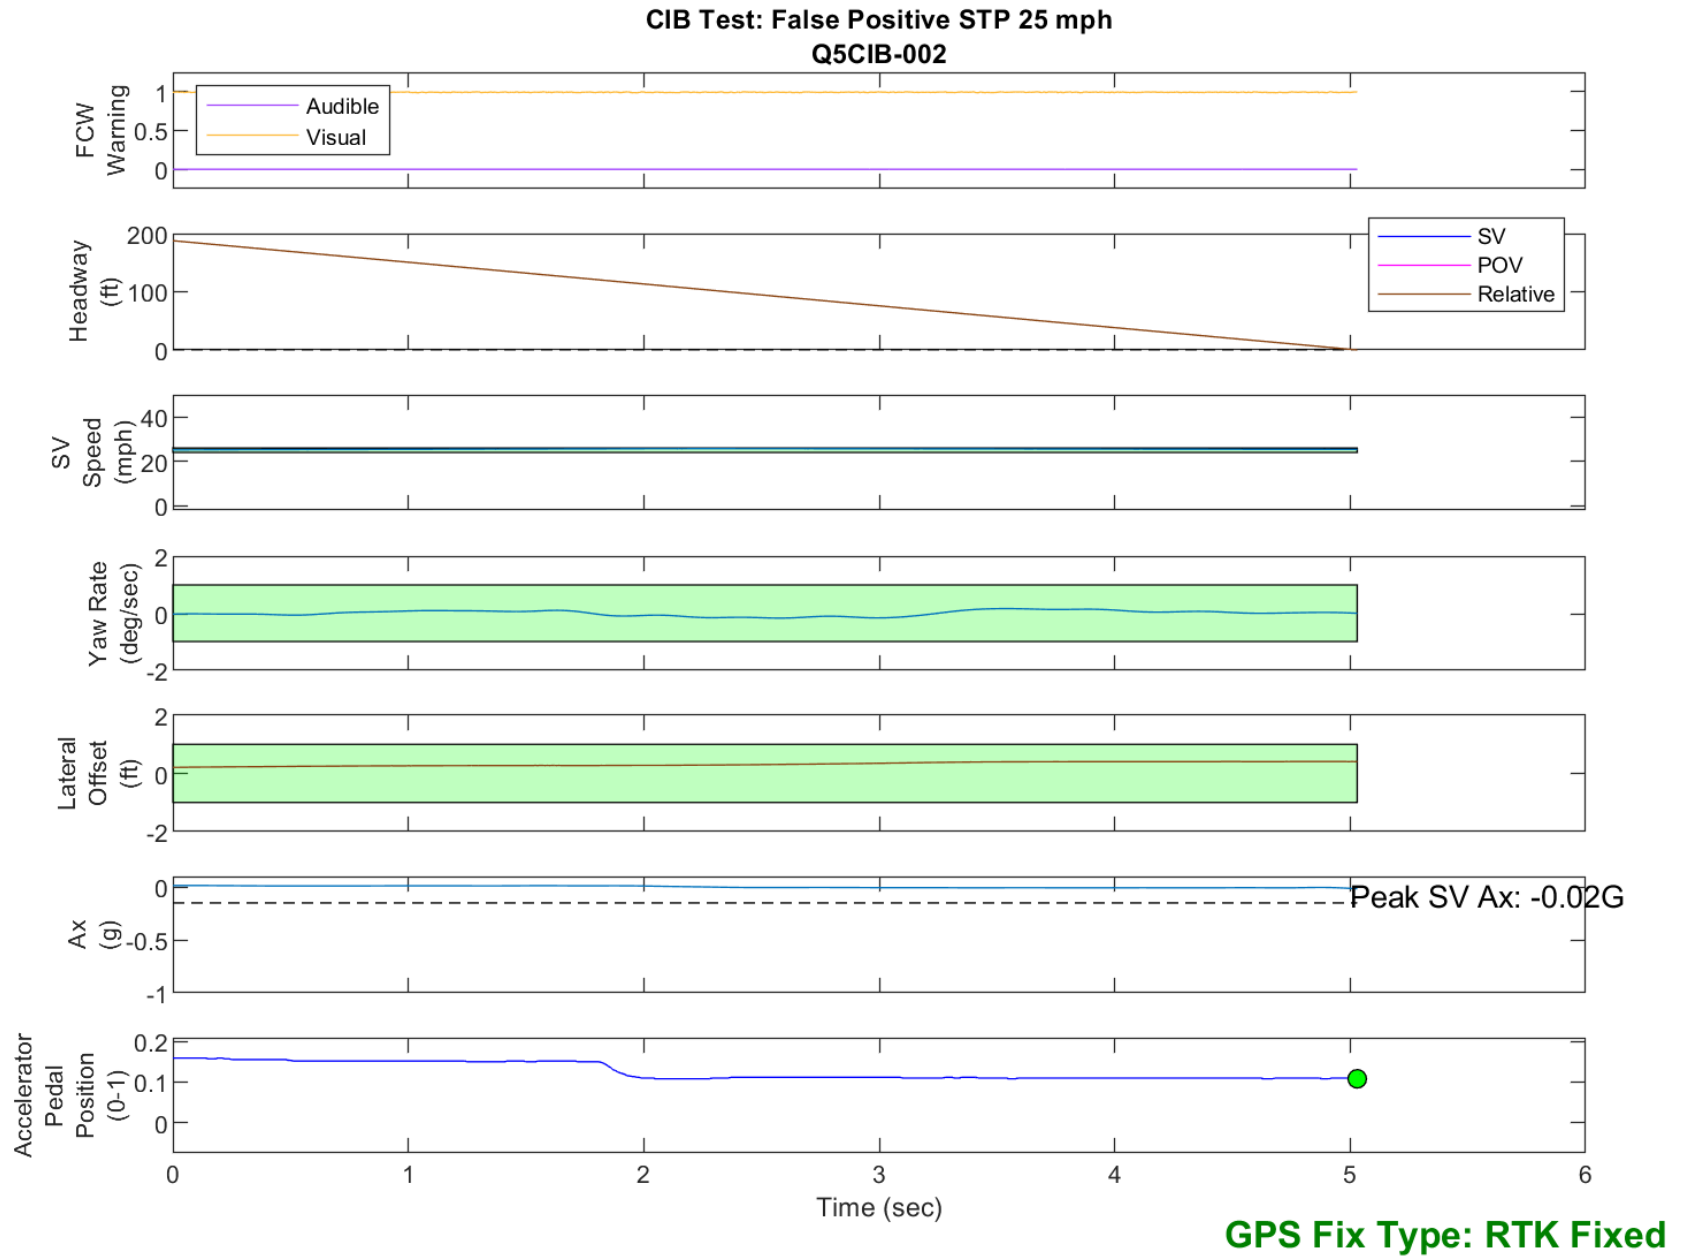


Figure D38. Time History for CIB Run 2, SV Encounters Steel Trench Plate, SV 25 mph

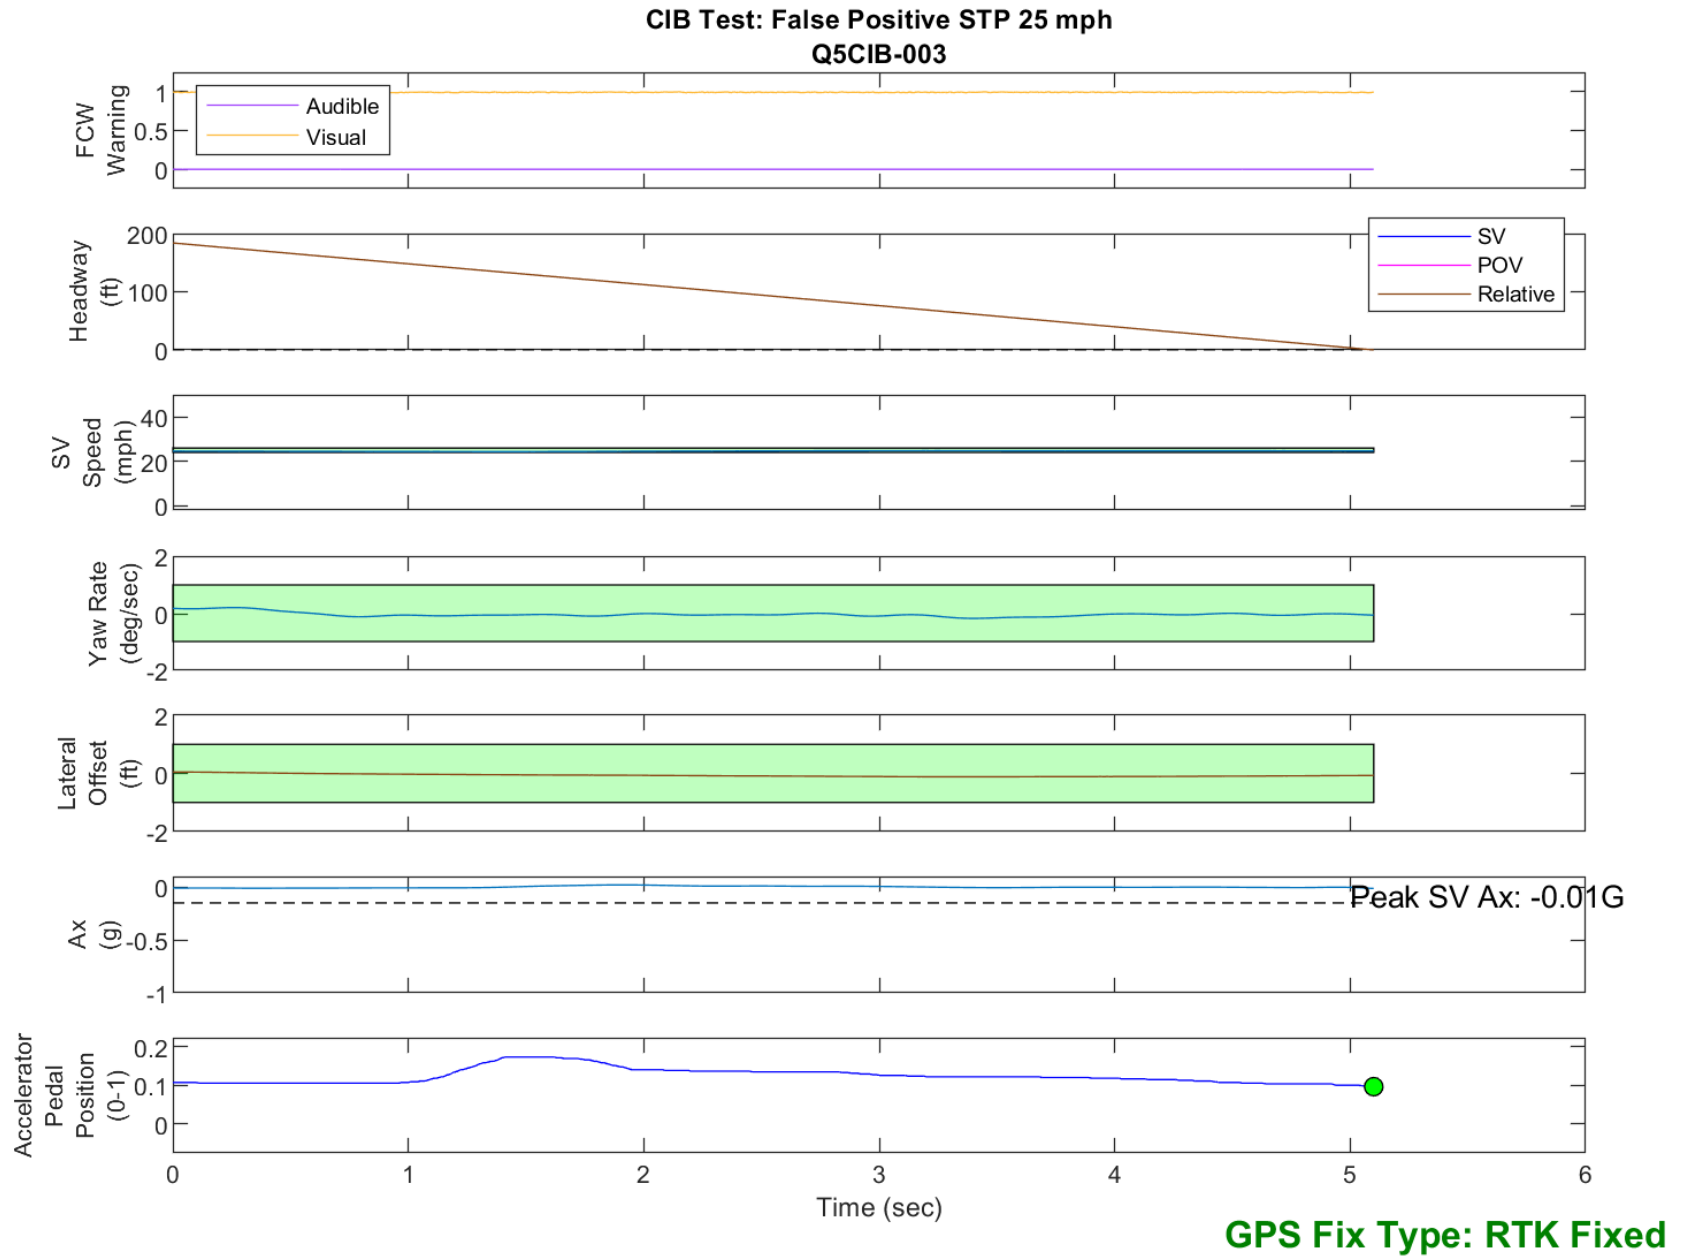


Figure D39. Time History for CIB Run 3, SV Encounters Steel Trench Plate, SV 25 mph

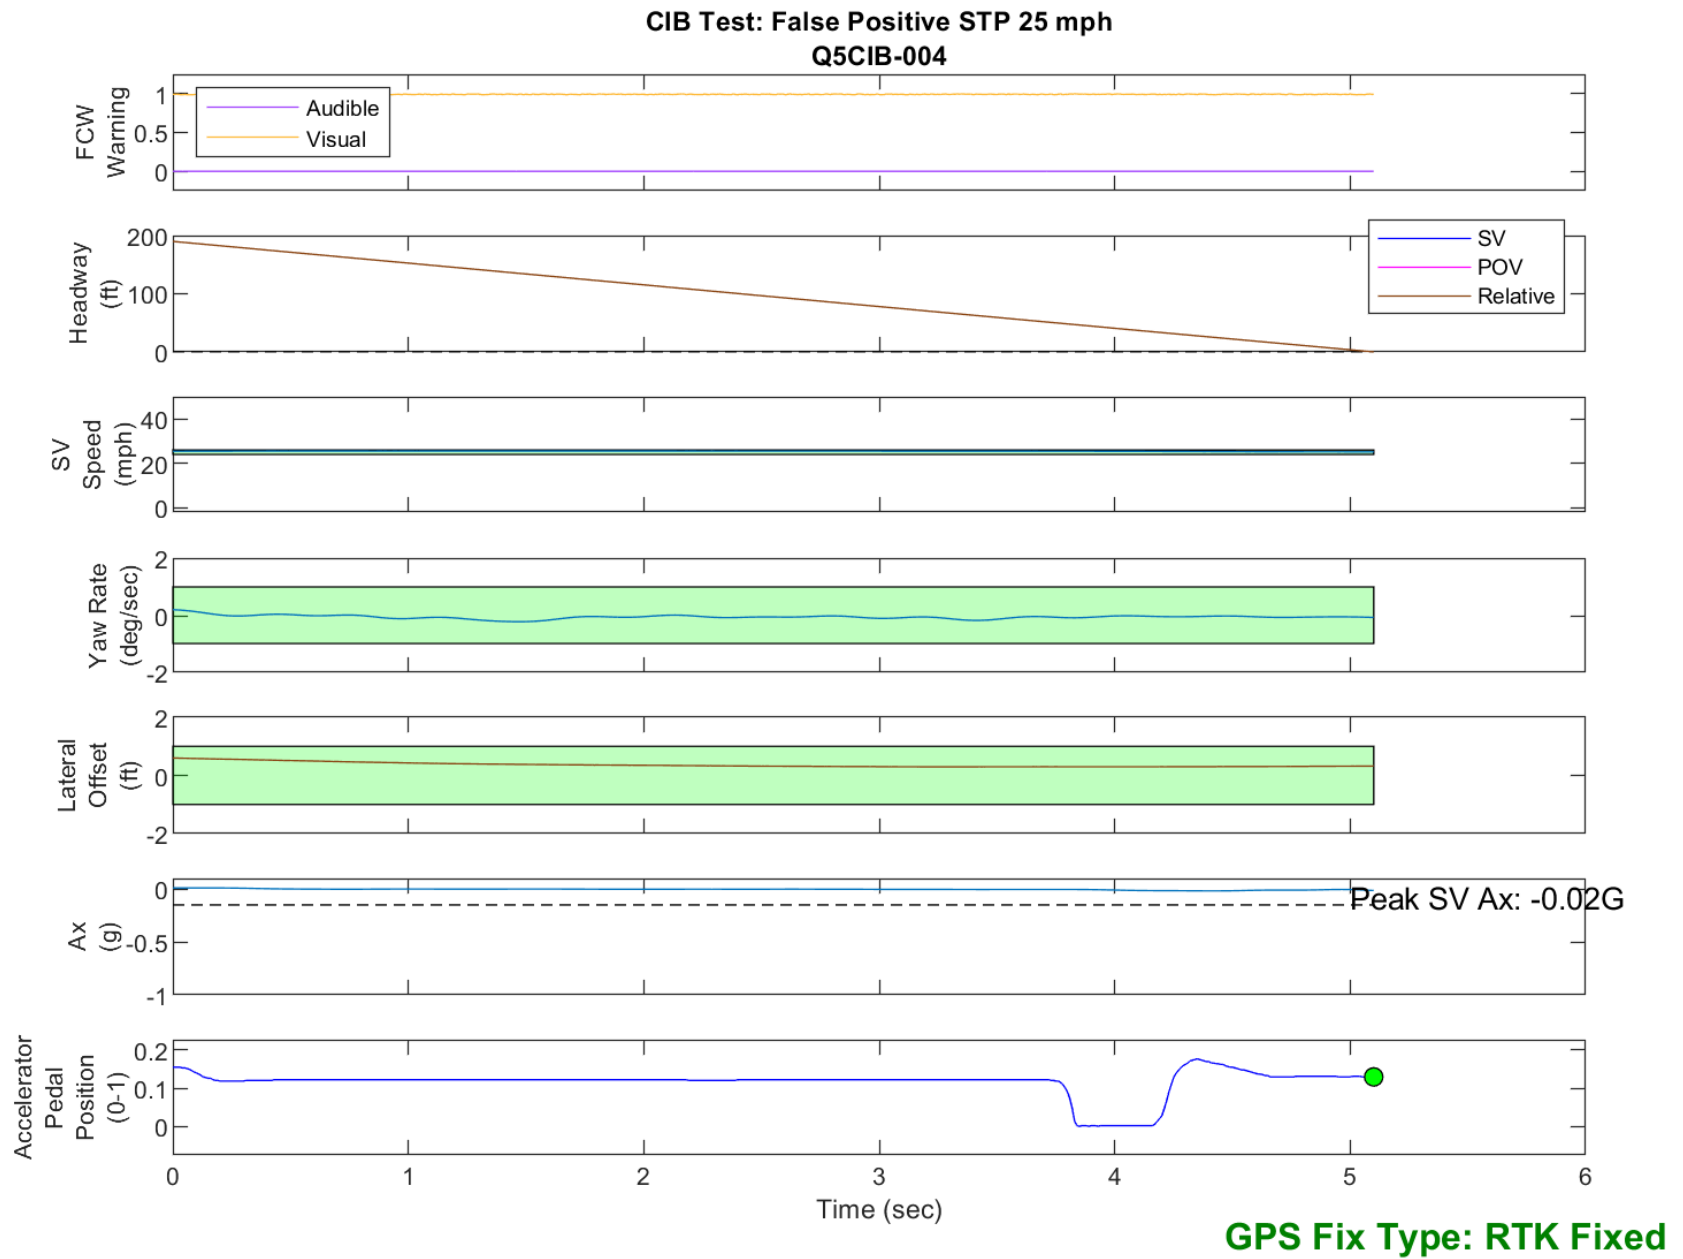


Figure D40. Time History for CIB Run 4, SV Encounters Steel Trench Plate, SV 25 mph

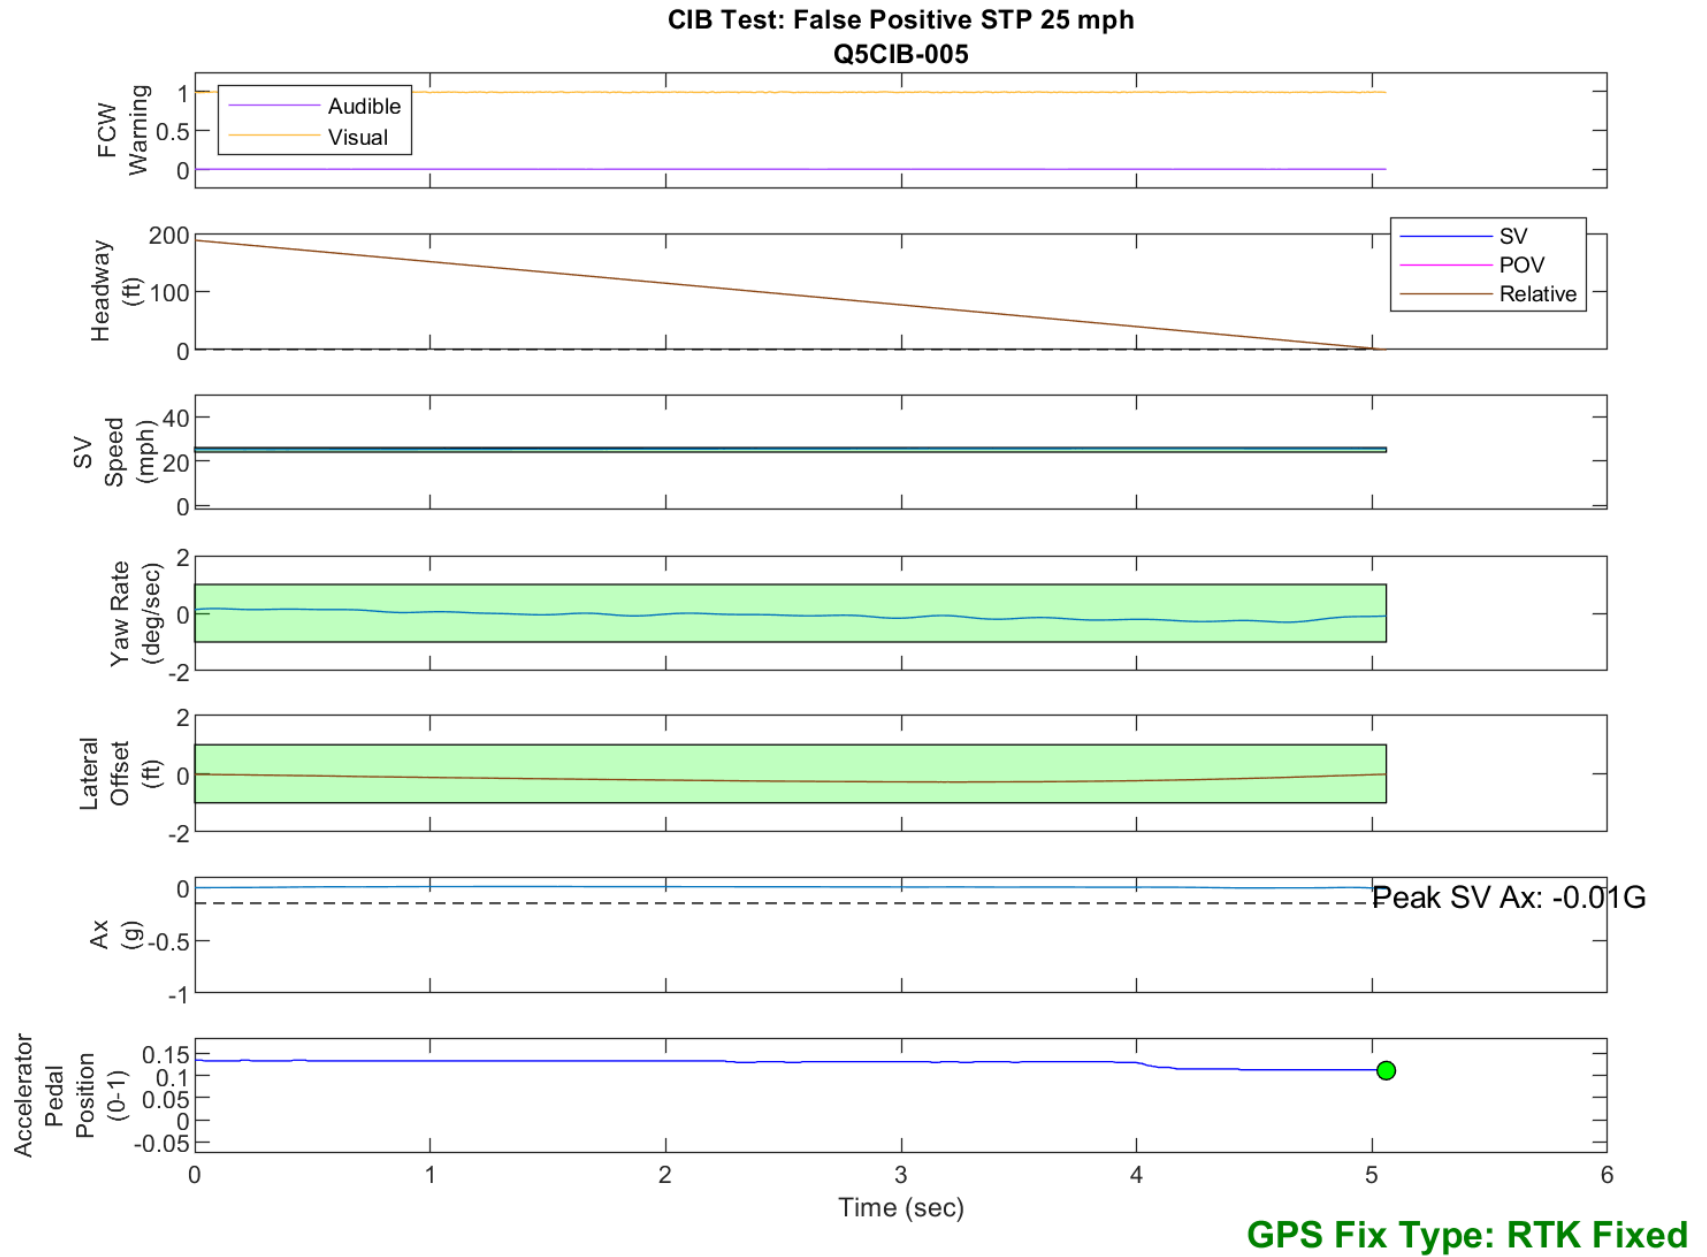


Figure D41. Time History for CIB Run 5, SV Encounters Steel Trench Plate, SV 25 mph

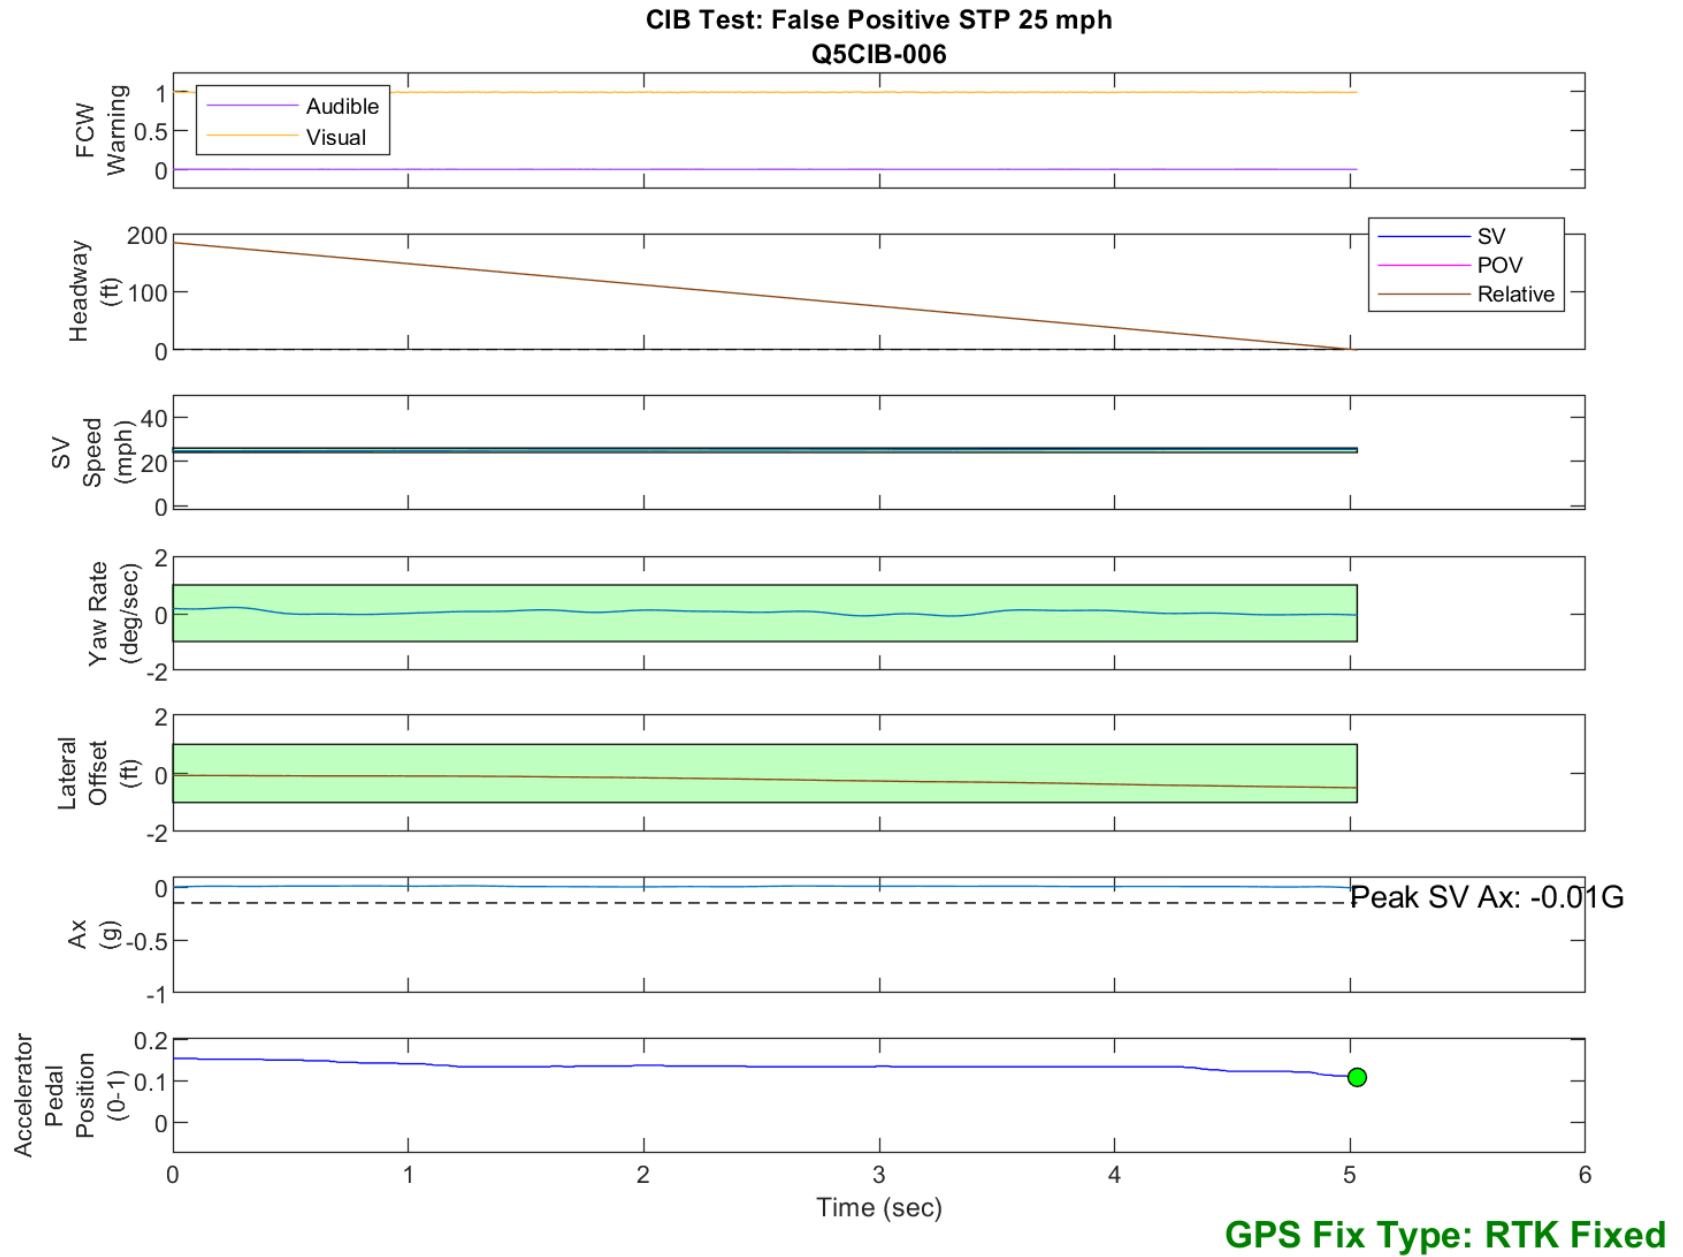


Figure D42. Time History for CIB Run 6, SV Encounters Steel Trench Plate, SV 25 mph

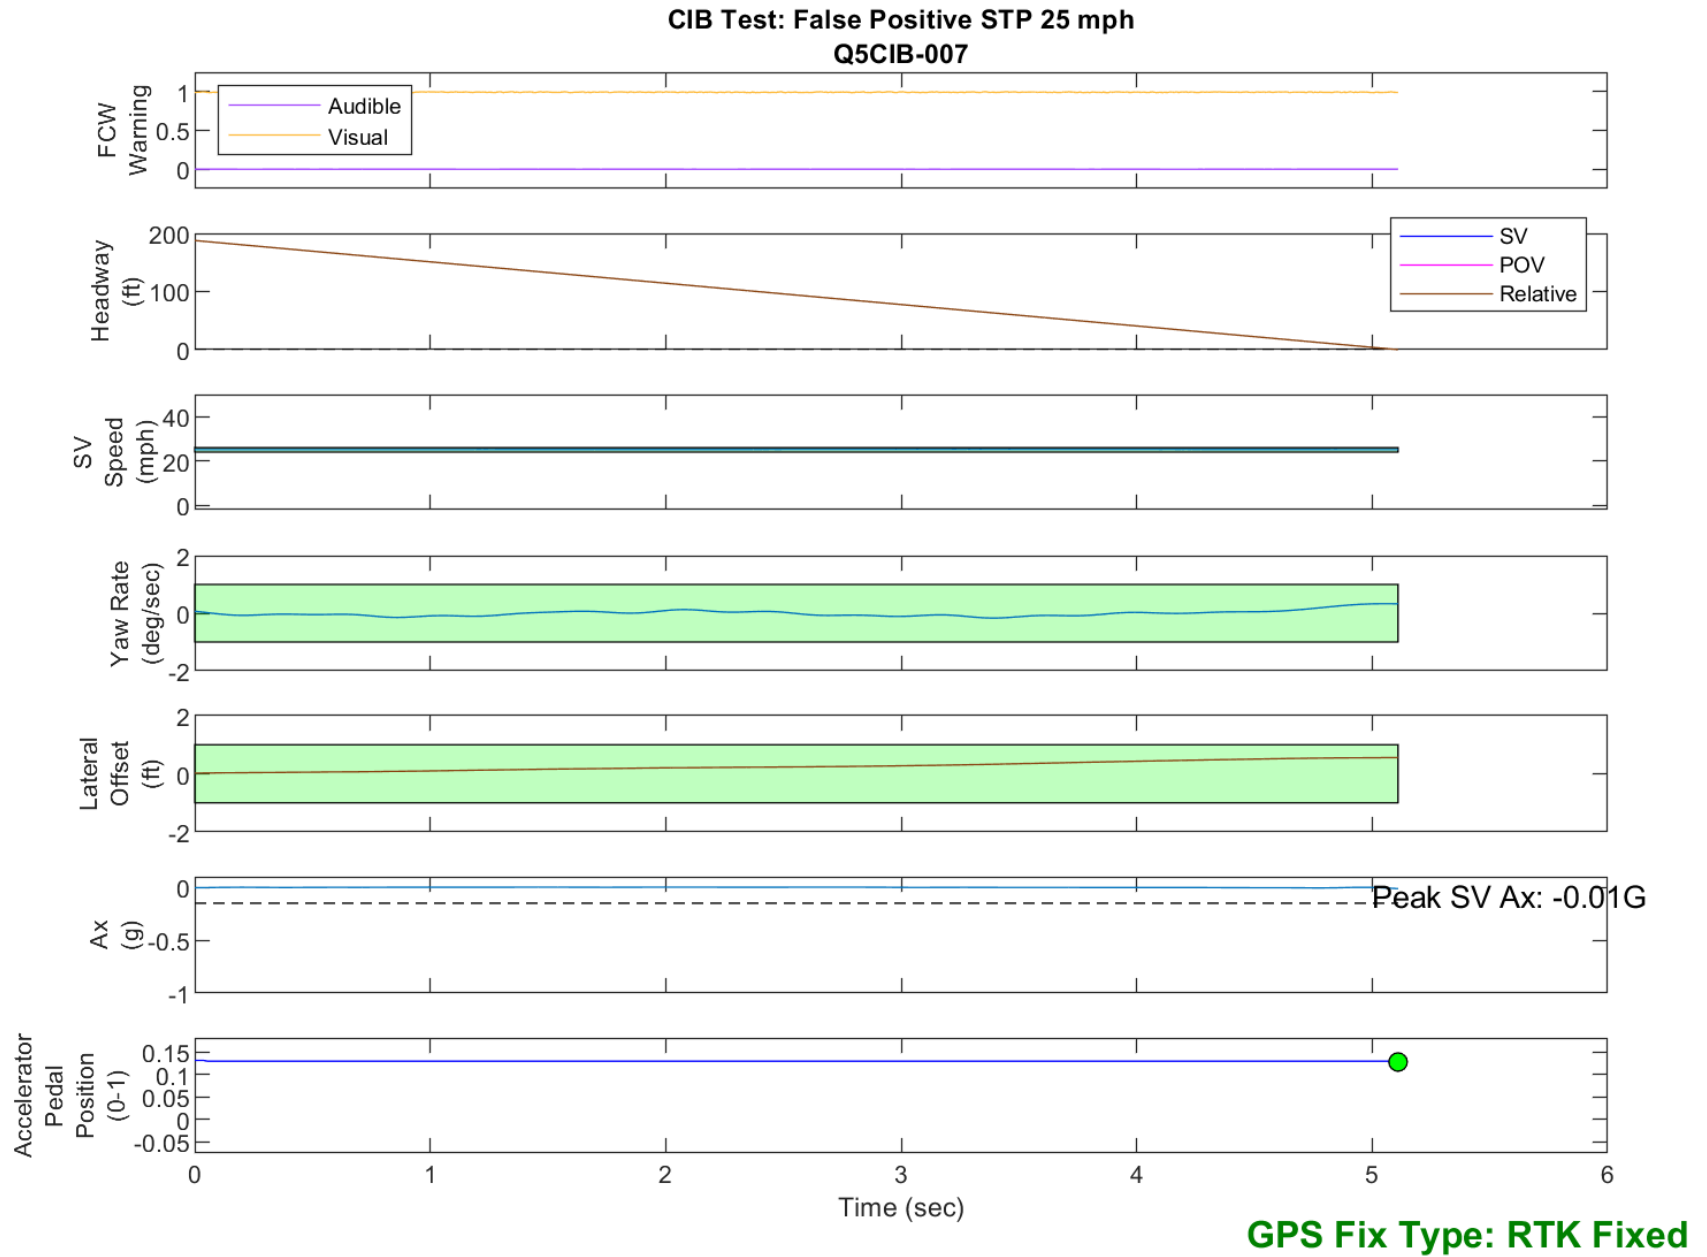


Figure D43. Time History for CIB Run 7, SV Encounters Steel Trench Plate, SV 25 mph

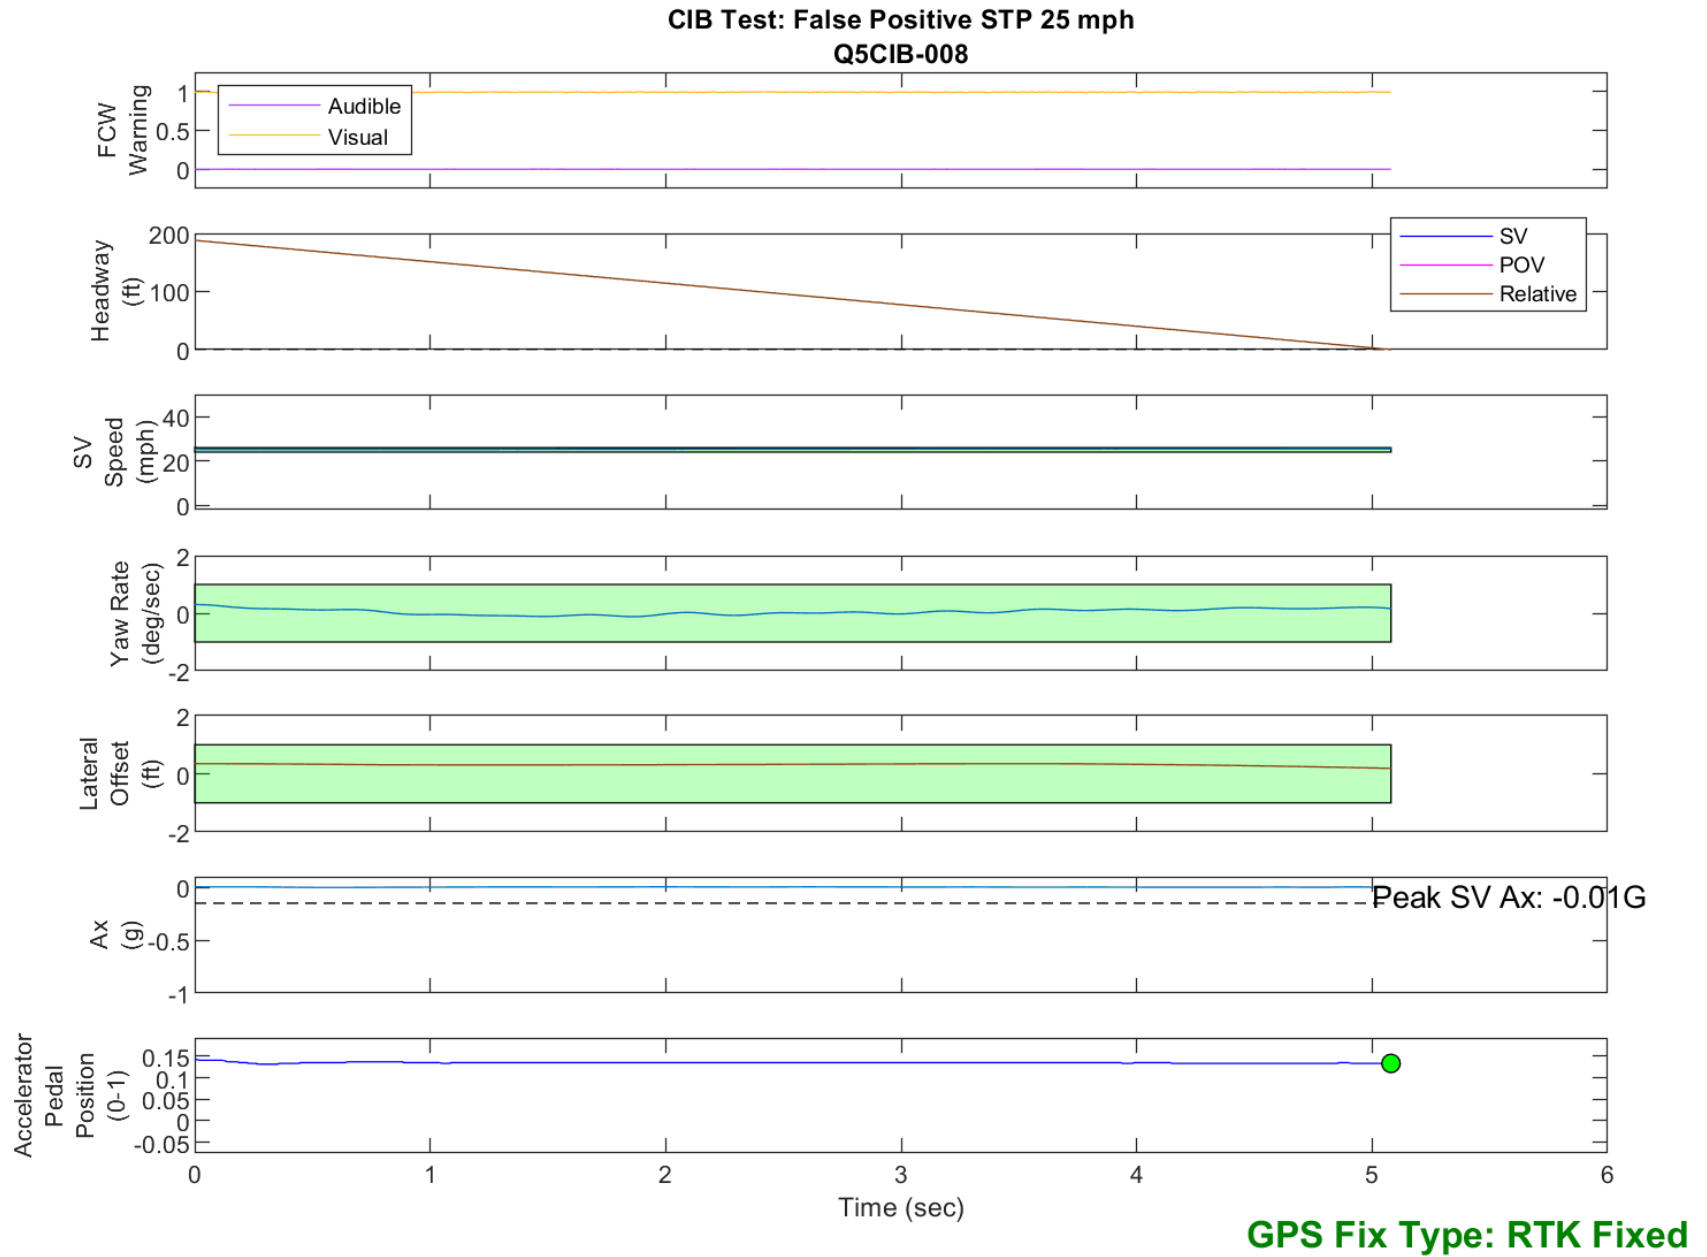


Figure D44. Time History for CIB Run 8, SV Encounters Steel Trench Plate, SV 25 mph

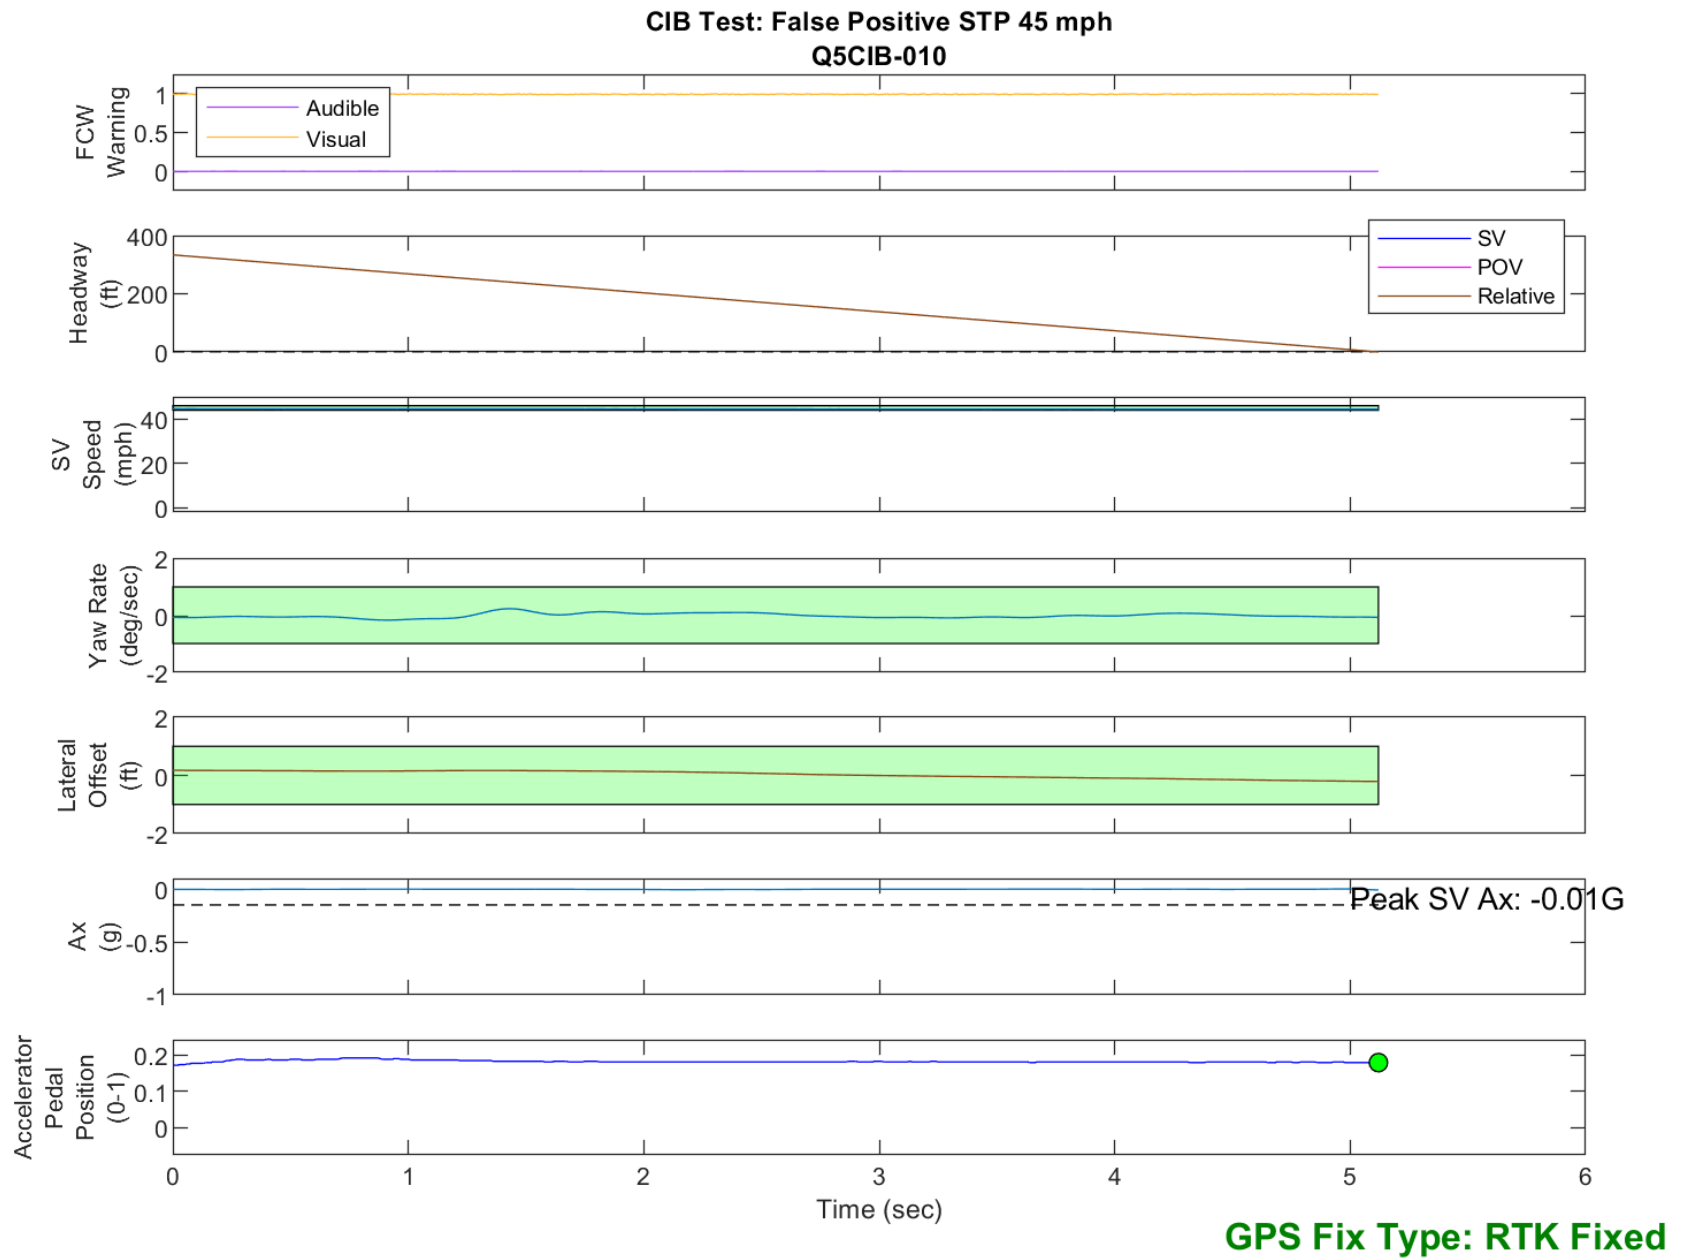


Figure D45. Time History for CIB Run 10, SV Encounters Steel Trench Plate, SV 45 mph

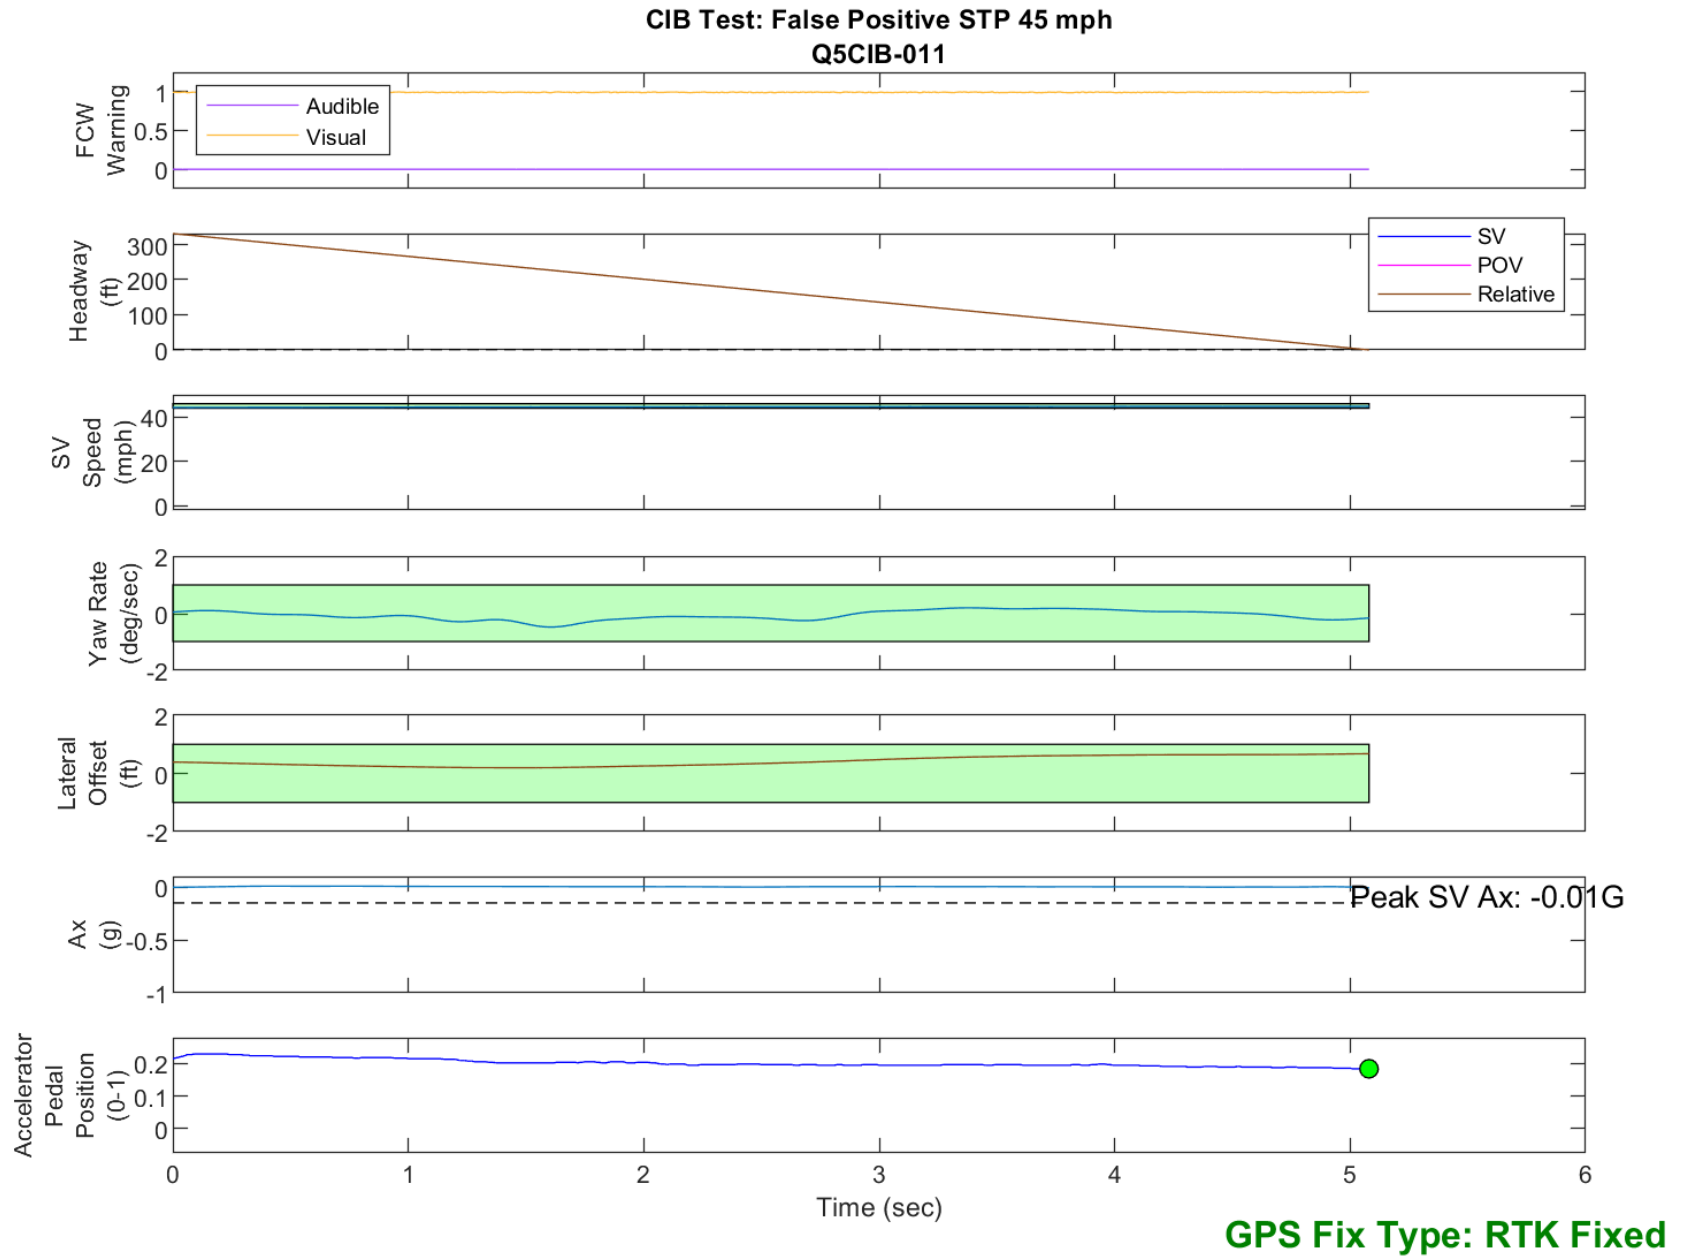


Figure D46. Time History for CIB Run 11, SV Encounters Steel Trench Plate, SV 45 mph

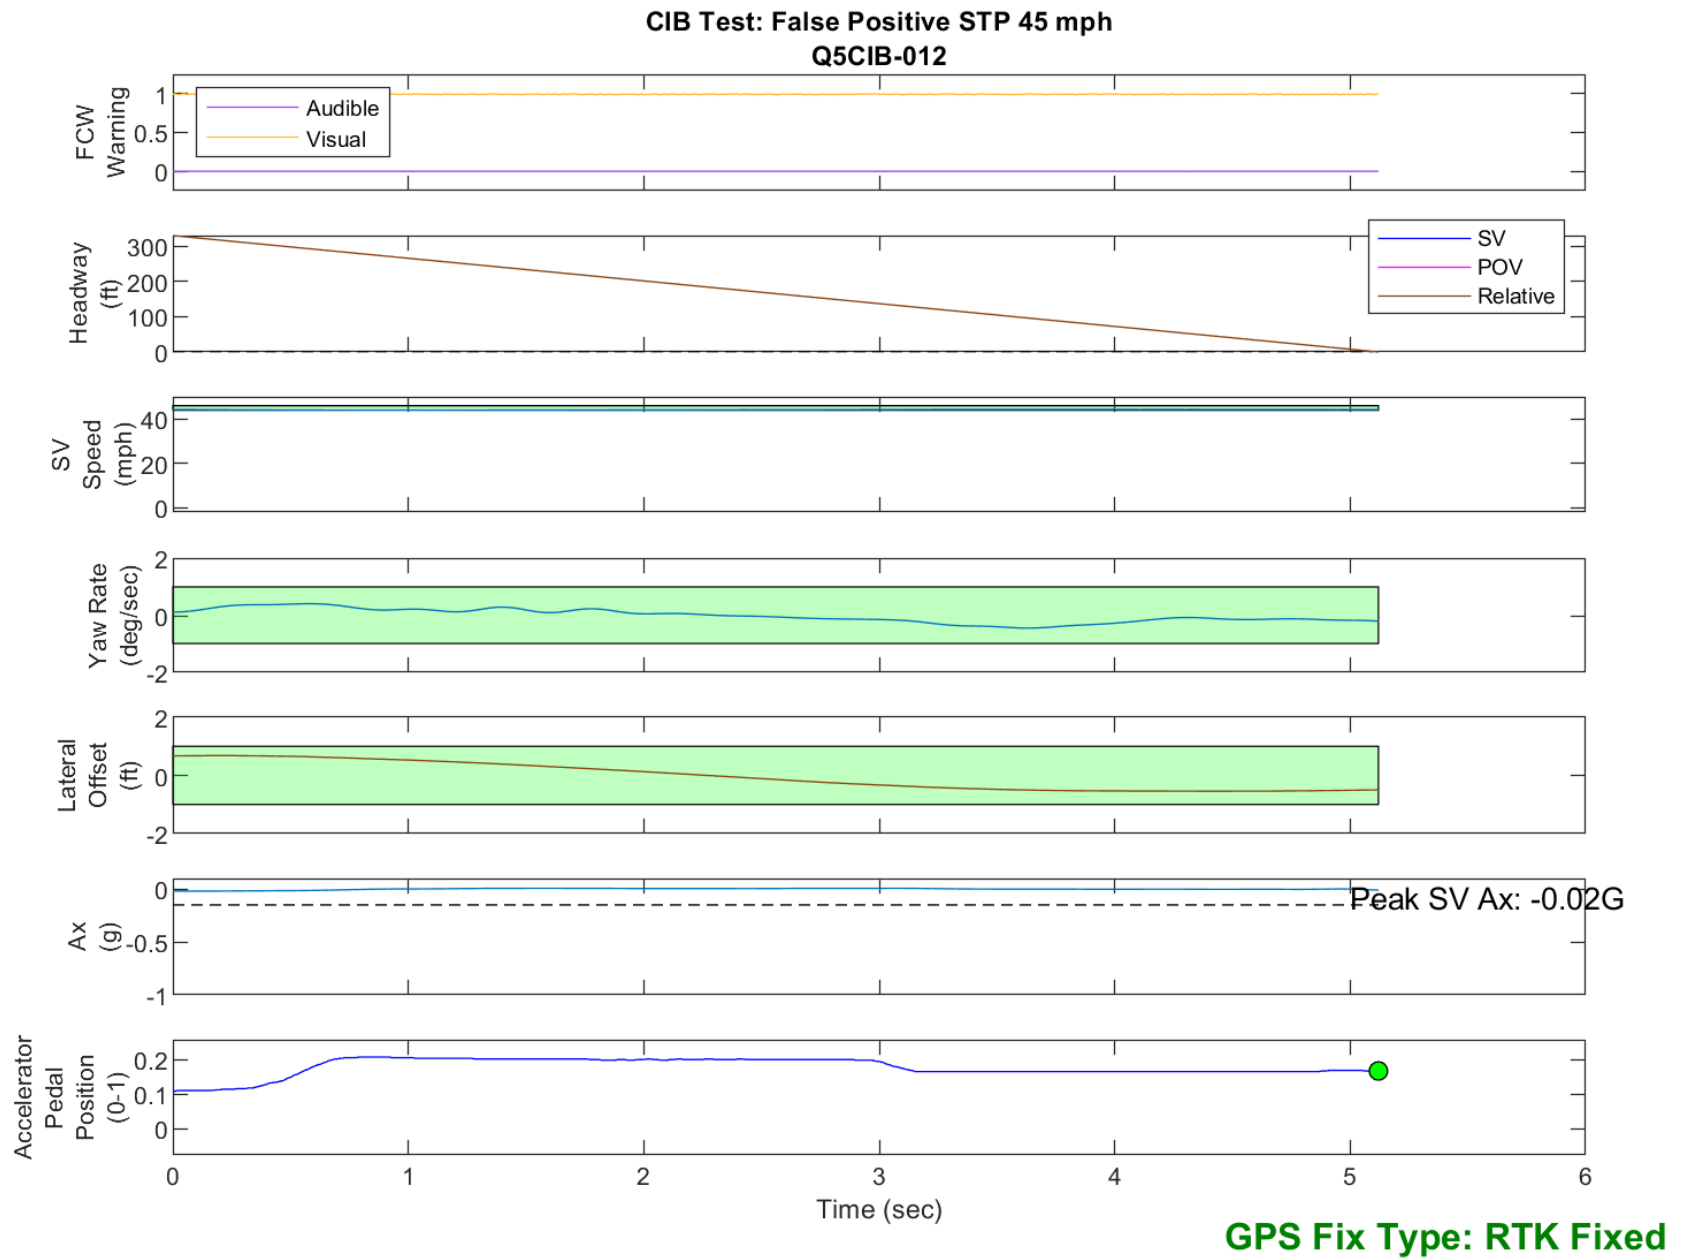


Figure D47. Time History for CIB Run 12, SV Encounters Steel Trench Plate, SV 45 mph

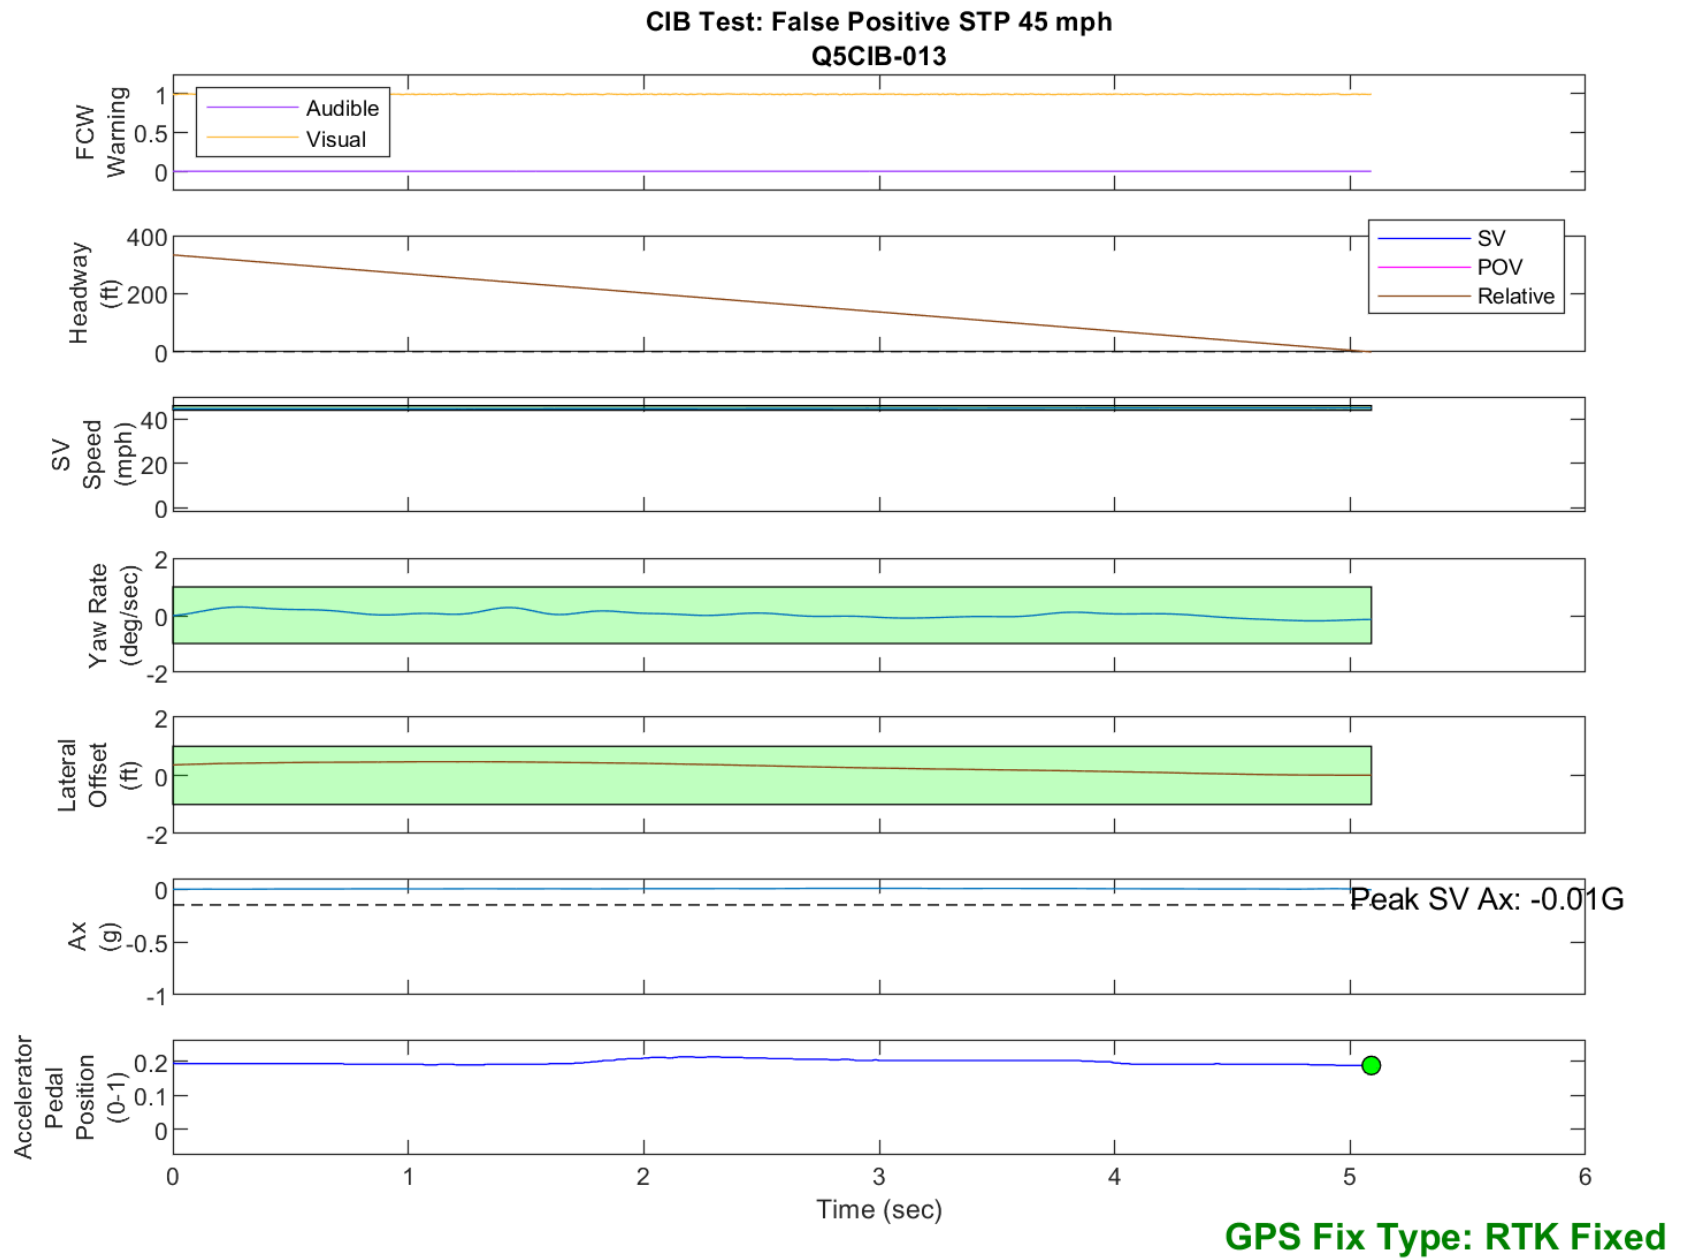


Figure D48. Time History for CIB Run 13, SV Encounters Steel Trench Plate, SV 45 mph

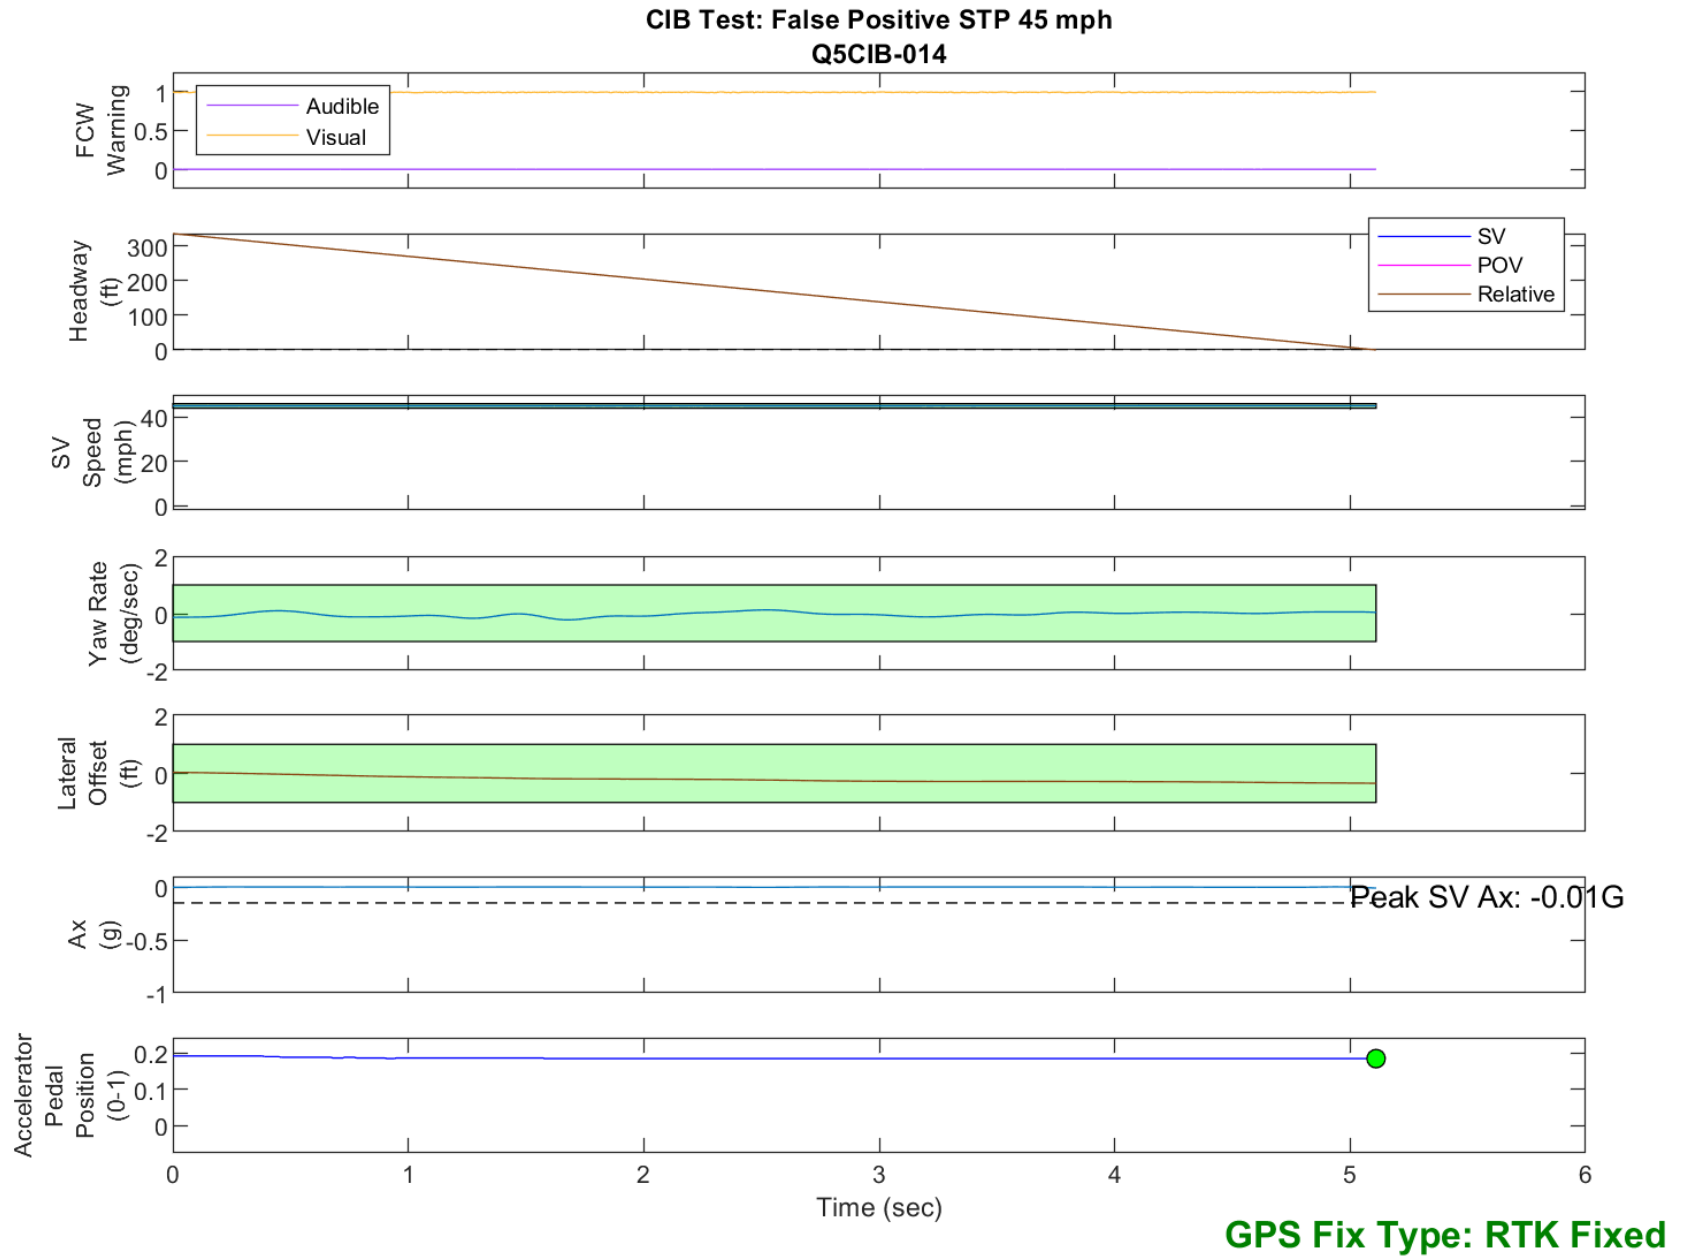


Figure D49. Time History for CIB Run 14, SV Encounters Steel Trench Plate, SV 45 mph

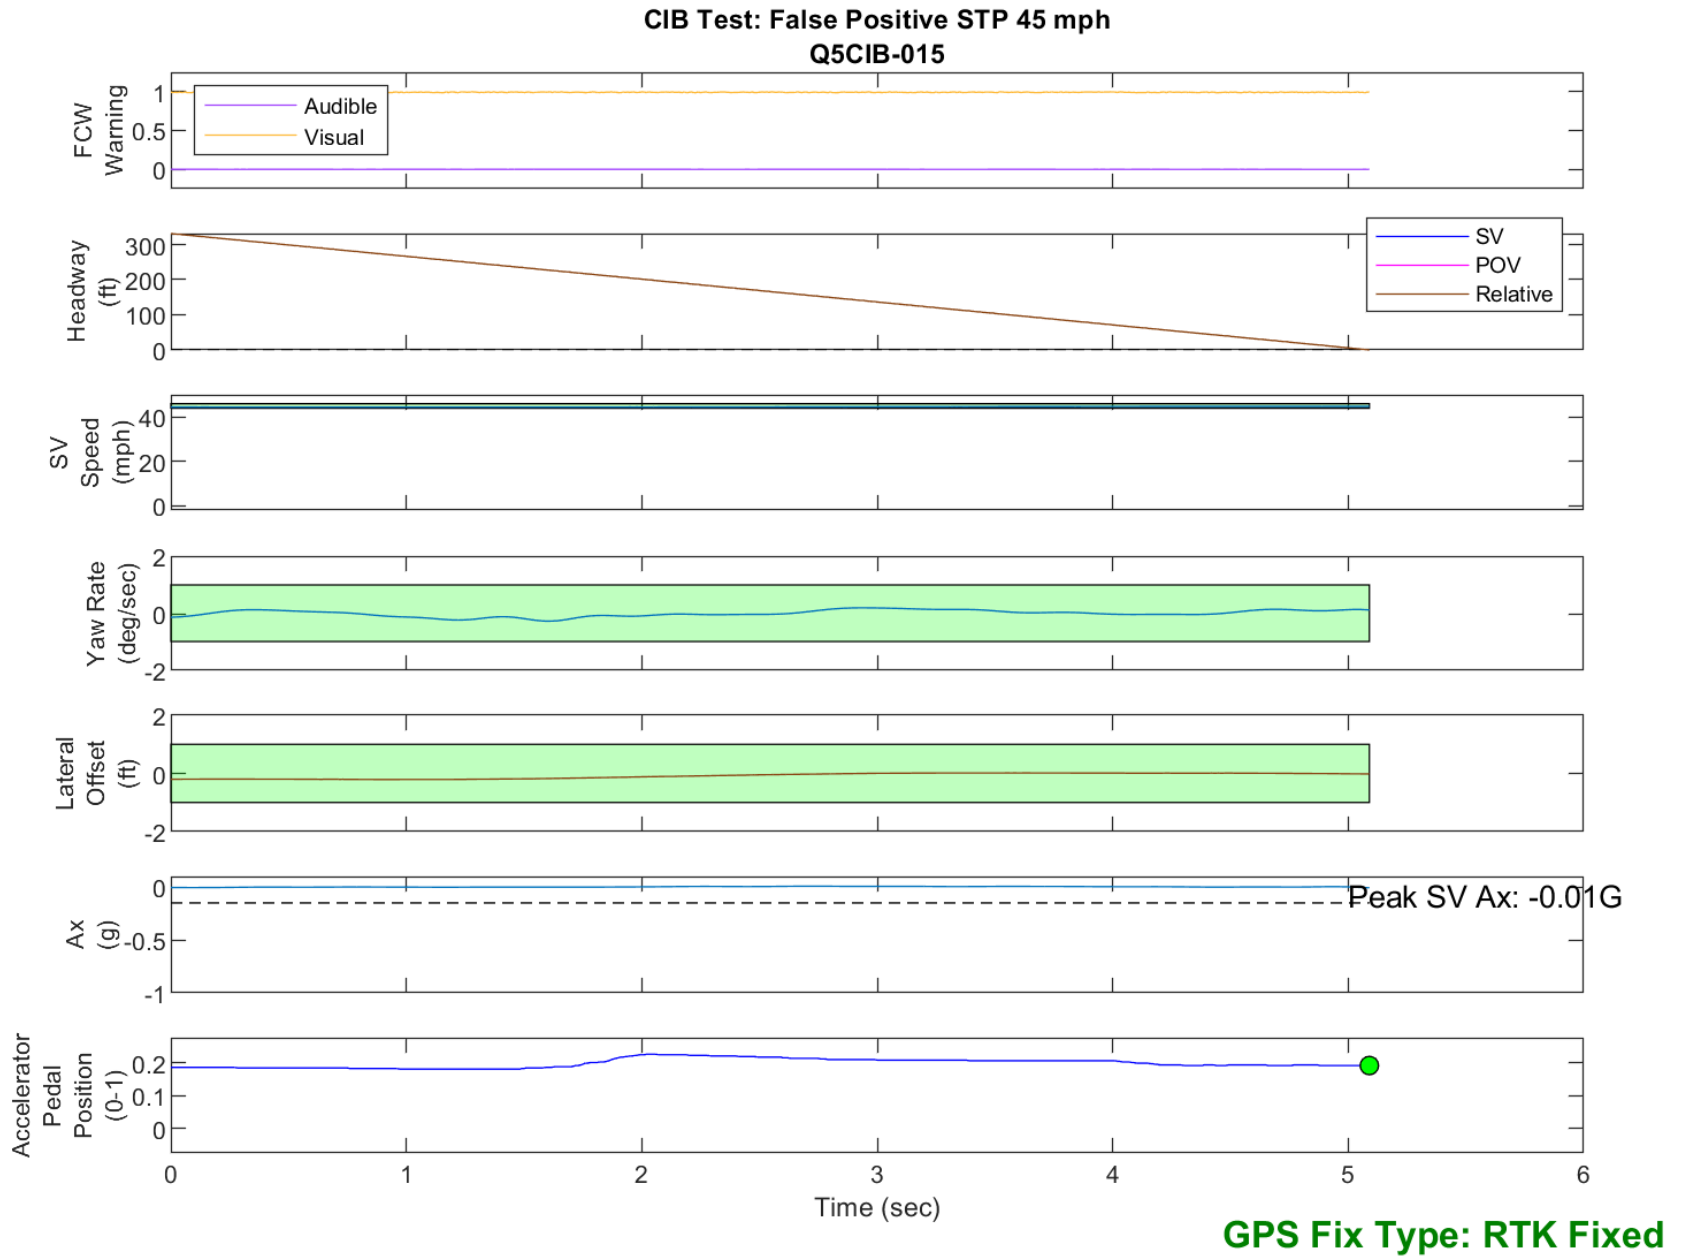


Figure D50. Time History for CIB Run 15, SV Encounters Steel Trench Plate, SV 45 mph

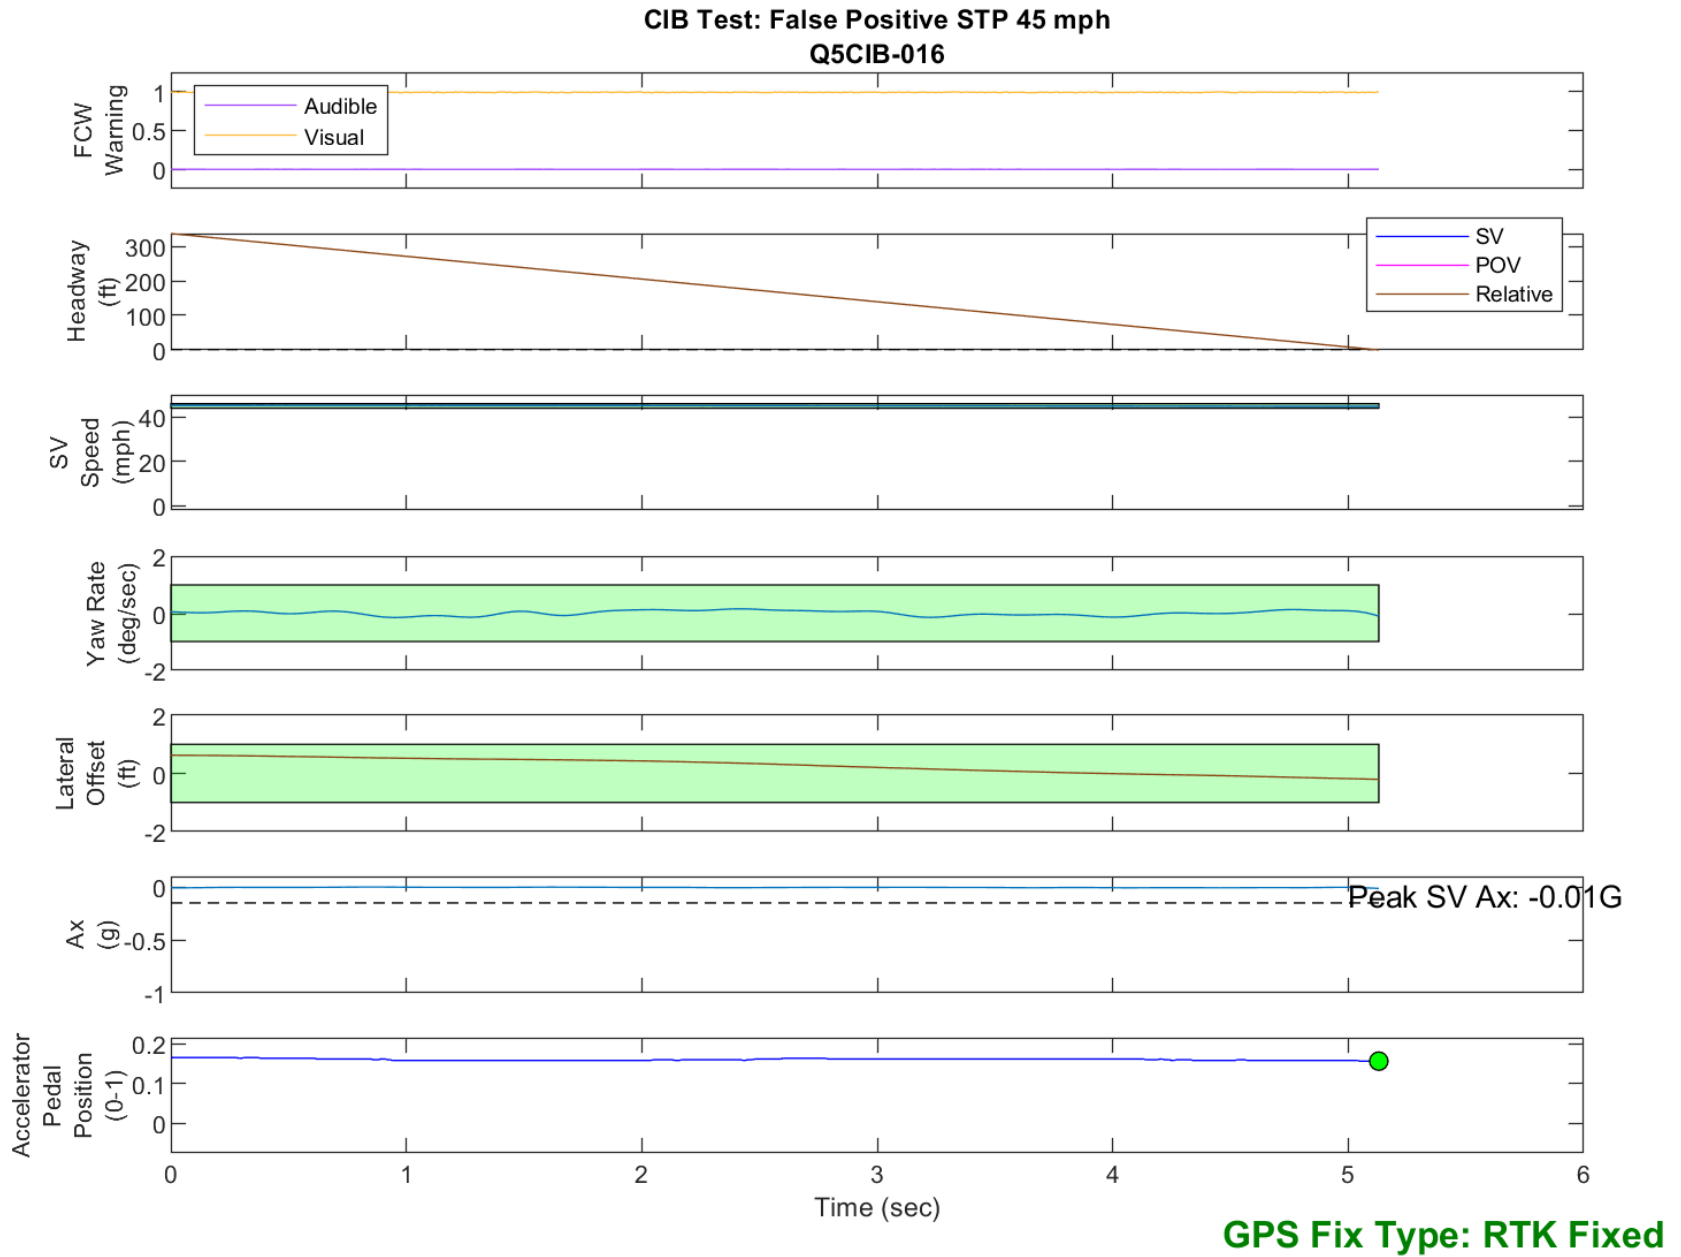


Figure D51. Time History for CIB Run 16, SV Encounters Steel Trench Plate, SV 45 mph