

**NEW CAR ASSESSMENT PROGRAM
FORWARD COLLISION WARNING CONFIRMATION TEST
NCAP-DRI-FCW-21-08**

2021 Kia Seltos SX Turbo AWD

DYNAMIC RESEARCH, INC.

355 Van Ness Avenue, STE 200
Torrance, California 90501



11 March 2021

Final Report

Prepared Under Contract No. DTNH22-14-D-00333

**U.S. DEPARTMENT OF TRANSPORTATION
National Highway Traffic Safety Administration
New Car Assessment Program
1200 New Jersey Avenue, SE
West Building, 4th Floor (NRM-110)
Washington, DC 20590**

Prepared for the Department of Transportation, National Highway Traffic Safety Administration, under Contract No. DTNH22-14-D-00333.

This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturer's names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products of manufacturers.

Prepared By: J. Lenkeit and N. Watanabe
Program Manager Test Engineer
Date: 11 March 2021

1. Report No. NCAP-DRI-FCW-21-08	2. Government Accession No.	3. Recipient's Catalog No.	
4. Title and Subtitle Final Report of Forward Collision Warning Confirmation Test of a 2021 Kia Seltos SX Turbo AWD.		5. Report Date 11 March 2021	
		6. Performing Organization Code DRI	
7. Author(s) J. Lenkeit, Program Manager N. Watanabe, Test Engineer		8. Performing Organization Report No. DRI-TM-20-170	
9. Performing Organization Name and Address Dynamic Research, Inc. 355 Van Ness Ave, STE 200 Torrance, CA 90501		10. Work Unit No.	
		11. Contract or Grant No. DTNH22-14-D-00333	
12. Sponsoring Agency Name and Address U.S. Department of Transportation National Highway Traffic Safety Administration New Car Assessment Program 1200 New Jersey Avenue, SE, West Building, 4th Floor (NRM-110) Washington, DC 20590		13. Type of Report and Period Covered Final Test Report February - March 2021	
		14. Sponsoring Agency Code NRM-110	
15. Supplementary Notes			
16. Abstract These tests were conducted on the subject 2021 Kia Seltos SX Turbo AWD in accordance with the specifications of the New Car Assessment Program's (NCAP) most current Test Procedure in docket NHTSA-2006-26555-0134 to confirm the performance of a Forward Collision Warning system. The vehicle passed the requirements of the test for all three FCW test scenarios.			
17. Key Words Forward Collision Warning, FCW, New Car Assessment Program, NCAP		18. Distribution Statement Copies of this report are available from the following: NHTSA Technical Reference Division National Highway Traffic Safety Administration 1200 New Jersey Avenue, SE Washington, DC 20590	
19. Security Classif. (of this report) Unclassified	20. Security Classif. (of this page) Unclassified	21. No. of Pages 130	22. Price

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
I. INTRODUCTION	1
II. DATA SHEETS.....	2
Data Sheet 1: Test Results Summary.....	3
Data Sheet 2: Vehicle Data	4
Data Sheet 3: Test Conditions.....	5
Data Sheet 4: Forward Collision Warning System Operation	7
III. TEST PROCEDURES	10
A. Test Procedure Overview	10
B. Principal Other Vehicle	15
C. Automatic Braking System.....	15
D. Instrumentation.....	15
APPENDIX A Photographs	A-1
APPENDIX B Excerpts from Owner's Manual.....	B-1
APPENDIX C Run Log.....	C-1
APPENDIX D Time Histories.....	D-1

Section I

INTRODUCTION

This test evaluates the ability of a Forward Collision Warning (FCW) system to detect and alert drivers to potential hazards in the path of the vehicle as specified in the New Car Assessment Program's "Forward Collision Warning Confirmation" test procedure, dated February 2013. Three driving scenarios are utilized to assess this technology. In the first test, a Subject Vehicle (SV) approaches a stopped Principal Other Vehicle (POV) in the same lane of travel. The second test begins with the SV initially following the POV at the same constant speed. After a short while, the POV stops suddenly. The third test consists of the SV, traveling at a constant speed, approaching a slower moving POV, which is also being driven at a constant speed.

Section II
DATA SHEETS

FORWARD COLLISION WARNING
DATA SHEET 1: TEST RESULTS SUMMARY

(Page 1 of 1)

2021 Kia Seltos SX Turbo AWD

VIN: KNDETCA29M718xxxx

Test Date: 2/18/2021

Forward Collision Warning setting: Forward Safety- Warning Only
Warning Timing - Normal

Test 1 – Subject Vehicle Encounters
Stopped Principal Other Vehicle: **Pass**

Test 2 – Subject Vehicle Encounters
Decelerating Principal Other Vehicle: **Pass**

Test 3 – Subject Vehicle Encounters
Slower Principal Other Vehicle: **Pass**

Overall: **Pass**

Notes:

FORWARD COLLISION WARNING

DATA SHEET 2: VEHICLE DATA

(Page 1 of 1)

2021 Kia Seltos SX Turbo AWD

TEST VEHICLE INFORMATION

VIN: KNDETCA29M718xxxx

Body Style: SUV

Color: Cherry Black

Date Received: 2/8/2021

Odometer Reading: 11 mi

DATA FROM VEHICLE'S CERTIFICATON LABEL

Vehicle manufactured by: KIA MOTORS CORPORATION

Date of manufacture: 12/20

Vehicle Type: MPV

DATA FROM TIRE PLACARD

Tires size as stated on Tire Placard: Front: 235/45R18

Rear: 235/45R18

Recommended cold tire pressure: Front: 230 kPa (33 psi)

Rear: 230 kPa (33 psi)

TIRES

Tire manufacturer and model: Kumho Majesty 9 Solus TA91

Front tire specification: 235/45R18 94V

Rear tire specification: 235/45R18 94V

Front tire DOT prefix: 1Y0 KRYAJ9

Rear tire DOT prefix: 1Y0 KRYAJ9

FORWARD COLLISION WARNING
DATA SHEET 3: TEST CONDITIONS

(Page 1 of 2)

2021 Kia Seltos SX Turbo AWD

GENERAL INFORMATION

Test date: 2/18/2021

AMBIENT CONDITIONS

Air temperature: -9.4 C (15 F)

Wind speed: 2.6 m/s (5.8 mph)

X Wind speed \leq 10 m/s (22 mph).

X Tests were not performed during periods of inclement weather. This includes, but is not limited to, rain, snow, hail, fog, smoke, or ash.

X Tests were conducted during daylight hours with good atmospheric visibility (defined as an absence of fog and the ability to see clearly for more than 5000 meters). The tests were not conducted with the vehicle oriented into the sun during very low sun angle conditions, where the sun is oriented 15 degrees or less from horizontal, and camera "washout" or system inoperability results.

VEHICLE PREPARATION

Verify the following:

All non-consumable fluids at 100% capacity: X

Fuel tank is full: X

Tire pressures are set to manufacturer's recommended cold tire pressure: X

Front: 230 kPa (33 psi)

Rear: 230 kPa (33 psi)

FORWARD COLLISION WARNING
DATA SHEET 3: TEST CONDITIONS

(Page 2 of 2)

2021 Kia Seltos SX Turbo AWD

WEIGHT

Weight of vehicle as tested including driver and instrumentation:

Left Front: 481.3 kg (1061 lb)

Right Front: 460.8 kg (1016 lb)

Left Rear: 347.5 kg (766 lb)

Right Rear: 324.3 kg (715 lb)

Total: 1613.9 kg (3558 lb)

FORWARD COLLISION WARNING

DATA SHEET 4: FORWARD COLLISION WARNING SYSTEM OPERATION

(Page 1 of 3)

2021 Kia Seltos SX Turbo AWD

Name of the FCW option, option package, etc.:

FCA (Forward Collision-Avoidance Assist). This is available as standard equipment on the SX Turbo trim.

Type and location of sensor(s) the system uses:

Sensor fusion (Front camera, front radar). The front camera is located in the top center of the windshield and the front radar is located in the center of the front bumper.

Forward Collision Warning Setting used in test: Forward Safety- Warning Only
Warning Timing - Normal

How is the Forward Collision Warning presented to the driver? Warning light
(Check all that apply) Buzzer or auditory alarm
 Vibration
 Other _____

Describe the method by which the driver is alerted. For example, if the warning is a light, where is it located, its color, size, words or symbol, does it flash on and off, etc. If it is a sound, describe if it is a constant beep or a repeated beep. If it is a vibration, describe where it is felt (e.g., pedals, steering wheel), the dominant frequency (and possibly magnitude), the type of warning (light, auditory, vibration, or combination), etc.

The visual alert is presented in the instrument panel. It shows a picture of the rear end of a leading vehicle, the words "Collision Warning", and a picture of an exclamation point within a triangle. See Appendix A, Figure A15.

The auditory warning is a pulsed tone.

FORWARD COLLISION WARNING

DATA SHEET 4: FORWARD COLLISION WARNING SYSTEM OPERATION

(Page 2 of 3)

2021 Kia Seltos SX Turbo AWD

Is the vehicle equipped with a switch whose purpose is to render FCW inoperable? Yes
 No

If yes, please provide a full description including the switch location and method of operation, any associated instrument panel indicator, etc.

The system can be disabled using the system menus, accessed by a setup button located at the bottom of the center display. See Appendix A, Figure A14. The menu hierarchy is:

Setup

Vehicle Settings

Driver Assistance

Forward Safety

Select from: Active Assist, Warning Only, or Off

See Appendix A, Figure A12.

Is the vehicle equipped with a control whose purpose is to adjust the range setting or otherwise influence the operation of FCW? Yes
 No

If yes, please provide a full description.

The timing can be adjusted using the system menus, accessed by a setup button located at the bottom of the center display. See Appendix A, Figure A14. The menu hierarchy is:

Setup

Vehicle Settings

Driver Assistance

Warning Timing

Select Normal or Late

See Appendix A, Figures A12 and A13.

FORWARD COLLISION WARNING

DATA SHEET 4: FORWARD COLLISION WARNING SYSTEM OPERATION

(Page 3 of 3)

2021 Kia Seltos SX Turbo AWD

Are there other driving modes or conditions that render FCW inoperable or reduce its effectiveness? Yes
 No

If yes, please provide a full description.

System limitations are described in the Owner's Manual on pages 5-94 through 5-101, shown in Appendix B, pages B-26 through B-33.

Notes:

The 2021 Kia Seltos is available with two types of AEB systems. One of these uses a camera-only system, and the other system uses a fusion of a camera and forward-facing radar. The vehicle covered in this report was equipped with the fusion system.

Section III

TEST PROCEDURES

A. Test Procedure Overview

Three test procedures were used, as follows:

Test 1. Subject Vehicle (SV) Encounters Stopped Principal Other Vehicle (POV)

Test 2. Subject Vehicle Encounters Decelerating Principal Other Vehicle

Test 3. Subject Vehicle Encounters Slower Principal Other Vehicle

With the exception of trials associated with Test 1, all trials were performed with SV and POV automatic transmissions in “Drive” or with manual transmissions in the highest gear capable of sustaining the desired test speed. Manual transmission clutches remained engaged during all maneuvers. Except for Test 2, the brake lights of the POV were not illuminated.

In order to pass the test, if the FCW system provides a warning timing adjustment for the driver, at least one setting must meet the criterion of the test procedure. Therefore, if the vehicle was equipped with a warning timing adjustment, only the most “conservative” (earliest warning) setting was tested.

An overview of each of the test procedures follows.

1. TEST 1 – SUBJECT VEHICLE ENCOUNTERS STOPPED PRINCIPAL OTHER VEHICLE ON A STRAIGHT ROAD

This test evaluates the ability of the FCW function to detect a stopped lead vehicle, as depicted in Figure 1.

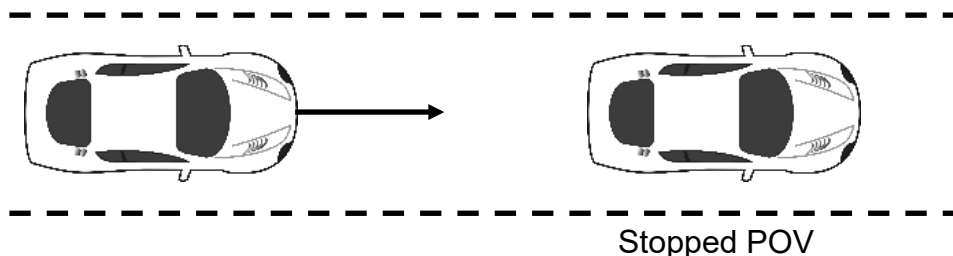


Figure 1. Depiction of Test 1

a. Alert Criteria

In order to pass the test, the FCW alert must be issued when the time-to-collision (TTC) is at least 2.1 seconds. The TTC for this test was calculated by considering the speeds of the SV and the POV at the time of the FCW alert (i.e., when the SV and POV speeds are nominally equal to 45 and 0 mph (72.4 and 0 km/h), respectively).

b. Procedure

The POV was parked in the center of a travel lane, with its longitudinal axis oriented parallel to the roadway edge and facing the same direction as the SV so that the SV approaches the rear of the POV.

The SV was driven at a nominal speed of 45 mph (72.4 km/h) in the center of the lane of travel, toward the parked POV. The test began when the SV was 492 ft (150 m) from the POV and ended when either of the following occurred:

- The required FCW alert occurred.
- The TTC to the POV fell to less than 90% of the minimum allowable range (i.e., $TTC = 1.9$ sec) for the onset of the required FCW alert.

The SV driver then steered and/or braked to keep the SV from striking the POV.

For an individual test trial to be valid, the following was required throughout the test:

- The SV vehicle speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of three seconds prior to (1) the required FCW alert or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- The SV driver could not apply any force to the brake pedal before (1) the required FCW alert occurred or (2) the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- The lateral distance between the centerline of the SV, relative to the centerline of the POV, in road coordinates, could not exceed 2.0 ft (0.6 m).
- The yaw rate of the SV could not exceed ± 1 deg/sec during the test.

Nominally, the Test 1 series was comprised of seven individual trials. The FCW system must satisfy the TTC alert criteria for at least five of the seven test trials.

2. TEST 2 – SUBJECT VEHICLE ENCOUNTERS DECELERATING PRINCIPAL OTHER VEHICLE

The SV in this test initially followed the POV at a constant time gap and then the POV suddenly decelerated, as depicted in Figure 2. The test evaluates the ability of the FCW to recognize a decelerating lead vehicle and to issue an alert to SV driver in a timely manner.

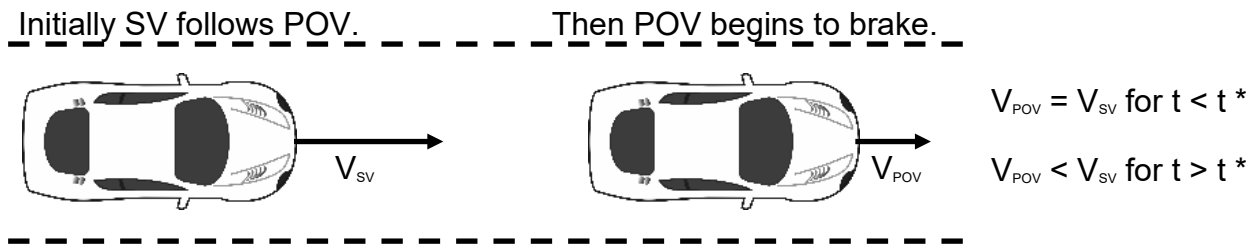


Figure 2. Depiction of Test 2

a. Alert Criteria

In order to pass the test, the FCW alert must be issued when TTC is at least 2.4 seconds. The TTC for this test, a prediction of the time it would take for the SV to collide with the POV, was calculated by considering three factors at the time of the FCW alert: (1) the speed of the SV, (2) the speed of the POV, and (3) the deceleration of the POV¹.

b. Procedure

Test 2 began with the SV and the POV traveling on a straight, flat road at a constant speed of 45.0 mph (72.4 km/h), in the center of the lane of travel. The headway from the SV to the POV was nominally maintained at 98.4 ft (30 m) until the POV braking was initiated.

The test began approximately 7 seconds before the driver of the POV started a braking maneuver in which the POV brakes were rapidly applied and modulated such that a constant deceleration of 0.3 g was achieved within 1.5 seconds after braking is initiated. The test ended when either of the following conditions was satisfied:

- The required FCW alert occurred.
- The TTC to the POV fell to less than 90% of the minimum allowable range (i.e., TTC = 2.2 sec) for the onset of the required FCW alert.

The SV driver then steered and/or braked to keep the SV from striking the POV.

¹To simplify calculation of the TTC for Test 2, the deceleration of the POV is assumed to remain constant from the time of the FCW alert until the POV comes to a stop (i.e., a "constant" rate of slowing is assumed).

For an individual test trial to be valid, the following was required throughout the test:

- The initial POV vehicle speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of 3 seconds prior to the initiation of POV braking.
- The speed of the SV could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of 3 seconds prior to (1) the required FCW alert or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- The lateral distance between the centerline of the SV, relative to the centerline of the POV, in road coordinates, could not exceed 2.0 ft (0.6 m).
- The yaw rates of the SV and POV could not exceed ± 1 deg/sec during the test.
- The POV deceleration level was nominally required to be 0.3 g within 1.5 seconds after initiation of POV braking. The acceptable error magnitude of the POV deceleration was ± 0.03 g, measured at the time the FCW alert first occurred. An initial overshoot beyond the deceleration target was acceptable, however the first local deceleration peak observed during an individual trial could not exceed 0.375 g for more than 50 ms. Additionally, the deceleration could not exceed 0.33 g over a period defined from 500 ms after the first local deceleration peak occurs, to the time when the FCW alert first occurred.
- The tolerance for the headway from the SV to the POV was ± 8.2 ft (± 2.5 m), measured at two instants in time: (1) three seconds prior to the time the POV brake application was initiated and (2) at the time the POV brake application was initiated.
- SV driver could not apply any force to the brake pedal before (1) the required FCW alert occurred or (2) the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.

Nominally, the Test 2 series was comprised of seven individual trials. The FCW system must satisfy the TTC alert criteria for at least five of the seven test trials.

3. TEST 3 – SUBJECT VEHICLE ENCOUNTERS SLOWER PRINCIPAL OTHER VEHICLE

This test examines the ability of the FCW system to recognize a slower lead vehicle being driven with a constant speed and to issue a timely alert. As depicted in Figure 3, the scenario was conducted with a closing speed equal to 25.0 mph (40.2 km/h).

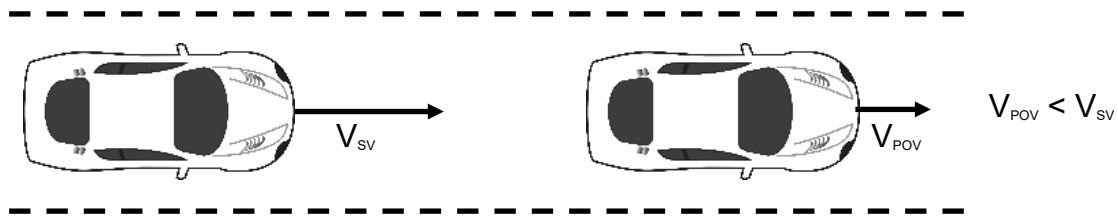


Figure 3. Depiction of Test 3

a. Alert Criteria

In order to pass the test, the FCW alert must be issued when TTC is at least 2.0 seconds. The TTC for this test, a prediction of the time it would take for the SV to collide with the POV, was calculated by considering the speeds of the SV and POV at the time of the FCW alert.

b. Procedure

Throughout the test, the POV was driven at a constant 20.0 mph (32.2 km/h) in the center of the lane of travel.

The SV was driven at 45.0 mph (72.4 km/h), in the center lane of travel, toward the slow-moving POV.

The test began when the headway from the SV to the POV was 329 ft (100 m) and ended when either of the following occurred:

- The required FCW alert occurred.
- The TTC to the POV fell to less than 90% of the minimum allowable range (i.e., $TT = 1.8$ sec) for the onset of the required FCW alert.

The SV driver then steered and/or braked to keep the SV from striking the POV.

For an individual test trial to be valid, the following was required throughout the test:

- The SV vehicle speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) for a period of 3 seconds prior to (1) the required FCW alert or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.
- Speed of the POV could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) during the test.
- The lateral distance between the centerline of the SV, relative to the centerline of the POV, in road coordinates, could not exceed 2.0 ft (0.6 m).
- The yaw rates of the SV and POV could not exceed ± 1 deg/sec during the test.
- SV driver could not apply any force to the brake pedal before (1) the required

FCW alert occurred or (2) before the range fell to less than 90% of the minimum allowable range for onset of the required FCW alert.

Nominally, the Test 3 series was comprised of seven individual trials. The FCW system must satisfy the TTC alert criteria for at least five of the seven test trials.

B. Principal Other Vehicle

The vehicle used as the Principal Other Vehicle (POV) was a 2006 Acura RL. This satisfied the test requirement that the POV be a mid-size sedan. The vehicle had a rear license plate in order to provide a suitable representative radar profile. Vehicle loading consisted of the driver plus equipment and instrumentation.

C. Automatic Braking System

The POV was equipped with an automatic braking system, which was used in Test 2. The braking system consisted of the following components:

- High pressure nitrogen bottle, strapped to the front passenger seat, with regulator and pressure gauges
- Pneumatic piston-type actuator, with solenoid valve
- “Pickle” switch to activate brakes

D. Instrumentation

Table 1 lists the sensors, signal conditioning, and data acquisition equipment used for these tests.

Table 1. Test Instrumentation and Equipment

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Tire Pressure Gauge	Vehicle Tire Pressure	0-100 psi	< 1% error between 20 and 100 psi	Omega DPG8001	18111410000	By: DRI Date: 5/4/2020 Due: 5/4/2021
Platform Scales	Vehicle Total, Wheel, and Axle Load	2200 lb/platform	0.1% of reading	Intercomp SW wireless	0410MN20001	By: DRI Date: 4/20/2020 Due: 4/20/2021
Differential Global Positioning System	Position, Velocity	Latitude: ±90 deg Longitude: ±180 deg Altitude: 0-18 km Velocity: 0-1000 knots	Horizontal Position: ±1 cm Vertical Position: ±2 cm Velocity: 0.05 km/h	Trimble GPS Receiver, 5700 (base station and in-vehicle)	00440100989	N/A
Multi-Axis Inertial Sensing System	Position; Longitudinal, Lateral, and Vertical Accels; Lateral, Longitudinal and Vertical Velocities; Roll, Pitch, Yaw Rates; Roll, Pitch, Yaw Angles	Accels ± 10g, Angular Rate ±100 deg/s, Angle >45 deg, Velocity >200 km/h	Accels .01g, Angular Rate 0.05 deg/s, Angle 0.05 deg, Velocity 0.1 km/h			By: Oxford Technical Solutions
				SV: Oxford Inertial +	2258	Date: 5/3/2019 Due: 5/3/2021
				POV:	2182	Date: 9/16/2019 Due: 9/16/2021
Real-Time Calculation of Position and Velocity Relative to Lane Markings (LDW) and POV (FCW)	Distance and Velocity to lane markings (LDW) and POV (FCW)	Lateral Lane Dist: ±30 m Lateral Lane Velocity: ±20 m/sec Longitudinal Range to POV: ±200 m Longitudinal Range Rate: ±50 m/sec	Lateral Distance to Lane Marking: ±2 cm Lateral Velocity to Lane Marking: ±0.02m/sec Longitudinal Range: ±3 cm Longitudinal Range Rate: ±0.02 m/sec	Oxford Technical Solutions (OXTS), RT-Range	97	N/A

Table 1. Test Instrumentation and Equipment (continued)

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Microphone	Sound (to measure time at auditory alert)	Frequency Response: 80 Hz – 20 kHz	Signal-to-noise: 64 dB, 1 kHz at 1 Pa	Audio-Technica AT899	N/A	N/A
Light Sensor	Light intensity (to measure time at visual alert)	Spectral Bandwidth: 440-800 nm	Rise time < 10 msec	DRI designed and developed Light Sensor	N/A	N/A
Accelerometer	Acceleration (to measure time at haptic alert)	±5g	≤ 3% of full range	Silicon Designs, 2210-005	N/A	N/A
Coordinate Measurement Machine	Inertial Sensing System Coordinates	0-8 ft 0-2.4 m	±.0020 in. ±.051 mm (Single point articulation accuracy)	Faro Arm, Fusion	UO8-05-08-06636	By: DRI Date: 1/6/2021 Due: 1/6/2022
Type	Description			Mfr, Model	Serial Number	
Data Acquisition System	Data acquisition is achieved using a dSPACE MicroAutoBox II. Data from the Oxford IMU, including Longitudinal, Lateral, and Vertical Acceleration, Roll, Yaw, and Pitch Rate, Forward and Lateral Velocity, Roll and Pitch Angle are sent over Ethernet to the MicroAutoBox. The Oxford IMUs are calibrated per the manufacturer's recommended schedule (listed above).			dSPACE Micro-Autobox II 1401/1513		
				Base Board	549068	
				I/O Board	588523	

For systems that implement auditory or haptic alerts, part of the pre-test instrumentation verification process is to determine the tonal frequency of the auditory warning or the vibration frequency of the tactile warning through use of the PSD (Power Spectral Density) function in Matlab. This is accomplished in order to identify the center frequency around which a band-pass filter is applied to subsequent auditory or tactile warning data so that the beginning of such warnings can be programmatically determined. The band-pass filter used for these warning signal types is a phaseless, forward-reverse pass, elliptical (Cauer) digital filter, with filter parameters as listed in Table 2.

Table 2. Auditory and Tactile Warning Filter Parameters

Warning Type	Filter Order	Peak-to-Peak Ripple	Minimum Stop Band Attenuation	Passband Frequency Range
Auditory	5 th	3 dB	60 dB	Identified Center Frequency \pm 5%
Tactile	5 th	3 dB	60 dB	Identified Center Frequency \pm 20%

APPENDIX A

Photographs

LIST OF FIGURES

	Page
Figure A1. Front View of Subject Vehicle.....	A-3
Figure A2. Rear View of Subject Vehicle	A-4
Figure A3. Window Sticker (Monroney Label).....	A-5
Figure A4. Vehicle Certification Label	A-6
Figure A5. Tire Placard	A-7
Figure A6. Front View of Principal Other Vehicle	A-8
Figure A7. Rear View of Principal Other Vehicle.....	A-9
Figure A8. DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle.....	A-10
Figure A9. Sensors for Detecting Auditory and Visual Alerts	A-11
Figure A10. Computer Installed in Subject Vehicle	A-12
Figure A11. Brake Actuation System Installed in Principal Other Vehicle	A-13
Figure A12. System Setup Menus (page 1 of 2)	A-14
Figure A13. System Setup Menus (page 2 of 2)	A-15
Figure A14. Button for Accessing System Menus	A-16
Figure A15. FCW Visual Alert	A-17



Figure A1. Front View of Subject Vehicle



Figure A2. Rear View of Subject Vehicle

2021 SELTOS SX TURBO AWD
 MODEL/OPT. CODE: K4482 / 015
 EXTERIOR COLOR: CHERRY BLACK
 INTERIOR COLOR: BLACK
 VEHICLE ID NUMBER: KNDJ2CA29M718
 PORT OF ENTRY: HUENEME

Sold To: Ship To:

#1 MASS MARKET BRAND
 IN INITIAL QUALITY,
 6 YEARS IN A ROW.



STANDARD FEATURES

STANDARD TURBO AWD FEATURES
MECHANICAL
 1.6L Turbo 4-Cylinder Engine
 - 195 lb-ft Torque @ 1,500 RPM
 - 175 Horsepower @ 6,000 RPM
 7-Speed Quick-Shift DCT Automatic
 Torque Vectoring All-Wheel Drive w/ Center Lock
 Drive Mode Select (DMS)
KIA DRIVEWISE DRIVER-ASSIST TECHNOLOGY
 Forward Collision-Avoidance Assist-Pedestrian
 Blind-Spot Collision Warning (BCW)
 Blind-Spot Collision-Avoidance Assist-Rear (BCA-R)
 Rear Cross-Traffic Collision Warning & Avoidance Assist
 Lane Keeping Assist (LKA) & Lane Following Assist (LFA)
 Lane Departure Warning (LDW)
 Driver Attention Warning (DAW)
 High Beam Assist (HBA)

SAFETY
 Dual Front Advanced Airbags
 Dual Front Seat-Mounted Side & Full-Length Curtain Airbags
 Electronic Stability Control (ESC)
 Downhill Brake/Hill-start Assist Control (DBC/HAC)

INTERIOR, COMFORT & CONVENIENCE
 8" Touchscreen w/ Android Auto & Apple CarPlay
 Rear View Camera with Dynamic Guidelines
 USB Multimedia Port
 Heated Front Seats
 Combination Sofino Leatherette and Cloth Seat Trim
 Leather-Wrapped Steering Wheel and Shift Knob
 Sliding Front Ctr. Armrest, Rear Seat Ctr. Armrest
 Remote Keyless Entry
 Steering Wheel Controls (Bluetooth/Audio/Cruise)
 60/40 Split-Folding and Reclining Rear Seats
 Dual-Level Cargo Floor

EXTERIOR
 18" Alloy Wheels, Roof Rails, Fog Lamps
 Upgraded Grille with Integrated LED Light Bar
 LED Daytime Running Lights and Tail Lights
 Power, Heated Outside Mirrors w/ LED Turn Signal Indicators
 Compact Spare Tire

WARRANTY
 10 Year/100,000 Mile Limited Powertrain Warranty
 5 Year/60,000 Mile Limited Basic Warranty
 5 Year/60,000 Mile Roadside Assistance

When you purchase this vehicle, Kia Motors America, Inc. collects personal information you provide to the dealership. For information on our collection and use of personal information and your rights, please see our Privacy policy on www.kia.com.
TOTAL ADDITIONAL WEIGHT: 5.8

MANUFACTURER'S SUGGESTED RETAIL PRICE ▶

COMPARE SX TURBO AWD FEATURES
 Added to/in place of standard S 1.6T AWD features
 - LED Headlights and Fog Lights
 - UVO link^ w/ Navigation, 10.25" display
 ^ 1 yr trial; see owners.kia.com for details
 - Bose Premium Audio, Sound-Connected Lighting
 - SIRIUSXM^ w/free 3-mo. subscription*
 *Ask dealer for details
 - 7" LCD Color Instrument Cluster
 - Smart Cruise Control w/ Stop & Go
 - Highway Driving Assist (HDA)
 - Electronic Parking Brake
 - Sofino Seat Trim
 - Power Driver's Seat w/ Power Lumbar
 - Smart Key & Push Button Start
 - Remote Start / Remote Climate (Key Fob)
 - Wireless Phone Charger
 - Full Automatic Temperature Control
 - Auto-Dimming Rearview Mirror
 - Illuminated Sunvisor Mirror
 - LED Overhead Interior Lighting
 - Rear USB Charge Port
 - Rear Passenger Air Vents
 - Cargo Cover
 - Safe Exit Assist (SEA)

ADDITIONAL INSTALLED EQUIPMENT:
 (In addition to or in place of standard features)
 Cherry Black Paint
 SX Sunroof Package
 - Power Sunroof with Sunshade
 Carpeted Floor Mats

MSRP INCLUDING OPTIONS

INLAND FREIGHT AND HANDLING

TOTAL MANUFACTURER'S SUGGESTED RETAIL PRICE ▶

- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included
- Included

\$ 27,890.00

\$345.00

\$700.00

\$130.00

\$29,065.00

\$1,120.00

\$ 30,185.00

EPA DOT Fuel Economy and Environment

Fuel Economy
27 MPG
 combined city/hwy
 25 city 30 highway
 3.7 gallons per 100 miles

You Save \$0
 in fuel costs over 5 years compared to the average new vehicle.

Annual fuel cost \$1,500

Fuel Economy & Greenhouse Gas Rating (tailpipe only): 6

Smog Rating (tailpipe only): 5

This vehicle emits 331 grams CO₂ per mile. The best emits 0 grams per mile (tailpipe only). Producing and distributing fuel also create emissions; learn more at fueleconomy.gov.

fueleconomy.gov
 Calculate personalized estimates and compare vehicles

Actual results will vary for many reasons, including driving conditions and how you drive and maintain your vehicle. The average new vehicle gets 27 MPG and costs \$7,500* to fuel over 5 years. Cost estimates are based on 15,000 miles per year at \$2.70 per gallon. MPGe is miles per gasoline gallon equivalent. Vehicle emissions are a significant cause of climate change and smog.

Smartphone QR Code

GOVERNMENT 5-STAR SAFETY RATINGS

Overall Vehicle Score Not Rated
 Based on the combined rating of frontal, side and rollover. Should ONLY be compared to other vehicles of similar size and weight.

Frontal	Driver	Not Rated
Crash	Passenger	Not Rated
<small>Based on the risk of injury in a frontal impact. Should ONLY be compared to other vehicles of similar size and weight.</small>		
Side	Front seat	Not Rated
Crash	Rear seat	Not Rated
<small>Star ratings based on the risk of injury in a side impact.</small>		
Rollover		Not Rated
<small>Star ratings based on the risk of rollover in a single-vehicle crash.</small>		

Star ratings range from 1 to 5 stars (***), with 5 being the highest.**

Source: National Highway Traffic Safety Administration (NHTSA).
 www.safercar.gov or 1-888-327-4236

Manufacturer's suggested retail price includes Manufacturer's recommended pre-delivery service. License and title fees, state and local taxes and other dealer-installed options and accessories are not included in the manufacturer's suggested retail price.

PARTS CONTENT INFORMATION

FOR VEHICLES IN THIS CAR LINE U.S./CANADIAN PARTS CONTENT: 0%

MAJOR SOURCES OF FOREIGN PARTS:
 KOREA: 90%
 OTHER: 10%

NOTE: PARTS CONTENT DOES NOT INCLUDE FINAL ASSEMBLY, DISTRIBUTION, OR OTHER NON-PARTS COSTS.

FOR THIS VEHICLE FINAL ASSEMBLY POINT:
 GWANGJU, KOREA

COUNTRY OF ORIGIN

ENGINE: KOREA

TRANSMISSION: KOREA





MANUFACTURED IN KOREA BY
KIA MOTORS CORPORATION

12/20
GAWR
FRONT
REAR

GVWR 4245 LB
TIRES
2293 LB 235/45R18
2117 LB 235/45R18

PAINT 9H
RIMS
7.5Jx18
7.5Jx18

TRIM WK
COLD TIRE INFL
33psi SINGLE
33psi SINGLE

THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S.A. FEDERAL
MOTOR VEHICLE SAFETY AND THEFT PREVENTION STANDARDS
IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE.

V.I.N KNDETCA29M718
MPV



Figure A4. Vehicle Certification Label



TIRE AND LOADING INFORMATION
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT

SEATING CAPACITY NOMBRE DE PLACES	TOTAL 5	FRONT AVANT 2	REAR ARRIÈRE 3
--------------------------------------	---------	------------------	-------------------

The combined weight of occupants and cargo should never exceed 390 kg or 860 lbs.
 Le poids total des occupants et du chargement ne doit jamais dépasser 390 kg ou 860 lb.

TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS À FROID
FRONT AVANT	235/45R18	230kPa, 33psi
REAR ARRIÈRE	235/45R18	230kPa, 33psi
SPARE DE SECOURS	T125/80D16	420kPa, 60psi

**SEE OWNER'S
 MANUAL FOR
 ADDITIONAL
 INFORMATION**
**VOIR LE MANUEL
 DE L'USAGER
 POUR PLUS DE
 RENSEIGNEMENTS**

Q31

Figure A5. Tire Placard



Figure A6. Front View of Principal Other Vehicle



Figure A7. Rear View of Principal Other Vehicle

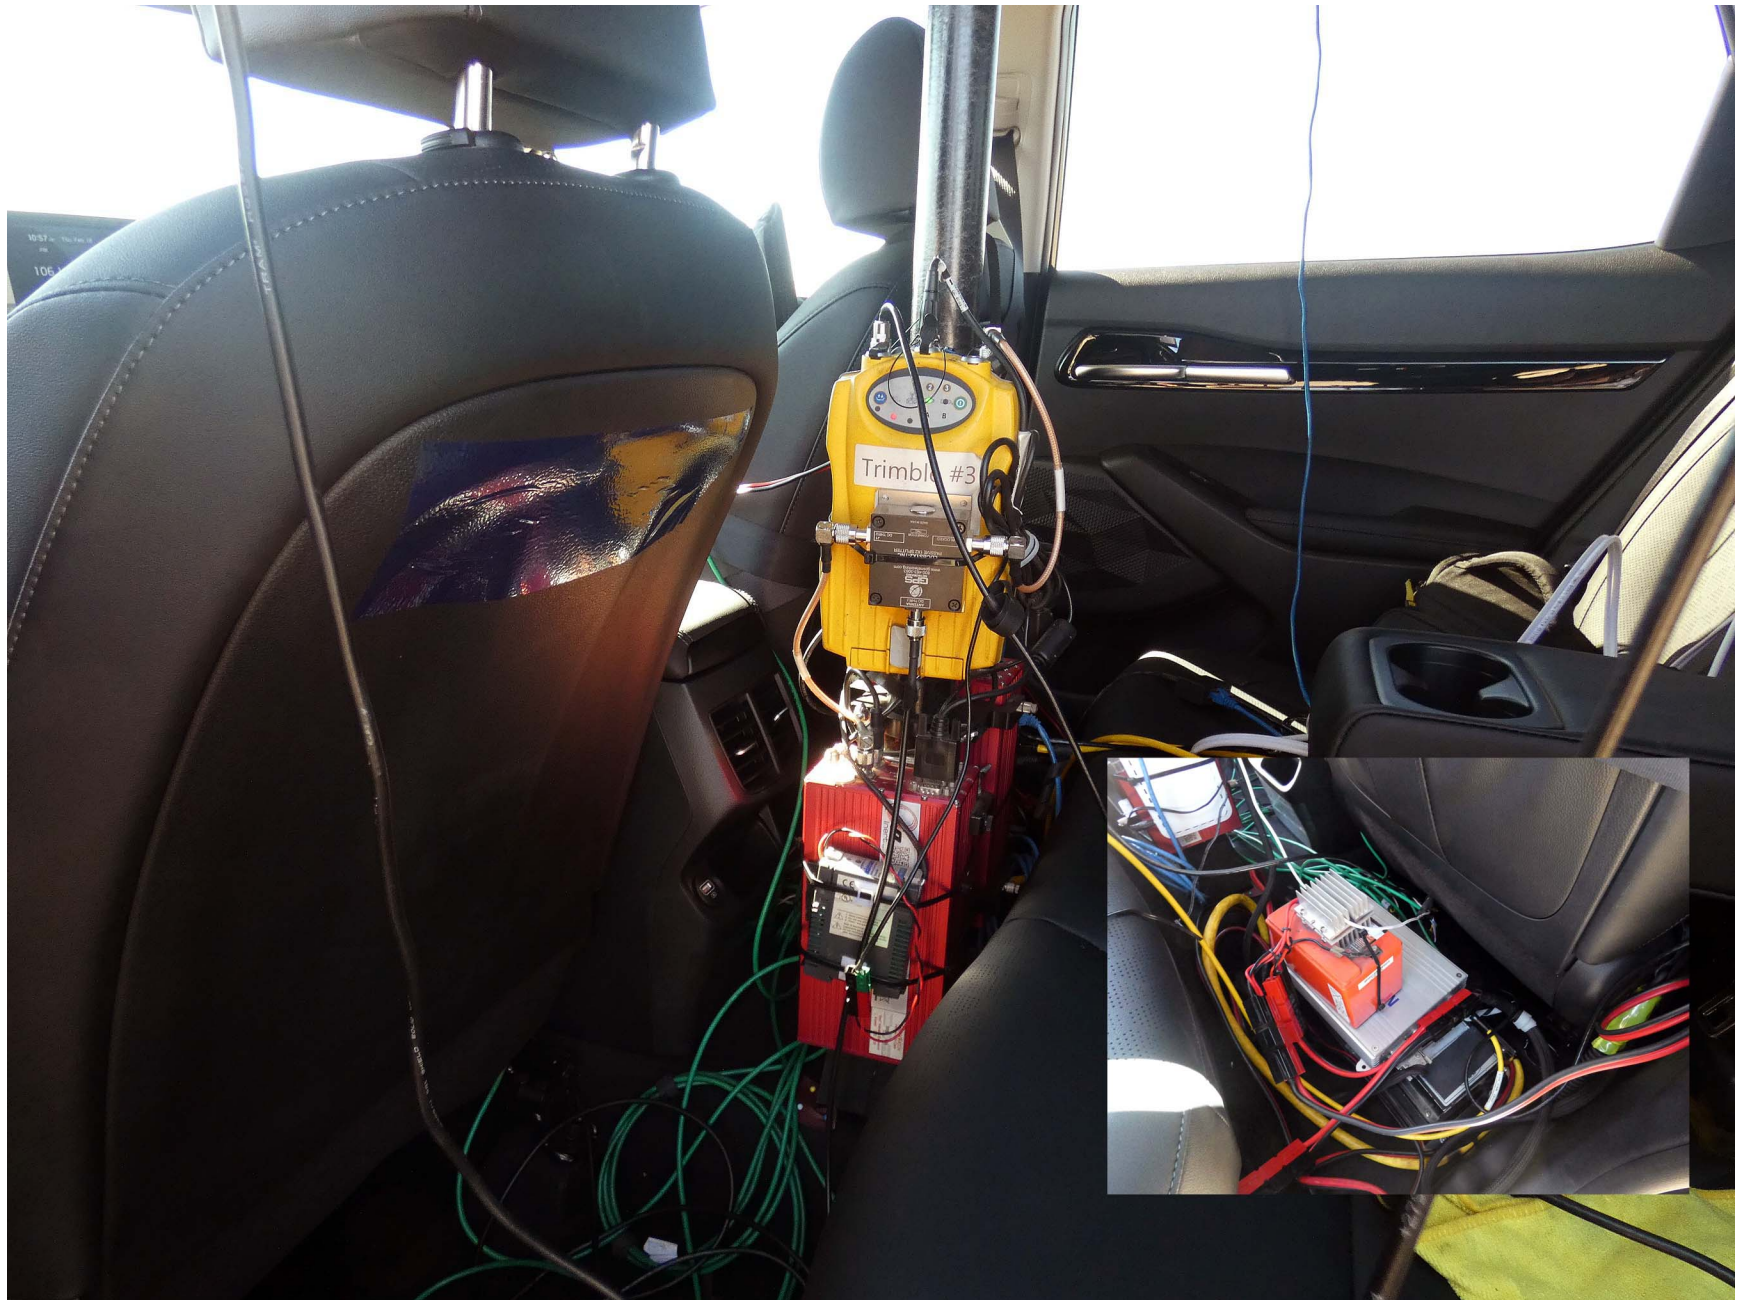


Figure A8. DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle



Figure A9. Sensors for Detecting Auditory and Visual Alerts



Figure A10. Computer Installed in Subject Vehicle



Figure A11. Brake Actuation System Installed in Principal Other Vehicle



Figure A12. System Setup Menus (page 1 of 2)



Figure A13. System Setup Menus (page 2 of 2)



Figure A14. Button for Accessing System Menus



Figure A15. FCW Visual Alert

APPENDIX B

Excerpts from Owner's Manual

1. Head-Up Display (if equipped)

Items	Explanation
Display Height	Adjust the height (1~20) of the HUD image on the HUD screen.
Rotation	Adjust the degree (-5~+5) of the HUD rotation.
Brightness	Adjust the intensity (1~20) of the HUD brightness.
Speed Size	Small/Medium/Large
Speed Color	White/Orange/Green

2. Driver Assistance (if equipped)

Items	Explanation
Driving Assist	<ul style="list-style-type: none"> Highway Driving Assist Highway Auto Curve Zone Slowdown To select the functions.
Warning Timing	<ul style="list-style-type: none"> Normal/Later To select the Warning time
Warning Volume	<ul style="list-style-type: none"> High/Medium/Low To select the Warning volume
Driver Attention Warning	<ul style="list-style-type: none"> Leading vehicle departure alert Inattentive Driving Warning To select the function. * For more details, refer to the "Driver Attention Warning (DAW)" on page 5-145.
Forward Safety	To adjust Forward Collision-Avoidance Assist system. <ul style="list-style-type: none"> Active Assist / Warning Only / Off To select the functions.
Lane Safety	To adjust Lane Keeping Assist system. <ul style="list-style-type: none"> Lane Keeping Assist / Lane Departure Warning / Off To select the functions.
Blind-Spot Safety	To select the functions. <ul style="list-style-type: none"> Safe Exit Assist To adjust Blind-Spot Collision-Avoidance Assist system. <ul style="list-style-type: none"> Active Assist / Warning Only / Off

4

This warning light blinks:

- When there is a malfunction with a LED headlamp related part. In this case, have your vehicle inspected by an authorized Kia dealer.

⚠ CAUTION

LED Headlamp Warning Light

Continuous driving with the LED Headlamp Warning Light on or blinking can reduce LED headlamp (low beam) life.

Forward Collision-Avoidance Assist Warning Light  (if equipped)

This indicator light illuminates:

- Once you set the ignition switch or ENGINE START/STOP button to the ON position.
 - It illuminates for approximately 3 seconds and then goes off.
- When FCA system is turned off.
- When the radar sensor or cover is blocked with dirt or snow. Check the sensor and cover and clean them by using a soft cloth.
- When there is a malfunction with FCA. If this occurs, have your vehicle inspected by an authorized Kia dealer.

* For more details, refer to "Forward Collision-Avoidance Assist (FCA) - front view camera only (if equipped)" on page 5-72.

Electronic Parking Brake (EPB) warning light  (if equipped)

This warning light illuminates:


- Once you set the ignition switch or ENGINE START/STOP button to the ON position.
 - It illuminates for approximately 3 seconds and then goes off.
- When there is a malfunction with the EPB. In this case, you should have the vehicle inspected by an authorized Kia dealer.

4

*** NOTICE**

Electronic Parking Brake (EPB) Warning Light

The Electronic Parking Brake (EPB) Warning Light may illuminate when the Electronic Stability Control (ESC) Indicator Light comes on to indicate that the ESC is not working properly (This does not indicate malfunction of the EPB).

Exhaust system (GPF) warning light 

This warning light illuminates:

- When there is a malfunction with Gasoline Particulate Filter (GPF) system.

SPORT mode

SPORT SPORT mode manages the driving dynamics by automatically adjusting the steering effort, and the engine and transmission control logic for enhanced driver performance.

- When SPORT mode is selected by turning the knob, the SPORT indicator (red color) will illuminate.
- Whenever the engine is restarted, the Drive Mode will revert back to NORMAL mode. If SPORT mode is desired, re-select SPORT mode from the knob.
- When SPORT mode is activated:
 - The engine rpm will tend to remain raised over a certain length of time even after releasing the accelerator.
 - Upshifts are delayed when accelerating.

*** NOTICE**

In SPORT mode, the fuel efficiency may decrease.

Forward Collision-Avoidance Assist (FCA) – front view camera only (if equipped)

Forward Collision-Avoidance Assist system is designed to detect and monitor the vehicle ahead or a pedestrian in the roadway through front view camera recognition to warn the driver that a collision is imminent, and if necessary, apply emergency braking.

⚠ WARNING

Take the following precautions when using Forward Collision-Avoidance Assist system:

- This system is only a supplemental system and it is not intended to, nor does it replace the need for extreme care and attention of the driver. The sensing range and objects detectable by the sensors are limited. Pay attention to the road conditions at all times.
- NEVER drive too fast in accordance with the road conditions or while cornering.
- Always drive cautiously to prevent unexpected and sudden situations from occurring. FCA does not stop the vehicle completely and does not avoid all collisions due to system limitations.

System setting and activation

System setting

The driver can activate FCA by placing the ignition switch to the ON position and by selecting on the LCD display:

'User Settings → Driver Assistance → Forward Safety'

- If you select "Active Assist", FCA system activates. FCA produces warning messages and warning alarms in accordance with the collision risk levels. Braking assist will be applied in accordance with the collision risk.
- If you select 'Warning Only', FCA system activates and produces only warning alarms in accordance with the collision risk levels. Braking assist will not be applied in this setting.
- If you select 'Off', FCA system deactivates.



The warning light illuminates on the LCD display, when you cancel FCA system. The driver can monitor FCA ON/OFF status on the LCD display. Also, the warning light illuminates when the ESC (Electronic Stability Control) is turned off. If the warning light remains ON when FCA is activated, you should have the system checked by an authorized Kia dealer.

Setting Warning Timing

The driver can select the initial warning activation time on the LCD display. If your vehicle is equipped with an infotainment system, you can learn how to setup on the website via QR code in the infotainment quick reference guide.

Go to the 'User Settings → Driver Assistance → Warning Timing → Normal/Later'.

The options for the initial Forward Collision Warning includes the following:

- Normal: When this option is selected, the initial Forward Collision Warning is activated sensitively. If you feel the warning activates too early, set Forward Collision Warning to 'Later'. Even though, 'Normal' is selected if the front vehicle suddenly stops the initial warning activation time may not seem fast.
- Later: When this option is selected, the initial Forward Collision Warning is activated later than normal. This setting reduces the amount of distance between the vehicle ahead before the initial warning occurs. Select 'Later' when traffic is light and when driving speed is slow.

5

*** NOTICE**

If you change the warning timing, the warning time of other systems may change. Always be aware before changing the warning timing.

Prerequisite for activation

FCA gets ready to be activated, when 'Active Assist' or 'Warning Only' under Forward Safety is selected in on the LCD display, and when the following prerequisites are satisfied.

- The ESC (Electronic Stability Control) is on.
- Vehicle speed is over 6 mph (10 km/h). (FCA is only activated within a certain speed range.)
- The system detects a vehicle in front, which may collide with your vehicle. (FCA may not be activated or may sound a warning alarm in accordance with the driving situation or vehicle condition.)

⚠ WARNING

- FCA automatically activates upon placing the ignition switch or START/STOP button to the ON position. The driver can deactivate FCA by canceling the system setting on the LCD display. To avoid driver distractions, do not attempt to set or cancel FCA while driving the vehicle.
- FCA automatically deactivates upon canceling the ESC. When the ESC is canceled, FCA cannot be activated on the LCD display. In this situation, FCA warning light will illuminate, but it does not indicate a malfunction of the system.
- Set or cancel FCA with controlling switches on steering wheel after stopping the vehicle in a safe place for your safety.

FCA warning message and brake control

FCA produces warning messages, and warning alarms in accordance with the collision risk levels, such as abrupt stopping of the vehicle in front, insufficient braking distance, pedestrian detection. Also, it controls the brakes in accordance with the collision risk levels.

Collision Warning (1st warning)



This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

Your vehicle may slow down slightly.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 112 mph (180 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)
- For pedestrians the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 37 mph (60 km/h). (Depending on the condition of pedestrians and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select 'Warning Only', FCA system activates and produces

only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.

Emergency Braking (2nd warning)



This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

The brake control is maximized just before a collision, reducing impact when it strikes a forward vehicle.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 37 mph (60 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)



Driving your vehicle

- For pedestrians, the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 37 mph (60 km/h). (Depending on the condition of pedestrians and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select 'Warning Only', FCA system activates and produces only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.

Brake operation

In an urgent situation, the braking system enters into the ready status for prompt reaction against the driver's depressing the brake pedal.

- FCA provides additional braking power for optimum braking performance, when the driver depresses the brake pedal.
- The braking control is automatically deactivated, when the driver sharply depresses the accelerator pedal, or when the driver abruptly operates the steering wheel.
- FCA brake control is automatically canceled, when risk factors disappear.

Forward Collision-Avoidance Assist (FCA) – front view camera only

⚠ CAUTION

The driver should always use extreme caution when operating the vehicle, even though there is no warning message or warning alarm.

⚠ WARNING

FCA system cannot avoid all collisions nor completely stop the vehicle before collision. The driver is responsible to safely drive and control the vehicle.

⚠ WARNING

FCA system logic operates within certain parameters, such as the distance from the vehicle ahead, the speed of the vehicle ahead, and the driver's vehicle speed. Certain conditions such as inclement weather and road conditions may affect the operation of FCA system.

Never deliberately drive dangerously to activate the system.

FCA sensor (front view camera)


The sensor detects vehicle or pedestrian ahead. In order for FCA system to operate properly, always make sure the sensor cover or sensor is clean and free of dirt, snow, and debris.



Dirt, snow, or foreign substances may adversely affect the sensing performance of the sensor.

Warning message and warning light

Forward Collision-Avoidance Assist (FCA) system disabled. Camera obscured

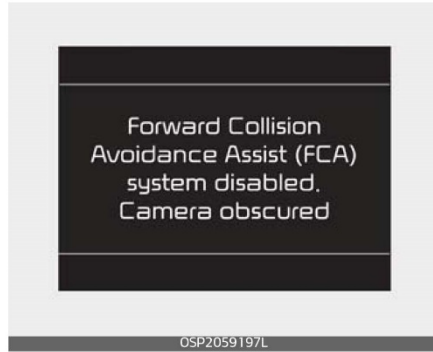

When the camera is blocked with dirt, snow, or debris, FCA system operation may not be able to detect other vehicles.

If this occurs, a warning message will appear on the LCD display.

The system will operate normally when such dirt, snow or debris is removed.

FCA may not properly operate in an area (e.g. open terrain) where any objects or vehicles are not detected after turning on the engine.

Also, even though a warning message does not appear on the LCD display, FCA may not properly operate.

⚠ WARNING

FCA system may not activate without any warning messages depending on driving and road conditions.

*** NOTICE**

- Doing so may adversely affect the sensing performance of the sensor.
- Always keep the sensor clean and free of dirt and debris.
- Be careful not to apply unnecessary force on the sensor. If the sensor is forcibly moved out of proper alignment, FCA system may not operate correctly. In this case, a warning message may not be displayed. In this case, take your vehicle to an authorized Kia dealer and have the system inspected.
- Use only genuine parts to repair or replace a damaged part.
- Do not tint the window or install stickers and/or accessories around the inside mirror where the camera is installed.
- Make sure the front camera installation point does not get wet.
- Do not impact or arbitrarily remove any camera components.
- Do not place reflective objects (white paper or mirror etc.) on the dashboard.

The system may activate unnecessarily due to reflect of the sunlight.

- Excessive audio volume may disturb the sound of the system warning alarm.
- For more precautions related to the camera sensor, refer to the "Lane Keeping Assist (LKA)" on page 5-125.

FCA malfunction

Check Forward Collision-Avoidance Assist system



- When FCA is not working properly, FCA warning light (🚨) will illuminate and the warning message will appear for a few seconds. After the message disappears, the master warning light (⚠) will illuminate. In this case, you should have the vehicle inspected by an authorized Kia dealer.

Driving your vehicle

- FCA warning message may appear along with the illumination of the ESC (Electronic Stability Control) warning light. Both FCA warning light and warning message will disappear once the ESC warning light issue is resolved.

WARNING

- FCA is only a supplemental system for the driver's convenience. It is the driver's responsibility to control the vehicle operation. Do not solely depend on FCA system. Rather, maintain a safe braking distance, and, if necessary, depress the brake pedal to reduce the driving speed or to stop the vehicle.
- In certain instances and under certain driving conditions, FCA system may activate unintentionally. This initial warning message appears on the LCD display with a warning chime. Also, due to sensing limitations, in certain situations, the camera recognition system may not detect the vehicle ahead. FCA system may not activate and the warning message may not be displayed.
- FCA system may not activate if the driver applies the brake pedal before warning to avoid the risk of a collision.

Forward Collision-Avoidance Assist (FCA) - front view camera only

- FCA system does not operate when the vehicle is in reverse.
- FCA system is not designed to detect other objects on the road such as animals.
- FCA system does not detect vehicles in the opposite lane.
- FCA system does not detect cross traffic vehicles that are approaching.
- FCA system cannot detect the driver approaching the side view of a parked vehicle (for example on a dead end street). In these cases, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce the driving speed in order to maintain a safe distance or to stop the vehicle.

5

Limitations of FCA

Forward Collision-Avoidance Assist system is designed to assist driver in highly dangerous driving situation and has not responsibility to all kind of situations.

FCA System detects driving situations through radar signals and camera recognition and FCA system may not operate normally in driving situation beyond radar signals and camera recognition performance. The driver must pay careful attention in the following situations

where the FCA operation may not be operated properly.

Detecting vehicles

The sensor may be limited when:

- Starting engine or rebooting front camera system wouldn't operate for 15 seconds.
- The camera is blocked with a foreign object or debris
- The camera lens is contaminated due to tinted, filmed or coated windshield, damaged glass, or stuck of foreign matter (sticker, bug, etc.) on the glass
- Inclement weather such as heavy rain or snow obscures the field of view of the camera
- There is interference by electromagnetic waves
- The camera sensor recognition is limited
- The vehicle in front is too small to be detected (for example a motor cycle or bicycle etc.)
- The camera does not recognize the entire vehicle in front.
- The vehicle in front is an oversize vehicle or trailer that is too big to be detected by the camera recognition system (for example a tractor trailer, etc.)
- The camera's field of view is not well illuminated (either too dark or too much reflection or too much backlight that obscures the field of view)

- The vehicle in front does not have their rear lights properly turned ON
- The outside brightness changes suddenly (for example when entering or exiting a tunnel)
- Light coming from a street light or an oncoming vehicle is reflected on a wet road surface such as a puddle in the road
- Backlight is projected in the direction of the vehicle (including opposite vehicle headlights)
- The field of view in front is obstructed by sun glare or head light of oncoming vehicle.
- The windshield glass is fogged up; a clear view of the road is obstructed
- The vehicle in front is driving erratically The vehicle is on unpaved or uneven rough surfaces, or road with sudden gradient changes.
- In case of a vehicle in front is special vehicle, truck and trailer, etc. that contains a irregular form of luggage.
- The vehicle is severely shaken.
- In case of camera sensor recognition is in a marginal state.
- In case of be towed by a trailer or other vehicle.
- In case of interference caused by other electromagnetic waves.
- In case of a vehicle in front is driving erratically.

- In case of a vehicle in front has extremely high ground clearance.
- The vehicle drives inside a building, such as a basement parking lot
- The camera is damaged.
- The brightness outside is too low such as when the headlamps are not on at night or the vehicle is going through a tunnel.
- The shadow is on the road by a median strip, trees, etc.
- The vehicle drives through a toll-gate.
- The rear part of the vehicle in front is not normally visible. (the vehicle turns in other direction or the vehicle is overturned.)
- The adverse road conditions cause excessive vehicle vibrations while driving
- The sensor recognition changes suddenly when passing over a speed bump
- The vehicle in front is moving vertically to the driving direction
- The vehicle in front is stopped vertically
- The vehicle in front is driving towards your vehicle or reversing
- You are on a roundabout and the vehicle in front circles

Detecting pedestrians

The sensor may be limited when:


- The pedestrian is not fully detected by the camera recognition system, for example, if the pedestrian is leaning over or is not fully walking upright.
- The pedestrian is moving very quickly or appears abruptly in the camera detection area
- The pedestrian is wearing clothing that easily blends into the background, making it difficult to be detected by the camera.

Recognition system

- The outside lighting is too bright (e.g. when driving in bright sunlight or in sun glare) or too dark (e.g. when driving on a dark rural road at night)
- It is difficult to detect and distinguish the pedestrian from other objects in the surroundings, for example, when there is a group of pedestrians or a large crowd.
- There is an item similar to a person's body structure.
- The pedestrian is small.
- The pedestrian has impaired mobility. Never try to test the operation
- When the pedestrian suddenly interrupts in front of the vehicle



Driving on a curve

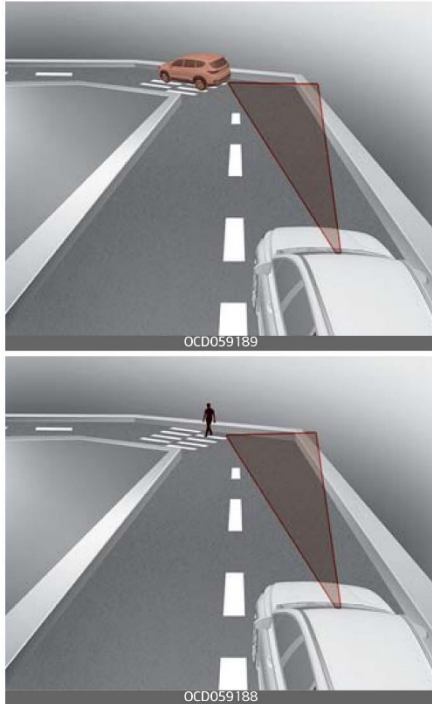


The performance of FCA system may be limited when driving on a curved road.

On curved roads, the other vehicle on the same lane is not recognized and FCA system's performance may be degraded. This may result in unnecessary alarm or braking or no alarm or braking when necessary.

Also, in certain instances the front camera recognition system may not detect the vehicle traveling on a curved road.

In these cases, the driver must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

FCA system may recognize a vehicle in the next lane when driving on a curved road.

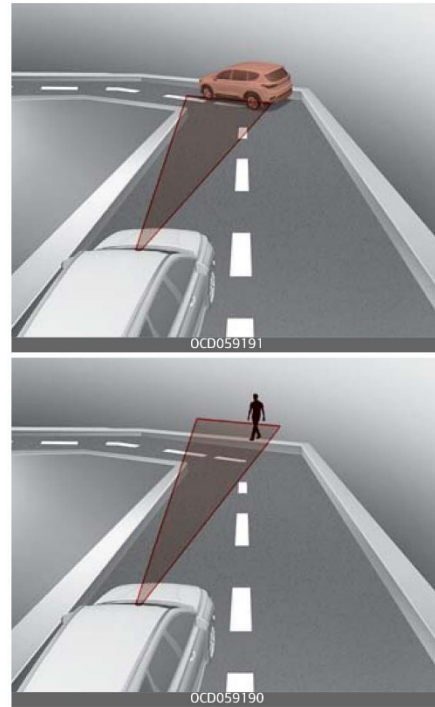

In this case, the system may unnecessarily alarm the driver and apply the brake.

Always pay attention to road and driving conditions, while driving. If necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Driving your vehicle

Also, when necessary depress the accelerator pedal to prevent the system from unnecessarily decelerating your vehicle.

Check to be sure that the road conditions permit safe operation of FCA.

Driving on a slope



The performance of FCA decreases while driving upward or downward on a slope, not recognizing the vehicle in front in the same lane. It may unnecessarily produce the warning message and the warning alarm, or it may not produce the warning


Forward Collision-Avoidance Assist (FCA) – front view camera only

message and the warning alarm at all.

When FCA suddenly recognizes the vehicle in front while passing over a slope, you may experience sharp deceleration.

Always keep your eyes forward while driving upward or downward on a slope, and, if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.


Changing lanes

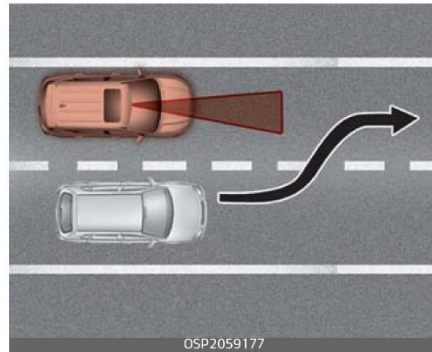

When a vehicle changes lanes in front of you, FCA system may not immediately detect the vehicle, especially if the vehicle changes lanes abruptly. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.


5

Driving your vehicle

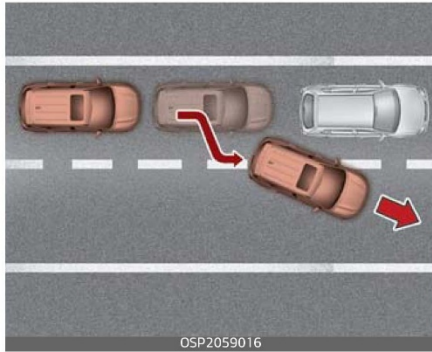

When driving in stop-and-go traffic, and a stopped vehicle in front of you merges out of the lane, FCA system may not immediately detect the new vehicle that is now in front of you. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Recognizing the vehicle

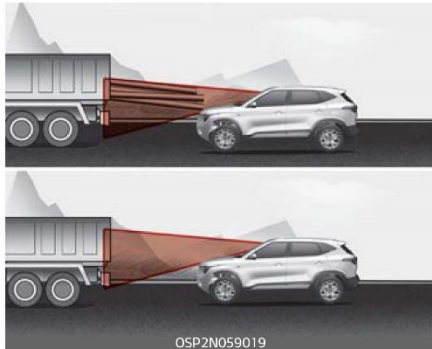

If the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance,

Forward Collision-Avoidance Assist (FCA) – front view camera only

additional special attention is required. FCA system may not be able to detect the cargo extending from the vehicle. In these instances, you must maintain a safe braking distance from the rearmost object, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.

⚠ WARNING

- Do not use Forward Collision-Avoidance Assist system when towing a vehicle. Application of FCA system while towing may adversely affect the safety of your vehicle or the towing vehicle.
- Use extreme caution when the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance.
- Forward Collision-Avoidance Assist may operate when an object, which has similar shape or characteristic to a vehicle or pedestrian, is detected.
- FCA system is designed to detect and monitor the vehicle ahead in the roadway through camera recognition. It is not designed to detect pedestrians, bicycles, motorcycles, or smaller wheeled objects such as luggage bags, shopping carts, or strollers.

Driving your vehicle

- Never try to test the operation of FCA system. Doing so may cause severe injury or death.
- If the front bumper, front glass, or camera have been replaced or repaired, you should have the vehicle inspected by an authorized Kia dealer.

* NOTICE

In some instances, FCA system may be canceled when subjected to electromagnetic interference.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following three conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

Forward Collision-Avoidance Assist (FCA) - front view camera only

Radio frequency radiation exposure information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 8 in (20 cm) between the radiator (antenna) and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Forward Collision-Avoidance Assist (FCA) – sensor fusion (if equipped)

Forward Collision-Avoidance Assist system is designed to detect and monitor the vehicle, a pedestrian or a cyclist ahead in the roadway through and front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, apply emergency braking.

⚠ WARNING

Forward Collision-Avoidance Assist system Limitations

FCA system is a supplemental system and is not a substitute for safe driving practices.

It is the responsibility of the driver to always check the speed and distance to the vehicle ahead and to be prepared to apply the brakes.

⚠ WARNING

Take the following precautions when using Forward Collision-Avoidance Assist system:

- This system is only a supplemental system and it is not intended to, nor does it replace the need for extreme care and attention of the driver. The sensing range and objects detectable by the sensors

are limited. Pay attention to the road conditions at all times.

- NEVER drive too fast in accordance with the road conditions or while cornering.
- Always drive cautiously to prevent unexpected and sudden situations from occurring. FCA does not stop the vehicle completely and does not avoid all collisions due to system limitations.

System setting and activation

System setting

The driver can activate FCA by placing the ignition switch to the ON position and by selecting on the LCD display 'User Settings → Driver Assistance → Forward Safety'. If your vehicle is equipped with an infotainment system, you can learn how to setup on the website via QR code in the infotainment quick reference guide.:

- If you select "Active Assist", FCA system activates. FCA produces warning messages and warning alarms in accordance with the collision risk levels. Also, it controls the brakes in accordance with the collision risk levels.
- If you select "Warning Only", FCA system activates and produces only warning alarms in accordance with the collision risk levels.

You should control the brake directly because FCA system do not control the brake.

- If you select "Off", FCA system deactivates.



The warning light illuminates on the LCD display, when you cancel FCA system. The driver can monitor FCA ON/OFF status on the LCD display. Also, the warning light illuminates when the ESC (Electronic Stability Control) is turned off. If the warning light remains ON when FCA is activated, you should have the vehicle inspected by an authorized Kia dealer.

- The driver can select the initial warning activation time on the LCD display or infotainment system display. Go to the 'User Settings → Driver Assistance → Warning Timing → Normal/Later'.

The options for the initial Forward Collision Warning includes the following:

- Normal: When this condition is selected, the initial Forward Collision Warning is activated sensitively. If you feel the warning activates too early, set Forward Collision Warning to 'Later'. Even though, 'Normal' is selected if the front vehicle suddenly stops the initial warning activation time may not seem fast.

- Later: When this condition is selected, the initial Forward Collision Warning is activated later than normal. This setting reduces the amount of distance between the vehicle or pedestrian ahead before the initial warning occurs. Select 'Later' when traffic is light and when driving speed is slow.
- The driver can select the warning volume of Forward Collision Warning in the User Settings in the LCD display by selecting 'User Settings → Driver Assistance → Warning Volume → High/Medium/Low'.

Prerequisite for activation

FCA gets ready to be activated, when FCA is selected on the LCD display or infotainment system display, and when the following prerequisites are satisfied.

- The ESC (Electronic Stability Control) is on.
- Vehicle speed is over 6 mph (10 km/h). (FCA is only activated within a certain speed range.)
- The system detects a vehicle or pedestrian in front, which may collide with your vehicle. (FCA may not be activated or may sound a warning alarm in accordance with the driving situation or vehicle condition.)

⚠ WARNING

- Completely stop the vehicle on a safe location before operating the switch on the steering wheel to activate/deactivate FCA system.
- FCA automatically activates upon placing the ignition switch to the ON position. The driver can deactivate FCA by canceling the system setting on the LCD display or infotainment system display.
- FCA automatically deactivates upon canceling the ESC (Electronic Stability Control). When the ESC is canceled, FCA cannot be activated on the LCD display or infotainment system display. FCA warning light will illuminate which is normal. At this time, FCA cannot be set even in instrument cluster or infotainment system user setting mode.

FCA warning message and system control

FCA produces warning messages and warning alarms in accordance with the collision risk levels, such as abrupt stopping of the vehicle in front, insufficient braking distance, pedestrian or cyclist (if equipped) detection. Also, it controls the brakes in accordance with the collision risk levels.

The driver can select the initial warning activation time in the User Settings in the LCD display or infotainment system display. The options for the initial Forward Collision Warning include Normal or Late initial warning time.

Collision Warning (1st warning)

This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

The Vehicle may slow down slightly.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 112 mph (180 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)

- For pedestrians and cyclists, the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 53 mph (85 km/h). (Depending on the condition of pedestrians and bike riders and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select "Warning Only", FCA system activates and produces only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.

Emergency Braking (2nd warning)



This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

The brake control is maximized just before a collision, reducing impact when it strikes a forward vehicle.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 47 mph (75 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)
- For pedestrians and cyclists, the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 40 mph (65 km/h). (Depending on the condition of pedestrians and bike riders and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select "Warning Only", FCA system activates and produces only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.

Brake operation

In an urgent situation, the braking system enters into the ready status for prompt reaction against the driver's depressing the brake pedal.

- The braking control is automatically deactivated, when the driver sharply depresses the accelerator pedal, or when the driver abruptly operates the steering wheel.
- FCA brake control is automatically canceled, when risk factors disappear.

CAUTION

- The driver should always use extreme caution while operating the vehicle, whether or not there is a warning message or alarm from FCA system.
- If any other warning sound such as seat belt warning chime is already generated, Forward Collision-Avoidance Assist system warning may not sound.

WARNING

The braking control cannot completely stop the vehicle nor avoid all collisions. The driver should hold the responsibility to safely drive and control the vehicle.

WARNING

FCA system logic operates within certain parameters, such as the distance from the vehicle or pedestrian ahead, the speed of the vehicle ahead, and the driver's vehicle speed. Certain conditions such as inclement weather and road conditions may affect the operation of FCA system.

WARNING

Never deliberately drive dangerously to activate the system.

**FCA sensor (front view camera/
front radar) (if equipped)**

In order for FCA system to operate properly, always make sure the sensor cover or sensor is clean and free of dirt, snow, and debris.

front view camera



front radar



Dirt, snow, or foreign substances on the sensor cover or sensor may adversely affect the sensing performance of the sensor.

*** NOTICE**

- Do not apply license plate molding or foreign objects such as a bumper sticker or a bumper guard near the radar sensor. Doing so may adversely affect the sensing performance of the radar.
- Always keep the radar sensor and cover clean and free of dirt and debris.
- Use only a soft cloth to wash the vehicle. Do not spray pressurized water directly on the sensor or sensor cover.
- Be careful not to apply unnecessary force on the radar sensor or sensor cover. If the sensor is forcibly moved out of proper alignment, FCA system may not operate correctly. In this case, a warning message may not be dis-

played. You should have the vehicle inspected by an authorized Kia dealer.

- If the front bumper becomes damaged in the area around the radar sensor, FCA system may not operate properly. You should have the vehicle inspected by an authorized Kia dealer.
- Use only genuine parts to repair or replace a damaged sensor or sensor cover. Do not apply paint to the sensor cover.

*** NOTICE**

- NEVER install any accessories or stickers on the front windshield, nor tint the front windshield.
 - NEVER locate any reflective objects (i.e. white paper, mirror) over the dashboard. Any light reflection may cause a malfunction of the system.
 - Pay extreme caution to keep the camera out of water.
 - NEVER disassemble the camera assembly, nor apply any impact on the camera assembly.
- If the sensor is forcibly moved out of proper alignment, FCA system may not operate correctly. In this case, a warning message may not be displayed. You should have the vehicle inspected by an authorized Kia dealer.

5

- Playing the vehicle audio system at high volume may offset the system warning sounds.


*** NOTICE**

Have the vehicle inspected by an authorized Kia dealer when:

- The windshield glass is replaced.
- The radar sensor or cover gets damaged or replaced.

Warning message and warning light

Forward Collision-Avoidance Assist (FCA) system disabled. Radar blocked

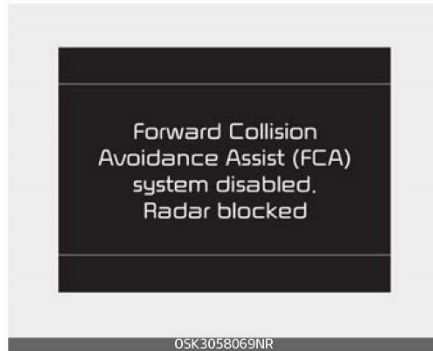

When the sensor cover is blocked with dirt, snow, or debris, FCA system operation may stop temporarily. If this occurs, a warning message will appear on the LCD display.

Remove any dirt, snow, or debris and clean the radar sensor cover before operating FCA system.

The system will operate normally when such dirt, snow or debris is removed.

However FCA may not properly operate in an area (e.g. open terrain), where any substances are not detected after turning ON the engine. Also, even though a warning message does not appear on the LCD display, FCA may not properly operate.

⚠ WARNING

FCA system may not activate according to road conditions, inclement weather, driving conditions or traffic conditions.

System malfunction

Check Forward Collision Avoidance Assist system



- When FCA is not working properly, FCA warning light (⚠) will illuminate and the warning message

will appear for a few seconds. After the message disappears, the master warning light (⚠️) will illuminate. In this case, you should have the vehicle inspected by an authorized Kia dealer.

- FCA warning message may appear along with the illumination of the ESC (Electronic Stability Control) warning light.

⚠️ WARNING

- FCA is only a supplemental system for the driver's convenience. The driver should hold the responsibility to control the vehicle operation. Do not solely depend on FCA system. Rather, maintain a safe braking distance, and, if necessary, depress the brake pedal to reduce the driving speed.
- In certain instances and under certain driving conditions, FCA system may activate unintentionally. This initial warning message appears on the LCD display with a warning chime. Also, in certain instances the camera recognition system or front radar sensor may not detect the vehicle, pedestrian or cyclist (if equipped) ahead. FCA system may not activate and the warning message will not be displayed.
- If the vehicle in front stops suddenly, you may have less control

of the brake system. Therefore, always keep a safe distance between your vehicle and the vehicle in front of you.

- FCA system may activate during braking and the vehicle may stop suddenly, shifting loose objects toward the passengers. Always keep loose objects secured.
- FCA system may not activate if the driver applies the brake pedal to avoid a collision.
- The brake control may be insufficient, possibly causing a collision, if a vehicle in front abruptly stops. Always use extreme caution.
- Occupants may get injured, if the vehicle abruptly stops by the activated FCA system. Use extreme caution.
- FCA system operates only to detect vehicles, pedestrians or cyclists in front of the vehicle.

⚠️ WARNING

- FCA system does not operate when the vehicle is in reverse.
- FCA system is not designed to detect other objects on the road, such as animals.
- FCA system does not detect vehicles in the opposite lane.
- FCA system does not detect cross traffic vehicles that are approaching.
- FCA system cannot detect the driver approaching the side view

of a parked vehicle (for example on a dead end street.)

- FCA system cannot detect the cross traffic cyclist that are approaching.

In these cases, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce the driving speed in order to maintain a safe distance.

Limitations of FCA

Forward Collision-Avoidance Assist system is designed to monitor assist driver in highly dangerous driving situation but does not have responsibility to all kinds of situations. FCA System detects driving situations through camera recognitions and radar signals, and thus, FCA system may not operate normally in driving situation beyond camera recognition performance and radar signals. The driver must pay careful attention in the following situations where FCA operation may not be operated properly.

Detecting vehicles

The sensor may be limited when:


- Starting engine or rebooting front camera system wouldn't operate for 15 seconds.
- Front view camera and front radar contaminated or blocked.
- The system may not work around 15 seconds after starting the vehicle or the initialization or rebooting of the front view camera.
- The front view camera or front radar is blocked with a foreign object or debris
- The camera lens is contaminated due to tinted, filmed or coated windshield, damaged glass, or stuck of foreign matter (sticker, bug, etc.) on the glass
- Inclement weather such as heavy rain or snow obscures the field of view of the front view camera or front radar
- In case of interference caused by other electromagnetic waves.
- The vehicle in front is too small to be detected (for example a motorcycle etc.)
- In case of a vehicle in front is an oversized vehicle or trailer that is too big to be detected by the camera recognition system (for example a tractor, trailer, etc.)
- The camera does not recognize the entire vehicle in front.

- In case of a vehicle in front is driving erratically.
- In case of camera or radar sensor recognition is in a marginal state.
- The camera is damaged.
- The vehicle is severely shaken.
- When backlight is projected in the direction of the vehicle (including opposite vehicle headlights)
- In case of a vehicle in front has extremely high ground clearance.
- In case of being towed by a trailer or other vehicle.
- There is interference by electromagnetic waves.
- There is severe irregular reflection from the radar sensor (for example guardrail or oncoming vehicle, etc.)
- The front view camera or front radar recognition is limited.
- The front view camera does not recognize the entire vehicle in front.
- The front view camera is damaged.
- The brightness outside is too low such as when the headlamps are not on at night or the vehicle is going through a tunnel.
- The shadow is on the road by a median strip, trees, etc.
- The vehicle drives through a toll-gate.
- The rear part of the vehicle in front is not normally visible. (the vehicle turns in other direction or the vehicle is overturned.)
- The vehicle in front is too small to be detected (for example a motorcycle or a bicycle, etc.)
- The vehicle in front is an oversize vehicle or trailer that is too big to be detected by the camera recognition system (for example a tractor trailer, etc.)
- The camera's field of view is not well illuminated (either too dark or too much reflection or too much backlight that obscures the field of view)
- The vehicle in front does not have their rear lights or their rear lights does not turned ON or their rear lights are located unusually.
- The outside brightness changes suddenly, for example when entering or exiting a tunnel
- When light coming from a street light or an oncoming vehicle is reflected on a wet road surface such as a puddle in the road
- The field of view in front is obstructed by sun glare
- The windshield glass is fogged up; a clear view of the road is obstructed
- The vehicle in front is driving erratically
- The vehicle is driven near areas containing metal substances as a construction zone, railroad, etc.
- The vehicle drives inside a building, such as a basement parking lot


Driving your vehicle

- The adverse road conditions cause excessive vehicle vibrations while driving
- The sensor recognition changes suddenly when passing over a speed bump
- The vehicle in front is moving vertically to the driving direction
- The vehicle in front is stopped vertically
- The vehicle in front is driving towards your vehicle or reversing
- You are on a roundabout and the vehicle in front circles

Driving on a curve

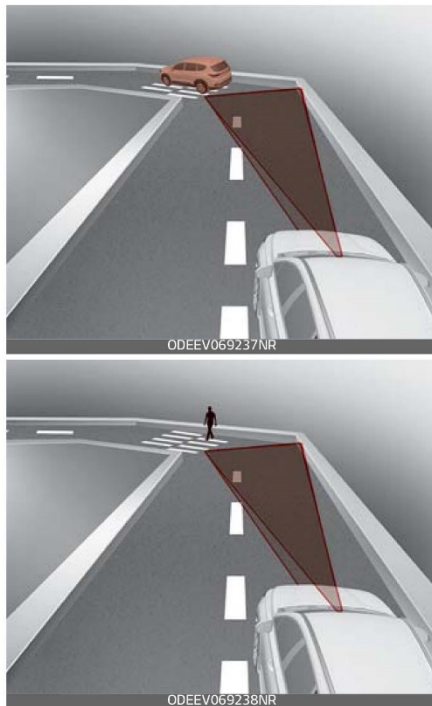

Forward Collision-Avoidance Assist (FCA) – sensor fusion

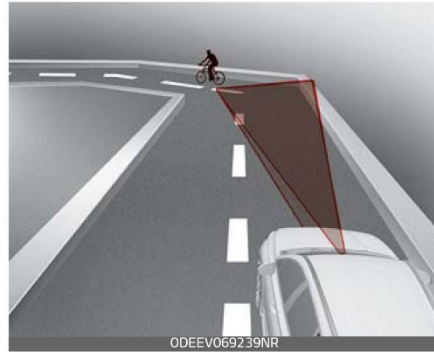

The performance of FCA system may be limited when driving on a curved road.




Also, in certain instances the front radar sensor or front view camera recognition system may not detect the vehicle traveling on a curved road.

In these cases, the driver must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

FCA system may recognize a vehicle in the next lane when driving on a curved road.

Driving your vehicle

Forward Collision-Avoidance Assist (FCA) – sensor fusion

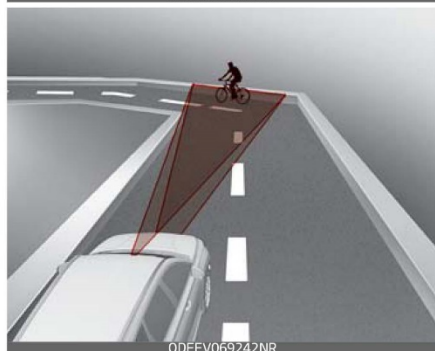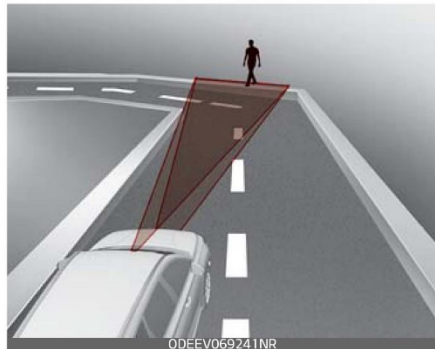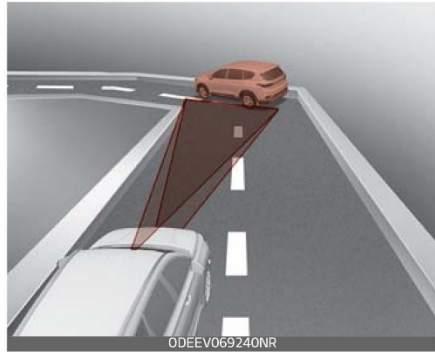

In this case, the system may unnecessarily alarm the driver and apply the brake.

Always pay attention to the road and driving conditions, while driving. If necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Also, when necessary depress the accelerator pedal to prevent the system from unnecessarily decelerating your vehicle.

Check to be sure that the road conditions permit safe operation of FCA.

Driving on a slope



5




The performance of FCA decreases while driving upward or downward on a slope, as it may not recognize the vehicle in front in the same lane. It may unnecessarily produce the warning message and the warning alarm, or it may not produce the warning message and the warning alarm at all.

When FCA suddenly recognizes the vehicle in front while passing over a slope, you may experience sharp deceleration.

Always keep your eyes forward while driving upward or downward on a slope, and, if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.

Changing lanes

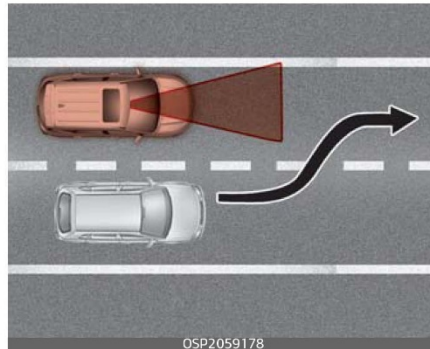


When a vehicle changes lanes in front of you, FCA system may not immediately detect the vehicle, especially if the vehicle changes lanes abruptly. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.



When driving in stop-and-go traffic, and a stopped vehicle in front of you merges out of the lane, FCA system may not immediately detect the new vehicle that is now in front of

you. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Recognizing the vehicle

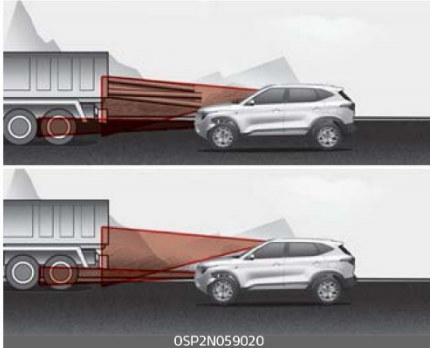

If the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance, additional special attention is required. FCA system may not be able to detect the cargo extending from the vehicle. In these instances, you must maintain a safe braking distance from the rearmost object, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.

Situation in which the system may not detect pedestrian and cyclist properly.

The sensor may be limited when:

- The pedestrians or cyclists are not fully detected by the front view camera recognition system, for example, if the pedestrian is leaning over or is not fully walking upright.
- The pedestrians or cyclists are moving very quickly or appears abruptly in the front view camera detection area.
- The pedestrians or cyclists are wearing clothing that easily blends into the background, making it difficult to be detected by the front view camera recognition system.
- The outside lighting is too bright (e.g. when driving in bright sunlight or in sun glare) or too dark (e.g. when driving on a dark rural road at night).
- It is difficult to detect and distinguish the pedestrians or cyclists from other objects in the surroundings, for example, when there is a group of pedestrians or cyclists or a large crowd.
- There is an item similar to a person's body structure.
- The pedestrians or cyclists are small.
- The pedestrian has impaired mobility.

5

- The sensor recognition is limited
- In case of radar or camera sensor recognition is in a marginal state.
- In case of a large number of pedestrians or cyclists are gathered.
- The radar sensor or front view camera is blocked with a foreign object or debris.
- The camera lens is contaminated due to tinted, filmed or coated windshield, damaged glass, or stuck of foreign matter (sticker, bug, etc.) on the glass.
- The brightness outside is too low such as when the headlamps are not on at night or the vehicle is going through a tunnel.
- Inclement weather such as heavy rain or snow obscures the field of view of the radar sensor or front view camera.
- When light coming from a street light or an oncoming vehicle is reflected on a wet road surface such as a puddle in the road.
- The field of view in front is obstructed by sun glare.
- The windshield glass is fogged up; a clear view of the road is obstructed.
- The adverse road conditions cause excessive vehicle vibrations while driving.
- The sensor recognition changes suddenly when passing over a speed bump.
- You are on a roundabout.
- When the pedestrian or cyclist suddenly interrupts in front of the vehicle.
- When the cyclist in front is riding intersected with the driving direction.
- When there is any other electromagnetic interference.
- When the construction area, rail or other metal object is near the cyclist.
- If the bicycle material is not reflected well on the radar.

WARNING

- Do not use Forward Collision-Avoidance Assist system when towing a vehicle. Application of FCA system while towing may adversely affect the safety of your vehicle or the towing vehicle.
- Use extreme caution when the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance.
- FCA system is designed to detect and monitor the vehicle ahead or detect a pedestrian or cyclist (if equipped) in the roadway through radar signals and camera recognition. It is not designed to detect bicycles, motorcycles, or smaller wheeled objects, such as luggage bags, shopping carts, or strollers.

- Never try to test the operation of FCA system. Doing so may cause severe injury or death.
- If the front bumper, front glass, front radar or front view camera have been replaced or repaired, you should have the vehicle inspected by an authorized Kia dealer.

*** NOTICE**

In some instances, FCA system may be canceled when subjected to electromagnetic interference.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following three conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

Radio frequency radiation exposure information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 8 in (20 cm) between the radiator (antenna) and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



APPENDIX C

Run Log

Subject Vehicle: **2021 Kia Seltos SX Turbo AWD**

Test Date: **2/18/2021**

Principal Other Vehicle: **2006 Acura RL**

Run	Test Type	Valid Run?	TTCW Sound (sec)	TTCW Light (sec)	TTCW Margin (sec)	Pass/Fail	Notes
1	Stopped POV	N					Did not pick up light signal
2		Y	2.71	2.58	0.61	Pass	
3		N					Did not pick up light
4		Y	2.70	2.58	0.60	Pass	
5		Y	2.78	2.64	0.68	Pass	
6		Y	2.67	2.53	0.57	Pass	
7		Y	2.75	2.62	0.65	Pass	
8		Y	2.75	2.62	0.65	Pass	
9		Y	2.71	2.55	0.61	Pass	
18	Decelerating POV	Y	2.54	2.42	0.14	Pass	
19		N					SV yaw
20		Y	2.60	2.47	0.20	Pass	
21		Y	2.52	2.41	0.12	Pass	
22		Y	2.53	2.42	0.13	Pass	
23		Y	2.53	2.42	0.13	Pass	
24		N					SV yaw, lateral
25		Y	2.53	2.40	0.13	Pass	
26		Y	2.52	2.40	0.12	Pass	

Run	Test Type	Valid Run?	TTCW Sound (sec)	TTCW Light (sec)	TTCW Margin (sec)	Pass/Fail	Notes
10	Slower POV	Y	2.36	2.24	0.36	Pass	
11		N					GPS
12		Y	2.36	2.23	0.36	Pass	
13		Y	2.36	2.22	0.36	Pass	
14		Y	2.39	2.25	0.39	Pass	
15		Y	2.34	2.22	0.34	Pass	
16		Y	2.35	2.18	0.35	Pass	
17		Y	2.35	2.23	0.35	Pass	

APPENDIX D

Time History Plots

LIST OF FIGURES

	Page
Figure D1. Example Time History for Test Type 1, Passing.....	D-8
Figure D2. Example Time History for Test Type 1, Failing.....	D-9
Figure D3. Example Time History for Test Type 2, Passing.....	D-10
Figure D4. Example Time History for Test Type 2, Failing.....	D-11
Figure D5. Example Time History for Test Type 3, Passing.....	D-12
Figure D6. Example Time History Showing Invalid Lateral Offset Criteria.....	D-13
Figure D7. Time History for Run 2, FCW Test 1, Auditory Warning.....	D-14
Figure D8. Time History for Run 2, FCW Test 1, Visual Warning.....	D-15
Figure D9. Time History for Run 4, FCW Test 1, Auditory Warning.....	D-16
Figure D10. Time History for Run 4, FCW Test 1, Visual Warning.....	D-17
Figure D11. Time History for Run 5, FCW Test 1, Auditory Warning.....	D-18
Figure D12. Time History for Run 5, FCW Test 1, Visual Warning.....	D-19
Figure D13. Time History for Run 6, FCW Test 1, Auditory Warning.....	D-20
Figure D14. Time History for Run 6, FCW Test 1, Visual Warning.....	D-21
Figure D15. Time History for Run 7, FCW Test 1, Auditory Warning.....	D-22
Figure D16. Time History for Run 7, FCW Test 1, Visual Warning.....	D-23
Figure D17. Time History for Run 8, FCW Test 1, Auditory Warning.....	D-24
Figure D18. Time History for Run 8, FCW Test 1, Visual Warning.....	D-25
Figure D19. Time History for Run 9, FCW Test 1, Auditory Warning.....	D-26
Figure D20. Time History for Run 9, FCW Test 1, Visual Warning.....	D-27
Figure D21. Time History for Run 18, FCW Test 2, Auditory Warning.....	D-28
Figure D22. Time History for Run 18, FCW Test 2, Visual Warning.....	D-29
Figure D23. Time History for Run 20, FCW Test 2, Auditory Warning.....	D-30
Figure D24. Time History for Run 20, FCW Test 2, Visual Warning.....	D-31
Figure D25. Time History for Run 21, FCW Test 2, Auditory Warning.....	D-32
Figure D26. Time History for Run 21, FCW Test 2, Visual Warning.....	D-33
Figure D27. Time History for Run 22, FCW Test 2, Auditory Warning.....	D-34
Figure D28. Time History for Run 22, FCW Test 2, Visual Warning.....	D-35
Figure D29. Time History for Run 23, FCW Test 2, Auditory Warning.....	D-36
Figure D30. Time History for Run 23, FCW Test 2, Visual Warning.....	D-37
Figure D31. Time History for Run 25, FCW Test 2, Auditory Warning.....	D-38
Figure D32. Time History for Run 25, FCW Test 2, Visual Warning.....	D-39
Figure D33. Time History for Run 26, FCW Test 2, Auditory Warning.....	D-40
Figure D34. Time History for Run 26, FCW Test 2, Visual Warning.....	D-41
Figure D35. Time History for Run 10, FCW Test 3, Auditory Warning.....	D-42
Figure D36. Time History for Run 10, FCW Test 3, Visual Warning.....	D-43
Figure D37. Time History for Run 12, FCW Test 3, Auditory Warning.....	D-44
Figure D38. Time History for Run 12, FCW Test 3, Visual Warning.....	D-45
Figure D39. Time History for Run 13, FCW Test 3, Auditory Warning.....	D-46
Figure D40. Time History for Run 13, FCW Test 3, Visual Warning.....	D-47
Figure D41. Time History for Run 14, FCW Test 3, Auditory Warning.....	D-48

Figure D42. Time History for Run 14, FCW Test 3, Visual Warning.....	D-49
Figure D43. Time History for Run 15, FCW Test 3, Auditory Warning	D-50
Figure D44. Time History for Run 15, FCW Test 3, Visual Warning.....	D-51
Figure D45. Time History for Run 16, FCW Test 3, Auditory Warning	D-52
Figure D46. Time History for Run 16, FCW Test 3, Visual Warning.....	D-53
Figure D47. Time History for Run 17, FCW Test 3, Auditory Warning	D-54
Figure D48. Time History for Run 17, FCW Test 3, Visual Warning.....	D-55

Description of Time History Plots

A set of time history plots is provided for each valid run in the test series. Each set of plots comprises time varying data from both the Subject Vehicle (SV) and the Principal Other Vehicle (POV), as well as pass/fail envelopes and thresholds. The following is a description of data types shown in the time history plots, as well as a description of the color code indicating to which vehicle the data pertain.

Each time history plot consists of data pertinent to the test type under consideration, and therefore the data channels plotted vary according to test type. The test types (shown in the plot titles) include:

- FCW Test 1 – Stopped POV (SV at 45 mph)
- FCW Test 2 – Decelerating POV (Both vehicles at 45 mph with a 30 m gap, POV brakes at 0.3 g)
- FCW Test 3 – Slower Moving POV (SV at 45 mph, POV at 20 mph)

Time history figures include the following sub-plots:

- Warning – Displays the Forward Collision Warning Alert (which can be auditory, visual, or haptic). Depending on the type of FCW alert or instrumentation used to measure the alert, this can be any of the following:
 - Filtered, rectified, and normalized sound signal. The vertical scale is 0 to 1.
 - Filtered, rectified, and normalized acceleration (e.g., haptic alert, such as steering wheel vibration). The vertical scale is 0 to 1.
 - Light sensor signal.
- TTC (sec) – Indicates the Time to Collision as calculated up to the point of FCW alert issuance. The value of TTCW (Time to Collision at Warning) is given numerically on the right side of the figure. A passing value is indicated in green, while a failing value is indicated in red.
- SV Speed (mph) – Speed of the Subject Vehicle
- POV Speed (mph) – Speed of the Principal Other Vehicle
- Yaw Rate (deg/sec) – Yaw rate of both the Subject Vehicle and Principal Other Vehicle

- Lateral Offset (ft) – Lateral offset within the lane from the Subject Vehicle to the Principal Other Vehicle
- Ax (g) – Longitudinal acceleration of both the Subject Vehicle and Principal Other Vehicle
- Headway (ft) – Longitudinal separation between front of Subject Vehicle to rear of Principal Other Vehicle (Exclusive to test type 2)

Envelopes and Thresholds

Each of the time history plot figures can contain either green or yellow envelopes and/or black threshold lines. These envelopes and thresholds are used to programmatically and visually determine the validity of a given test run. Envelope and threshold exceedances are indicated with either red shading or red asterisks, and red text is placed to the right side of the plot indicating the type of exceedance.

Green envelopes indicate that the time-varying data should not exceed the envelope boundaries at any time within the envelope. Exceedances of a green envelope are indicated by red shading in the area between the measured time-varying data and the envelope boundaries.

Yellow envelopes indicate that the time-varying data should not exceed the envelope only at the left and/or right ends. Exceedances at the left or right extent of a yellow envelope are indicated by red asterisks.

For the warning plot, a dashed black threshold line indicates the threshold used to determine the onset of the FCW alert. The alert is considered on the first time the alert signal crosses this threshold line.

For the TTC plot, a dashed black threshold line indicates the minimum allowable TTC for the given test scenario. If the FCW alert occurs before this minimum allowable TTC, a green dot appears. However, if there is no alert or the alert occurs after the minimum allowable TTC, a red asterisk is shown on the plot.

For the Ax plot, a dashed black threshold line is given for at a value of -0.05 g. For a test run to be valid, the longitudinal acceleration of the Subject Vehicle must not fall below this threshold (i.e. the driver cannot apply any brakes). Additionally, for test type 2, the plot indicating the longitudinal acceleration of the Principal Other Vehicle includes a yellow envelope indicating the deceleration ($0.3 \text{ g} \pm 0.03 \text{ g}$) allowed while braking. Exceedance of this threshold is indicated with red asterisks at the beginning and/or end of the threshold boundary.

Color Codes

Color codes have been adopted to easily identify which data correspond to which vehicle, as well as to indicate the types of envelopes and thresholds used in the plots.

Color codes can be broken into four categories:

1. Time-varying data
2. Validation envelopes and thresholds
3. Instantaneous samplings
4. Text

1. Time-varying data color codes:

- Blue = Subject Vehicle data
- Magenta = Principal Other Vehicle data
- Brown = Relative data between SV and POV (i.e., TTC, lateral offset and headway distance)

2. Validation envelope and threshold color codes:

- Green envelope = time varying data must be within the envelope at all times in order to be valid
- Yellow envelope = time varying data must be within limits at left and/or right ends
- Black threshold (Solid) = time varying data must not exceed this threshold in order to be valid
- Black threshold (Dashed) = for reference only – this can include warning level thresholds, TTC thresholds, and acceleration thresholds

3. Instantaneous sampling color codes:

- Green circle = passing or valid value at a given moment in time
- Red asterisk = failing or invalid value at a given moment in time

4. Text color codes:

- Green = passing or valid value
- Red = failing or invalid value

Other Notations

- ENV – For Ax plots only, indicates that the envelope for the POV braking was exceeded.
- NG – Indicates that the value for that variable was outside of bounds and therefore “No Good”.
- No Wng – No warning was detected.
- POV – Indicates that the value for the Principal Other Vehicle was out of bounds.
- SV – Indicates that the value for the Subject Vehicle was out of bounds.
- SR – Shows the speed reduction value.
- Thr – Indicates that the requirements for the throttle were not met.

The minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then “RTK Fixed OR LESS!!” is displayed in red.

Examples of time history plots for each test type (including passing, failing and invalid runs) are shown in Figure D1 through Figure D6. Actual time history data plots for the vehicle under consideration are provided subsequently.

Notes

When vehicles provide more than one type of alert, and when it is possible to measure the timing of these alerts, plots will be shown of each alert for each run. Because alert timing nearly always differs between alert types, a plot may indicate a valid run for one of the alerts and invalid for another. Test run validity is based on the validity window of the earliest alert, but validity determination for each individual alert is based on the timing of that alert alone. As an example, a vehicle has both visual and auditory alerts. For a particular run, the auditory alert occurs first followed by the visual alert. The validity period for the run ends when the auditory alert occurs, at which time the driver steers and/or brakes to avoid the POV. Since the visual alert occurs after the auditory alert, the run is essentially already over by the time the visual alert occurs. Depending on the relative timing gap between alerts, it may be expected that the validity criteria (yaw rate, speed, etc.) based on the timing of the visual alert could indicate an invalid run.


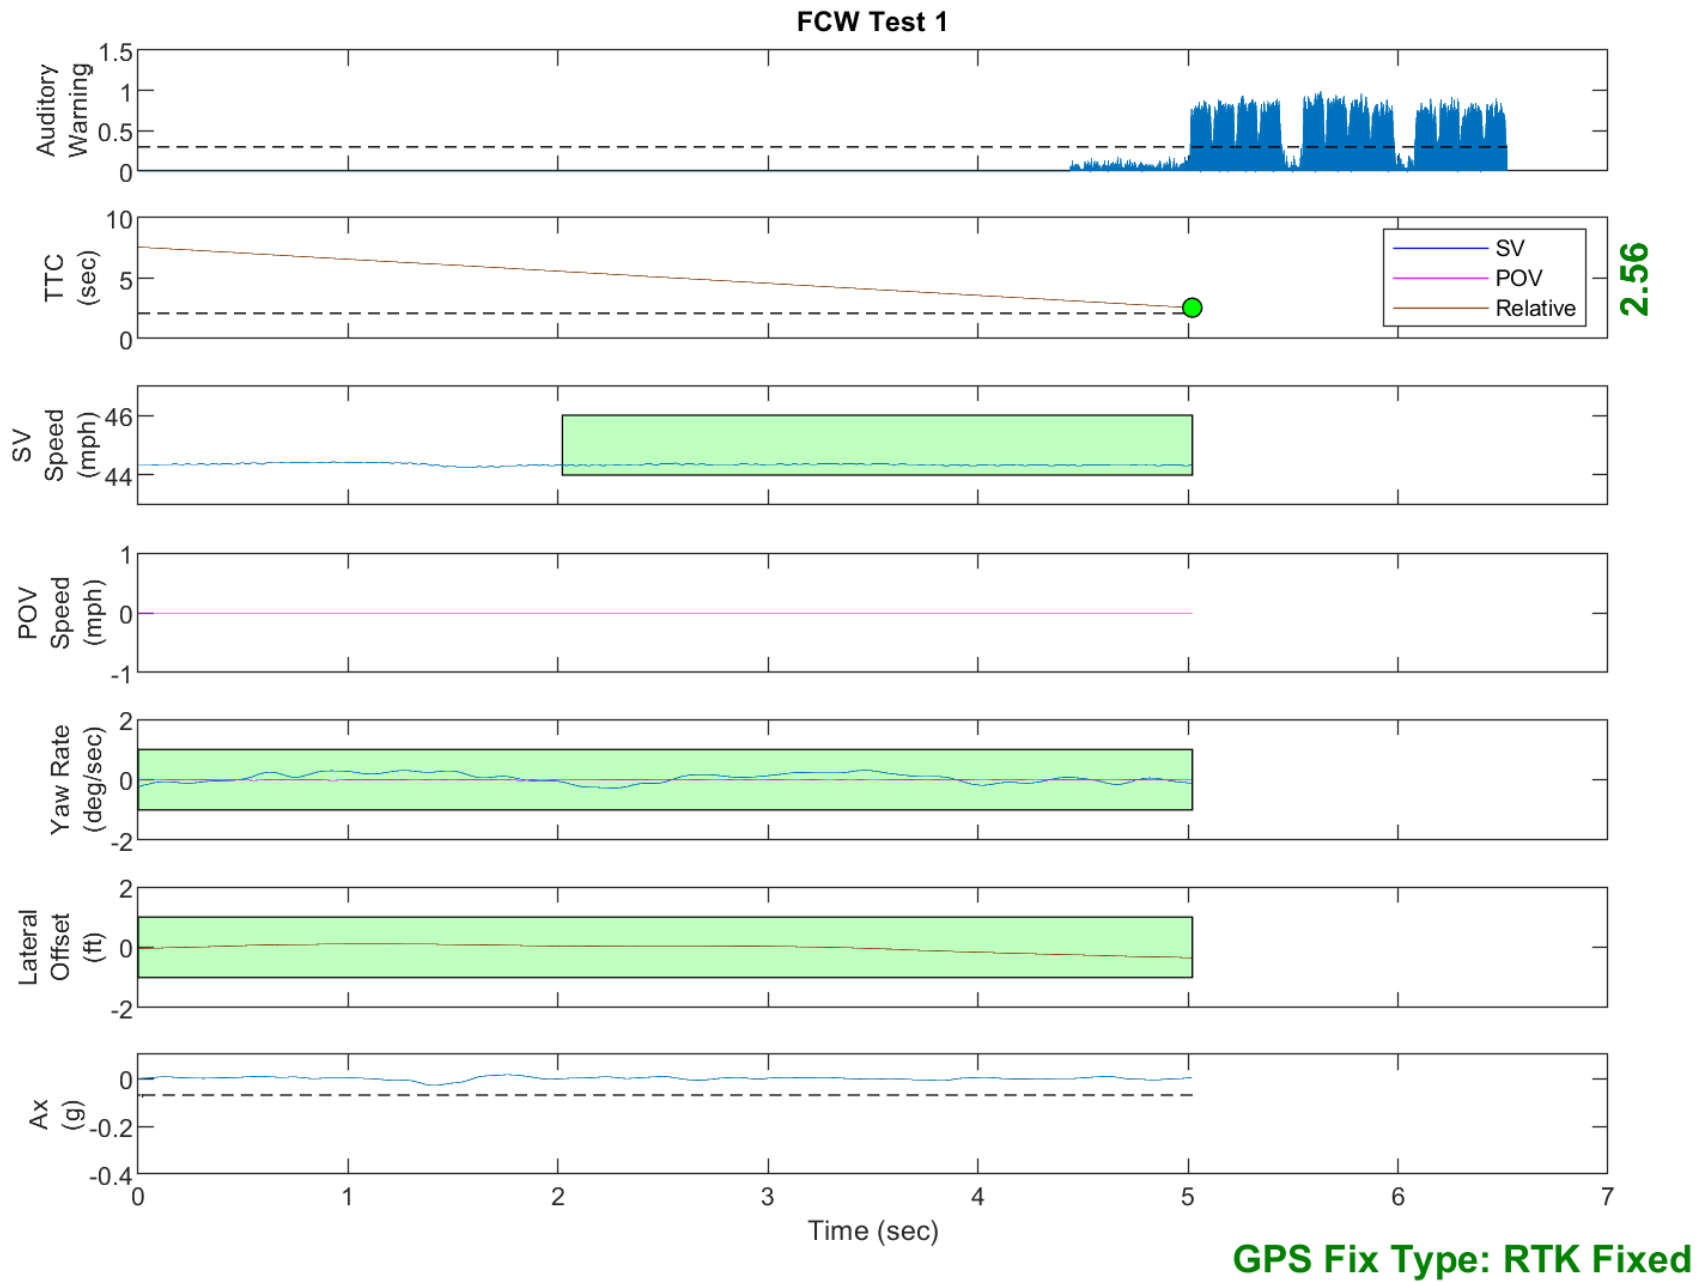



Figure D1. Example Time History for Test Type 1, Passing

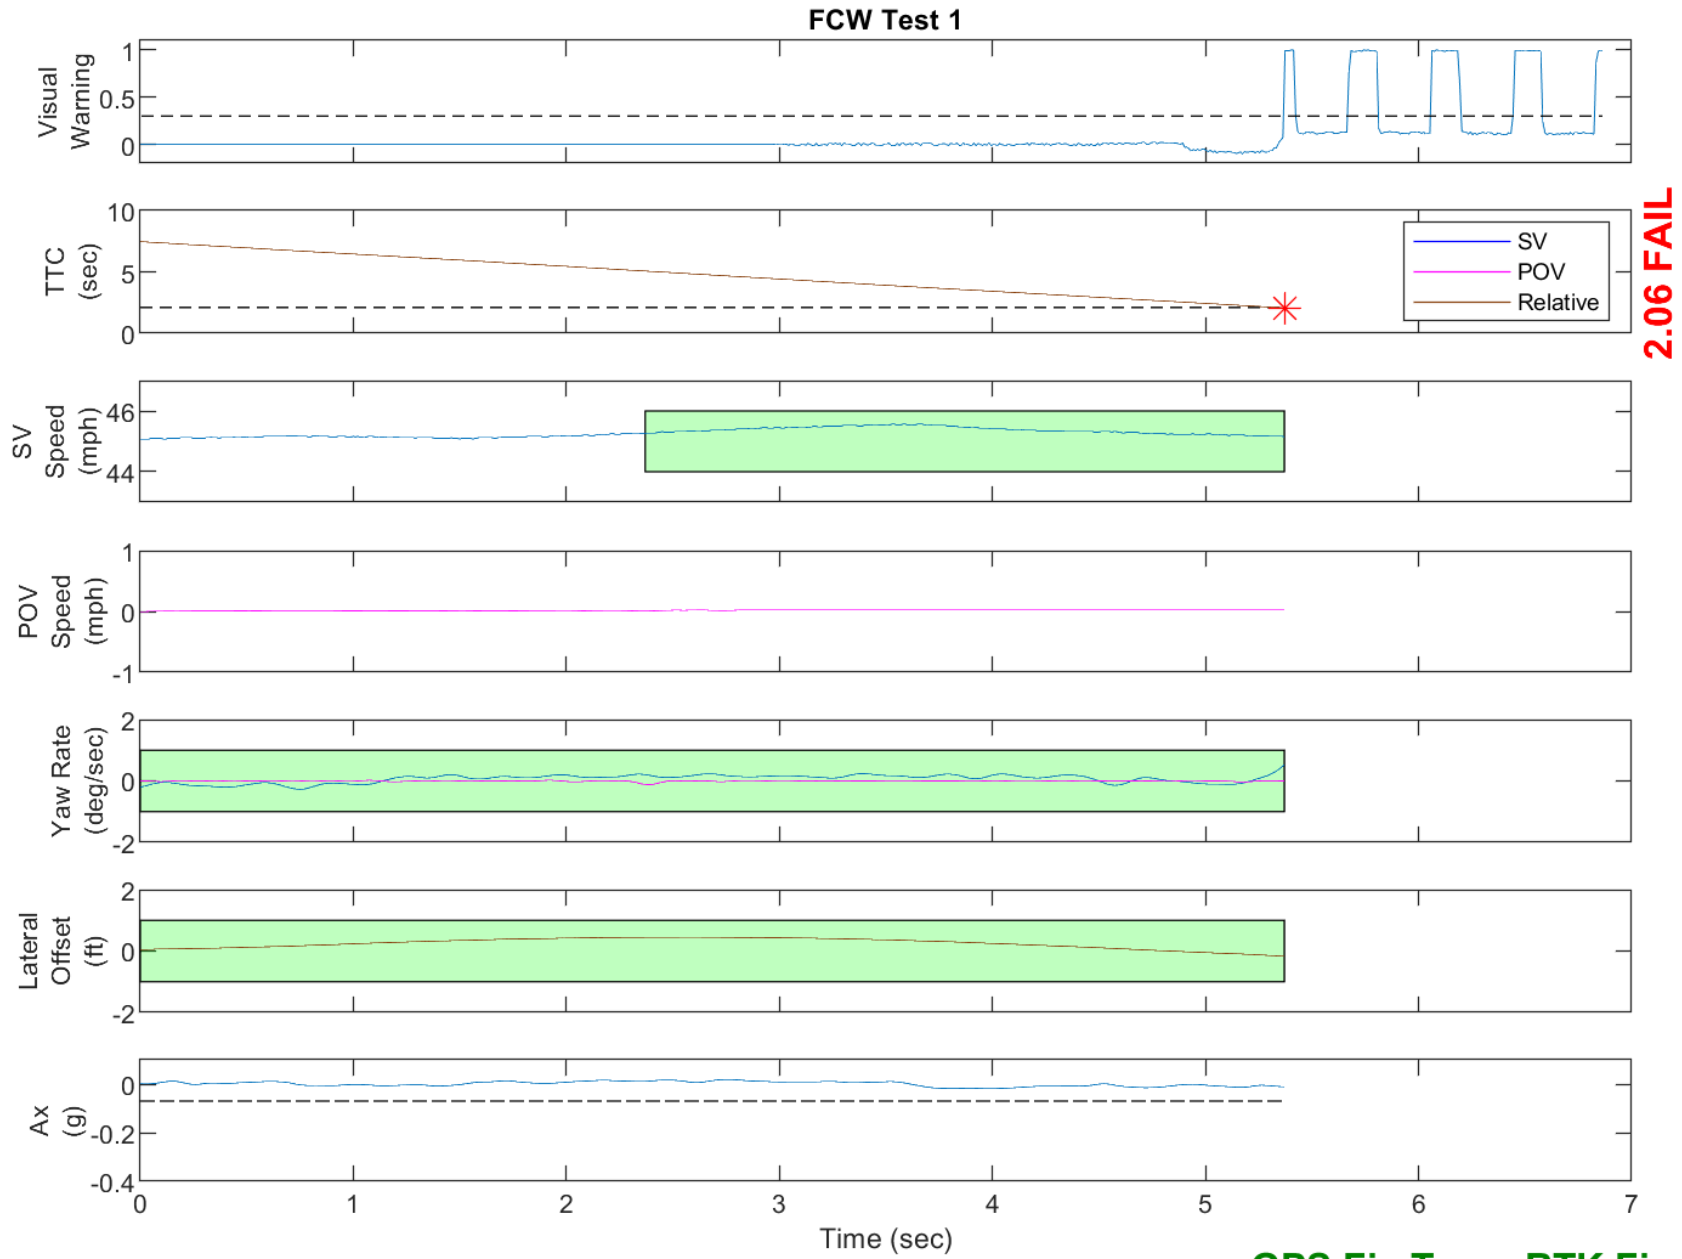

2.06 FAIL


GPS Fix Type: RTK Fixed

Figure D2. Example Time History for Test Type 1, Failing

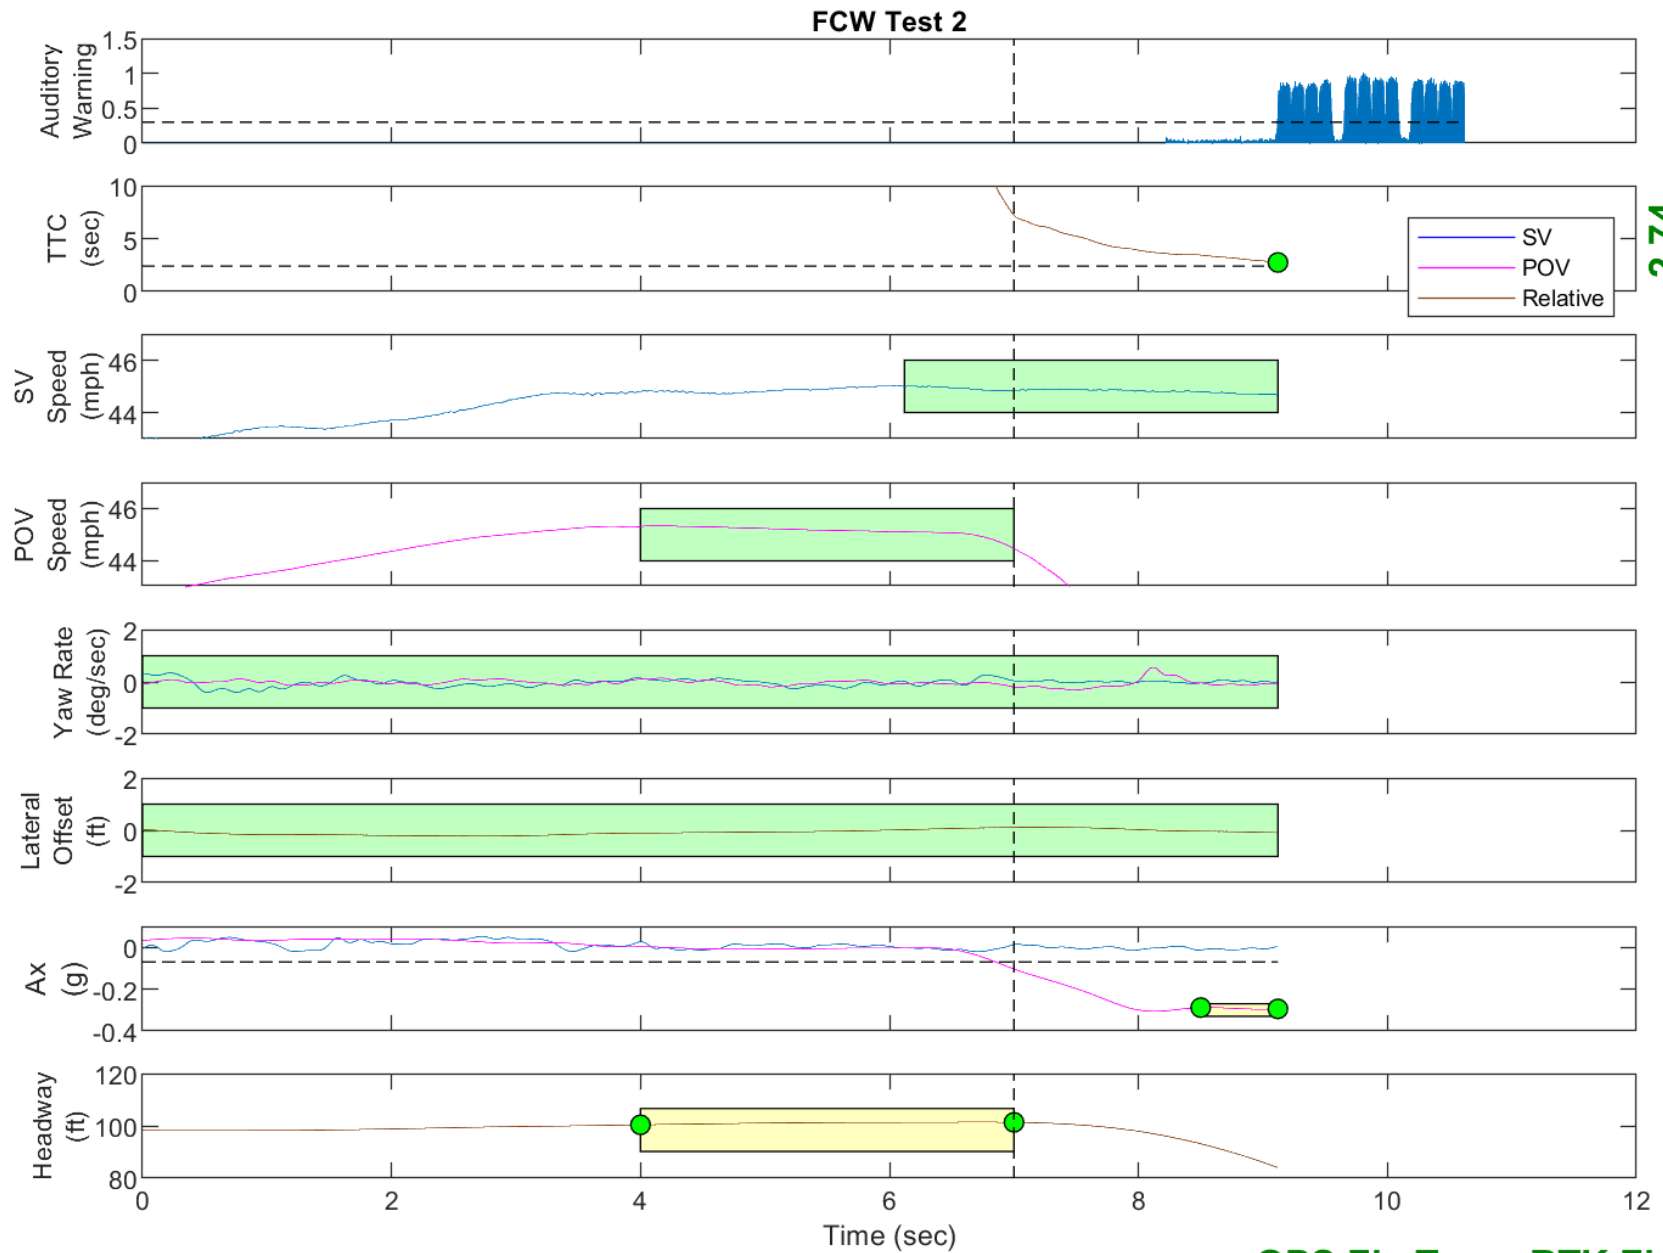


GPS Fix Type: RTK Fixed

Figure D3. Example Time History for Test Type 2, Passing

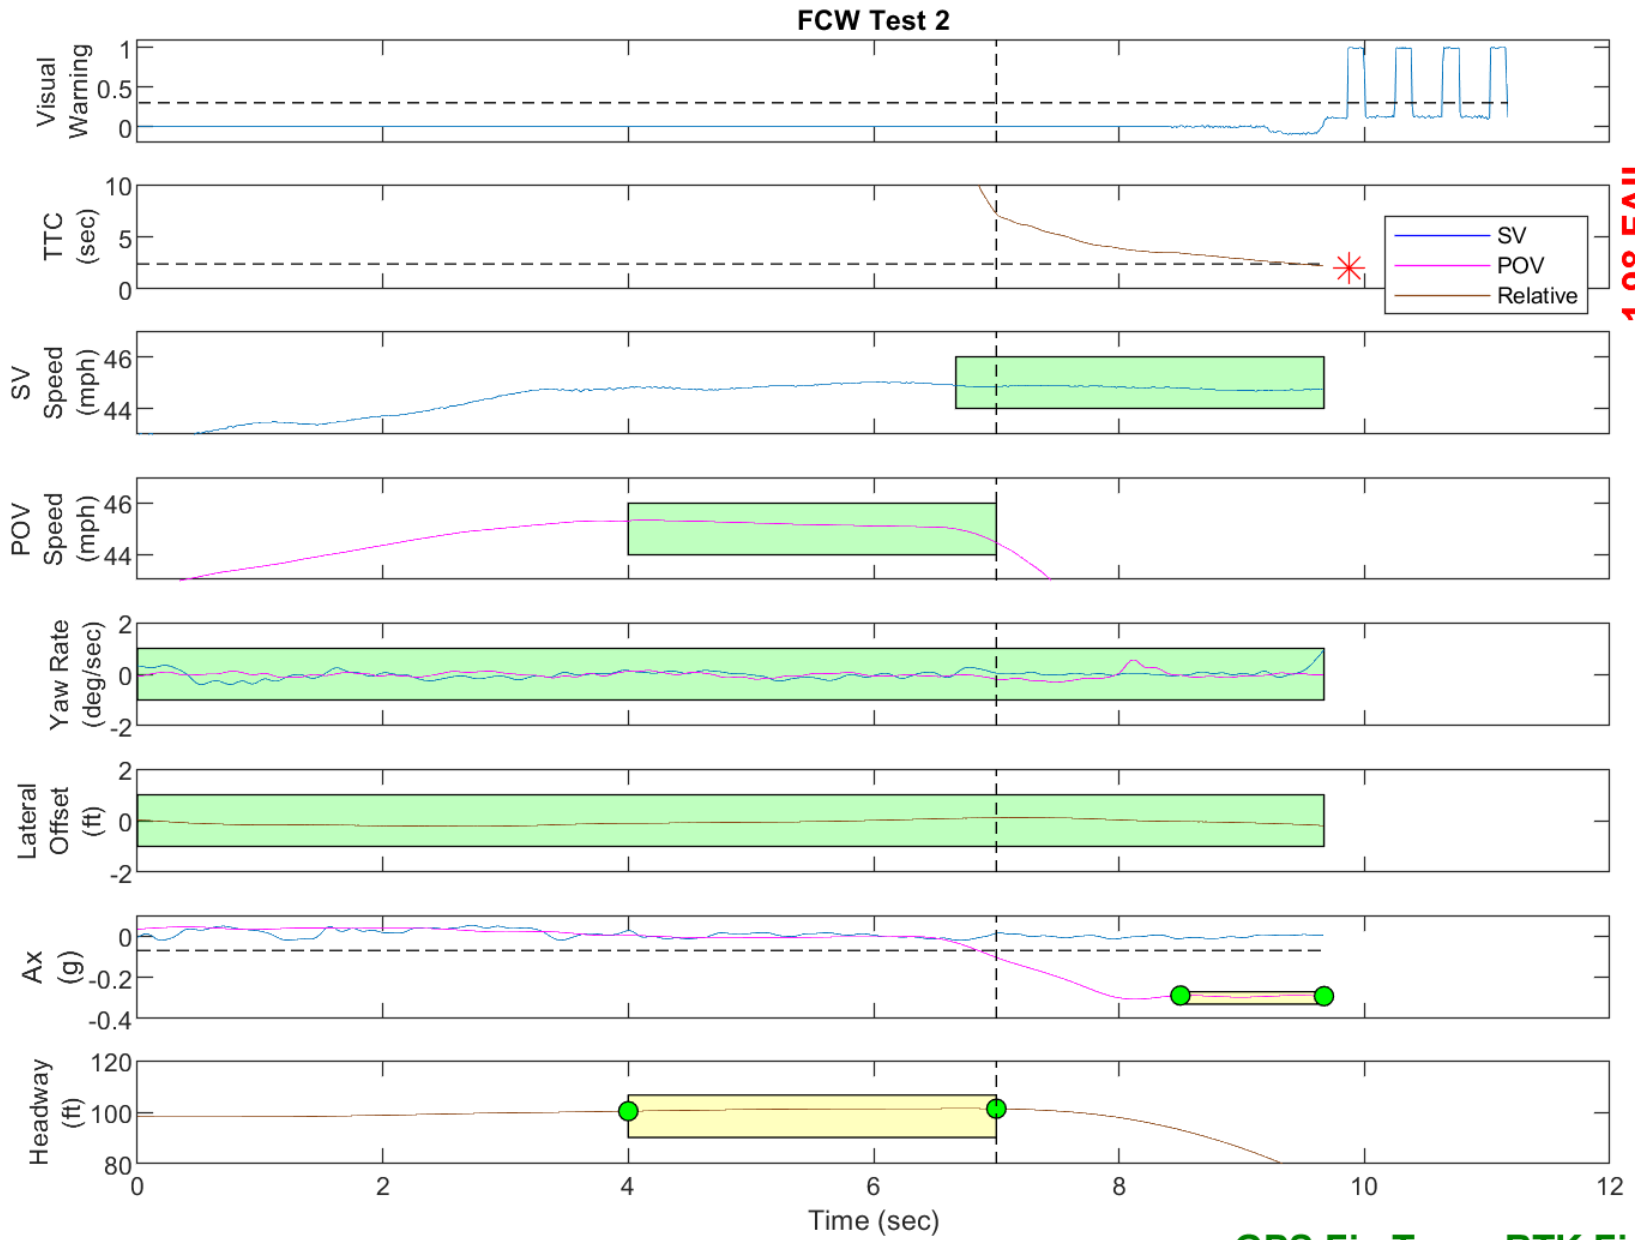

GPS Fix Type: RTK Fixed

Figure D4. Example Time History for Test Type 2, Failing

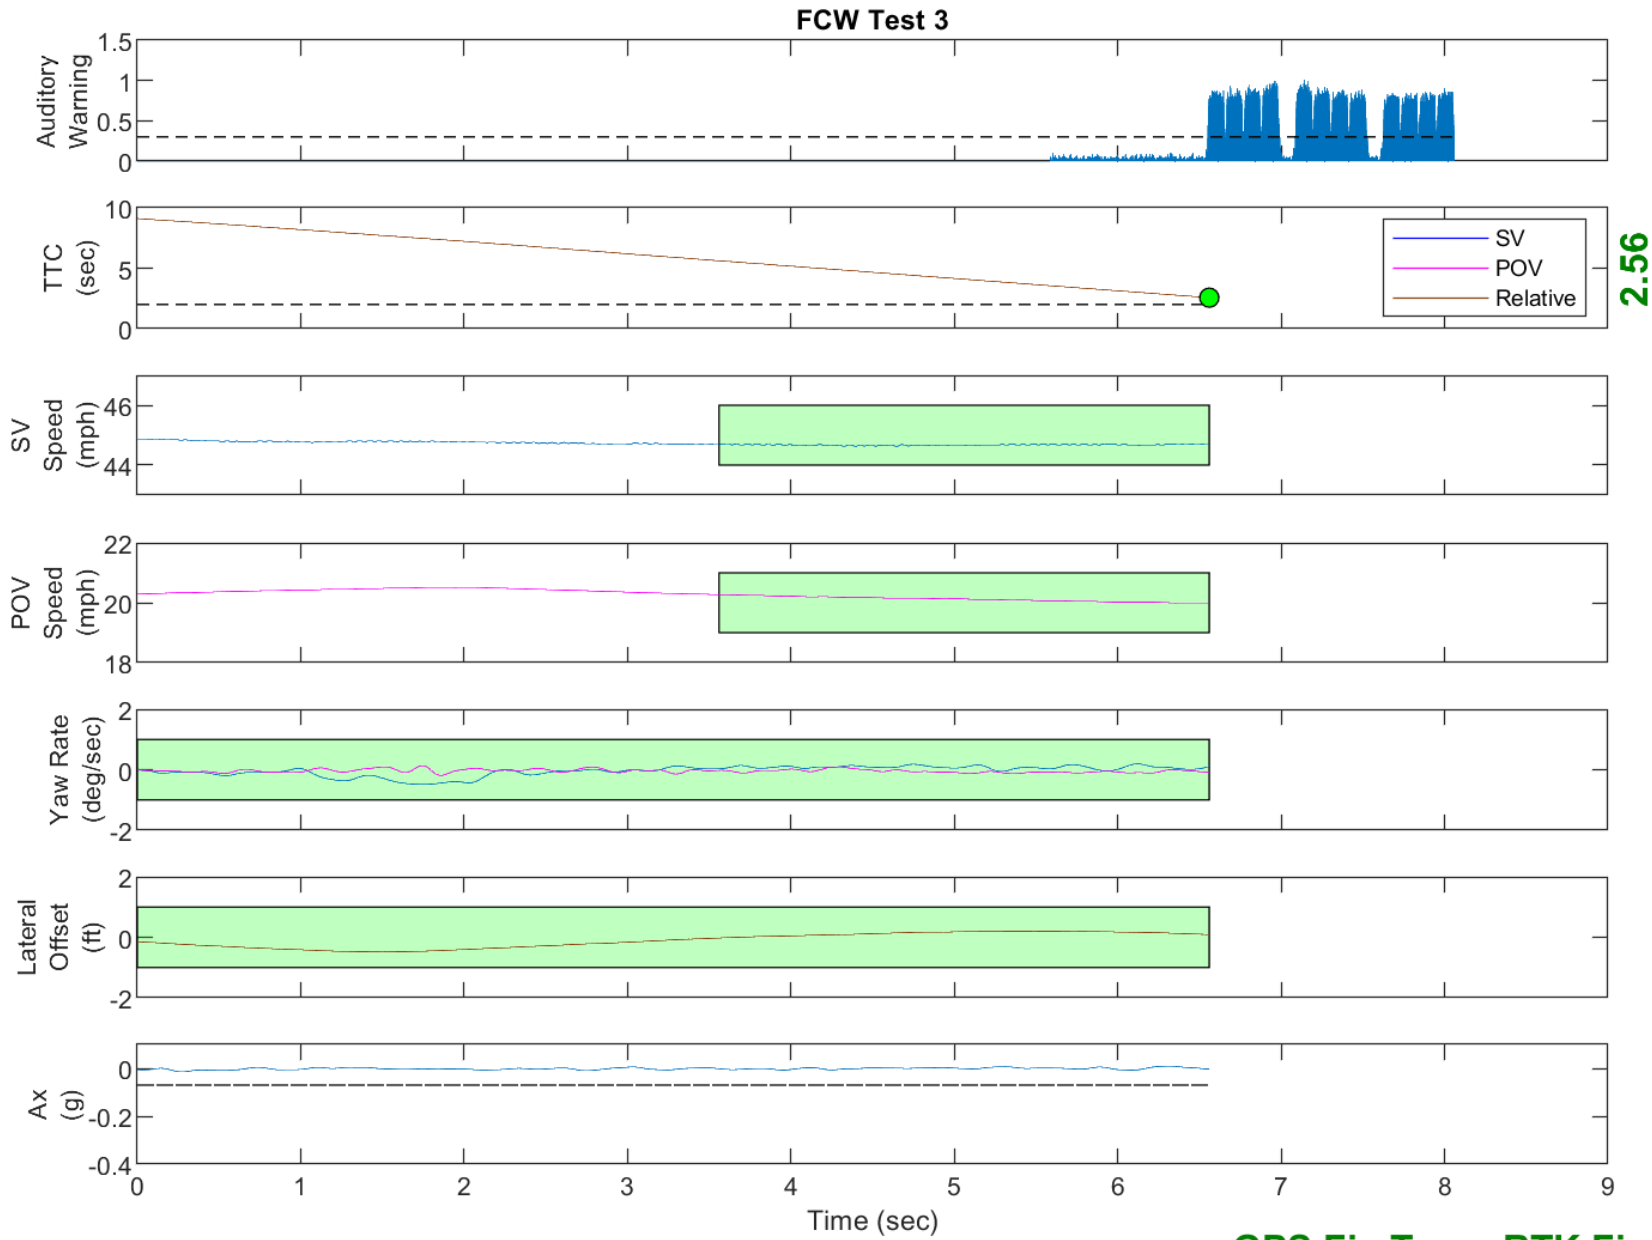

GPS Fix Type: RTK Fixed

Figure D5. Example Time History for Test Type 3, Passing

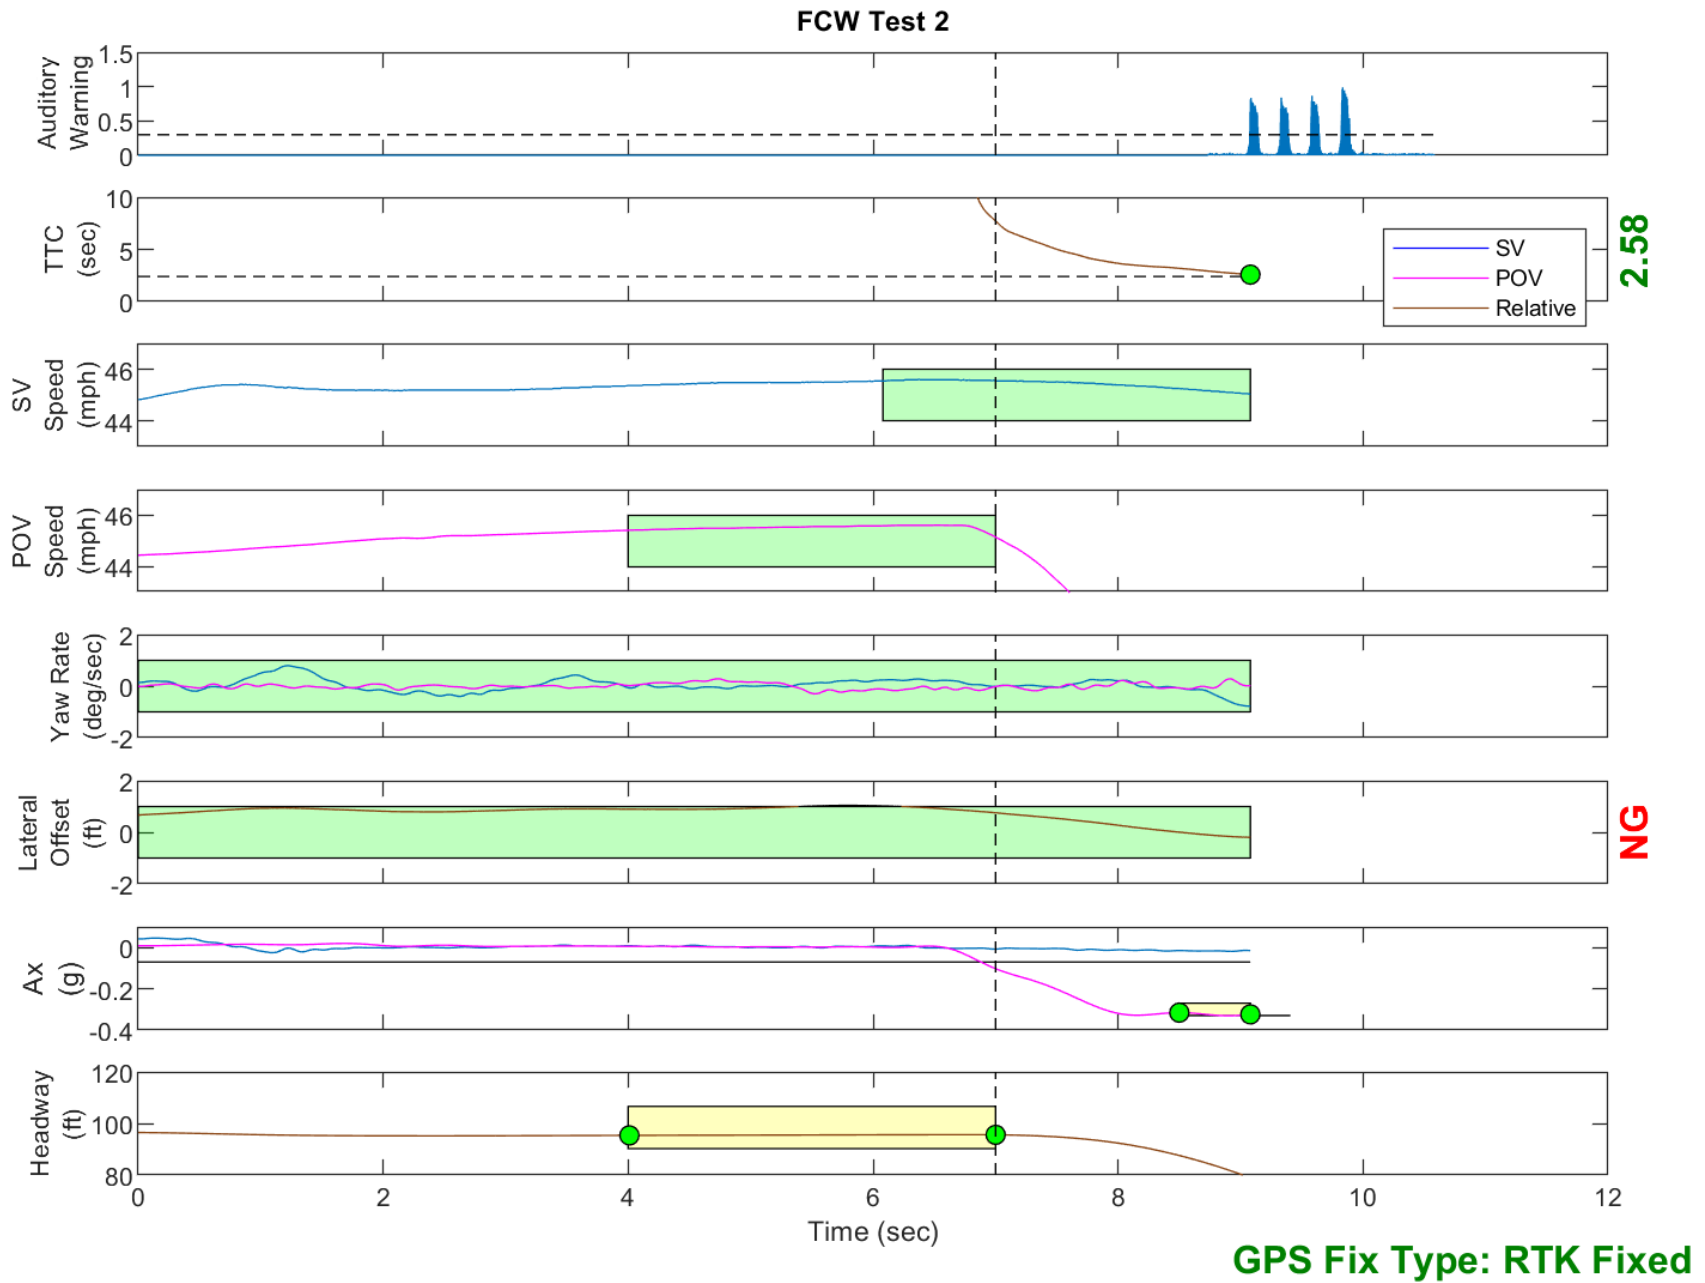


Figure D6. Example Time History Showing Invalid Lateral Offset Criteria

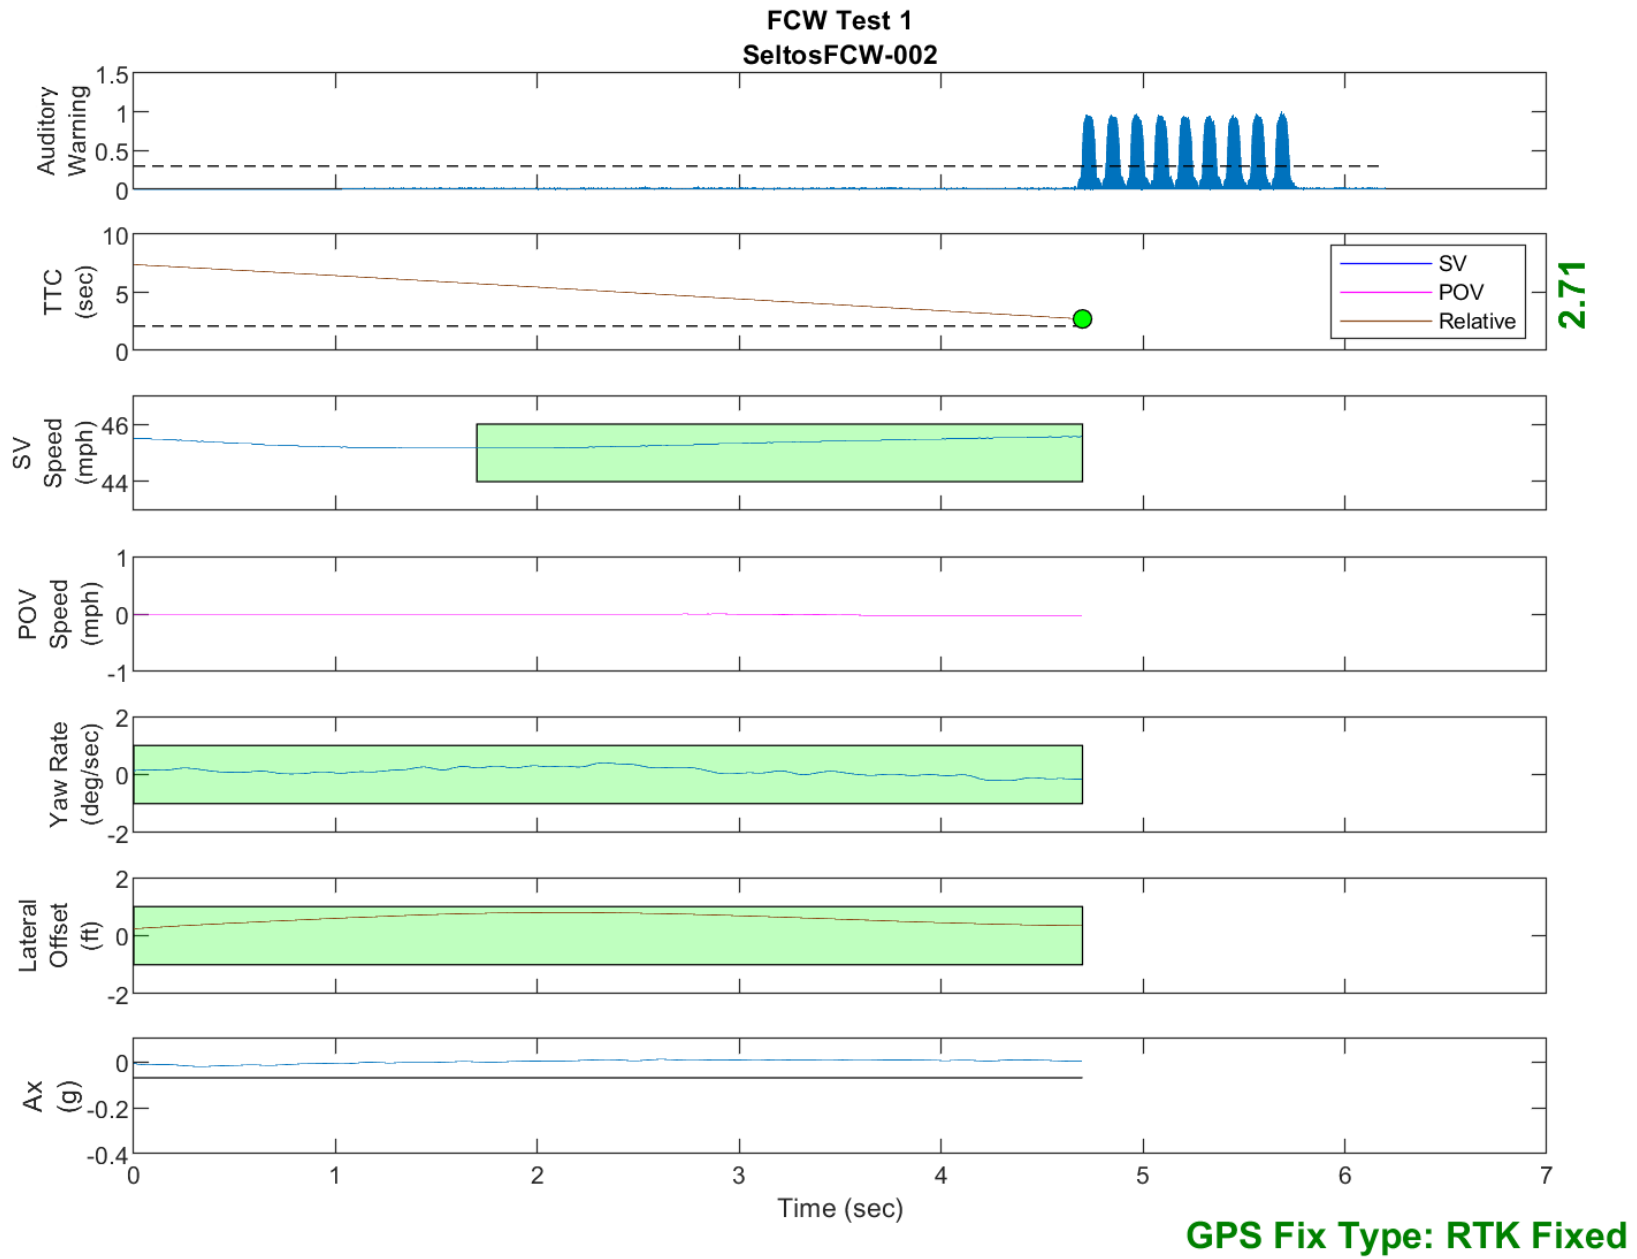


Figure D7. Time History for Run 2, FCW Test 1, Auditory Warning

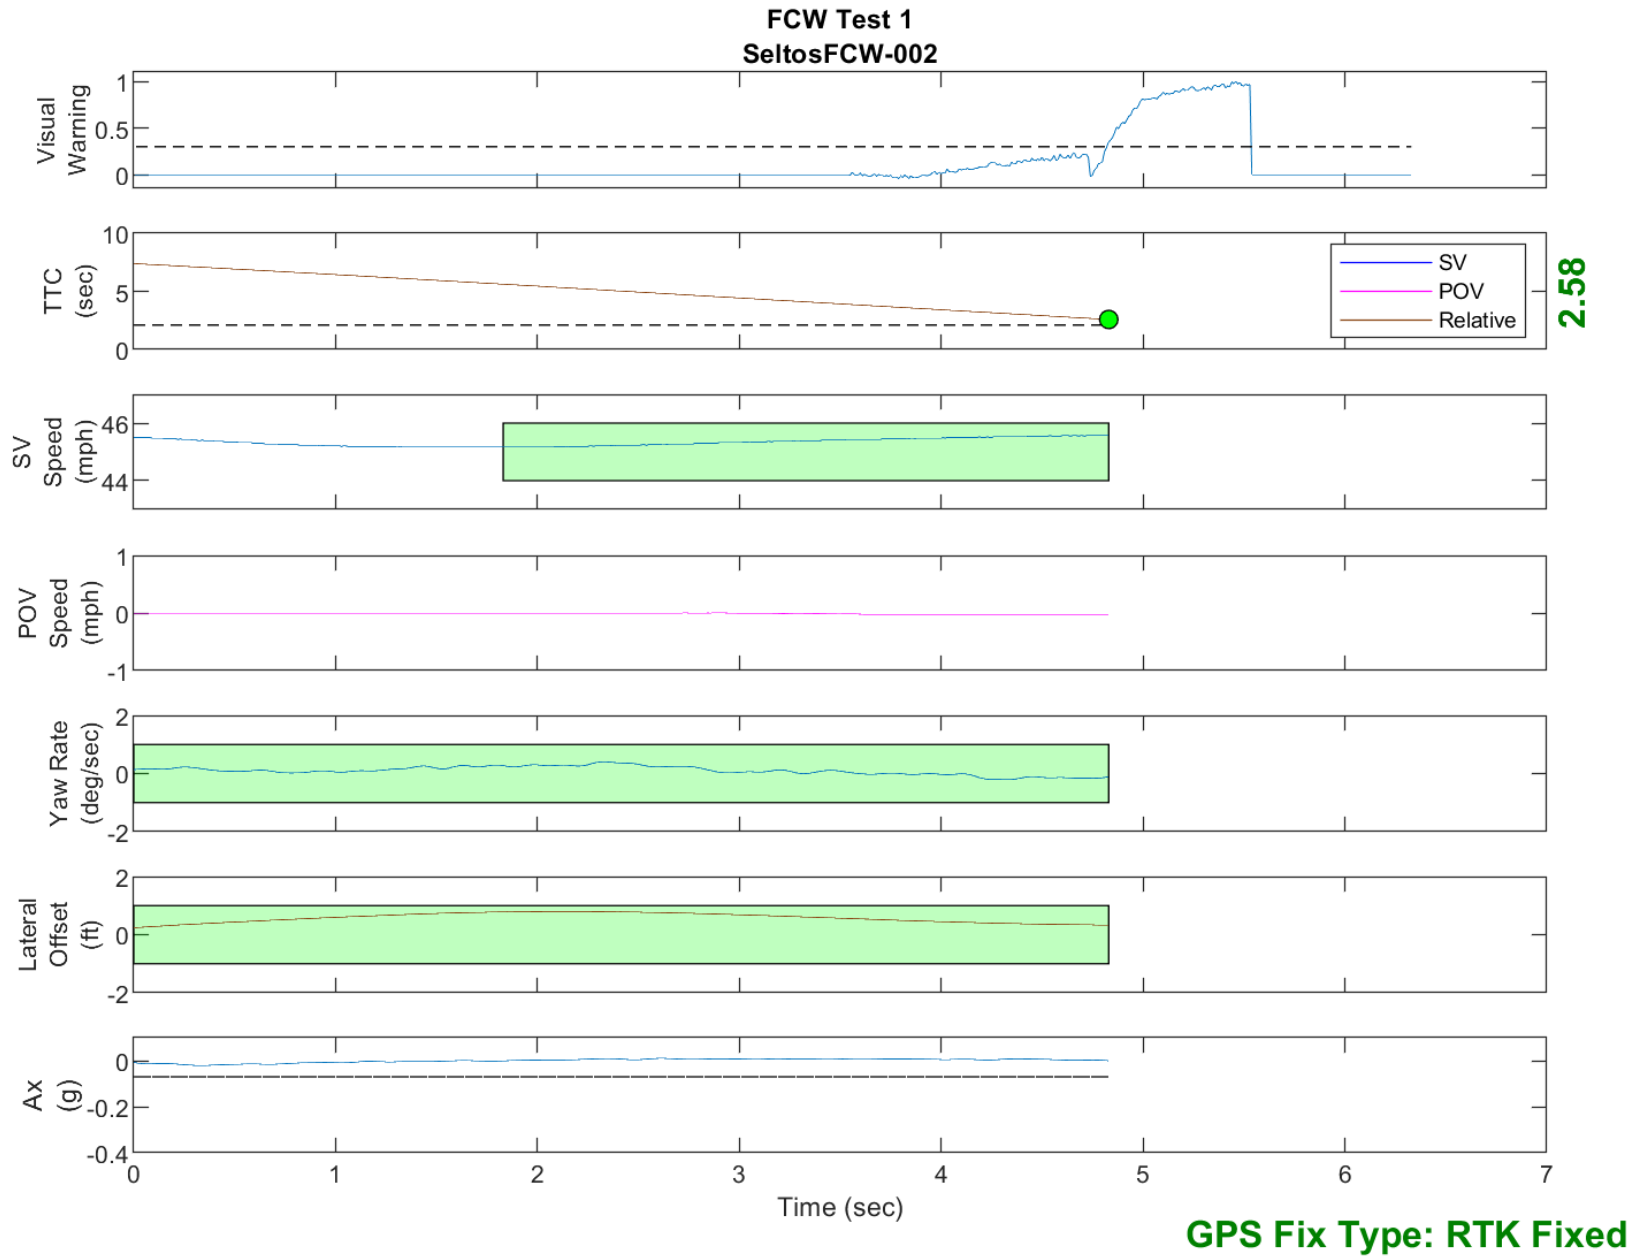


Figure D8. Time History for Run 2, FCW Test 1, Visual Warning

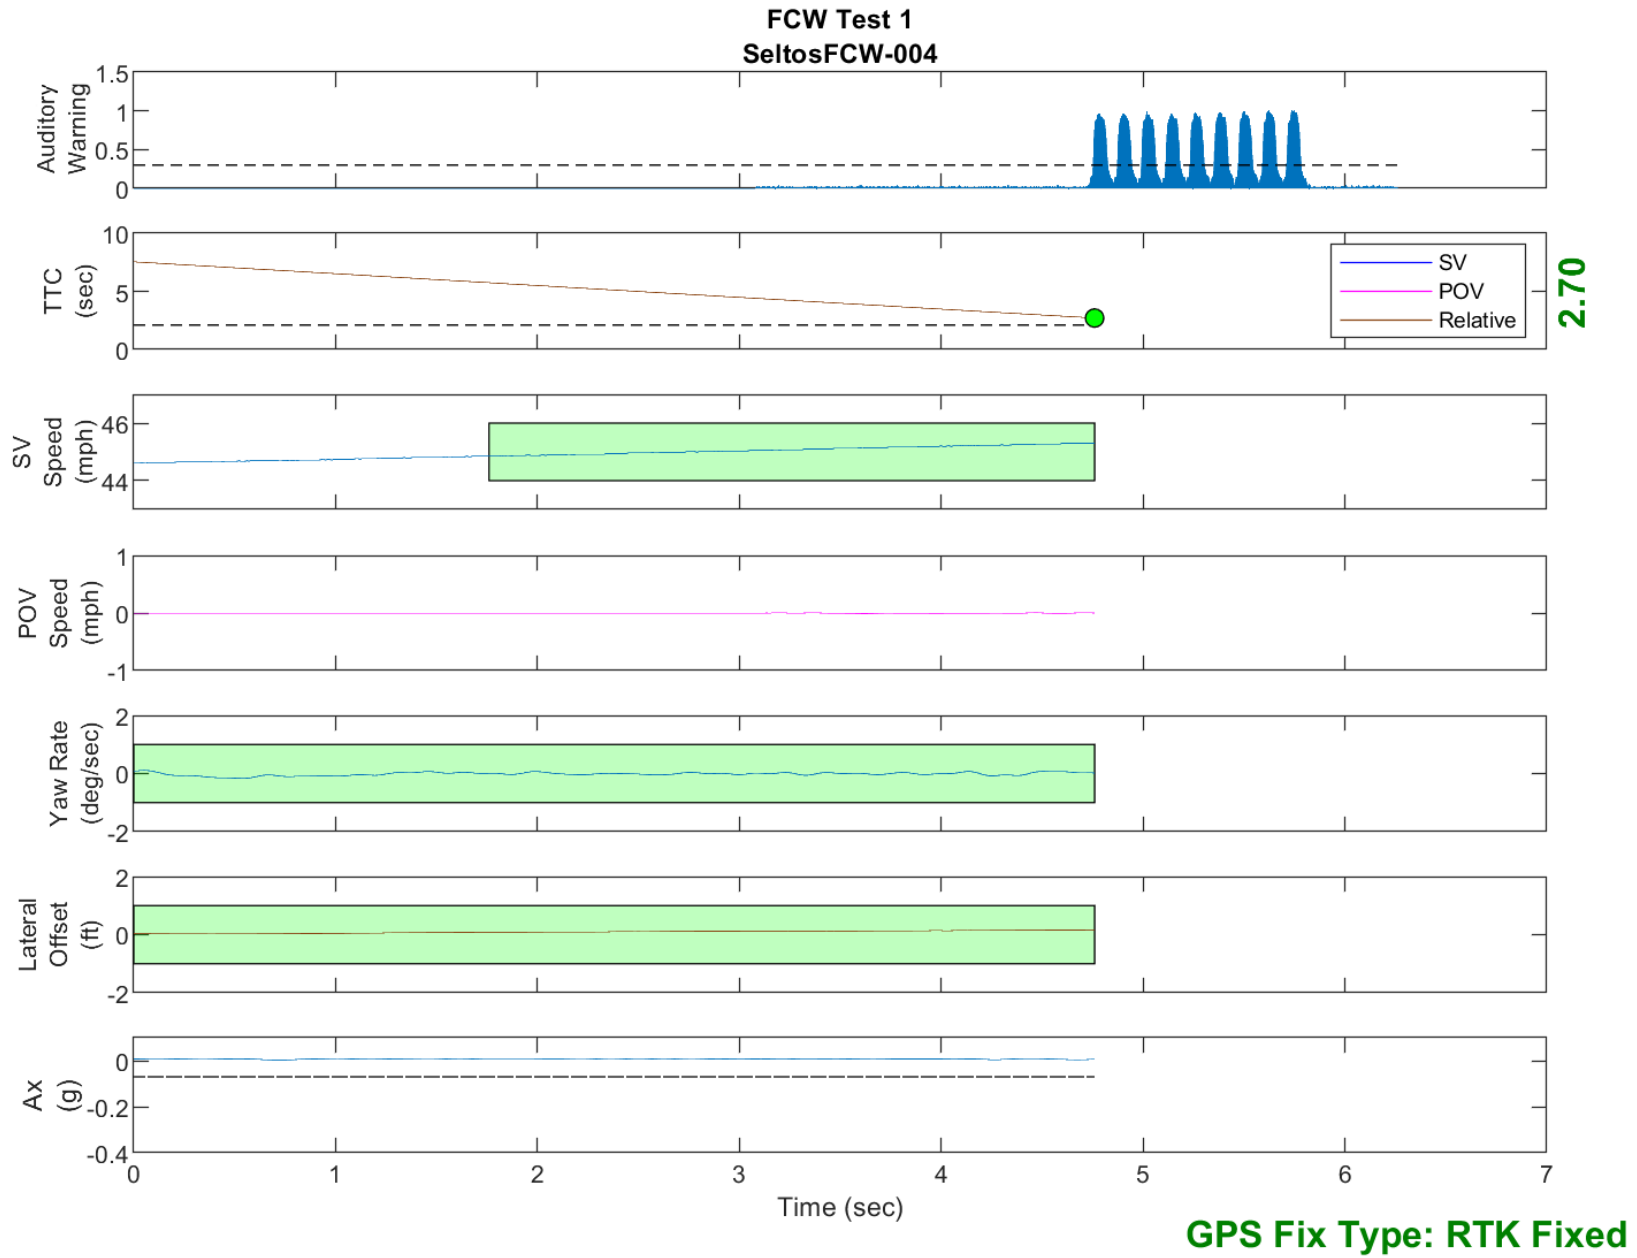


Figure D9. Time History for Run 4, FCW Test 1, Auditory Warning

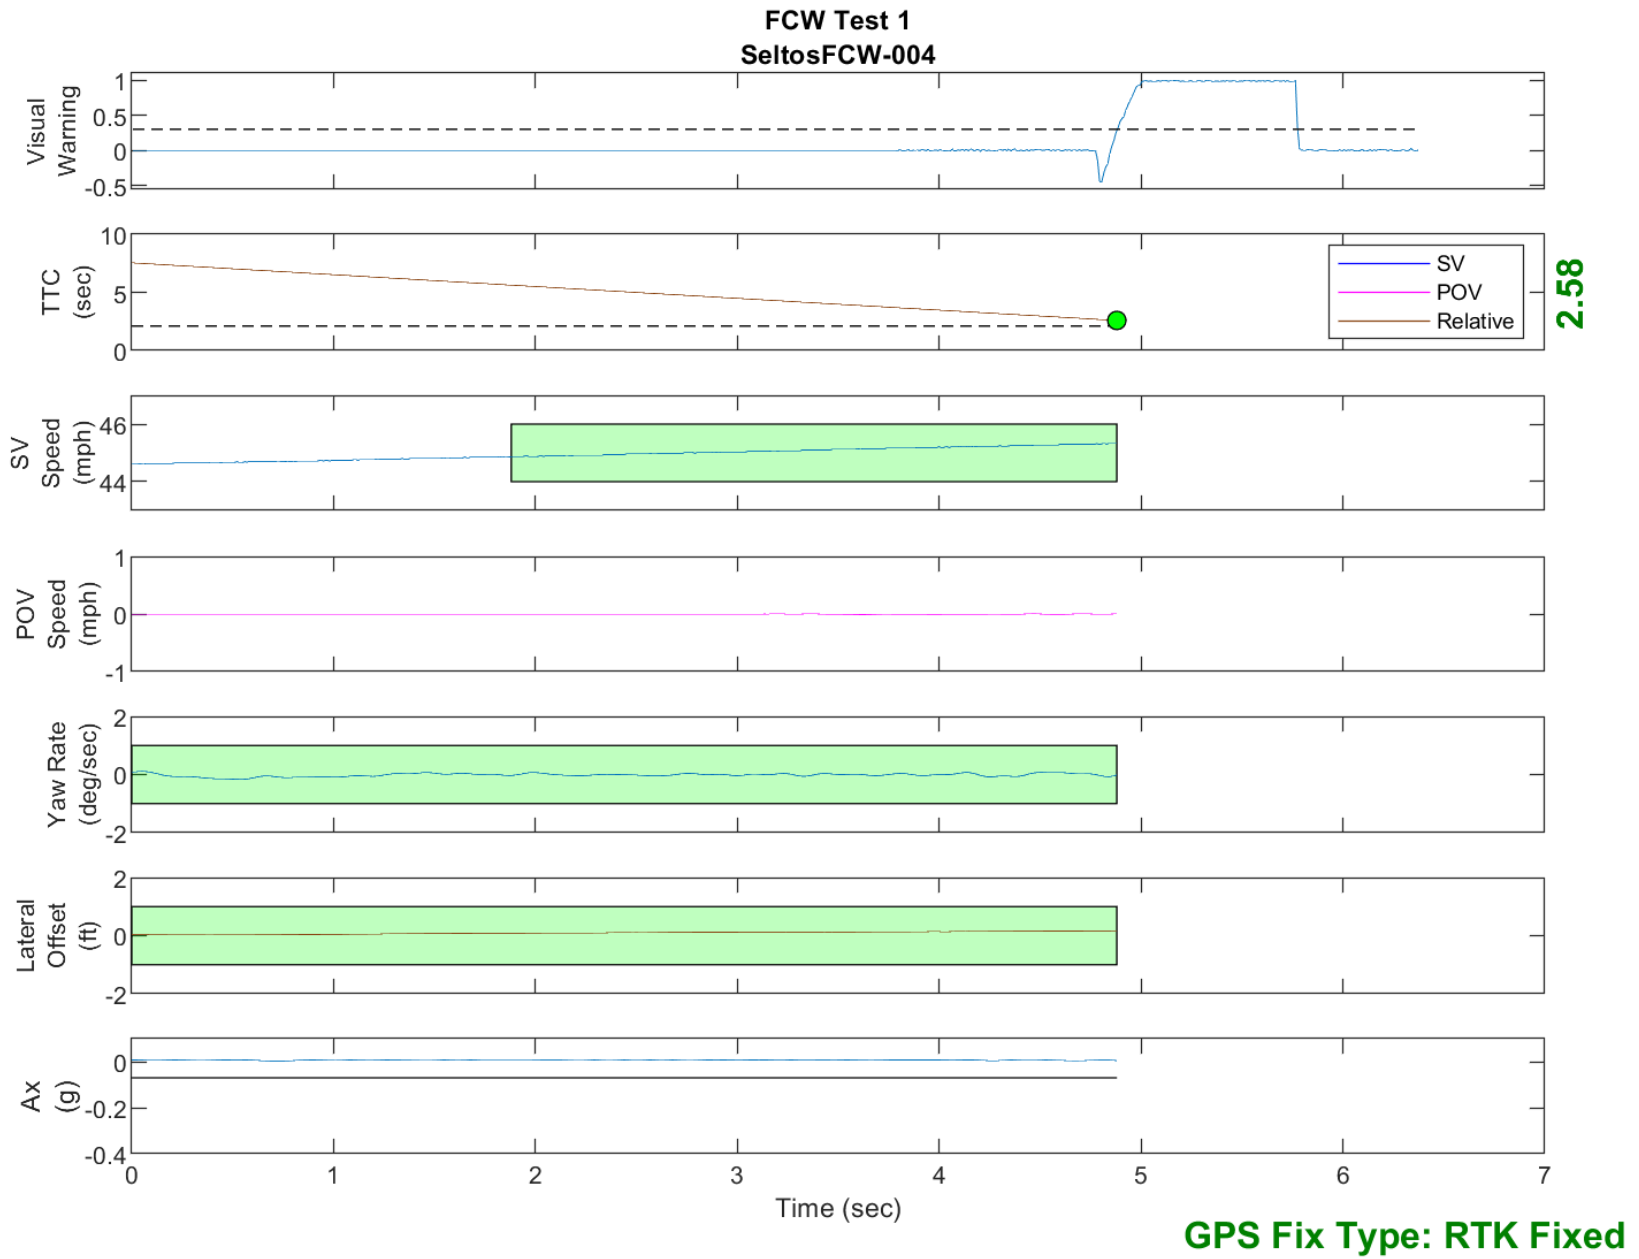


Figure D10. Time History for Run 4, FCW Test 1, Visual Warning

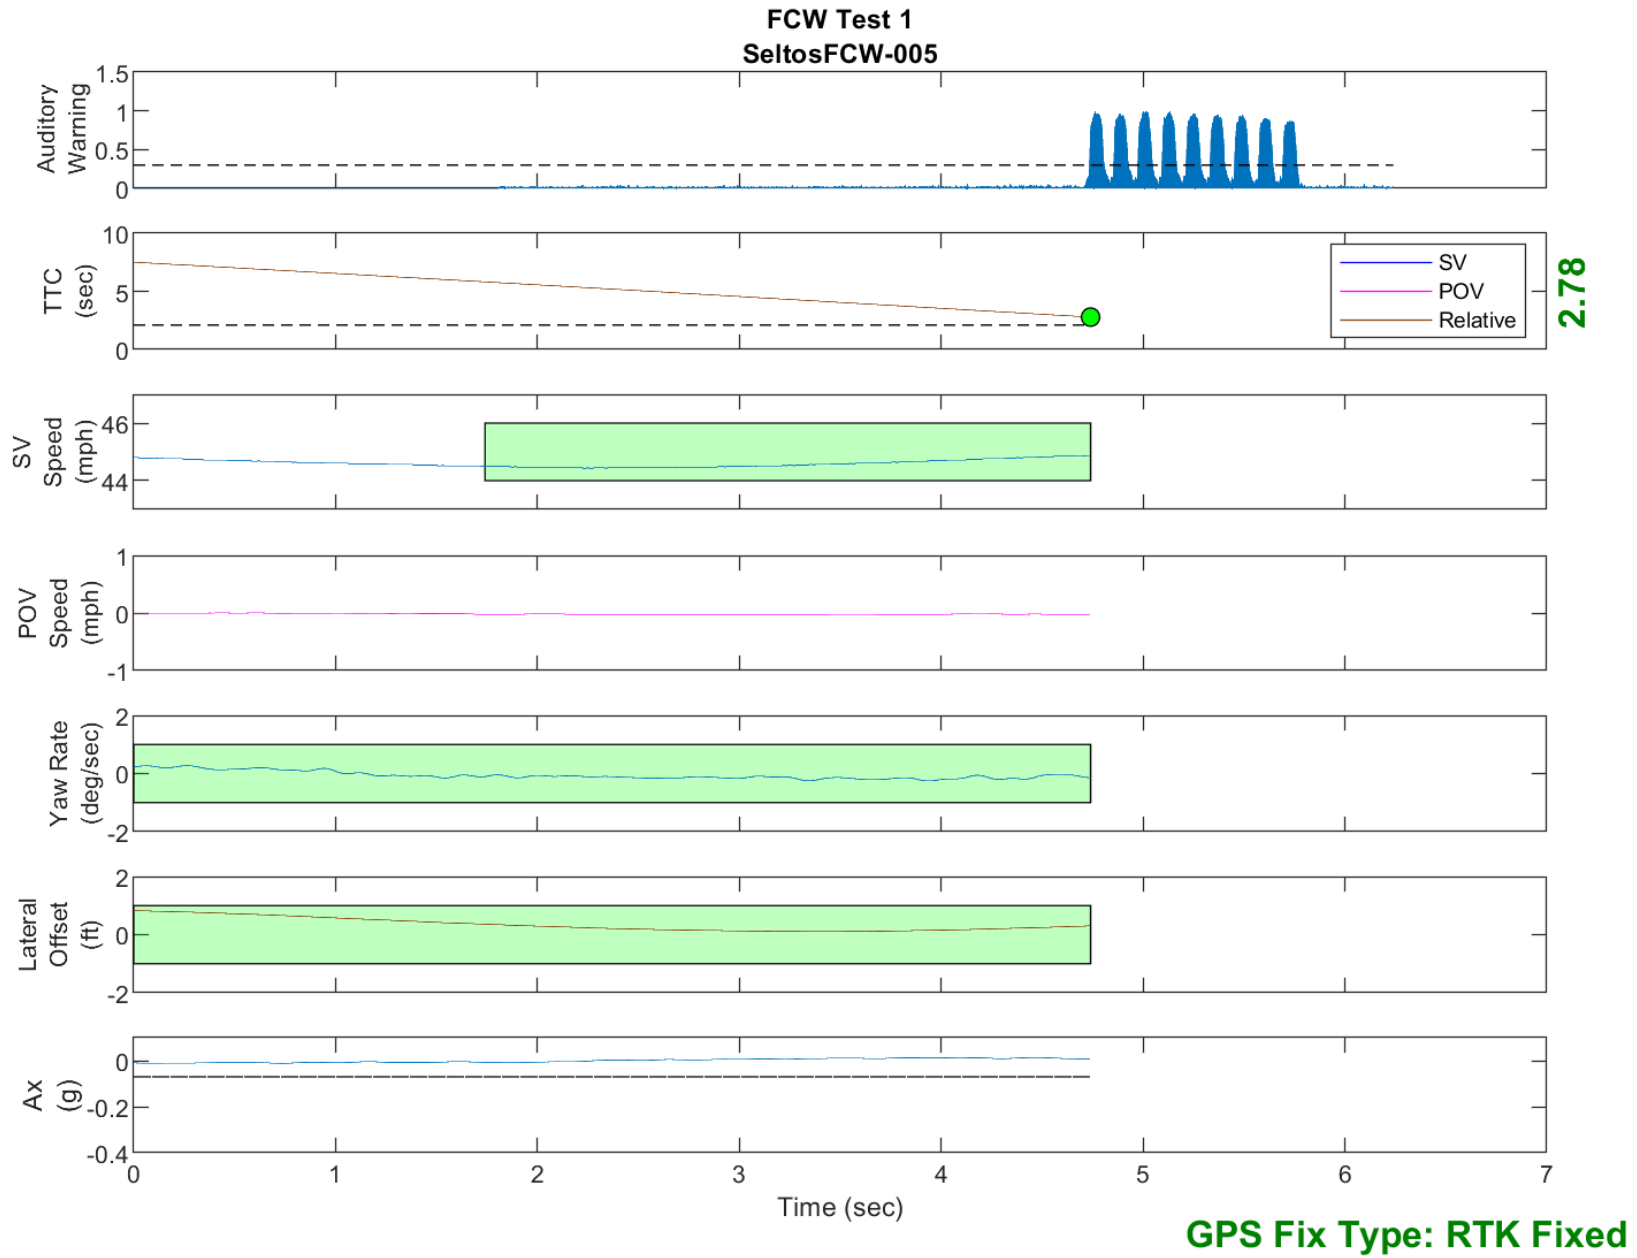


Figure D11. Time History for Run 5, FCW Test 1, Auditory Warning

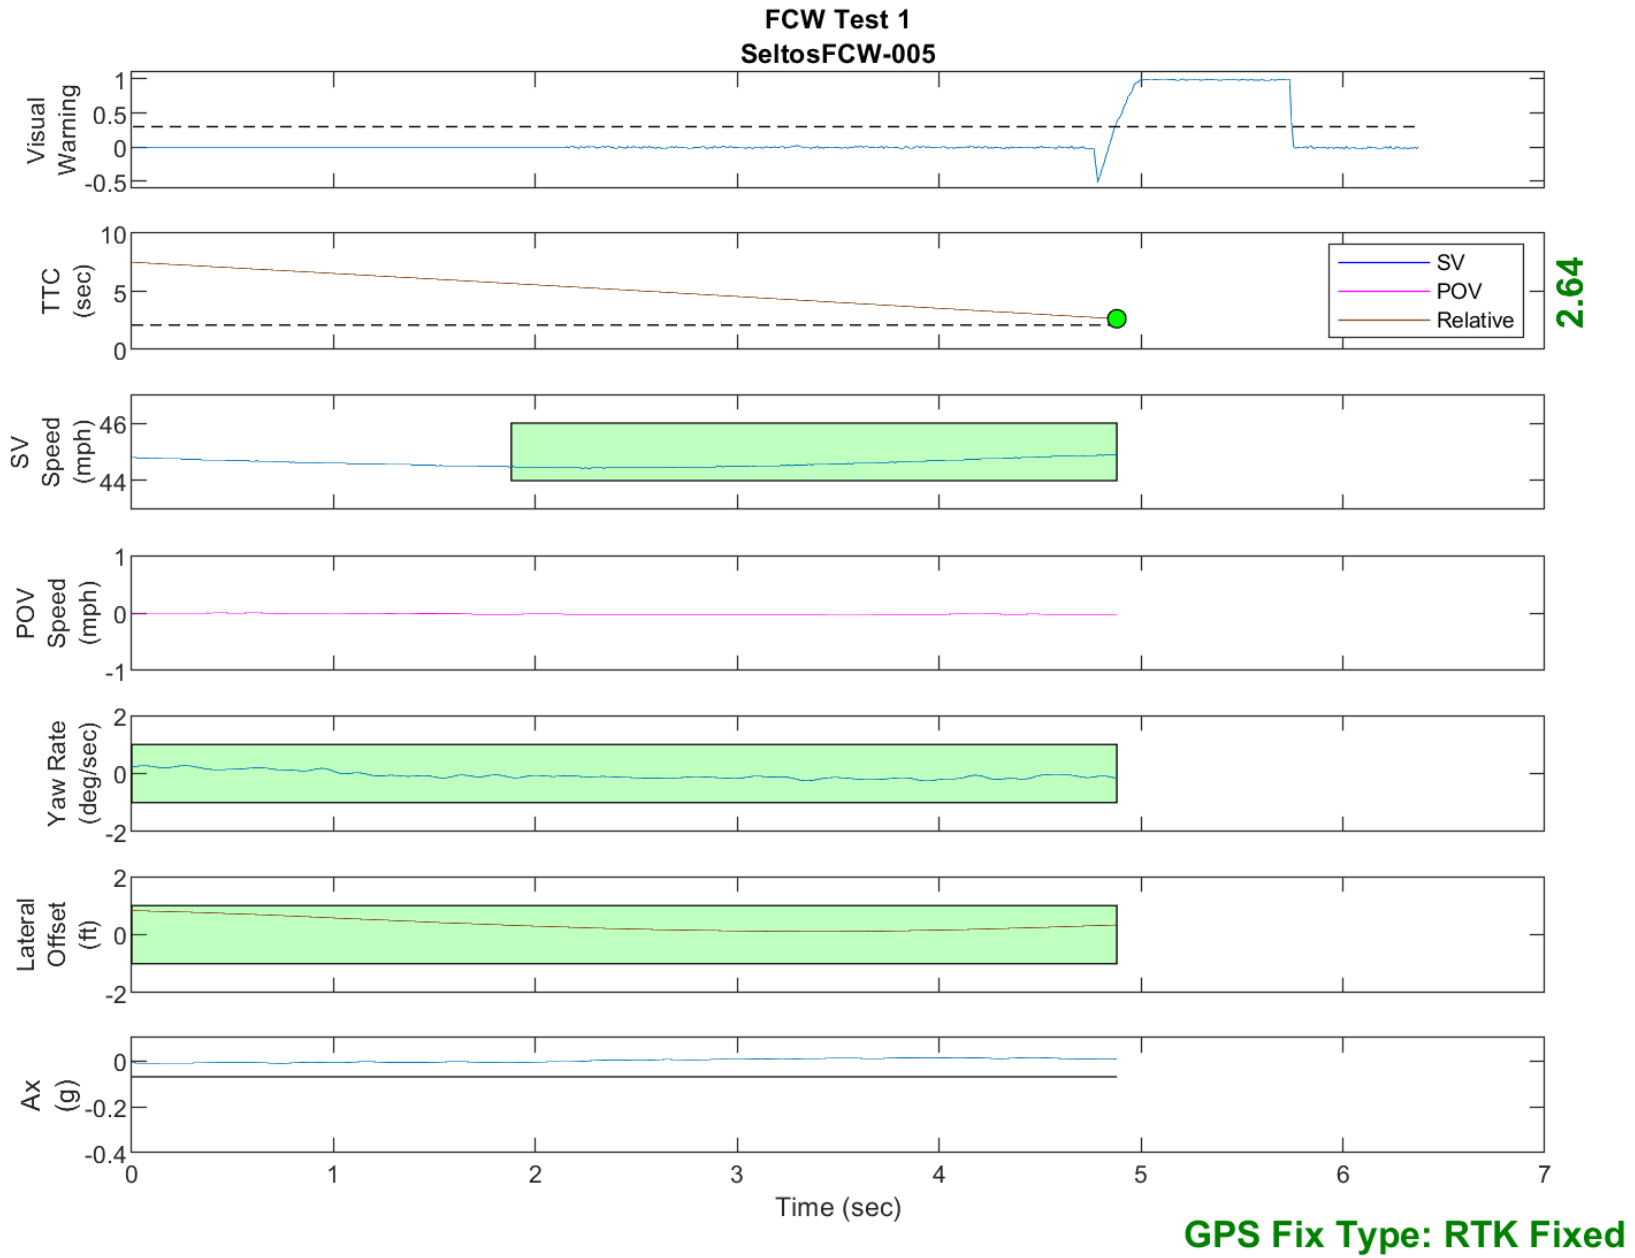


Figure D12. Time History for Run 5, FCW Test 1, Visual Warning

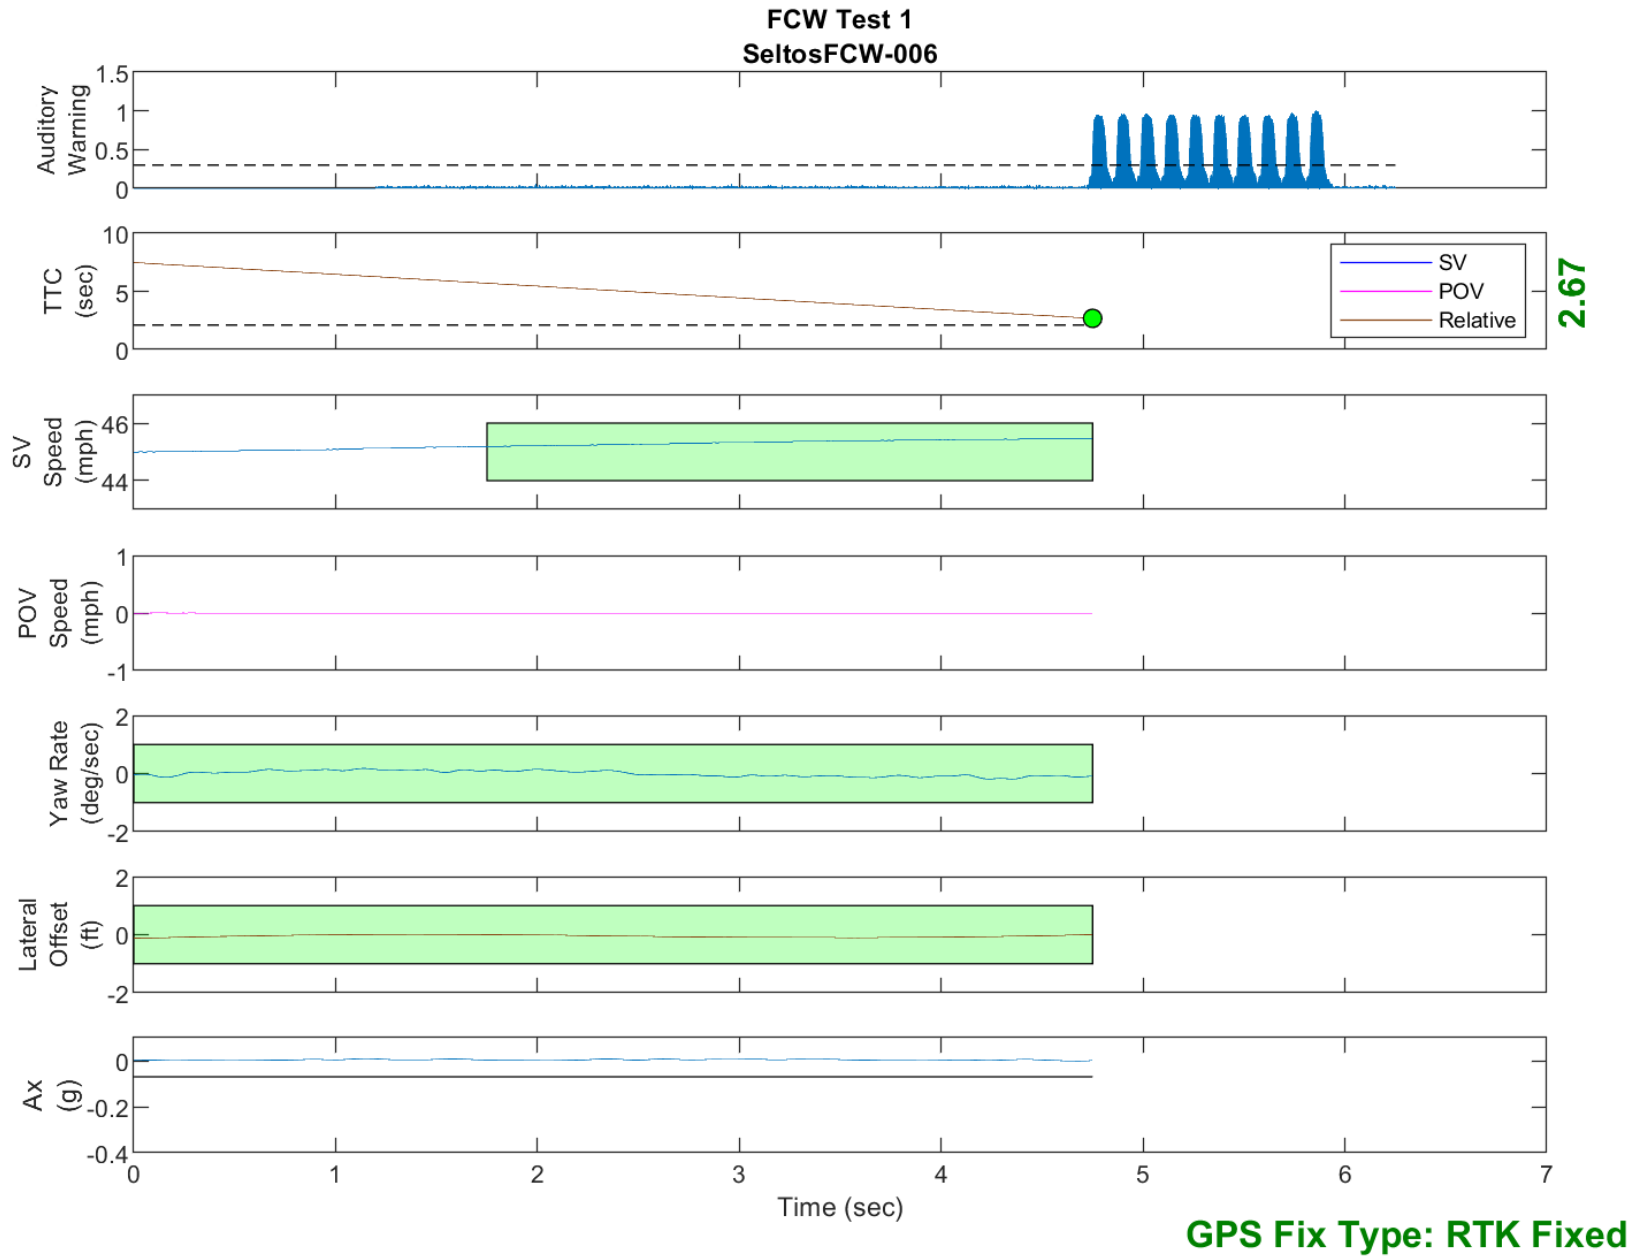


Figure D13. Time History for Run 6, FCW Test 1, Auditory Warning

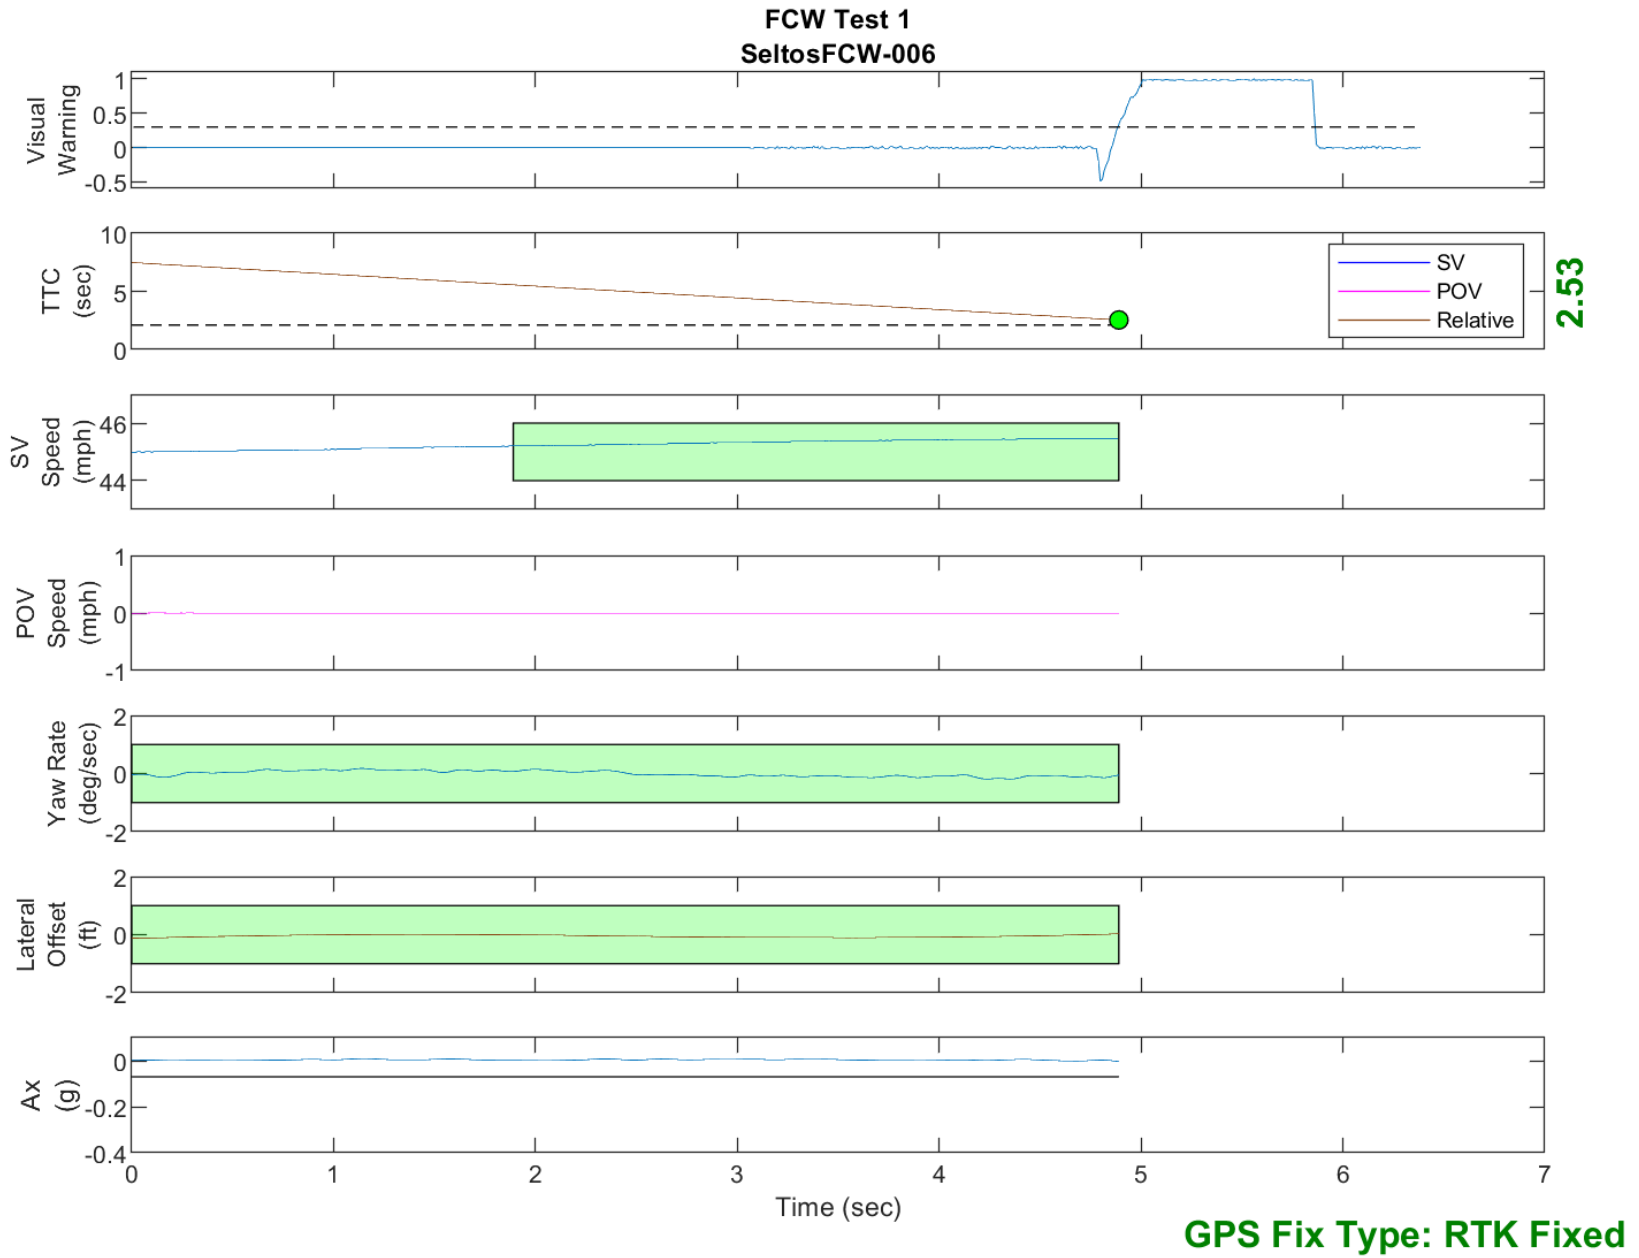


Figure D14. Time History for Run 6, FCW Test 1, Visual Warning

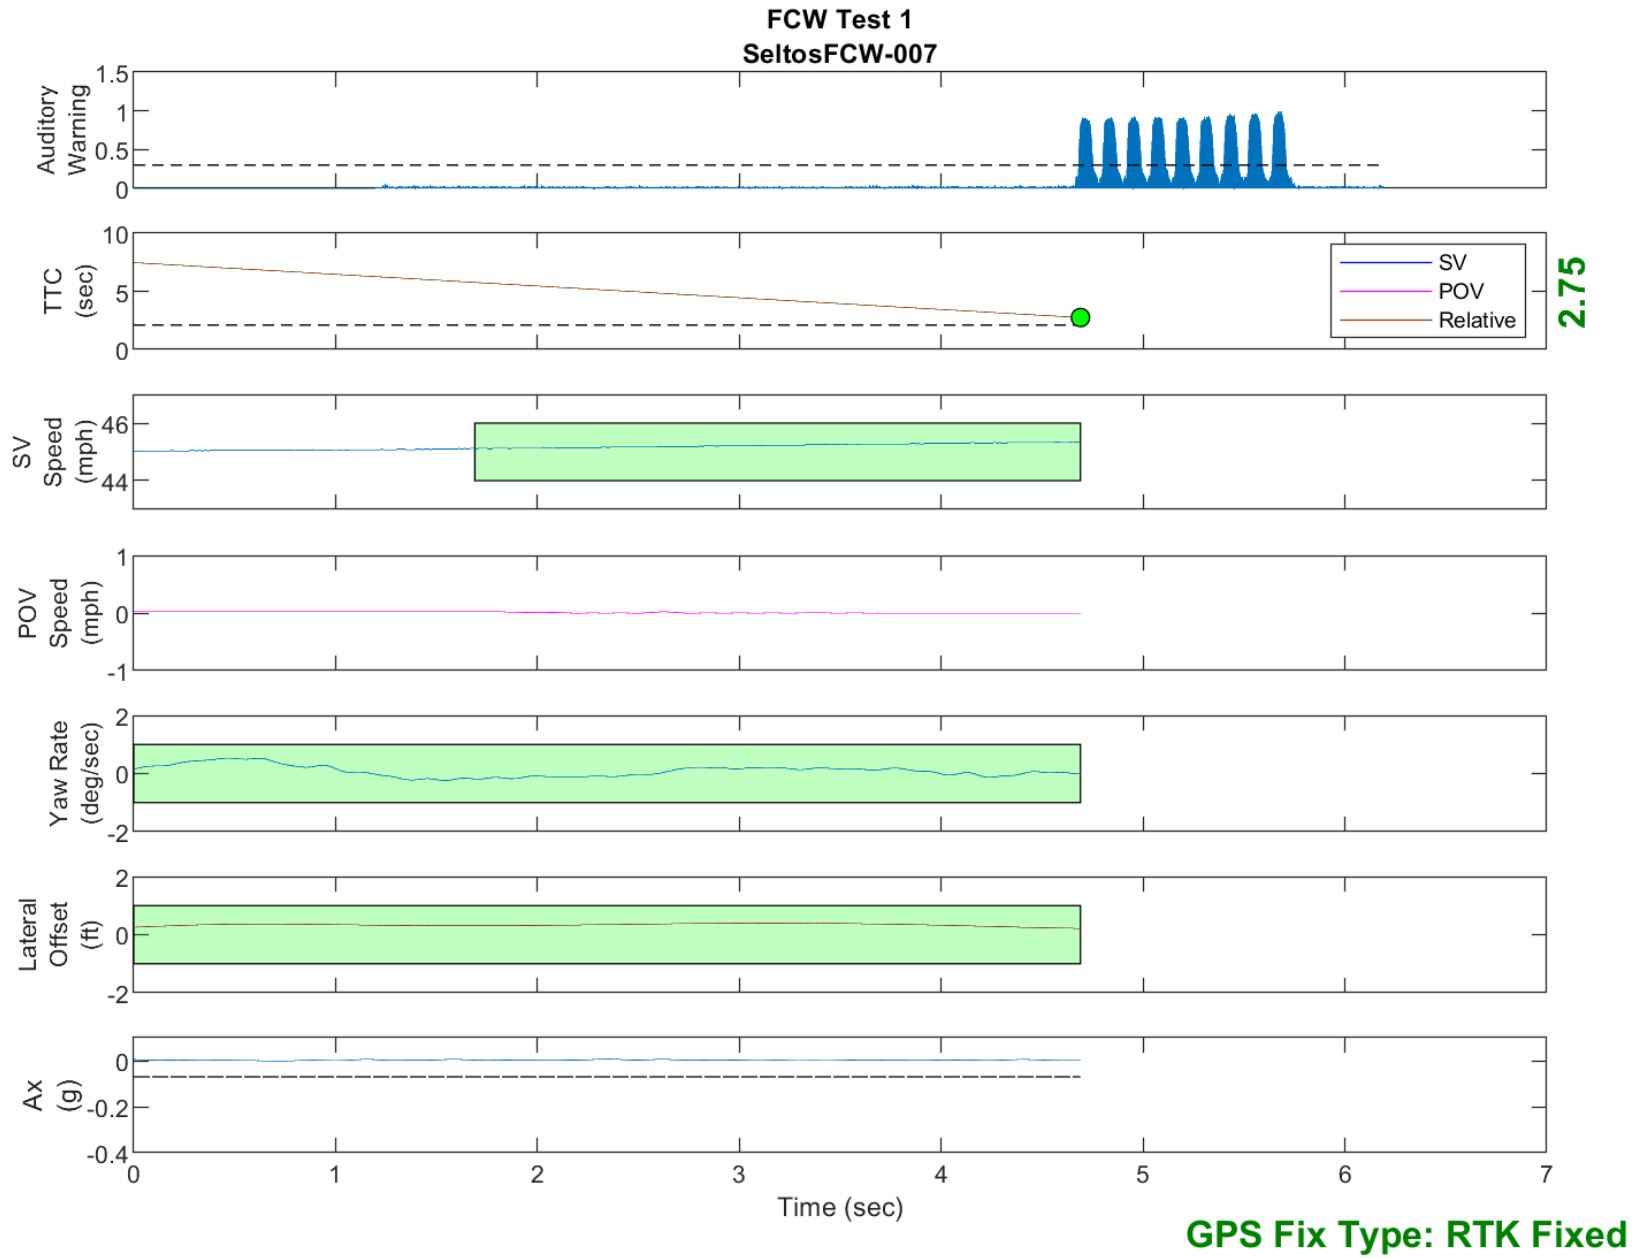


Figure D15. Time History for Run 7, FCW Test 1, Auditory Warning

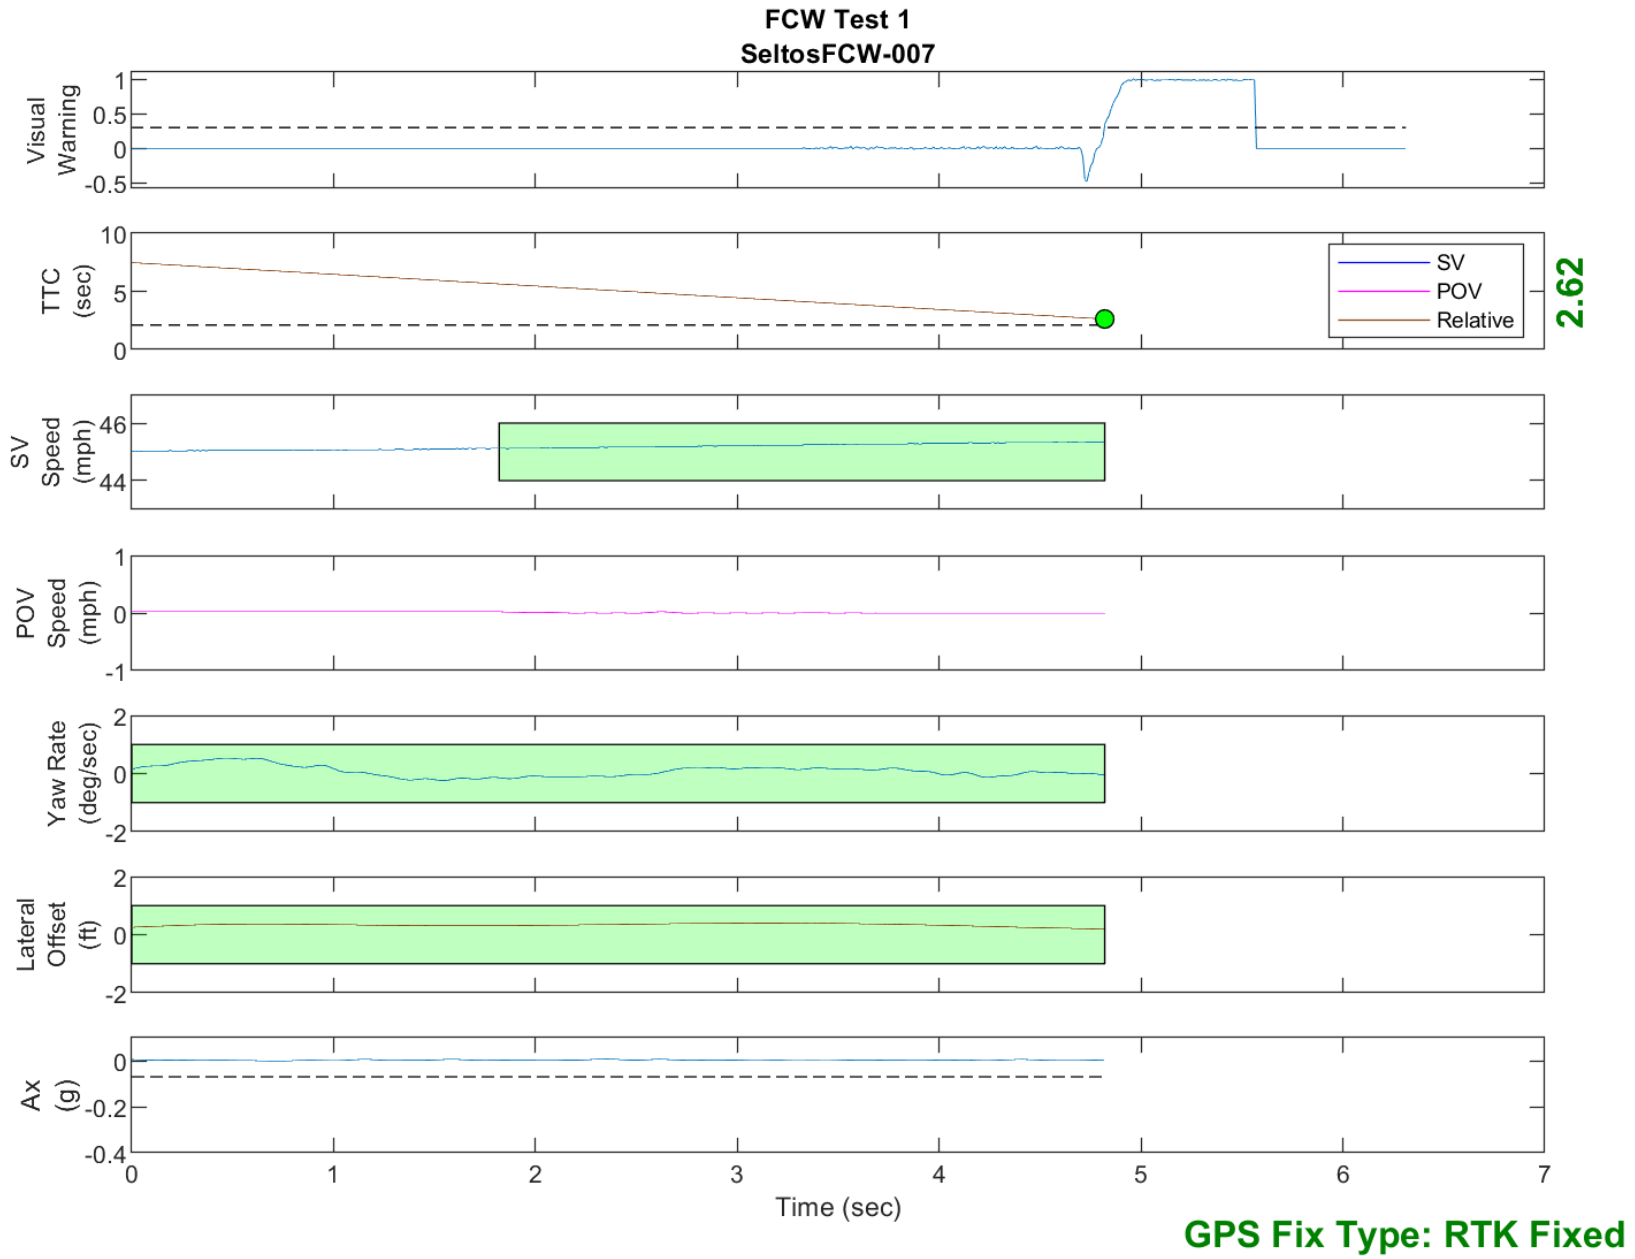


Figure D16. Time History for Run 7, FCW Test 1, Visual Warning

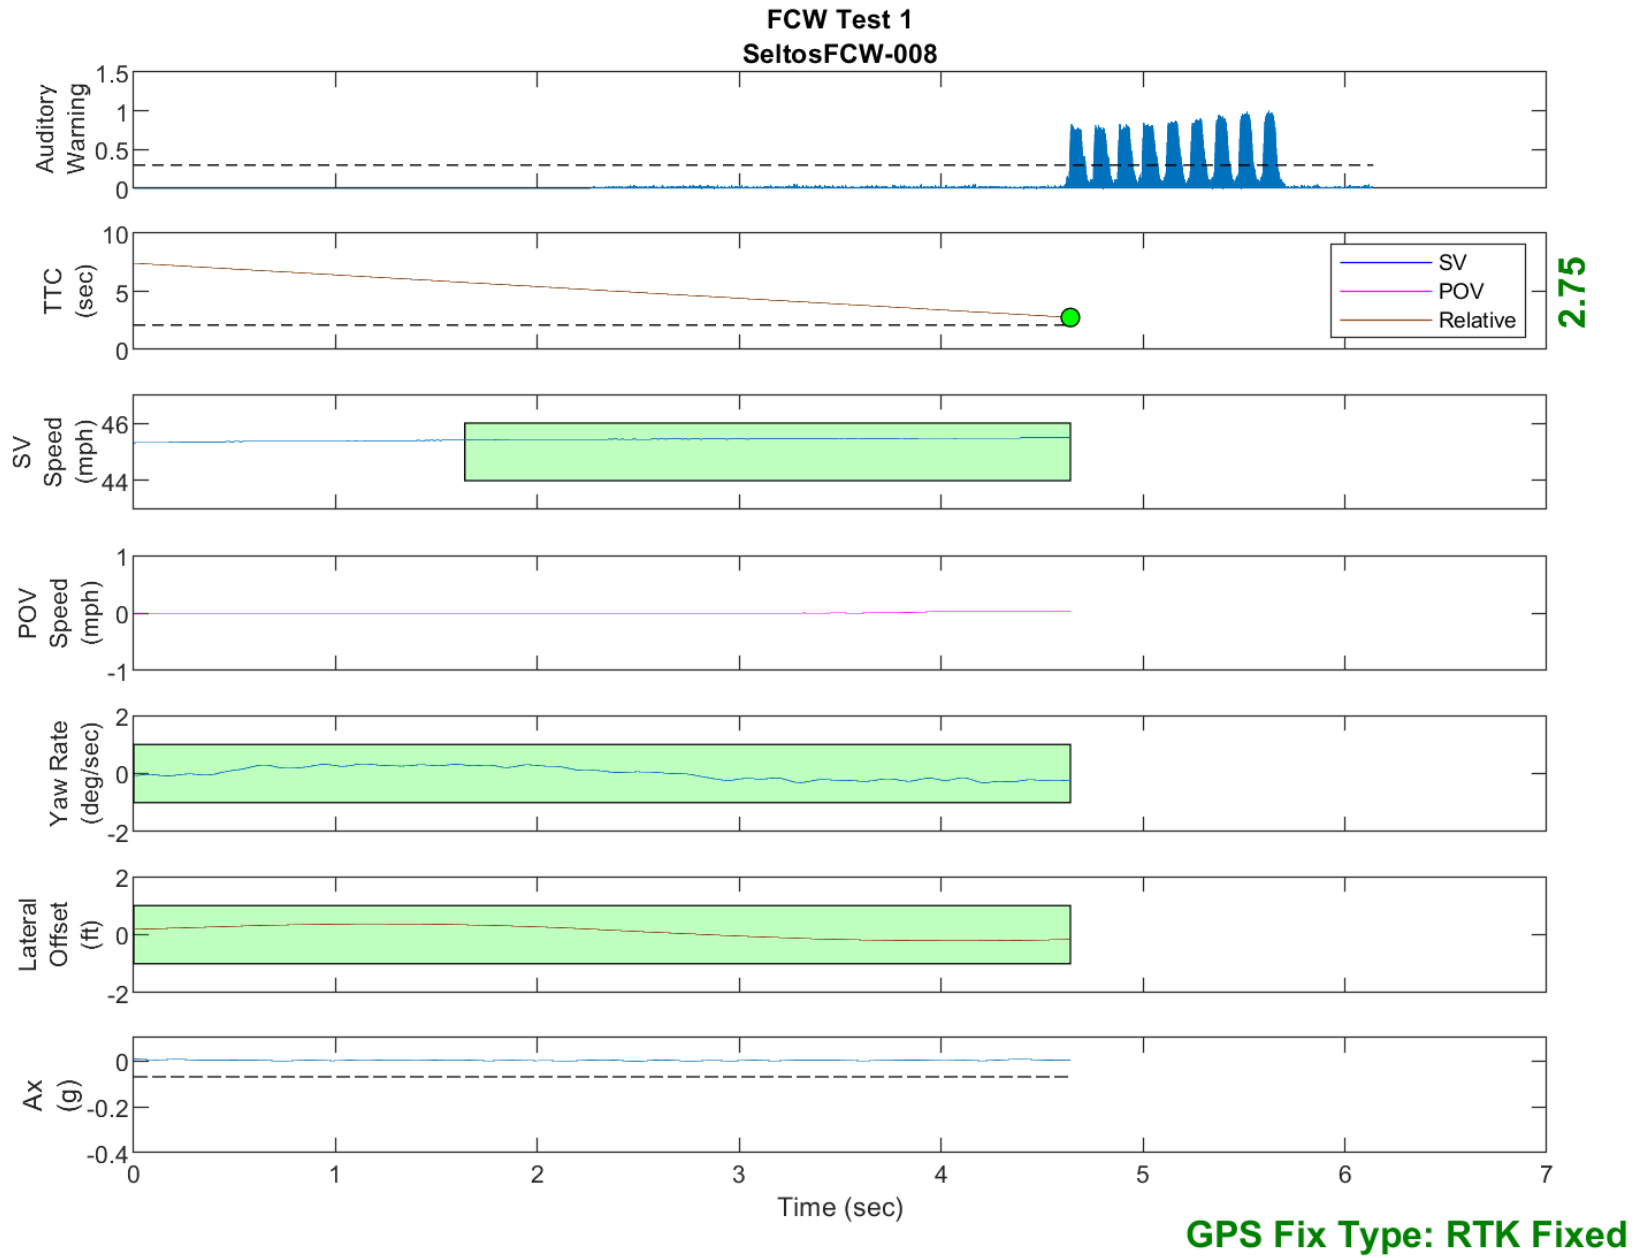


Figure D17. Time History for Run 8, FCW Test 1, Auditory Warning

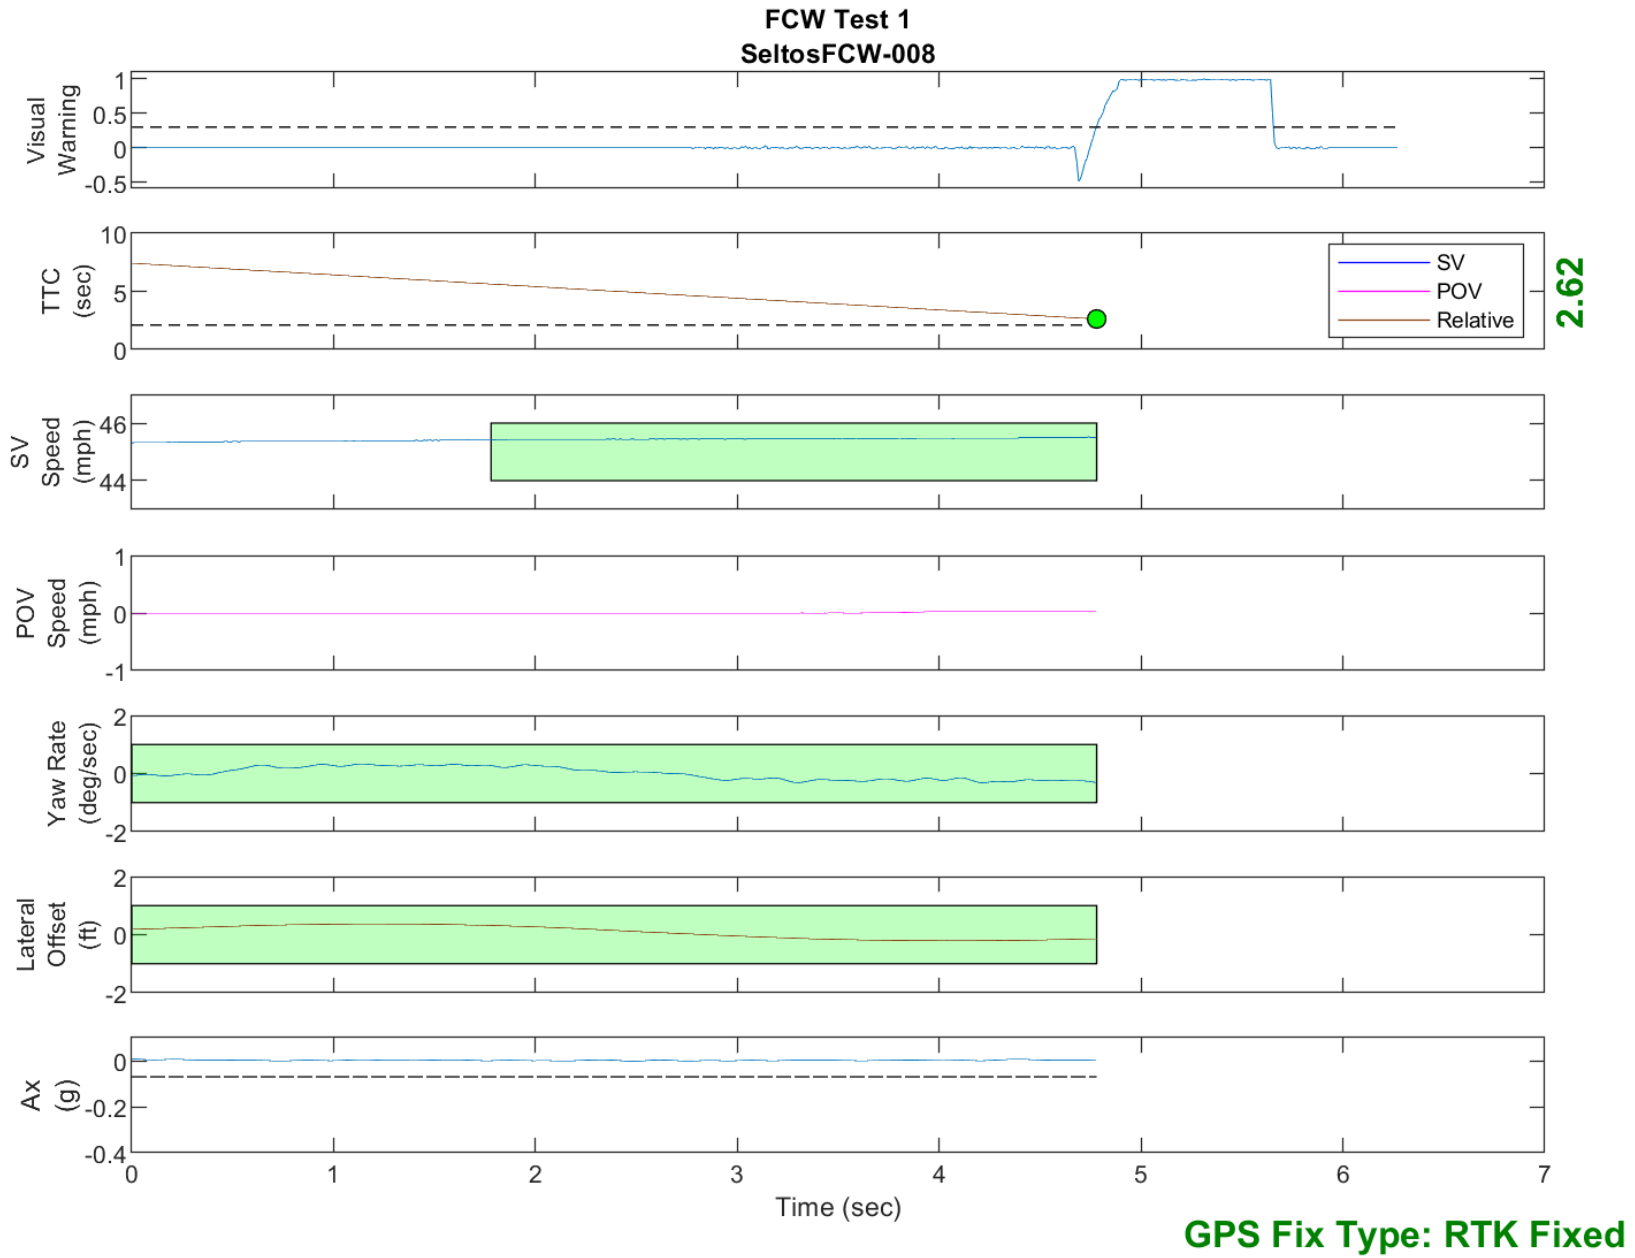


Figure D18. Time History for Run 8, FCW Test 1, Visual Warning

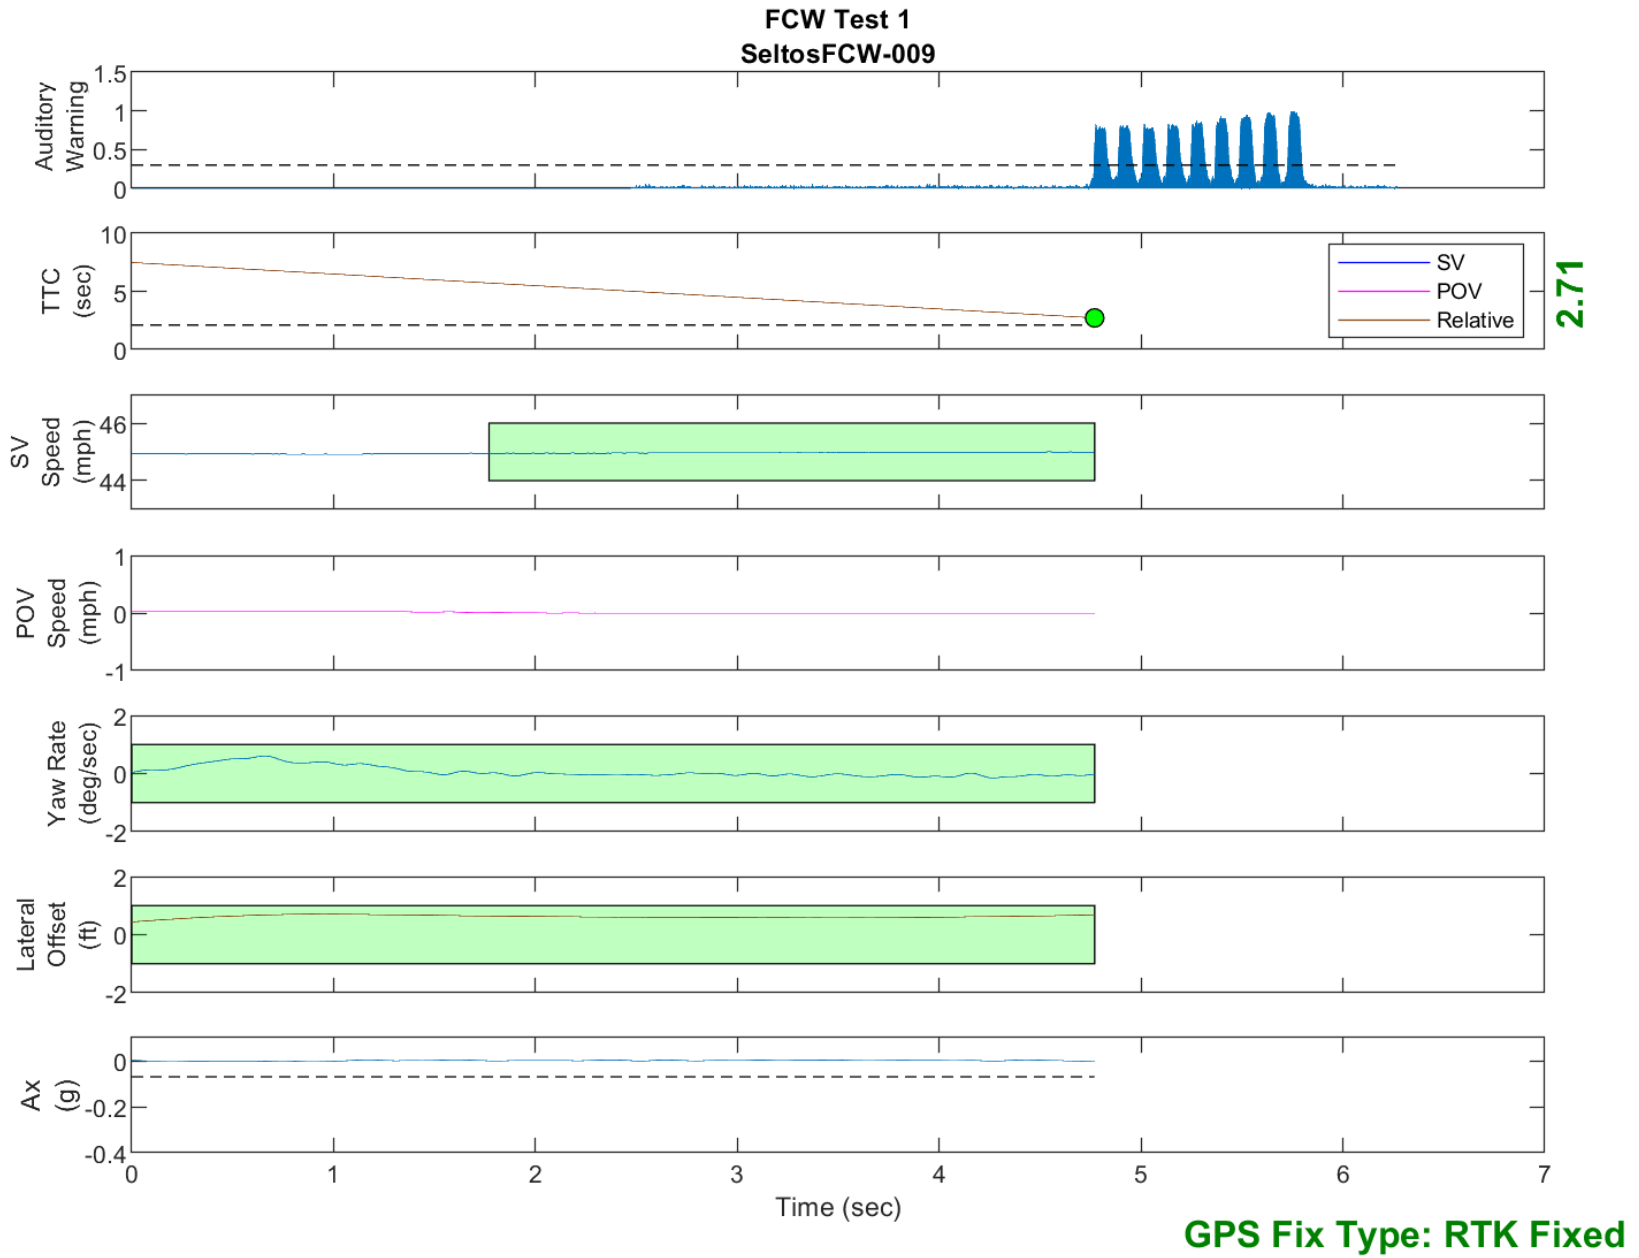


Figure D19. Time History for Run 9, FCW Test 1, Auditory Warning

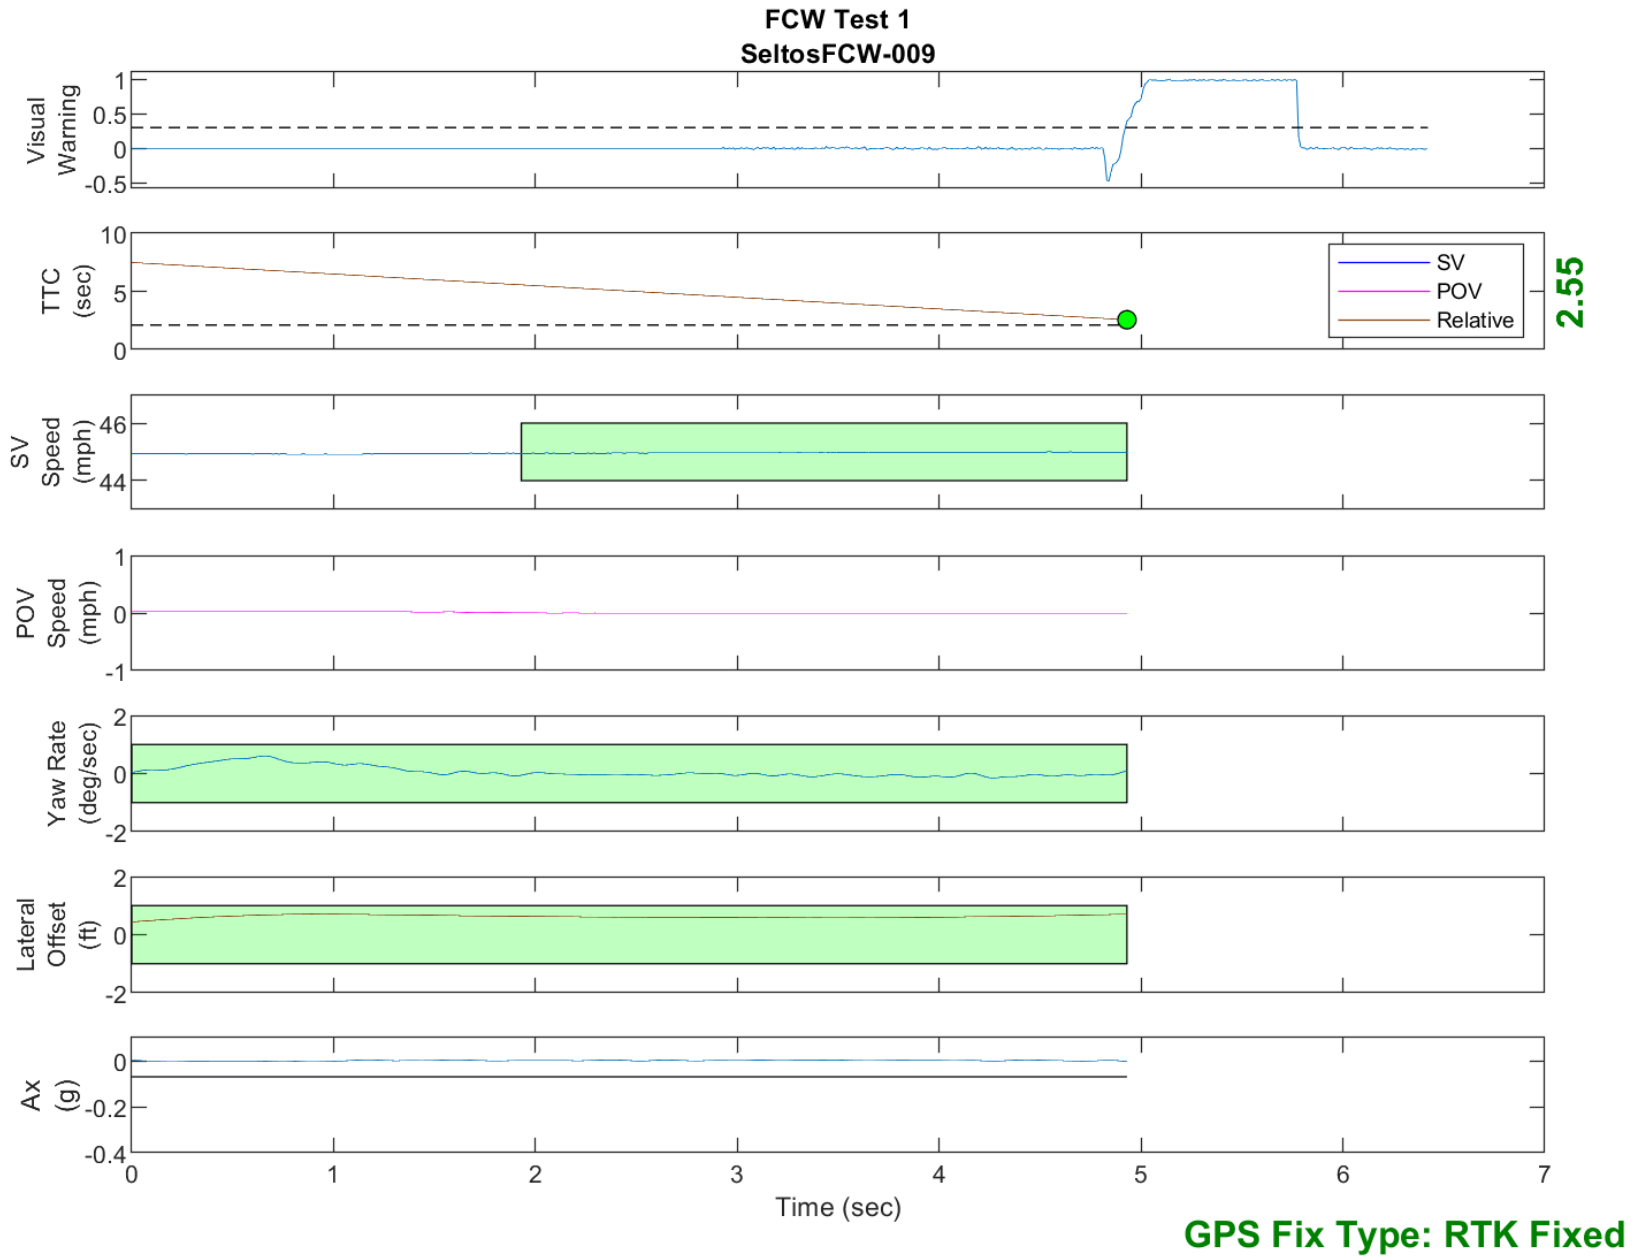


Figure D20. Time History for Run 9, FCW Test 1, Visual Warning

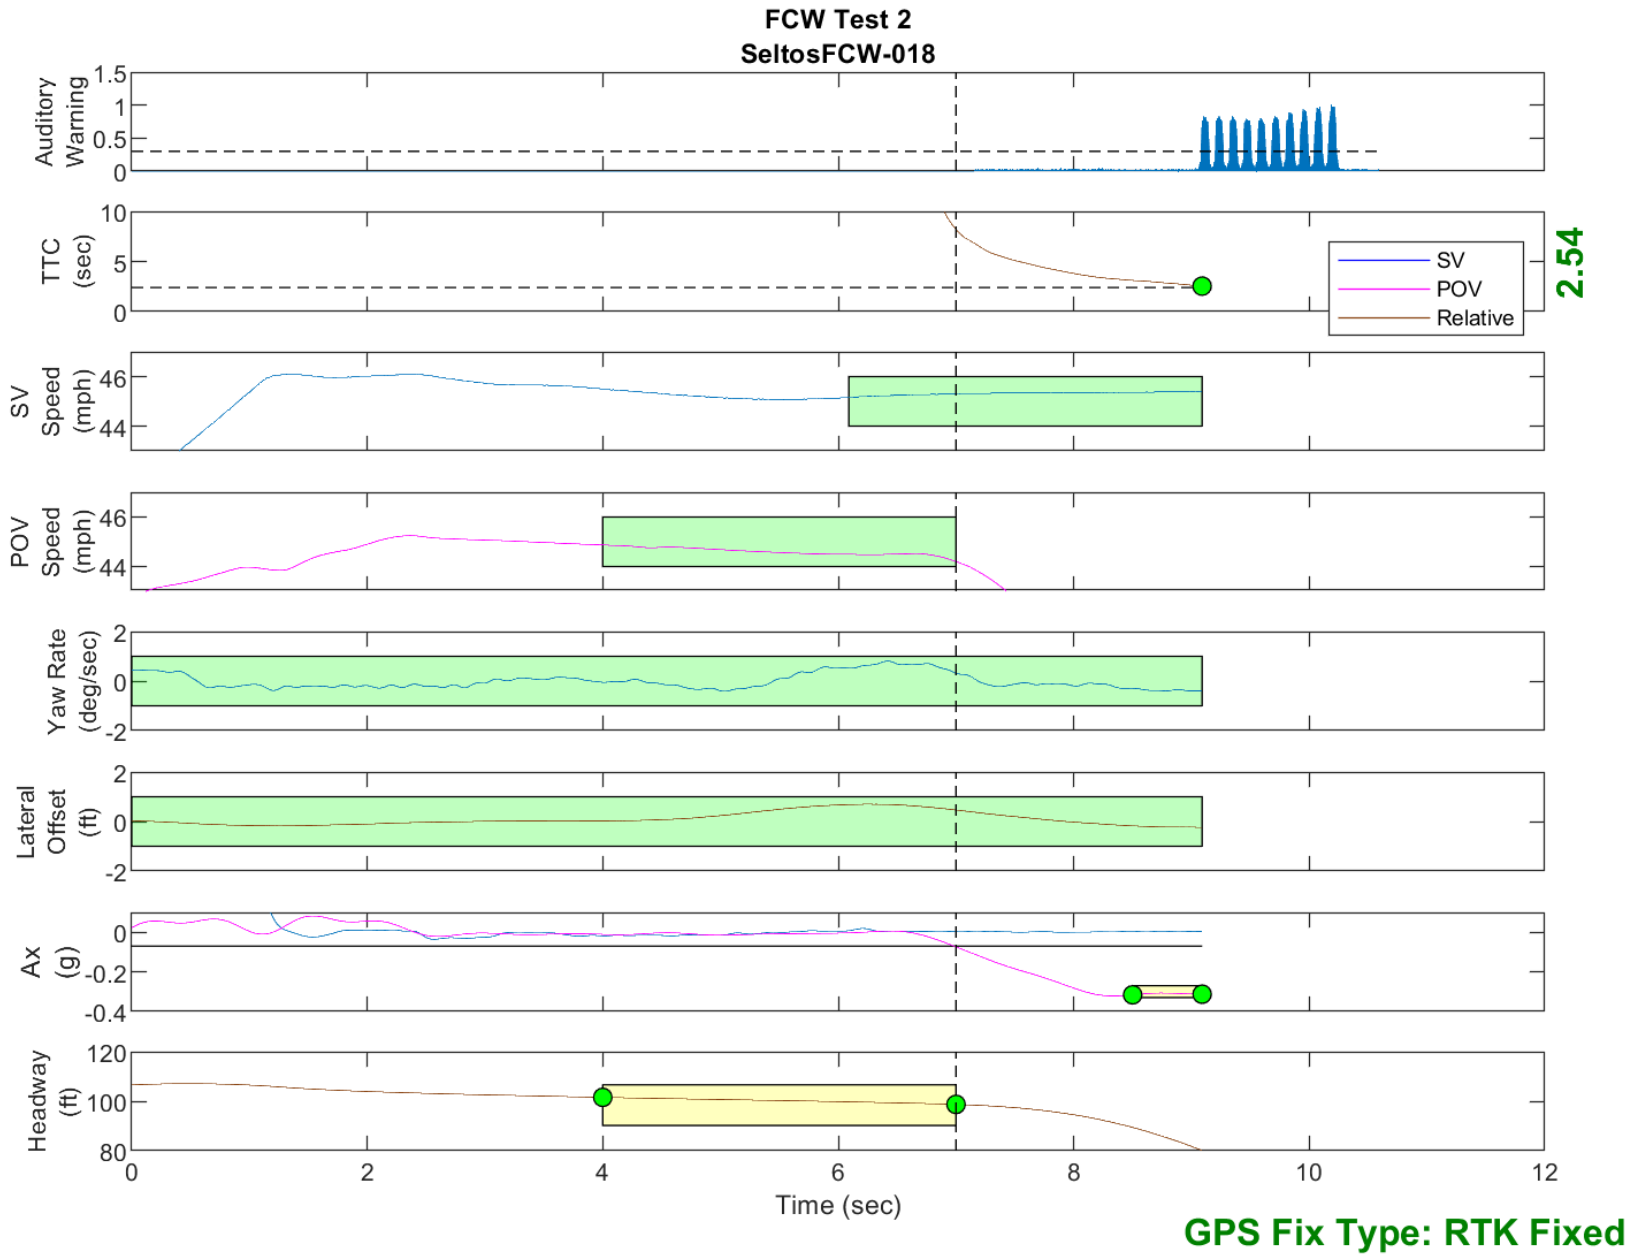


Figure D21. Time History for Run 18, FCW Test 2, Auditory Warning

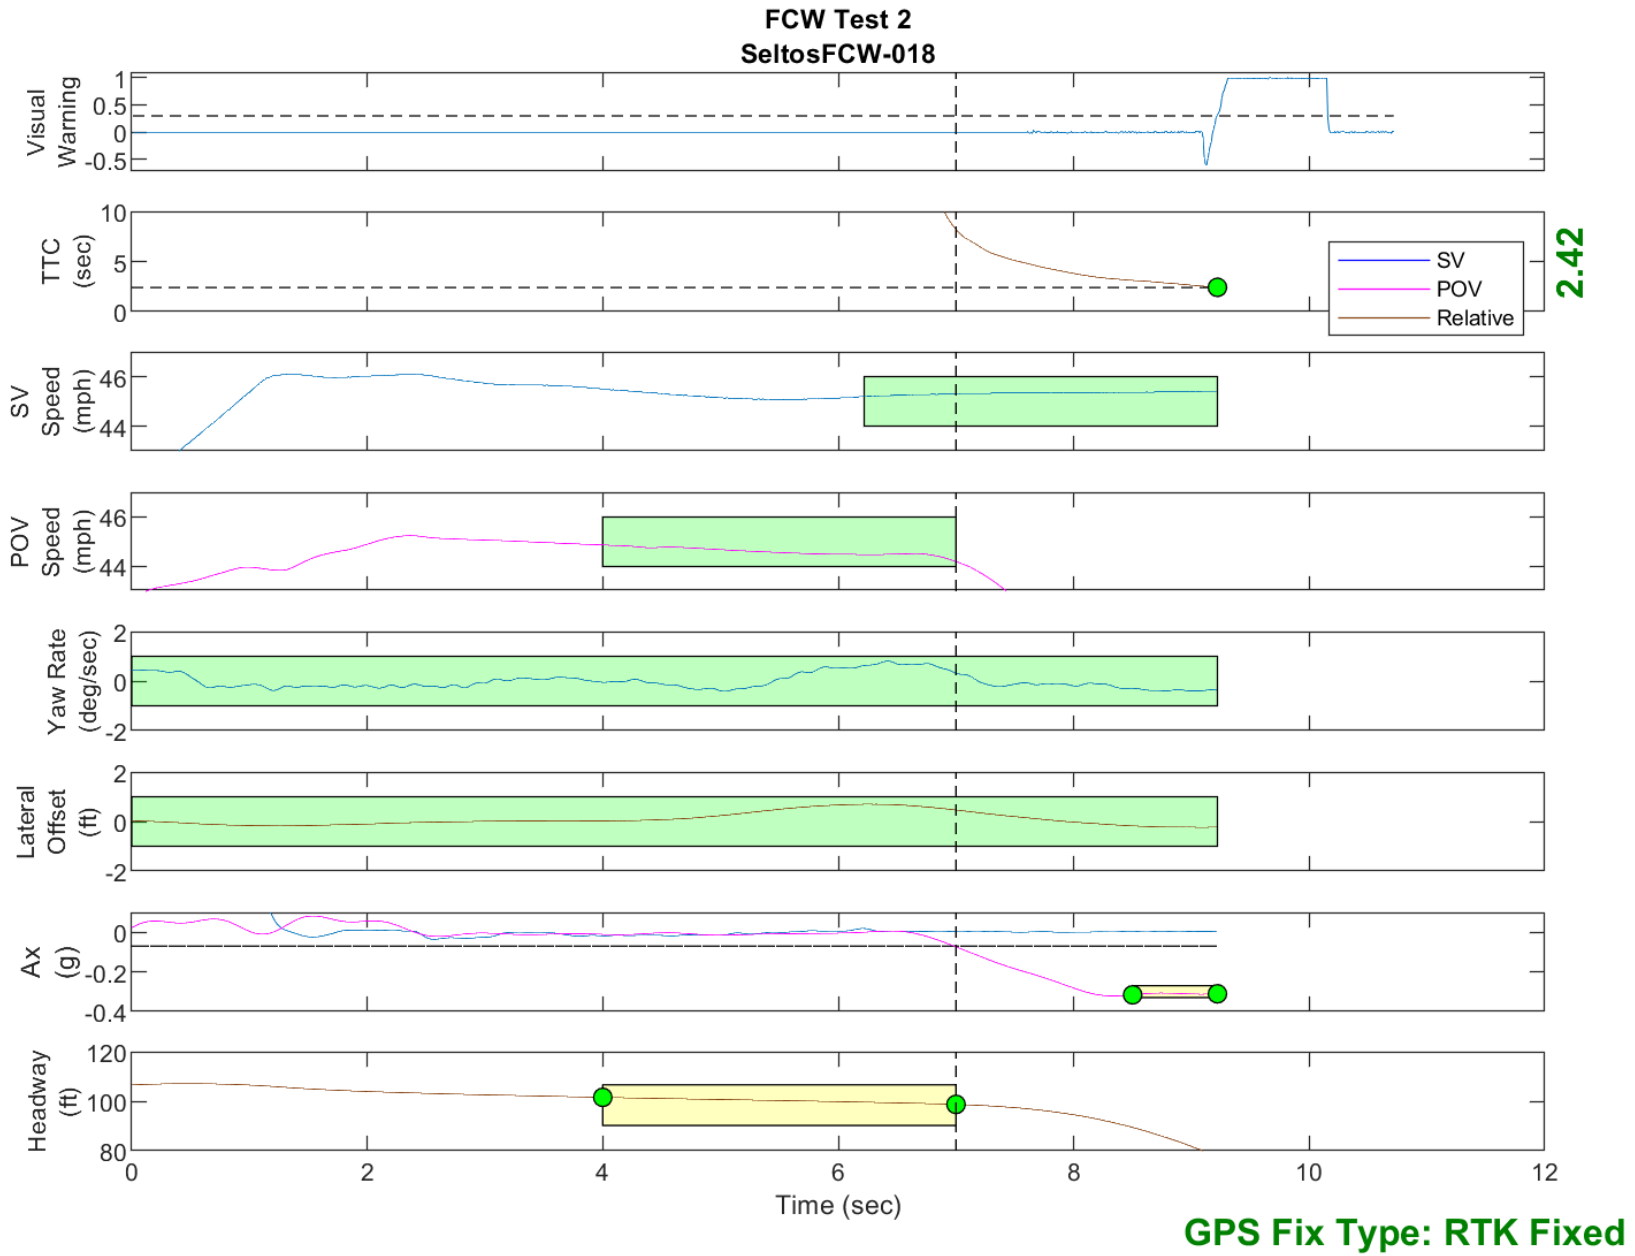


Figure D22. Time History for Run 18, FCW Test 2, Visual Warning

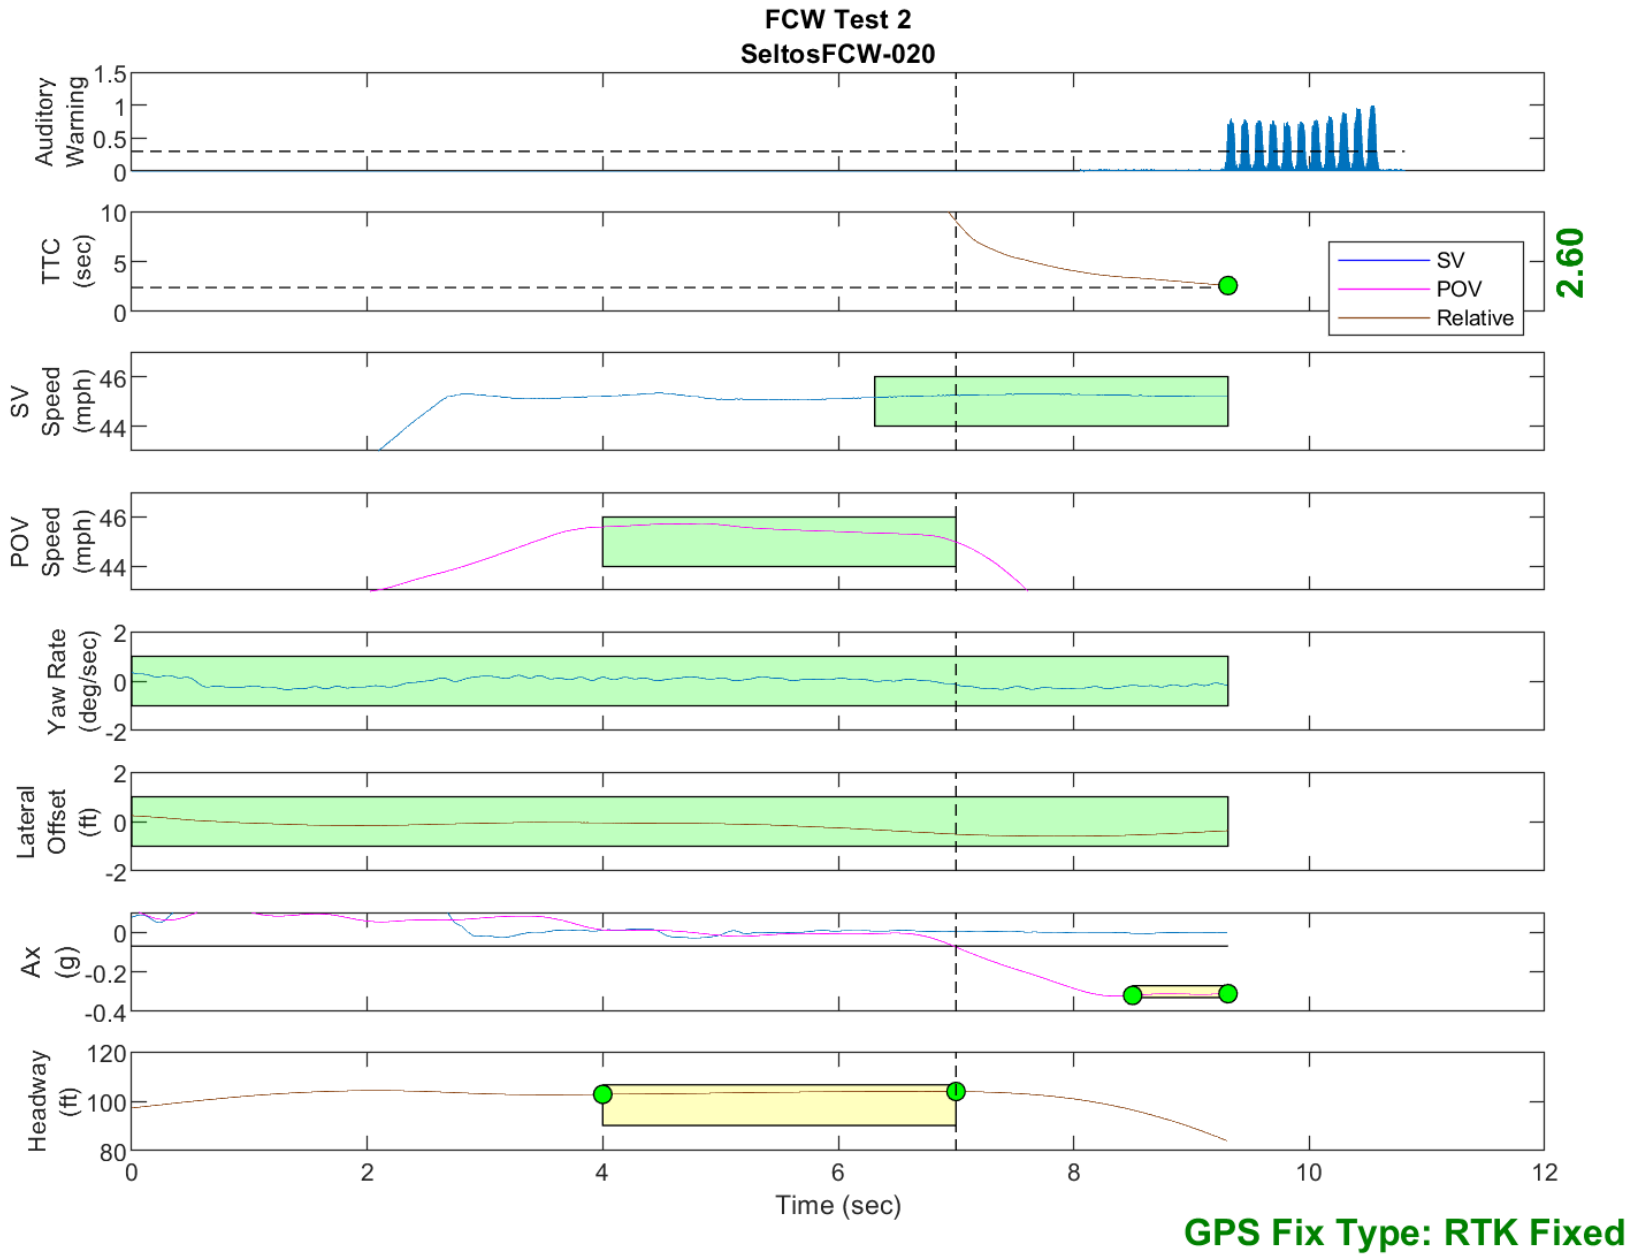


Figure D23. Time History for Run 20, FCW Test 2, Auditory Warning

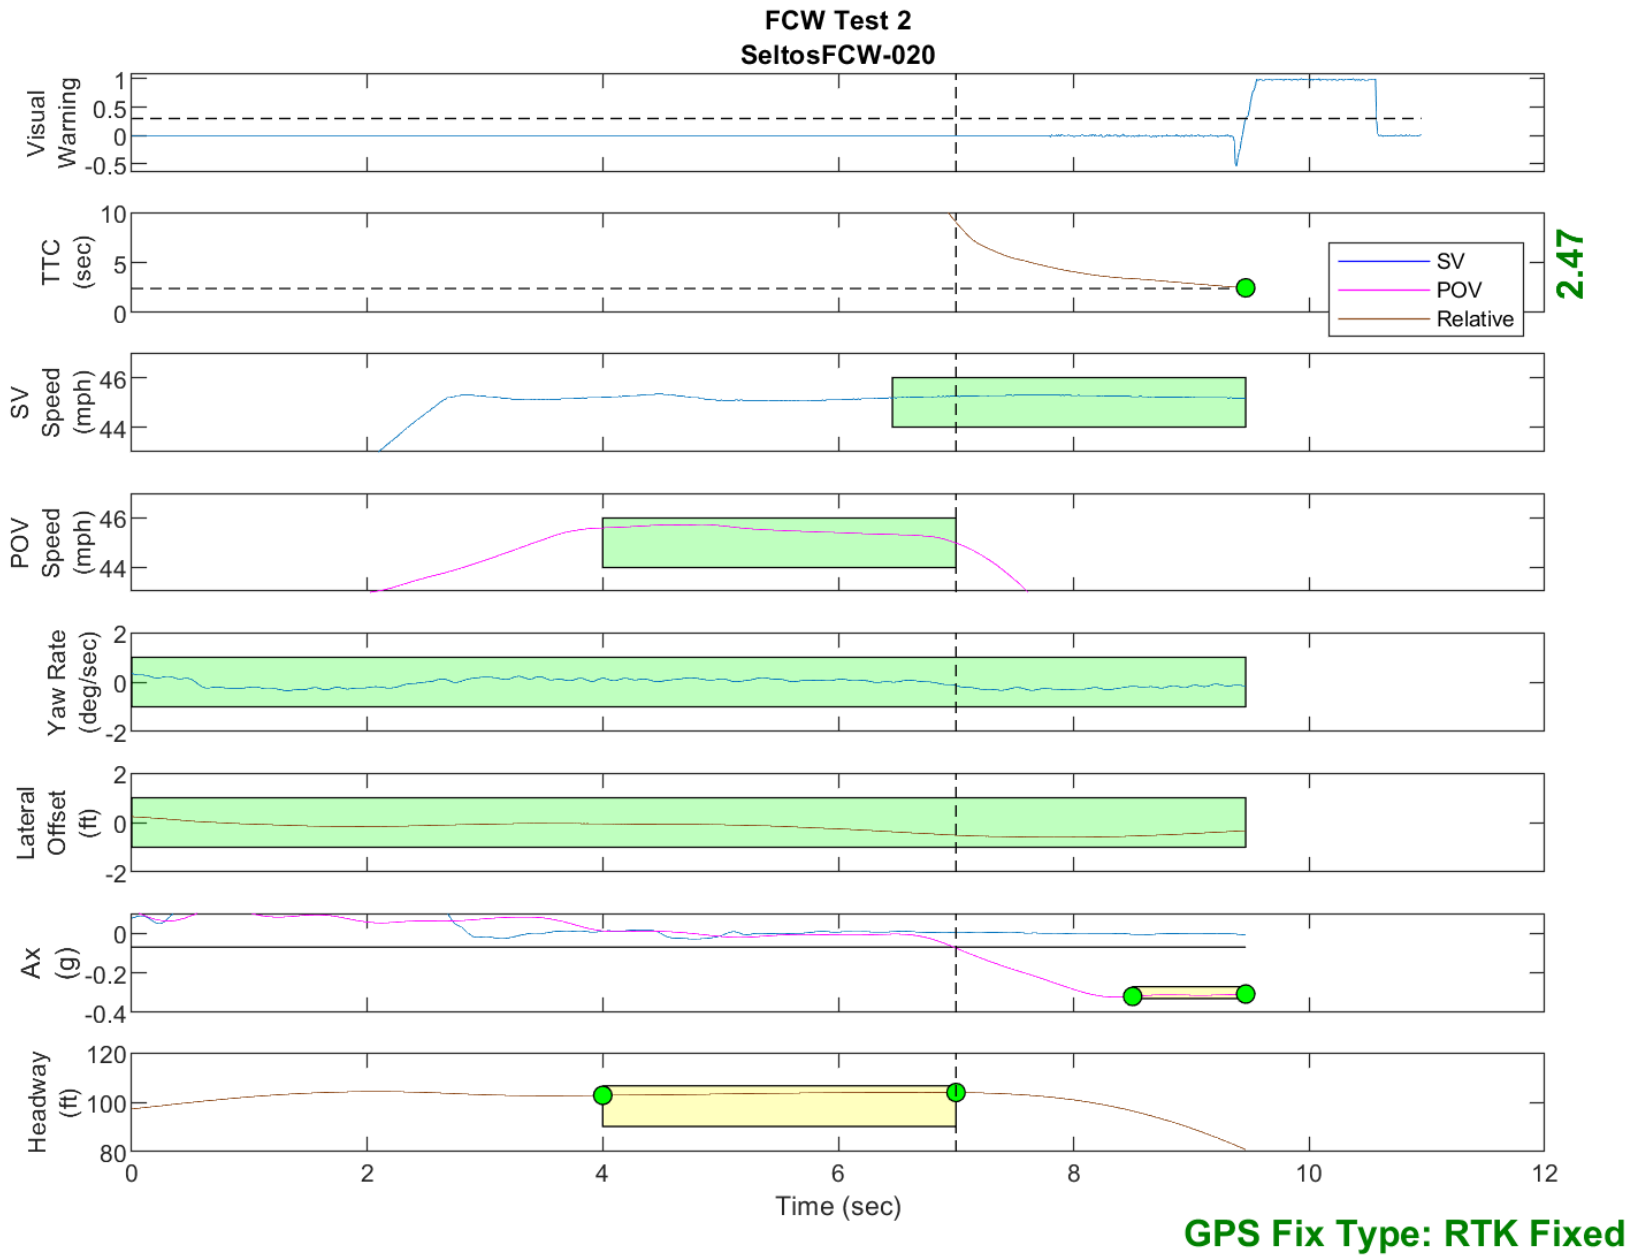


Figure D24. Time History for Run 20, FCW Test 2, Visual Warning

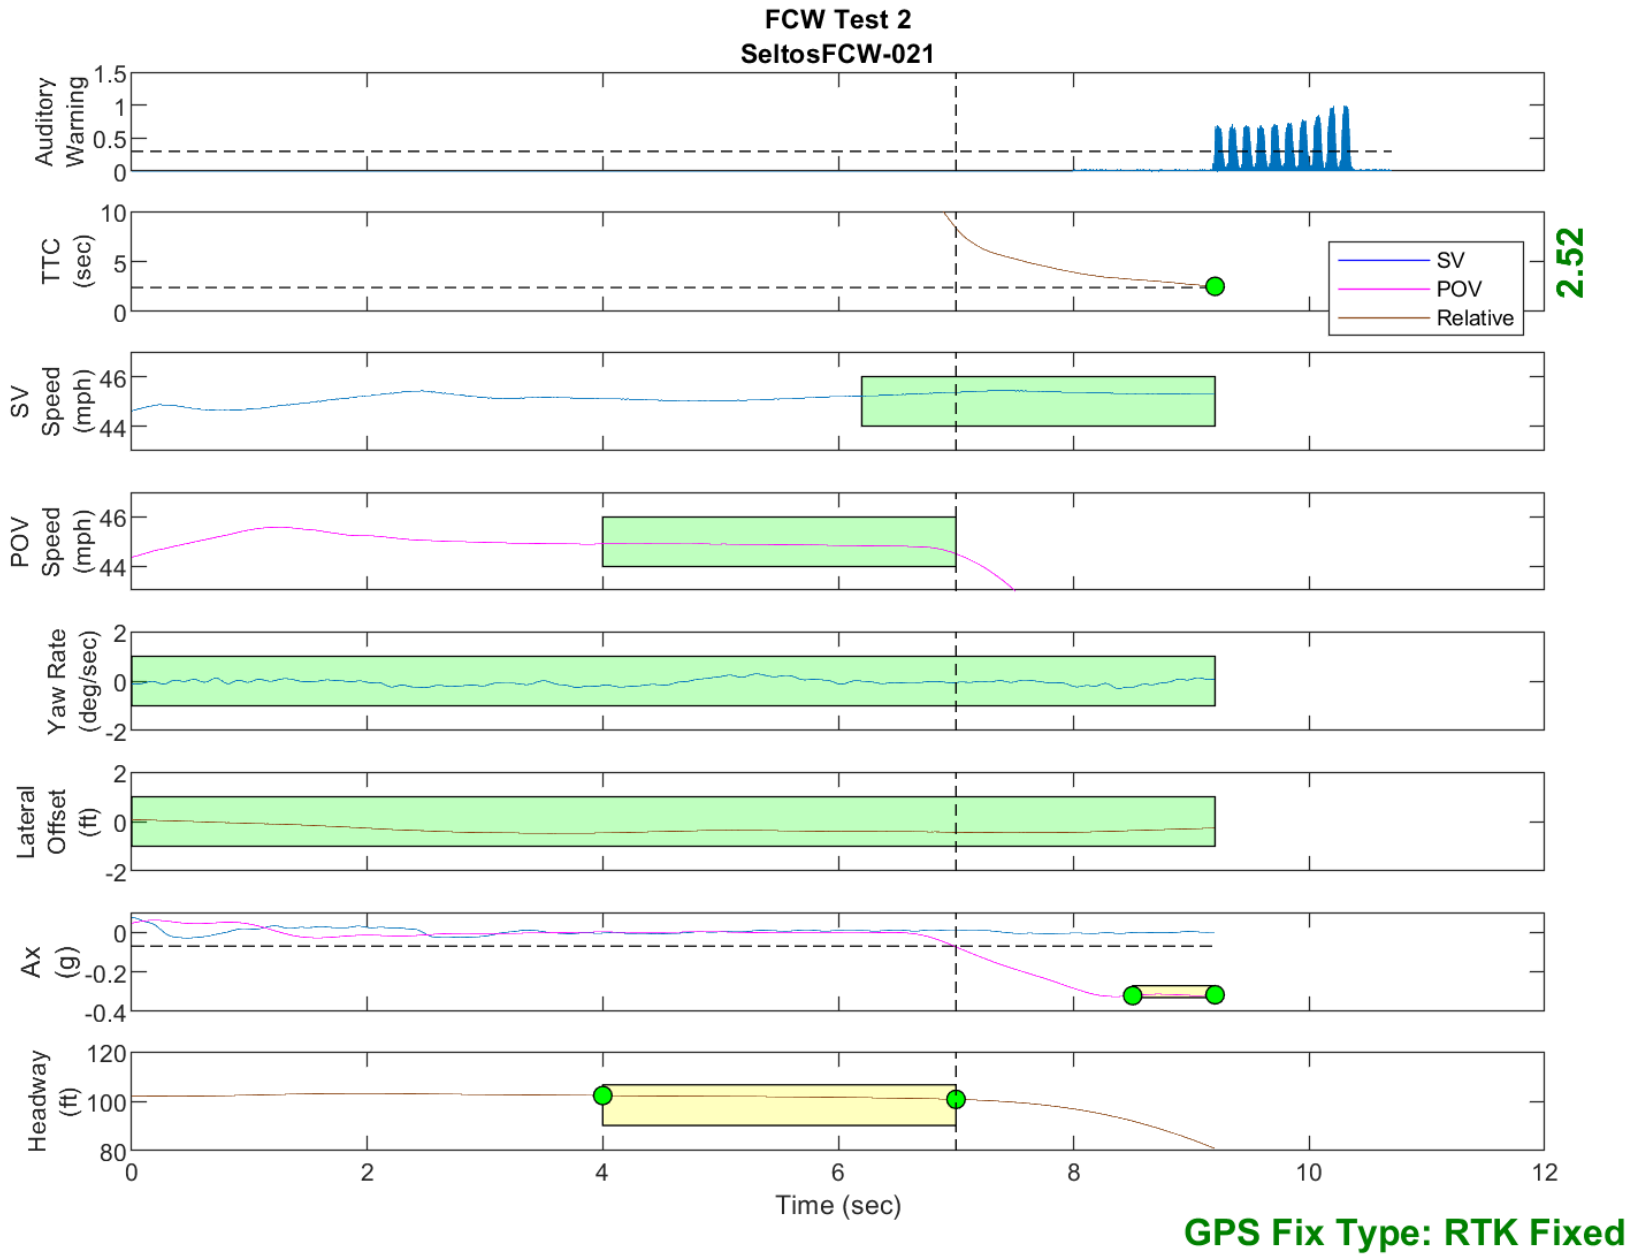


Figure D25. Time History for Run 21, FCW Test 2, Auditory Warning

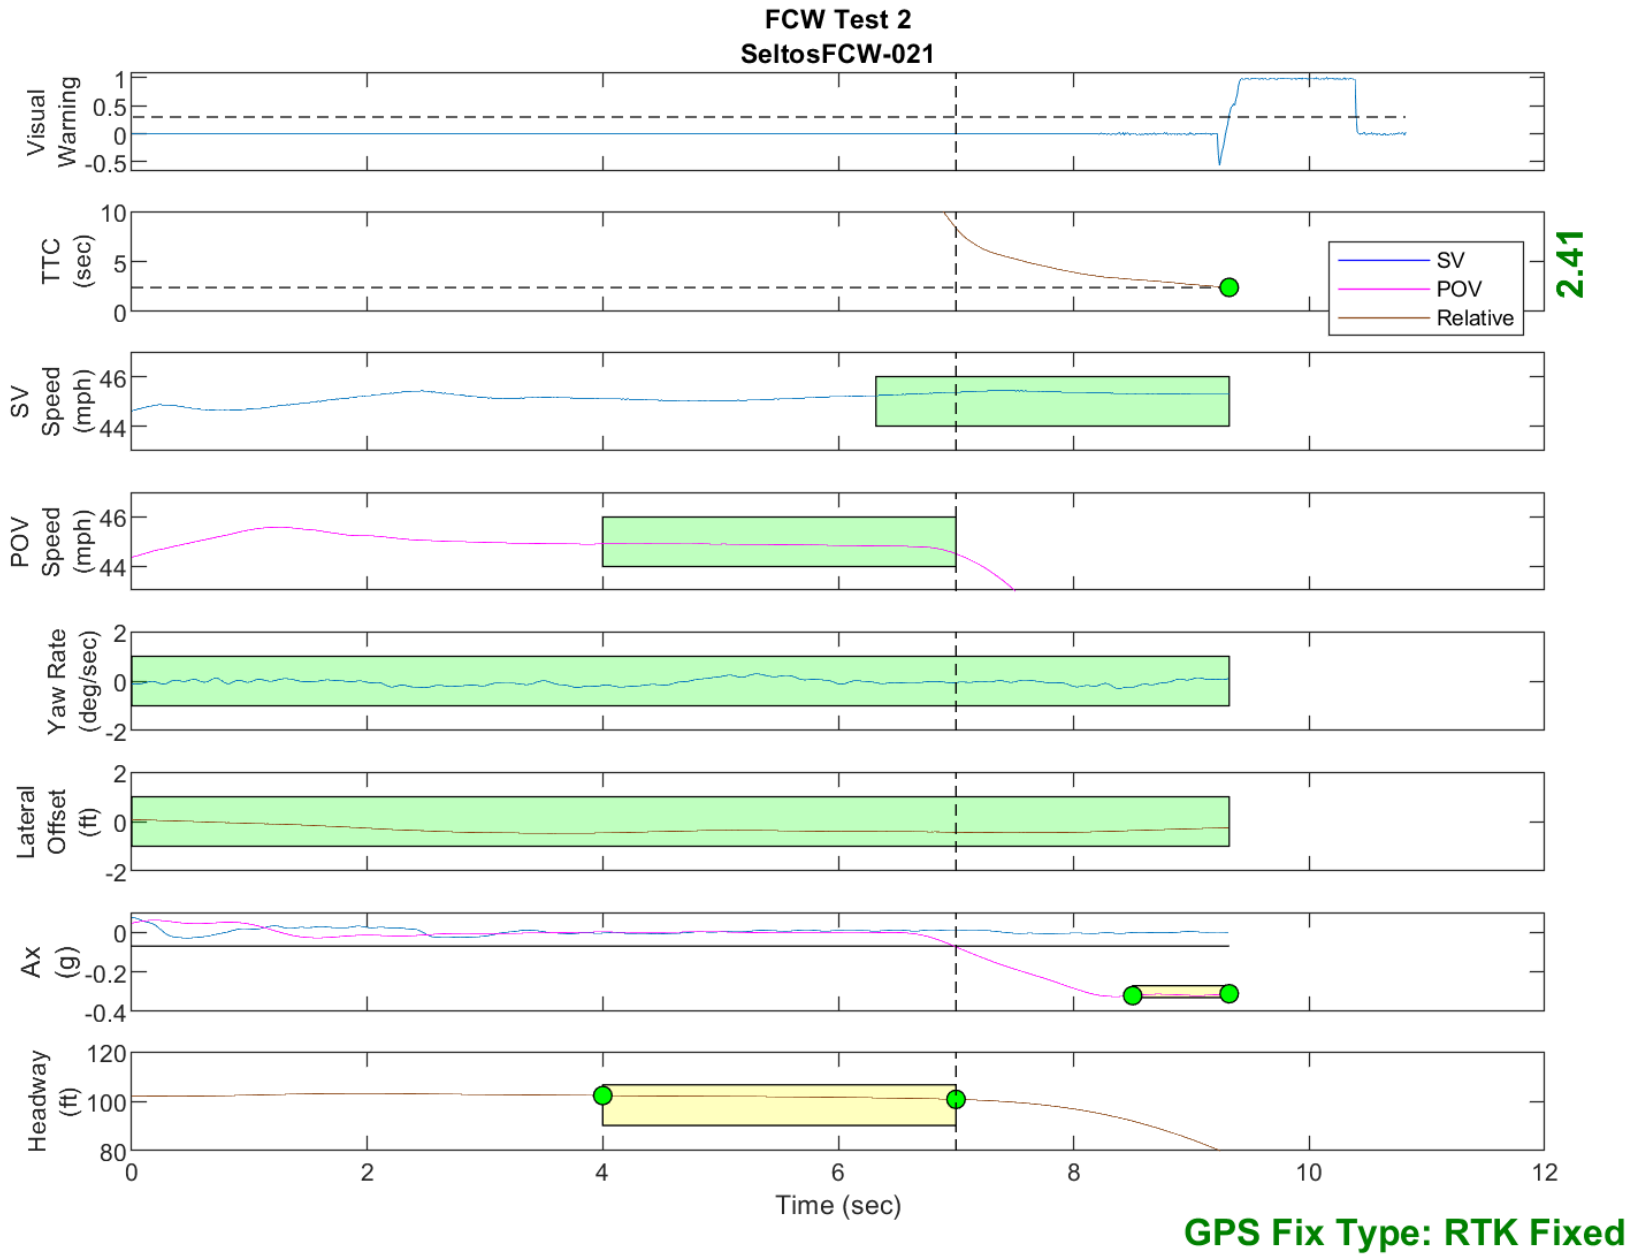


Figure D26. Time History for Run 21, FCW Test 2, Visual Warning

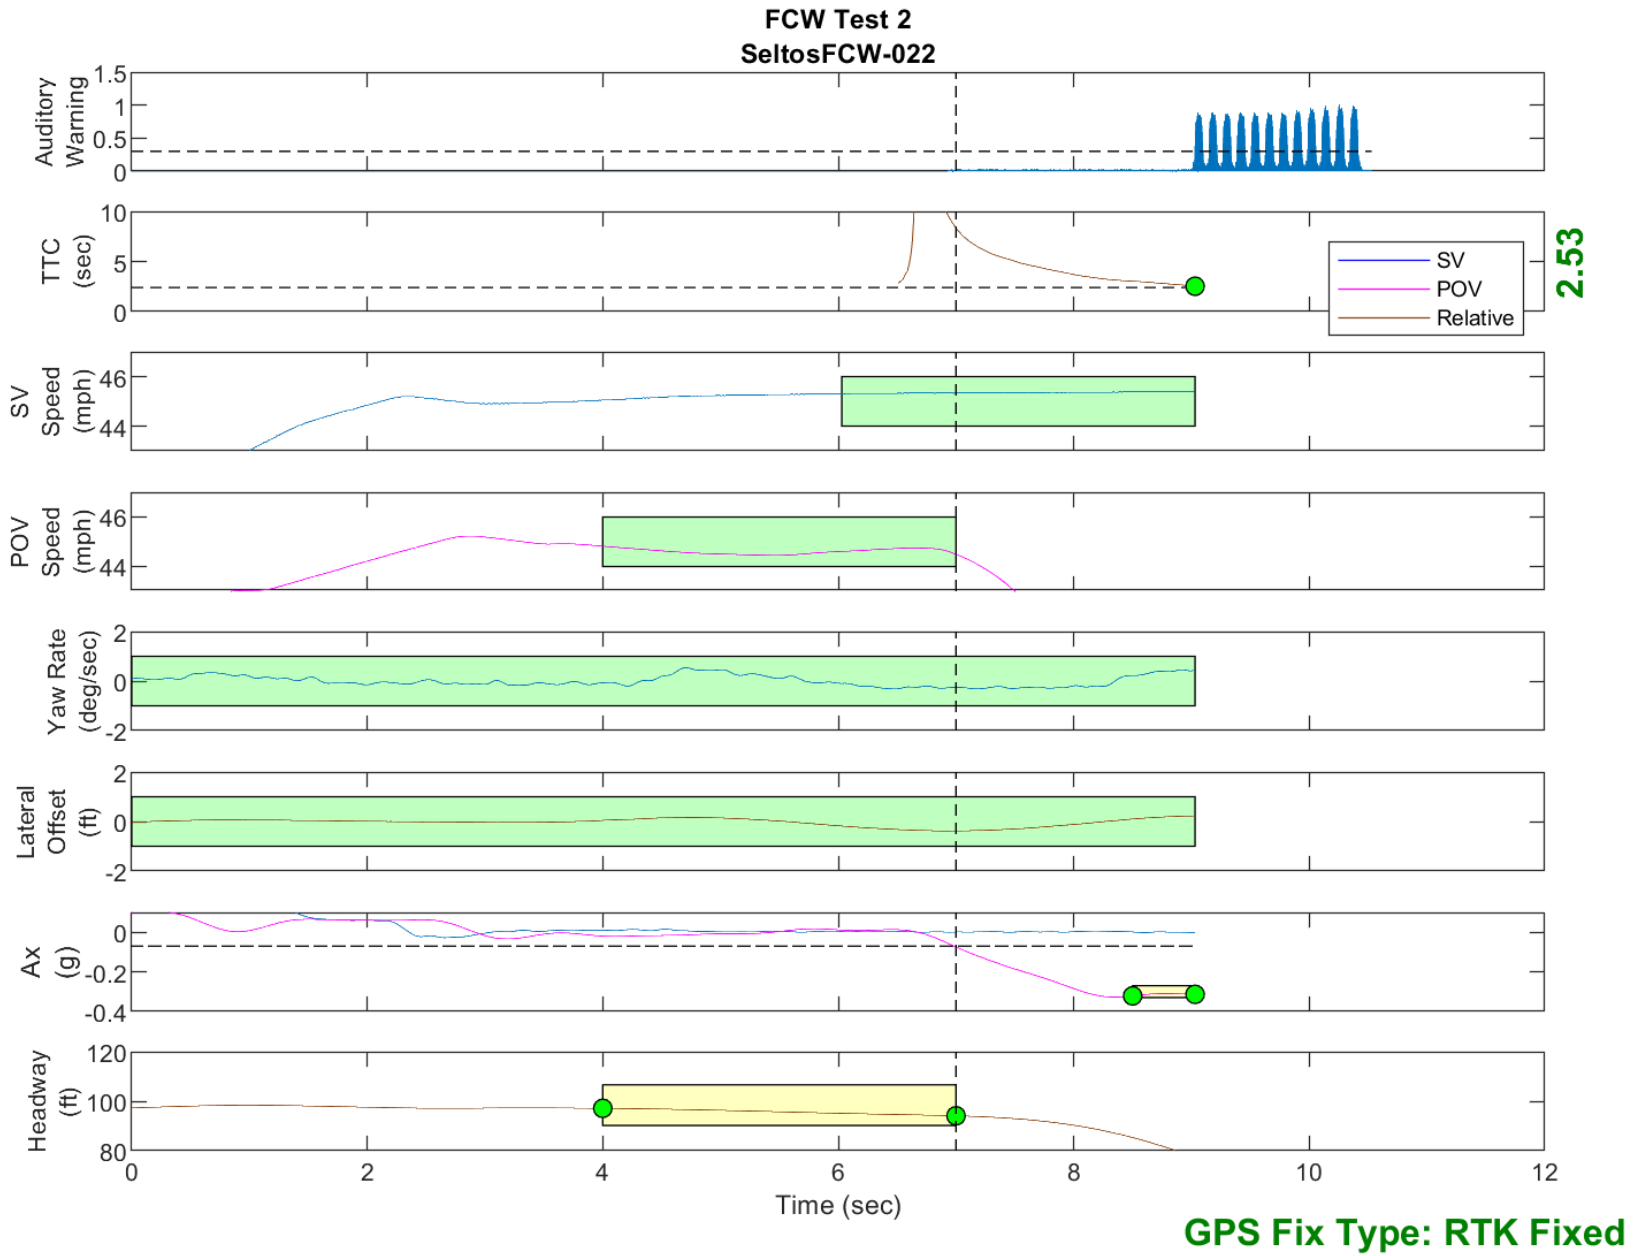


Figure D27. Time History for Run 22, FCW Test 2, Auditory Warning

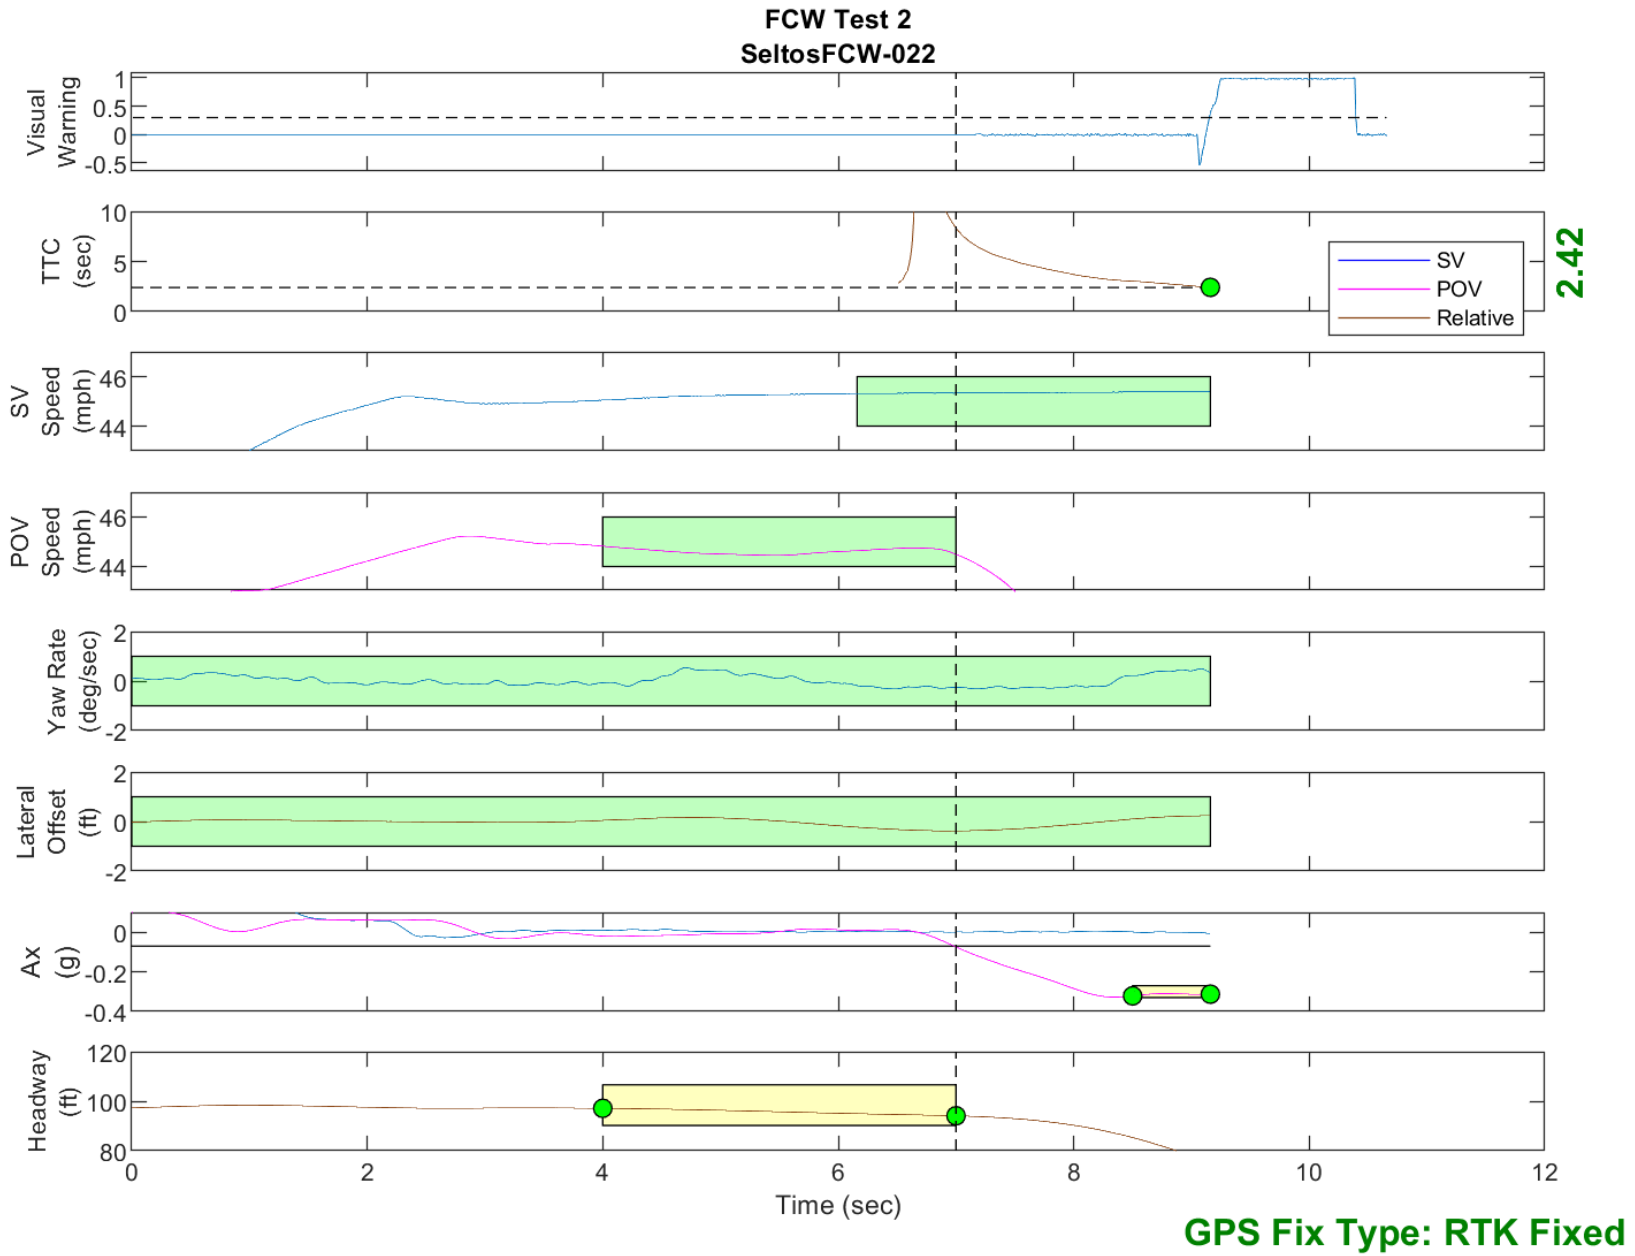


Figure D28. Time History for Run 22, FCW Test 2, Visual Warning

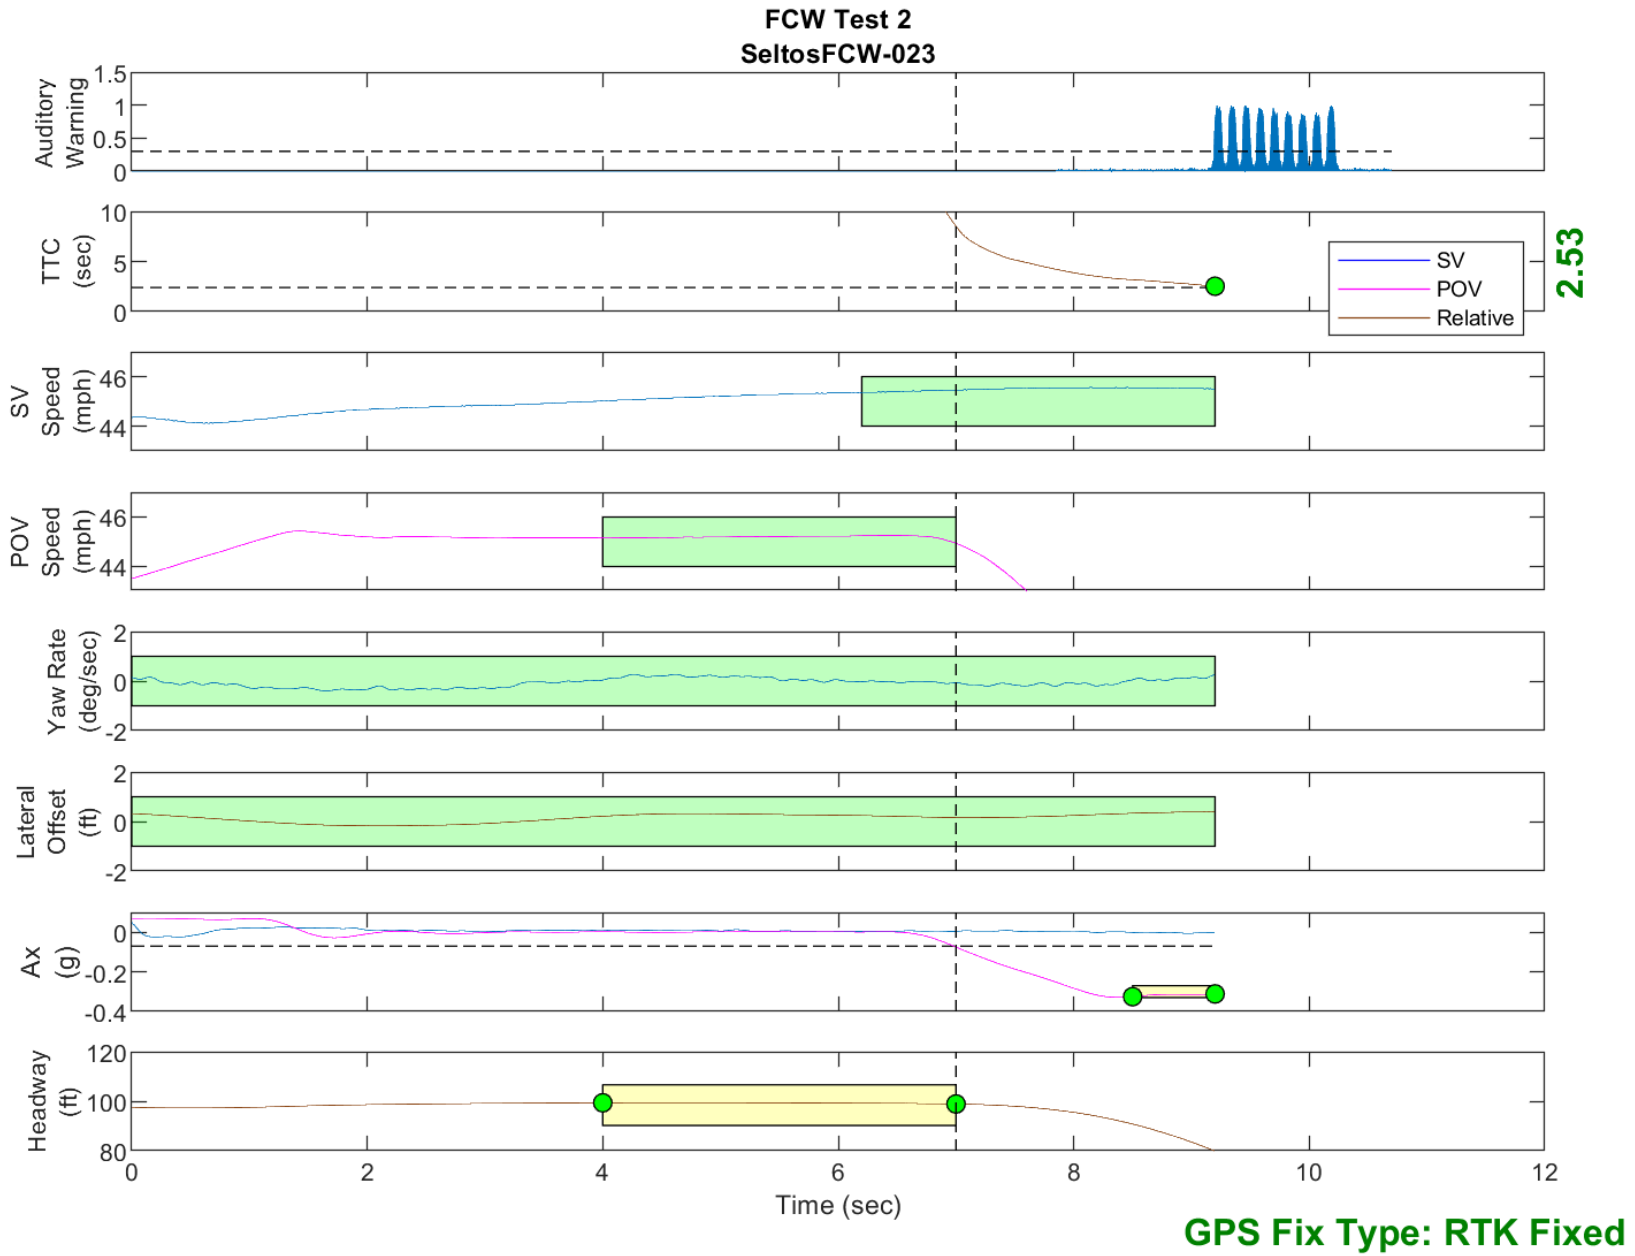


Figure D29. Time History for Run 23, FCW Test 2, Auditory Warning

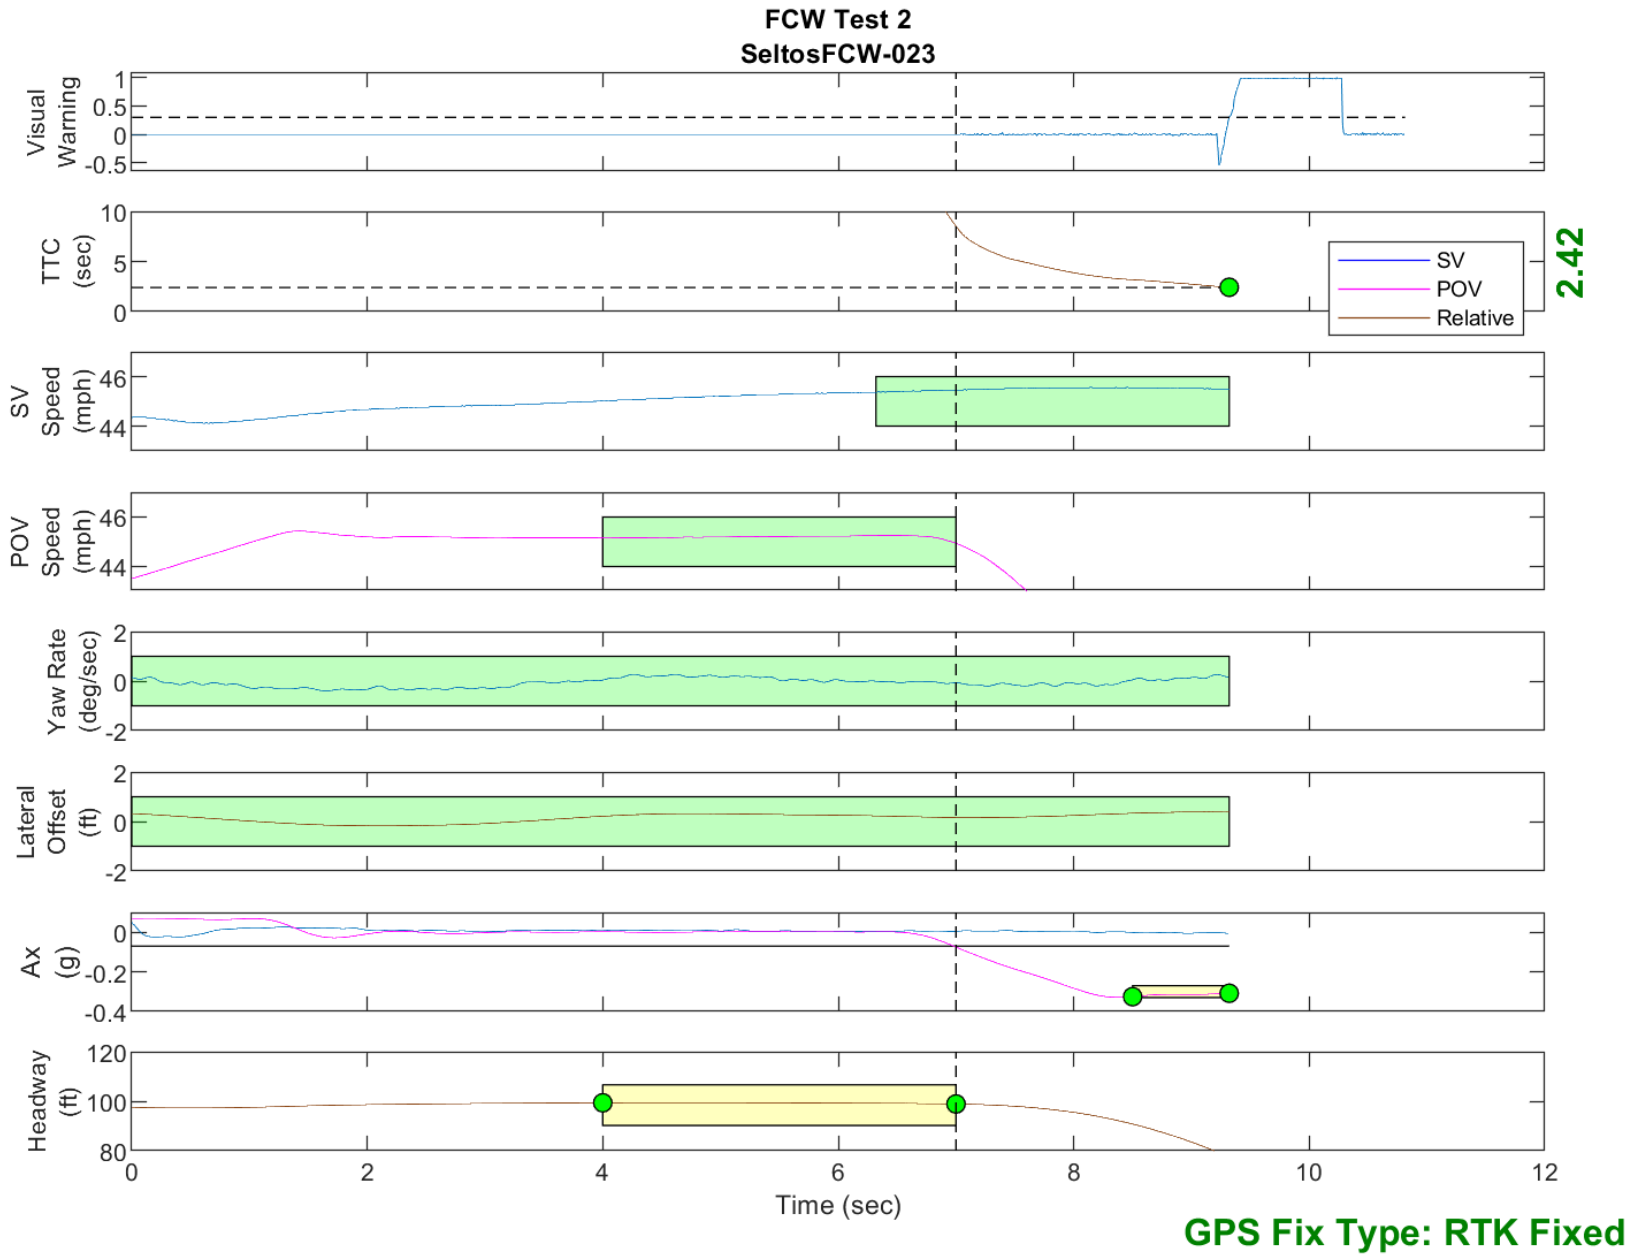


Figure D30. Time History for Run 23, FCW Test 2, Visual Warning

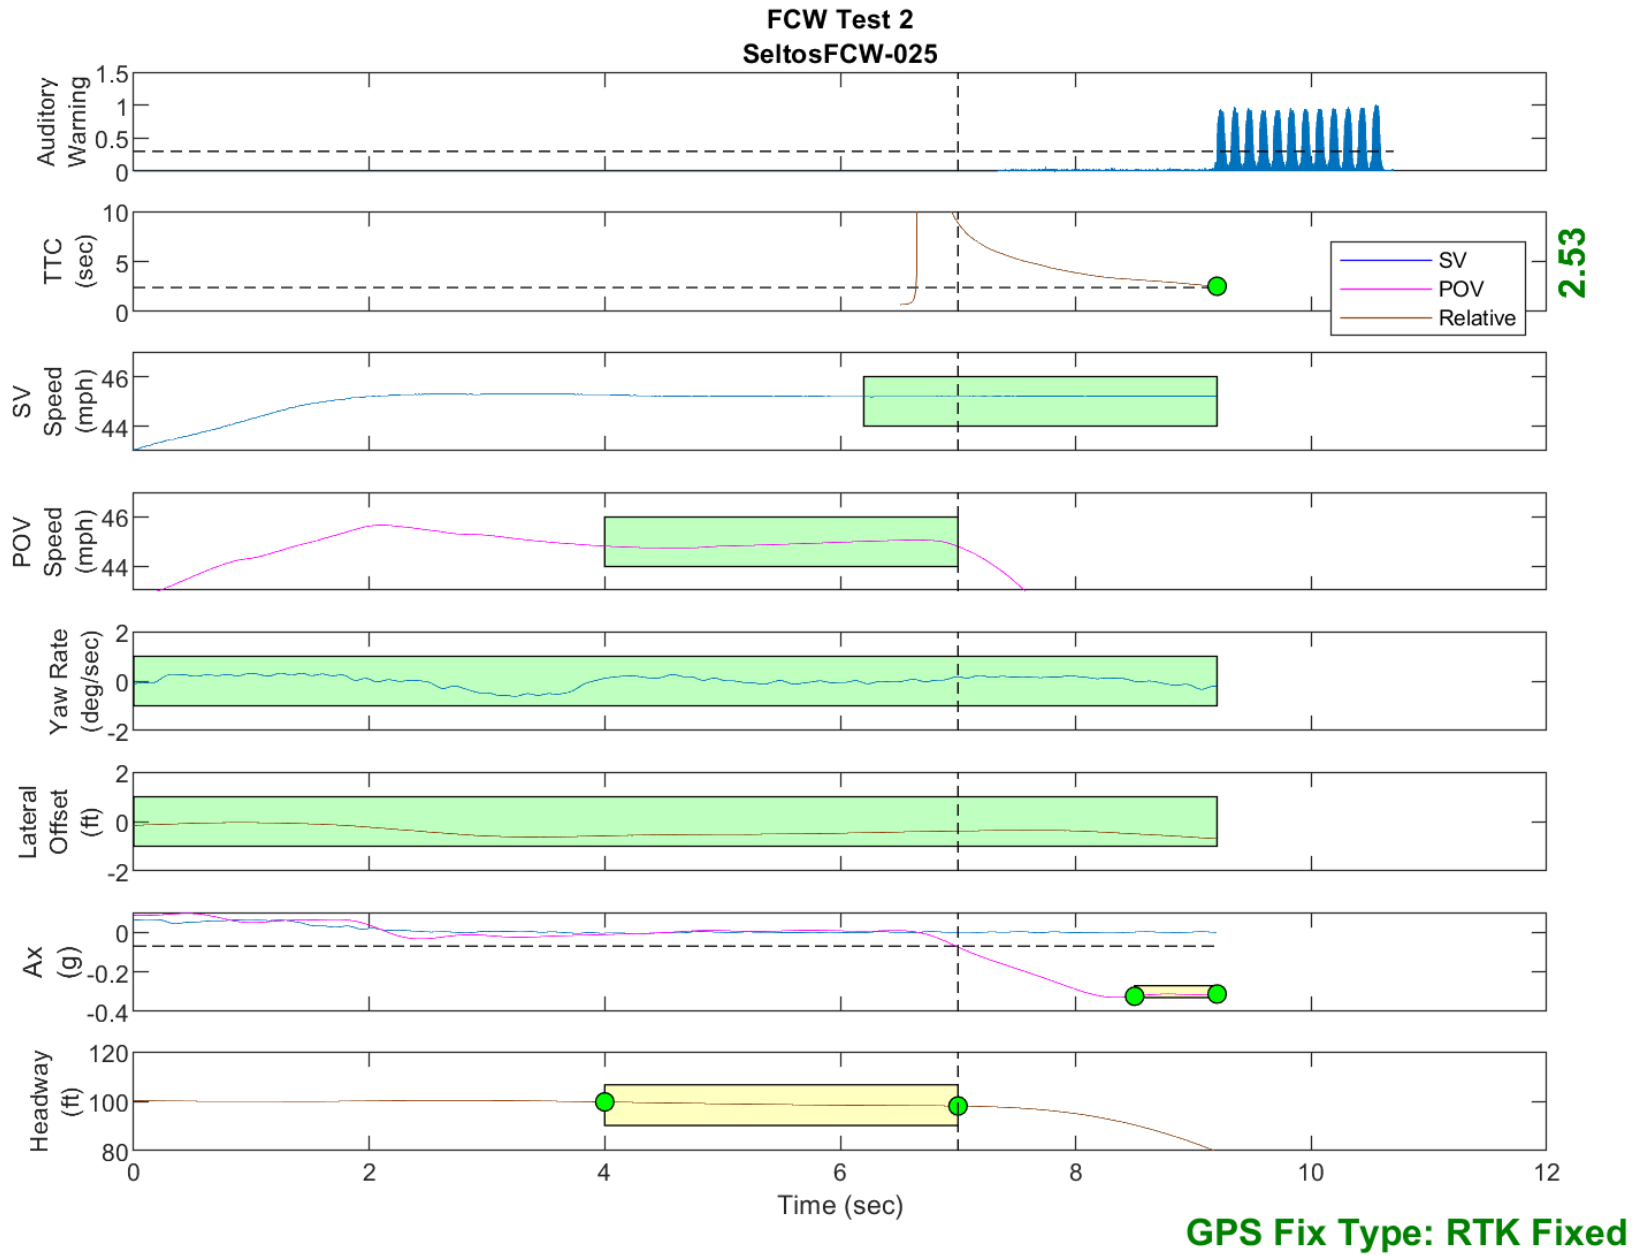


Figure D31. Time History for Run 25, FCW Test 2, Auditory Warning

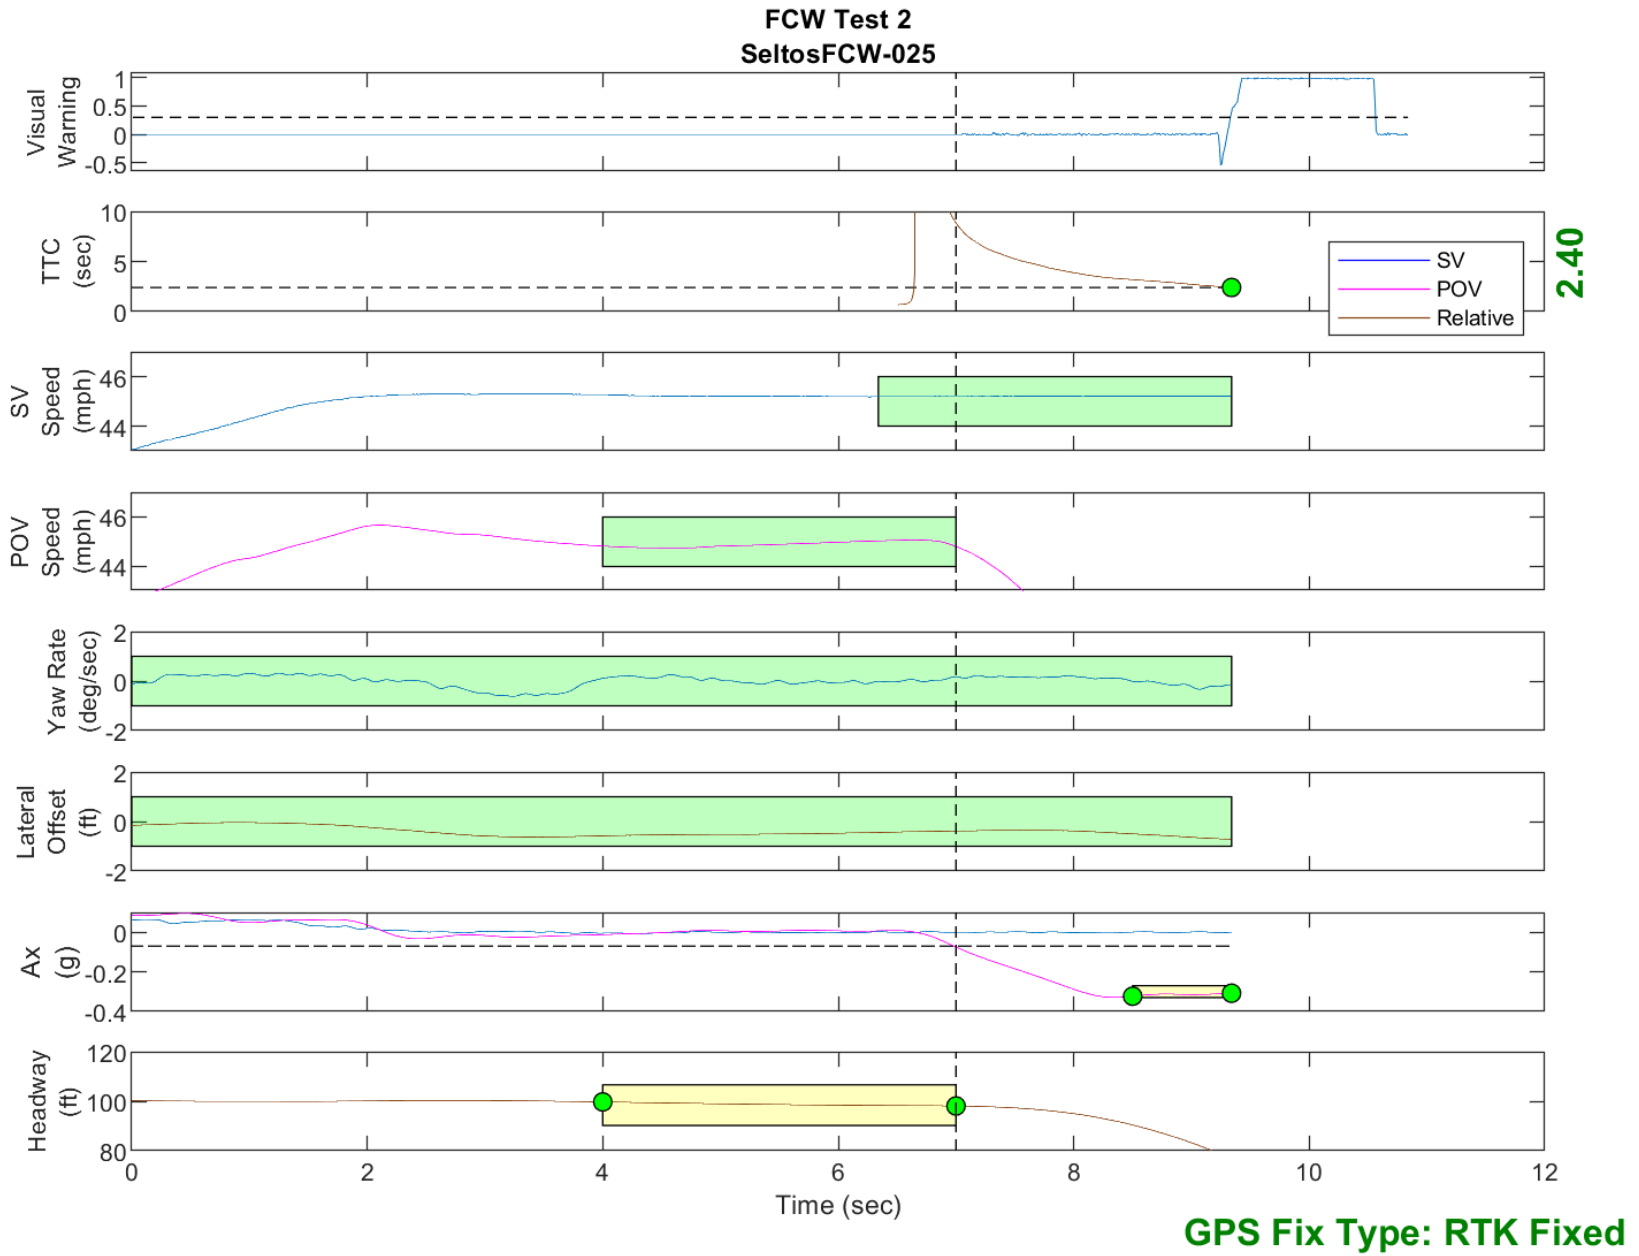


Figure D32. Time History for Run 25, FCW Test 2, Visual Warning

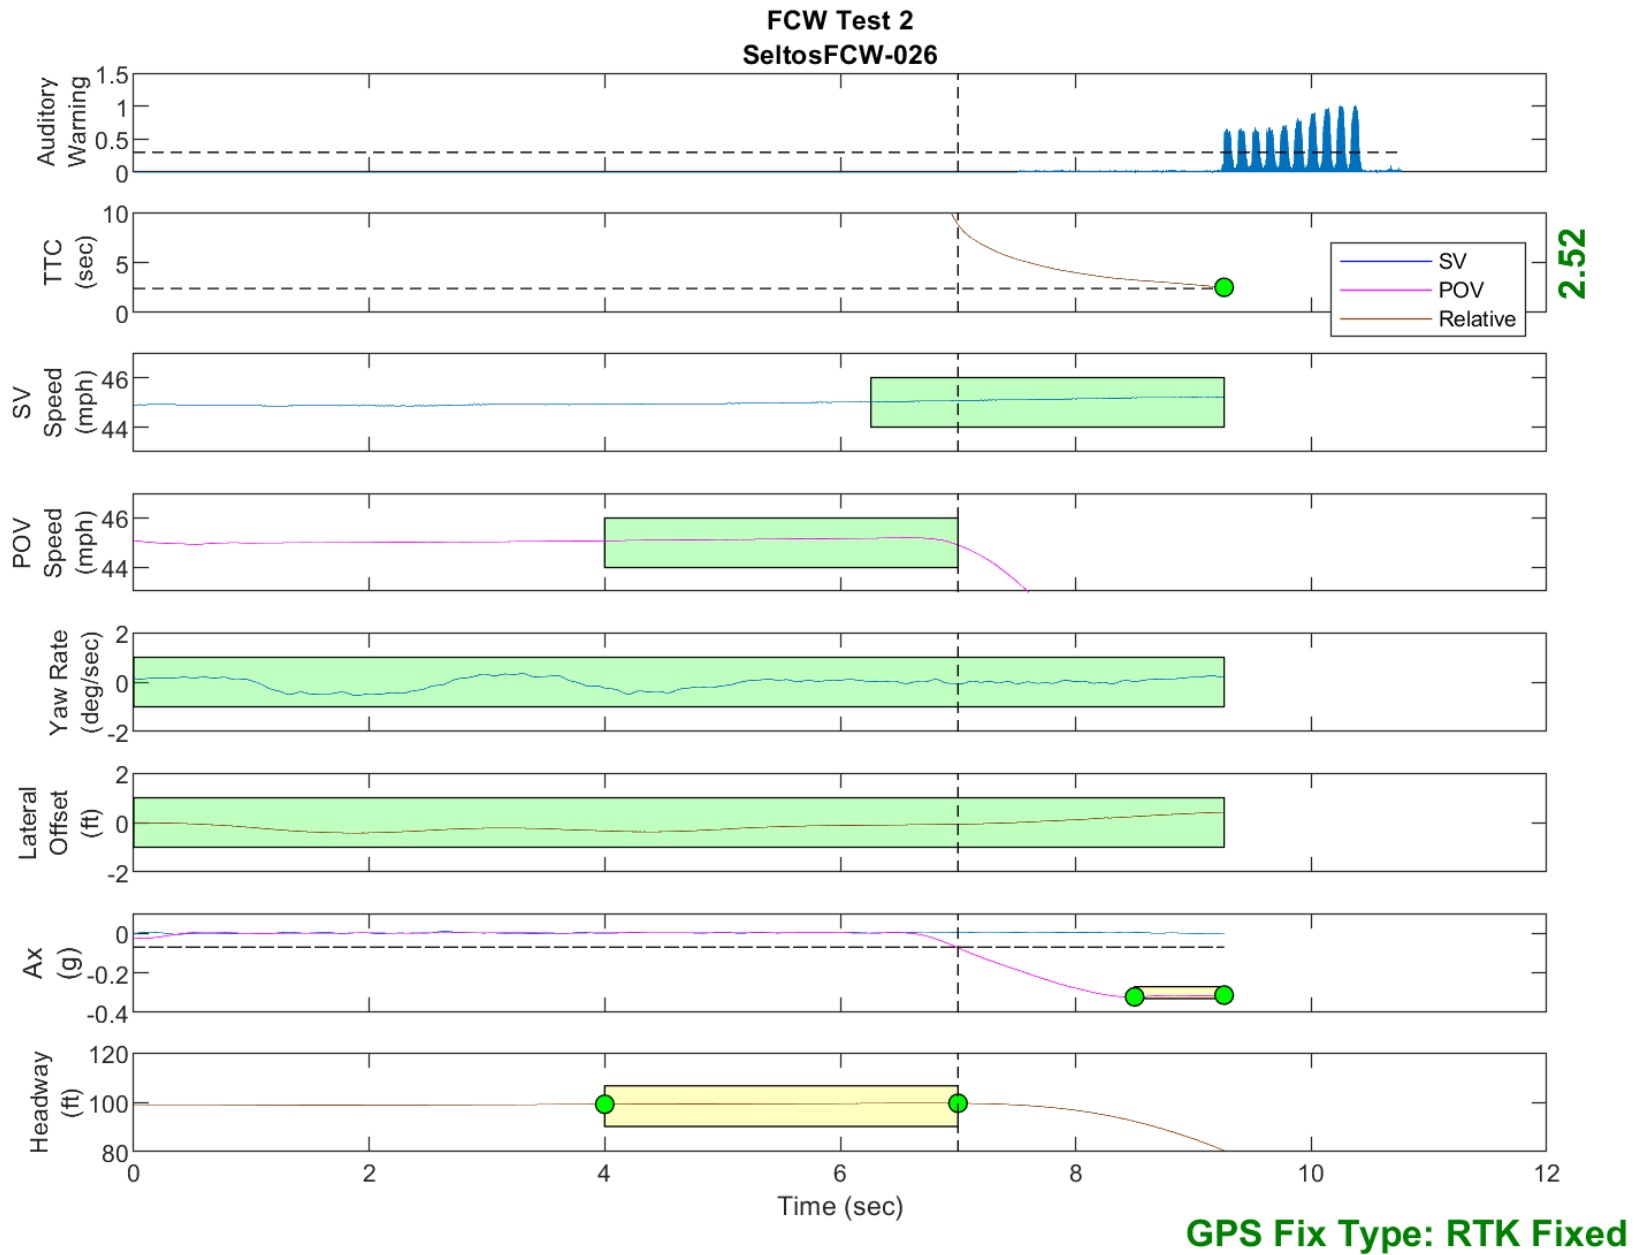


Figure D33. Time History for Run 26, FCW Test 2, Auditory Warning

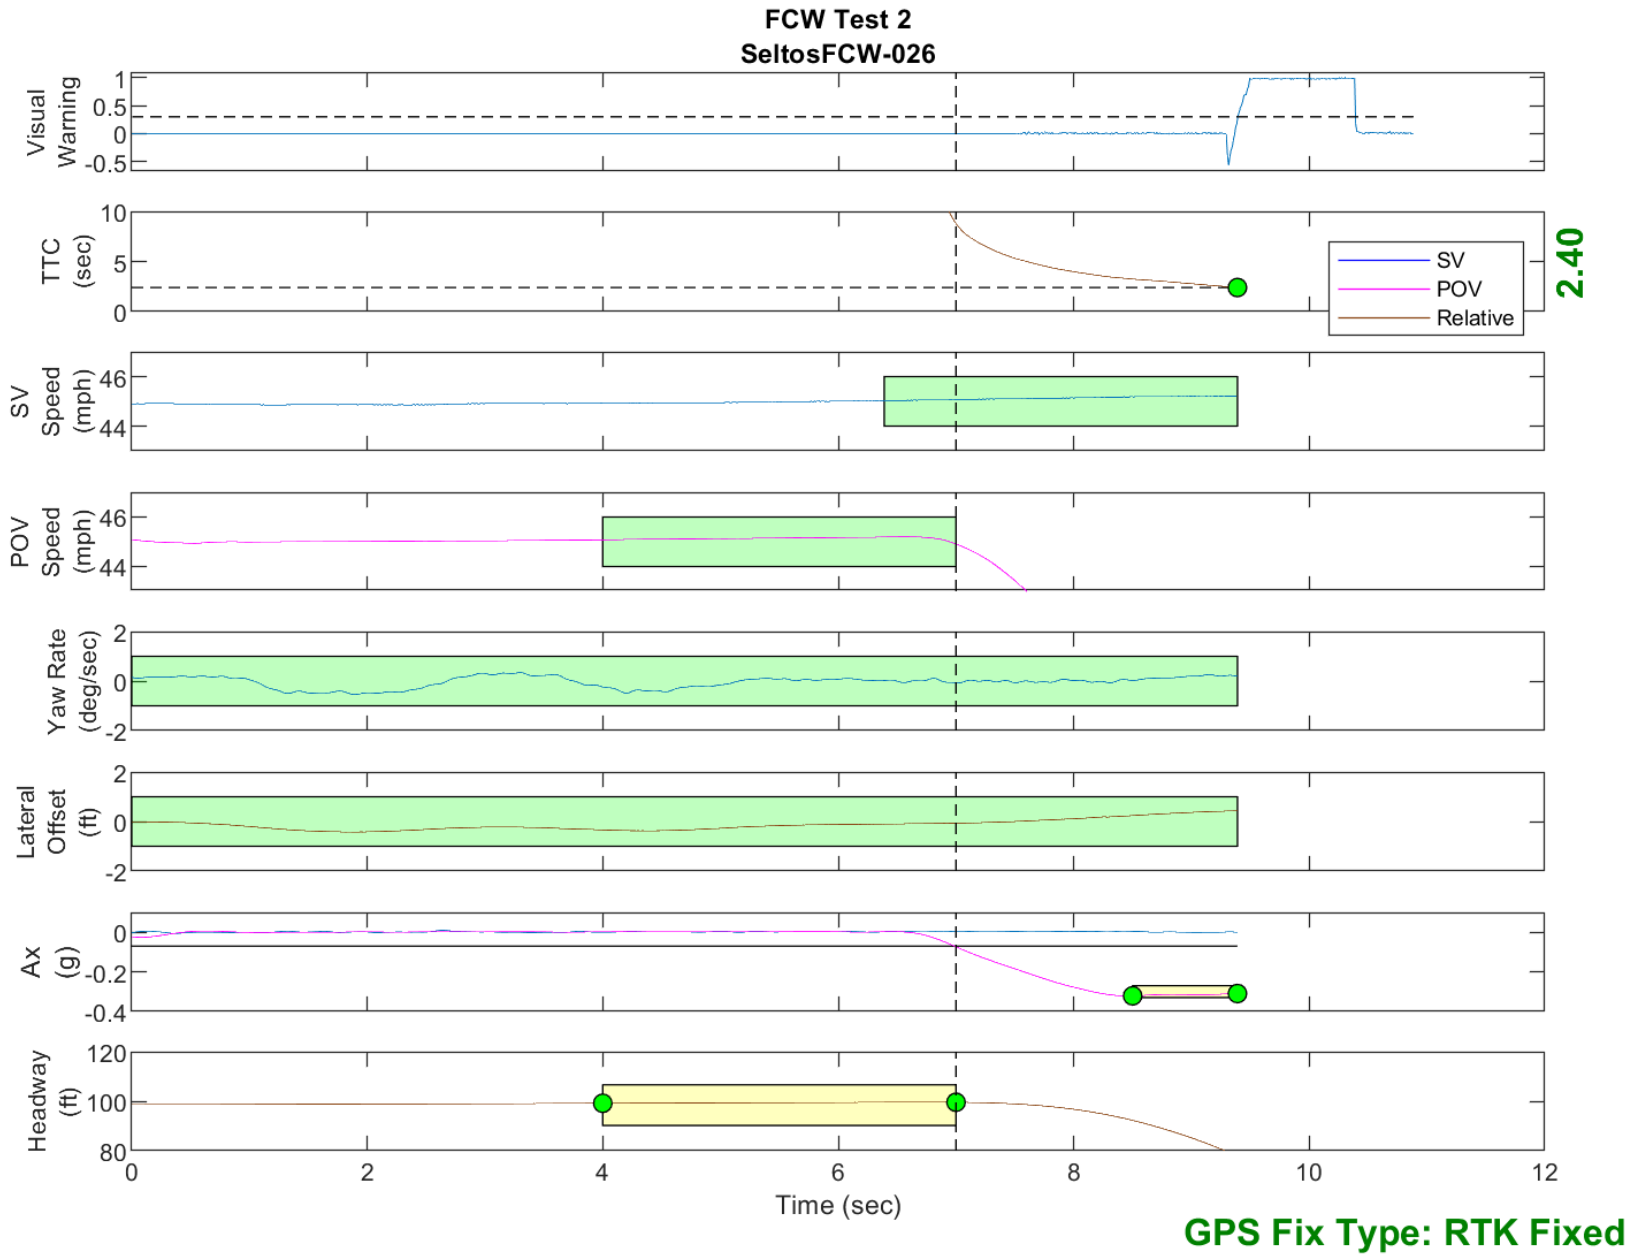


Figure D34. Time History for Run 26, FCW Test 2, Visual Warning

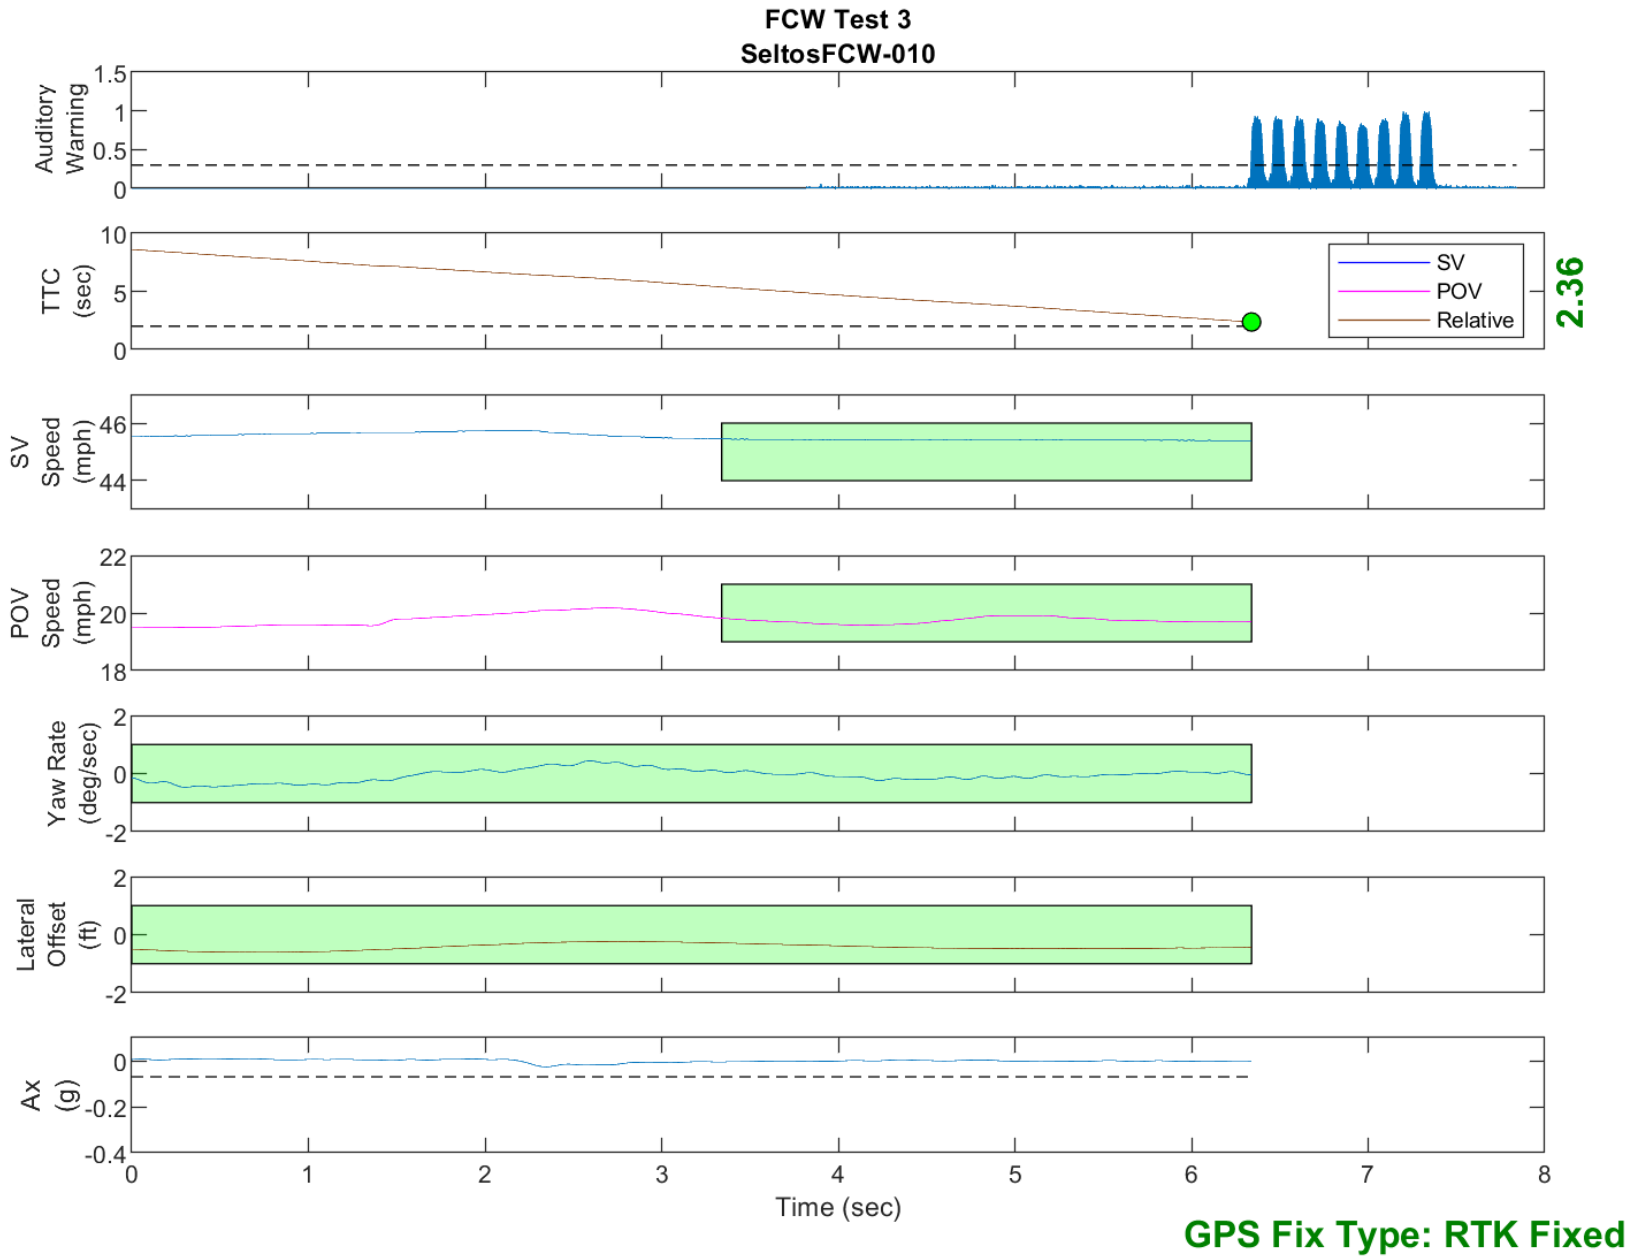


Figure D35. Time History for Run 10, FCW Test 3, Auditory Warning

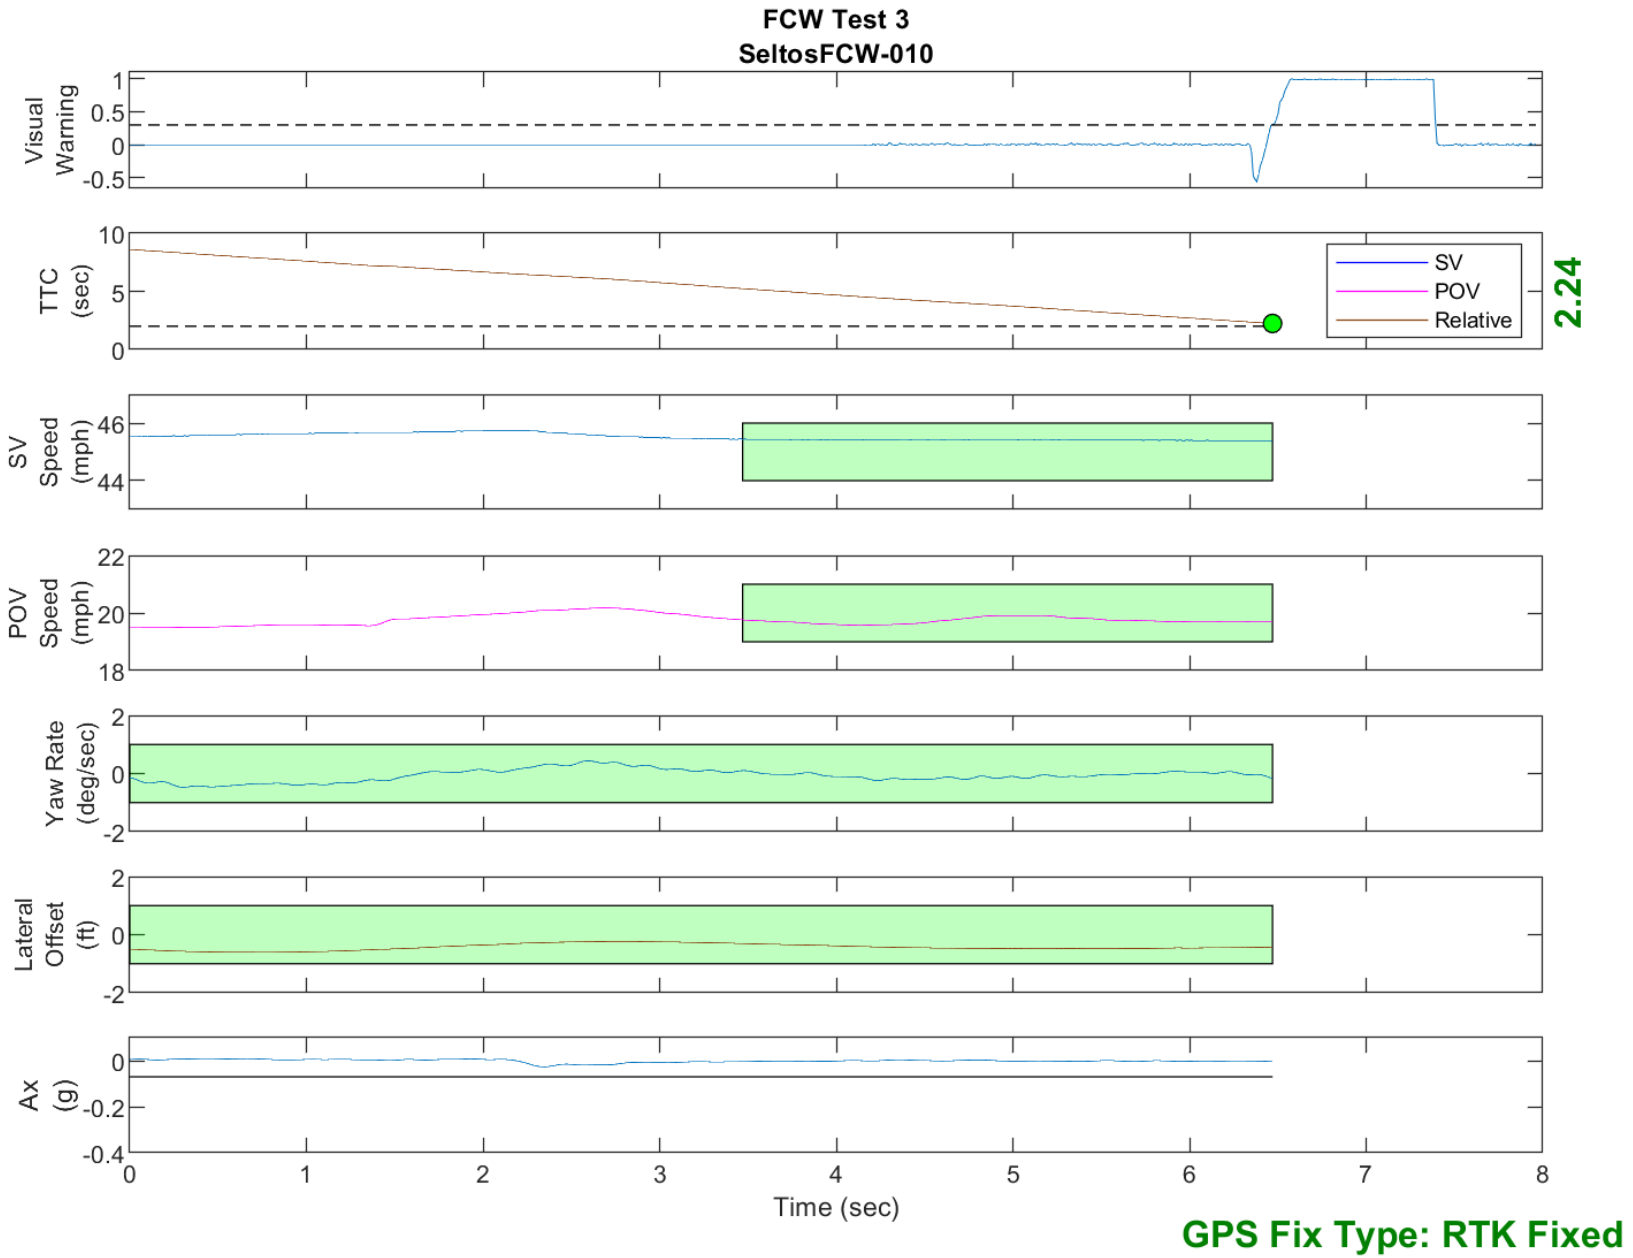


Figure D36. Time History for Run 10, FCW Test 3, Visual Warning

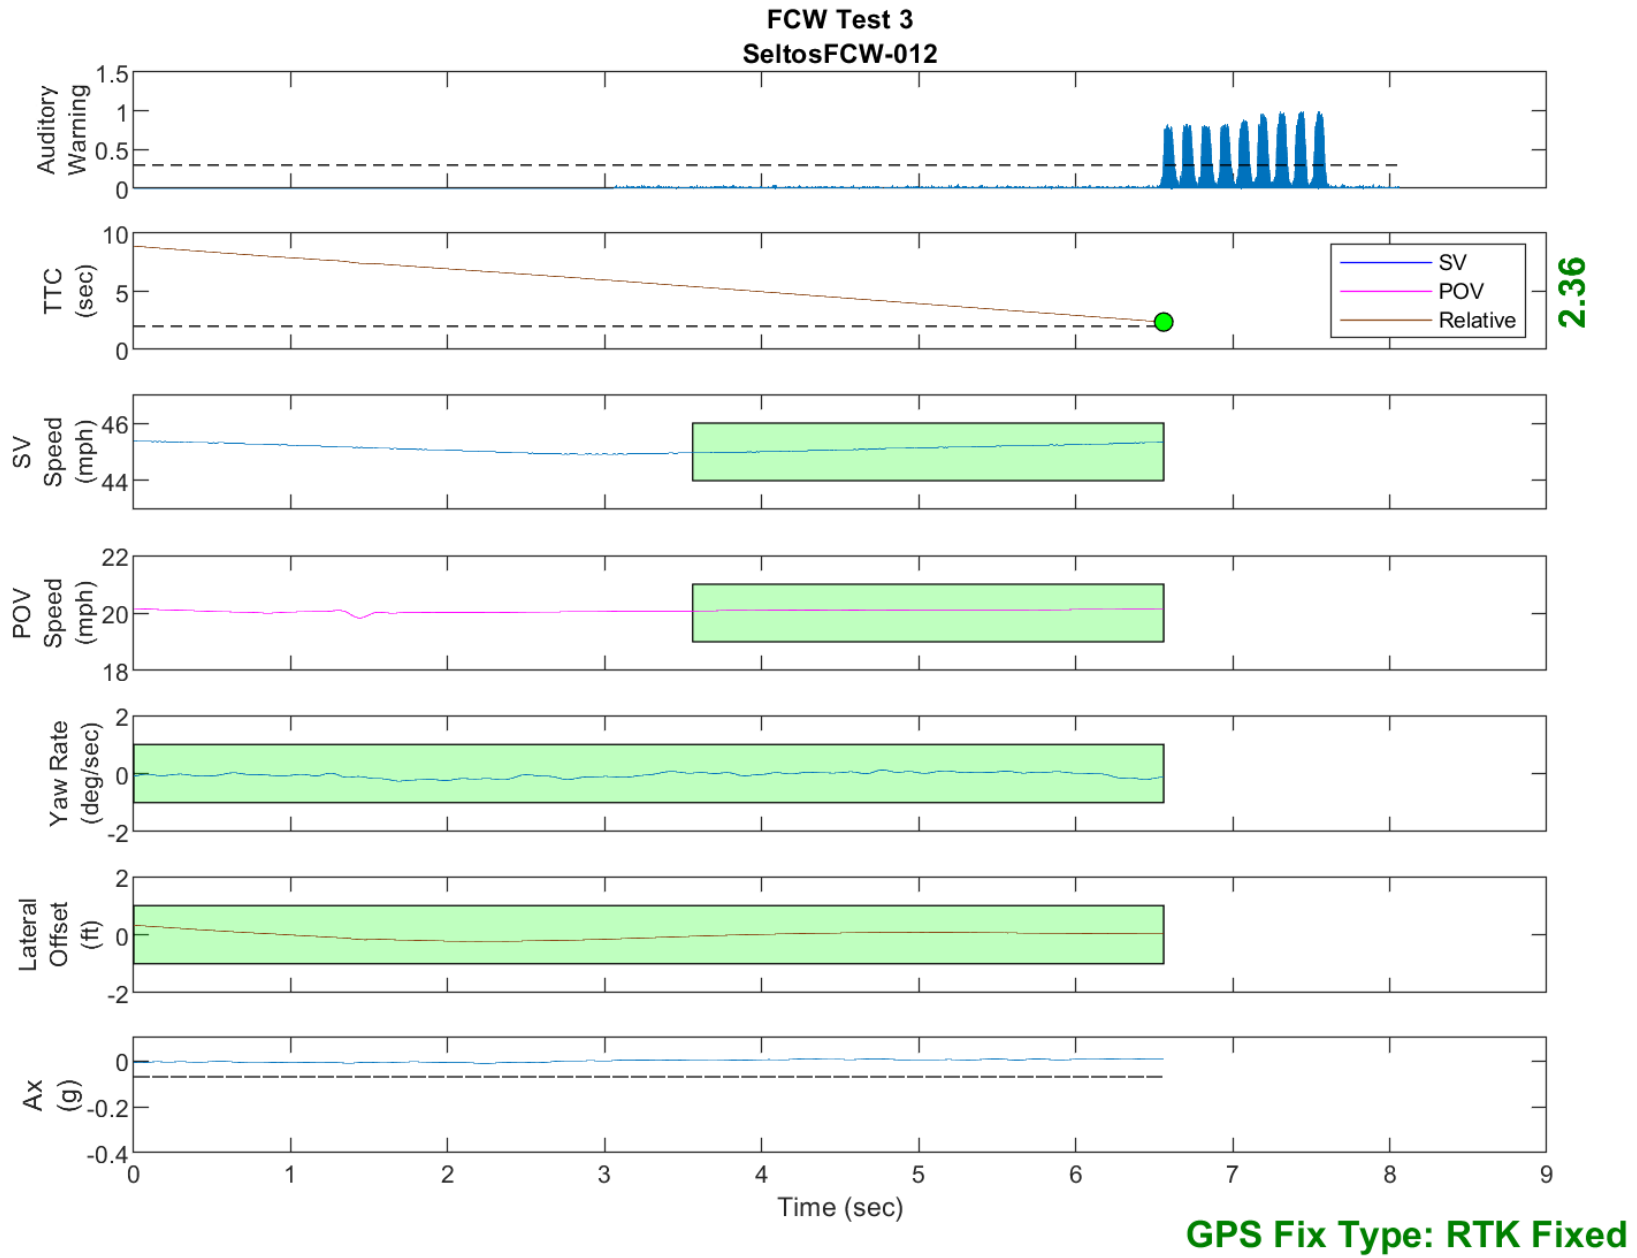


Figure D37. Time History for Run 12, FCW Test 3, Auditory Warning

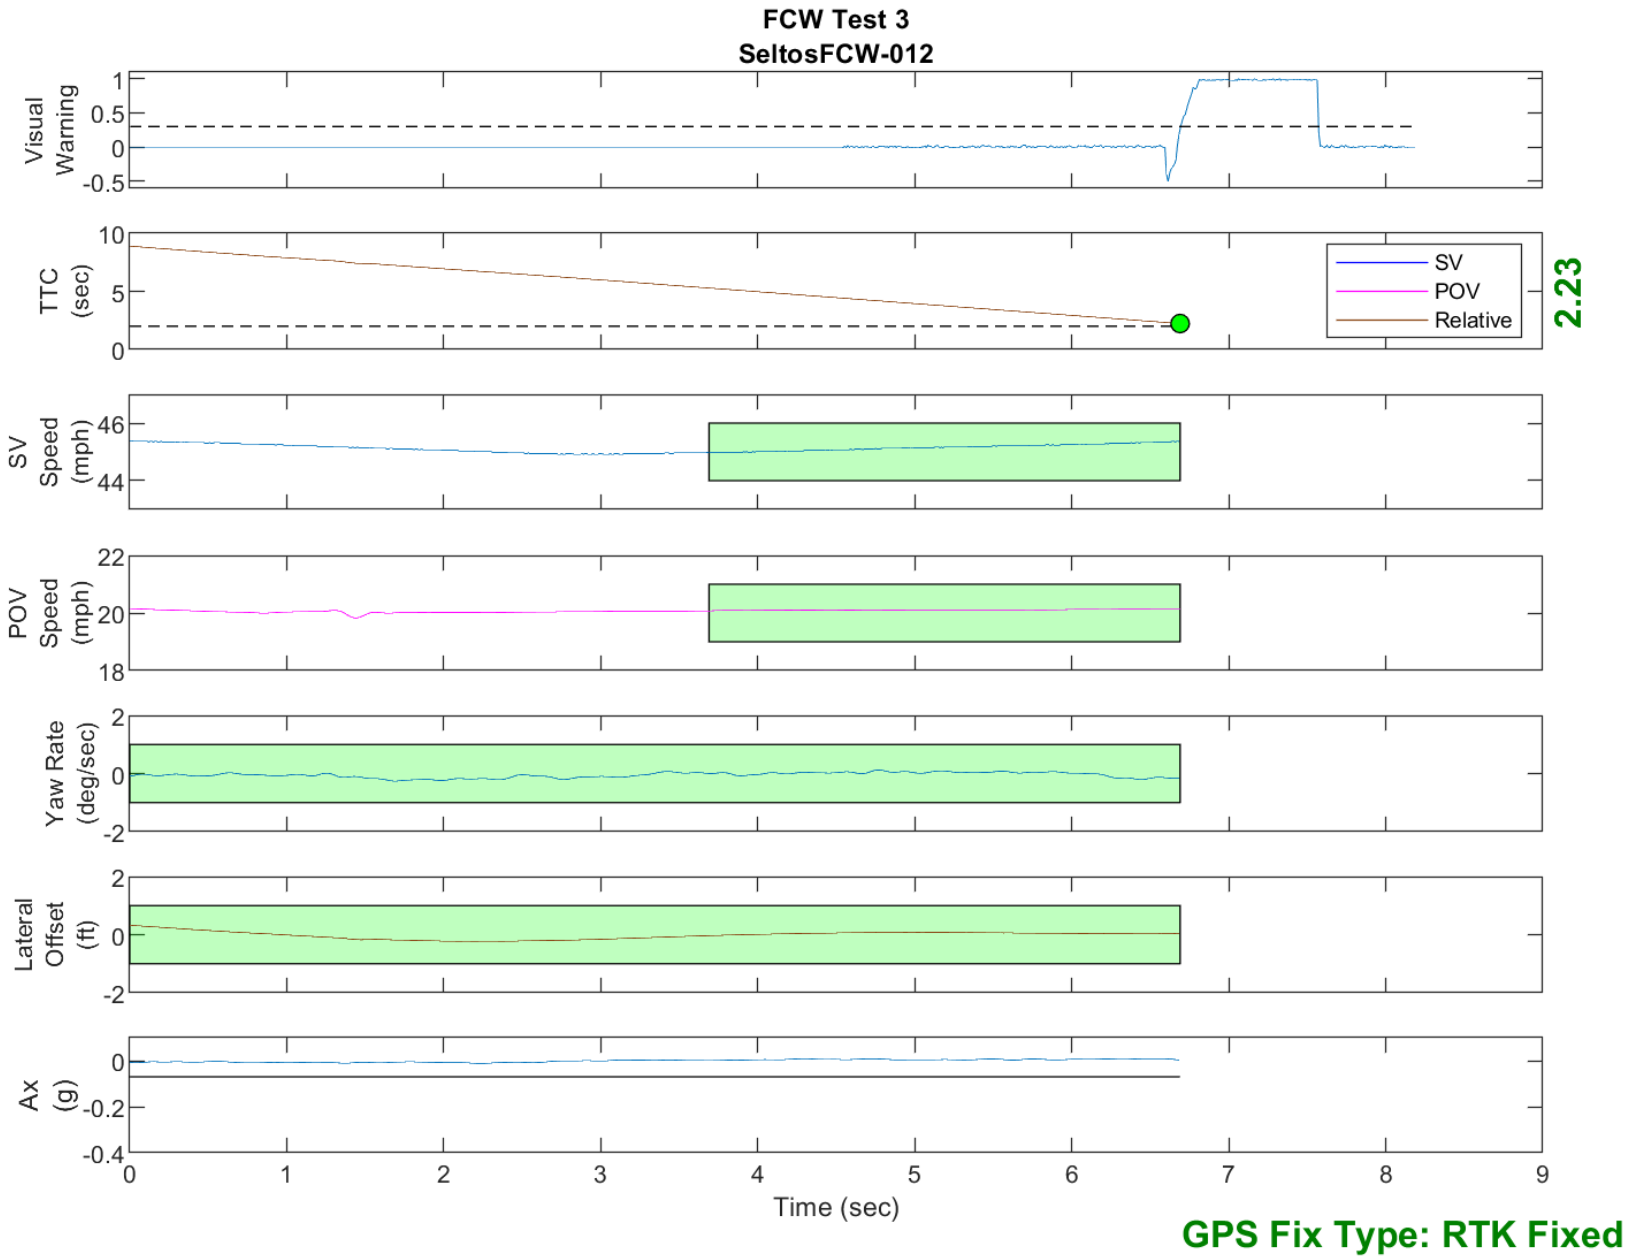


Figure D38. Time History for Run 12, FCW Test 3, Visual Warning

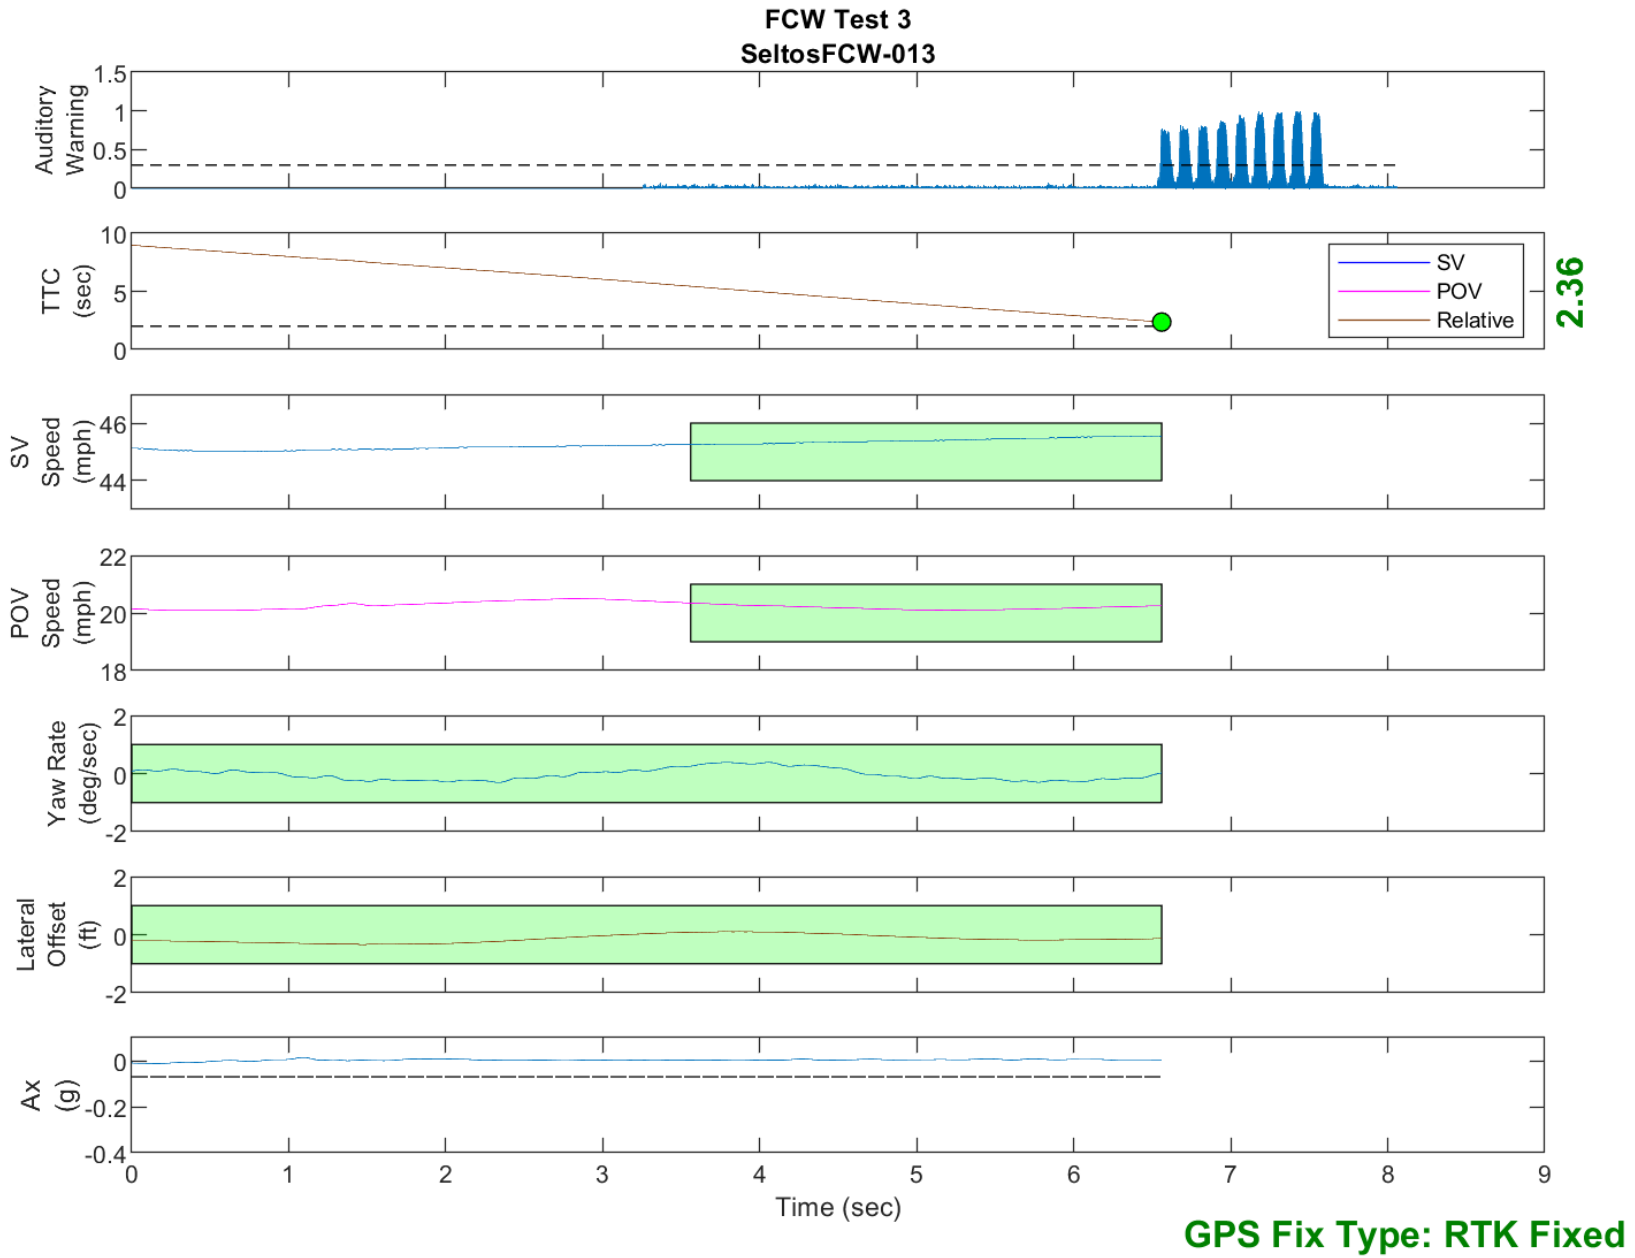


Figure D39. Time History for Run 13, FCW Test 3, Auditory Warning

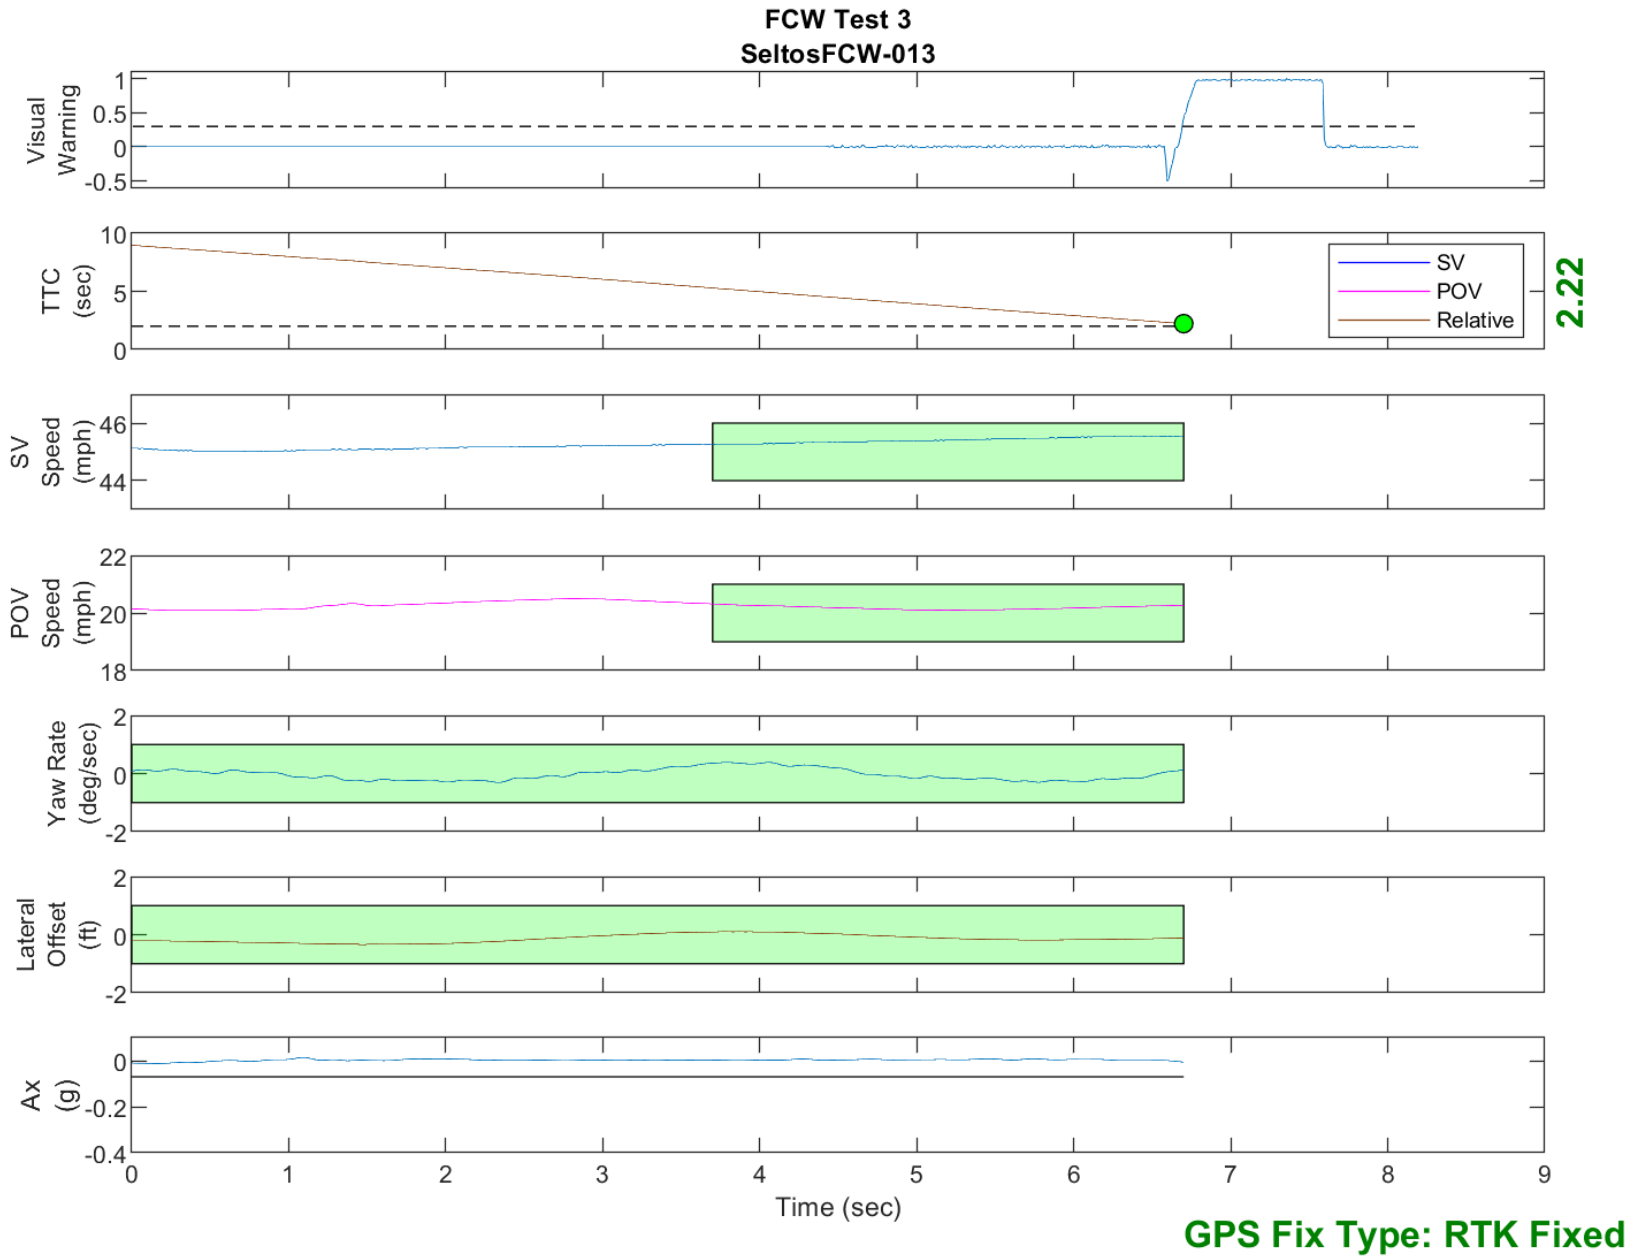


Figure D40. Time History for Run 13, FCW Test 3, Visual Warning

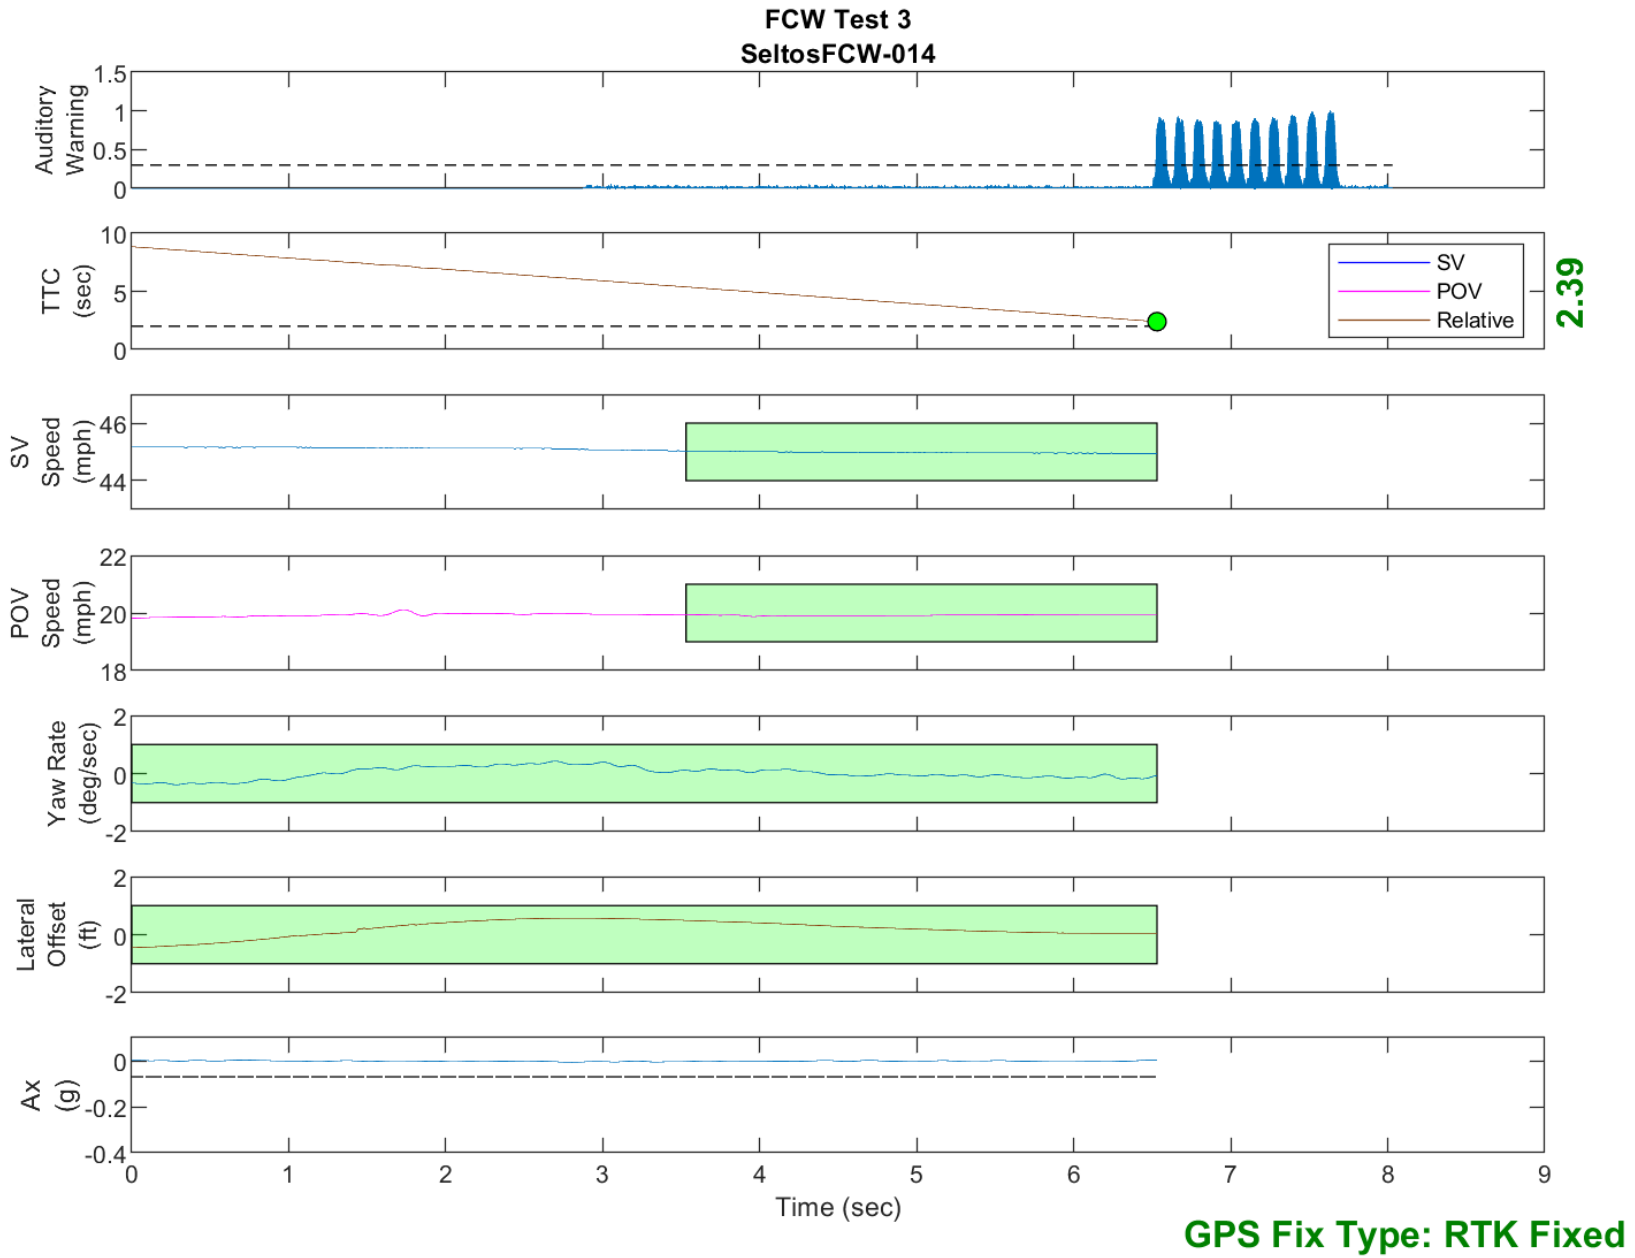


Figure D41. Time History for Run 14, FCW Test 3, Auditory Warning

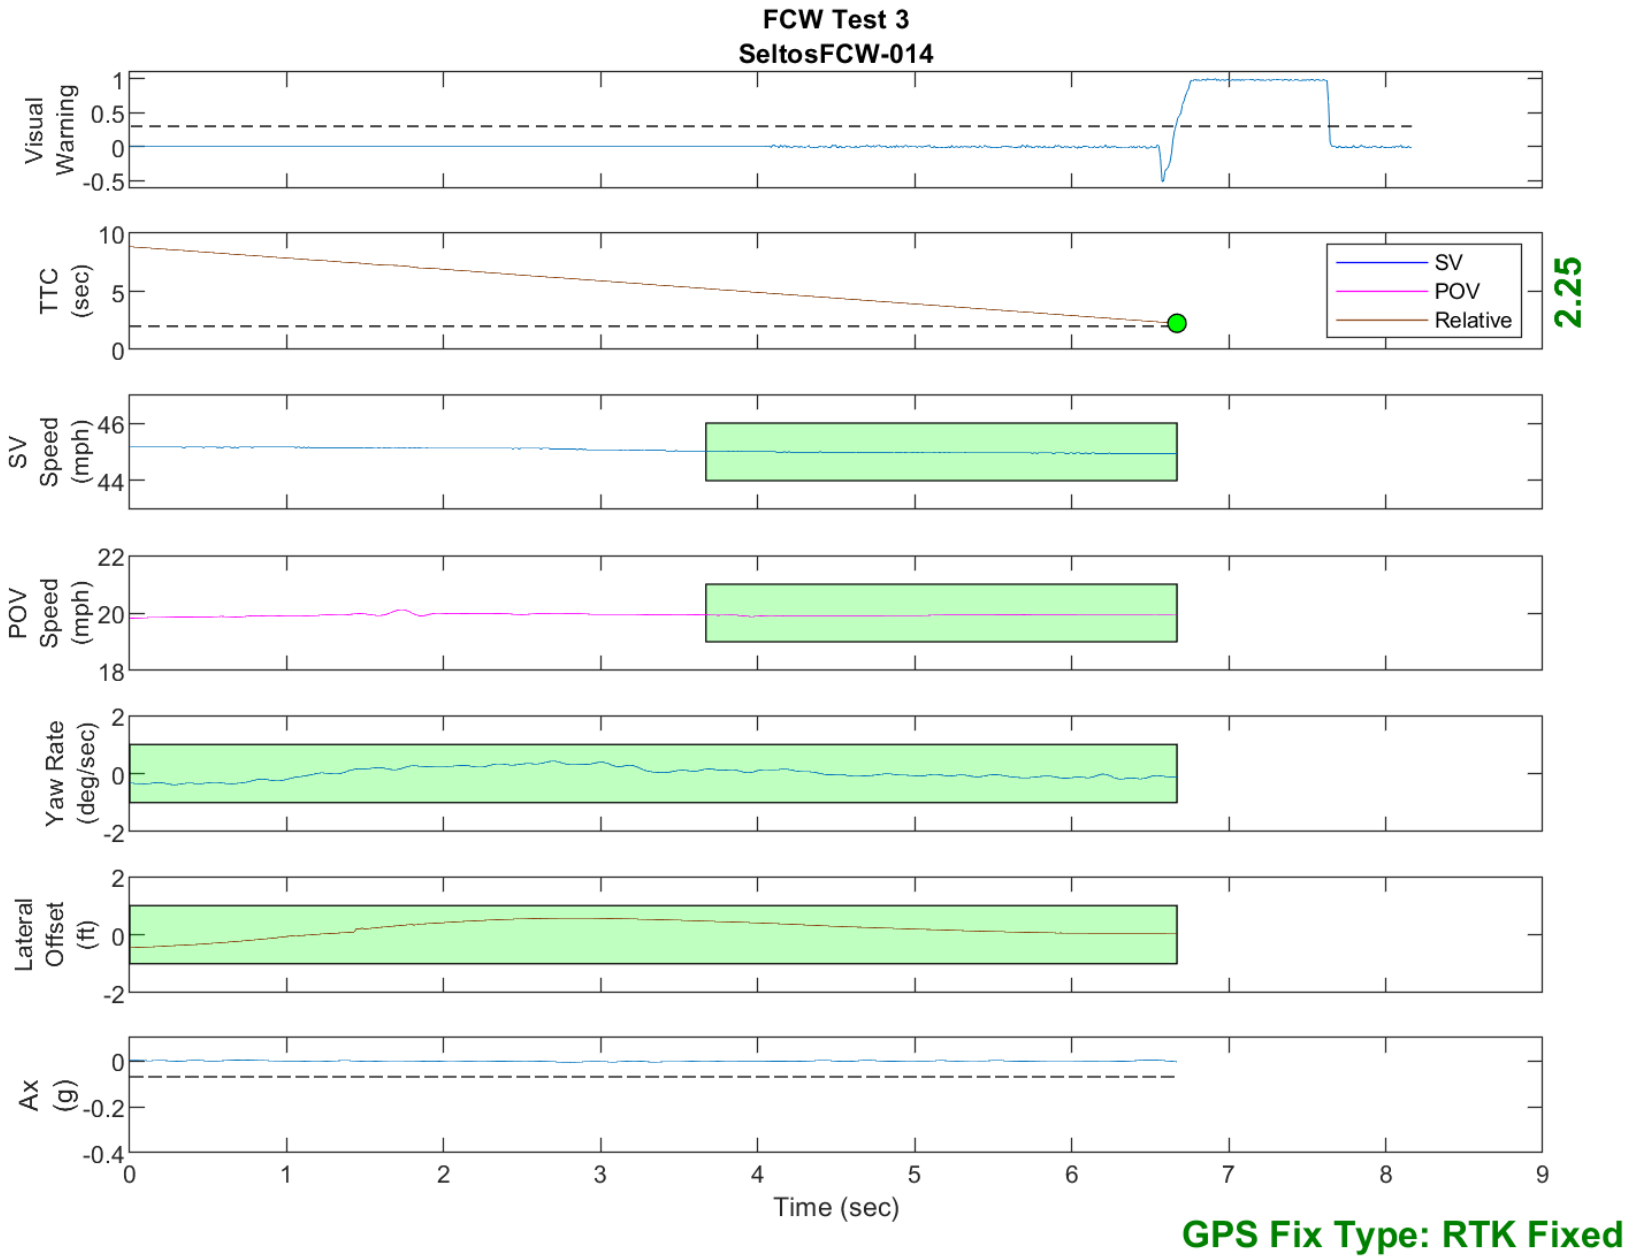


Figure D42. Time History for Run 14, FCW Test 3, Visual Warning

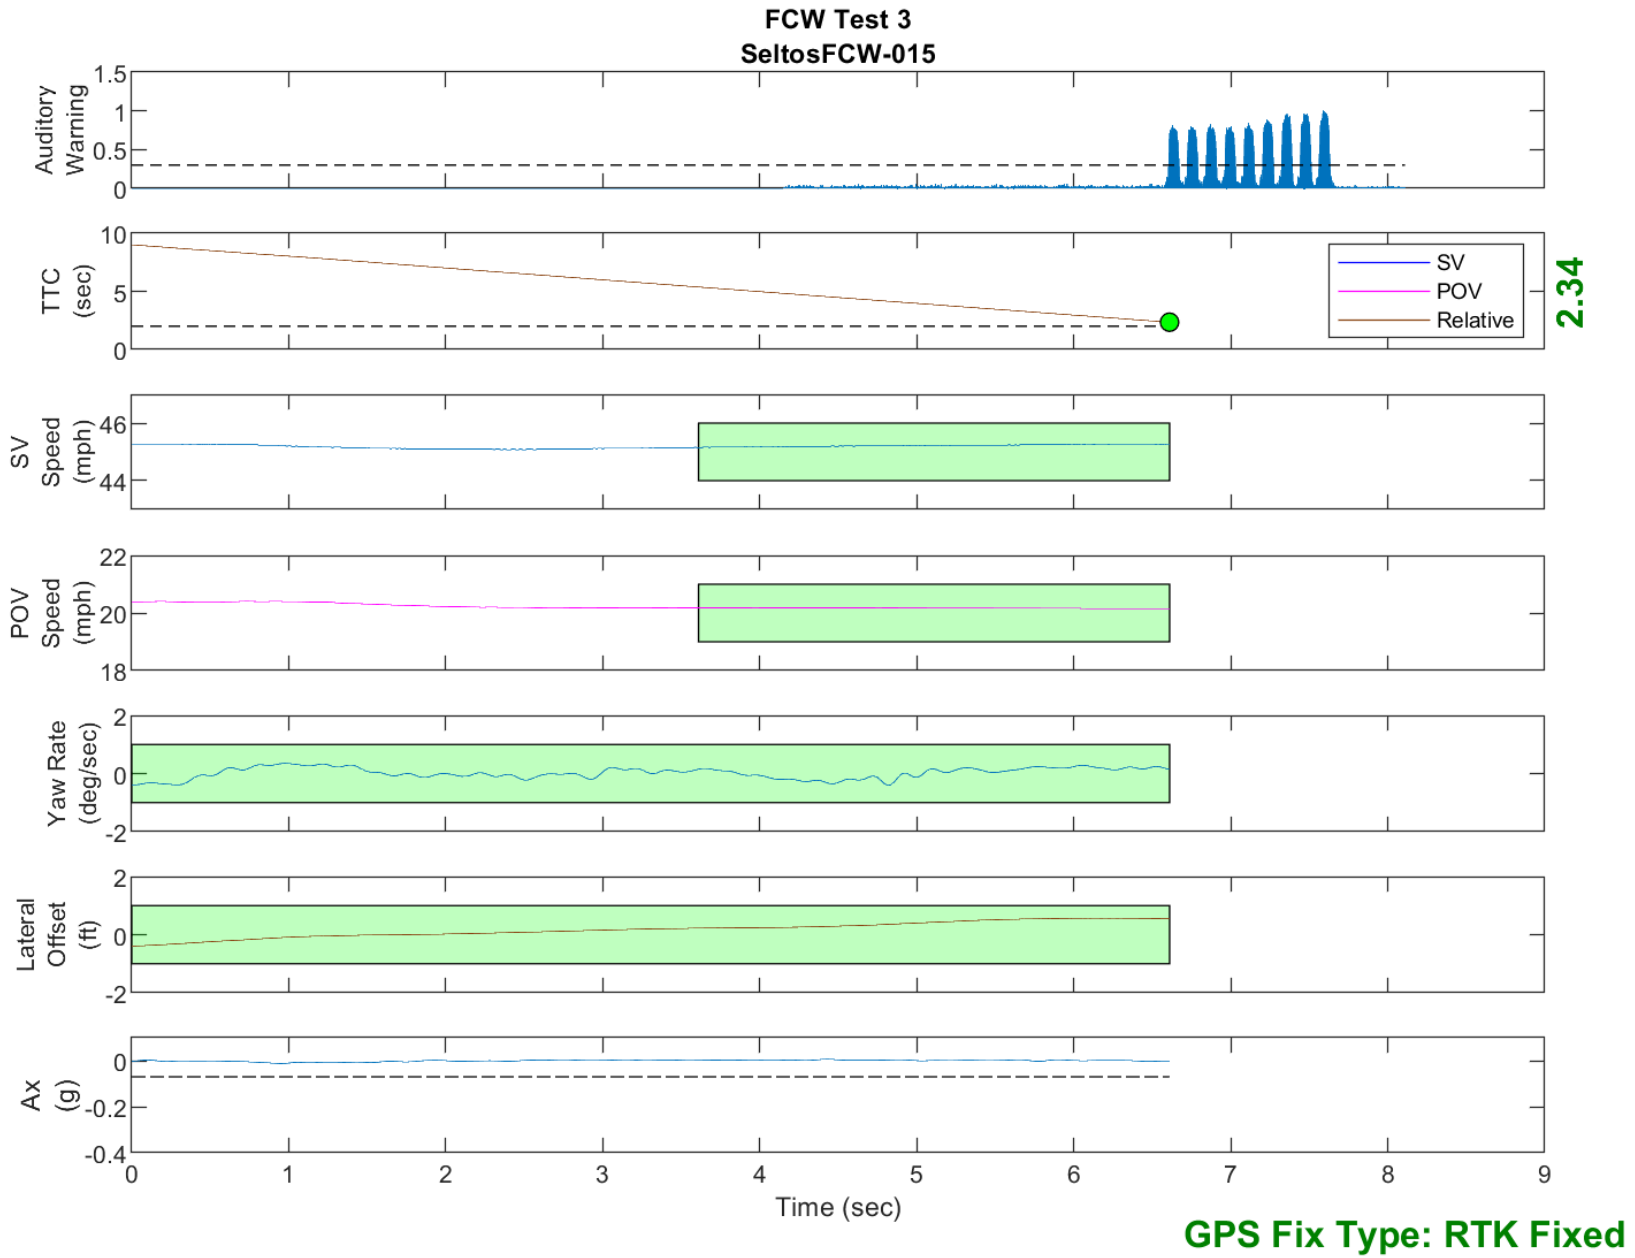


Figure D43. Time History for Run 15, FCW Test 3, Auditory Warning

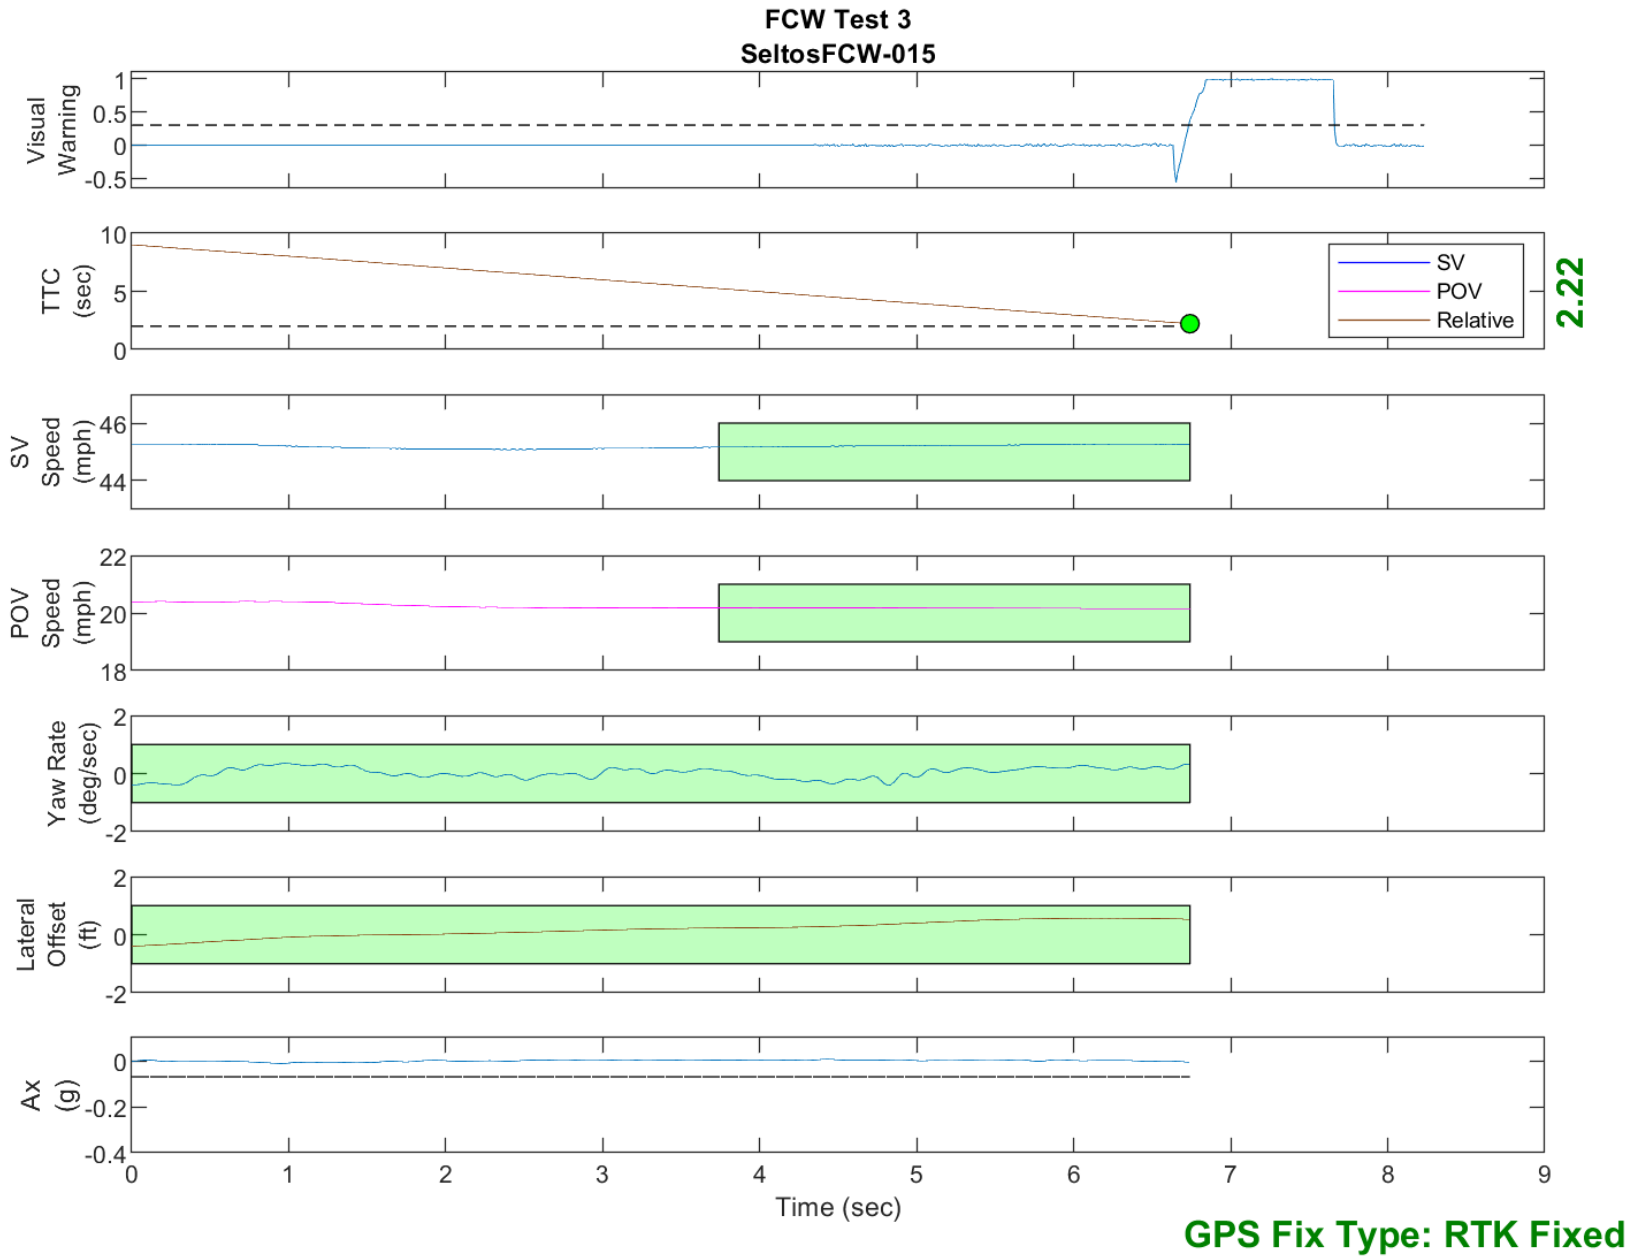


Figure D44. Time History for Run 15, FCW Test 3, Visual Warning

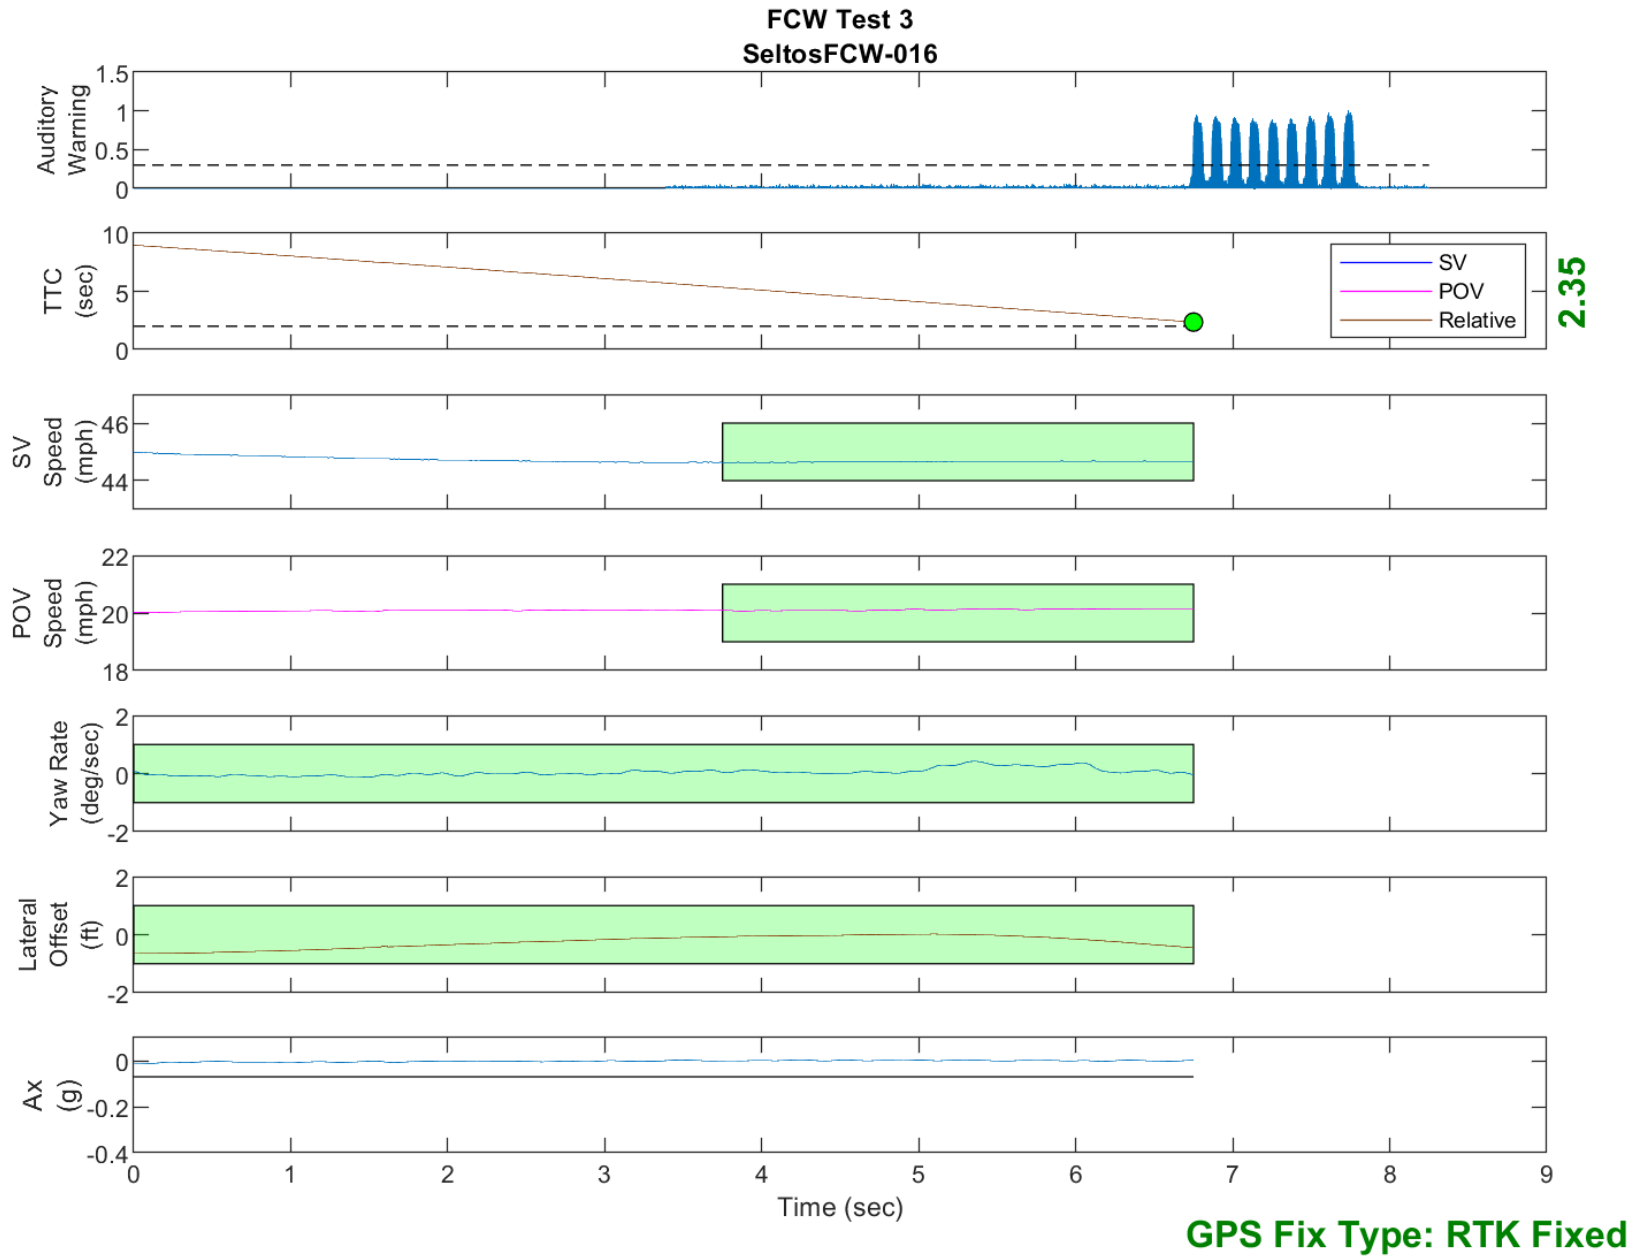


Figure D45. Time History for Run 16, FCW Test 3, Auditory Warning

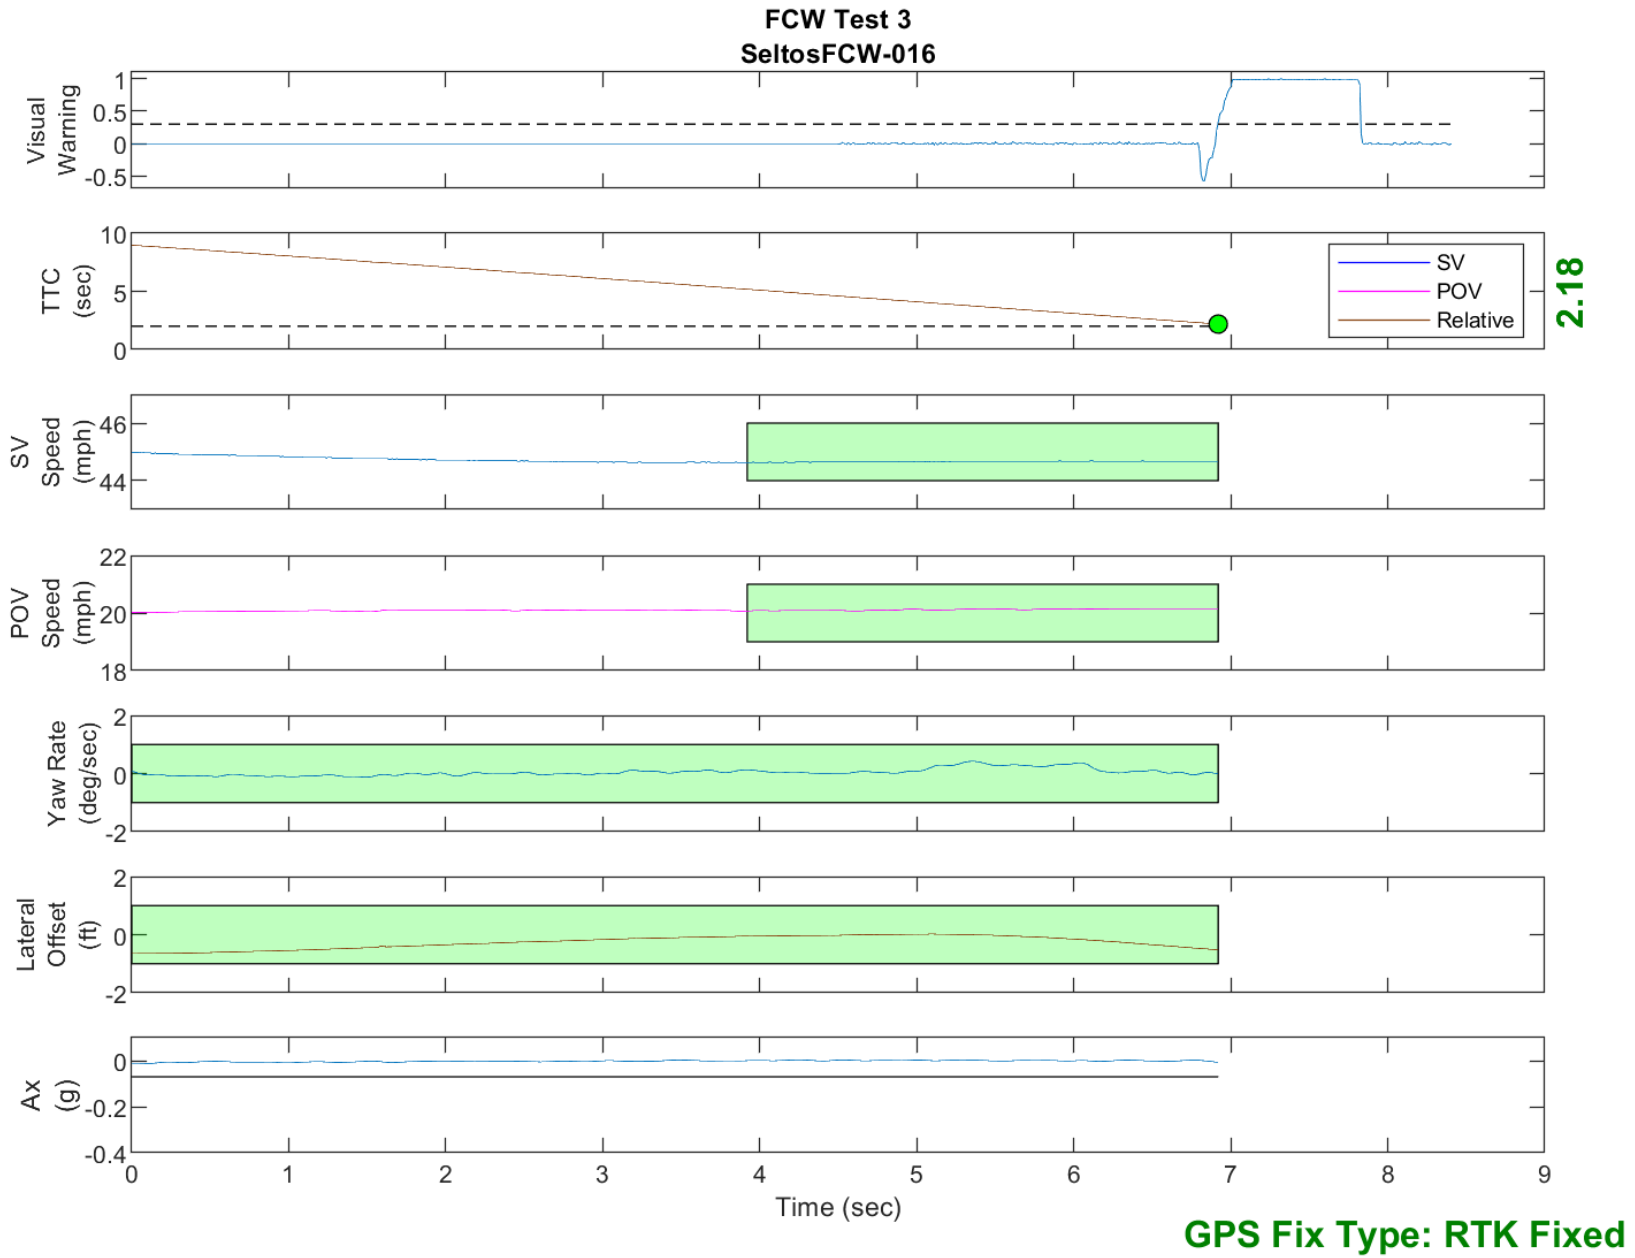


Figure D46. Time History for Run 16, FCW Test 3, Visual Warning

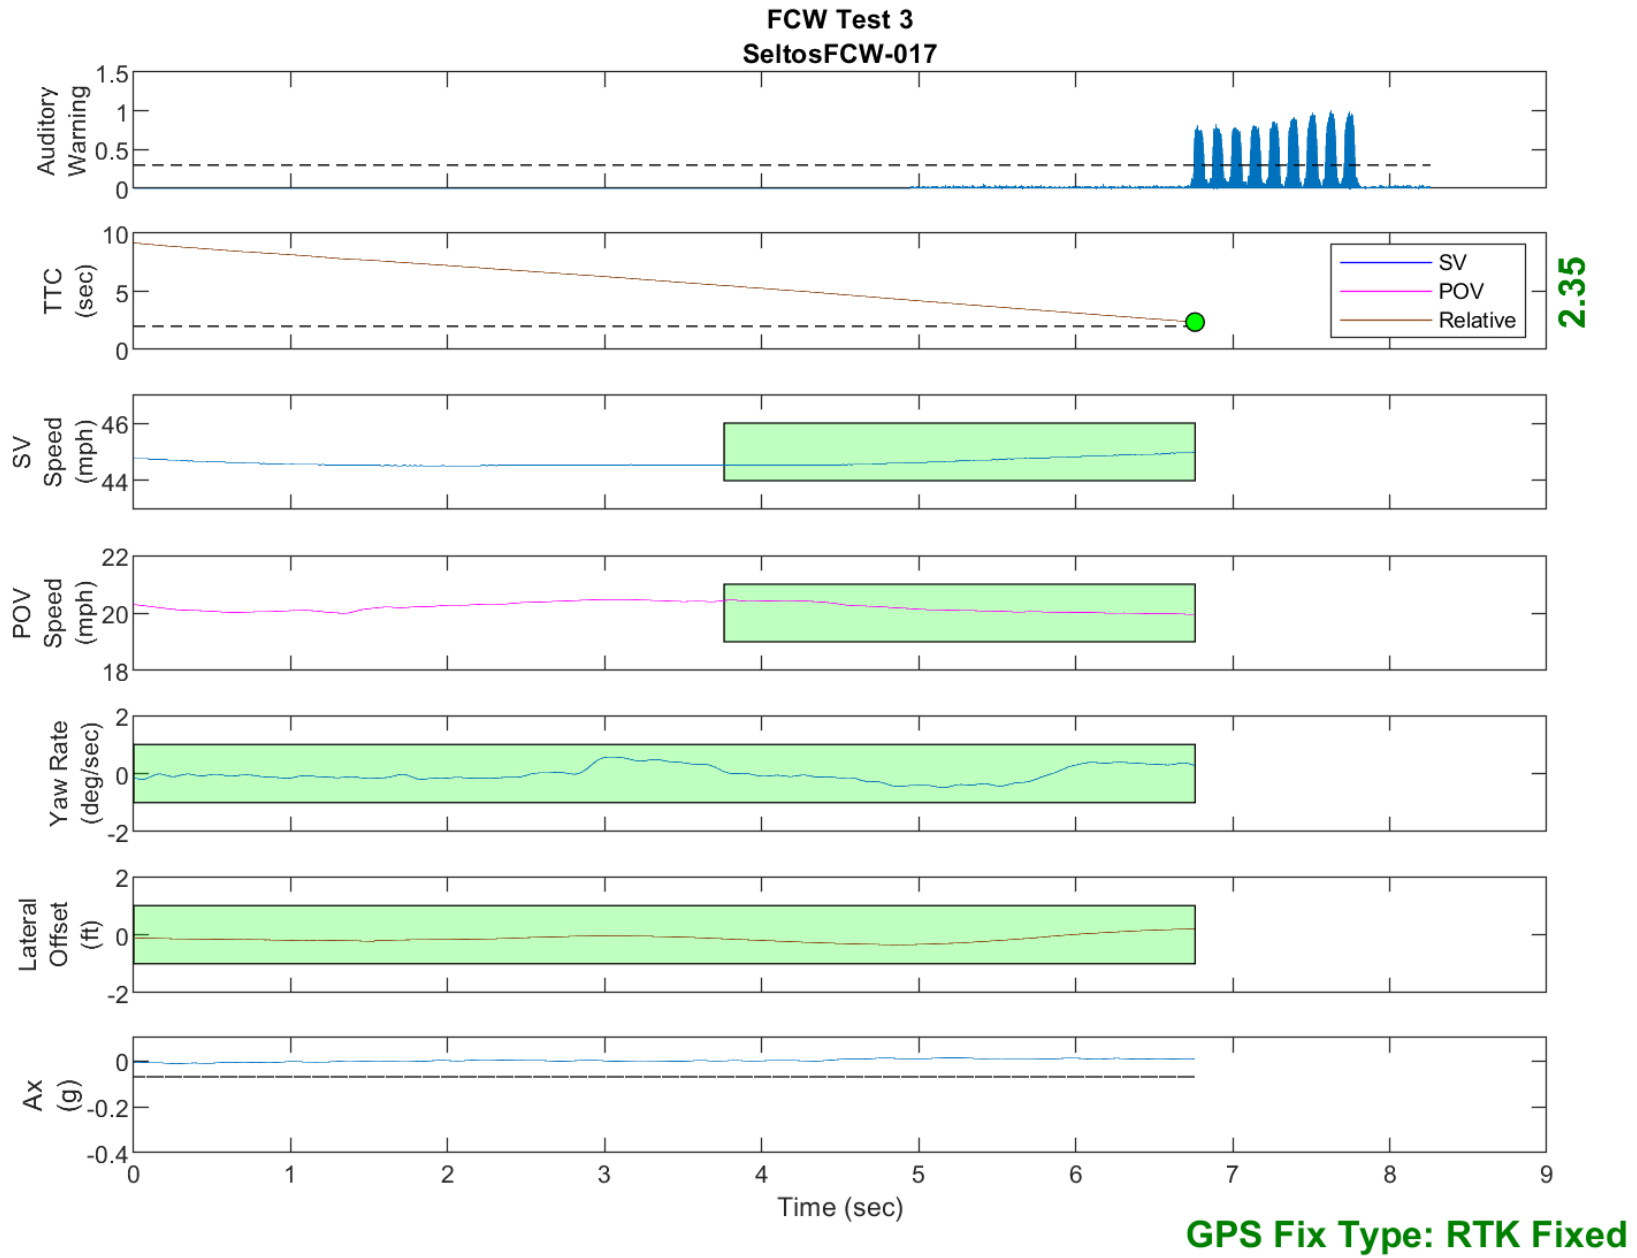


Figure D47. Time History for Run 17, FCW Test 3, Auditory Warning

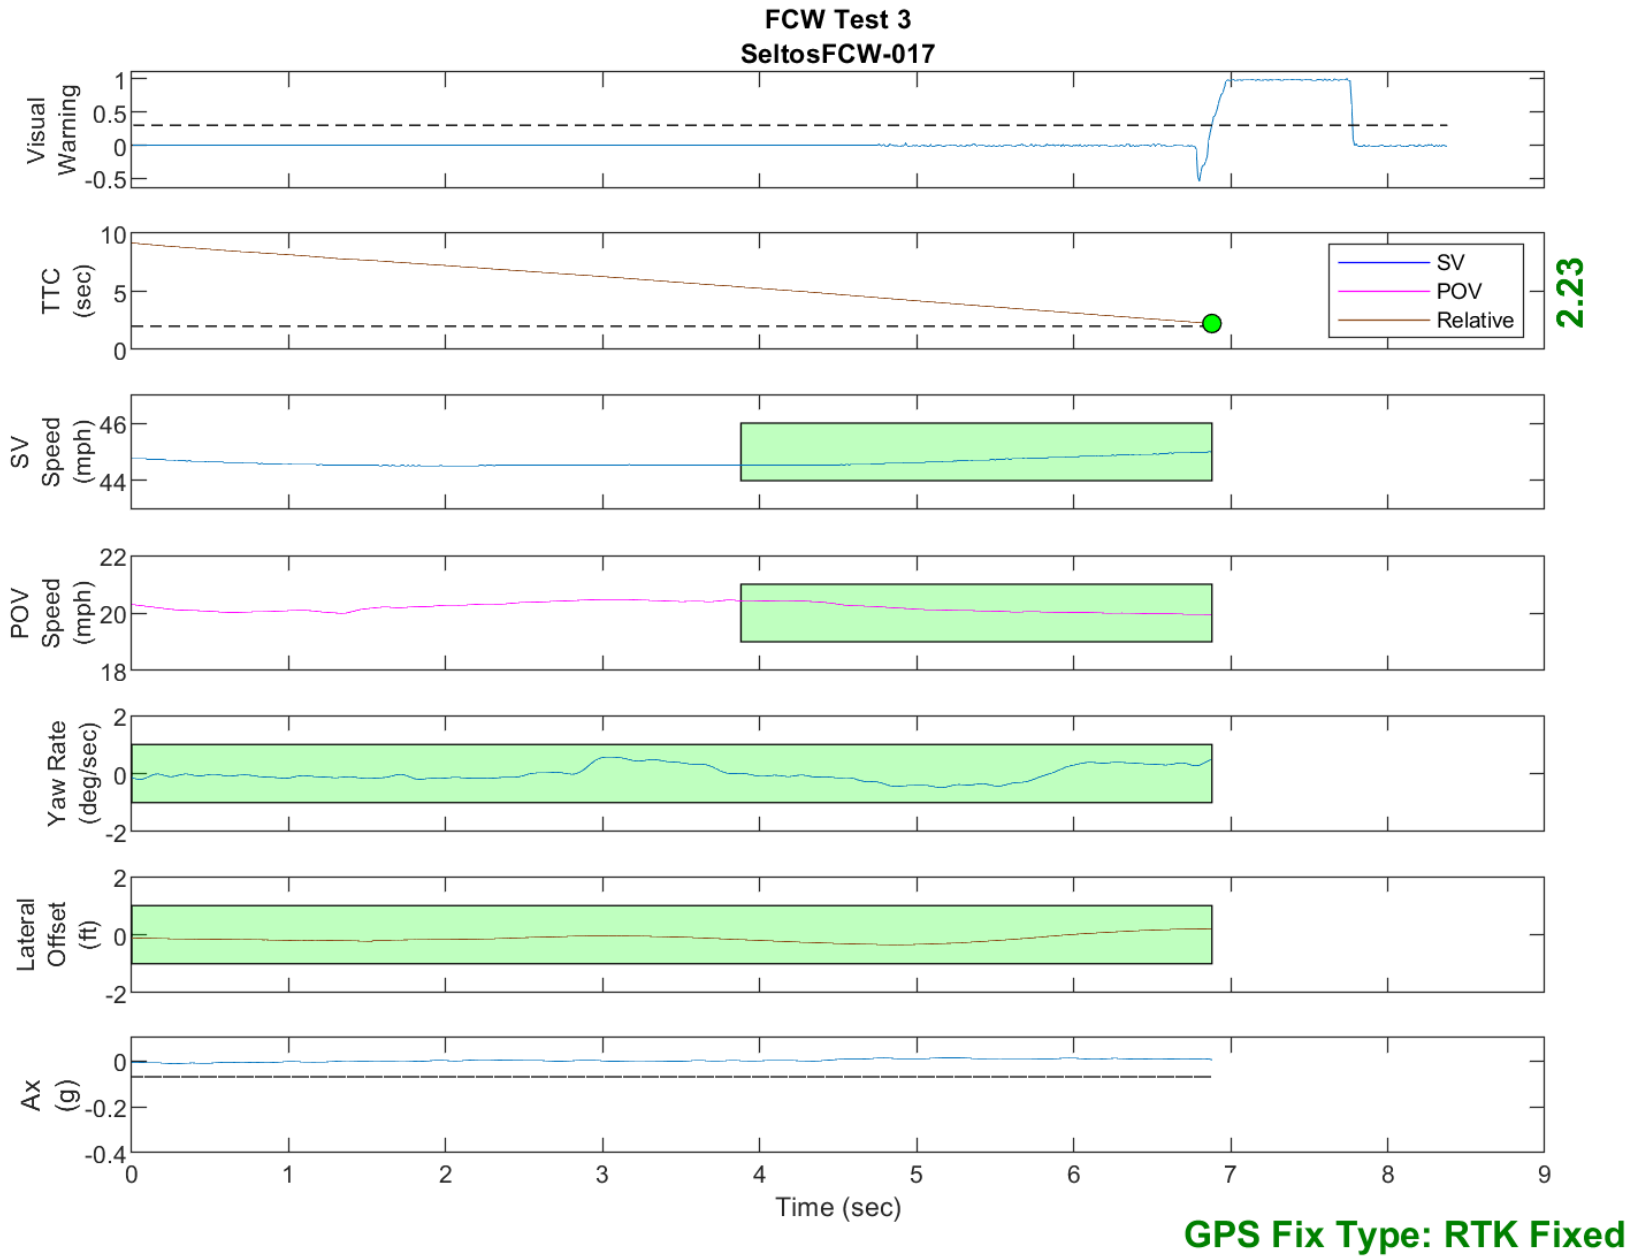


Figure D48. Time History for Run 17, FCW Test 3, Visual Warning