

**NEW CAR ASSESSMENT PROGRAM
DYNAMIC BRAKE SUPPORT SYSTEM CONFIRMATION TEST
NCAP-DRI-DBS-21-11**

2021 Kia Seltos SX Turbo AWD

DYNAMIC RESEARCH, INC.

355 Van Ness Avenue
Torrance, California 90501



16 March 2021

Final Report

Prepared Under Contract No. DTNH22-14-D-00333

**U.S. DEPARTMENT OF TRANSPORTATION
National Highway Traffic Safety Administration
New Car Assessment Program
1200 New Jersey Avenue, SE
West Building, 4th Floor (NRM-110)
Washington, DC 20590**

Prepared for the Department of Transportation, National Highway Traffic Safety Administration, under Contract No. DTNH22-14-D-00333.

This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings, and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturer's names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products of manufacturers.

Prepared By: J. Lenkeit and N. Watanabe
Technical Director Test Engineer
Date: 16 March 2021

1. Report No. NCAP-DRI-DBS-21-11	2. Government Accession No.	3. Recipient's Catalog No.	
4. Title and Subtitle Final Report of Dynamic Brake Support System Confirmation Test of a 2021 Kia Seltos SX Turbo AWD.		5. Report Date 16 March 2021	
		6. Performing Organization Code DRI	
7. Author(s) J. Lenkeit, Technical Director N. Watanabe, Test Engineer		8. Performing Organization Report No. DRI-TM-20-215	
9. Performing Organization Name and Address Dynamic Research, Inc. 355 Van Ness Ave, STE 200 Torrance, CA 90501		10. Work Unit No.	
		11. Contract or Grant No. DTNH22-14-D-00333	
12. Sponsoring Agency Name and Address U.S. Department of Transportation National Highway Traffic Safety Administration New Car Assessment Program 1200 New Jersey Avenue, SE, West Building, 4th Floor (NRM-110) Washington, DC 20590		13. Type of Report and Period Covered Final Test Report February - March 2021	
		14. Sponsoring Agency Code NRM-110	
15. Supplementary Notes			
16. Abstract These tests were conducted on the subject 2021 Kia Seltos SX Turbo AWD in accordance with the specifications of the New Car Assessment Program's (NCAP) most current Test Procedure in docket NHTSA-2015-0006-0026; DYNAMIC BRAKE SUPPORT PERFORMANCE EVALUATION CONFIRMATION TEST FOR THE NEW CAR ASSESSMENT PROGRAM, October 2015. The vehicle passed the requirements of the test for all four DBS test scenarios.			
17. Key Words Dynamic Brake Support, DBS, AEB, New Car Assessment Program, NCAP		18. Distribution Statement Copies of this report are available from the following: NHTSA Technical Reference Division National Highway Traffic Safety Administration 1200 New Jersey Avenue, SE Washington, DC 20590	
19. Security Classif. (of this report) Unclassified	20. Security Classif. (of this page) Unclassified	21. No. of Pages 181	22. Price

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
I. INTRODUCTION	1
II. DATA SHEETS	2
Data Sheet 1: Test Results Summary	3
Data Sheet 2: Vehicle Data	4
Data Sheet 3: Test Conditions	5
Data Sheet 4: Dynamic Brake System Operation	7
III. TEST PROCEDURES	10
A. Test Procedure Overview	10
B. General Information	15
C. Principal Other Vehicle	18
D. Foundation Brake System Characterization	19
E. Brake Control	20
F. Instrumentation	21
APPENDIX A Photographs	A-1
APPENDIX B Excerpts from Owner's Manual	B-1
APPENDIX C Run Log	C-1
APPENDIX D Brake Characterization	D-1
APPENDIX E Time Histories	E-1

Section I

INTRODUCTION

Dynamic Brake Support (DBS) systems are a subset of Automatic Emergency Braking (AEB) systems. DBS systems are designed to avoid or mitigate consequences of rear-end crashes by automatically applying supplemental braking on the subject vehicle (SV) when the system determines that the braking applied by the driver is insufficient to avoid a collision.

DBS systems intervene in driving situations where a rear-end collision is expected to be unavoidable unless additional braking is realized. Since DBS interventions are designed to occur late in the pre-crash timeline, and the driver has already initiated crash-avoidance braking, DBS systems are not required to alert the driver that a DBS intervention has occurred. In addition to sensors monitoring vehicle operating conditions, such as speed, brake application, etc., DBS systems employ RADAR, LIDAR, and/or vision-based sensors capable of detecting surrounding vehicles in traffic. Algorithms in the system's Central Processing Unit (CPU) use this information to continuously monitor the likelihood of a rear-end crash, and command additional braking as needed to avoid or mitigate such a crash.

The method prescribed by the National Highway Traffic Safety Administration (NHTSA) to evaluate DBS performance on the test track involves three longitudinal, rear-end type crash configurations and a false positive test. In the rear-end scenarios, a SV approaches a stopped, slower-moving, or decelerating principal other vehicle (POV) in the same lane of travel. For these tests, the POV is a strikeable object with the characteristics of a compact passenger car. The fourth scenario is used to evaluate the propensity of a DBS system to inappropriately activate in a non-critical driving scenario that does not present a safety risk to the SV occupant(s).

The purpose of the testing reported herein was to objectively quantify the performance of a Dynamic Brake Support system installed on a 2021 Kia Seltos SX Turbo AWD. This test to assess Dynamic Brake Support systems is sponsored by the National Highway Traffic Safety Administration under Contract No. DTNH22-14-D-00333 with the New Car Assessment Program (NCAP).

The 2021 Kia Seltos is available with two types of AEB systems. One of these uses a camera-only system, and the other system uses a fusion of a camera and forward-facing radar. The vehicle covered in this report was equipped with the fusion system.

Section II
DATA SHEETS

DYNAMIC BRAKE SUPPORT
DATA SHEET 1: TEST RESULTS SUMMARY

(Page 1 of 1)

2021 Kia Seltos SX Turbo AWD

VIN: KNDETCA29M718xxxx

Test Date: 2/19/2021

Dynamic Brake Support System setting: Active Assist - On

Warning Timing - Normal

**Test 1 - Subject Vehicle Encounters
Stopped Principal Other Vehicle**

SV 25 mph: Pass

**Test 2 - Subject Vehicle Encounters
Slower Principal Other Vehicle**

SV 25 mph POV 10 mph: Pass

SV 45 mph POV 20 mph: Pass

**Test 3 - Subject Vehicle Encounters
Decelerating Principal Other Vehicle**

SV 35 mph POV 35 mph: Pass

**Test 4 - Subject Vehicle Encounters
Steel Trench Plate**

SV 25 mph: Pass

SV 45 mph: Pass

Overall: Pass

Notes:

DYNAMIC BRAKE SUPPORT
DATA SHEET 2: VEHICLE DATA

(Page 1 of 1)

2021 Kia Seltos SX Turbo AWD

TEST VEHICLE INFORMATION

VIN: KNDETCA29M718xxxx

Body Style: SUV

Color: Cherry Black

Date Received: 2/8/2021

Odometer Reading: 11 mi

DATA FROM VEHICLE'S CERTIFICATON LABEL

Vehicle manufactured by: KIA MOTORS CORPORATION

Date of manufacture: 12/20

Vehicle Type: MPV

DATA FROM TIRE PLACARD

Tires size as stated on Tire Placard: Front: 235/45R18

Rear: 235/45R18

Recommended cold tire pressure: Front: 230 kPa (33 psi)

Rear: 230 kPa (33 psi)

TIRES

Tire manufacturer and model: Kumho Majesty 9 Solus TA91

Front tire specification: 235/45R18 94V

Rear tire specification: 235/45R18 94V

Front tire DOT prefix: 1Y0 KRYAJ9

Rear tire DOT prefix: 1Y0 KRYAJ9

DYNAMIC BRAKE SUPPORT
DATA SHEET 3: TEST CONDITIONS

(Page 1 of 2)

2021 Kia Seltos SX Turbo AWD

GENERAL INFORMATION

Test date: 2/19/2021

AMBIENT CONDITIONS

Air temperature: 17.2 C (63 F)

Wind speed: 0.0 m/s (0.0 mph)

X Wind speed \leq 10 m/s (22 mph).

X Tests were not performed during periods of inclement weather. This includes, but is not limited to, rain, snow, hail, fog, smoke, or ash.

X Tests were conducted during daylight hours with good atmospheric visibility (defined as an absence of fog and the ability to see clearly for more than 5000 meters). The tests were not conducted with the vehicle oriented into the sun during very low sun angle conditions, where the sun is oriented 15 degrees or less from horizontal, and camera "washout" or system inoperability results.

VEHICLE PREPARATION

Verify the following:

All non-consumable fluids at 100% capacity: X

Fuel tank is full: X

Tire pressures are set to manufacturer's recommended cold tire pressure: X

Front: 230 kPa (33 psi)

Rear: 230 kPa (33 psi)

DYNAMIC BRAKE SUPPORT
DATA SHEET 3: TEST CONDITIONS

(Page 2 of 2)

2021 Kia Seltos SX Turbo AWD

WEIGHT

Weight of vehicle as tested including driver and instrumentation

Left Front: 481.3 kg (1061 lb)

Right Front: 460.8 kg (1016 lb)

Left Rear: 347.5 kg (766 lb)

Right Rear: 324.3 kg (715 lb)

Total: 1613.9 kg (3558 lb)

DYNAMIC BRAKE SUPPORT
DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 1 of 3)

2021 Kia Seltos SX Turbo AWD

Name of the DBS option, option package, etc.:

FCA (Forward Collision-Avoidance Assist-Pedestrian). This is available as standard equipment on the SX Turbo trim. In order to have the sensor fusion, the vehicle must also be equipped with 'Smart Cruise Control w/ Stop & Go', which is included on this trim.

Type and location of sensor(s) the system uses:

Sensor fusion (Front camera, front radar). The front camera is located in the top center of the windshield and the front radar is located in the center of the front bumper.

System setting used for test (if applicable): Active Assist - On

Warning Timing - Normal

Brake application mode used for test: Hybrid control

What is the minimum vehicle speed at which the DBS system becomes active?

10 km/h (6 mph) (Per manufacturer supplied information)

What is the maximum vehicle speed at which the DBS system functions?

Forward vehicle: 76 km/h (47 mph)

Pedestrians and cyclists: 64 km/h (40 mph) (Per manufacturer supplied information)

Does the vehicle system require an initialization sequence/procedure?

____ Yes
X No

If yes, please provide a full description.

Will the system deactivate due to repeated AEB activations, impacts or near-misses?

____ Yes
X No

If yes, please provide a full description.

DYNAMIC BRAKE SUPPORT

DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 2 of 3)

2021 Kia Seltos SX Turbo AWD

How is the Forward Collision Warning presented to the driver? Warning light
(Check all that apply) Buzzer or auditory alarm
 Vibration
 Other _____

Describe the method by which the driver is alerted. For example, if the warning is a light, where is it located, its color, size, words or symbol, does it flash on and off, etc. If it is a sound, describe if it is a constant beep or a repeated beep. If it is a vibration, describe where it is felt (e.g., pedals, steering wheel), the dominant frequency (and possibly magnitude), the type of warning (light, auditory, vibration, or combination), etc.

The visual alert is presented in the instrument panel. It shows a picture of the rear end of a leading vehicle, the words "Collision Warning", and a picture of an exclamation point within a triangle. See Appendix A, Figure A17.

The auditory alert is 1515 Hz tone, pulsed at approximately 8 Hz.

Is there a way to deactivate the system? Yes
 No

If yes, please provide a full description including the switch location and method of operation, any associated instrument panel indicator, etc.

The system can be disabled using the system menus, accessed by a setup button located at the bottom of the center display. See Appendix A, Figure A16.

The menu hierarchy is:

Setup

Vehicle Settings

Driver Assistance

Forward Safety

Select from: Active Assist, Warning Only, or Off

See Appendix A, Figures A14 and A15.

DYNAMIC BRAKE SUPPORT
DATA SHEET 4: DYNAMIC BRAKE SUPPORT SYSTEM OPERATION

(Page 3 of 3)

2021 Kia Seltos SX Turbo AWD

Is the vehicle equipped with a control whose purpose is to adjust the range setting or otherwise influence the operation of DBS? Yes
 No

If yes, please provide a full description.

The timing can be adjusted using the system menus, accessed by a setup button located at the bottom of the center display. See Appendix A, Figure A16.
The menu hierarchy is:

Setup

Vehicle Settings

Driver Assistance

Warning Timing

Select Normal or Late

See Appendix A, Figures A14 and A15.

Are there other driving modes or conditions that render DBS inoperable or reduce its effectiveness? Yes
 No

If yes, please provide a full description.

System limitations are described in the Owner's Manual on pages 5-94 through 5-101, shown in Appendix B, pages B-26 through B-33

Notes:

The 2021 Kia Seltos is available with two types of AEB systems. One of these uses a camera-only system, and the other system uses a fusion of a camera and forward-facing radar. The vehicle covered in this report was equipped with the fusion system.

Section III

TEST PROCEDURES

A. Test Procedure Overview

Four test scenarios were used, as follows:

Test 1. Subject Vehicle (SV) Encounters Stopped Principal Other Vehicle (POV)

Test 2. Subject Vehicle Encounters Slower Principal Other Vehicle

Test 3. Subject Vehicle Encounters Decelerating Principal Other Vehicle

Test 4. Subject Vehicle Encounters Steel Trench Plate

An overview of each of the test procedures follows.

1. TEST 1 – SUBJECT VEHICLE ENCOUNTERS STOPPED PRINCIPAL OTHER VEHICLE ON A STRAIGHT ROAD

This test evaluates the ability of the DBS system to detect and respond to a stopped lead vehicle in the immediate forward path of the SV, as depicted in Figure 1.

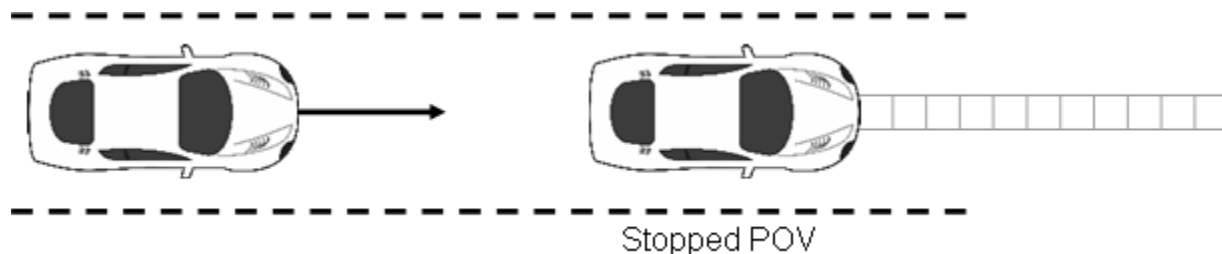


Figure 1. Depiction of Test 1

a. Procedure

The POV was parked in the center of a travel lane, with its longitudinal axis oriented parallel to the roadway edge and facing the same direction as the SV so that the SV approaches the rear of the POV.

The SV ignition was cycled prior to each test run. The SV was driven at a nominal speed of 25 mph (40.2 km/h) in the center of the lane of travel, toward the parked POV. The SV throttle pedal was released within 500 ms after t_{FCW} , i.e., within 500 ms of the FCW alert. The SV brakes were applied at $TTC = 1.1$ seconds (SV-to-POV distance of 40 ft (12 m)). The test concluded when either:

- The SV came into contact with the POV or

- The SV came to a stop before making contact with the POV.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The SV speed could not deviate from the nominal speed by more than 1.0 mph (1.6 km/h) during an interval defined by a Time to Collision (TTC) = 5.1 seconds to t_{FCW} . For this test, TTC = 5.1 seconds is taken to occur at an SV-to-POV distance of 187 ft (57 m).

Table 1. Nominal Stopped POV DBS Test Choreography

Test Speeds		SV Speed Held Constant		SV Throttle Fully Released By		SV Brake Application Onset (for each application magnitude)	
SV	POV	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway
25 mph (40.2 km/h)	0	5.1 → t_{FCW}	187 ft (57 m) → t_{FCW}	Within 500 ms of FCW1 onset	Varies	1.1	40 ft (12 m)

b. Criteria

The performance requirement for this series of tests is that there be no SV-to-POV impact for at least five of the seven valid test trials.

2. TEST 2 – SUBJECT VEHICLE ENCOUNTERS SLOWER PRINCIPAL OTHER VEHICLE

This test evaluates the ability of the DBS system to detect and respond to a slower-moving lead vehicle traveling at a constant speed in the immediate forward path of the SV, as depicted in Figure 2.

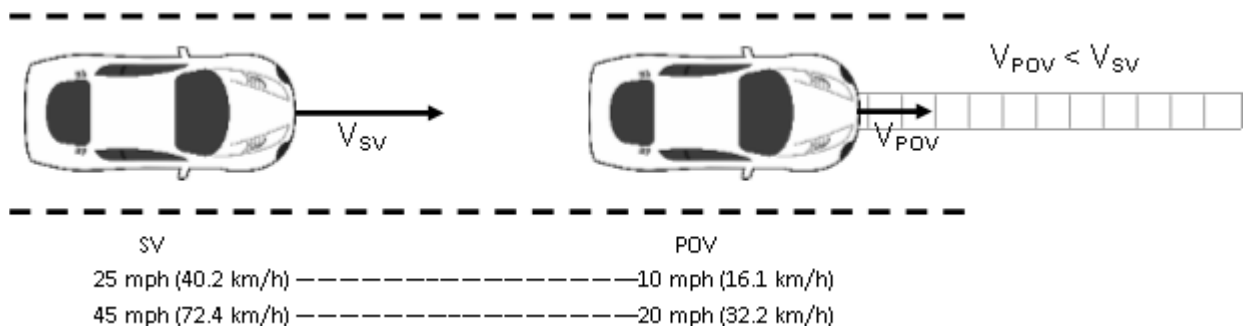


Figure 2. Depiction of Test 2

a. Procedure

The SV ignition was cycled prior to each test run. The tests were conducted two ways. In the first, the POV was driven at a constant 10.0 mph (16.1 km/h) in the center of the lane of travel while the SV was driven at 25.0 mph (40.2 km/h), in the center lane of travel, toward the slower-moving POV. In the second, the POV was driven at a constant 20.0 mph (32.2 km/h) in the center of the lane of travel while the SV was driven at 45.0 mph (72.4 km/h), in the center lane of travel, toward the slower-moving POV. In both cases, the SV throttle pedal was released within 500 ms after t_{FCW} , i.e., within 500 ms of the FCW alert. The SV brakes were applied at $TTC = 1.0$ seconds, assumed to be SV-to-POV distance of 22 ft (7 m) for an SV speed of 25 mph and 37 ft (11 m) for an SV speed of 45 mph.

The test concluded when either:

- The SV came into contact with the POV or
- 1 second after the speed of the SV became less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than ± 1 ft (0.3 m) during the validity period.
- The SV speed could not deviate more than ± 1.0 mph (± 1.6 km/h) during an interval defined by $TTC = 5.0$ seconds to t_{FCW} .
- The POV speed could not deviate more than ± 1.0 mph (± 1.6 km/h) during the validity period.

Table 2. Nominal Slower-Moving POV DBS Test Choreography

Test Speeds		SV Speed Held Constant		SV Throttle Fully Released By		SV Brake Application Onset (for each application magnitude)	
SV	POV	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway
25 mph (40 km/h)	10 mph (16 km/h)	5.0 $\rightarrow t_{FCW}$	110 ft (34 m) $\rightarrow t_{FCW}$	Within 500 ms of FCW1 onset	Varies	1.0	22 ft (7 m)
45 mph (72 km/h)	20 mph (32 km/h)	5.0 $\rightarrow t_{FCW}$	183 ft (56 m) $\rightarrow t_{FCW}$	Within 500 ms of FCW1 onset	Varies	1.0	37 ft (11 m)

b. Criteria

The performance requirement for this series of tests is that there be no SV-to-POV impact for at least five of the seven valid test trials.

3. TEST 3 – SUBJECT VEHICLE ENCOUNTERS DECELERATING PRINCIPAL OTHER VEHICLE

This test evaluates the ability of the DBS system to detect and respond to a lead vehicle slowing with a constant deceleration in the immediate forward path of the SV as depicted in Figure 3. Should the SV foundation brake system be unable to prevent an SV-to-POV impact for a given test condition, the DBS system should automatically provide supplementary braking capable of preventing an SV-to-POV collision.

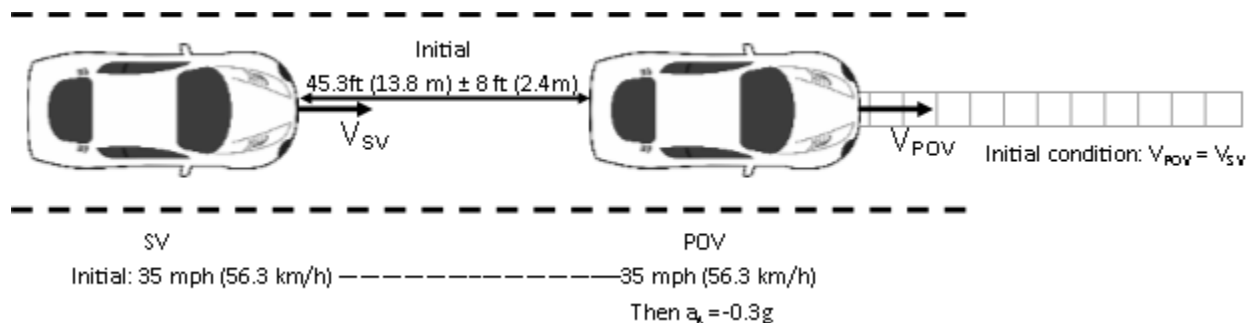


Figure 3. Depiction of Test 3

a. Procedure

The SV ignition was cycled prior to each test run. For this scenario both the POV and SV were driven at a constant 35.0 mph (56.3 km/h) in the center of the lane, with headway of 45.3 ft (13.8 m) ± 8 ft (2.4 m). Once these conditions were met, the POV tow vehicle brakes were applied to achieve $0.3 \pm 0.03 g$. The SV throttle pedal was released within 500 ms of t_{FCW} , and the SV brakes were applied when TTC was 1.4 seconds (31.5 ft (9.6 m)).

The test concluded when either:

- The SV came into contact with the POV or
- 1 second after the velocity of the SV became less than or equal to that of the POV.

The SV driver then braked to a stop.

In addition to the general test validity criteria described below, for an individual test trial to be valid, the following was required throughout the test:

- The lateral distance between the centerline of the POV and the center of the travel lane could not deviate more than ±1 ft (0.3 m) during the validity period.
- The headway between the SV and POV must have been constant from the onset

of the applicable validity period to the onset of POV braking.

- The SV and POV speed could not deviate more than ± 1.0 mph (1.6 km/h) during an interval defined by the onset of the validity period to the onset of POV braking.
- The average POV deceleration could not deviate by more than ± 0.03 g from the nominal 0.3 g deceleration during the interval beginning at 1.5 seconds after the onset of POV braking and ending either 250 ms prior to the POV coming to a stop or the SV coming into contact with the POV.

Table 3. Nominal Decelerating POV DBS Test Choreography

Test Speeds		SV Speed Held Constant		SV Throttle Fully Released By		SV Brake Application Onset (for each application magnitude)	
SV	POV	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway	TTC (seconds)	SV-to-POV Headway
35 mph (56 km/h)	35 mph (56 km/h)	3.0 seconds prior to POV braking → t_{FCW}	45 ft (14 m) → t_{FCW}	Within 500 ms of FCW1 onset	Varies	1.4	32 ft (10 m)

b. Criteria

The performance requirement for this series of tests is that no SV-to-POV contact occurs for at least five of the seven valid test trials.

4. TEST 4 – FALSE POSITIVE SUPPRESSION

The false positive suppression test series evaluates the ability of a DBS system to differentiate a steel trench plate (STP) from an object presenting a genuine safety risk to the SV. Although the STP is large and metallic, it is designed to be driven over without risk of injury to the driver or damage to the SV. Therefore, in this scenario, the automatic braking available from DBS is not necessary and should be suppressed. The test condition is nearly equivalent to that previously defined for Test 1, the stopped POV condition, but with an STP in the SV forward path in lieu of a POV.

a. Procedure

This test was conducted at two speeds, 25 mph (40.2 km/h) and 45 mph (72.4 km/h). The SV was driven directly towards, and over, the STP, which was positioned in the center of a travel lane, with its longest sides parallel to the road edge. The SV was driven at constant speed in the center of the lane toward the STP. If the SV did not present an FCW alert during the approach to the STP by $TTC = 2.1$ s, the SV driver initiated release of the throttle pedal at $TTC = 2.1$ s and the throttle pedal was fully released within 500 ms

of TTC = 2.1 s. The SV brakes were applied at TTC of 1.1 seconds, assumed to be 40 ft (12.3 m) from the edge of the STP at 25 mph or 73 ft (22.1 m) at 45 mph. The test concluded when the front most part of the SV reached a vertical plane defined by the edge of the STP first encountered by the SV.

b. Criteria

In order to pass the False Positive test series, the magnitude of the SV deceleration reduction attributable to DBS intervention must have been less than or equal to 1.5 times the average of the deceleration experienced by the baseline command from the braking actuator for at least five of seven valid test trials.

B. General Information

1. T_{FCW}

The time at which the Forward Collision Warning (FCW) activation flag indicates that the system has issued an alert to the SV driver is designated as t_{FCW} . FCW alerts are typically haptic, visual, or auditory, and the onset of the alert is determined by post-processing the test data.

For systems that implement auditory or haptic alerts, part of the pre-test instrumentation verification process is to determine the tonal frequency of the auditory warning or the vibration frequency of the tactile warning through use of the PSD (Power Spectral Density) function in Matlab. This is accomplished in order to identify the center frequency around which a band-pass filter is applied to subsequent auditory or tactile warning data so that the beginning of such warnings can be programmatically determined. The band-pass filter used for these warning signal types is a phaseless, forward-reverse pass, elliptical (Cauer) digital filter, with filter parameters as listed in Table 4.

Table 4. Auditory and Tactile Warning Filter Parameters

Warning Type	Filter Order	Peak-to-Peak Ripple	Minimum Stop Band Attenuation	Passband Frequency Range
Auditory	5 th	3 dB	60 dB	Identified Center Frequency \pm 5%
Tactile	5 th	3 dB	60 dB	Identified Center Frequency \pm 20%

2. GENERAL VALIDITY CRITERIA

In addition to any validity criteria described above for the individual test scenarios, for an individual trial to be valid, it must have met the following criteria throughout the test:

- The SV driver seatbelt was latched.
- If any load had been placed on the SV front passenger seat (e.g., for instrumentation), the vehicle’s front passenger seatbelt was latched.
- The SV was driven at the nominal speed in the center of the travel lane, toward the POV or STP.
- The driver used the least amount of steering input necessary to maintain SV position in the center of the travel lane during the validity period; use of abrupt steering inputs or corrections was avoided.
- The yaw rate of the SV did not exceed ± 1.0 deg/s from the onset of the validity period to the instant SV deceleration exceeded 0.25 g.
- The SV driver did not apply any force to the brake pedal during the applicable validity period. All braking shall be performed by the programmable brake controller.
- The lateral distance between the centerline of the SV and the centerline of the POV or STP did not deviate more than ± 1 ft (0.3 m) during the applicable validity period.

3. VALIDITY PERIOD

The valid test interval began:

- Test 1: When the SV-to-POV TTC = 5.1 seconds
- Test 2: When the SV-to-POV TTC = 5.0 seconds
- Test 3: 3 seconds before the onset of POV braking
- Test 4: 2 seconds prior to the SV throttle pedal being released

The valid test interval ended:

- Test 1: When either of the following occurred:
 - The SV came in contact with the POV (SV-to-POV contact was assessed by using GPS-based range data or by measurement of direct contact sensor output); or
 - The SV came to a stop before making contact with the POV.
- Test 2: When either of the following occurred:
 - The SV came into contact with the POV; or
 - 1 second after the velocity of the SV became less than or equal to that of the POV.
- Test 3: When either of the following occurred:
 - The SV came in contact with the POV; or
 - 1 second after minimum SV-to-POV range occurred.
- Test 4: When the SV stopped.

4. STATIC INSTRUMENTATION CALIBRATION

To assist in resolving uncertain test data, static calibration data was collected prior to each of the test series.

For Tests 1, 2, and 3, the SV, POV, and POV moving platform and tow vehicle were centered in the same travel lane with the same orientation (i.e., facing the same direction). For Test 4, the SV and STP were centered in the same travel lane.

For Tests 1, 2, and 3, the SV was positioned such that it just contacted a vertical plane defining the rearmost location of the POV. For Test 4, the front-most location of the SV was positioned such that it just reached a vertical plane defined by the leading edge of

the STP first encountered by the SV (i.e., just before it is driven onto the STP). This is the “zero position.”

The zero position was documented prior to, and immediately after, conduct of each test series.

If the zero position reported by the data acquisition system was found to differ by more than ± 2 in (± 5 cm) from that measured during collection of the pre-test static calibration data file, the pre-test longitudinal offset was adjusted to output zero and another pre-test static calibration data file was collected. If the zero position reported by the data acquisition system was found to differ by more than ± 2 in (± 5 cm) from that measured during collection of the post-test static calibration data file, the test trials performed between collection of that post-test static calibration data file and the last valid pre-test static calibration data file were repeated.

Static data files were collected prior to, and immediately after, conduct each of the test series. The pre-test static files were reviewed prior to test conduct to confirm that all data channels were operational and were properly configured.

5. NUMBER OF TRIALS

A target total of seven (7) valid trials were performed for each scenario. In cases where the test driver performed more than seven trials, the first seven trials satisfying all test tolerances were used to assess the SV performance.

6. TRANSMISSION

All trials were performed with SV automatic transmissions in “Drive” or with manual transmissions in the highest gear capable of sustaining the desired test speed. Manual transmission clutches remained engaged during all maneuvers. The brake lights of the POV were not illuminated.

C. Principal Other Vehicle

DBS testing requires a POV that realistically represents typical vehicles, does not suffer damage or cause damage to a test vehicle in the event of collision, and can be accurately positioned and moved during the tests. The tests reported herein made use of the NHTSA developed Strikeable Surrogate Vehicle (SSV).

This SSV system was designed specifically for common rear-end crash scenarios which AEB systems address. The key components of the SSV system are:

- A POV shell which is a visually and dimensionally accurate representation of a passenger car.
- A slider and load frame assembly to which the shell is attached.
- A two-rail track on which the slider operates.

- A road-based lateral restraint track.
- A tow vehicle.

The key requirements of the POV element are to:

- Provide an accurate representation of a real vehicle to DBS sensors, including cameras and radar.
- Be resistant to damage and inflict little or no damage to the SV as a result of repeated SV-to-POV impacts.

The key requirements of the POV delivery system are to:

- Accurately control the nominal POV speed up to 35 mph (56 km/h).
- Accurately control the lateral position of the POV within the travel lane.
- Allow the POV to move away from the SV after an impact occurs.

Operationally, the POV shell is attached to the slider and load frame, which includes rollers that allow the entire assembly to move longitudinally along the guide rail. The guide rail is coupled to a tow vehicle and guided by the lateral restraint track secured to the test track surface. The rail includes a provision for restraining the shell and roller assembly in the rearward direction. In operation, the shell and roller assembly engages the rail assembly through detents to prevent relative motion during run-up to test speeds and minor deceleration of the tow vehicle. The combination of rearward stops and forward motion detents allows the test conditions, such as relative SV-to-POV headway distance and speed etc., to be achieved and adjusted as needed in the preliminary part of a test. If during the test, the SV strikes the rear of the POV shell, the detents are overcome and the entire shell/roller assembly moves forward in a two-stage manner along the rail and away from the SV. The forward end of the rail has a soft stop to restrain forward motion of the shell/roller assembly. After impacting the SSV, the SV driver uses the steering wheel to maintain SV position in the center of the travel lane, thereby straddling the two-rail track. The SV driver must manually apply the SV brakes after impact. The SSV system is shown in Figures A6 through A8 and a detailed description can be found in the NHTSA report: NHTSA'S STRIKEABLE SURROGATE VEHICLE PRELIMINARY DESIGN + OVERVIEW, May 2013.

D. Foundation Brake System Characterization

Data collected and analyzed from a series of pre-test braking runs were used to objectively quantify the response of the vehicle's foundation brake system without the contribution of DBS. The results of these analyses were used to determine the brake pedal input magnitudes needed for the main tests.

This characterization was accomplished by recording longitudinal acceleration and brake pedal force and travel data for a variety of braking runs. For three initial brake characterization runs, the vehicle was driven at 45 mph, and the brakes were applied at a rate of 1 inch/sec up to the brake input level needed for at least 0.7 g. Linear regressions were performed on the data from each run to determine the linear vehicle deceleration

response as a function of both applied brake pedal force and brake pedal travel. The brake input force or displacement level needed to achieve a vehicle deceleration of 0.4 g was determined from the average of the three runs. Using the 0.4 g brake input force or displacement level found from the three initial runs, subsequent runs were performed at 25 mph, 35 mph, and 45 mph, with the brakes applied at a rate of 10 inch/sec to the determined 0.4 g brake input force or displacement level. For each of the three test speeds, if the average calculated deceleration level was found to be within 0.4 ± 0.025 g, the resulting force or displacement was recorded and used. If the average calculated deceleration level exceeded this tolerance, the brake input force or displacement levels were adjusted and retested until the desired magnitude was realized. Prior to each braking event, the brake pad temperatures were required to be in the range of 149° - 212°F.

E. Brake Control

1. SUBJECT VEHICLE PROGRAMMABLE BRAKE CONTROLLER

To achieve accurate, repeatable, and reproducible SV brake pedal inputs, a programmable brake controller was used for all brake applications. The controller has the capability to operate in one of two user-selectable, closed-loop, control modes:

- Constant pedal displacement. By maintaining constant actuator stroke, the position of the vehicle's brake pedal remains fixed for the duration of the input. To achieve this, the brake controller modulates application force.
- Hybrid control. Hybrid control uses position-based control to command the initial brake application rate and actuator position, then changes to force-based control to command a reduction of applied force to a predetermined force. This force is maintained until the end of the braking maneuver by allowing the brake controller to modulate actuator displacement.

2. SUBJECT VEHICLE BRAKE PARAMETERS

- Each test run began with the brake pedal in its natural resting position, with no preload or position offset.
- The onset of the brake application was considered to occur when the brake actuator had applied 2.5 lbf (11 N) of force to the brake pedal.
- The magnitude of the brake application was that needed to produce 0.4 g deceleration, as determined in the foundation brake characterization.
- The SV brake application rate was between 9 to 11 in/s (229 to 279 mm/s), where the application rate is defined as the slope of a linear regression line applied to brake pedal position data over a range from 25% to 75% of the commanded input magnitude.

3. POV AUTOMATIC BRAKING SYSTEM

The POV was equipped with an automatic braking system, which was used in Test Type

3. The braking system consisted of the following components:

- Electronically controlled linear actuator, mounted on the seat rail and attached to the brake pedal. The actuator can be programmed for control of stroke and rate.
- PC module programmed for control of the stroke and rate of the linear actuator.
- Switch to activate actuator.

F. Instrumentation

Table 5 lists the sensors, signal conditioning, and data acquisition equipment used for these tests.

Table 5. Test Instrumentation and Equipment

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Tire Pressure Gauge	Vehicle Tire Pressure	0-100 psi	< 1% error between 20 and 100 psi	Omega DPG8001	18111410000	By: DRI Date: 5/4/2020 Due: 5/4/2021
Platform Scales	Vehicle Total, Wheel, and Axle Load	2200 lb/platform	0.1% of reading	Intercomp SW wireless	0410MN20001	By: DRI Date: 4/20/2020 Due: 4/20/2021
Linear (string) encoder	Throttle pedal travel	10 in	0.1 in	UniMeasure LX-EP	50060726	By: DRI Date: 6/19/2020 Due: 6/19/2021
Load Cell	Force applied to brake pedal					By: DRI
		0 - 250 lb 0 -1112 N	0.1% FS	Honeywell 41A	1464391	Date: 2/4/2021 Due: 2/4/2022
		0-250 lb 1112 N	0.05% FS	Stellar Technology PNC700	1607338	Date: 7/2/2020 Due: 7/2/2021
Differential Global Positioning System	Position, Velocity	Latitude: ±90 deg Longitude: ±180 deg Altitude: 0-18 km Velocity: 0-1000 knots	Horizontal Position: ±1 cm Vertical Position: ±2 cm Velocity: 0.05 km/h	Trimble GPS Receiver, 5700 (base station and in-vehicle)	00440100989	N/A

Table 5. Test Instrumentation and Equipment (continued)

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Multi-Axis Inertial Sensing System	Position; Longitudinal, Lateral, and Vertical Accels;	Accels $\pm 10g$, Angular Rate ± 100 deg/s, Angle >45 deg, Velocity >200 km/h	Accels $.01g$, Angular Rate 0.05 deg/s, Angle 0.05 deg, Velocity 0.1 km/h	Oxford Inertial +		By: Oxford Technical Solutions
	Lateral, Longitudinal and Vertical Velocities;				2258	Date: 5/3/2019 Due: 5/3/2021
	Roll, Pitch, Yaw Rates; Roll, Pitch, Yaw Angles				2182	Date: 9/16/2019 Due: 9/16/2021
Real-Time Calculation of Position and Velocity Relative to Lane Markings (LDW) and POV (FCW)	Distance and Velocity to lane markings (LDW) and POV (FCW)	Lateral Lane Dist: ± 30 m Lateral Lane Velocity: ± 20 m/sec Longitudinal Range to POV: ± 200 m Longitudinal Range Rate: ± 50 m/sec	Lateral Distance to Lane Marking: ± 2 cm Lateral Velocity to Lane Marking: ± 0.02 m/sec Longitudinal Range: ± 3 cm Longitudinal Range Rate: ± 0.02 m/sec	Oxford Technical Solutions (OXTS), RT-Range	97	N/A
Microphone	Sound (to measure time at alert)	Frequency Response: 80 Hz – 20 kHz	Signal-to-noise: 64 dB, 1 kHz at 1 Pa	Audio-Technica AT899	N/A	N/A
Light Sensor	Light intensity (to measure time at alert)	Spectral Bandwidth: 440-800 nm	Rise time < 10 msec	DRI designed and developed Light Sensor	N/A	N/A
Accelerometer	Acceleration (to measure time at alert)	$\pm 5g$	$\leq 3\%$ of full range	Silicon Designs, 2210-005	N/A	N/A

Type	Output	Range	Accuracy, Other Primary Specs	Mfr, Model	Serial Number	Calibration Dates Last Due
Coordinate Measurement Machine	Inertial Sensing System Coordinates	0-8 ft 0-2.4 m	±.0020 in. ±.051 mm (Single point articulation accuracy)	Faro Arm, Fusion	UO8-05-08-06636	By: DRI Date: 1/6/2021 Due: 1/6/2022
Type	Description			Mfr, Model	Serial Number	
Data Acquisition System	Data acquisition is achieved using a dSPACE MicroAutoBox II. Data from the Oxford IMU, including Longitudinal, Lateral, and Vertical Acceleration, Roll, Yaw, and Pitch Rate, Forward and Lateral Velocity, Roll and Pitch Angle are sent over Ethernet to the MicroAutoBox. The Oxford IMUs are calibrated per the manufacturer's recommended schedule (listed above).			dSPACE Micro-Autobox II 1401/1513		
				Base Board	549068	
				I/O Board	588523	

APPENDIX A

Photographs

LIST OF FIGURES

		Page
Figure A1.	Front View of Subject Vehicle.....	A-3
Figure A2.	Rear View of Subject Vehicle	A-4
Figure A3.	Window Sticker (Monroney Label).....	A-5
Figure A4.	Vehicle Certification Label	A-6
Figure A5.	Tire Placard	A-7
Figure A6.	Rear View of Principal Other Vehicle (SSV).....	A-8
Figure A7.	Load Frame/Slider of SSV	A-9
Figure A8.	Two-Rail Track and Road-Based Lateral Restraint Track.....	A-10
Figure A9.	Steel Trench Plate	A-11
Figure A10.	DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle.....	A-12
Figure A11.	Sensors for Detecting Visual and Auditory Alerts	A-13
Figure A12.	Computer and Brake Actuator Installed in Subject Vehicle.....	A-14
Figure A13.	Brake Actuator Installed in POV System	A-15
Figure A14.	System Setup Menus (page 1 of 2)	A-16
Figure A15.	System Setup Menus (page 2 of 2)	A-17
Figure A16.	Button for Accessing System Setup Menus.....	A-18
Figure A17.	Visual Alert	A-19



Figure A1. Front View of Subject Vehicle

A-3



Figure A2. Rear View of Subject Vehicle

2021 SELTOS SX TURBO AWD

MODEL/OPT. CODE: K4482 / 015
 EXTERIOR COLOR: CHERRY BLACK
 INTERIOR COLOR: BLACK
 VEHICLE ID NUMBER: KNDETCA29M718
 PORT OF ENTRY: HUENEME

Sold To: _____ Ship To: _____



#1 MASS MARKET BRAND IN INITIAL QUALITY, 6 YEARS IN A ROW.



STANDARD FEATURES

MANUFACTURER'S SUGGESTED RETAIL PRICE ▶ \$ 27,890.00

STANDARD TURBO AWD FEATURES

MECHANICAL
 1.6L Turbo 4-Cylinder Engine
 - 195 lb-ft Torque @ 1,500 RPM
 - 175 Horsepower @ 6,000 RPM
 7-Speed Quick-Shift DCT Automatic
 Torque Vectoring All-Wheel Drive w/ Center Lock Drive Mode Select (DMS)

KIA DRIVEWISE DRIVER-ASSIST TECHNOLOGY
 Forward Collision-Avoidance Assist-Pedestrian
 Blind-Spot Collision Warning (BCW)
 Blind-Spot Collision-Avoidance Assist-Rear (BCA-R)
 Rear Cross-Traffic Collision Warning & Avoidance Assist
 Lane Keeping Assist (LKA) & Lane Following Assist (LFA)
 Lane Departure Warning (LDW)
 Driver Attention Warning (DAW)
 High Beam Assist (HBA)

SAFETY
 Dual Front Advanced Airbags
 Dual Front Seat-Mounted Side & Full-Length Curtain Airbags
 Electronic Stability Control (ESC)
 Downhill Brake/Hill-start Assist Control (DBC/HAC)

INTERIOR, COMFORT & CONVENIENCE
 8" Touchscreen w/ Android Auto & Apple CarPlay
 Rear View Camera with Dynamic Guidelines
 USB Multimedia Port
 Heated Front Seats
 Combination Sofino Leatherette and Cloth Seat Trim
 Leather-Wrapped Steering Wheel and Shift Knob
 Sliding Front Ctr. Armrest, Rear Seat Ctr. Armrest
 Remote Keyless Entry
 Steering Wheel Controls (Bluetooth/Audio/Cruise)
 60/40 Split-Folding and Reclining Rear Seats
 Dual-Level Cargo Floor

EXTERIOR
 18" Alloy Wheels, Roof Rails, Fog Lamps
 Upgraded Grille with Integrated LED Light Bar
 LED Daytime Running Lights and Tail Lights
 Power, Heated Outside Mirrors w/ LED Turn Signal Indicators
 Compact Spare Tire

WARRANTY
 10 Year/100,000 Mile Limited Powertrain Warranty
 5 Year/60,000 Mile Limited Basic Warranty
 5 Year/60,000 Mile Roadside Assistance

COMPARE SX TURBO AWD FEATURES

- Added to/in place of standard S 1.6T AWD features
- LED Headlights and Fog Lights
 - UVO link[^] w/ Navigation, 10.25" display ^ 1 yr trial; see owners.kia.com for details
 - Bose Premium Audio, Sound-Connected Lighting
 - SIRIUSXM[®] w/free 3-mo. subscription* *Ask dealer for details
 - 7" LCD Color Instrument Cluster
 - Smart Cruise Control w/ Stop & Go
 - Highway Driving Assist (HDA)
 - Electronic Parking Brake
 - Sofino Seat Trim
 - Power Driver's Seat w/ Power Lumbar
 - Smart Key & Push Button Start
 - Remote Start / Remote Climate (Key Fob)
 - Wireless Phone Charger
 - Full Automatic Temperature Control
 - Auto-Dimming Rearview Mirror
 - Illuminated Sunvisor Mirror
 - LED Overhead Interior Lighting
 - Rear USB Charge Port
 - Rear Passenger Air Vents
 - Cargo Cover
 - Safe Exit Assist (SEA)

ADDITIONAL INSTALLED EQUIPMENT:
 (In addition to or in place of standard features)
 Cherry Black Paint
 SX Sunroof Package
 - Power Sunroof with Sunshade
 Carpeted Floor Mats

Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included
 Included

\$345.00
 \$700.00
 \$130.00
 MSRP INCLUDING OPTIONS \$ 29,065.00
 INLAND FREIGHT AND HANDLING \$ 1,120.00
TOTAL MANUFACTURER'S SUGGESTED RETAIL PRICE ▶ \$ 30,185.00

EPA DOT Fuel Economy and Environment Gasoline Vehicle

Fuel Economy
27 MPG combined city/hwy
25 city
30 highway
 3.7 gallons per 100 miles

SMALL SUVs range from 16 to 120 MPG. The best vehicle rates 141 MPGe.

You Save \$0 in fuel costs over 5 years compared to the average new vehicle.

Annual fuel cost \$1,500

Fuel Economy & Greenhouse Gas Rating (tailpipe only) 6
 Scale: 1 (Best) to 10 (Worst)

Smog Rating (tailpipe only) 5
 Scale: 1 (Best) to 10 (Worst)

This vehicle emits 331 grams CO₂ per mile. The best emits 0 grams per mile (tailpipe only). Producing and distributing fuel also create emissions; learn more at fueleconomy.gov.

Actual results will vary for many reasons, including driving conditions and how you drive and maintain your vehicle. The average new vehicle gets 27 MPG and costs \$7,500* to fuel over 5 years. Cost estimates are based on 15,000 miles per year at \$ 2.70 per gallon. MPGe is miles per gasoline gallon equivalent. Vehicle emissions are a significant cause of climate change and smog.

fueleconomy.gov
 Calculate personalized estimates and compare vehicles

Smartphone QR Code

GOVERNMENT 5-STAR SAFETY RATINGS

Overall Vehicle Score		
Frontal	Driver	Not Rated
Crash	Passenger	Not Rated
Side		
Crash	Front seat	Not Rated
	Rear seat	Not Rated
Rollover		
		Not Rated

PARTS CONTENT INFORMATION

FOR VEHICLES IN THIS CAR LINE U.S./CANADIAN PARTS CONTENT: 0 %

MAJOR SOURCES OF FOREIGN PARTS:
 KOREA: 90%
 OTHER: 10%

NOTE: PARTS CONTENT DOES NOT INCLUDE FINAL ASSEMBLY, DISTRIBUTION, OR OTHER NON-PARTS COSTS.

FOR THIS VEHICLE FINAL ASSEMBLY POINT:
 GWANGJU, KOREA

COUNTRY OF ORIGIN
 ENGINE: KOREA
 TRANSMISSION: KOREA

When you purchase this vehicle, Kia Motors America, Inc. collects personal information you provide to the dealership. For information on our collection and use of personal information and your rights, please see our Privacy policy on www.kia.com.
 TOTAL ADDITIONAL WEIGHT: 5.8



Star ratings range from 1 to 5 stars (*****) with 5 being the highest. Source: National Highway Traffic Safety Administration (NHTSA). www.safercar.gov or 1-888-327-4236

Manufacturer's suggested retail price includes Manufacturer's recommended pre-delivery service. License and title fees, state and local taxes and other dealer-installed options and accessories are not included in the manufacturer's suggested retail price.

Figure A3. Window Sticker (Monroney Label)



MANUFACTURED IN KOREA BY
KIA MOTORS CORPORATION

12/20
GAWR
FRONT
REAR

GVWR 4245 LB
TIRES
2293 LB 235/45R18
2117 LB 235/45R18

PAINT 9H
RIMS
7.5Jx18
7.5Jx18

TRIM WK
COLD TIRE INFL
33psi SINGLE
33psi SINGLE

THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S.A. FEDERAL
MOTOR VEHICLE SAFETY AND THEFT PREVENTION STANDARDS
IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE.

V.I.N KNDETCA29M718
MPV



Figure A4. Vehicle Certification Label



TIRE AND LOADING INFORMATION
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT

SEATING CAPACITY NOMBRE DE PLACES	TOTAL 5	FRONT AVANT 2	REAR ARRIÈRE 3
--------------------------------------	---------	------------------	-------------------

The combined weight of occupants and cargo should never exceed 390 kg or 860 lbs.
 Le poids total des occupants et du chargement ne doit jamais dépasser 390 kg ou 860 lb.

TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS À FROID
FRONT AVANT	235/45R18	230kPa, 33psi
REAR ARRIÈRE	235/45R18	230kPa, 33psi
SPARE DE SECOURS	T125/80D16	420kPa, 60psi

**SEE OWNER'S
 MANUAL FOR
 ADDITIONAL
 INFORMATION**
**VOIR LE MANUEL
 DE L'USAGER
 POUR PLUS DE
 RENSEIGNEMENTS**

Q31

Figure A5. Tire Placard



Figure A6. Rear View of Principal Other Vehicle (SSV)



Figure A7. Load Frame/Slider of SSV

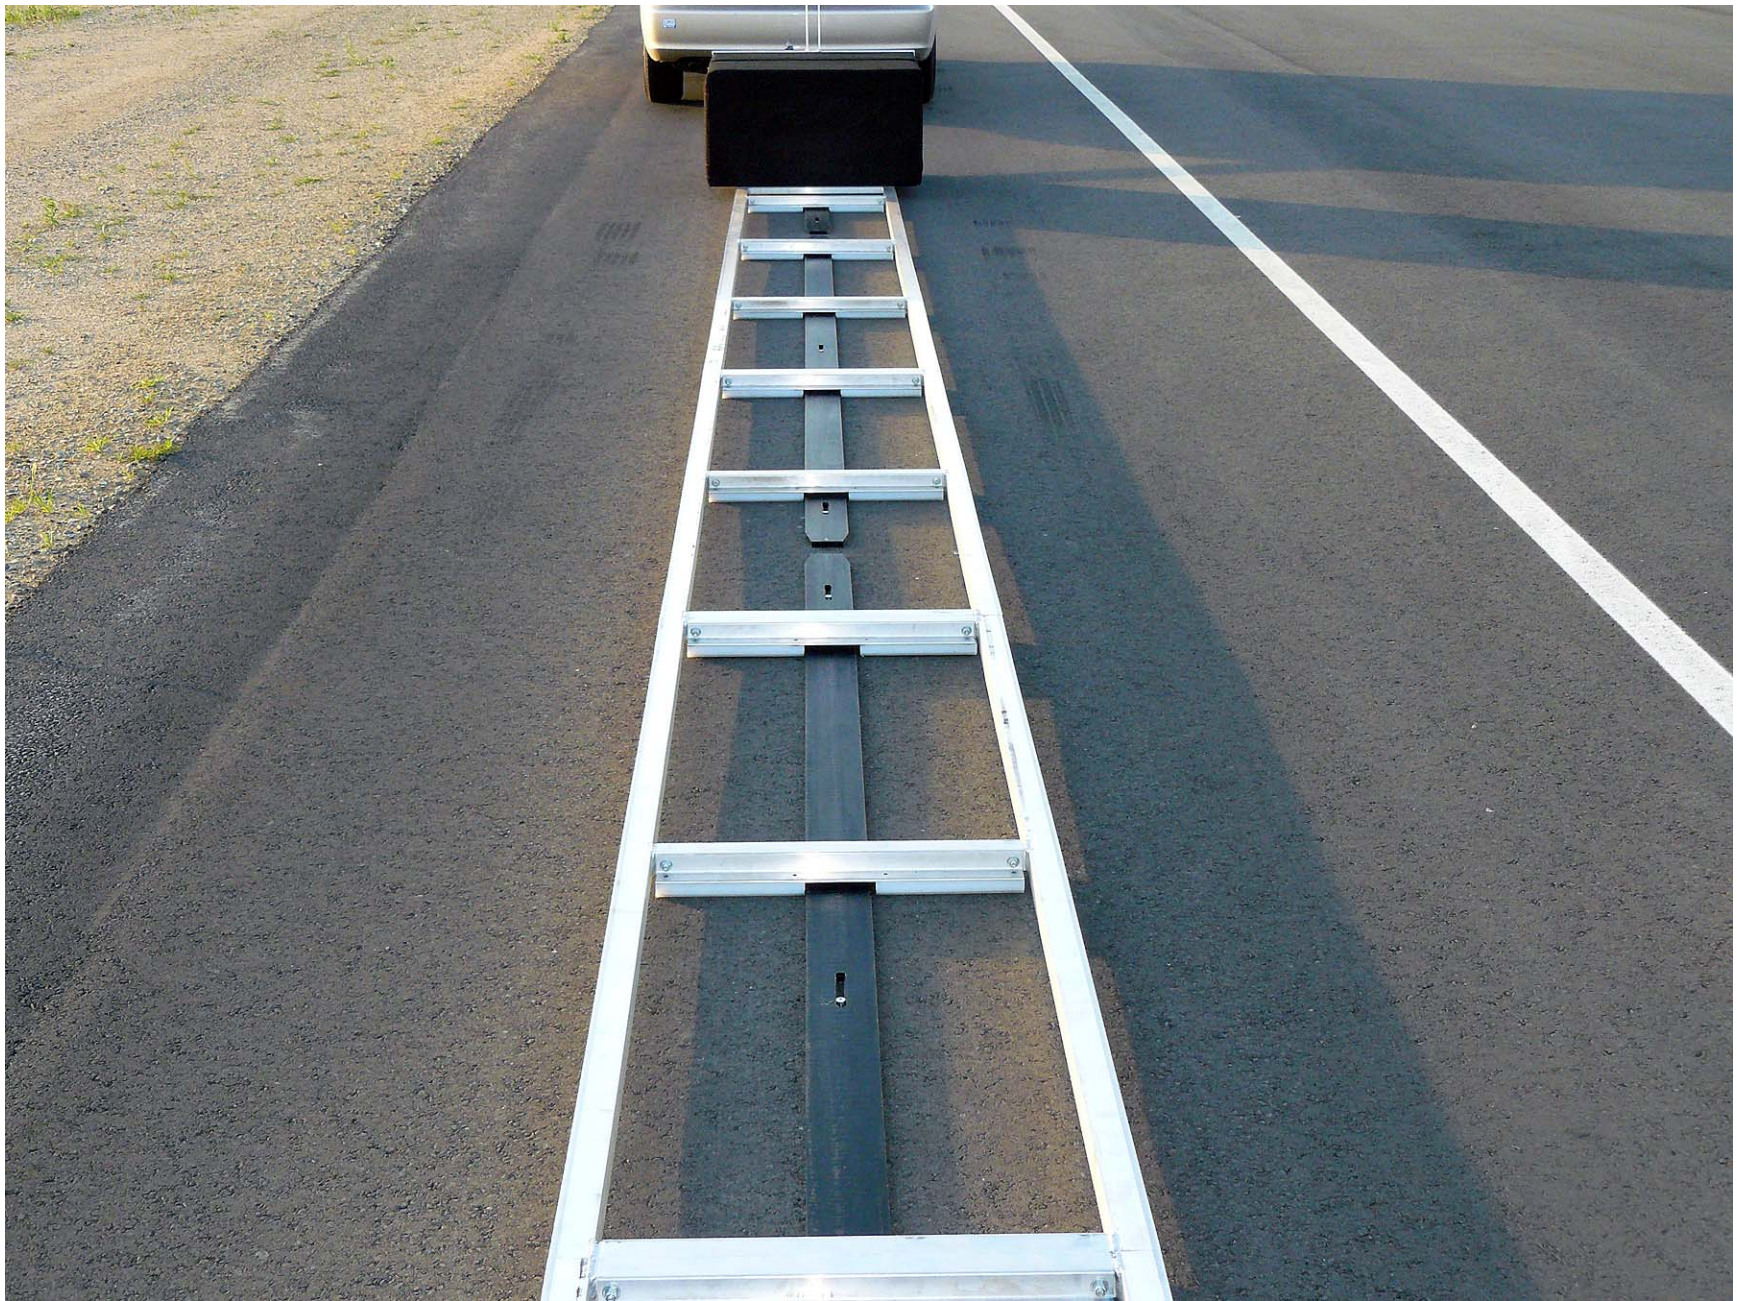


Figure A8. Two-Rail Track and Road-Based Lateral Restraint Track
A-10



Figure A9. Steel Trench Plate
A-11

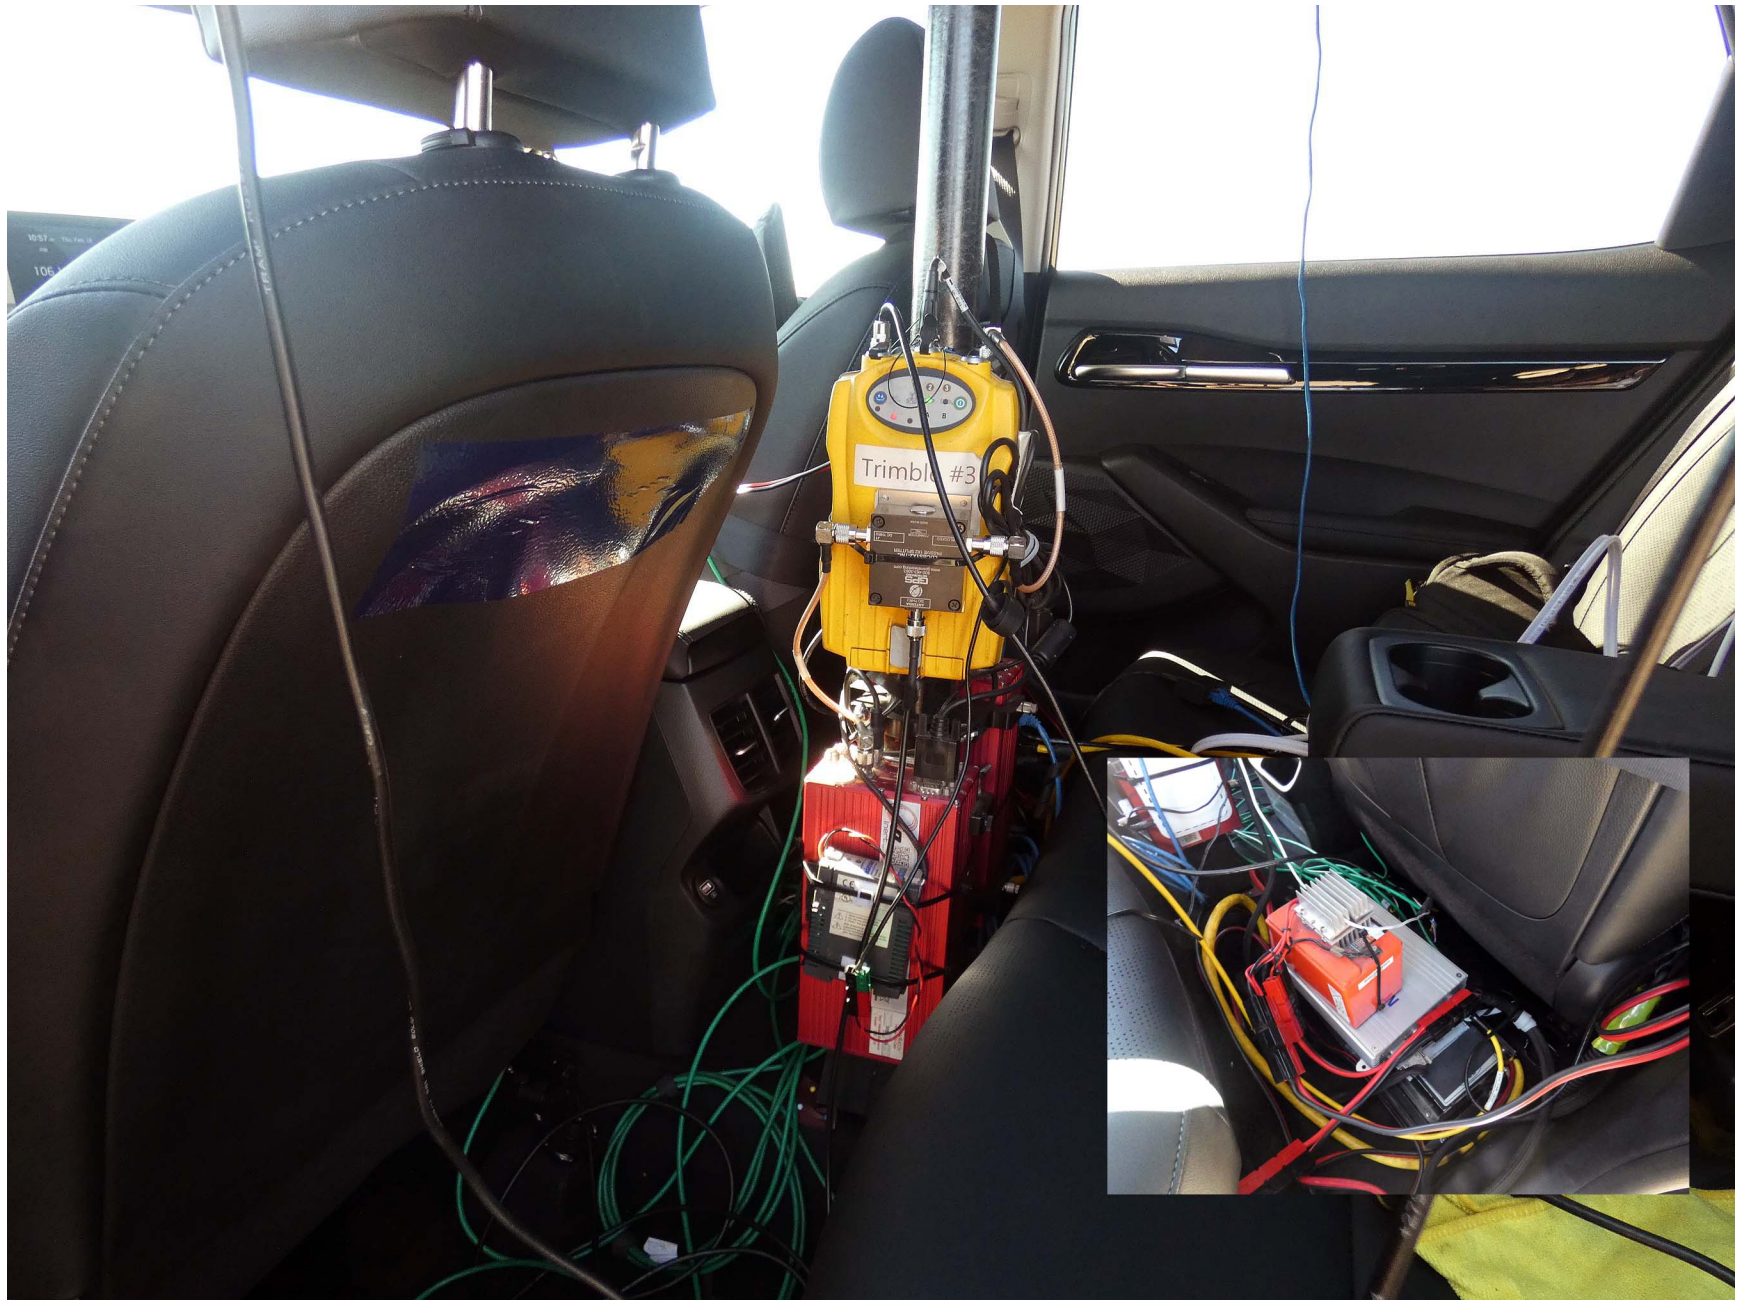


Figure A10. DGPS, Inertial Measurement Unit, and MicroAutoBox Installed in Subject Vehicle



Figure A11. Sensors for Detecting Visual and Auditory Alerts



Figure A12. Computer and Brake Actuator Installed in Subject Vehicle



Figure A13. Brake Actuator Installed in POV System



Figure A14. System Setup Menus (page 1 of 2)



Figure A15. System Setup Menus (page 2 of 2)



Figure A16. Button for Accessing System Setup Menus



Figure A17. Visual Alert
A-19

APPENDIX B

Excerpts from Owner's Manual

1. Head-Up Display (if equipped)

Items	Explanation
Display Height	Adjust the height (1~20) of the HUD image on the HUD screen.
Rotation	Adjust the degree (-5~+5) of the HUD rotation.
Brightness	Adjust the intensity (1~20) of the HUD brightness.
Speed Size	Small/Medium/Large
Speed Color	White/Orange/Green

2. Driver Assistance (if equipped)

Items	Explanation
Driving Assist	<ul style="list-style-type: none"> Highway Driving Assist Highway Auto Curve Zone Slowdown To select the functions.
Warning Timing	<ul style="list-style-type: none"> Normal/Later To select the Warning time
Warning Volume	<ul style="list-style-type: none"> High/Medium/Low To select the Warning volume
Driver Attention Warning	<ul style="list-style-type: none"> Leading vehicle departure alert Inattentive Driving Warning To select the function. * For more details, refer to the "Driver Attention Warning (DAW)" on page 5-145.
Forward Safety	To adjust Forward Collision-Avoidance Assist system. <ul style="list-style-type: none"> Active Assist / Warning Only / Off To select the functions.
Lane Safety	To adjust Lane Keeping Assist system. <ul style="list-style-type: none"> Lane Keeping Assist / Lane Departure Warning / Off To select the functions.
Blind-Spot Safety	To select the functions. <ul style="list-style-type: none"> Safe Exit Assist To adjust Blind-Spot Collision-Avoidance Assist system. <ul style="list-style-type: none"> Active Assist / Warning Only / Off

4

This warning light blinks:


- When there is a malfunction with a LED headlamp related part.

In this case, have your vehicle inspected by an authorized Kia dealer.

▲ CAUTION

LED Headlamp Warning Light

Continuous driving with the LED Headlamp Warning Light on or blinking can reduce LED headlamp (low beam) life.

Forward Collision-Avoidance Assist Warning Light  (if equipped)

This indicator light illuminates:

- Once you set the ignition switch or ENGINE START/STOP button to the ON position.
 - It illuminates for approximately 3 seconds and then goes off.
- When FCA system is turned off.
- When the radar sensor or cover is blocked with dirt or snow. Check the sensor and cover and clean them by using a soft cloth.
- When there is a malfunction with FCA. If this occurs, have your vehicle inspected by an authorized Kia dealer.

* For more details, refer to "Forward Collision-Avoidance Assist (FCA) - front view camera only (if equipped)" on page 5-72.

Electronic Parking Brake (EPB)

warning light  (if equipped)

This warning light illuminates:


- Once you set the ignition switch or ENGINE START/STOP button to the ON position.
 - It illuminates for approximately 3 seconds and then goes off.
- When there is a malfunction with the EPB. In this case, you should have the vehicle inspected by an authorized Kia dealer.



*** NOTICE**

Electronic Parking Brake (EPB) Warning Light

The Electronic Parking Brake (EPB) Warning Light may illuminate when the Electronic Stability Control (ESC) Indicator Light comes on to indicate that the ESC is not working properly (This does not indicate malfunction of the EPB).

Exhaust system (GPF) warning light 

This warning light illuminates:

- When there is a malfunction with Gasoline Particulate Filter (GPF) system.

SPORT mode

SPORT SPORT mode manages the driving dynamics by automatically adjusting the steering effort, and the engine and transmission control logic for enhanced driver performance.

- When SPORT mode is selected by turning the knob, the SPORT indicator (red color) will illuminate.
- Whenever the engine is restarted, the Drive Mode will revert back to NORMAL mode. If SPORT mode is desired, re-select SPORT mode from the knob.
- When SPORT mode is activated:
 - The engine rpm will tend to remain raised over a certain length of time even after releasing the accelerator.
 - Upshifts are delayed when accelerating.

*** NOTICE**

In SPORT mode, the fuel efficiency may decrease.

Forward Collision-Avoidance Assist (FCA) – front view camera only (if equipped)

Forward Collision-Avoidance Assist system is designed to detect and monitor the vehicle ahead or a pedestrian in the roadway through front view camera recognition to warn the driver that a collision is imminent, and if necessary, apply emergency braking.

⚠ WARNING

Take the following precautions when using Forward Collision-Avoidance Assist system:

- This system is only a supplemental system and it is not intended to, nor does it replace the need for extreme care and attention of the driver. The sensing range and objects detectable by the sensors are limited. Pay attention to the road conditions at all times.
- NEVER drive too fast in accordance with the road conditions or while cornering.
- Always drive cautiously to prevent unexpected and sudden situations from occurring. FCA does not stop the vehicle completely and does not avoid all collisions due to system limitations.

System setting and activation

System setting

The driver can activate FCA by placing the ignition switch to the ON position and by selecting on the LCD display:

'User Settings → Driver Assistance → Forward Safety'

- If you select "Active Assist", FCA system activates. FCA produces warning messages and warning alarms in accordance with the collision risk levels. Braking assist will be applied in accordance with the collision risk.
- If you select 'Warning Only', FCA system activates and produces only warning alarms in accordance with the collision risk levels. Braking assist will not be applied in this setting.
- If you select 'Off', FCA system deactivates.



The warning light illuminates on the LCD display, when you cancel FCA system. The driver can monitor FCA ON/OFF status on the LCD display. Also, the warning light illuminates when the ESC (Electronic Stability Control) is turned off. If the warning light remains ON when FCA is activated, you should have the system checked by an authorized Kia dealer.

Setting Warning Timing

The driver can select the initial warning activation time on the LCD display. If your vehicle is equipped with an infotainment system, you can learn how to setup on the website via QR code in the infotainment quick reference guide.

Go to the 'User Settings → Driver Assistance → Warning Timing → Normal/Later'.

The options for the initial Forward Collision Warning includes the following:

- Normal: When this option is selected, the initial Forward Collision Warning is activated sensitively. If you feel the warning activates too early, set Forward Collision Warning to 'Later'. Even though, 'Normal' is selected if the front vehicle suddenly stops the initial warning activation time may not seem fast.
- Later: When this option is selected, the initial Forward Collision Warning is activated later than normal. This setting reduces the amount of distance between the vehicle ahead before the initial warning occurs. Select 'Later' when traffic is light and when driving speed is slow.



*** NOTICE**

If you change the warning timing, the warning time of other systems may change. Always be aware before changing the warning timing.

Prerequisite for activation

FCA gets ready to be activated, when 'Active Assist' or 'Warning Only' under Forward Safety is selected in on the LCD display, and when the following prerequisites are satisfied.

- The ESC (Electronic Stability Control) is on.
- Vehicle speed is over 6 mph (10 km/h). (FCA is only activated within a certain speed range.)
- The system detects a vehicle in front, which may collide with your vehicle. (FCA may not be activated or may sound a warning alarm in accordance with the driving situation or vehicle condition.)

⚠ WARNING

- FCA automatically activates upon placing the ignition switch or START/STOP button to the ON position. The driver can deactivate FCA by canceling the system setting on the LCD display. To avoid driver distractions, do not attempt to set or cancel FCA while driving the vehicle.
- FCA automatically deactivates upon canceling the ESC. When the ESC is canceled, FCA cannot be activated on the LCD display. In this situation, FCA warning light will illuminate, but it does not indicate a malfunction of the system.
- Set or cancel FCA with controlling switches on steering wheel after stopping the vehicle in a safe place for your safety.

FCA warning message and brake control

FCA produces warning messages, and warning alarms in accordance with the collision risk levels, such as abrupt stopping of the vehicle in front, insufficient braking distance, pedestrian detection. Also, it controls the brakes in accordance with the collision risk levels.

Collision Warning (1st warning)



This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

Your vehicle may slow down slightly.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 112 mph (180 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)
- For pedestrians the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 37 mph (60 km/h). (Depending on the condition of pedestrians and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select 'Warning Only', FCA system activates and produces

only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.

Emergency Braking (2nd warning)



This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

The brake control is maximized just before a collision, reducing impact when it strikes a forward vehicle.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 37 mph (60 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)



- For pedestrians, the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 37 mph (60 km/h). (Depending on the condition of pedestrians and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select 'Warning Only', FCA system activates and produces only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.

Brake operation

In an urgent situation, the braking system enters into the ready status for prompt reaction against the driver's depressing the brake pedal.

- FCA provides additional braking power for optimum braking performance, when the driver depresses the brake pedal.
- The braking control is automatically deactivated, when the driver sharply depresses the accelerator pedal, or when the driver abruptly operates the steering wheel.
- FCA brake control is automatically canceled, when risk factors disappear.

⚠ CAUTION

The driver should always use extreme caution when operating the vehicle, even though there is no warning message or warning alarm.

⚠ WARNING

FCA system cannot avoid all collisions nor completely stop the vehicle before collision. The driver is responsible to safely drive and control the vehicle.

⚠ WARNING

FCA system logic operates within certain parameters, such as the distance from the vehicle ahead, the speed of the vehicle ahead, and the driver's vehicle speed. Certain conditions such as inclement weather and road conditions may affect the operation of FCA system.

Never deliberately drive dangerously to activate the system.

FCA sensor (front view camera)


The sensor detects vehicle or pedestrian ahead. In order for FCA system to operate properly, always make sure the sensor cover or sensor is clean and free of dirt, snow, and debris.



Dirt, snow, or foreign substances may adversely affect the sensing performance of the sensor.

Warning message and warning light

Forward Collision-Avoidance Assist (FCA) system disabled. Camera obscured

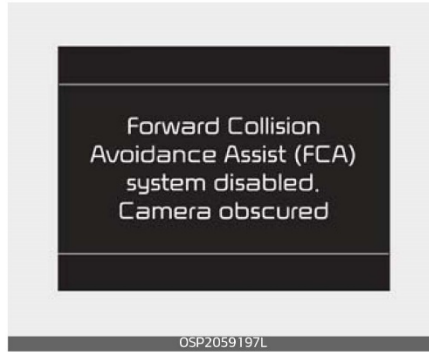

When the camera is blocked with dirt, snow, or debris, FCA system operation may not be able to detect other vehicles.

If this occurs, a warning message will appear on the LCD display.

The system will operate normally when such dirt, snow or debris is removed.

FCA may not properly operate in an area (e.g. open terrain) where any objects or vehicles are not detected after turning on the engine.

Also, even though a warning message does not appear on the LCD display, FCA may not properly operate.

⚠ WARNING

FCA system may not activate without any warning messages depending on driving and road conditions.

*** NOTICE**

- Doing so may adversely affect the sensing performance of the sensor.
- Always keep the sensor clean and free of dirt and debris.
- Be careful not to apply unnecessary force on the sensor. If the sensor is forcibly moved out of proper alignment, FCA system may not operate correctly. In this case, a warning message may not be displayed. In this case, take your vehicle to an authorized Kia dealer and have the system inspected.
- Use only genuine parts to repair or replace a damaged part.
- Do not tint the window or install stickers and/or accessories around the inside mirror where the camera is installed.
- Make sure the front camera installation point does not get wet.
- Do not impact or arbitrarily remove any camera components.
- Do not place reflective objects (white paper or mirror etc.) on the dashboard.

The system may activate unnecessarily due to reflect of the sunlight.

- Excessive audio volume may disturb the sound of the system warning alarm.
- For more precautions related to the camera sensor, refer to the "Lane Keeping Assist (LKA)" on page 5-125.

FCA malfunction

Check Forward Collision-Avoidance Assist system



- When FCA is not working properly, FCA warning light (🚨) will illuminate and the warning message will appear for a few seconds. After the message disappears, the master warning light (⚠) will illuminate. In this case, you should have the vehicle inspected by an authorized Kia dealer.

Driving your vehicle

- FCA warning message may appear along with the illumination of the ESC (Electronic Stability Control) warning light. Both FCA warning light and warning message will disappear once the ESC warning light issue is resolved.

WARNING

- FCA is only a supplemental system for the driver's convenience. It is the driver's responsibility to control the vehicle operation. Do not solely depend on FCA system. Rather, maintain a safe braking distance, and, if necessary, depress the brake pedal to reduce the driving speed or to stop the vehicle.
- In certain instances and under certain driving conditions, FCA system may activate unintentionally. This initial warning message appears on the LCD display with a warning chime. Also, due to sensing limitations, in certain situations, the camera recognition system may not detect the vehicle ahead. FCA system may not activate and the warning message may not be displayed.
- FCA system may not activate if the driver applies the brake pedal before warning to avoid the risk of a collision.

Forward Collision-Avoidance Assist (FCA) – front view camera only

- FCA system does not operate when the vehicle is in reverse.
- FCA system is not designed to detect other objects on the road such as animals.
- FCA system does not detect vehicles in the opposite lane.
- FCA system does not detect cross traffic vehicles that are approaching.
- FCA system cannot detect the driver approaching the side view of a parked vehicle (for example on a dead end street). In these cases, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce the driving speed in order to maintain a safe distance or to stop the vehicle.

Limitations of FCA

Forward Collision-Avoidance Assist system is designed to assist driver in highly dangerous driving situation and has not responsibility to all kind of situations.

FCA System detects driving situations through radar signals and camera recognition and FCA system may not operate normally in driving situation beyond radar signals and camera recognition performance. The driver must pay careful attention in the following situations

Driving your vehicle

where the FCA operation may not be operated properly.

Detecting vehicles

The sensor may be limited when:

- Starting engine or rebooting front camera system wouldn't operate for 15 seconds.
- The camera is blocked with a foreign object or debris
- The camera lens is contaminated due to tinted, filmed or coated windshield, damaged glass, or stuck of foreign matter (sticker, bug, etc.) on the glass
- Inclement weather such as heavy rain or snow obscures the field of view of the camera
- There is interference by electromagnetic waves
- The camera sensor recognition is limited
- The vehicle in front is too small to be detected (for example a motor cycle or bicycle etc.)
- The camera does not recognize the entire vehicle in front.
- The vehicle in front is an oversize vehicle or trailer that is too big to be detected by the camera recognition system (for example a tractor trailer, etc.)
- The camera's field of view is not well illuminated (either too dark or too much reflection or too much backlight that obscures the field of view)

Forward Collision-Avoidance Assist (FCA) – front view camera only

- The vehicle in front does not have their rear lights properly turned ON
- The outside brightness changes suddenly (for example when entering or exiting a tunnel)
- Light coming from a street light or an oncoming vehicle is reflected on a wet road surface such as a puddle in the road
- Backlight is projected in the direction of the vehicle (including opposite vehicle headlights)
- The field of view in front is obstructed by sun glare or head light of oncoming vehicle.
- The windshield glass is fogged up; a clear view of the road is obstructed
- The vehicle in front is driving erratically The vehicle is on unpaved or uneven rough surfaces, or road with sudden gradient changes.
- In case of a vehicle in front is special vehicle, truck and trailer, etc. that contains a irregular form of luggage.
- The vehicle is severely shaken.
- In case of camera sensor recognition is in a marginal state.
- In case of be towed by a trailer or other vehicle.
- In case of interference caused by other electromagnetic waves.
- In case of a vehicle in front is driving erratically.

Driving your vehicle

- In case of a vehicle in front has extremely high ground clearance.
- The vehicle drives inside a building, such as a basement parking lot
- The camera is damaged.
- The brightness outside is too low such as when the headlamps are not on at night or the vehicle is going through a tunnel.
- The shadow is on the road by a median strip, trees, etc.
- The vehicle drives through a toll-gate.
- The rear part of the vehicle in front is not normally visible. (the vehicle turns in other direction or the vehicle is overturned.)
- The adverse road conditions cause excessive vehicle vibrations while driving
- The sensor recognition changes suddenly when passing over a speed bump
- The vehicle in front is moving vertically to the driving direction
- The vehicle in front is stopped vertically
- The vehicle in front is driving towards your vehicle or reversing
- You are on a roundabout and the vehicle in front circles

Forward Collision-Avoidance Assist (FCA) – front view camera only

Detecting pedestrians

The sensor may be limited when:


- The pedestrian is not fully detected by the camera recognition system, for example, if the pedestrian is leaning over or is not fully walking upright.
- The pedestrian is moving very quickly or appears abruptly in the camera detection area
- The pedestrian is wearing clothing that easily blends into the background, making it difficult to be detected by the camera.

Recognition system

- The outside lighting is too bright (e.g. when driving in bright sunlight or in sun glare) or too dark (e.g. when driving on a dark rural road at night)
- It is difficult to detect and distinguish the pedestrian from other objects in the surroundings, for example, when there is a group of pedestrians or a large crowd.
- There is an item similar to a person's body structure.
- The pedestrian is small.
- The pedestrian has impaired mobility. Never try to test the operation
- When the pedestrian suddenly interrupts in front of the vehicle



Driving on a curve

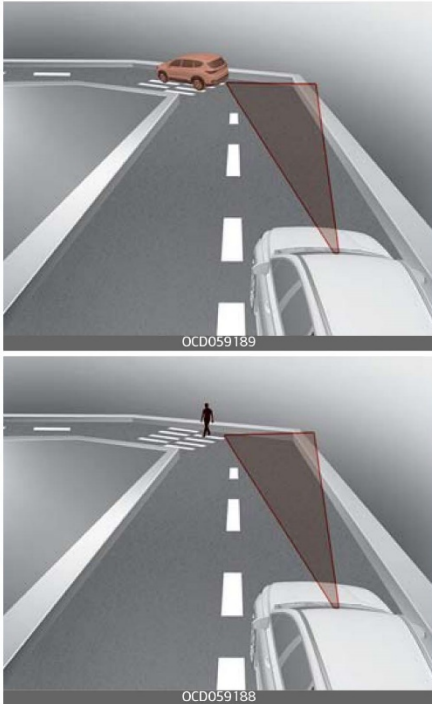


The performance of FCA system may be limited when driving on a curved road.

On curved roads, the other vehicle on the same lane is not recognized and FCA system's performance may be degraded. This may result in unnecessary alarm or braking or no alarm or braking when necessary.

Also, in certain instances the front camera recognition system may not detect the vehicle traveling on a curved road.

In these cases, the driver must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

FCA system may recognize a vehicle in the next lane when driving on a curved road.

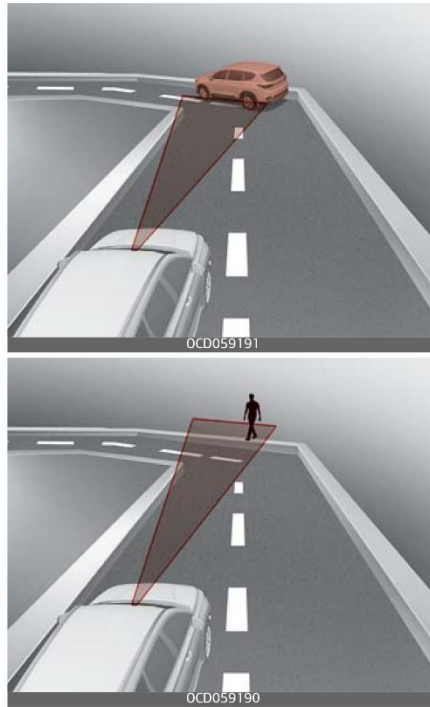

In this case, the system may unnecessarily alarm the driver and apply the brake.

Always pay attention to road and driving conditions, while driving. If necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Driving your vehicle

Also, when necessary depress the accelerator pedal to prevent the system from unnecessarily decelerating your vehicle.

Check to be sure that the road conditions permit safe operation of FCA.

Driving on a slope



The performance of FCA decreases while driving upward or downward on a slope, not recognizing the vehicle in front in the same lane. It may unnecessarily produce the warning message and the warning alarm, or it may not produce the warning


Forward Collision-Avoidance Assist (FCA) – front view camera only

message and the warning alarm at all.

When FCA suddenly recognizes the vehicle in front while passing over a slope, you may experience sharp deceleration.

Always keep your eyes forward while driving upward or downward on a slope, and, if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.


Changing lanes

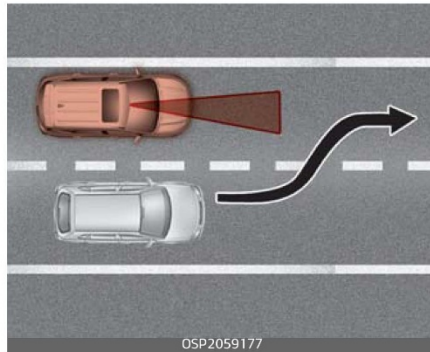

When a vehicle changes lanes in front of you, FCA system may not immediately detect the vehicle, especially if the vehicle changes lanes abruptly. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.




Driving your vehicle

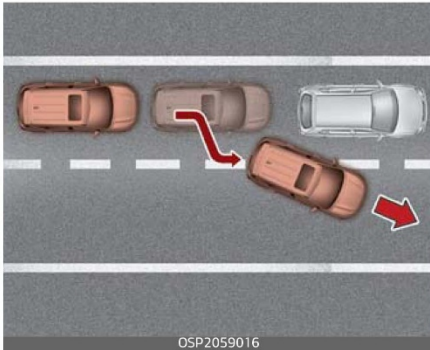

When driving in stop-and-go traffic, and a stopped vehicle in front of you merges out of the lane, FCA system may not immediately detect the new vehicle that is now in front of you. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Recognizing the vehicle

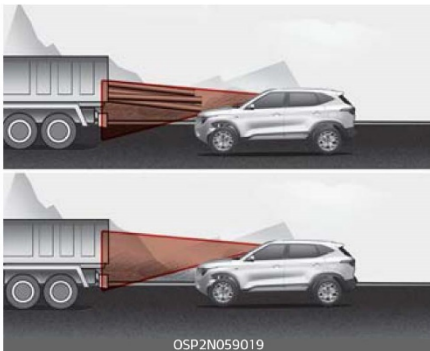

If the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance,

Forward Collision-Avoidance Assist (FCA) – front view camera only

additional special attention is required. FCA system may not be able to detect the cargo extending from the vehicle. In these instances, you must maintain a safe braking distance from the rearmost object, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.

⚠ WARNING

- Do not use Forward Collision-Avoidance Assist system when towing a vehicle. Application of FCA system while towing may adversely affect the safety of your vehicle or the towing vehicle.
- Use extreme caution when the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance.
- Forward Collision-Avoidance Assist may operate when an object, which has similar shape or characteristic to a vehicle or pedestrian, is detected.
- FCA system is designed to detect and monitor the vehicle ahead in the roadway through camera recognition. It is not designed to detect pedestrians, bicycles, motorcycles, or smaller wheeled objects such as luggage bags, shopping carts, or strollers.

Driving your vehicle

- Never try to test the operation of FCA system. Doing so may cause severe injury or death.
- If the front bumper, front glass, or camera have been replaced or repaired, you should have the vehicle inspected by an authorized Kia dealer.

*** NOTICE**

In some instances, FCA system may be canceled when subjected to electromagnetic interference.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following three conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

Forward Collision-Avoidance Assist (FCA) – front view camera only

Radio frequency radiation exposure information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 8 in (20 cm) between the radiator (antenna) and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

5

Forward Collision-Avoidance Assist (FCA) - sensor fusion (if equipped)

Forward Collision-Avoidance Assist system is designed to detect and monitor the vehicle, a pedestrian or a cyclist ahead in the roadway through and front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, apply emergency braking.

WARNING

Forward Collision-Avoidance Assist system Limitations

FCA system is a supplemental system and is not a substitute for safe driving practices.

It is the responsibility of the driver to always check the speed and distance to the vehicle ahead and to be prepared to apply the brakes.

WARNING

Take the following precautions when using Forward Collision-Avoidance Assist system:

- This system is only a supplemental system and it is not intended to, nor does it replace the need for extreme care and attention of the driver. The sensing range and objects detectable by the sensors

are limited. Pay attention to the road conditions at all times.

- NEVER drive too fast in accordance with the road conditions or while cornering.
- Always drive cautiously to prevent unexpected and sudden situations from occurring. FCA does not stop the vehicle completely and does not avoid all collisions due to system limitations.

System setting and activation

System setting

The driver can activate FCA by placing the ignition switch to the ON position and by selecting on the LCD display 'User Settings → Driver Assistance → Forward Safety'. If your vehicle is equipped with an infotainment system, you can learn how to setup on the website via QR code in the infotainment quick reference guide.:

- If you select "Active Assist", FCA system activates. FCA produces warning messages and warning alarms in accordance with the collision risk levels. Also, it controls the brakes in accordance with the collision risk levels.
- If you select "Warning Only", FCA system activates and produces only warning alarms in accordance with the collision risk levels.

You should control the brake directly because FCA system do not control the brake.

- If you select "Off", FCA system deactivates.



The warning light illuminates on the LCD display, when you cancel FCA system. The driver can monitor FCA ON/OFF status on the LCD display. Also, the warning light illuminates when the ESC (Electronic Stability Control) is turned off. If the warning light remains ON when FCA is activated, you should have the vehicle inspected by an authorized Kia dealer.

- The driver can select the initial warning activation time on the LCD display or infotainment system display. Go to the 'User Settings → Driver Assistance → Warning Timing → Normal/Later'.

The options for the initial Forward Collision Warning includes the following:

- Normal: When this condition is selected, the initial Forward Collision Warning is activated sensitively. If you feel the warning activates too early, set Forward Collision Warning to 'Later'. Even though, 'Normal' is selected if the front vehicle suddenly stops the initial warning activation time may not seem fast.

- Later: When this condition is selected, the initial Forward Collision Warning is activated later than normal. This setting reduces the amount of distance between the vehicle or pedestrian ahead before the initial warning occurs. Select 'Later' when traffic is light and when driving speed is slow.
- The driver can select the warning volume of Forward Collision Warning in the User Settings in the LCD display by selecting 'User Settings → Driver Assistance → Warning Volume → High/Medium/Low'.

Prerequisite for activation

FCA gets ready to be activated, when FCA is selected on the LCD display or infotainment system display, and when the following prerequisites are satisfied.

- The ESC (Electronic Stability Control) is on.
- Vehicle speed is over 6 mph (10 km/h). (FCA is only activated within a certain speed range.)
- The system detects a vehicle or pedestrian in front, which may collide with your vehicle. (FCA may not be activated or may sound a warning alarm in accordance with the driving situation or vehicle condition.)

⚠ WARNING

- Completely stop the vehicle on a safe location before operating the switch on the steering wheel to activate/deactivate FCA system.
- FCA automatically activates upon placing the ignition switch to the ON position. The driver can deactivate FCA by canceling the system setting on the LCD display or infotainment system display.
- FCA automatically deactivates upon canceling the ESC (Electronic Stability Control). When the ESC is canceled, FCA cannot be activated on the LCD display or infotainment system display. FCA warning light will illuminate which is normal. At this time, FCA cannot be set even in instrument cluster or infotainment system user setting mode.

FCA warning message and system control

FCA produces warning messages and warning alarms in accordance with the collision risk levels, such as abrupt stopping of the vehicle in front, insufficient braking distance, pedestrian or cyclist (if equipped) detection. Also, it controls the brakes in accordance with the collision risk levels.

The driver can select the initial warning activation time in the User Settings in the LCD display or infotainment system display. The options for the initial Forward Collision Warning include Normal or Late initial warning time.

Collision Warning (1st warning)

This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

The Vehicle may slow down slightly.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 112 mph (180 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)

- For pedestrians and cyclists, the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 53 mph (85 km/h). (Depending on the condition of pedestrians and bike riders and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select "Warning Only", FCA system activates and produces only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.

Emergency Braking (2nd warning)



This warning message appears on the LCD display with a warning chime. Additionally, some vehicle system intervention occurs by the engine management system to help decelerate the vehicle.

The brake control is maximized just before a collision, reducing impact when it strikes a forward vehicle.

- It will operate if the vehicle speed is greater than 6 mph (10 km/h) and less than or equal to 47 mph (75 km/h) on a forward vehicle. (Depending on the condition of the vehicle ahead and the environment surrounding it, the possible maximum operating speed may be reduced.)
- For pedestrians and cyclists, the vehicle speed is greater than or equal to 6 mph (10 km/h) and less than 40 mph (65 km/h). (Depending on the condition of pedestrians and bike riders and the surrounding environment the possible maximum operating speed may be reduced.)
- If you select "Warning Only", FCA system activates and produces only warning alarms in accordance with the collision risk levels. You should control the brake directly because FCA system do not control the brake.



Brake operation

In an urgent situation, the braking system enters into the ready status for prompt reaction against the driver's depressing the brake pedal.

- The braking control is automatically deactivated, when the driver sharply depresses the accelerator pedal, or when the driver abruptly operates the steering wheel.
- FCA brake control is automatically canceled, when risk factors disappear.

CAUTION

- The driver should always use extreme caution while operating the vehicle, whether or not there is a warning message or alarm from FCA system.
- If any other warning sound such as seat belt warning chime is already generated, Forward Collision-Avoidance Assist system warning may not sound.

WARNING

The braking control cannot completely stop the vehicle nor avoid all collisions. The driver should hold the responsibility to safely drive and control the vehicle.

WARNING

FCA system logic operates within certain parameters, such as the distance from the vehicle or pedestrian ahead, the speed of the vehicle ahead, and the driver's vehicle speed. Certain conditions such as inclement weather and road conditions may affect the operation of FCA system.

WARNING

Never deliberately drive dangerously to activate the system.

**FCA sensor (front view camera/
front radar) (if equipped)**

In order for FCA system to operate properly, always make sure the sensor cover or sensor is clean and free of dirt, snow, and debris.

front view camera



front radar



Dirt, snow, or foreign substances on the sensor cover or sensor may adversely affect the sensing performance of the sensor.

*** NOTICE**

- Do not apply license plate molding or foreign objects such as a bumper sticker or a bumper guard near the radar sensor. Doing so may adversely affect the sensing performance of the radar.
- Always keep the radar sensor and cover clean and free of dirt and debris.
- Use only a soft cloth to wash the vehicle. Do not spray pressurized water directly on the sensor or sensor cover.
- Be careful not to apply unnecessary force on the radar sensor or sensor cover. If the sensor is forcibly moved out of proper alignment, FCA system may not operate correctly. In this case, a warning message may not be displayed.

played. You should have the vehicle inspected by an authorized Kia dealer.

- If the front bumper becomes damaged in the area around the radar sensor, FCA system may not operate properly. You should have the vehicle inspected by an authorized Kia dealer.
- Use only genuine parts to repair or replace a damaged sensor or sensor cover. Do not apply paint to the sensor cover.

*** NOTICE**

- NEVER install any accessories or stickers on the front windshield, nor tint the front windshield.
- NEVER locate any reflective objects (i.e. white paper, mirror) over the dashboard. Any light reflection may cause a malfunction of the system.
- Pay extreme caution to keep the camera out of water.
- NEVER disassemble the camera assembly, nor apply any impact on the camera assembly. If the sensor is forcibly moved out of proper alignment, FCA system may not operate correctly. In this case, a warning message may not be displayed. You should have the vehicle inspected by an authorized Kia dealer.



- Playing the vehicle audio system at high volume may offset the system warning sounds.


*** NOTICE**

Have the vehicle inspected by an authorized Kia dealer when:

- The windshield glass is replaced.
- The radar sensor or cover gets damaged or replaced.

Warning message and warning light

Forward Collision-Avoidance Assist (FCA) system disabled. Radar blocked

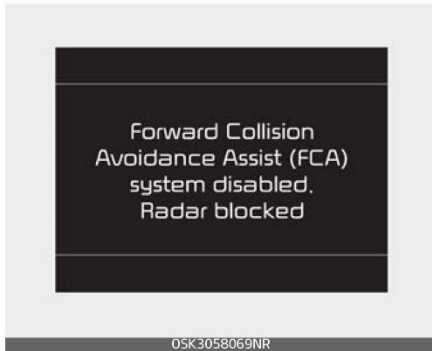

When the sensor cover is blocked with dirt, snow, or debris, FCA system operation may stop temporarily. If this occurs, a warning message will appear on the LCD display.

Remove any dirt, snow, or debris and clean the radar sensor cover before operating FCA system.

The system will operate normally when such dirt, snow or debris is removed.

However FCA may not properly operate in an area (e.g. open terrain), where any substances are not detected after turning ON the engine. Also, even though a warning message does not appear on the LCD display, FCA may not properly operate.

⚠ WARNING

FCA system may not activate according to road conditions, inclement weather, driving conditions or traffic conditions.

System malfunction

Check Forward Collision Avoidance Assist system



- When FCA is not working properly, FCA warning light (⚠) will illuminate and the warning message

will appear for a few seconds. After the message disappears, the master warning light (⚠️) will illuminate. In this case, you should have the vehicle inspected by an authorized Kia dealer.

- FCA warning message may appear along with the illumination of the ESC (Electronic Stability Control) warning light.

⚠️ WARNING

- FCA is only a supplemental system for the driver's convenience. The driver should hold the responsibility to control the vehicle operation. Do not solely depend on FCA system. Rather, maintain a safe braking distance, and, if necessary, depress the brake pedal to reduce the driving speed.
- In certain instances and under certain driving conditions, FCA system may activate unintentionally. This initial warning message appears on the LCD display with a warning chime. Also, in certain instances the camera recognition system or front radar sensor may not detect the vehicle, pedestrian or cyclist (if equipped) ahead. FCA system may not activate and the warning message will not be displayed.
- If the vehicle in front stops suddenly, you may have less control

of the brake system. Therefore, always keep a safe distance between your vehicle and the vehicle in front of you.

- FCA system may activate during braking and the vehicle may stop suddenly, shifting loose objects toward the passengers. Always keep loose objects secured.
- FCA system may not activate if the driver applies the brake pedal to avoid a collision.
- The brake control may be insufficient, possibly causing a collision, if a vehicle in front abruptly stops. Always use extreme caution.
- Occupants may get injured, if the vehicle abruptly stops by the activated FCA system. Use extreme caution.
- FCA system operates only to detect vehicles, pedestrians or cyclists in front of the vehicle.

⚠️ WARNING

- FCA system does not operate when the vehicle is in reverse.
- FCA system is not designed to detect other objects on the road, such as animals.
- FCA system does not detect vehicles in the opposite lane.
- FCA system does not detect cross traffic vehicles that are approaching.
- FCA system cannot detect the driver approaching the side view



of a parked vehicle (for example on a dead end street.)

- FCA system cannot detect the cross traffic cyclist that are approaching.

In these cases, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce the driving speed in order to maintain a safe distance.

Limitations of FCA

Forward Collision-Avoidance Assist system is designed to monitor assist driver in highly dangerous driving situation but does not have responsibility to all kinds of situations. FCA System detects driving situations through camera recognitions and radar signals, and thus, FCA system may not operate normally in driving situation beyond camera recognition performance and radar signals. The driver must pay careful attention in the following situations where FCA operation may not be operated properly.

Detecting vehicles

The sensor may be limited when:


- Starting engine or rebooting front camera system wouldn't operate for 15 seconds.
- Front view camera and front radar contaminated or blocked.
- The system may not work around 15 seconds after starting the vehicle or the initialization or rebooting of the front view camera.
- The front view camera or front radar is blocked with a foreign object or debris
- The camera lens is contaminated due to tinted, filmed or coated windshield, damaged glass, or stuck of foreign matter (sticker, bug, etc.) on the glass
- Inclement weather such as heavy rain or snow obscures the field of view of the front view camera or front radar
- In case of interference caused by other electromagnetic waves.
- The vehicle in front is too small to be detected (for example a motorcycle etc.)
- In case of a vehicle in front is an oversized vehicle or trailer that is too big to be detected by the camera recognition system (for example a tractor, trailer, etc.)
- The camera does not recognize the entire vehicle in front.

- In case of a vehicle in front is driving erratically.
- In case of camera or radar sensor recognition is in a marginal state.
- The camera is damaged.
- The vehicle is severely shaken.
- When backlight is projected in the direction of the vehicle (including opposite vehicle headlights)
- In case of a vehicle in front has extremely high ground clearance.
- In case of being towed by a trailer or other vehicle.
- There is interference by electromagnetic waves.
- There is severe irregular reflection from the radar sensor (for example guardrail or oncoming vehicle, etc.)
- The front view camera or front radar recognition is limited.
- The front view camera does not recognize the entire vehicle in front.
- The front view camera is damaged.
- The brightness outside is too low such as when the headlamps are not on at night or the vehicle is going through a tunnel.
- The shadow is on the road by a median strip, trees, etc.
- The vehicle drives through a toll-gate.
- The rear part of the vehicle in front is not normally visible. (the vehicle turns in other direction or the vehicle is overturned.)
- The vehicle in front is too small to be detected (for example a motorcycle or a bicycle, etc.)
- The vehicle in front is an oversize vehicle or trailer that is too big to be detected by the camera recognition system (for example a tractor trailer, etc.)
- The camera's field of view is not well illuminated (either too dark or too much reflection or too much backlight that obscures the field of view)
- The vehicle in front does not have their rear lights or their rear lights does not turned ON or their rear lights are located unusually.
- The outside brightness changes suddenly, for example when entering or exiting a tunnel
- When light coming from a street light or an oncoming vehicle is reflected on a wet road surface such as a puddle in the road
- The field of view in front is obstructed by sun glare
- The windshield glass is fogged up; a clear view of the road is obstructed
- The vehicle in front is driving erratically
- The vehicle is driven near areas containing metal substances as a construction zone, railroad, etc.
- The vehicle drives inside a building, such as a basement parking lot


Driving your vehicle

- The adverse road conditions cause excessive vehicle vibrations while driving
- The sensor recognition changes suddenly when passing over a speed bump
- The vehicle in front is moving vertically to the driving direction
- The vehicle in front is stopped vertically
- The vehicle in front is driving towards your vehicle or reversing
- You are on a roundabout and the vehicle in front circles

Driving on a curve

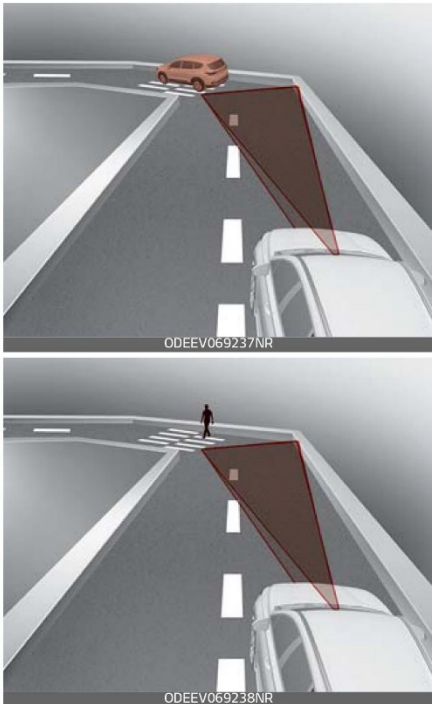

Forward Collision-Avoidance Assist (FCA) – sensor fusion



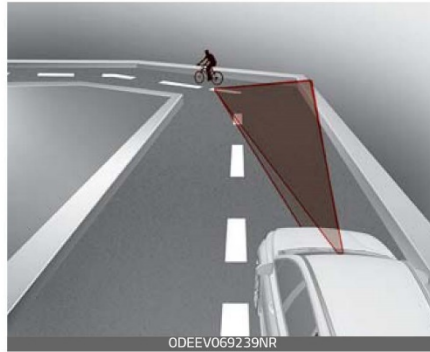


The performance of FCA system may be limited when driving on a curved road.

Also, in certain instances the front radar sensor or front view camera recognition system may not detect the vehicle traveling on a curved road.

In these cases, the driver must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

FCA system may recognize a vehicle in the next lane when driving on a curved road.

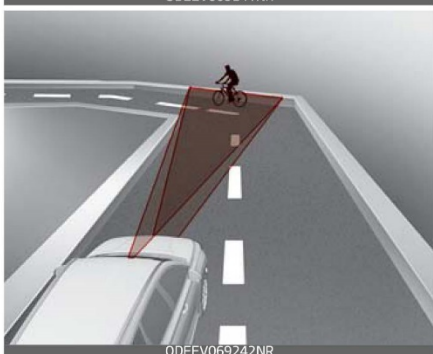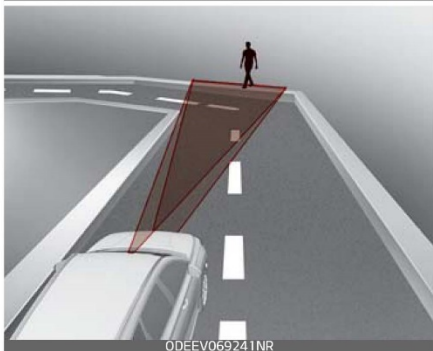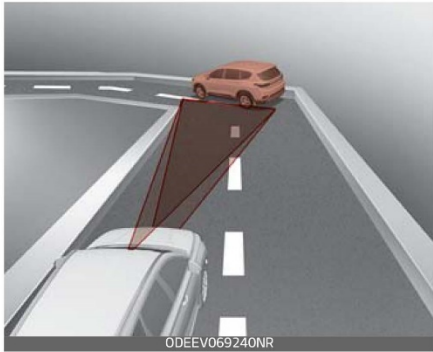


Always pay attention to the road and driving conditions, while driving. If necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Also, when necessary depress the accelerator pedal to prevent the system from unnecessarily decelerating your vehicle.

Check to be sure that the road conditions permit safe operation of FCA.

Driving on a slope

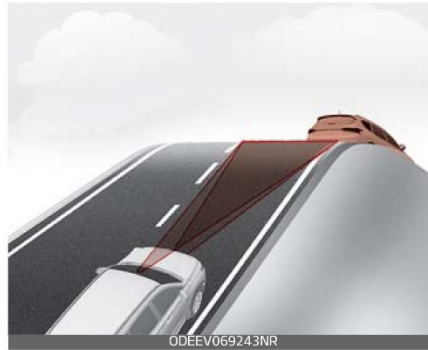

In this case, the system may unnecessarily alarm the driver and apply the brake.






The performance of FCA decreases while driving upward or downward on a slope, as it may not recognize the vehicle in front in the same lane. It may unnecessarily produce the warning message and the warning alarm, or it may not produce the warning message and the warning alarm at all.


When FCA suddenly recognizes the vehicle in front while passing over a slope, you may experience sharp deceleration.

Always keep your eyes forward while driving upward or downward on a slope, and, if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.

Changing lanes

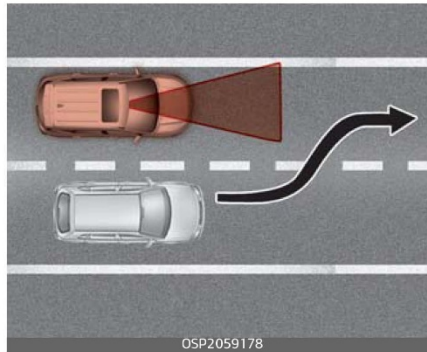


When a vehicle changes lanes in front of you, FCA system may not immediately detect the vehicle, especially if the vehicle changes lanes abruptly. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

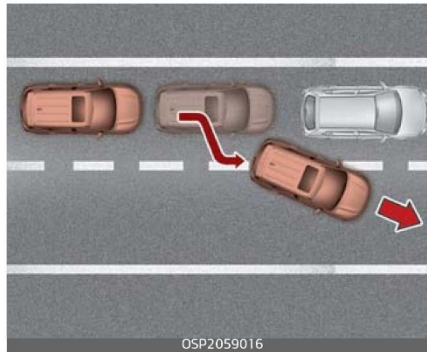

When driving in stop-and-go traffic, and a stopped vehicle in front of you merges out of the lane, FCA system may not immediately detect the new vehicle that is now in front of

you. In this case, you must maintain a safe braking distance, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain a safe distance.

Recognizing the vehicle

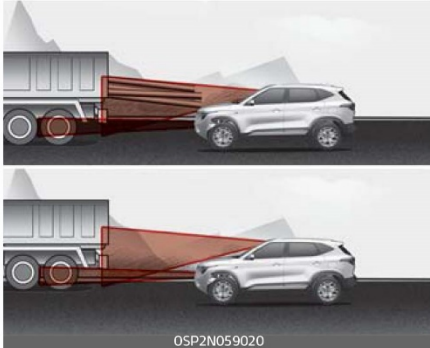

If the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance, additional special attention is required. FCA system may not be able to detect the cargo extending from the vehicle. In these instances, you must maintain a safe braking distance from the rearmost object, and if necessary, depress the brake pedal to reduce your driving speed in order to maintain distance.

Situation in which the system may not detect pedestrian and cyclist properly.

The sensor may be limited when:

- The pedestrians or cyclists are not fully detected by the front view camera recognition system, for example, if the pedestrian is leaning over or is not fully walking upright.
- The pedestrians or cyclists are moving very quickly or appears abruptly in the front view camera detection area.
- The pedestrians or cyclists are wearing clothing that easily blends into the background, making it difficult to be detected by the front view camera recognition system.
- The outside lighting is too bright (e.g. when driving in bright sunlight or in sun glare) or too dark (e.g. when driving on a dark rural road at night).
- It is difficult to detect and distinguish the pedestrians or cyclists from other objects in the surroundings, for example, when there is a group of pedestrians or cyclists or a large crowd.
- There is an item similar to a person's body structure.
- The pedestrians or cyclists are small.
- The pedestrian has impaired mobility.

5

- The sensor recognition is limited
- In case of radar or camera sensor recognition is in a marginal state.
- In case of a large number of pedestrians or cyclists are gathered.
- The radar sensor or front view camera is blocked with a foreign object or debris.
- The camera lens is contaminated due to tinted, filmed or coated windshield, damaged glass, or stuck of foreign matter (sticker, bug, etc.) on the glass.
- The brightness outside is too low such as when the headlamps are not on at night or the vehicle is going through a tunnel.
- Inclement weather such as heavy rain or snow obscures the field of view of the radar sensor or front view camera.
- When light coming from a street light or an oncoming vehicle is reflected on a wet road surface such as a puddle in the road.
- The field of view in front is obstructed by sun glare.
- The windshield glass is fogged up; a clear view of the road is obstructed.
- The adverse road conditions cause excessive vehicle vibrations while driving.
- The sensor recognition changes suddenly when passing over a speed bump.
- You are on a roundabout.
- When the pedestrian or cyclist suddenly interrupts in front of the vehicle.
- When the cyclist in front is riding intersected with the driving direction.
- When there is any other electromagnetic interference.
- When the construction area, rail or other metal object is near the cyclist.
- If the bicycle material is not reflected well on the radar.


WARNING

- Do not use Forward Collision-Avoidance Assist system when towing a vehicle. Application of FCA system while towing may adversely affect the safety of your vehicle or the towing vehicle.
- Use extreme caution when the vehicle in front of you has cargo that extends rearward from the cab, or when the vehicle in front of you has higher ground clearance.
- FCA system is designed to detect and monitor the vehicle ahead or detect a pedestrian or cyclist (if equipped) in the roadway through radar signals and camera recognition. It is not designed to detect bicycles, motorcycles, or smaller wheeled objects, such as luggage bags, shopping carts, or strollers.

- Never try to test the operation of FCA system. Doing so may cause severe injury or death.
- If the front bumper, front glass, front radar or front view camera have been replaced or repaired, you should have the vehicle inspected by an authorized Kia dealer.

*** NOTICE**

In some instances, FCA system may be canceled when subjected to electromagnetic interference.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following three conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

Radio frequency radiation exposure information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 8 in (20 cm) between the radiator (antenna) and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



APPENDIX C

Run Log

Subject Vehicle: **2021 Kia Seltos SX Turbo AWD**

Test Date: **2/19/2021**

Principal Other Vehicle: **SSV**

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
1-16	Brake characterization and determination						See Appendix D
16	Static Run						Zero SV front bumper to SSV rear bumper and collect data
17	Stopped POV	N					GPS
18		Y	2.10	10.30	0.92	Pass	
19		Y	2.09	14.29	1.02	Pass	
20		Y	2.12	14.28	1.01	Pass	
21		Y	2.09	16.32	1.09	Pass	
22		Y	2.09	13.87	1.02	Pass	
23		Y	2.09	15.01	1.05	Pass	
24		Y	2.14	13.44	1.03	Pass	
25	Static Run						Check zero data is within ± 0.167 ft (± 0.05 m)
26	Slower POV, 25 vs 10	Y	1.83	12.76	1.01	Pass	
27		Y	1.85	11.75	1.05	Pass	
28		Y	1.85	12.28	1.01	Pass	
29		Y	1.88	11.39	1.03	Pass	
30		Y	1.88	12.08	1.03	Pass	
31		Y	1.89	10.73	1.05	Pass	
32		Y	1.88	12.79	1.07	Pass	

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
33	Static run						Check zero data is within ± 0.167 ft (± 0.05 m)
34	Slower POV, 45 vs 20	Y	2.32	14.27	0.98	Pass	
35		N					Brake force
36		N					Brake force
37		Y	2.32	14.81	1.02	Pass	
38		Y	2.30	15.79	1.04	Pass	
39		Y	2.36	17.42	1.07	Pass	
40		N					Brake force
41		Y	2.31	17.61	1.08	Pass	
42		Y	2.39	16.96	1.08	Pass	
43		Y	2.36	16.87	1.07	Pass	
44	Static run						Check zero data is within ± 0.167 ft (± 0.05 m)
45	Decelerating POV	Y	1.64	2.70	0.64	Pass	
46		Y	1.64	4.95	0.63	Pass	
47		N					Throttle, headway
48		Y	1.65	3.83	0.64	Pass	
49		Y	1.60	2.83	0.63	Pass	
50		Y	1.60	7.14	0.63	Pass	
51		Y	1.67	2.42	1.09	Pass	
52		Y	1.71	2.62	0.66	Pass	
53	Static run						Check zero data is within ± 0.167 ft (± 0.05 m)

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
54	STP - Static run						Zero SV front bumper to rear edge of steel plate and collect data
55	Baseline, 25	Y			0.50		
56		N					Speed
57		Y			0.49		
58		Y			0.49		
59		Y			0.46		
60		Y			0.48		
61		Y			0.50		
62		Y			0.49		
63	STP - Static run						Check zero data is within ± 0.167 ft (± 0.05 m)
64	Baseline, 45	N					Speed
65		Y			0.50		
66		Y			0.51		
67		Y			0.42		
68		Y			0.50		
69		Y			0.51		
70		Y			0.49		
71		Y			0.51		
72	STP - Static run						Check zero data is within ± 0.167 ft (± 0.05 m)
73		Y			0.51	Pass	

Run	Test Type	Valid Run?	FCW TTC (s)	Minimum Distance (ft)	Peak Deceleration (g)	Pass/Fail	Notes
74	STP False Positive, 25	N					Brake application rate
75		Y			0.52	Pass	
76		Y			0.51	Pass	
77		Y			0.50	Pass	
78		Y			0.50	Pass	
79		Y			0.50	Pass	
80		Y			0.50	Pass	
81	STP - Static run						Check zero data is within ± 0.167 ft (± 0.05 m)
82	STP False Positive, 45	Y			0.44	Pass	
83		N					Throttle
84		Y			0.49	Pass	
85		Y			0.50	Pass	
86		Y			0.47	Pass	
87		Y			0.52	Pass	
88		Y			0.48	Pass	
89	Y			0.52	Pass		
90	STP - Static run						Check zero data is within ± 0.167 ft (± 0.05 m)

APPENDIX D

Brake Characterization

Subject Vehicle: 2021 Kia Seltos SX Turbo AWD

Test Date: 2/19/2021

DBS Initial Brake Characterization				
Run Number	Stroke at 0.4 g (in)	Force at 0.4 g (lb)	Slope	Intercept
1	2.688	15.936	0.461	-0.245
2	2.692	15.657	0.492	-0.279
3	2.820	16.174	0.462	-0.240

DBS Brake Characterization Determination								
Run	DBS Mode	Speed	Valid Run	Average Decel. (g)	0.4 g Stroke Value (in)	0.4 g Force Value (lb)	Stroke/Force Calculator (in)	Notes
4	Displacement	35	Y	0.510	2.73		2.14	
5			Y	0.320	2.20		2.75	
6			Y	0.362	2.45		2.71	
7			Y	0.428	2.60		2.43	
8			Y	0.379	2.50		2.64	
9		25	Y	0.418	2.50		2.39	
10		45	Y	0.387	2.50		2.58	
11	Hybrid	35	Y	0.355	2.50	10.00	11.27	
12			Y	0.427		11.00	10.30	

DBS Brake Characterization Determination								
Run	DBS Mode	Speed	Valid Run	Average Decel. (g)	0.4 g Stroke Value (in)	0.4 g Force Value (lb)	Stroke/Force Calculator (in)	Notes
13	Hybrid		Y	0.407		10.50	10.32	
14		25	Y	0.411		10.50	10.22	
15		45	Y	0.418		10.50	10.05	

Appendix E

TIME HISTORY PLOTS

LIST OF FIGURES

	Page
Figure E1. Example Time History for Stopped POV, Passing	E-11
Figure E2. Example Time History for Slower POV 25 vs. 10, Passing	E-12
Figure E3. Example Time History for Slower POV 45 vs. 20, Passing	E-13
Figure E4. Example Time History for Decelerating POV 35, Passing	E-14
Figure E5. Example Time History for False Positive Baseline 25	E-15
Figure E6. Example Time History for False Positive Baseline 45	E-16
Figure E7. Example Time History for False Positive Steel Plate 25, Passing	E-17
Figure E8. Example Time History for False Positive Steel Plate 45, Passing	E-18
Figure E9. Example Time History for DBS Brake Characterization, Passing	E-19
Figure E10. Example Time History Displaying Invalid POV Acceleration Criteria	E-20
Figure E11. Example Time History Displaying Invalid Brake Force Criteria	E-21
Figure E12. Example Time History for a Failed Run	E-22
Figure E13. Time History for DBS Run 18, SV Encounters Stopped POV	E-23
Figure E14. Time History for DBS Run 19, SV Encounters Stopped POV	E-24
Figure E15. Time History for DBS Run 20, SV Encounters Stopped POV	E-25
Figure E16. Time History for DBS Run 21, SV Encounters Stopped POV	E-26
Figure E17. Time History for DBS Run 22, SV Encounters Stopped POV	E-27
Figure E18. Time History for DBS Run 23, SV Encounters Stopped POV	E-28
Figure E19. Time History for DBS Run 24, SV Encounters Stopped POV	E-29
Figure E20. Time History for DBS Run 26, SV Encounters Slower POV, SV 25 mph, POV 10 mph	E-30
Figure E21. Time History for DBS Run 27, SV Encounters Slower POV, SV 25 mph, POV 10 mph	E-31
Figure E22. Time History for DBS Run 28, SV Encounters Slower POV, SV 25 mph, POV 10 mph	E-32
Figure E23. Time History for DBS Run 29, SV Encounters Slower POV, SV 25 mph, POV 10 mph	E-33
Figure E24. Time History for DBS Run 30, SV Encounters Slower POV, SV 25 mph, POV 10 mph	E-34
Figure E25. Time History for DBS Run 31, SV Encounters Slower POV, SV 25 mph, POV 10 mph	E-35
Figure E26. Time History for DBS Run 32, SV Encounters Slower POV, SV 25 mph, POV 10 mph	E-36
Figure E27. Time History for DBS Run 34, SV Encounters Slower POV, SV 45 mph, POV 20 mph	E-37
Figure E28. Time History for DBS Run 37, SV Encounters Slower POV, SV 45 mph, POV 20 mph	E-38
Figure E29. Time History for DBS Run 38, SV Encounters Slower POV, SV 45 mph, POV 20 mph	E-39
Figure E30. Time History for DBS Run 39, SV Encounters Slower POV, SV 45 mph, POV 20 mph	E-40

Figure E31. Time History for DBS Run 41, SV Encounters Slower POV, SV 45 mph, POV 20 mph	E-41
Figure E32. Time History for DBS Run 42, SV Encounters Slower POV, SV 45 mph, POV 20 mph	E-42
Figure E33. Time History for DBS Run 43, SV Encounters Slower POV, SV 45 mph, POV 20 mph	E-43
Figure E34. Time History for DBS Run 45, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph	E-44
Figure E35. Time History for DBS Run 46, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph	E-45
Figure E36. Time History for DBS Run 48, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph	E-46
Figure E37. Time History for DBS Run 49, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph	E-47
Figure E38. Time History for DBS Run 50, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph	E-48
Figure E39. Time History for DBS Run 51, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph	E-49
Figure E40. Time History for DBS Run 52, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph	E-50
Figure E41. Time History for DBS Run 55, False Positive Baseline, SV 25 mph	E-51
Figure E42. Time History for DBS Run 57, False Positive Baseline, SV 25 mph	E-52
Figure E43. Time History for DBS Run 58, False Positive Baseline, SV 25 mph	E-53
Figure E44. Time History for DBS Run 59, False Positive Baseline, SV 25 mph	E-54
Figure E45. Time History for DBS Run 60, False Positive Baseline, SV 25 mph	E-55
Figure E46. Time History for DBS Run 61, False Positive Baseline, SV 25 mph	E-56
Figure E47. Time History for DBS Run 62, False Positive Baseline, SV 25 mph	E-57
Figure E48. Time History for DBS Run 65, False Positive Baseline, SV 45 mph	E-58
Figure E49. Time History for DBS Run 66, False Positive Baseline, SV 45 mph	E-59
Figure E50. Time History for DBS Run 67, False Positive Baseline, SV 45 mph	E-60
Figure E51. Time History for DBS Run 68, False Positive Baseline, SV 45 mph	E-61
Figure E52. Time History for DBS Run 69, False Positive Baseline, SV 45 mph	E-62
Figure E53. Time History for DBS Run 70, False Positive Baseline, SV 45 mph	E-63
Figure E54. Time History for DBS Run 71, False Positive Baseline, SV 45 mph	E-64
Figure E55. Time History for DBS Run 73, SV Encounters Steel Trench Plate, SV 25 mph	E-65
Figure E56. Time History for DBS Run 75, SV Encounters Steel Trench Plate, SV 25 mph	E-66
Figure E57. Time History for DBS Run 76, SV Encounters Steel Trench Plate, SV 25 mph	E-67
Figure E58. Time History for DBS Run 77, SV Encounters Steel Trench Plate, SV 25 mph	E-68
Figure E59. Time History for DBS Run 78, SV Encounters Steel Trench Plate, SV 25 mph	E-69
Figure E60. Time History for DBS Run 79, SV Encounters Steel Trench Plate, SV 25 mph	E-70

Figure E61.	Time History for DBS Run 80, SV Encounters Steel Trench Plate, SV 25 mph	E-71
Figure E62.	Time History for DBS Run 82, SV Encounters Steel Trench Plate, SV 45 mph	E-72
Figure E63.	Time History for DBS Run 84, SV Encounters Steel Trench Plate, SV 45 mph	E-73
Figure E64.	Time History for DBS Run 85, SV Encounters Steel Trench Plate, SV 45 mph	E-74
Figure E65.	Time History for DBS Run 86, SV Encounters Steel Trench Plate, SV 45 mph	E-75
Figure E66.	Time History for DBS Run 87, SV Encounters Steel Trench Plate, SV 45 mph	E-76
Figure E67.	Time History for DBS Run 88, SV Encounters Steel Trench Plate, SV 45 mph	E-77
Figure E68.	Time History for DBS Run 89, SV Encounters Steel Trench Plate, SV 45 mph	E-78
Figure E69.	Time History for DBS Run 1, Brake Characterization Initial	E-79
Figure E70.	Time History for DBS Run 2, Brake Characterization Initial	E-80
Figure E71.	Time History for DBS Run 3, Brake Characterization Initial	E-81
Figure E72.	Time History for DBS Run 4, Brake Characterization Determination, Displacement Mode, 35 mph	E-82
Figure E73.	Time History for DBS Run 5, Brake Characterization Determination, Displacement Mode, 35 mph	E-83
Figure E74.	Time History for DBS Run 6, Brake Characterization Determination, Displacement Mode, 35 mph	E-84
Figure E75.	Time History for DBS Run 7, Brake Characterization Determination, Displacement Mode, 35 mph	E-85
Figure E76.	Time History for DBS Run 8, Brake Characterization Determination, Displacement Mode, 35 mph	E-86
Figure E77.	Time History for DBS Run 9, Brake Characterization Determination, Displacement Mode, 25 mph	E-87
Figure E78.	Time History for DBS Run 10, Brake Characterization Determination, Displacement Mode, 45 mph	E-88
Figure E79.	Time History for DBS Run 11, Brake Characterization Determination, Hybrid Mode, 35 mph	E-89
Figure E80.	Time History for DBS Run 12, Brake Characterization Determination, Hybrid Mode, 35 mph	E-90
Figure E81.	Time History for DBS Run 13, Brake Characterization Determination, Hybrid Mode, 35 mph	E-91
Figure E82.	Time History for DBS Run 14, Brake Characterization Determination, Hybrid Mode, 25 mph	E-92
Figure E83.	Time History for DBS Run 15, Brake Characterization Determination, Hybrid Mode, 45 mph	E-93

Description of Time History Plots

A set of time history plots is provided for each valid run in the test series. Each set of plots comprises time varying data from both the Subject Vehicle (SV) and the Principal Other Vehicle (POV), as well as pass/fail envelopes and thresholds. Plots shown herein are grouped by test type and are presented sequentially within a given test type. The following is a description of data types shown in the time history plots, as well as a description of the color code indicating to which vehicle the data pertain.

Time History Plot Description

Each time history plot consists of data relevant to the test type under consideration, and therefore the data channels plotted vary according to test type. The test types (shown in the plot titles) include:

- Stopped POV (SV at 25 mph)
- Slower POV, 25/10 (SV at 25 mph, POV at 10 mph)
- Slower POV, 45/20 (SV at 45 mph, POV at 20 mph)
- Decelerating POV 35 mph (Both vehicles at 35 mph with 13.8 m gap, POV brakes at 0.3 g)
- False Positive Baseline 25 mph (Baseline run at 25 mph)
- False Positive Baseline 45 mph (Baseline run at 45 mph)
- False Positive STP 25 mph (Steel trench plate run over at 25 mph)
- False Positive STP 45 mph (Steel trench plate run over at 45 mph)
- DBS Brake Characterization Initial
- DBS Brake Characterization Determination

Time history figures include the following sub-plots:

- FCW Warning – Displays the Forward Collision Warning alert (which can be auditory, visual, or haptic). Depending on the type of FCW alert or instrumentation used to measure the alert, this can be any combination of the following:
 - Filtered, rectified, and normalized sound signal. The vertical scale is 0 to 1.
 - Filtered, rectified, and normalized acceleration (i.e., haptic alert, such as steering wheel vibration). The vertical scale is 0 to 1.
 - Normalized light sensor signal. The vertical scale is 0 to 1.

As only the auditory or haptic alert is perceptible by the driver during a test run, the earliest of either of these alerts is used to define the onset of the FCW alert. A vertical black bar on the plot indicates the TTC (sec) at the first moment of the warning issued by the FCW system. The FCW TTC is displayed to the right of the subplot in green.

- Headway (ft) – Longitudinal separation between the front-most point of the Subject Vehicle and the rearmost point of the Strikeable Surrogate Vehicle (SSV) towed by the Principal Other Vehicle. The minimum headway during the run is displayed to the right of the subplot.
- SV/POV Speed (mph) – Speed of the Subject Vehicle and the Principal Other Vehicle (if any). For DBS tests, in the case of an impact, the speed reduction experienced by the Subject Vehicle up until the moment of impact is displayed to the right of the subplot.
- Yaw Rate (deg/sec) – Yaw rate of the Subject Vehicle and Principal Other Vehicle (if any).
- Lateral Offset (ft) – Lateral offset within the lane of the Subject Vehicle to the center of the lane of travel. Note that for tests involving the Strikeable Surrogate Vehicle (SSV), the associated lateral restraint track is defined to be the center of the lane of travel. If testing is done with a different POV which does not have a lateral restraint track, lateral offset is defined to be the lateral offset between the SV and POV.
- Ax (g) – Longitudinal acceleration of the Subject Vehicle and Principal Other Vehicle (if any). The peak value of Ax for the SV is shown on the subplot.
- Pedal Position – Position of the accelerator pedal and brake pedal. The units for the brake pedal are inches and the units for the accelerator pedal are percent of full scale divided by 10.
- Brake Force (lb) – Force on the brake pedal as applied by the DBS controller. The TTC at the onset of the brake by the DBS controller is shown on the subplot. Additionally, the average force at the brake pedal while the DBS controller is active is displayed.

Envelopes and Thresholds

Some of the time history plot figures contain either green or yellow envelopes and/or black or red threshold lines. These envelopes and thresholds are used to programmatically and visually determine the validity of a given test run. Envelope and threshold exceedances are indicated with either red shading or red asterisks, and red text is placed to the right side of the plot indicating the type of exceedance. Such exceedances indicate either that the test was invalid or that the requirements of the test were not met (i.e., failure of the AEB system).

For plots with green envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope boundaries at any time within the envelope. Exceedances of a green envelope are indicated by red shading in the area between the measured time-varying data and the envelope boundaries.

With the exception of the brake force plots (see description below), for plots with yellow envelopes, in order for the test to be valid, the time-varying data must not exceed the envelope at the beginning (left edge of the boundary) and/or end (right edge), but may exceed the boundary during the time between the left and right edges. Exceedances at the left or right extent of a yellow envelope are indicated by red asterisks.

For the headway plot, a dashed black threshold line indicating a relative headway of zero is given. If no impact occurs, a green circle is displayed at the moment of minimum distance. If impact occurs, a red asterisk is displayed at the moment of impact.

For the Ax plot, if the scenario is an AEB brake to stop scenario, a vertical dashed black line is displayed for all plots indicating the moment of first POV braking. The yellow envelope in this case is relevant to the POV braking only. The left edge of the envelope is at 1.5 seconds after the first POV braking. A solid black threshold line extends horizontally 0.5 seconds to the left of the envelope. This threshold line represents the time during which the Ax of the Principal Other Vehicle must first achieve 0.27 g (the upper edge of the envelope, i.e., $0.30 \text{ g} \pm 0.03 \text{ g}$). A green circle or red asterisk is displayed at the moment the POV brake level achieves 0.27 g. A green circle indicates that the test was valid (the threshold was crossed during the appropriate interval) and a red asterisk indicates that the test was invalid (the threshold was crossed out of the appropriate interval).

For the pedal position plot, a thick black bar appears on the brake pedal position data over the DBS controller brake onset period to signify the time over which the brake application rate is determined. The calculated brake application rate is also displayed on the figure.

For the brake force plots:

- If the tests are done in Hybrid mode, the brake force plot shows a dashed black threshold line indicating a brake force of 2.5 lbs. For the time period where the DBS controller is active, the brake force at the pedal must not fall below this 2.5 lb threshold. Exceedances of this threshold are indicated by red shading in the area between the measured time-varying data and the dashed threshold line. A blue envelope represents the target average brake force necessary to be valid
- If the tests are done in Displacement mode, there are no relevant brake force level thresholds or average brake force calculations.

In the instance of the “last second” braking applied by the brake robot, a thick vertical red line will appear on the plots at the moment the brake robot activates. Note that last second braking is only done when it has been determined by the onboard computer that test failure cannot be avoided. It is done simply to reduce the collision speed in order to minimize the likelihood of damage to the SSV and to the Subject Vehicle. Therefore, data validity checks are not performed after the red line, and certain values, such as minimum distance or peak deceleration, may not be accurate.

Color Codes

Color codes have been adopted to easily identify which data correspond to which vehicle, as well as to indicate the types of envelopes and thresholds used in the plots.

Color codes can be broken into four categories:

1. Time-varying data
2. Validation envelopes and thresholds
3. Individual data points
4. Text

1. Time-varying data color codes:

- Blue = Subject Vehicle data
- Magenta = Principal Other Vehicle data
- Brown = Relative data between SV and POV (i.e., TTC, lateral offset and headway distance)

2. Validation envelope and threshold color codes:

- Green envelope = time varying data must be within the envelope at all times in order to be valid
- Yellow envelope = time varying data must be within limits at left and/or right ends
- Blue envelope = visualized target range for the time varying data averaged over a period equal to the length of the envelope
- Black threshold (Solid) = time varying data must cross this threshold in the time period shown in order to be valid
- Black threshold (Dashed) = for reference only – this can include warning level thresholds, TTC thresholds, and acceleration thresholds.
- Red threshold (Solid) = for reference only – indicates the activation of last-minute braking by the brake robot. Data after the solid red line is not used to determine test validity.

3. Individual data point color codes:

- Green circle = passing or valid value at a given moment in time
- Red asterisk = failing or invalid value at a given moment in time

4. Text color codes:

- Green = passing or valid value
- Red = failing or invalid value

Other Notations

- NG – Indicates that the value for that variable was outside of bounds and therefore “No Good”.
- No Wng – No warning was detected.
- POV – Indicates that the value for the Principal Other Vehicle was out of bounds.
- SV – Indicates that the value for the Subject Vehicle was out of bounds.
- SR – Shows the speed reduction value.
- Thr – Indicates that the requirements for the throttle were not met.

The minimum (worst) GPS fix type is displayed in the lower right corner of each page. The only valid fix type is RTK fixed (displayed in green). If the fix type during any portion of the test was anything other than RTK fixed, then “RTK Fixed OR LESS!!” is displayed in red.

Examples of valid or passing time history plots for each test type (including passing, failing, and invalid runs) are shown in Figures E1 through E12. Figures E1 through E8 show passing runs for each of the 8 test types. Figure E9 shows an example of a passing brake characterization run. Figures E10 and E11 show examples of invalid runs. Figure E12 shows an example of a valid test that failed the DBS requirements. Time history data plots for the tests of the vehicle under consideration herein are provided beginning with Figure E13.

Notes

For valid runs, plots are shown for all warning types. In some cases, one of the plots may indicate that a run was invalid, but if the run was valid for either warning type it is considered valid. The companion plots are shown for the sake of completeness.

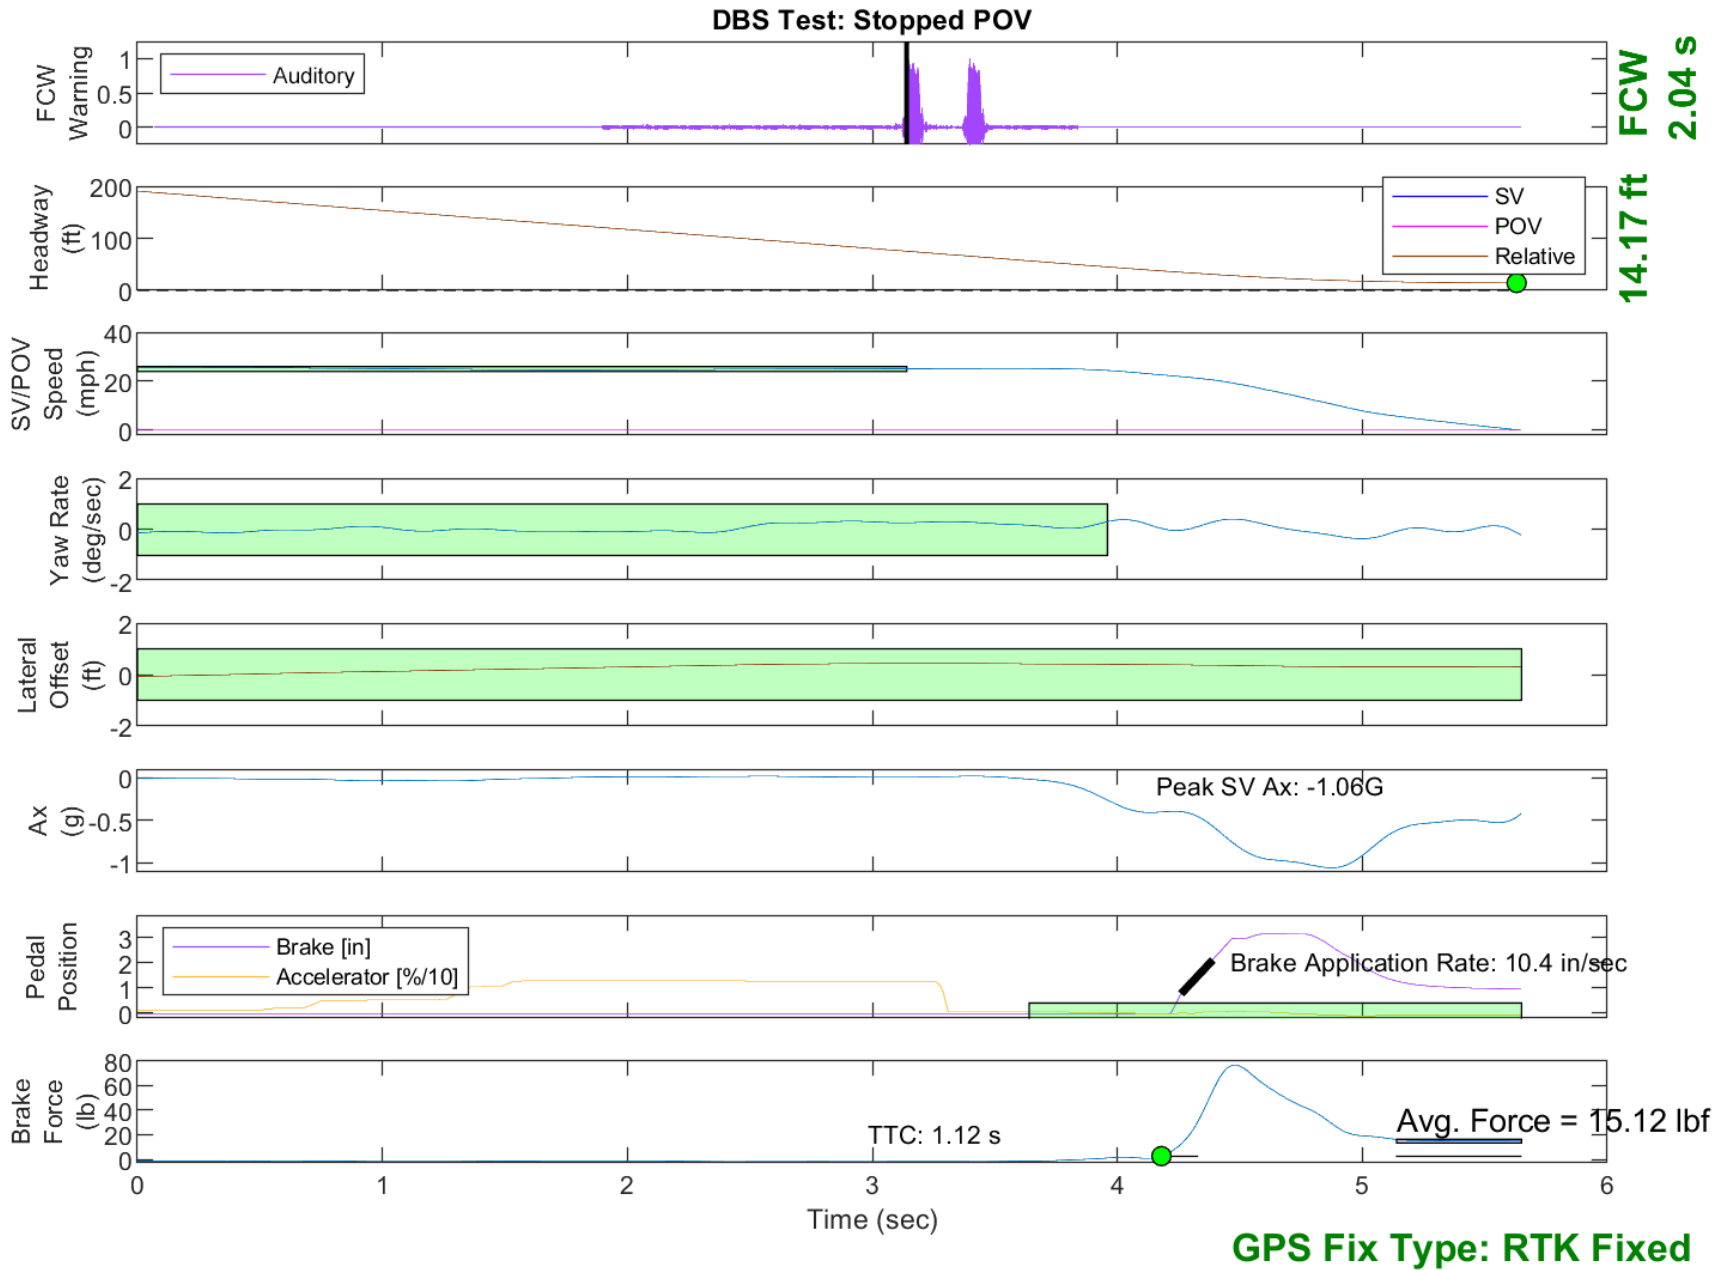


Figure E1. Example Time History for Stopped POV, Passing

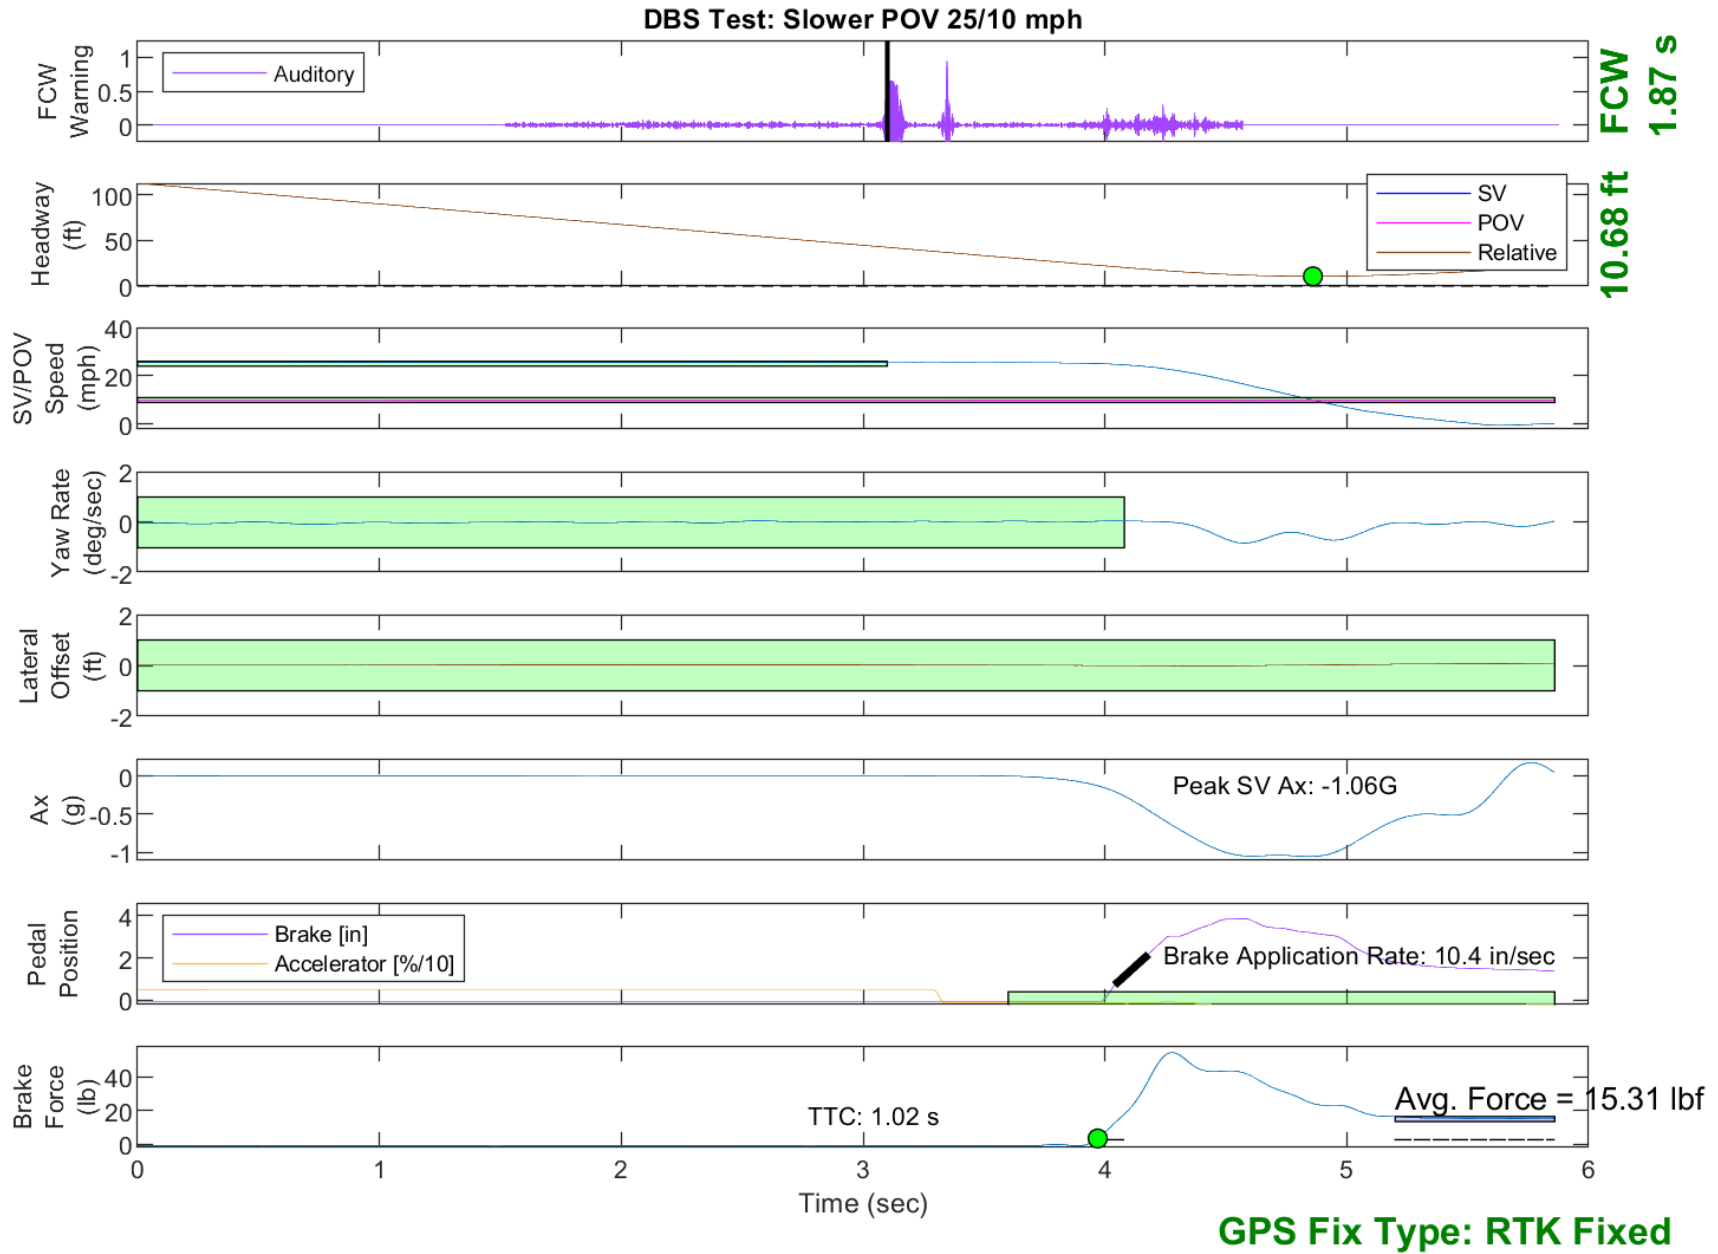


Figure E2. Example Time History for Slower POV 25 vs. 10, Passing

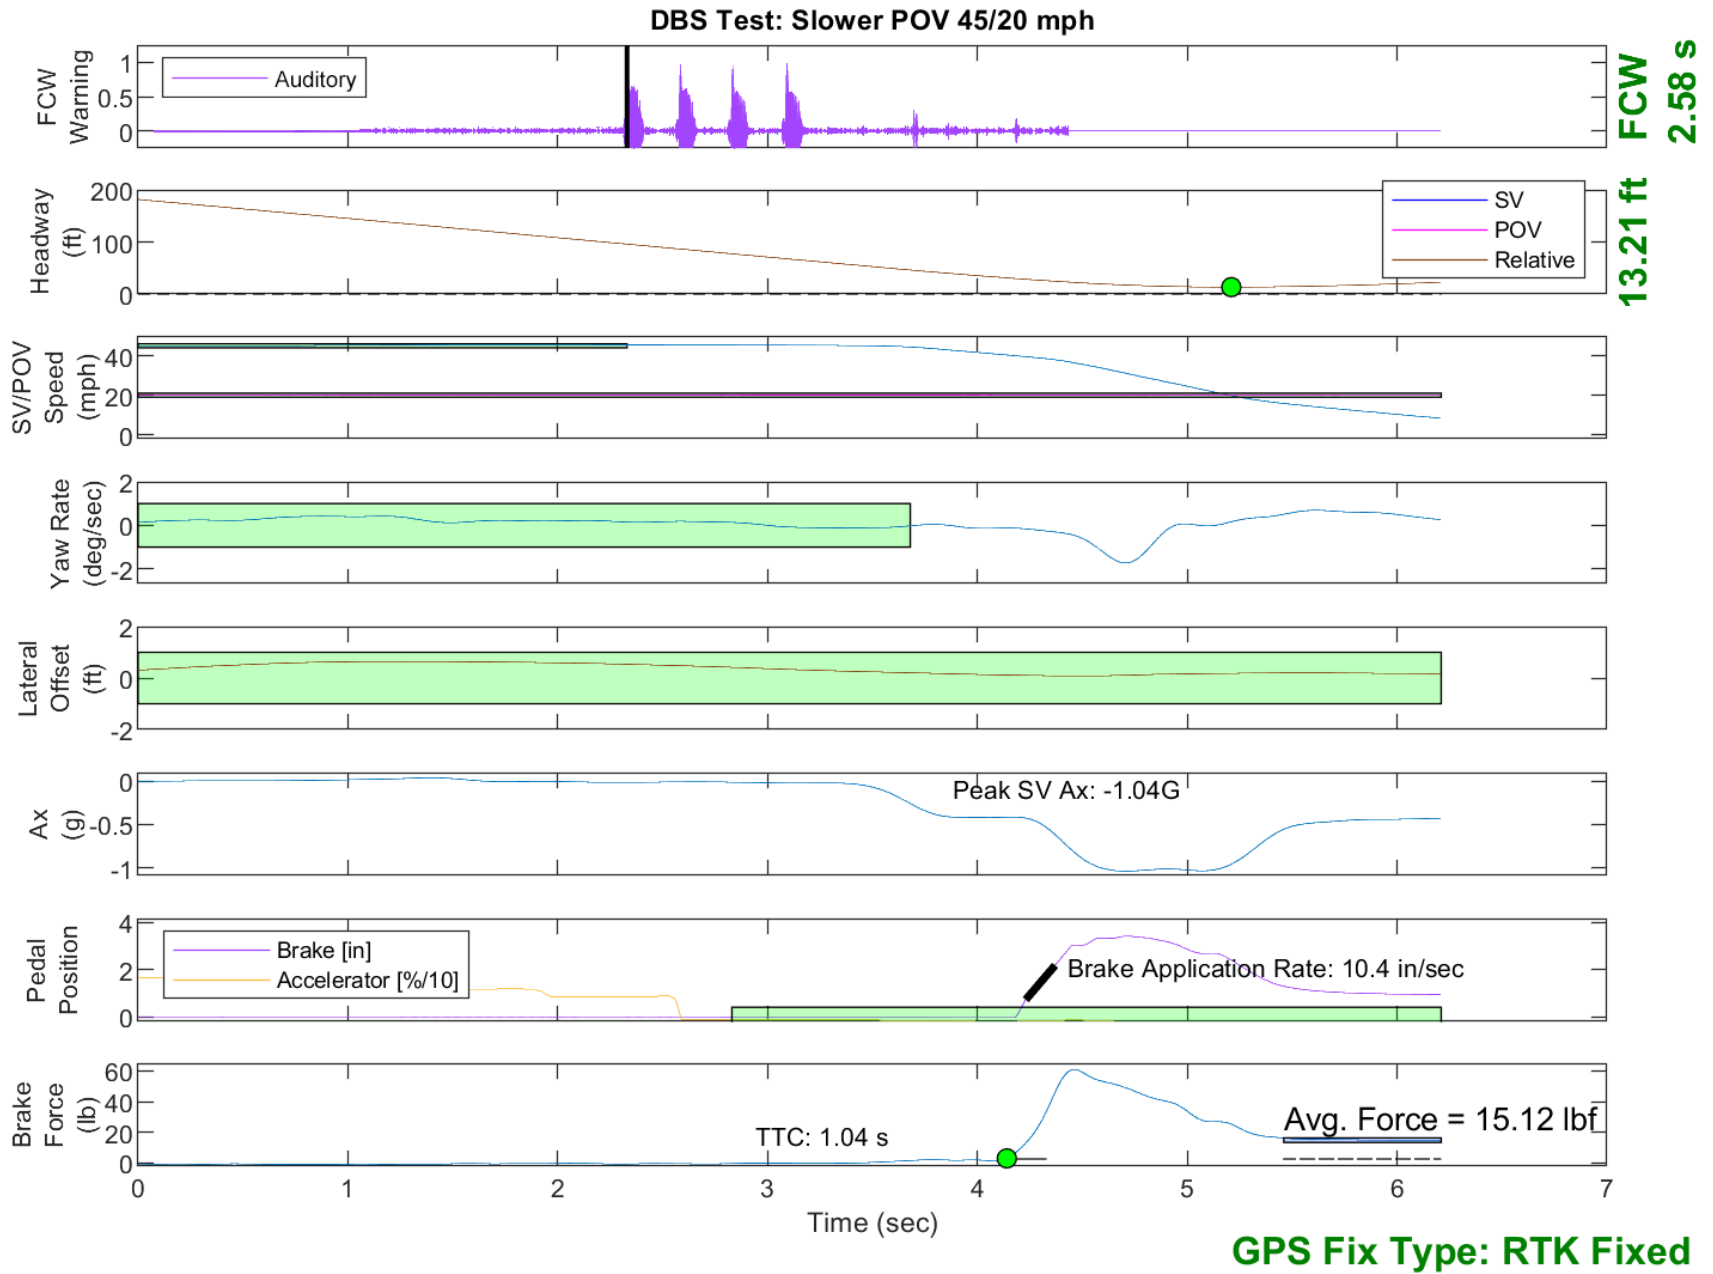


Figure E3. Example Time History for Slower POV 45 vs. 20, Passing



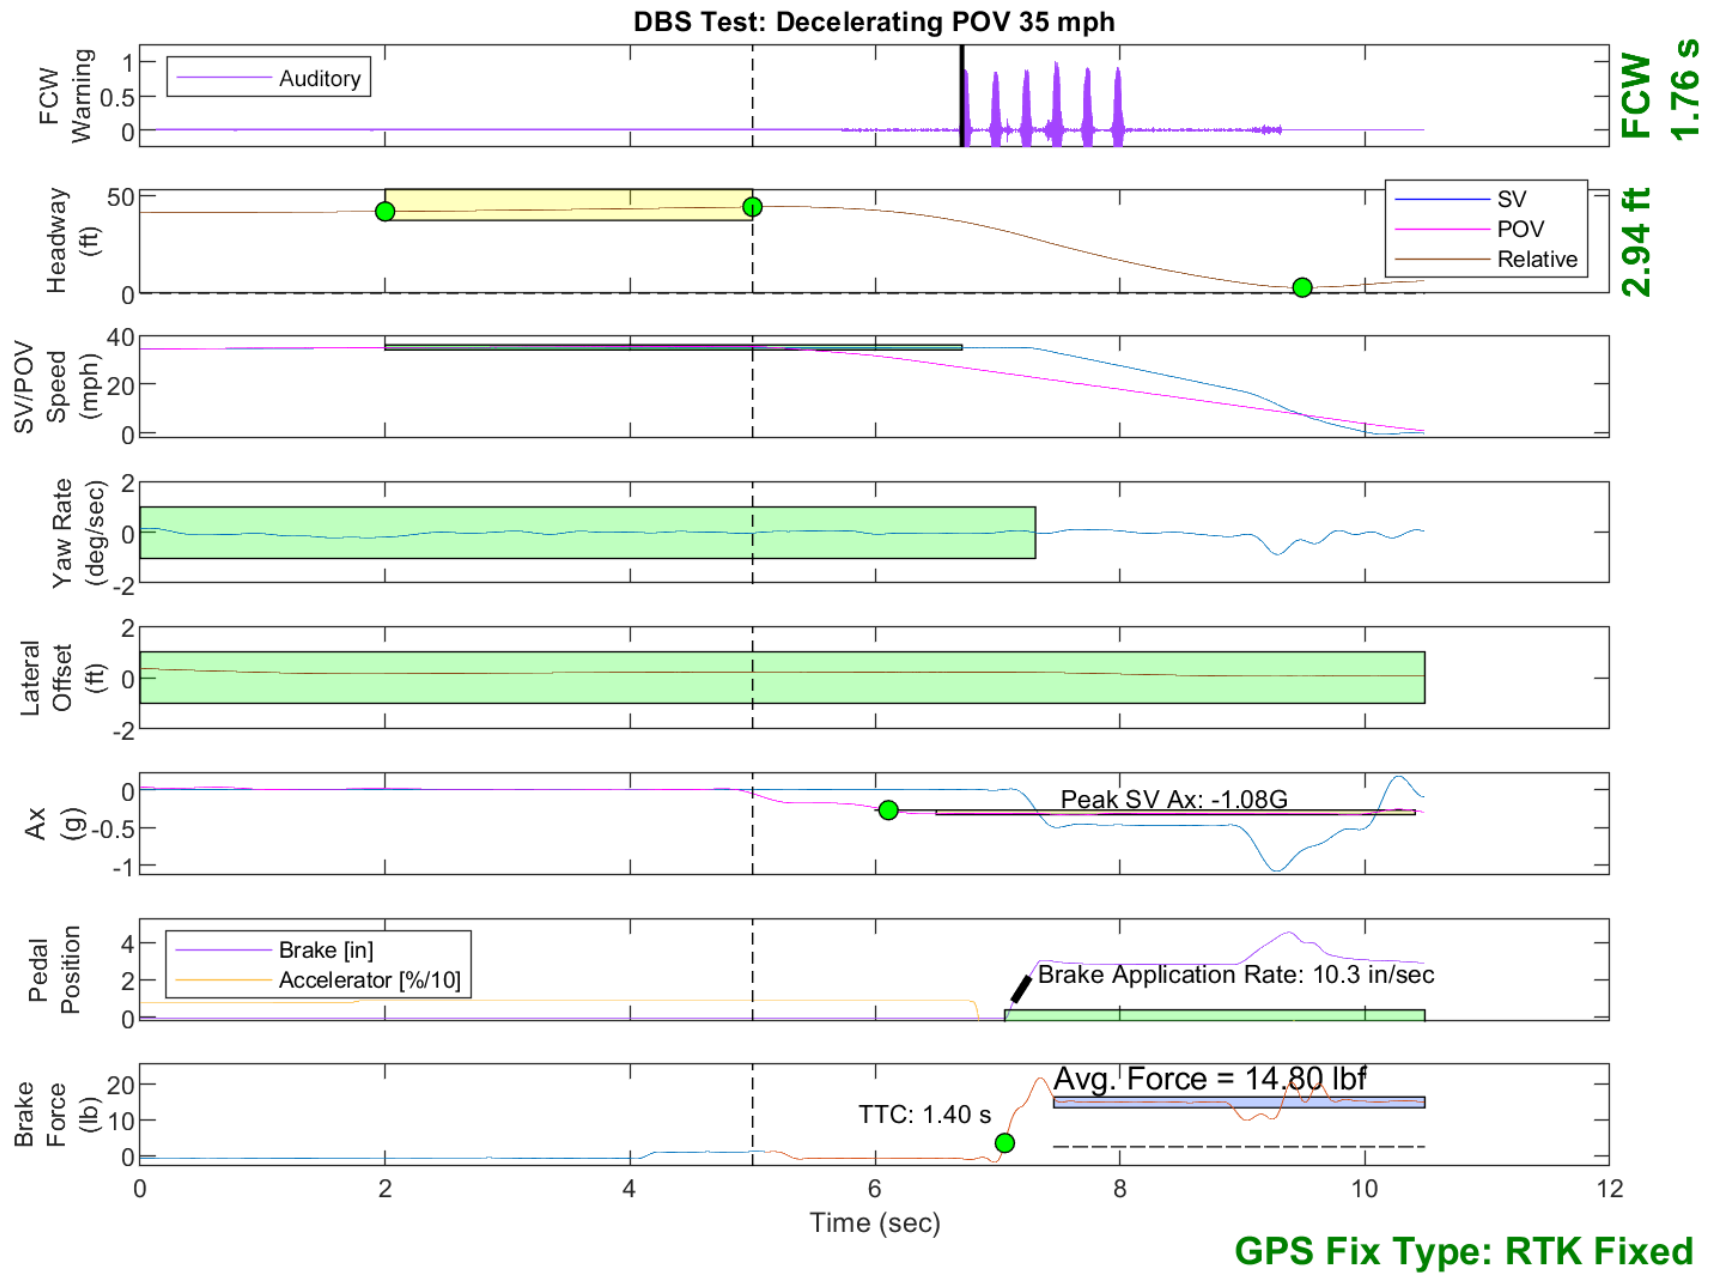


Figure E4. Example Time History for Decelerating POV 35, Passing

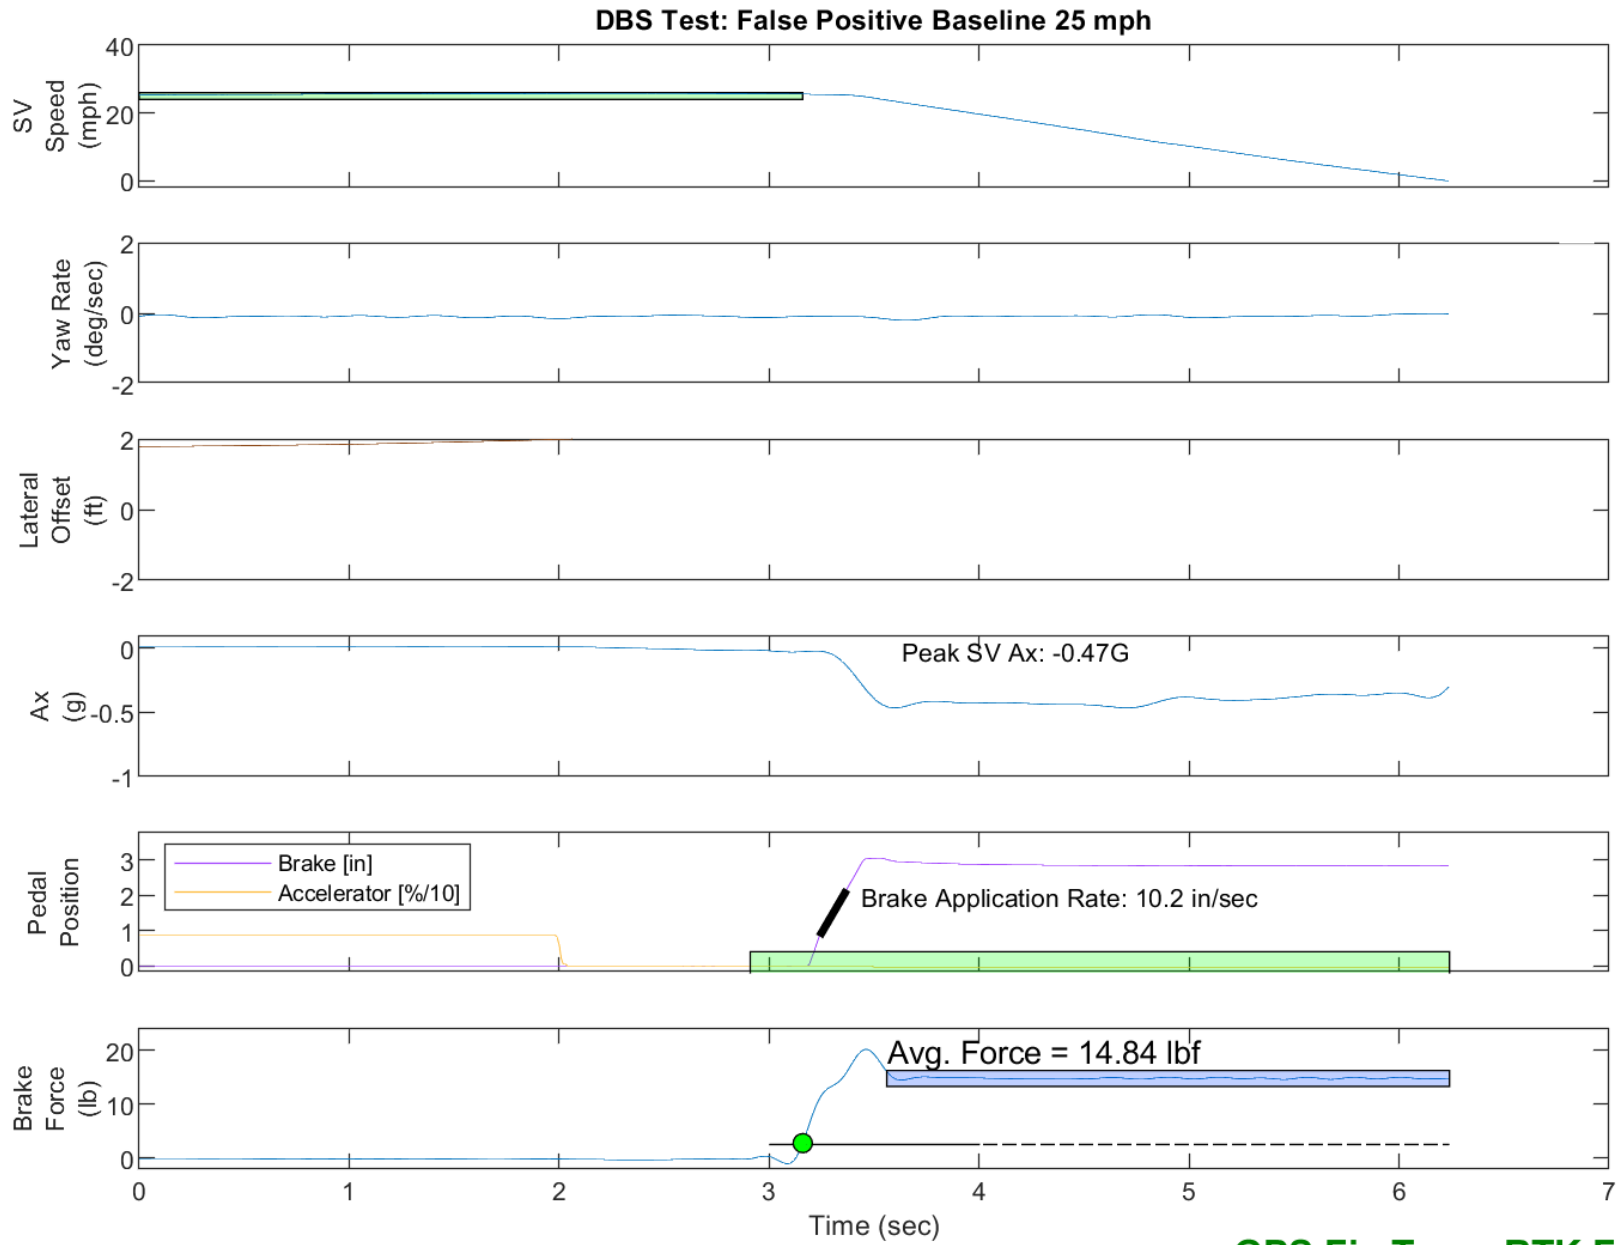

GPS Fix Type: RTK Fixed

Figure E5. Example Time History for False Positive Baseline 25

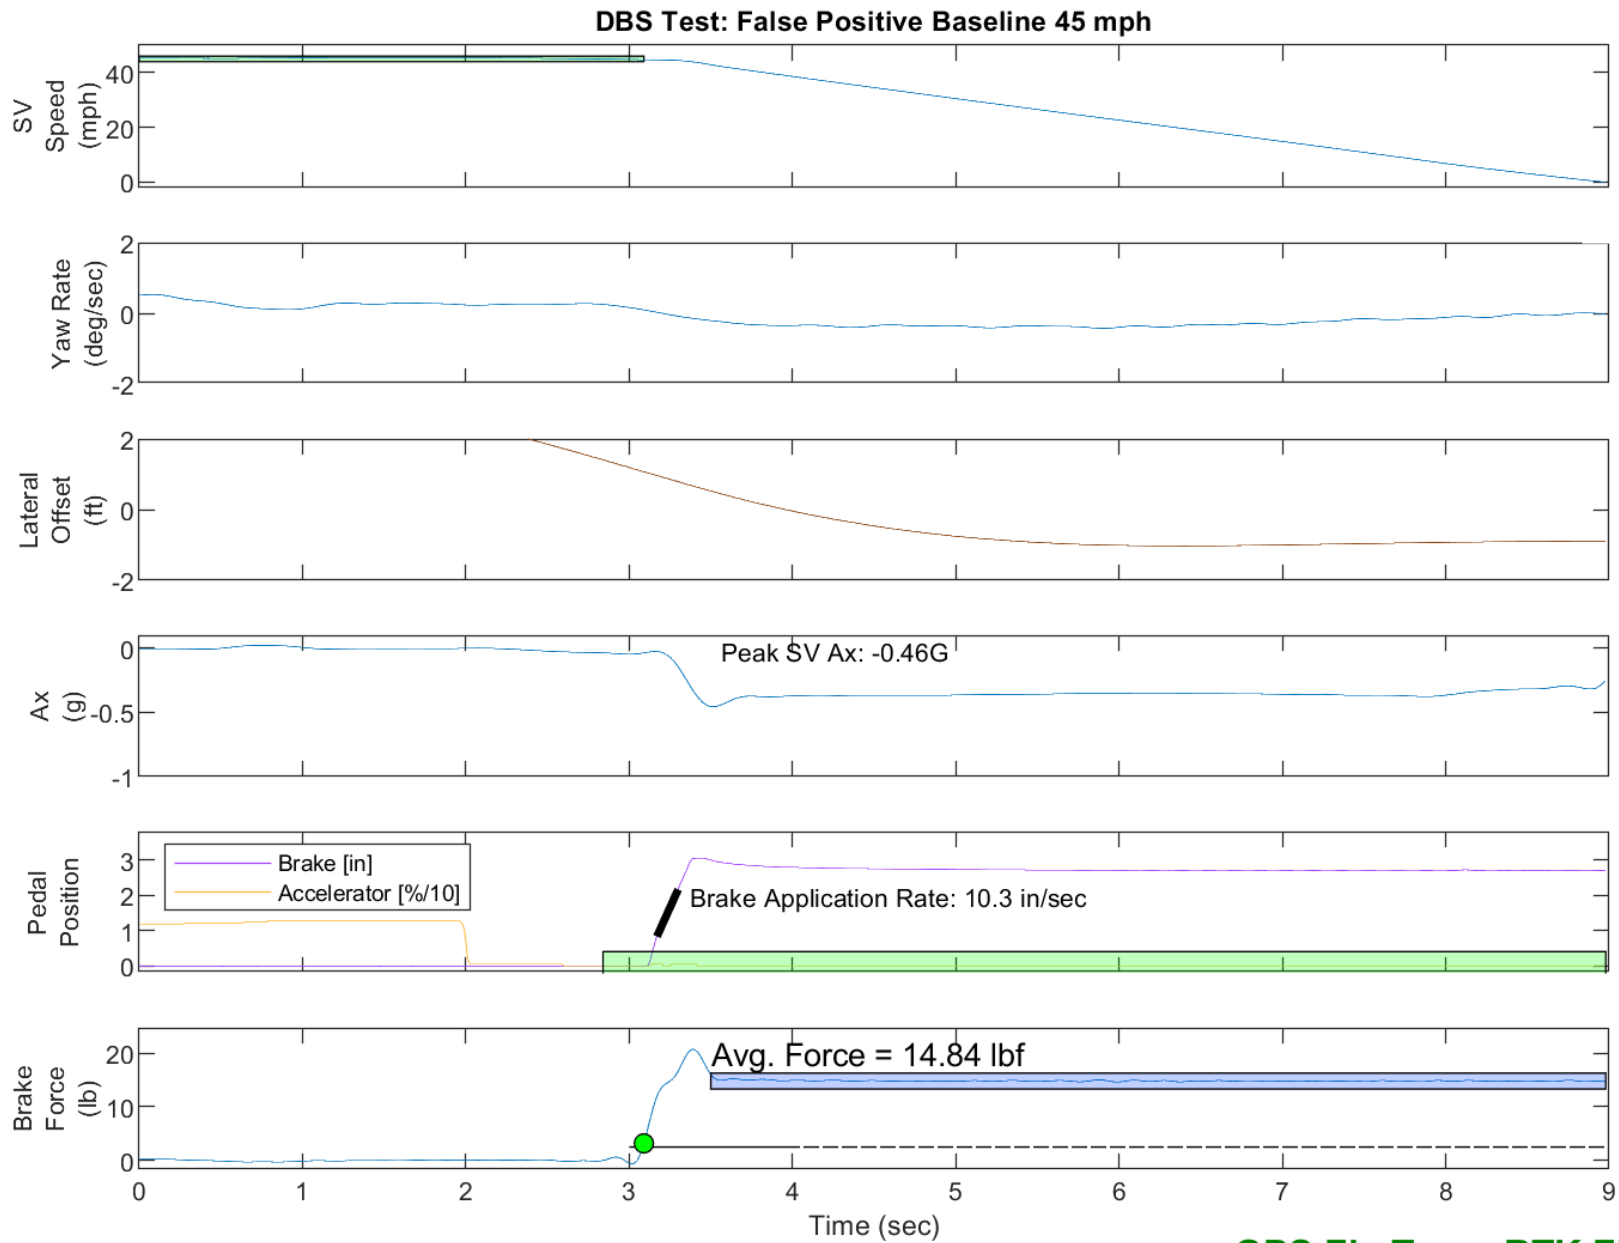

GPS Fix Type: RTK Fixed

Figure E6. Example Time History for False Positive Baseline 45


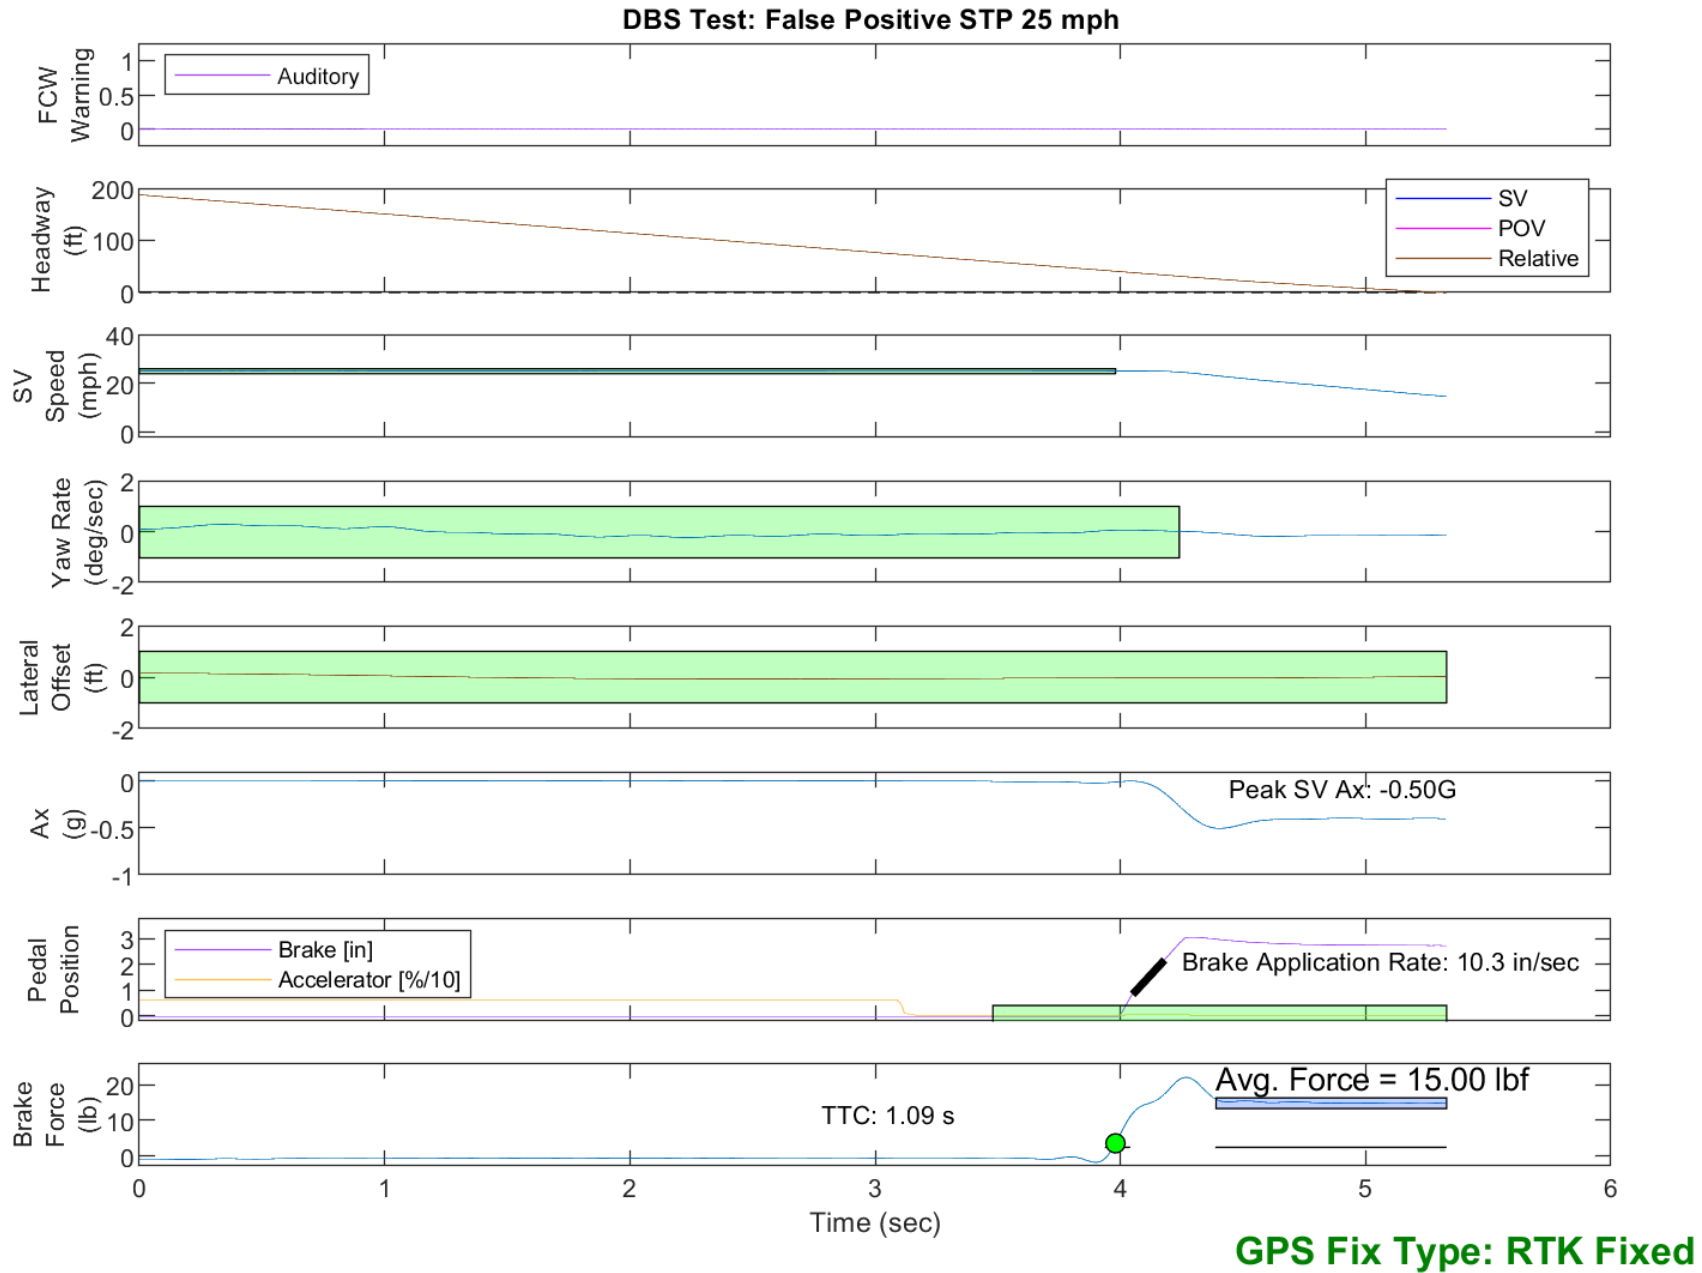


Figure E7. Example Time History for False Positive Steel Plate 25, Passing

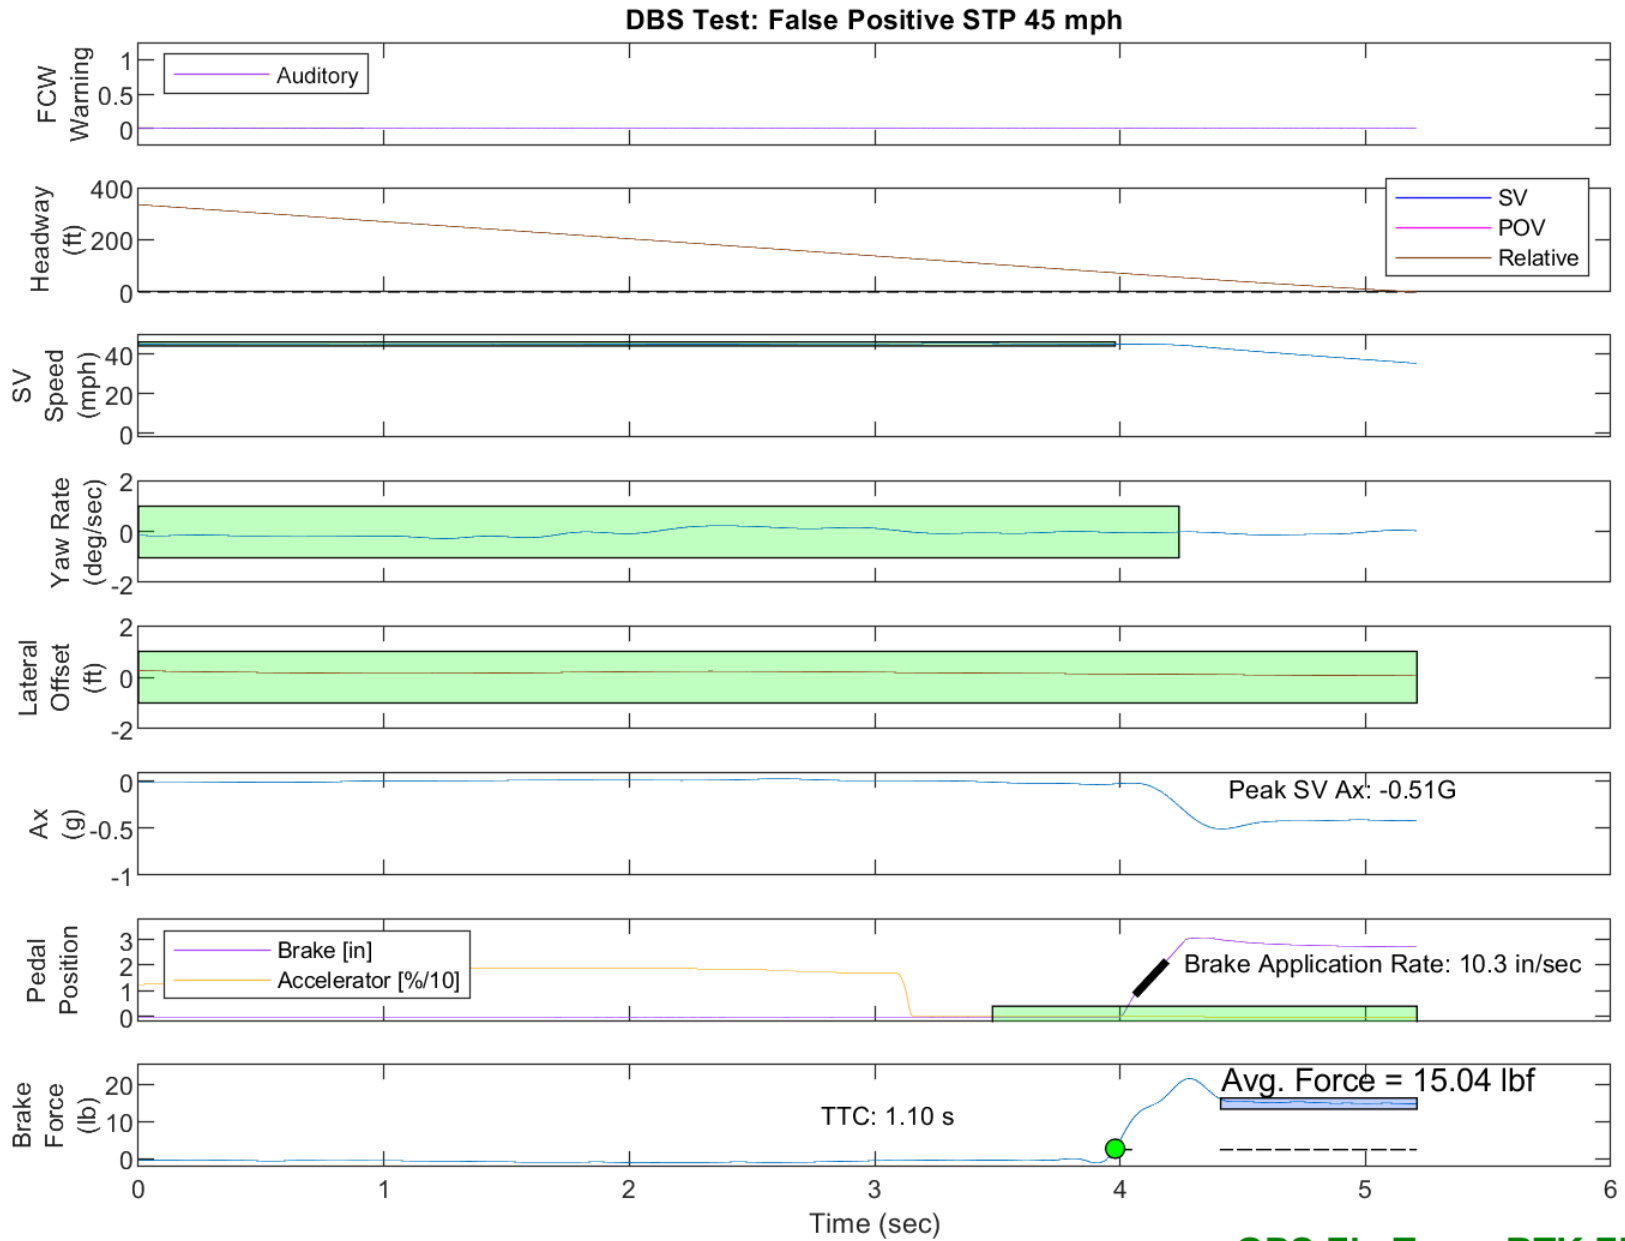

GPS Fix Type: RTK Fixed

Figure E8. Example Time History for False Positive Steel Plate 45, Passing

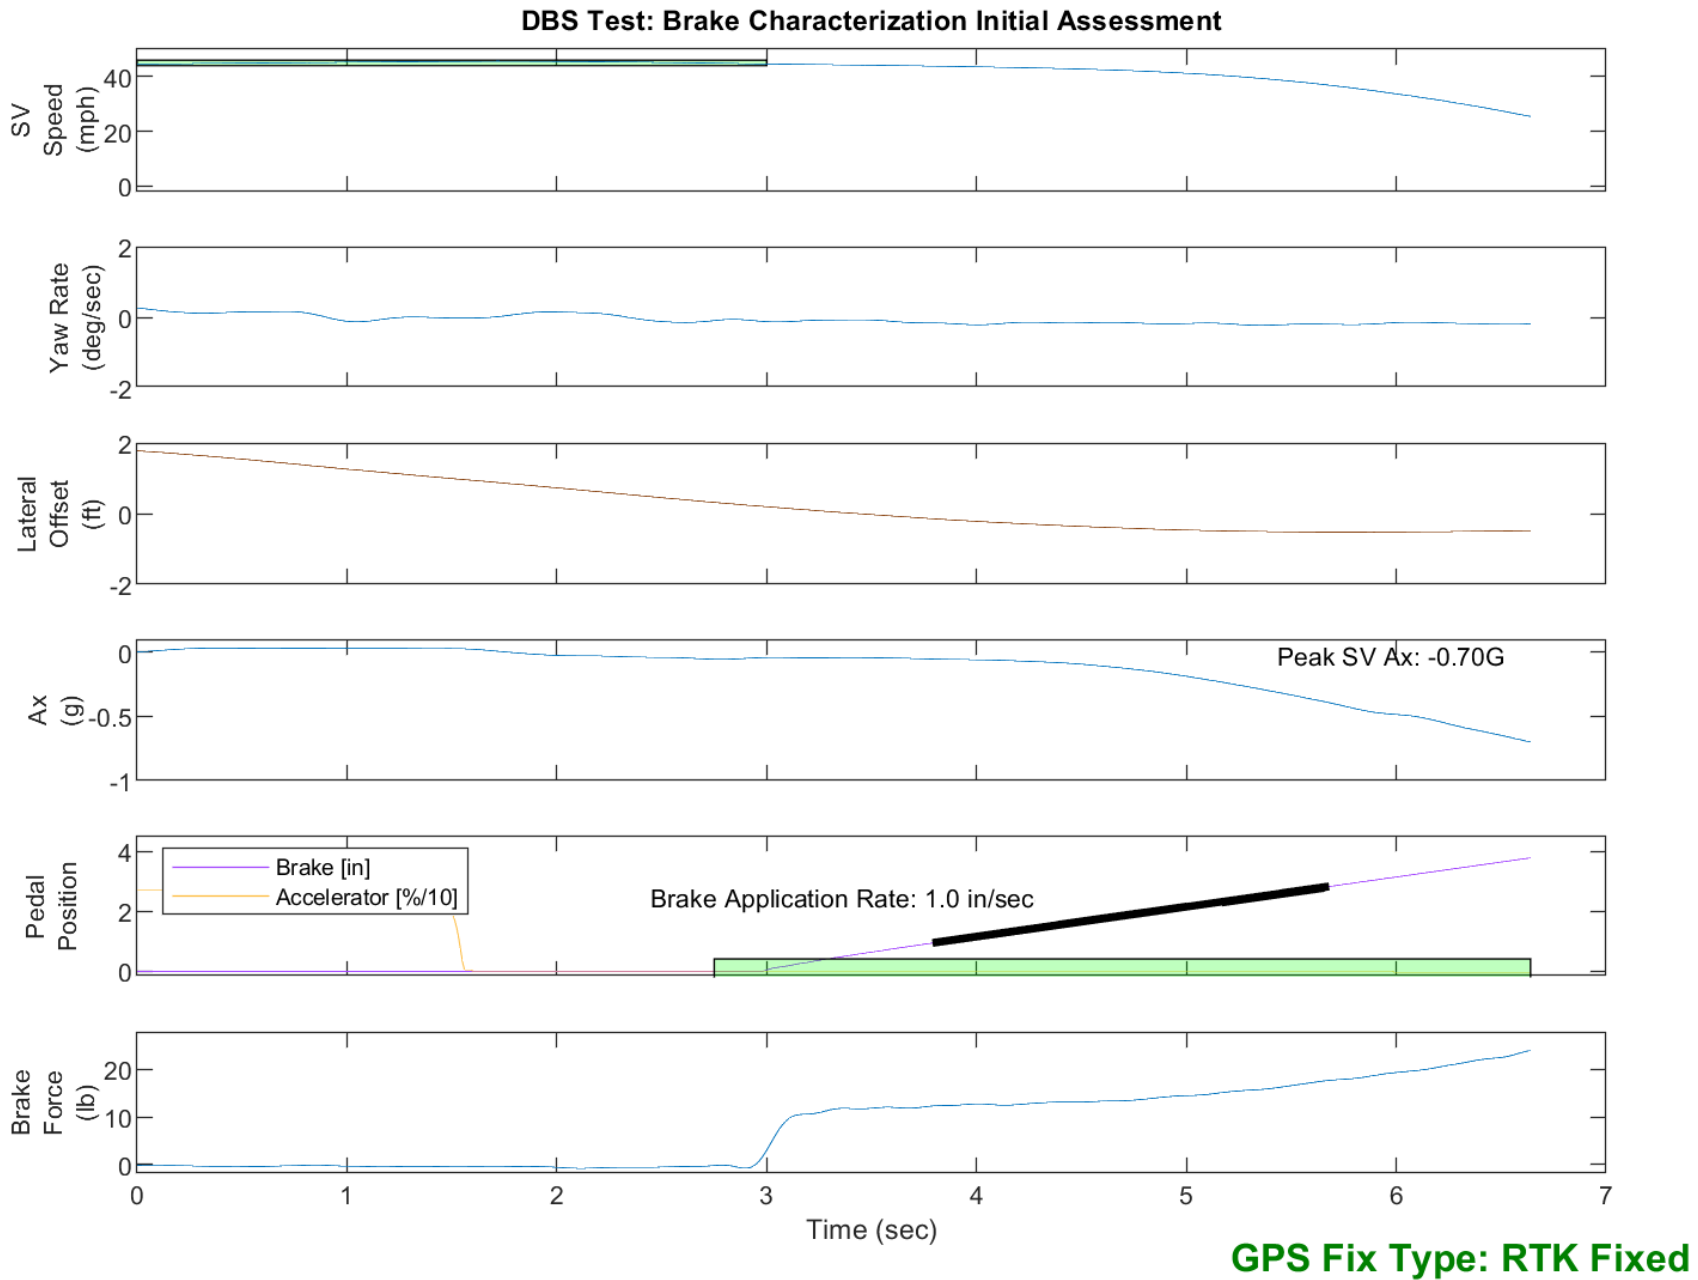


Figure E9. Example Time History for DBS Brake Characterization, Passing

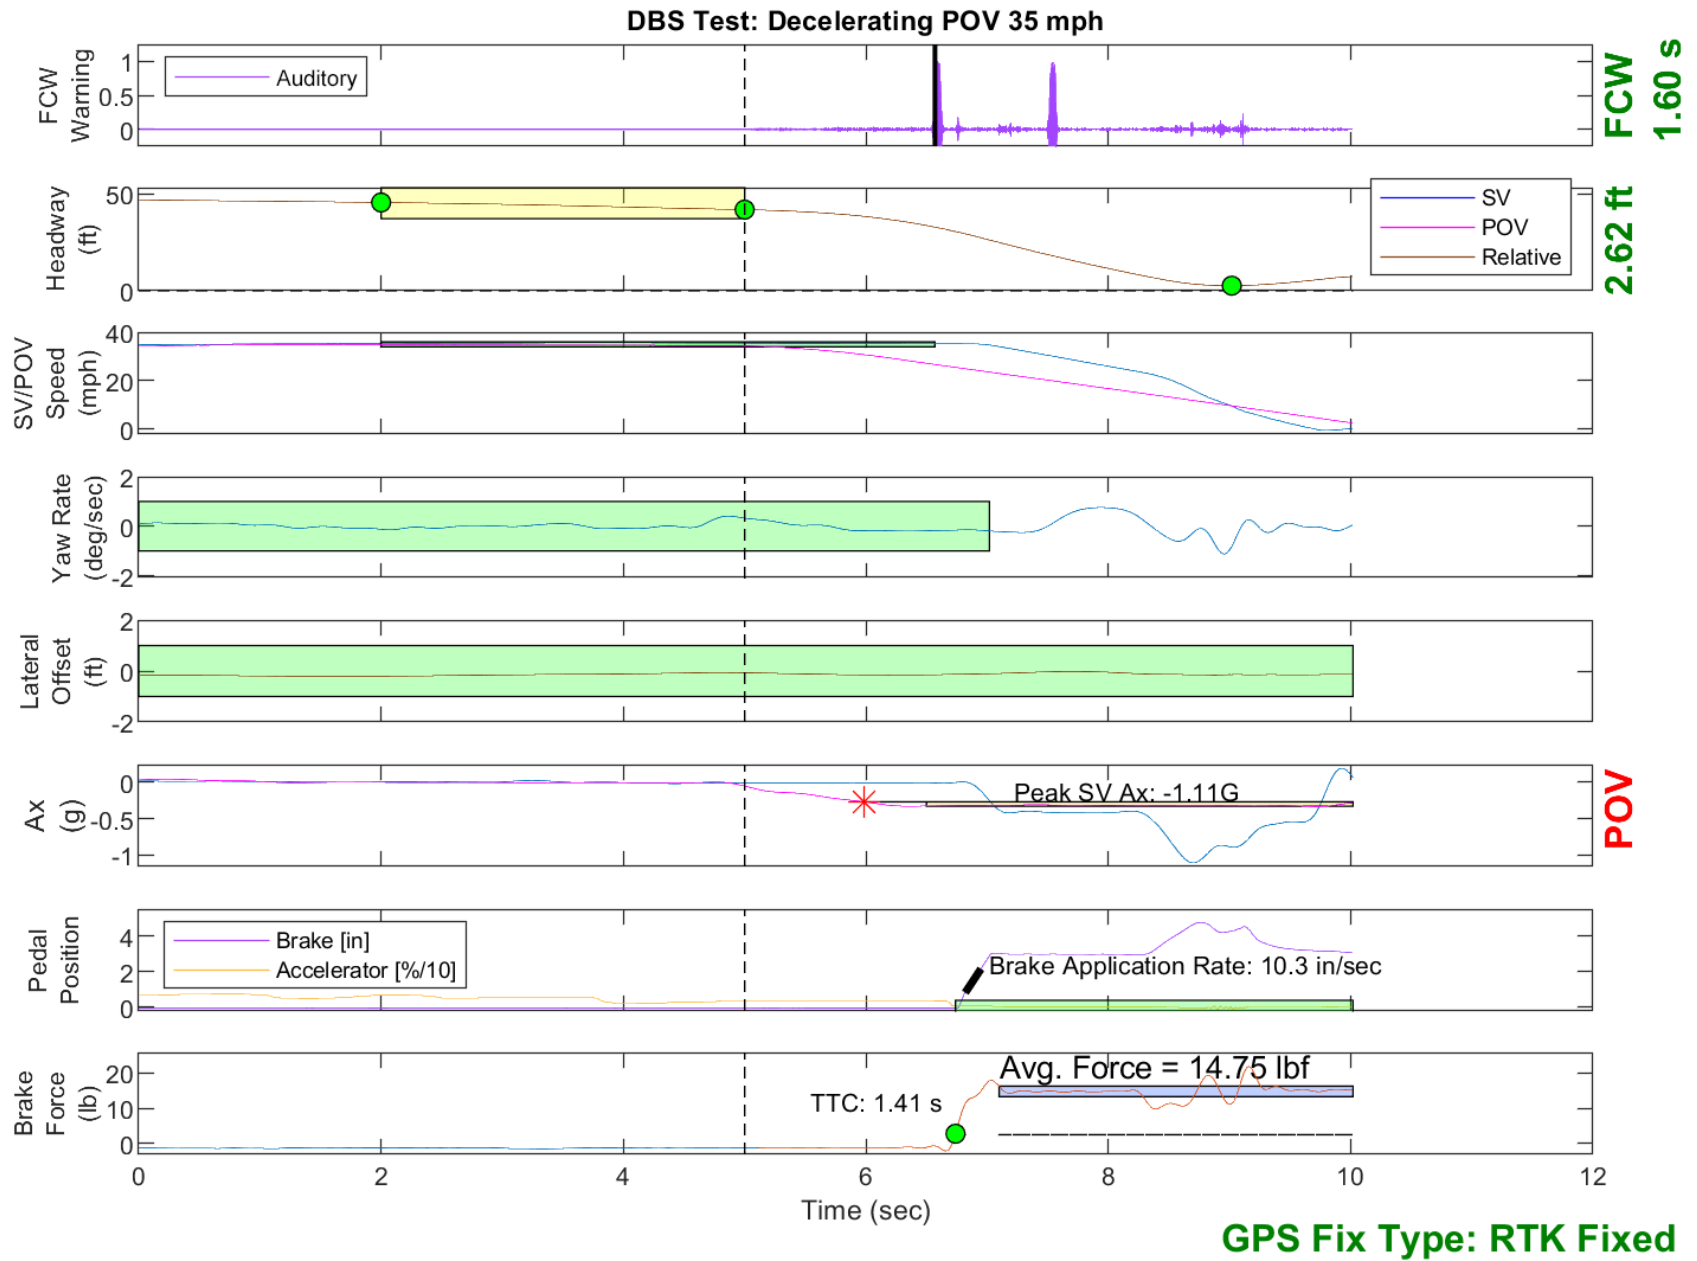


Figure E10. Example Time History Displaying Invalid POV Acceleration Criteria

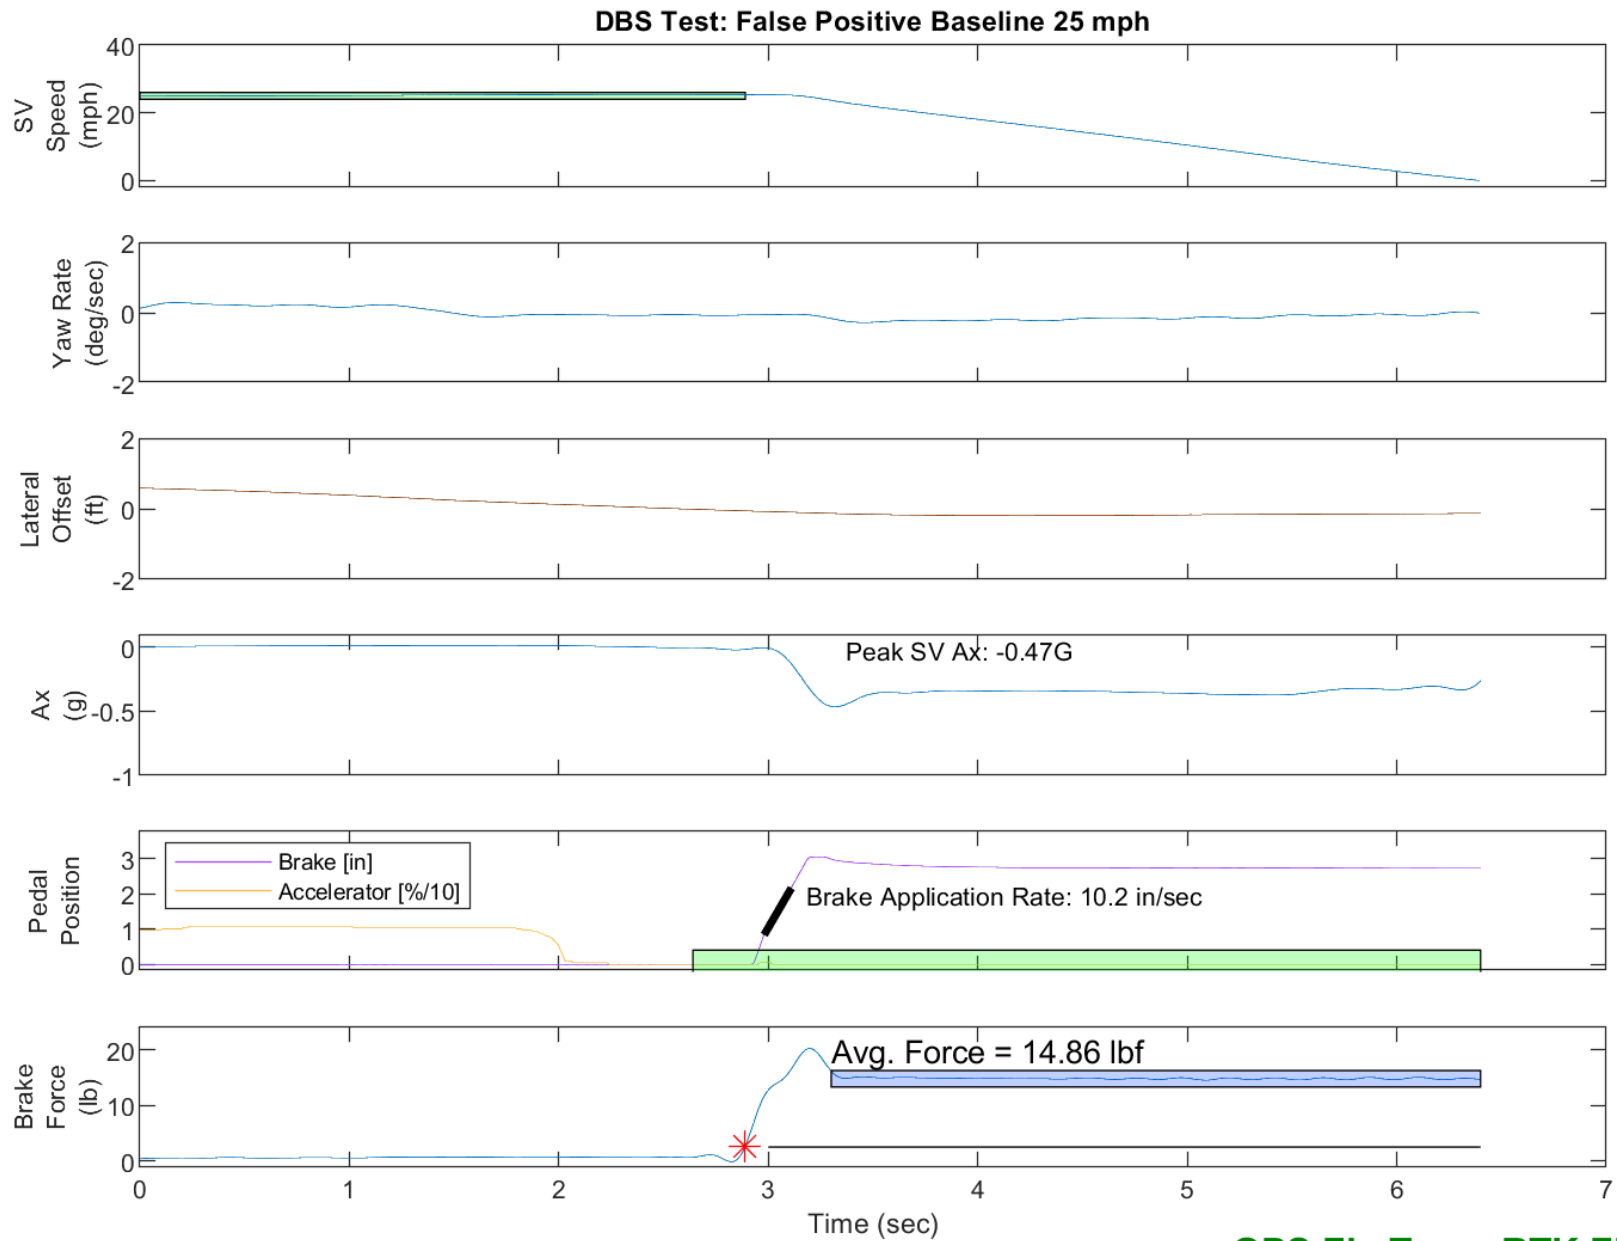


Figure E11. Example Time History Displaying Invalid Brake Force Criteria

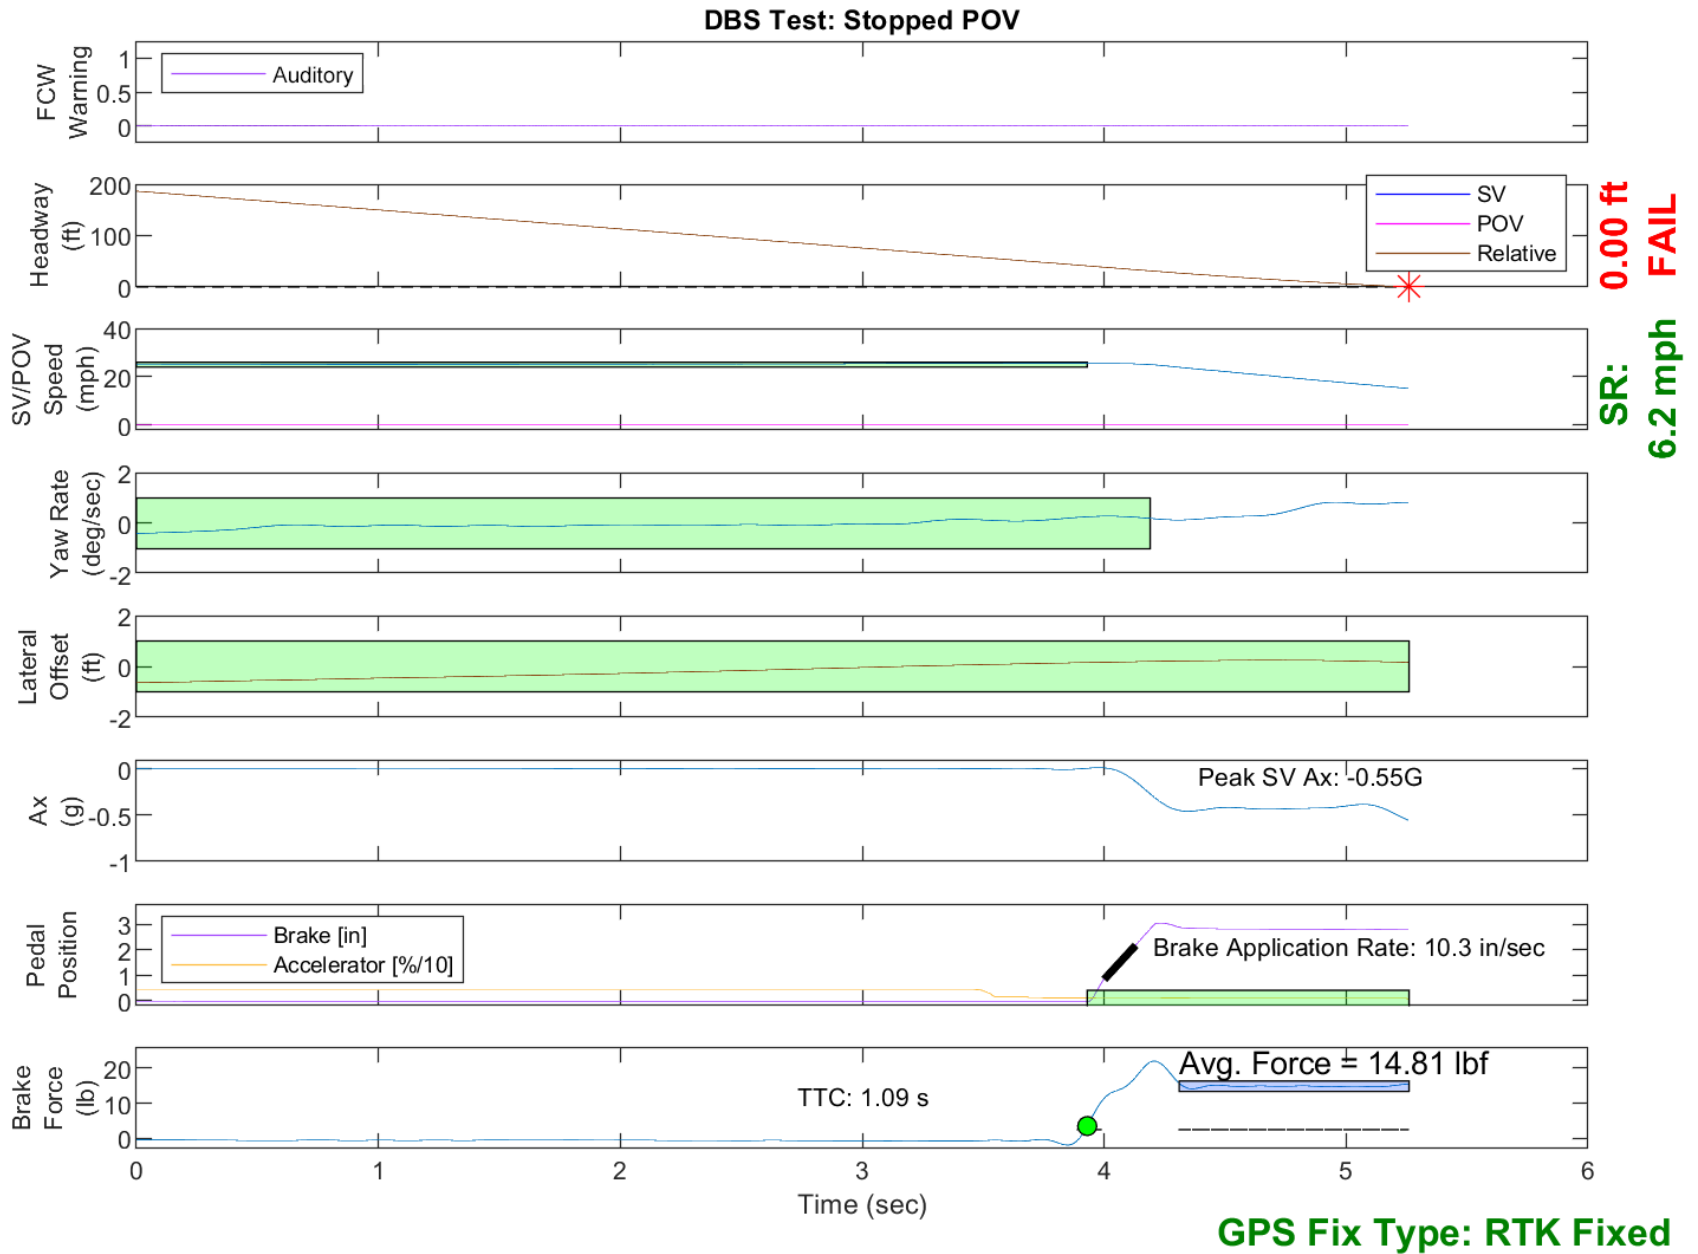


Figure E12. Example Time History for a Failed Run

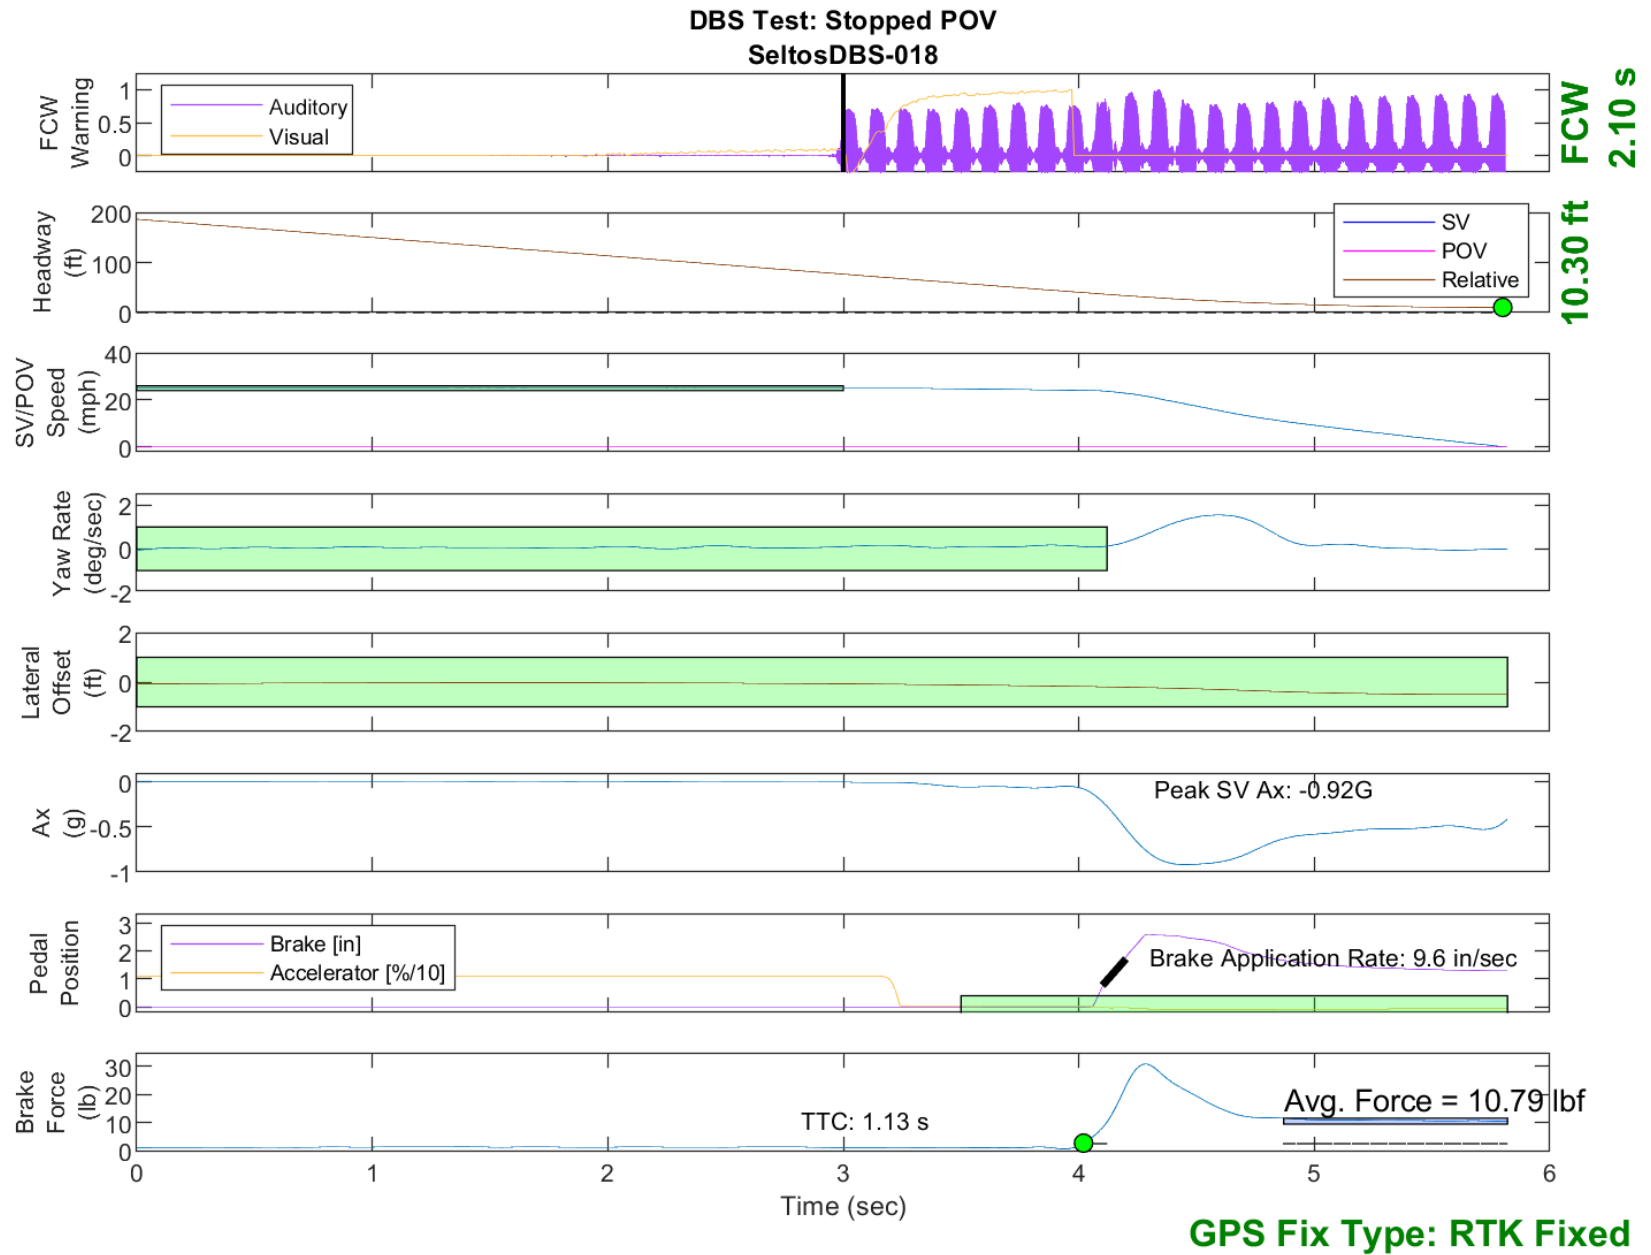


Figure E13. Time History for DBS Run 18, SV Encounters Stopped POV

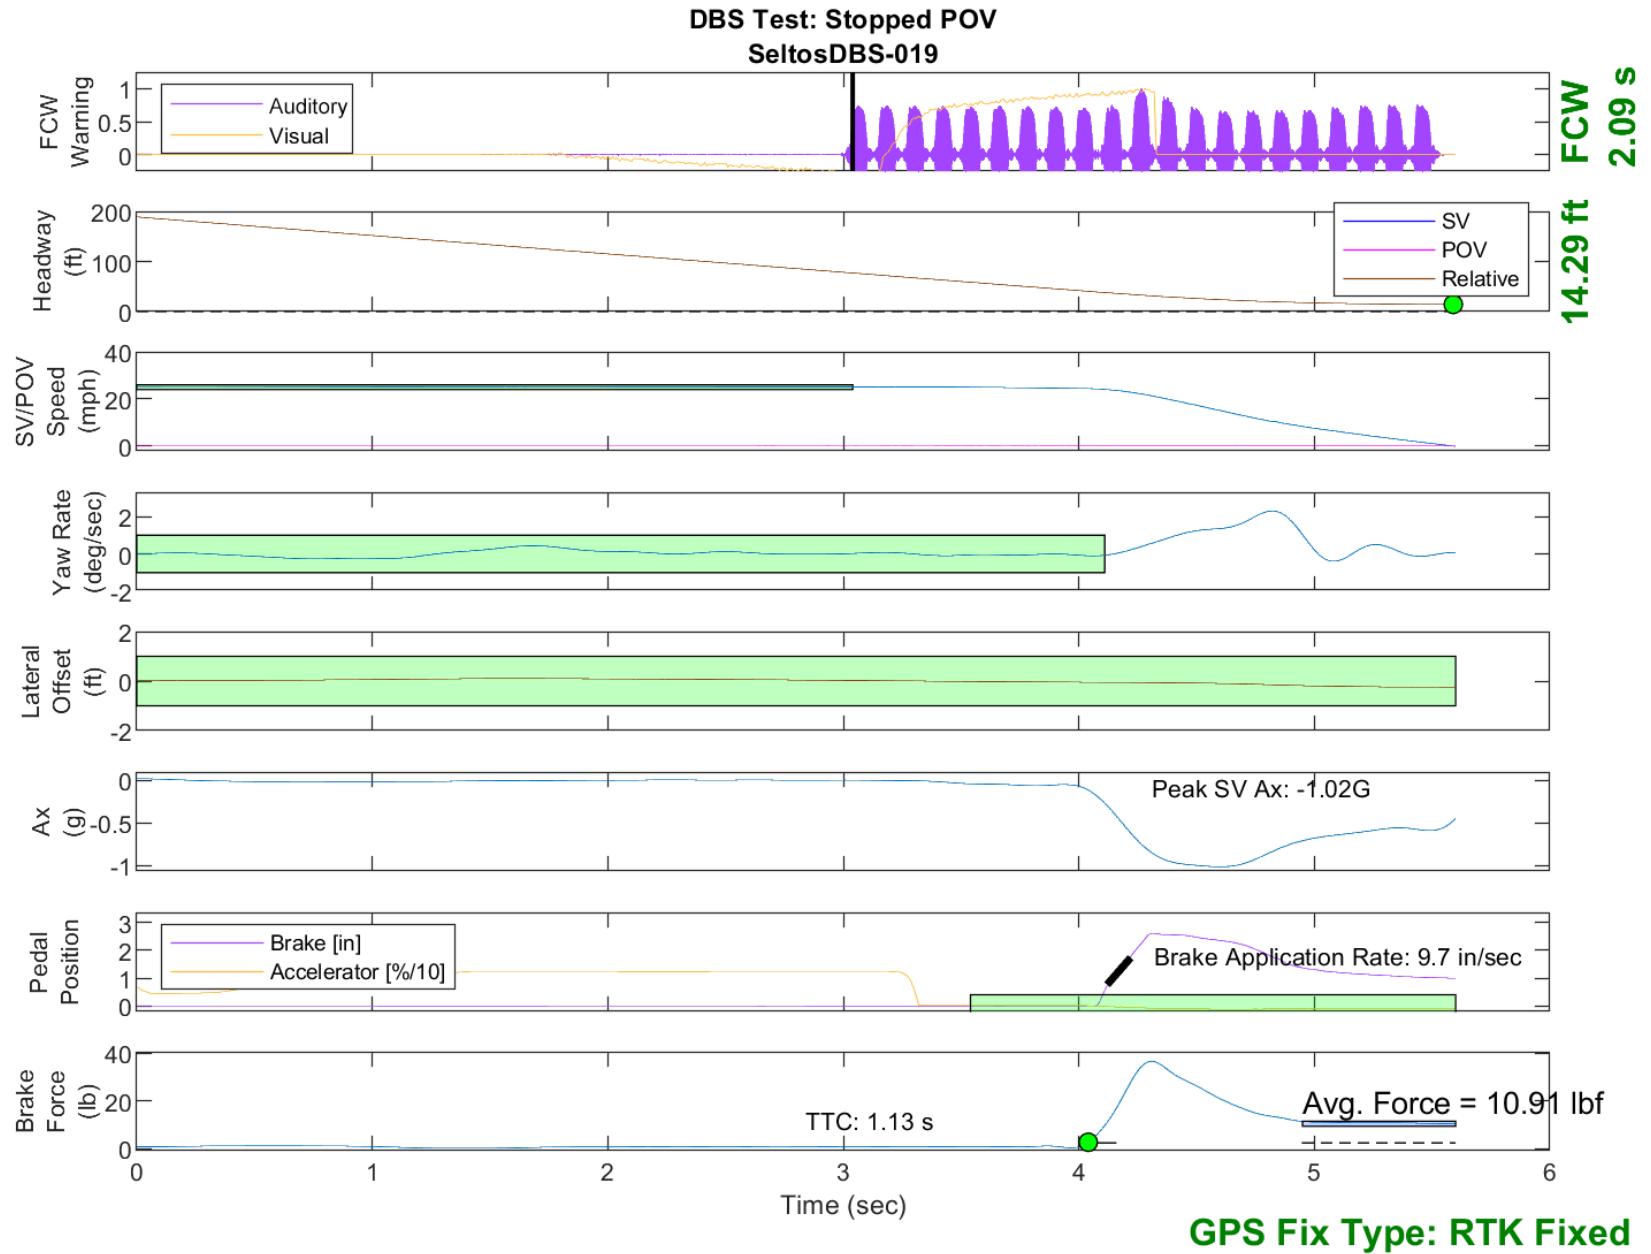


Figure E14. Time History for DBS Run 19, SV Encounters Stopped POV

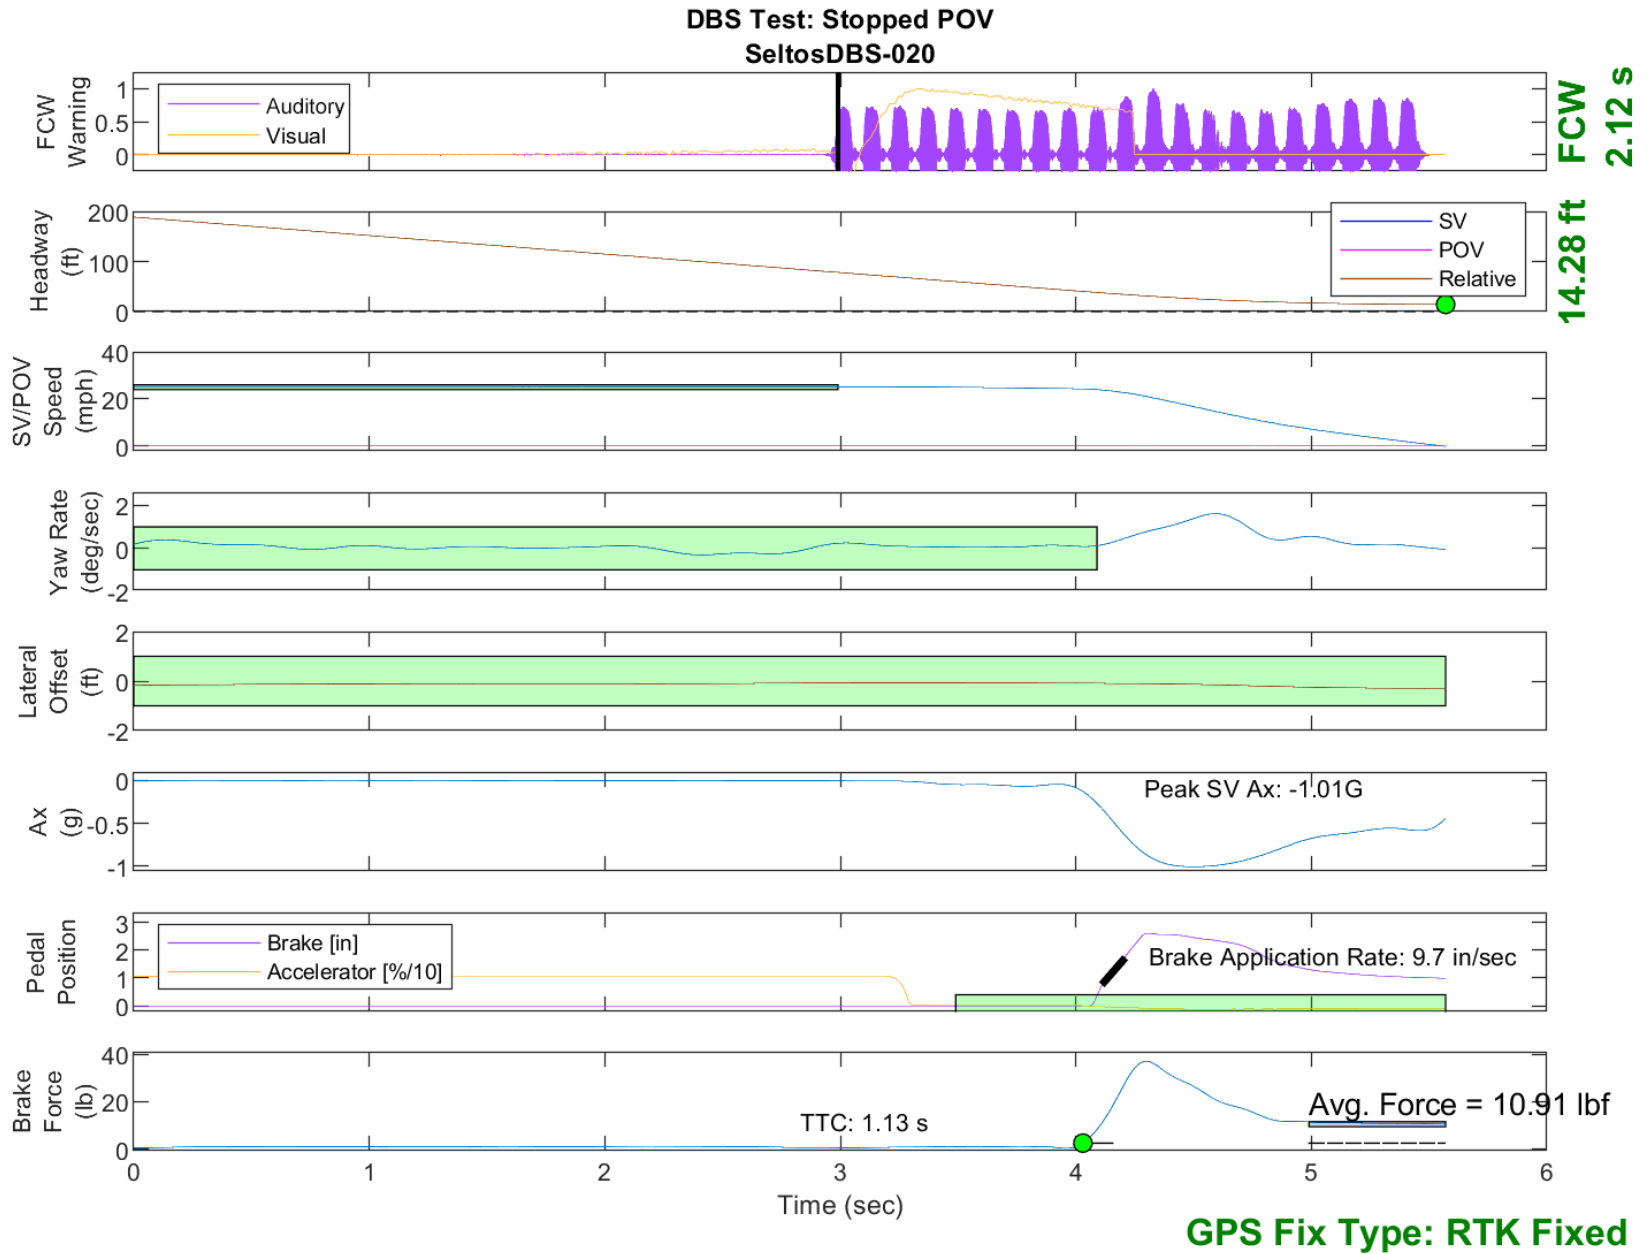


Figure E15. Time History for DBS Run 20, SV Encounters Stopped POV

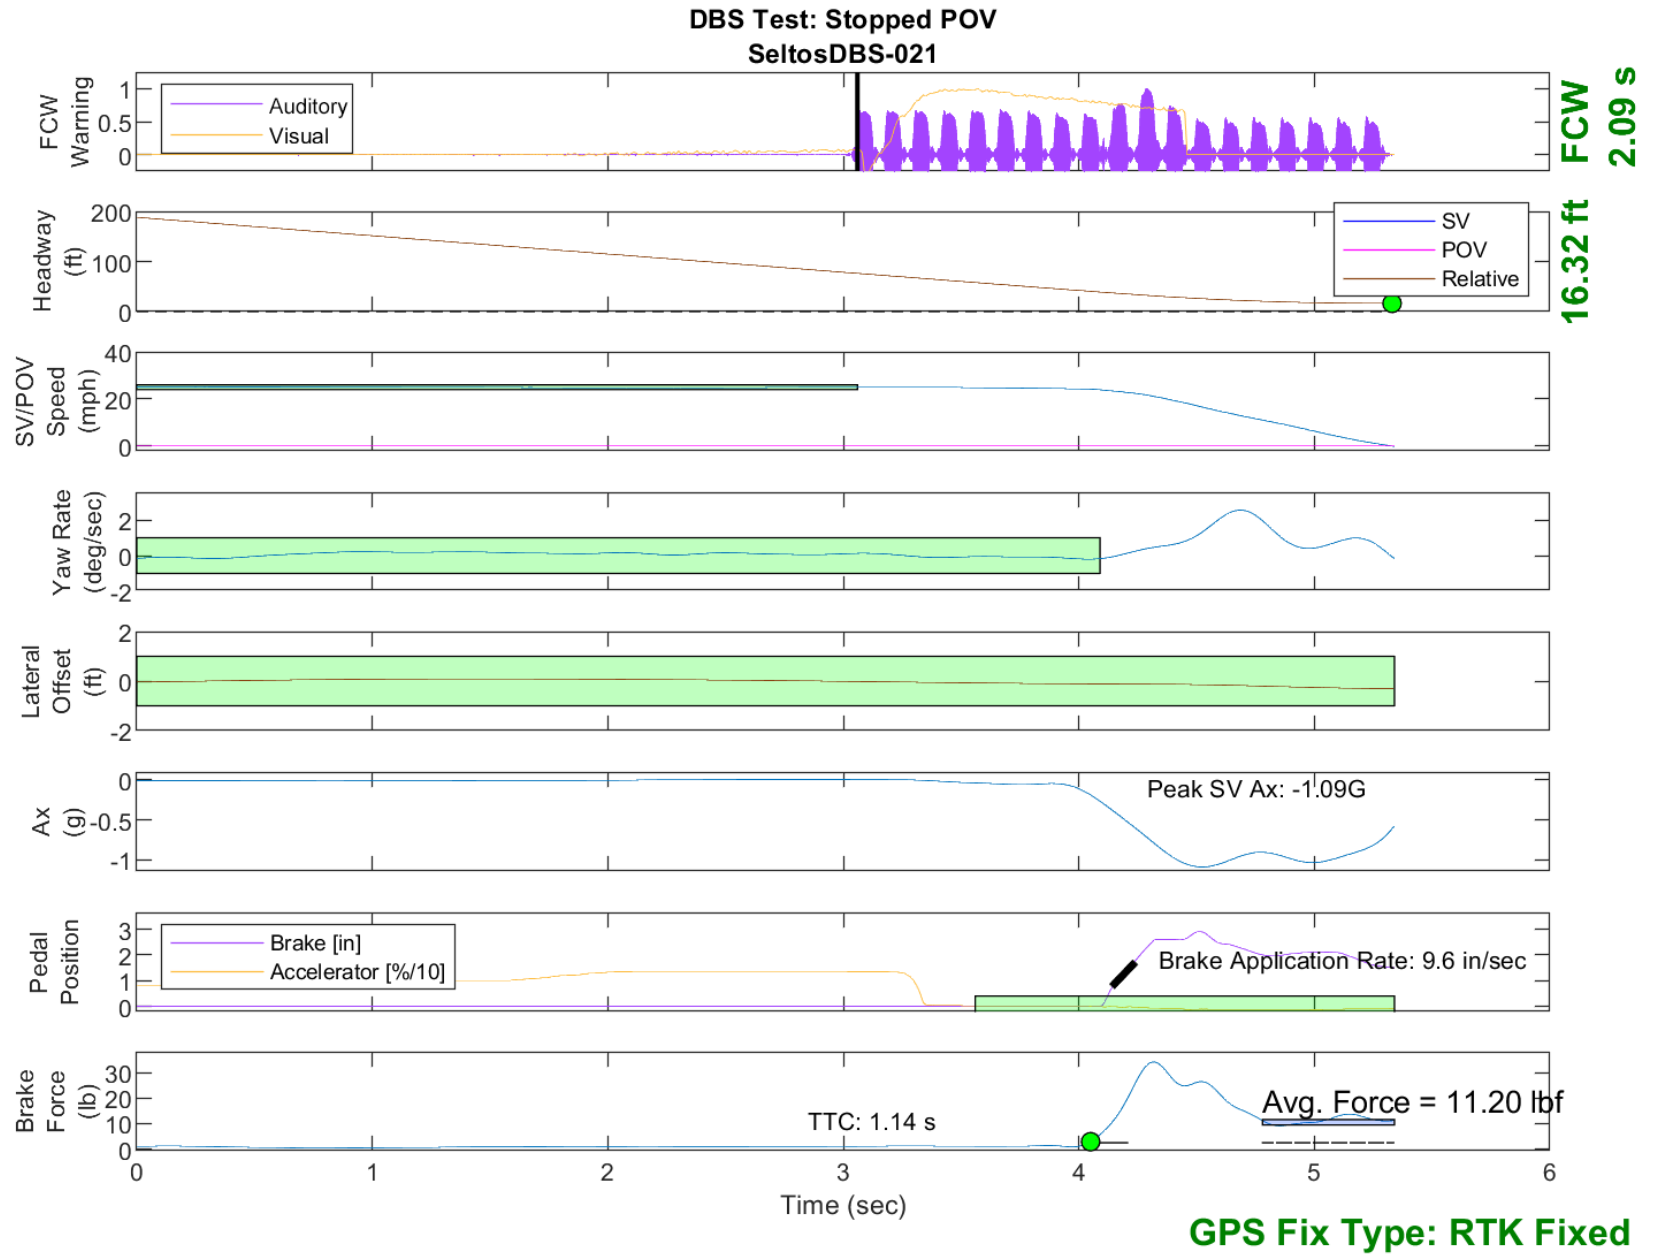


Figure E16. Time History for DBS Run 21, SV Encounters Stopped POV

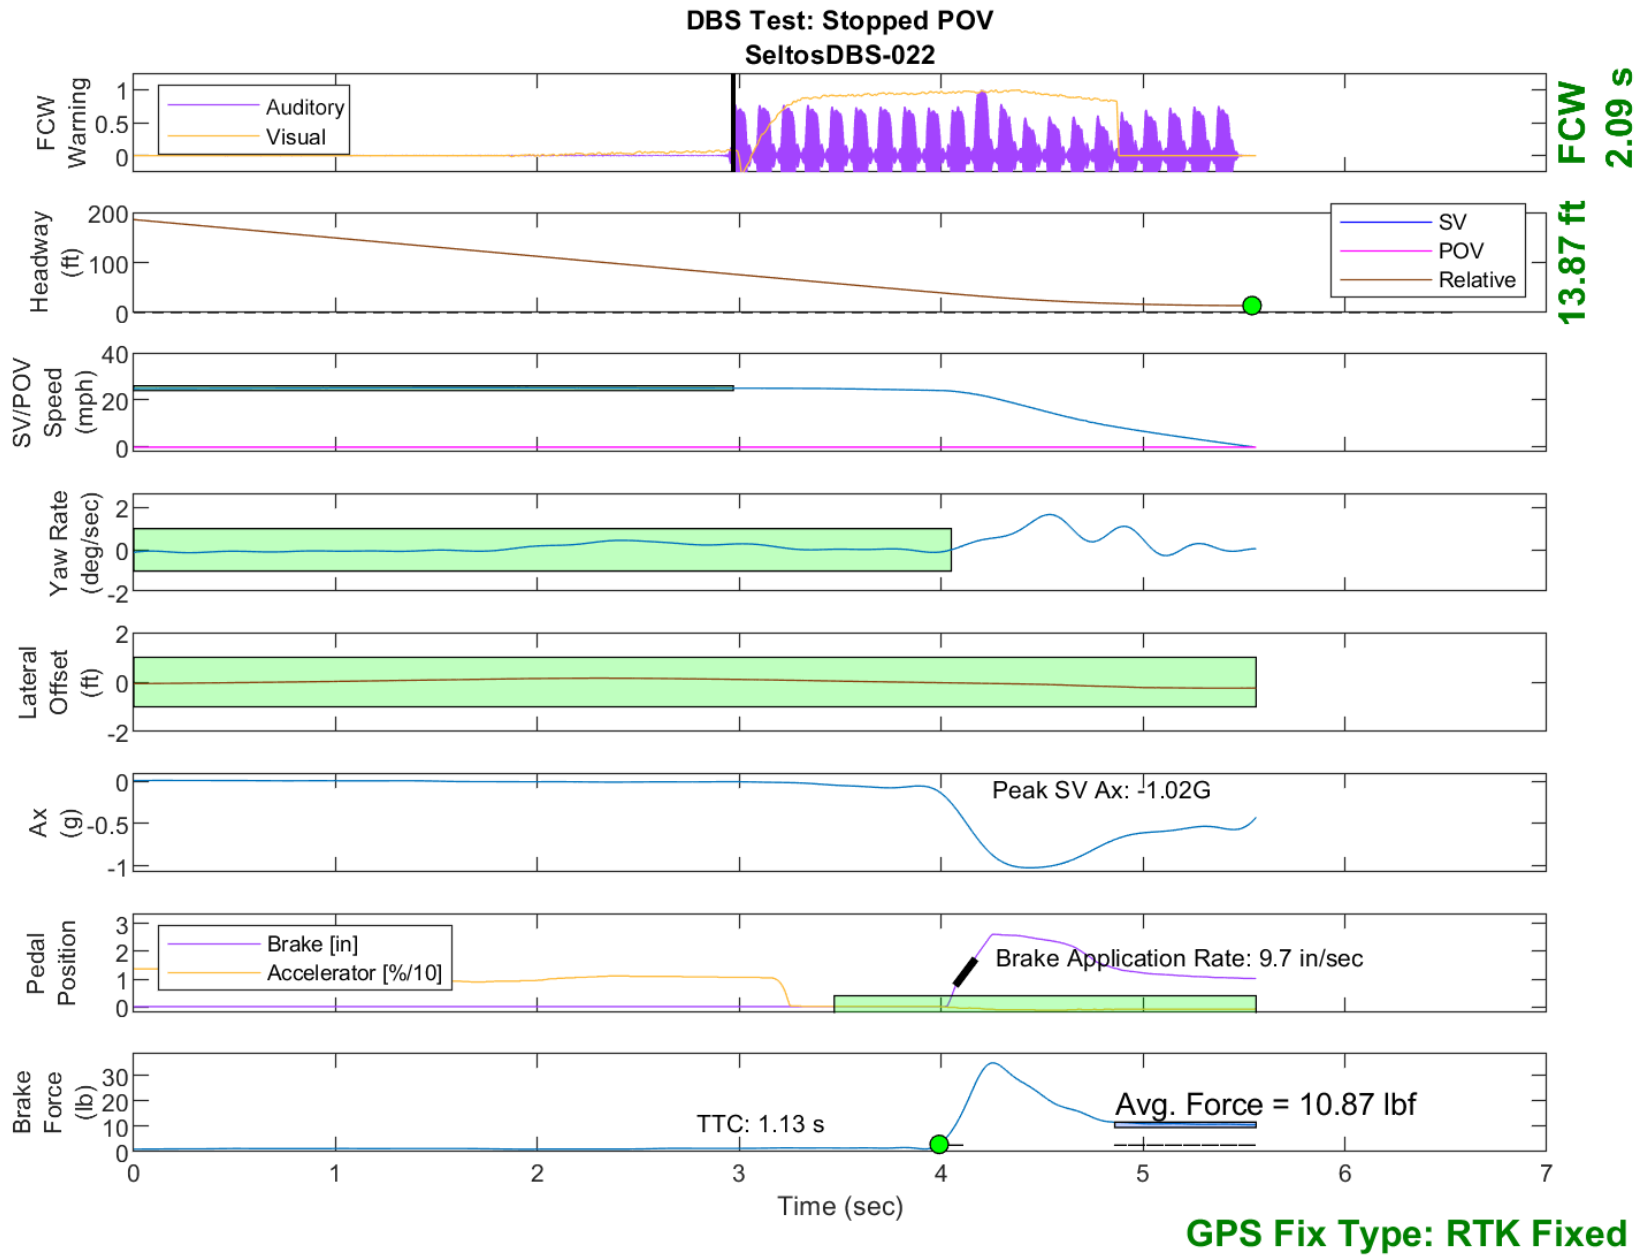


Figure E17. Time History for DBS Run 22, SV Encounters Stopped POV

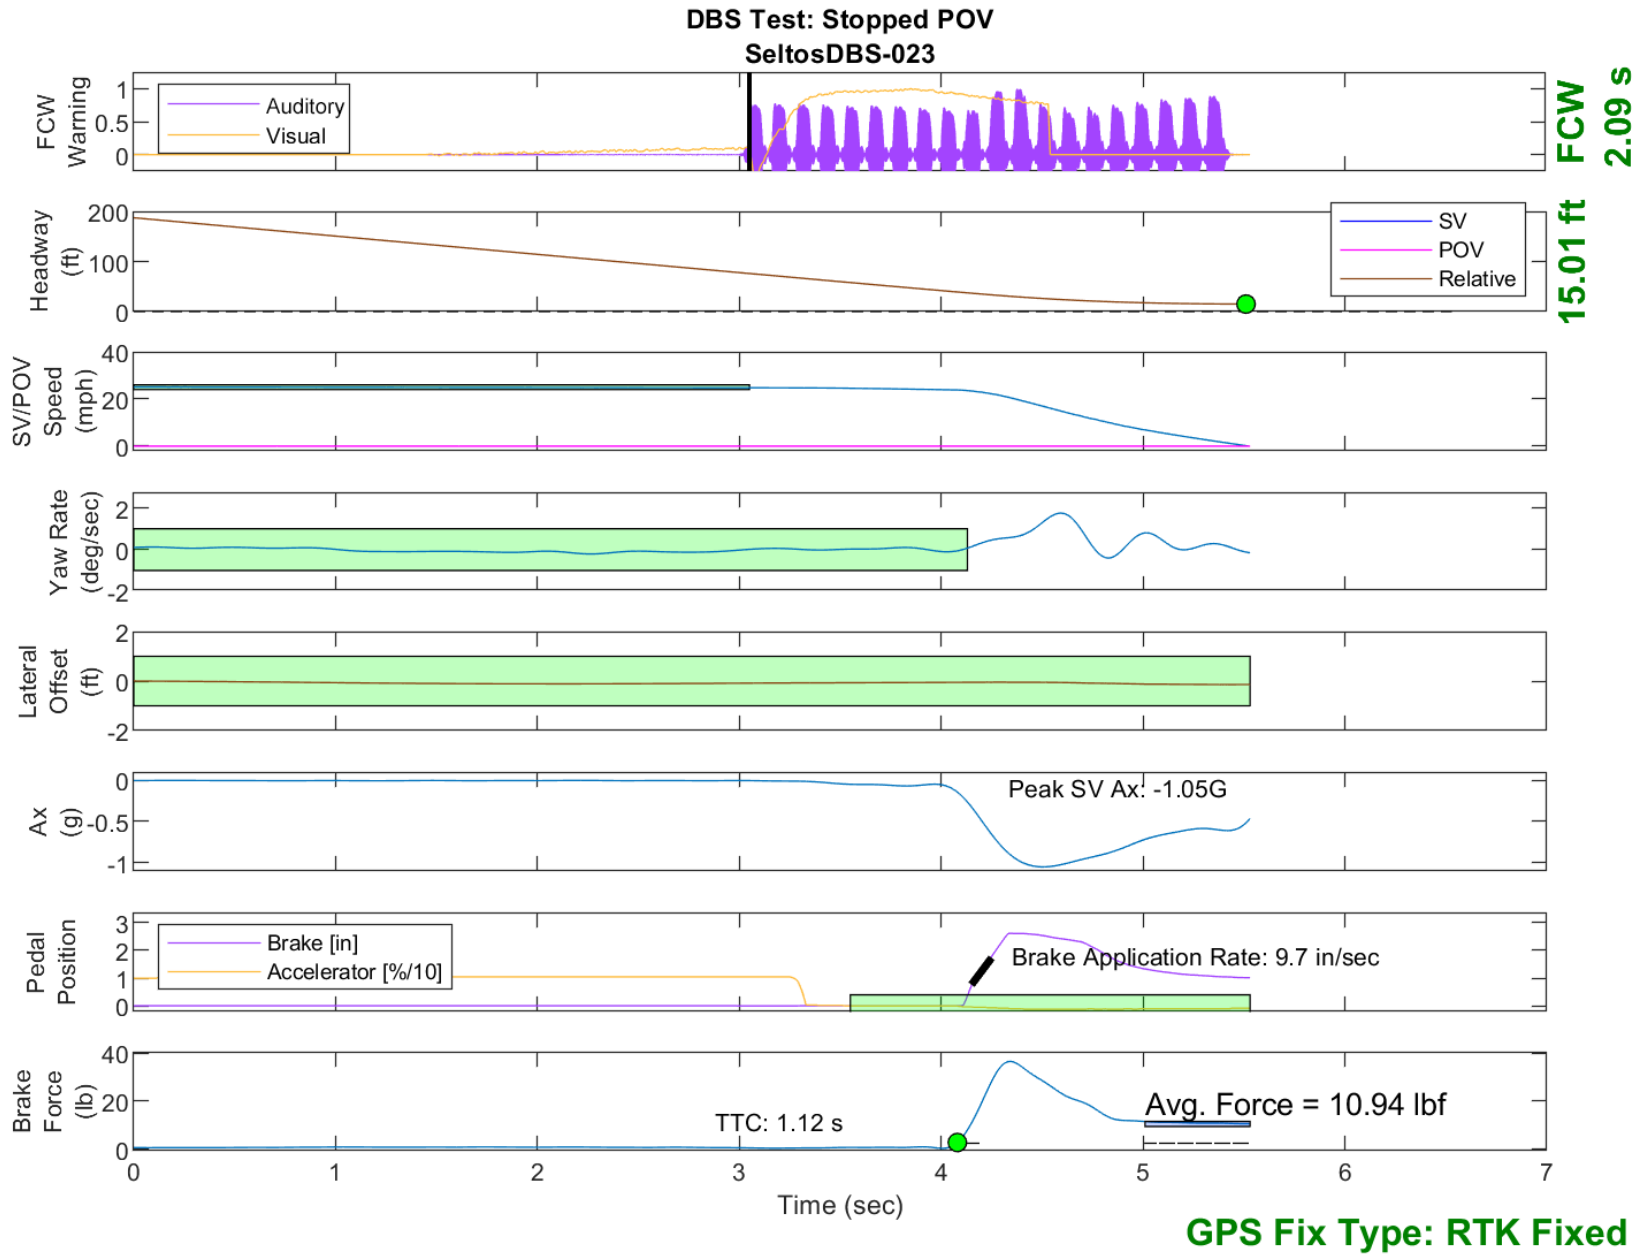


Figure E18. Time History for DBS Run 23, SV Encounters Stopped POV

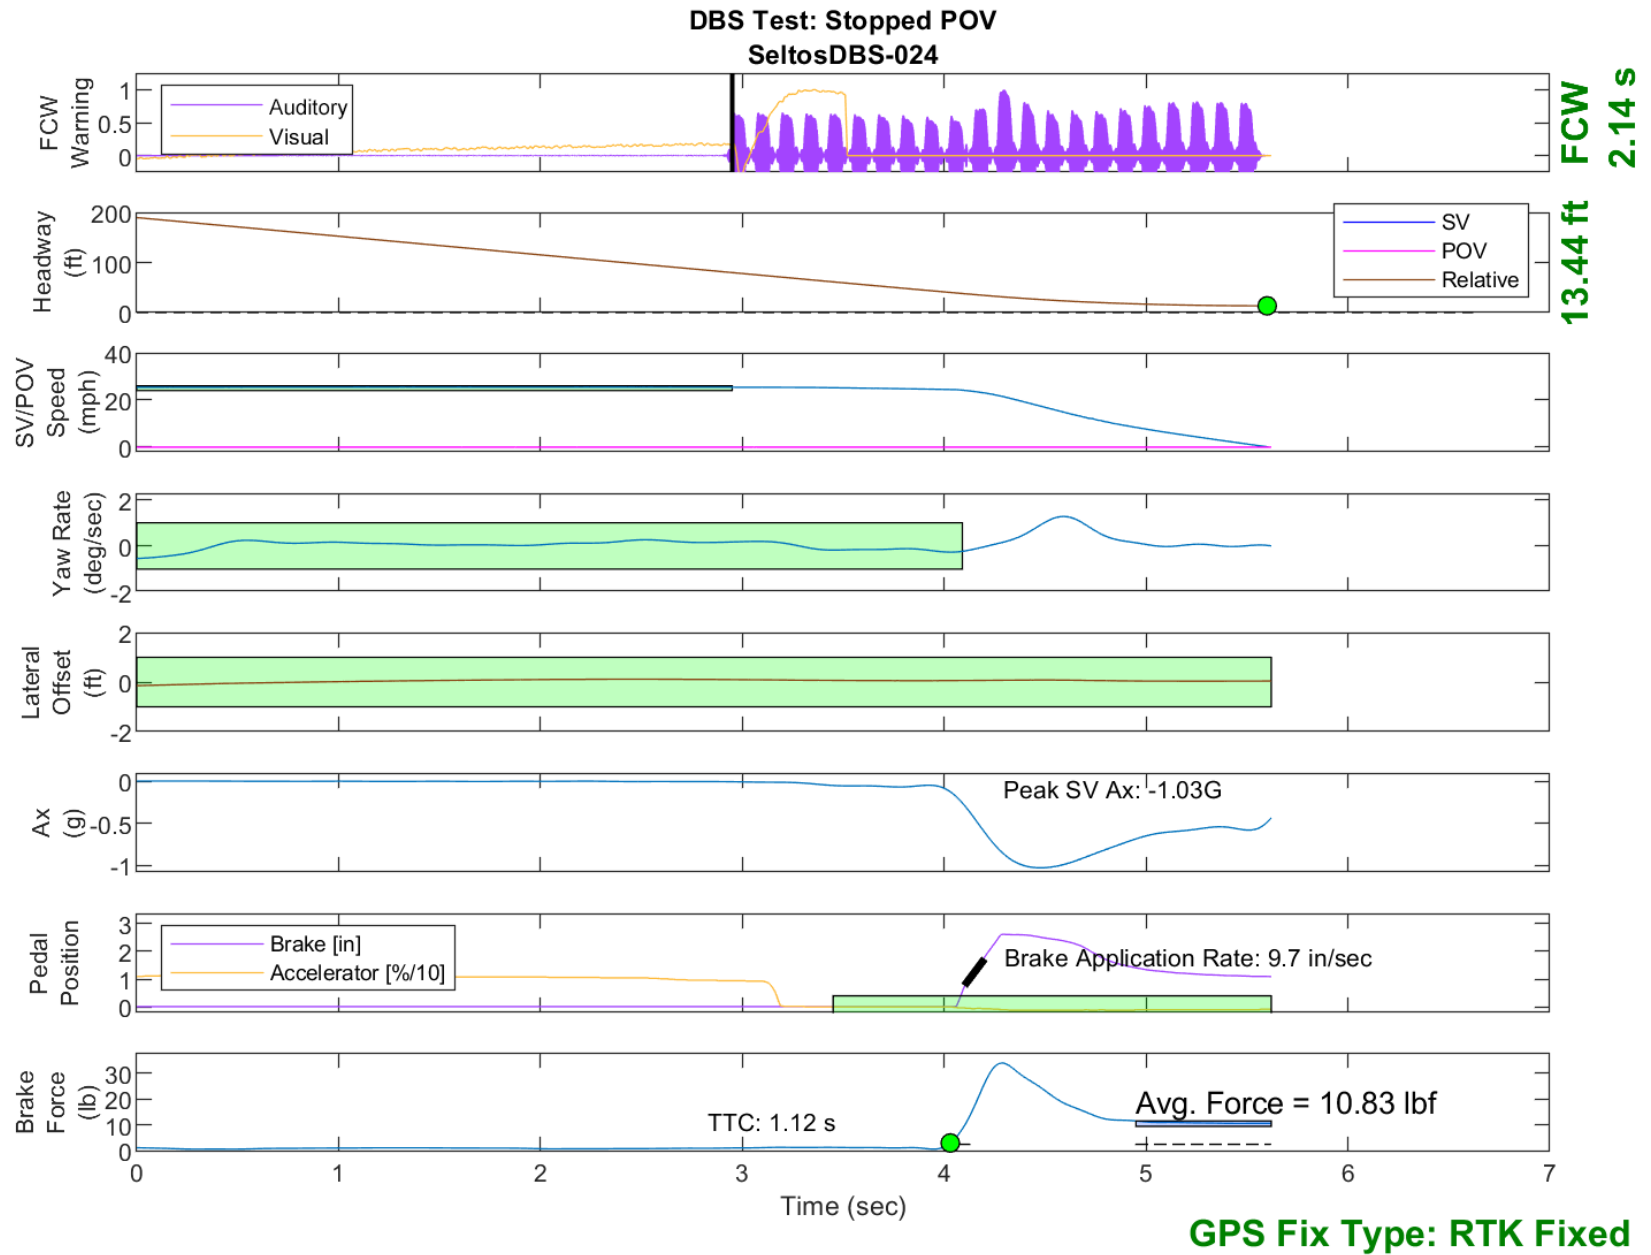


Figure E19. Time History for DBS Run 24, SV Encounters Stopped POV

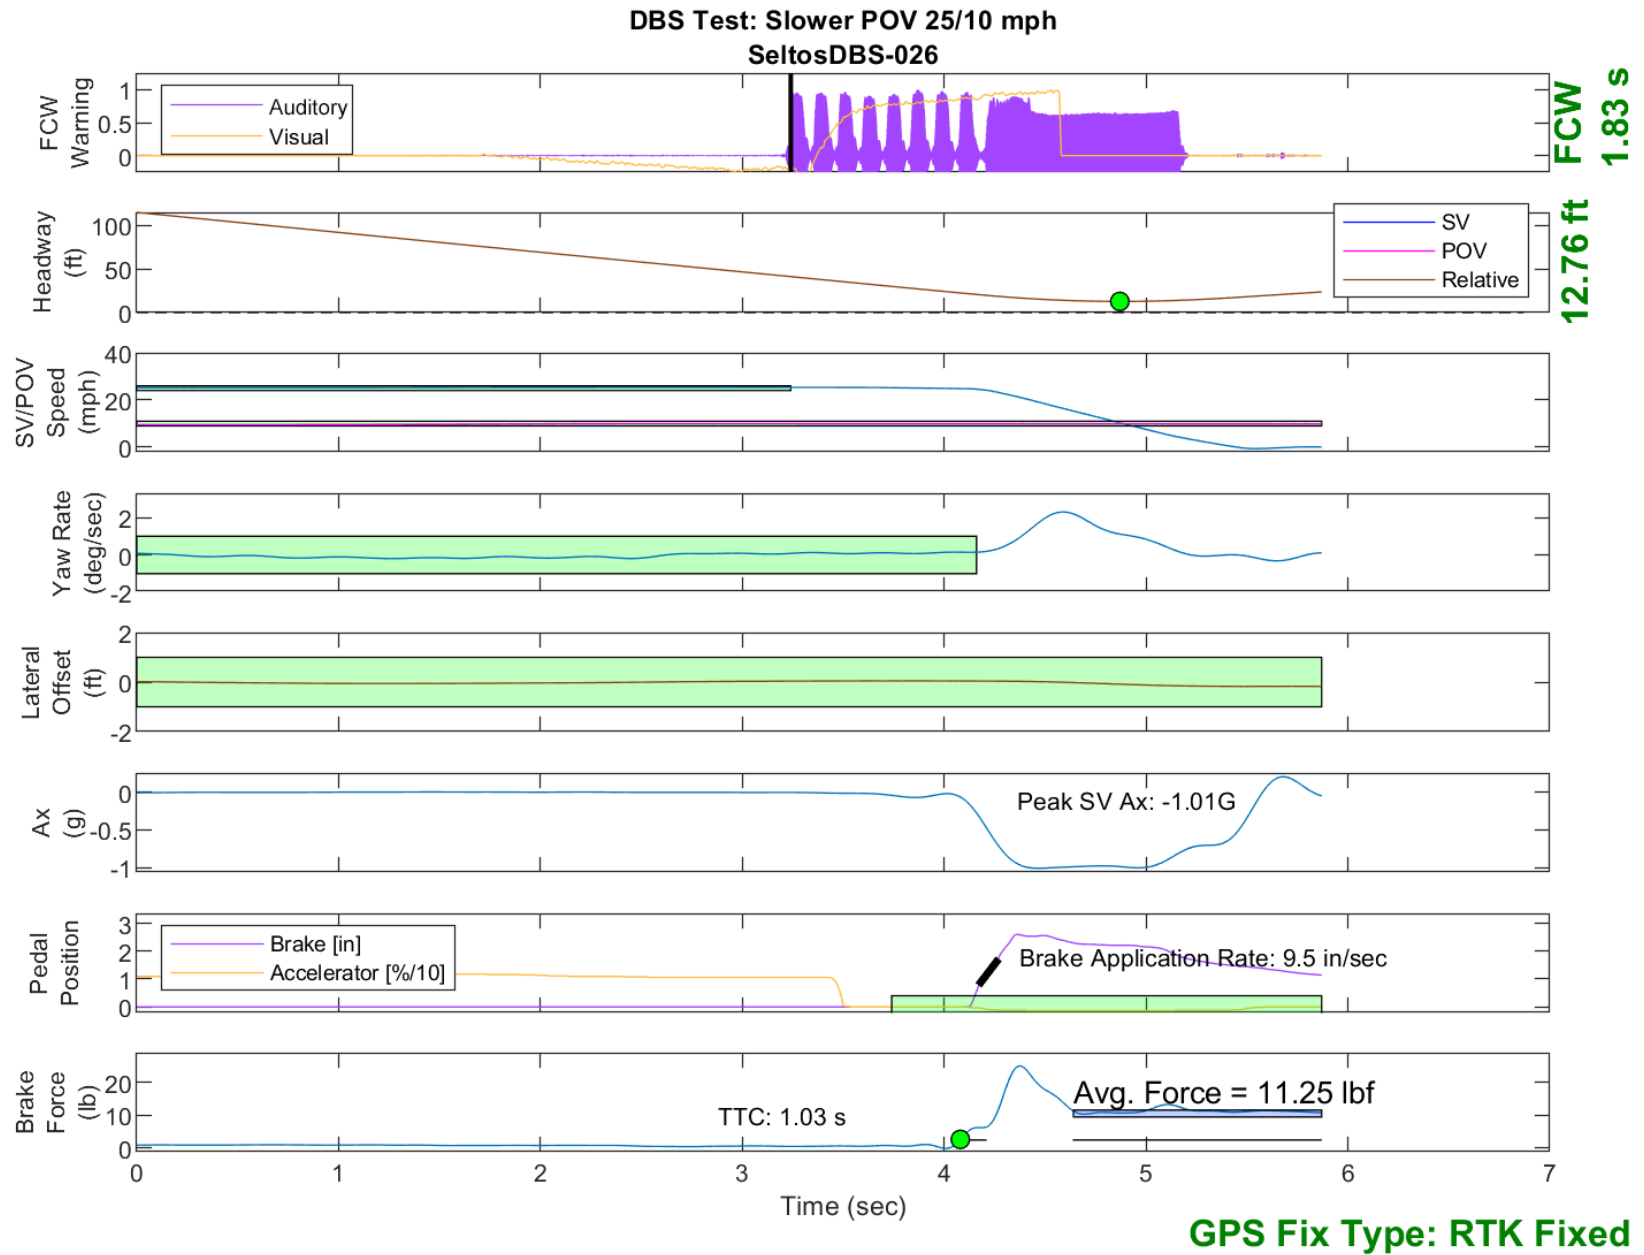


Figure E20. Time History for DBS Run 26, SV Encounters Slower POV, SV 25 mph, POV 10 mph

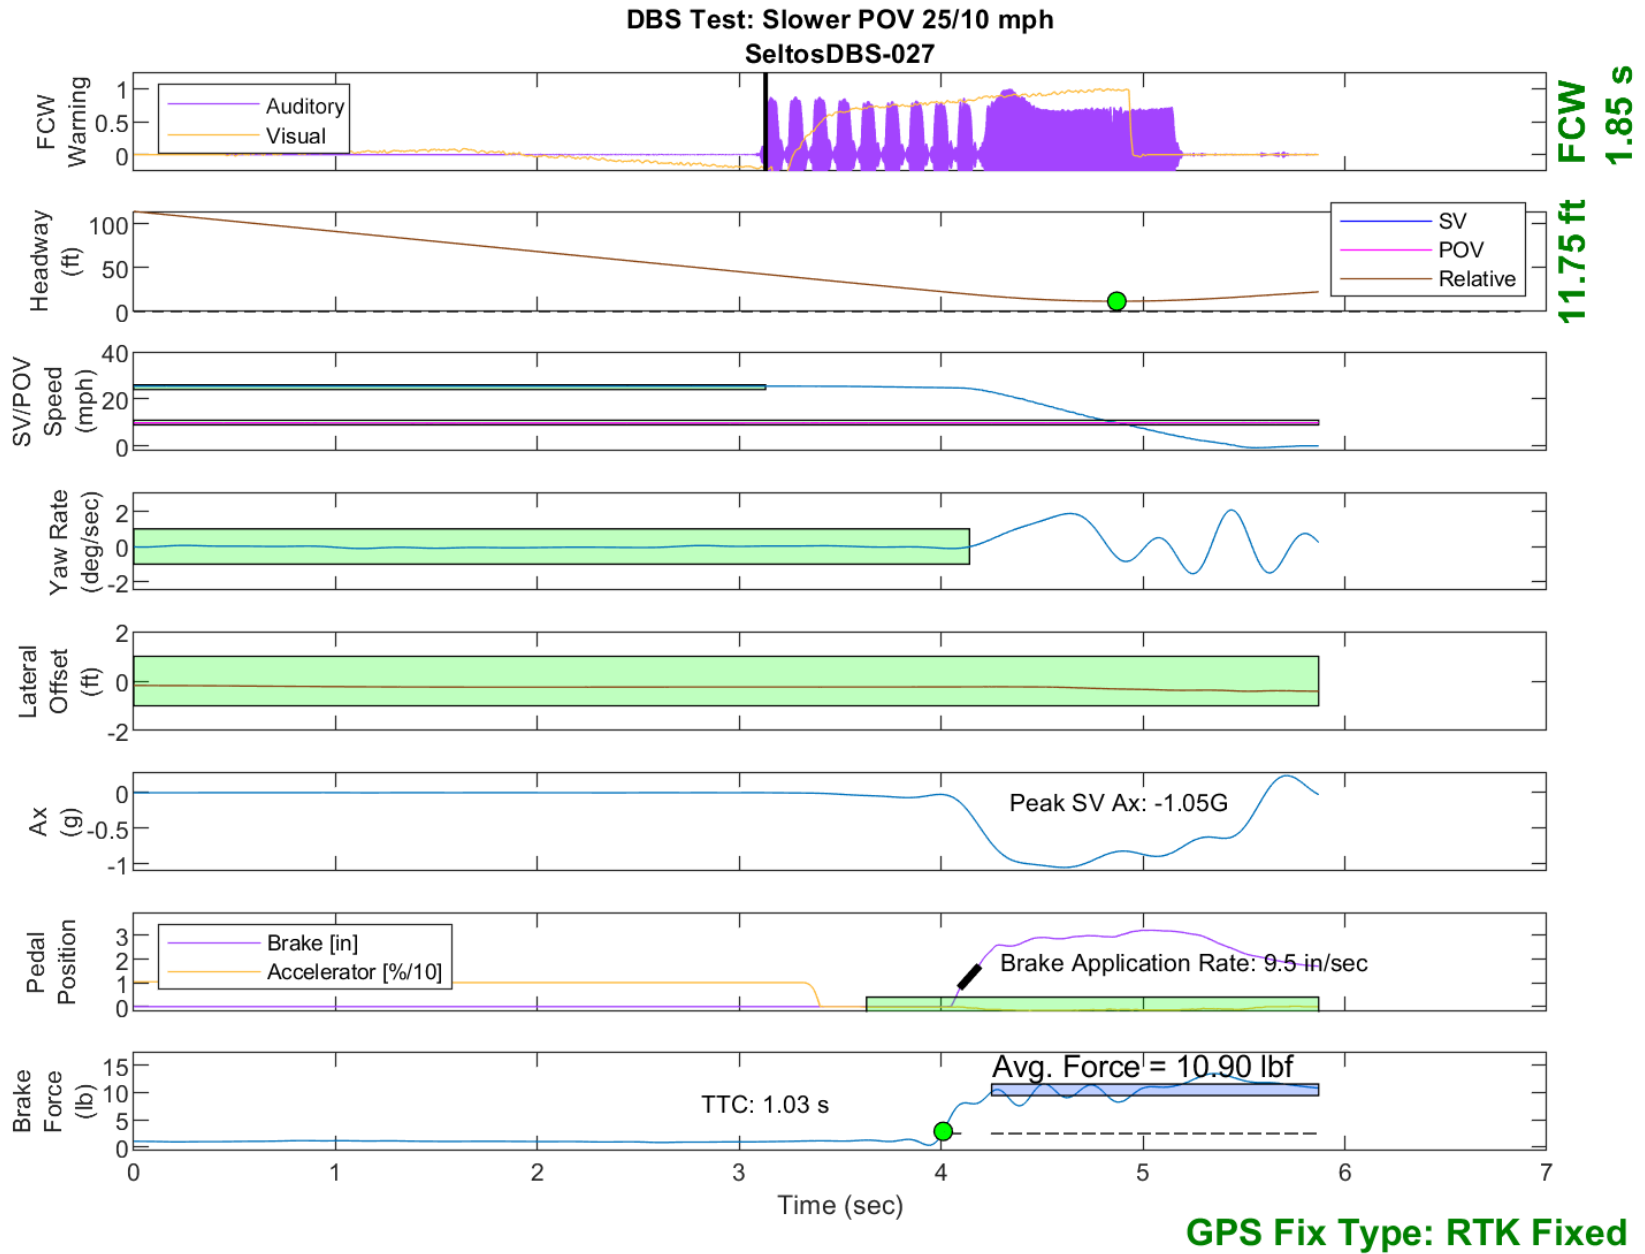


Figure E21. Time History for DBS Run 27, SV Encounters Slower POV, SV 25 mph, POV 10 mph

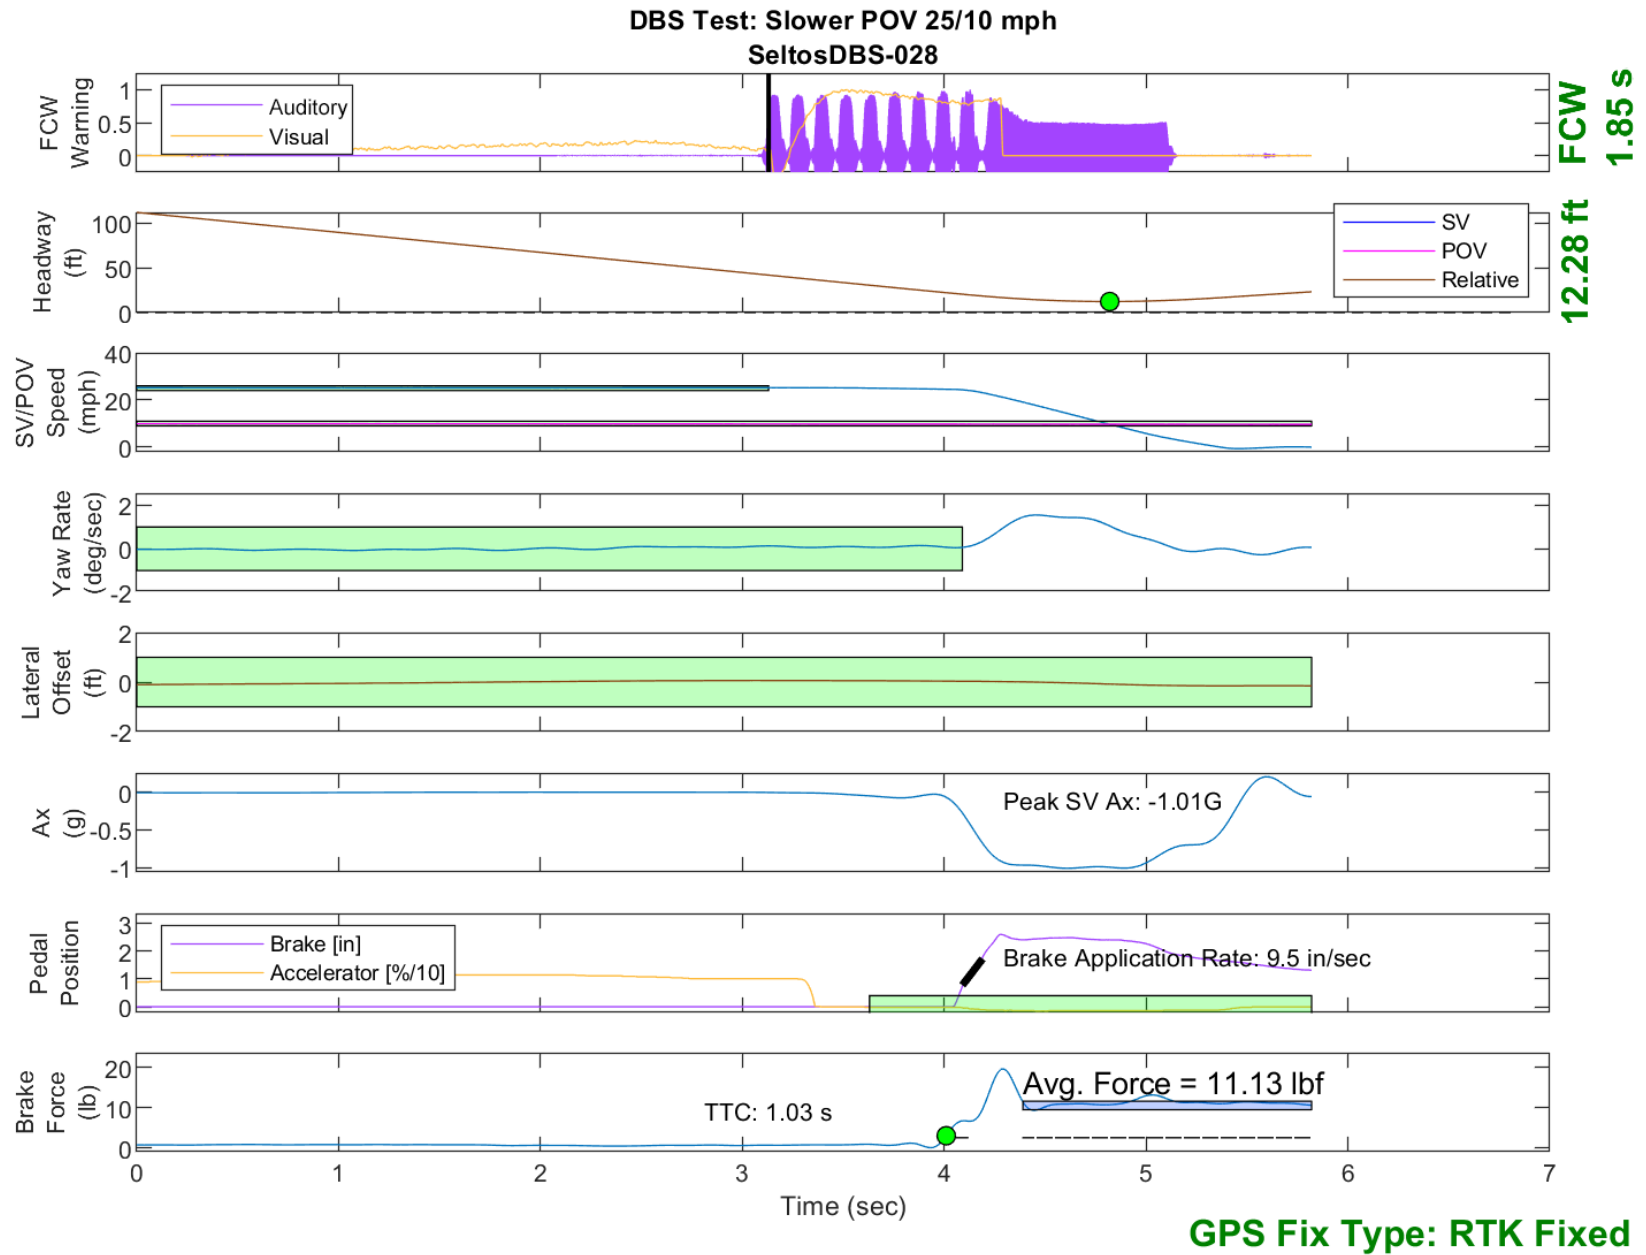


Figure E22. Time History for DBS Run 28, SV Encounters Slower POV, SV 25 mph, POV 10 mph

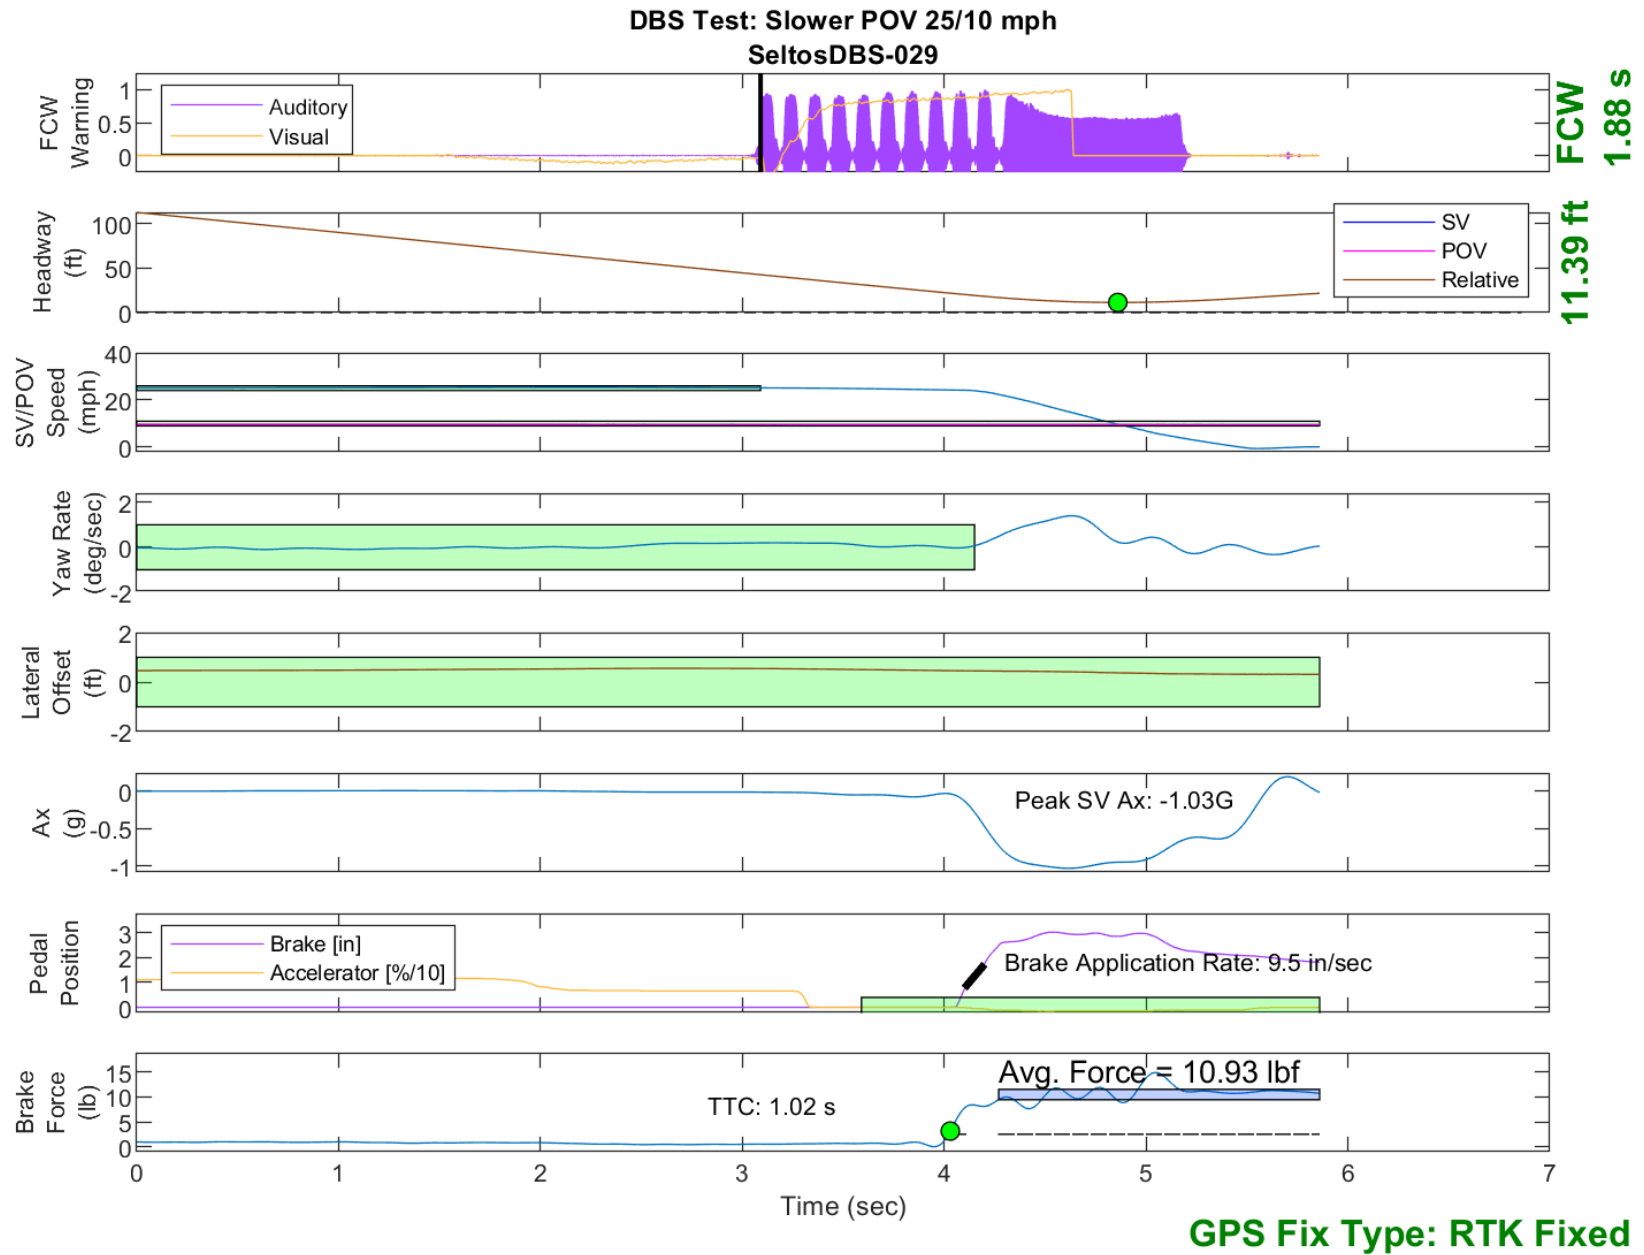


Figure E23. Time History for DBS Run 29, SV Encounters Slower POV, SV 25 mph, POV 10 mph

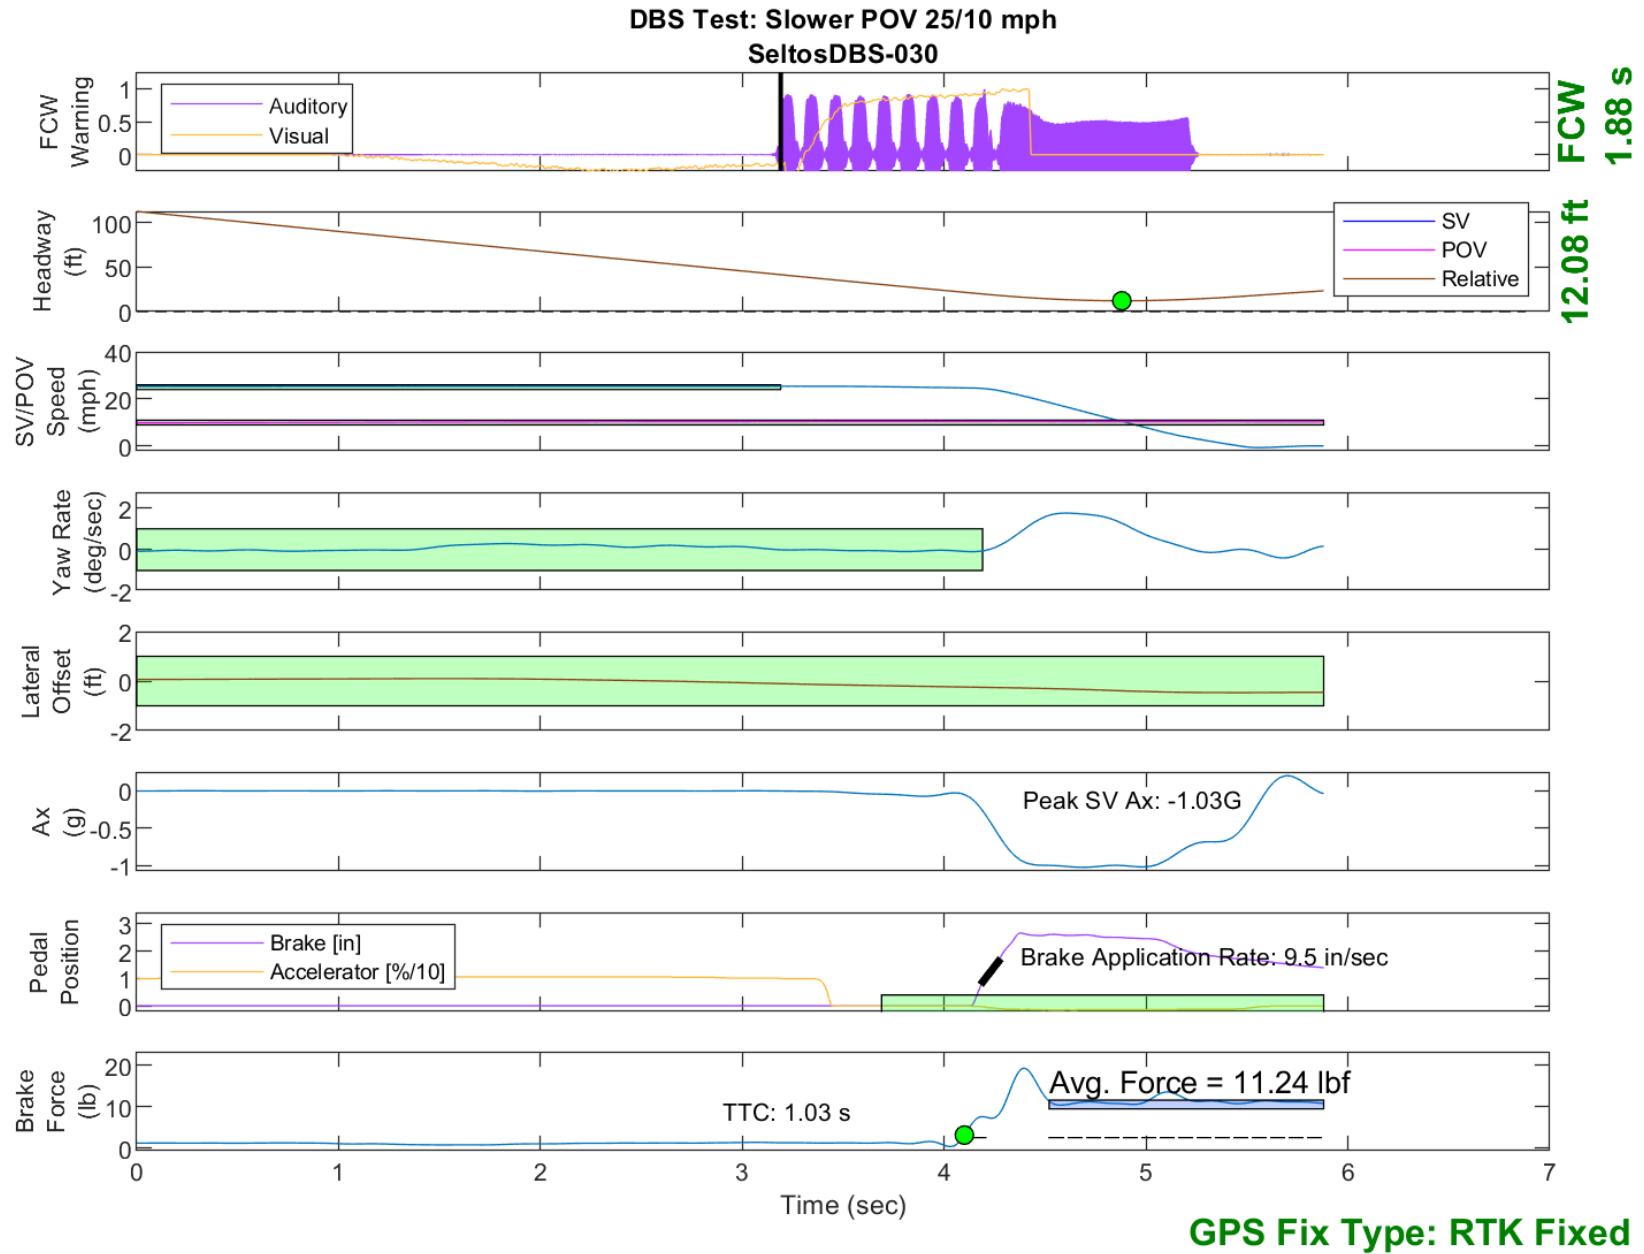


Figure E24. Time History for DBS Run 30, SV Encounters Slower POV, SV 25 mph, POV 10 mph

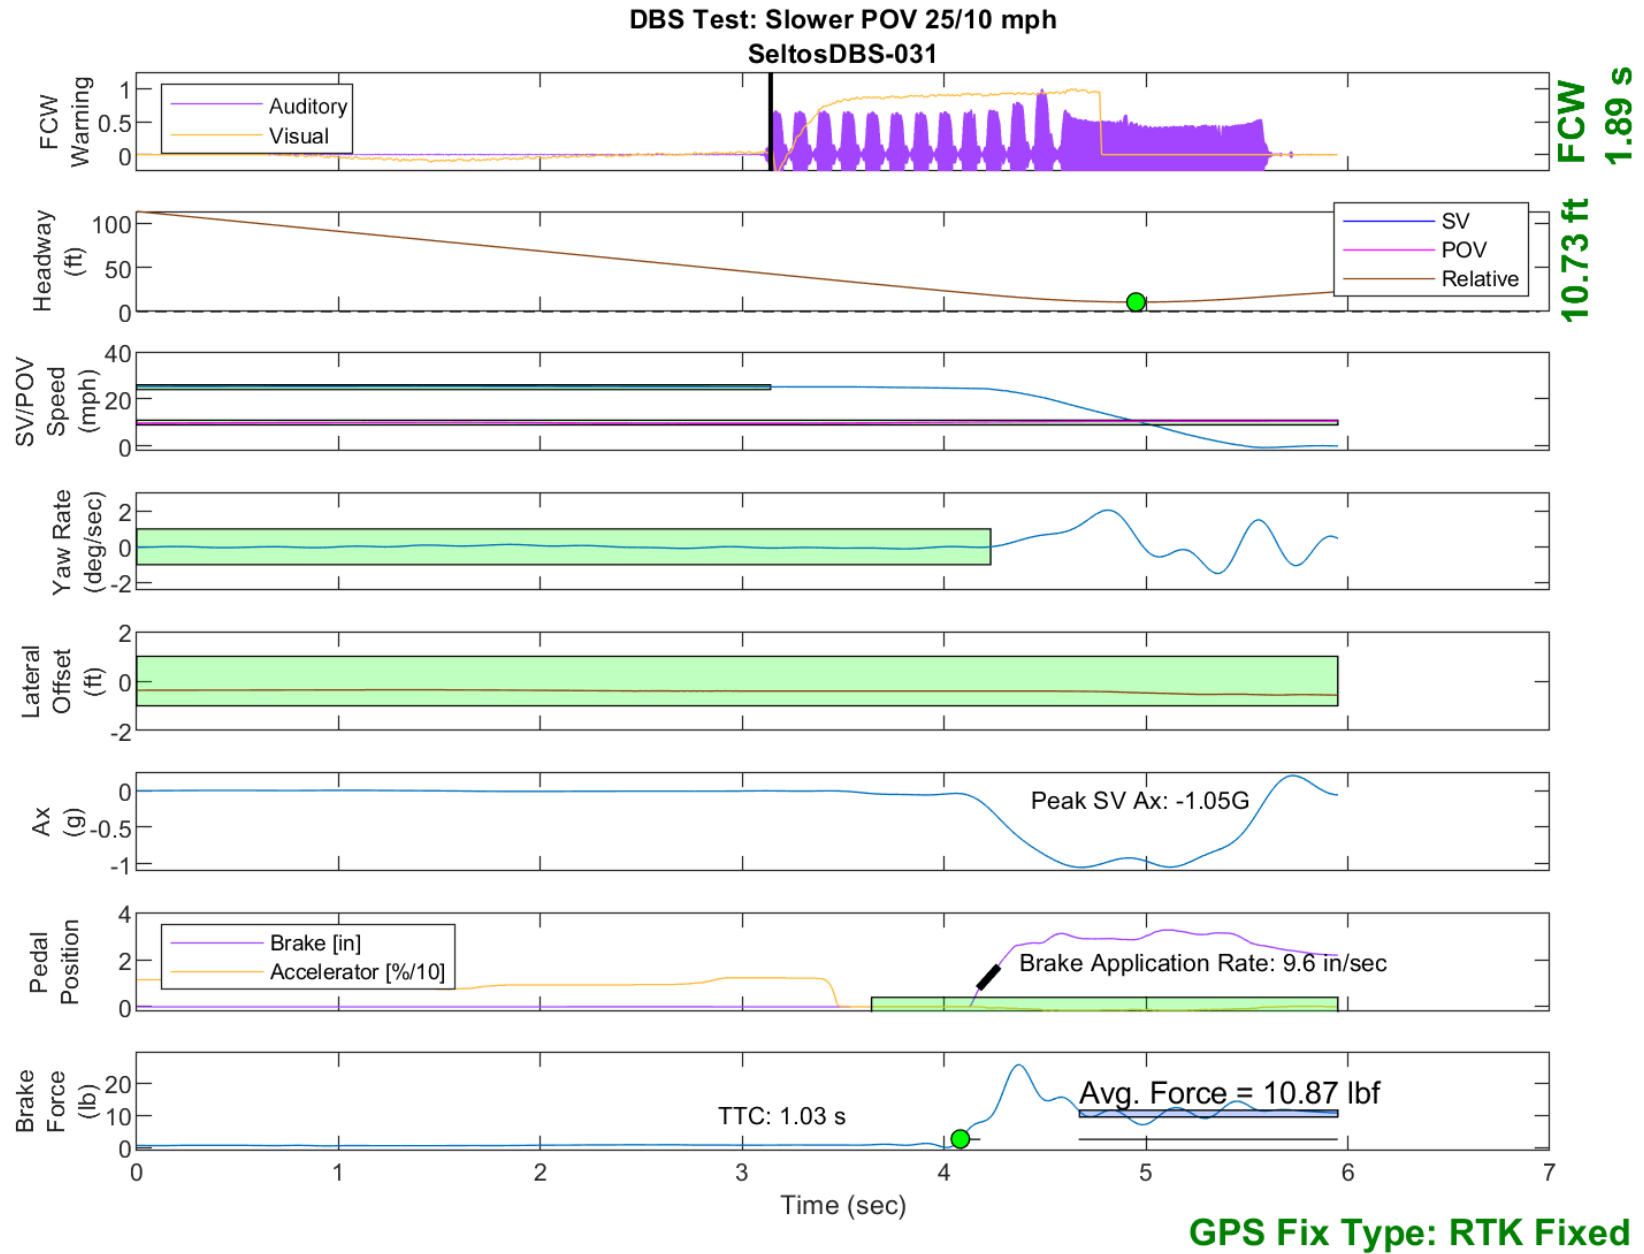


Figure E25. Time History for DBS Run 31, SV Encounters Slower POV, SV 25 mph, POV 10 mph

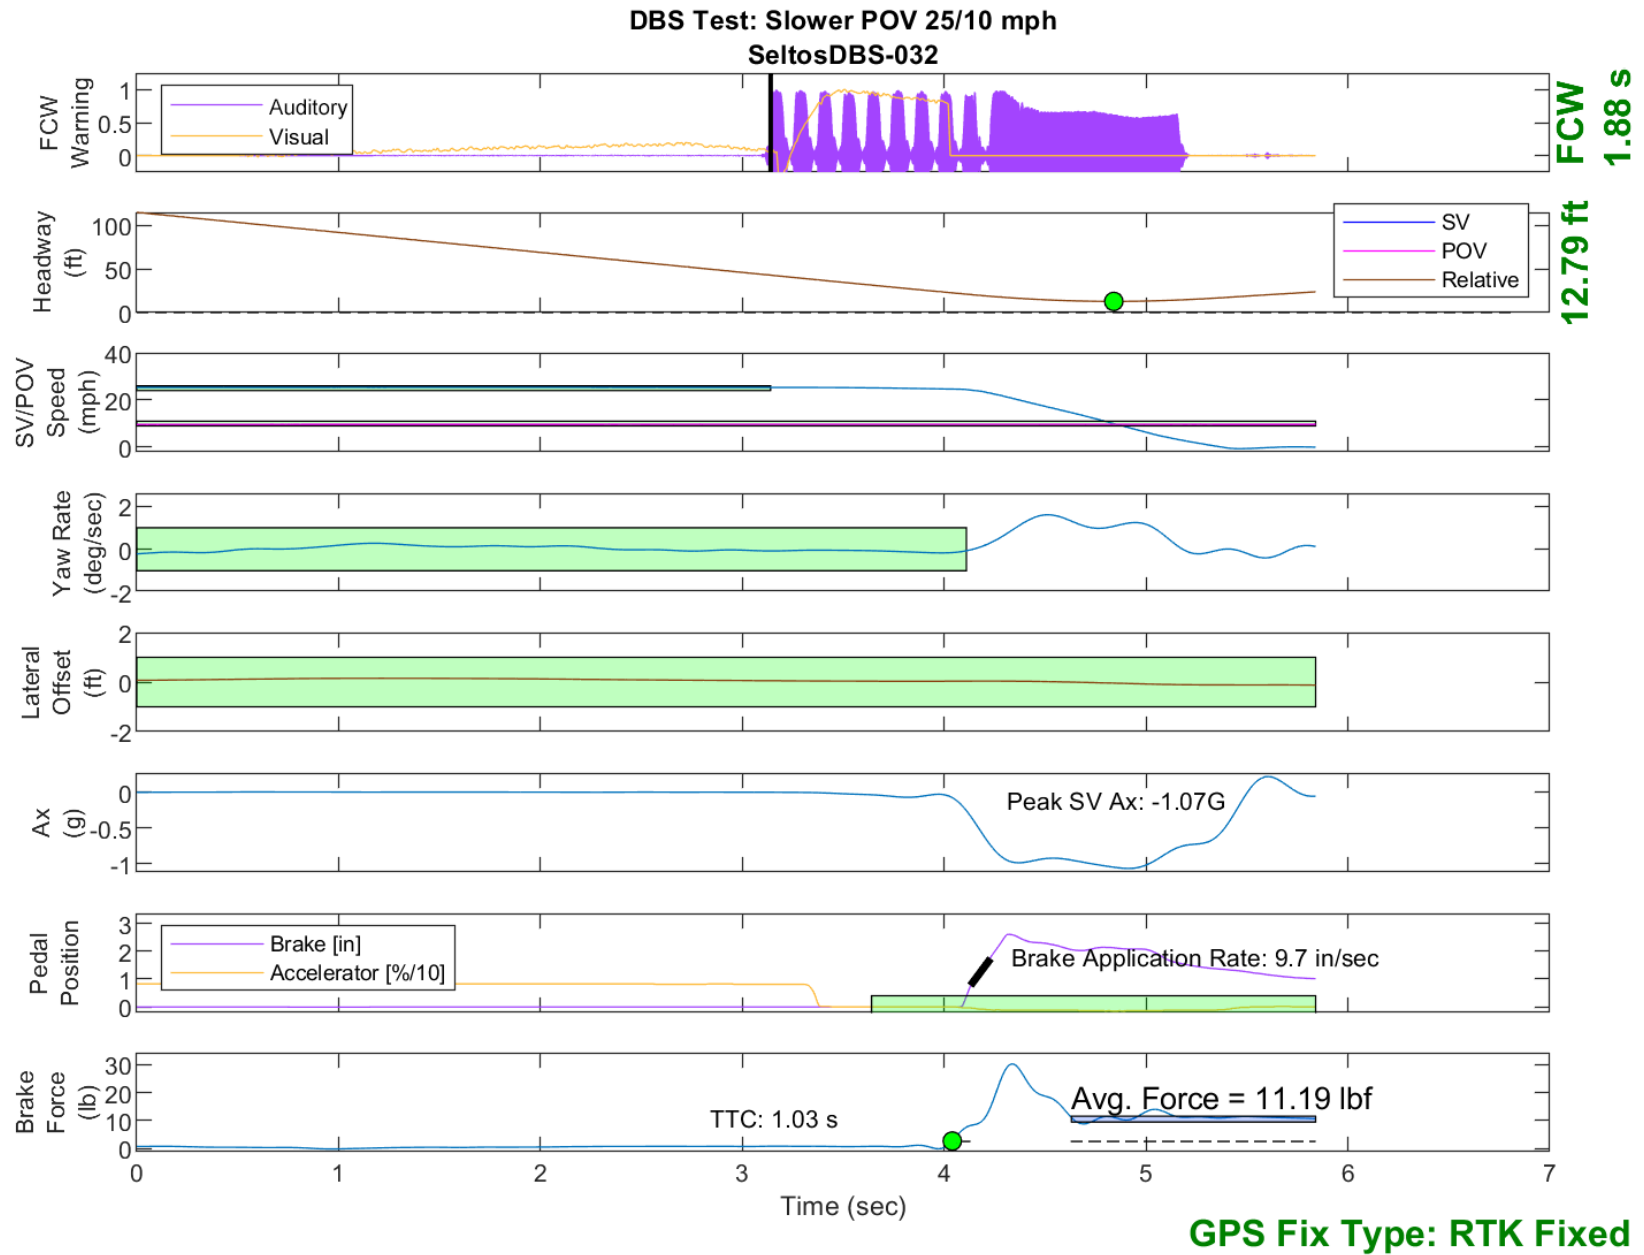


Figure E26. Time History for DBS Run 32, SV Encounters Slower POV, SV 25 mph, POV 10 mph

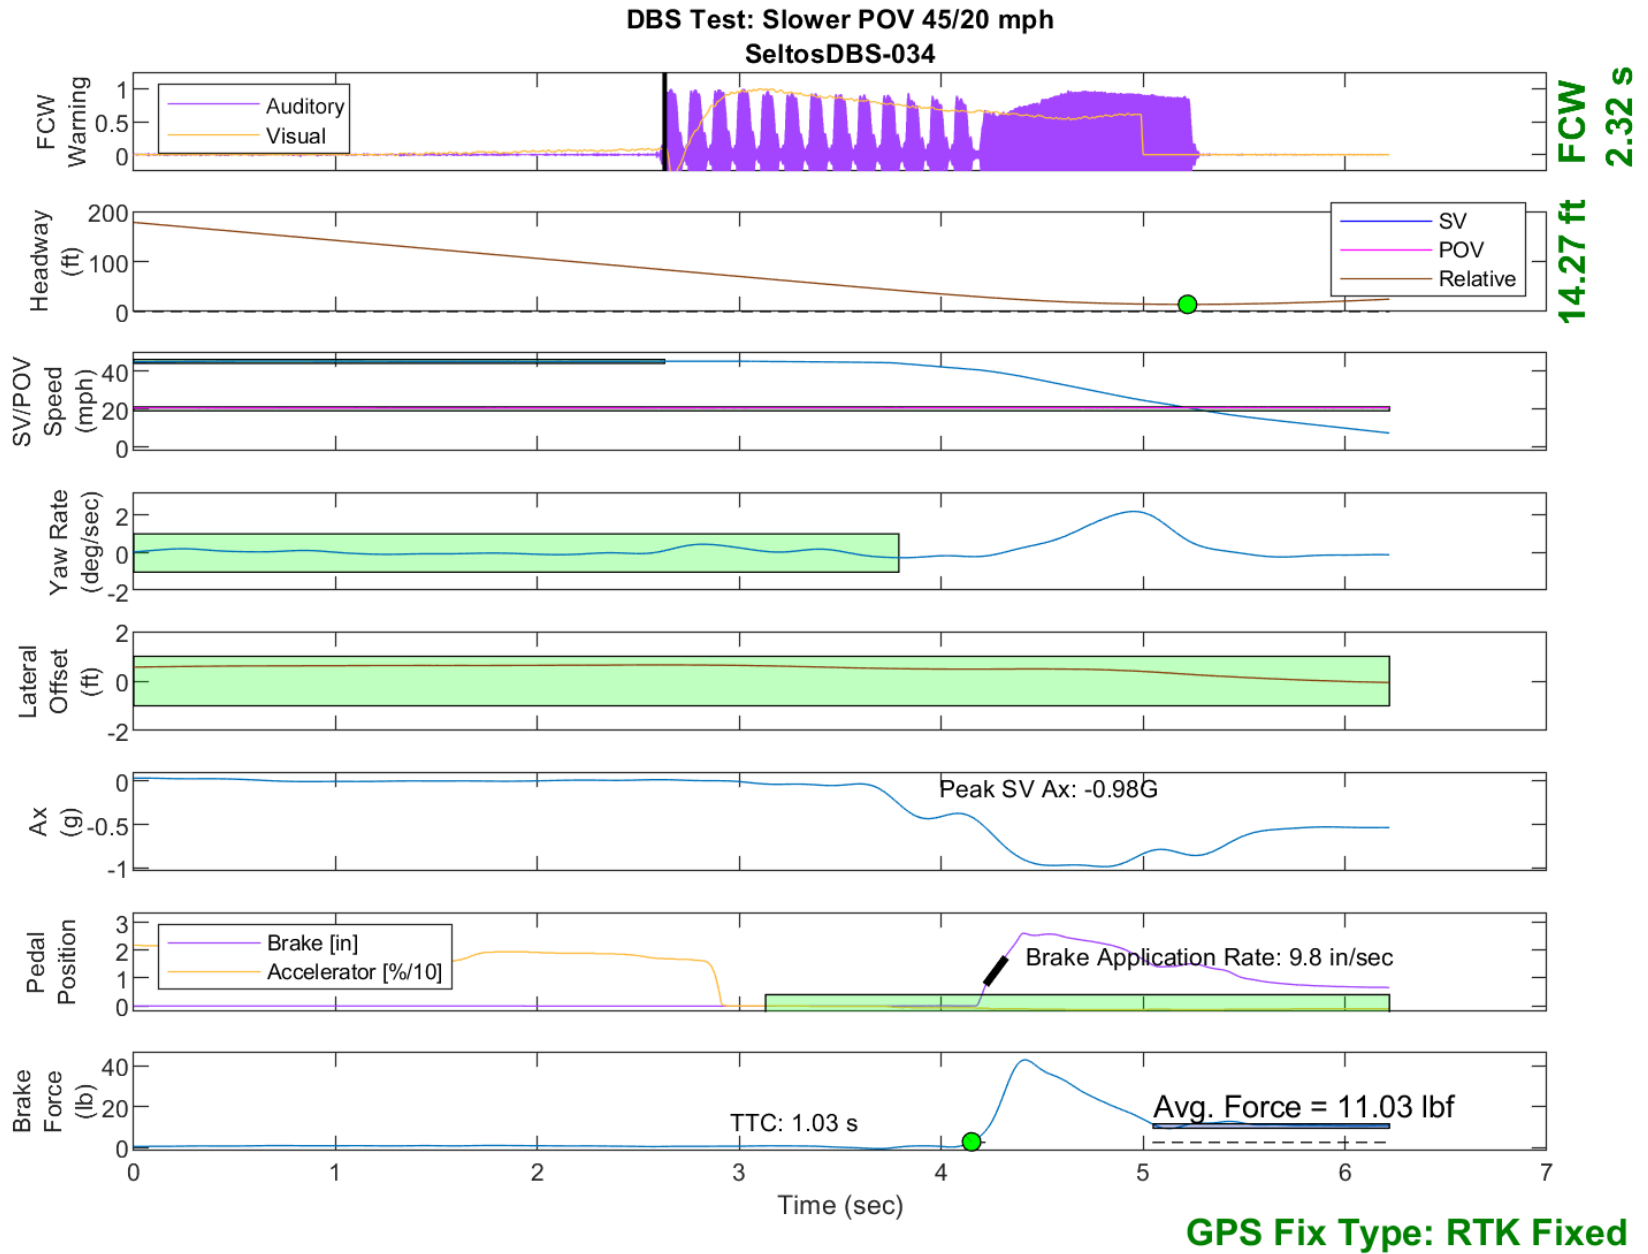


Figure E27. Time History for DBS Run 34, SV Encounters Slower POV, SV 45 mph, POV 20 mph

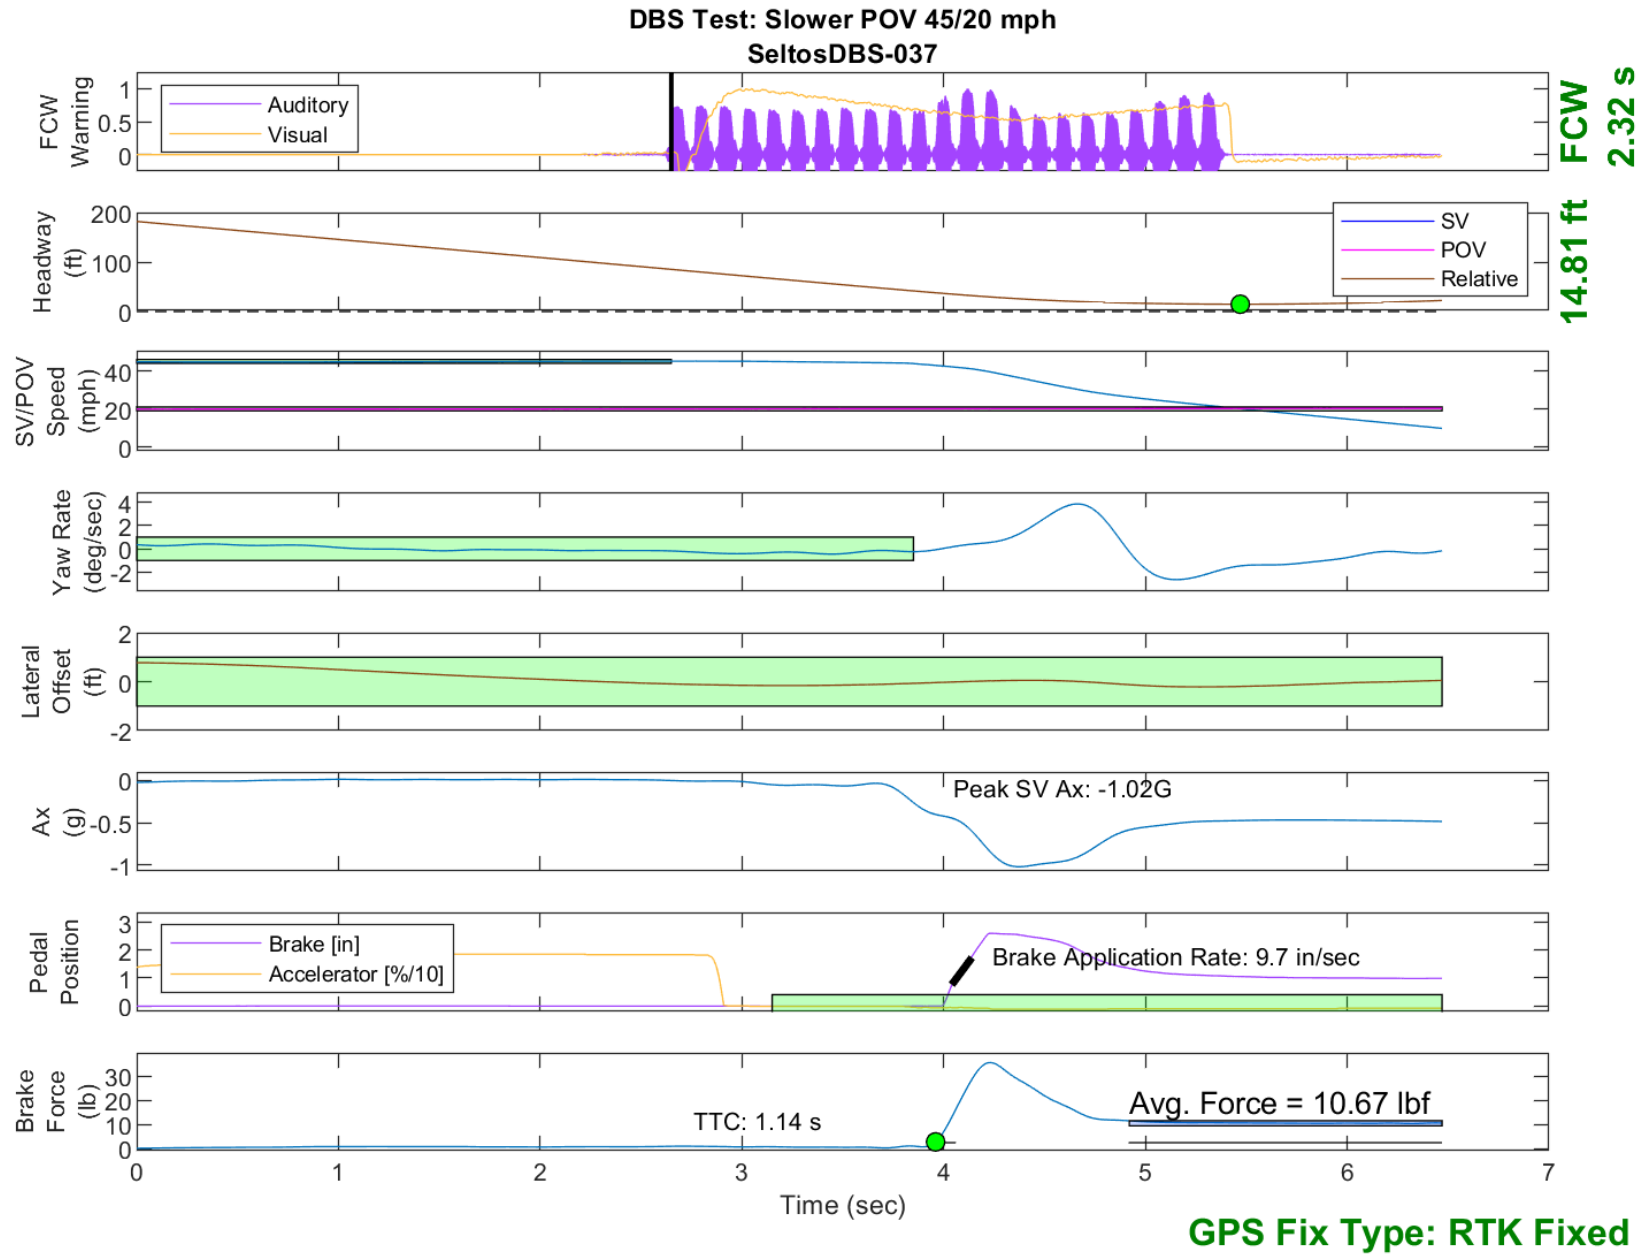


Figure E28. Time History for DBS Run 37, SV Encounters Slower POV, SV 45 mph, POV 20 mph

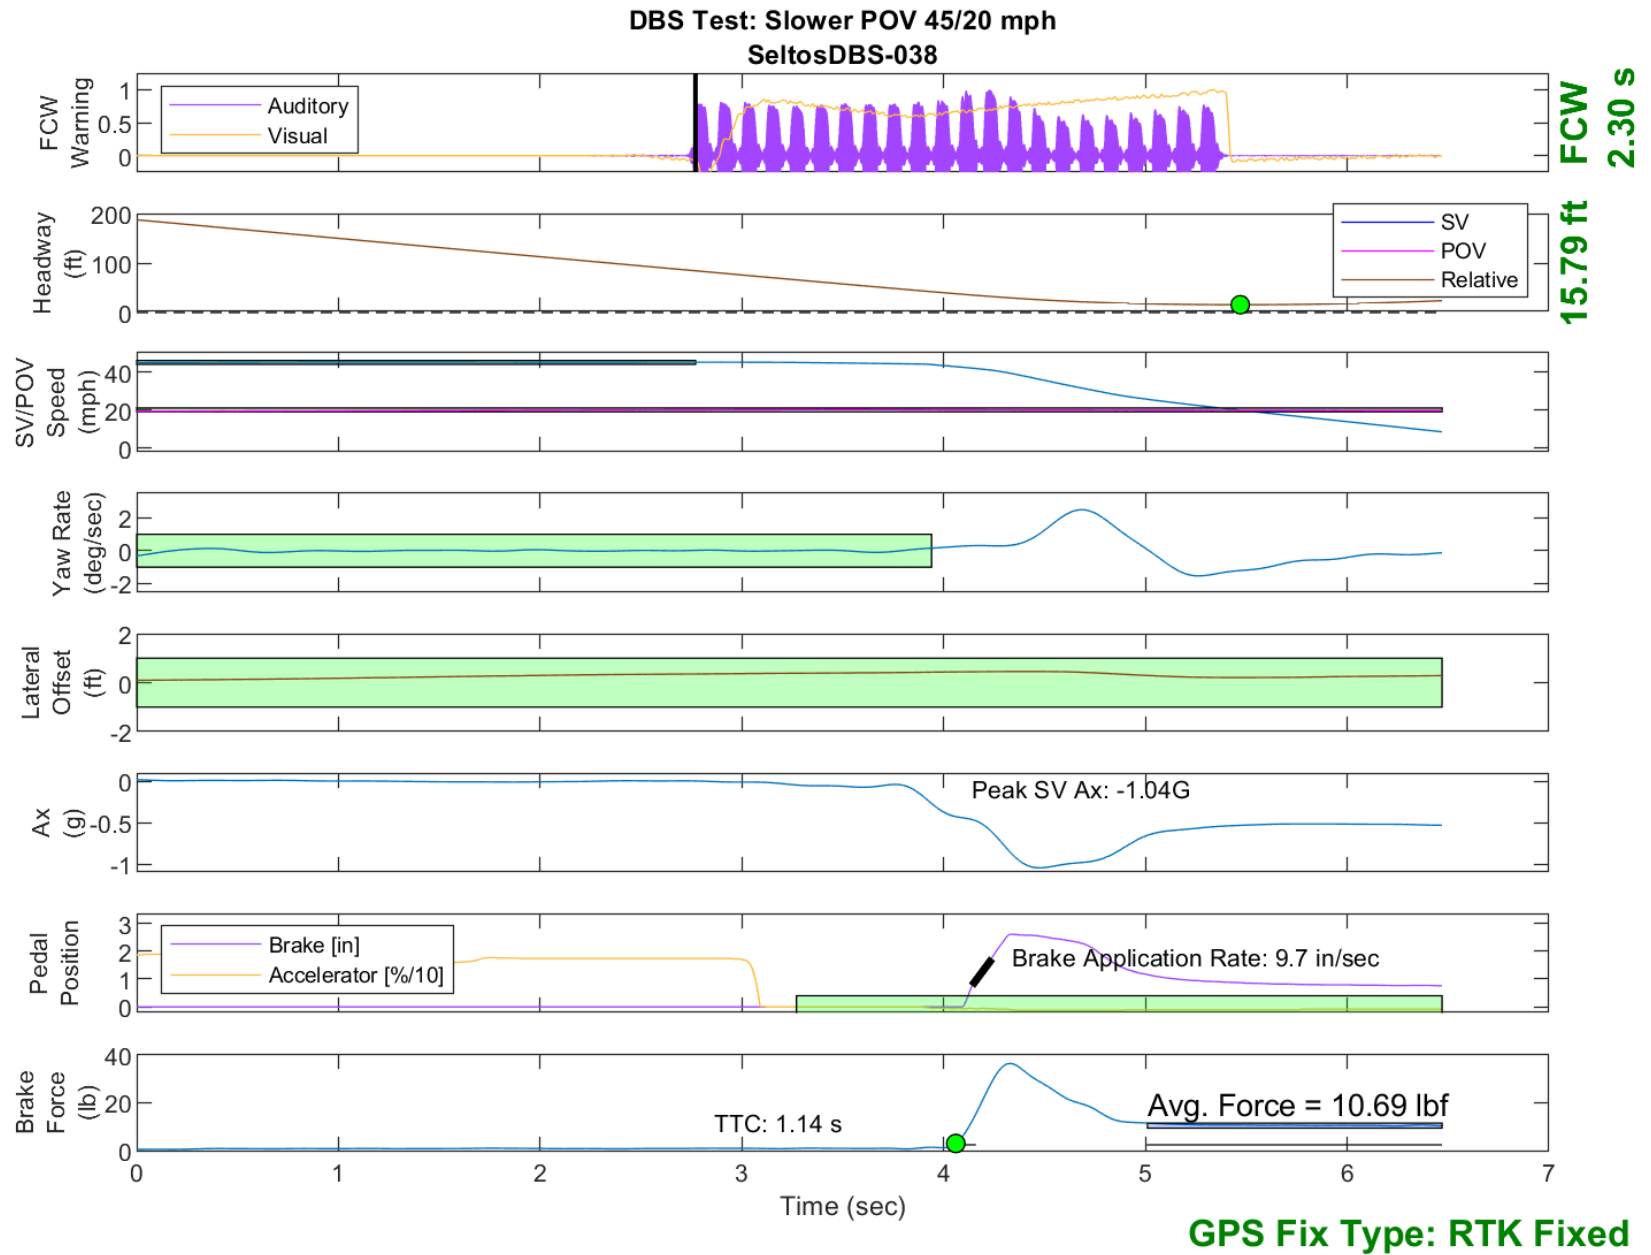


Figure E29. Time History for DBS Run 38, SV Encounters Slower POV, SV 45 mph, POV 20 mph

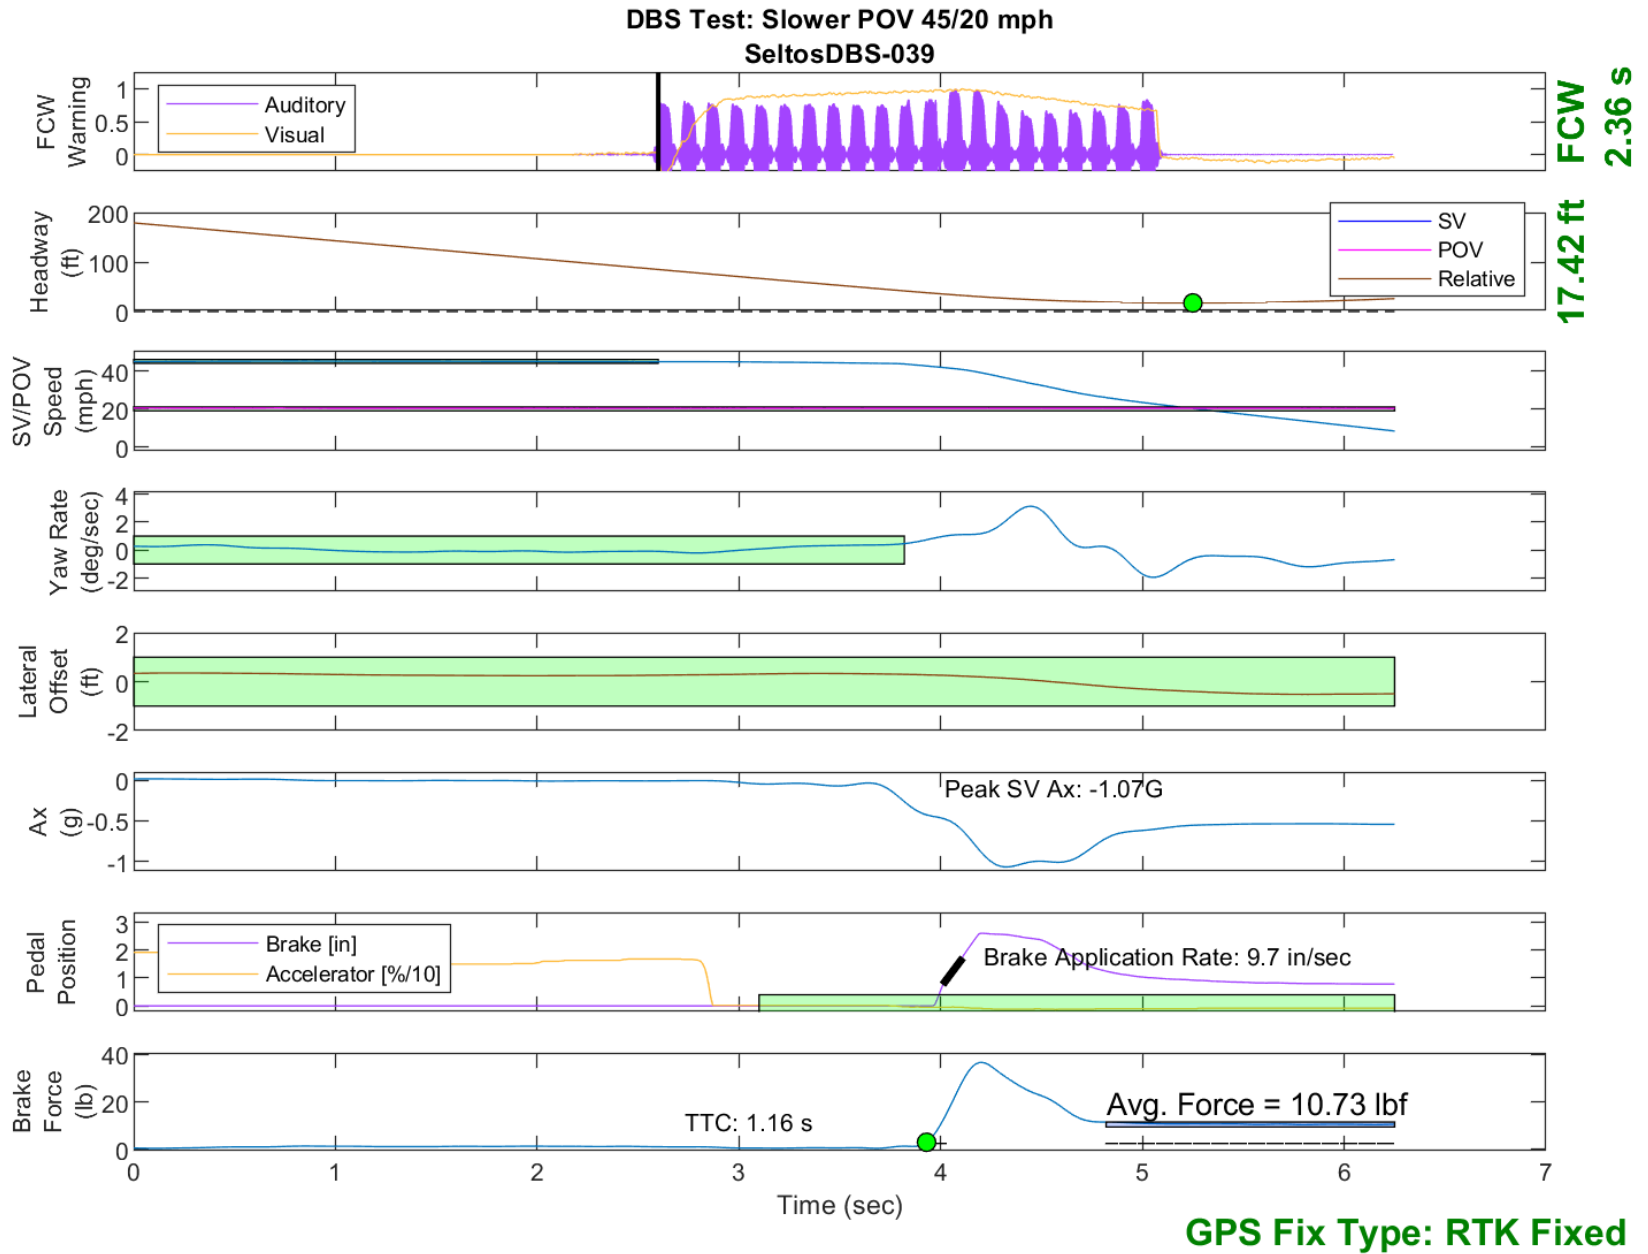


Figure E30. Time History for DBS Run 39, SV Encounters Slower POV, SV 45 mph, POV 20 mph

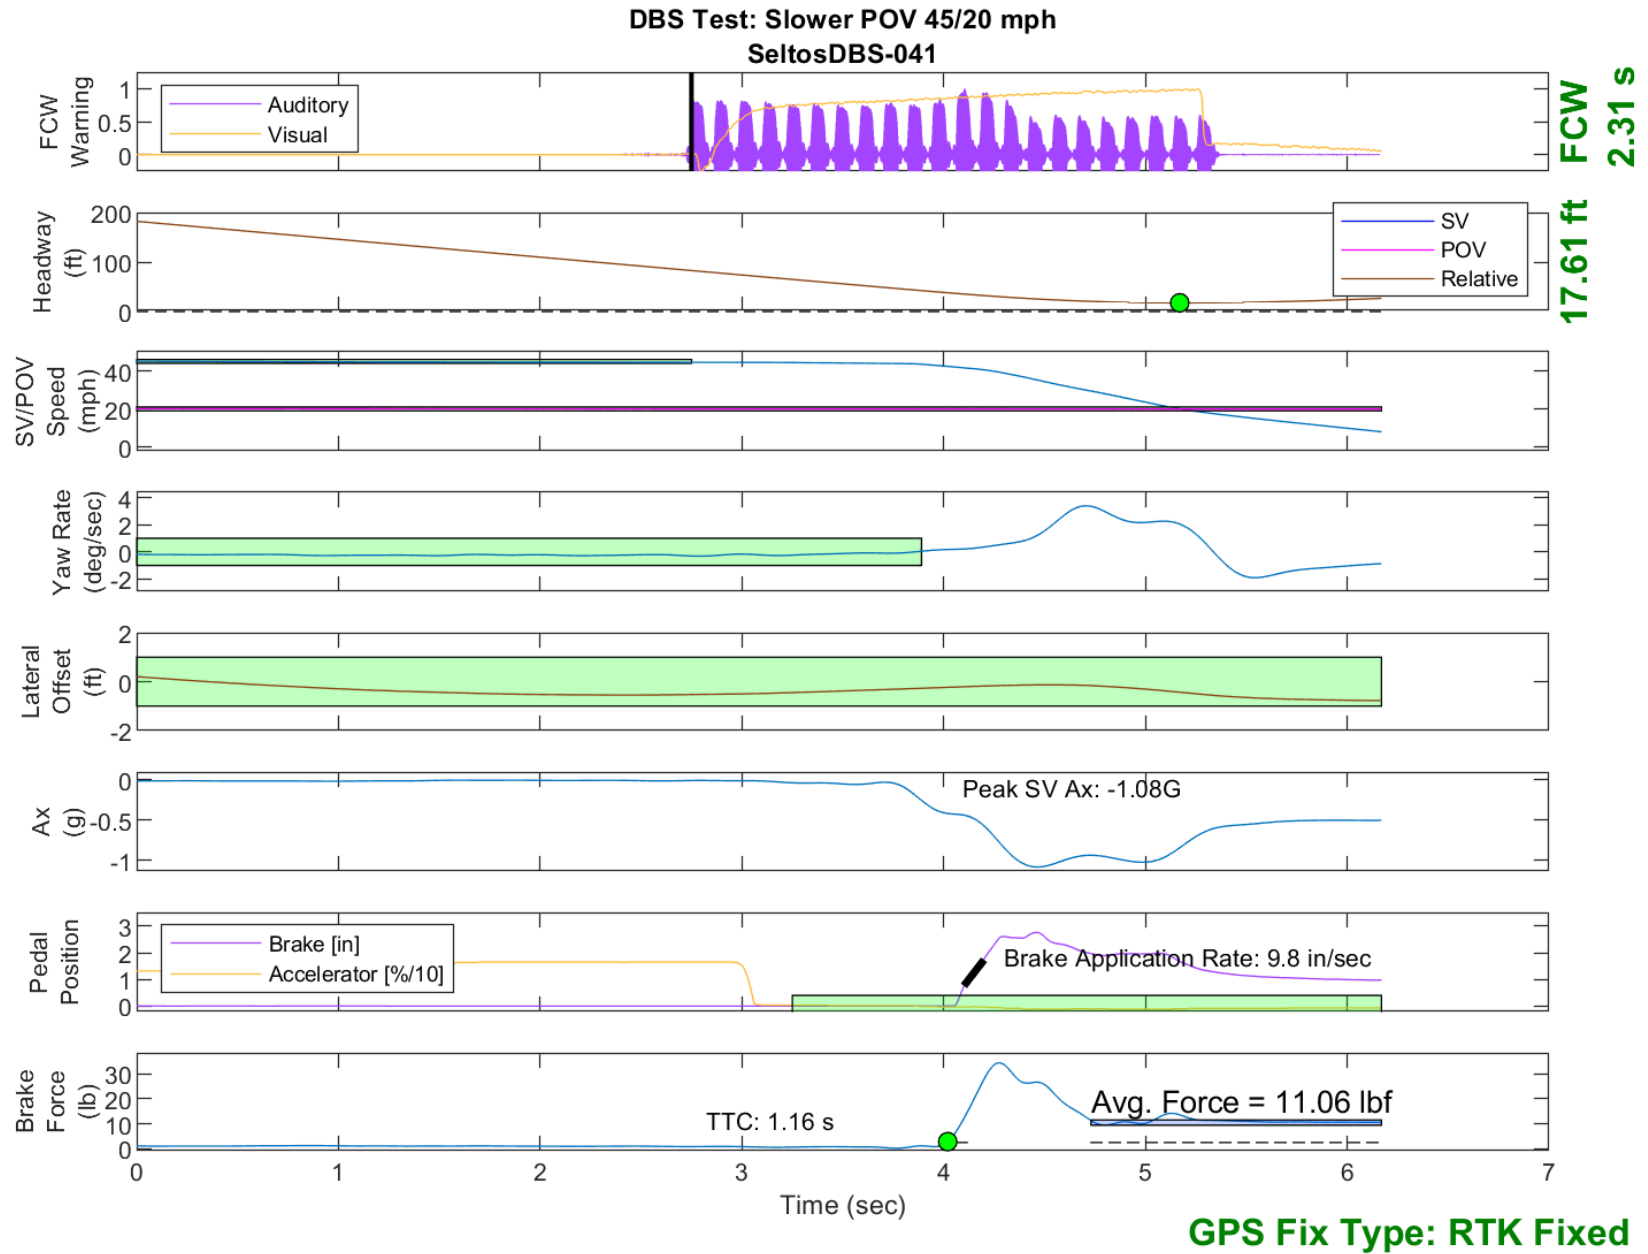


Figure E31. Time History for DBS Run 41, SV Encounters Slower POV, SV 45 mph, POV 20 mph

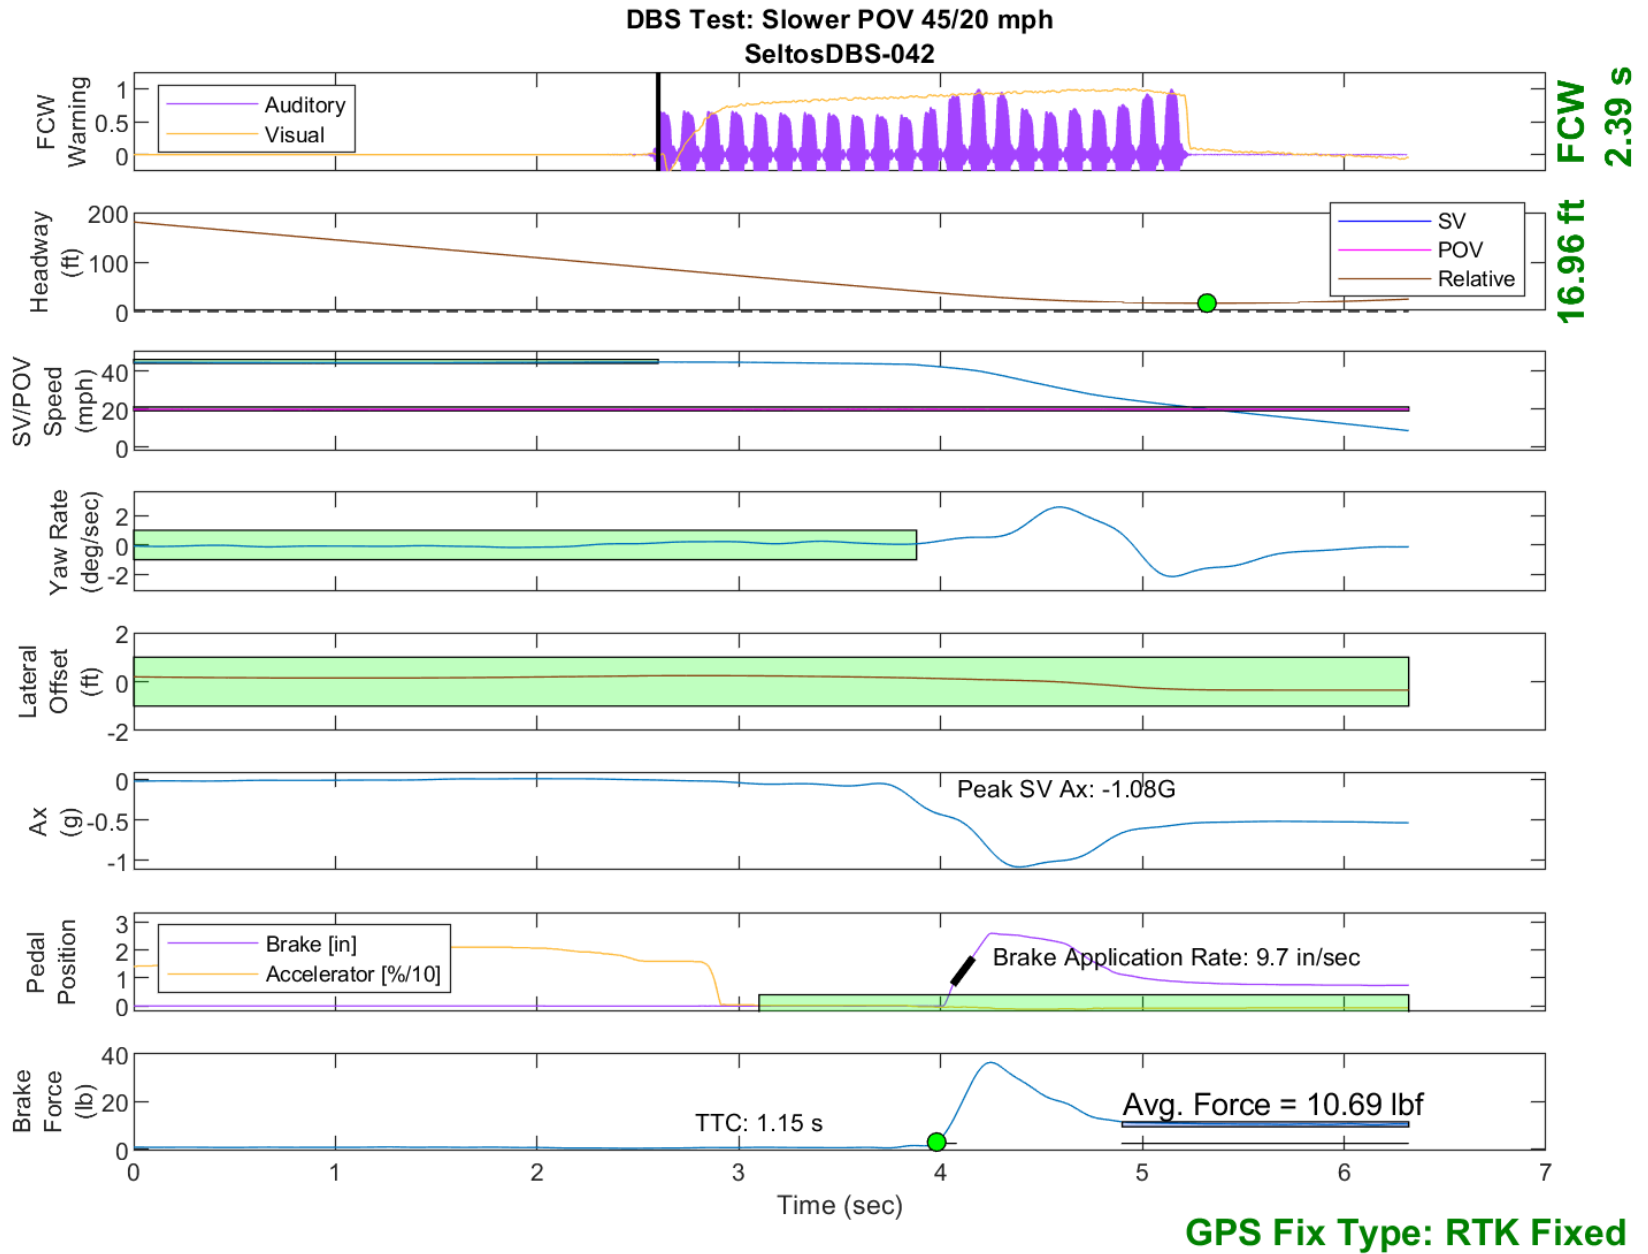


Figure E32. Time History for DBS Run 42, SV Encounters Slower POV, SV 45 mph, POV 20 mph

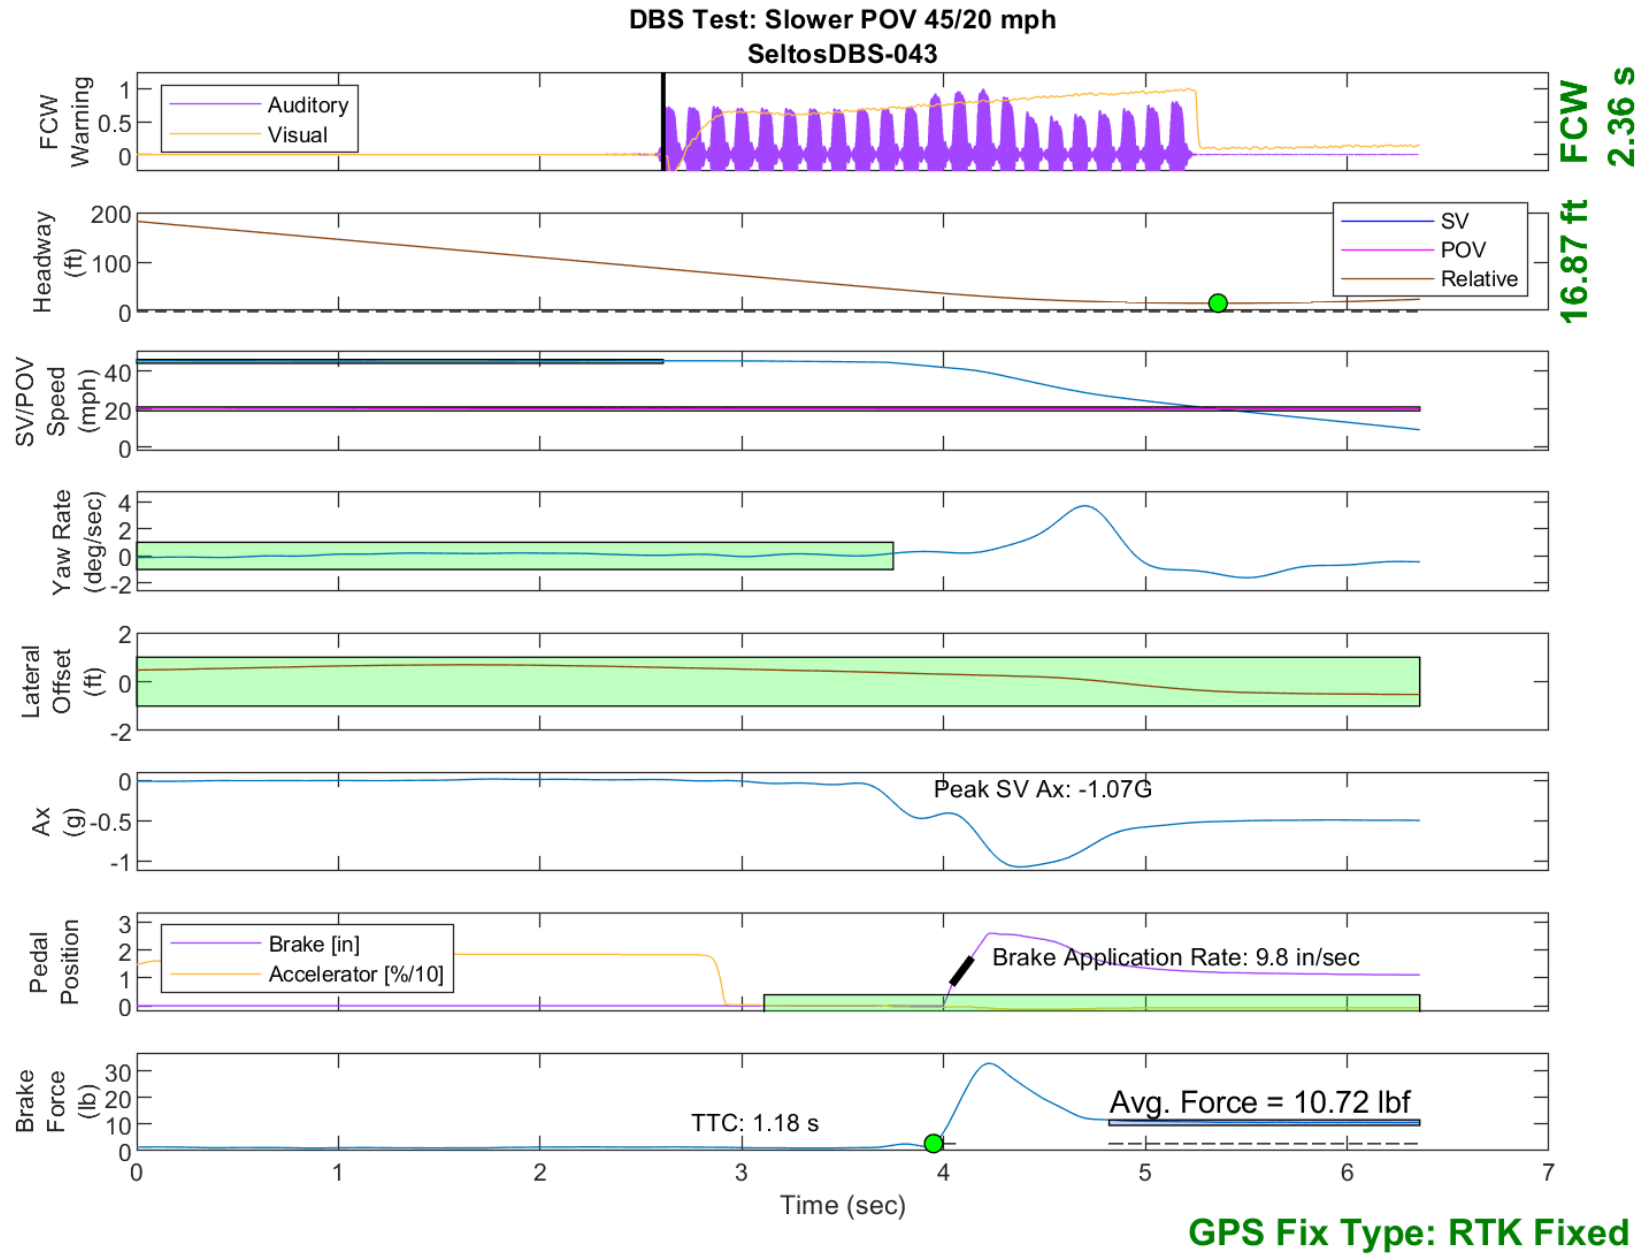


Figure E33. Time History for DBS Run 43, SV Encounters Slower POV, SV 45 mph, POV 20 mph

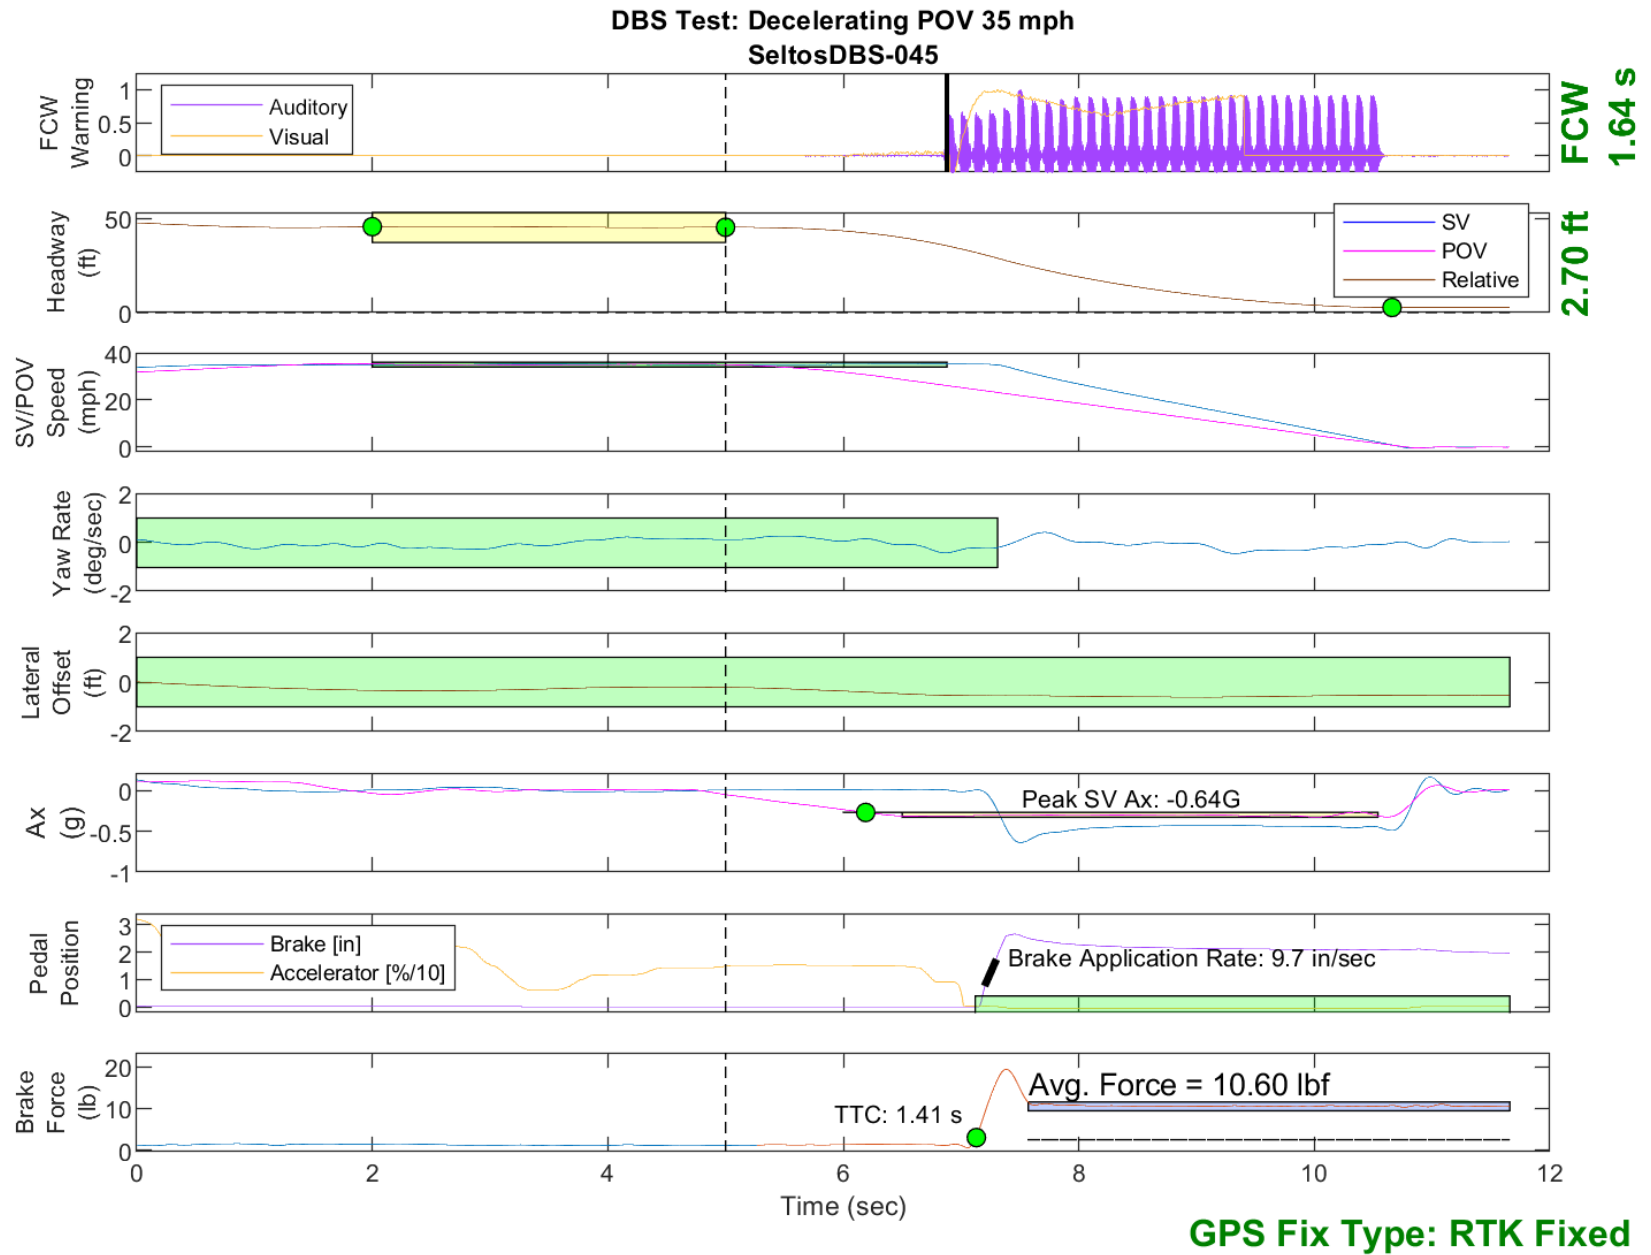


Figure E34. Time History for DBS Run 45, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

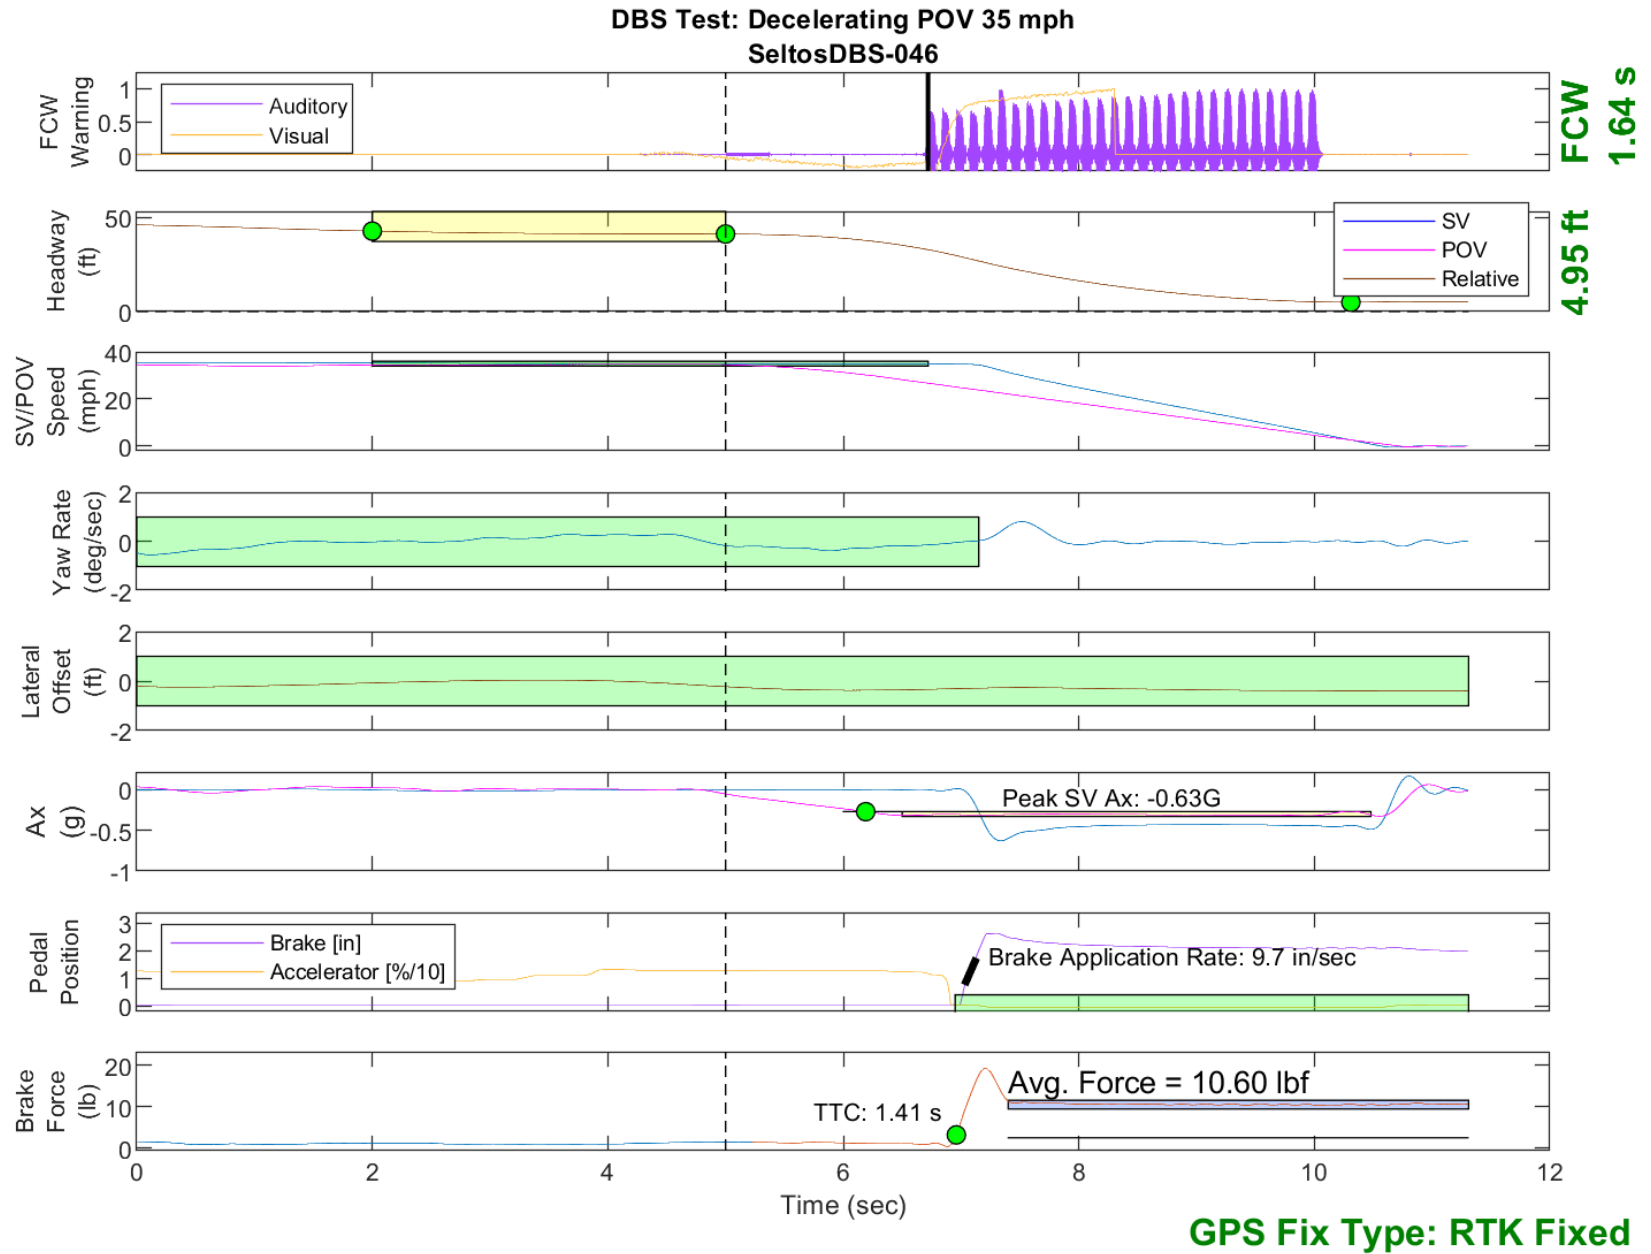


Figure E35. Time History for DBS Run 46, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

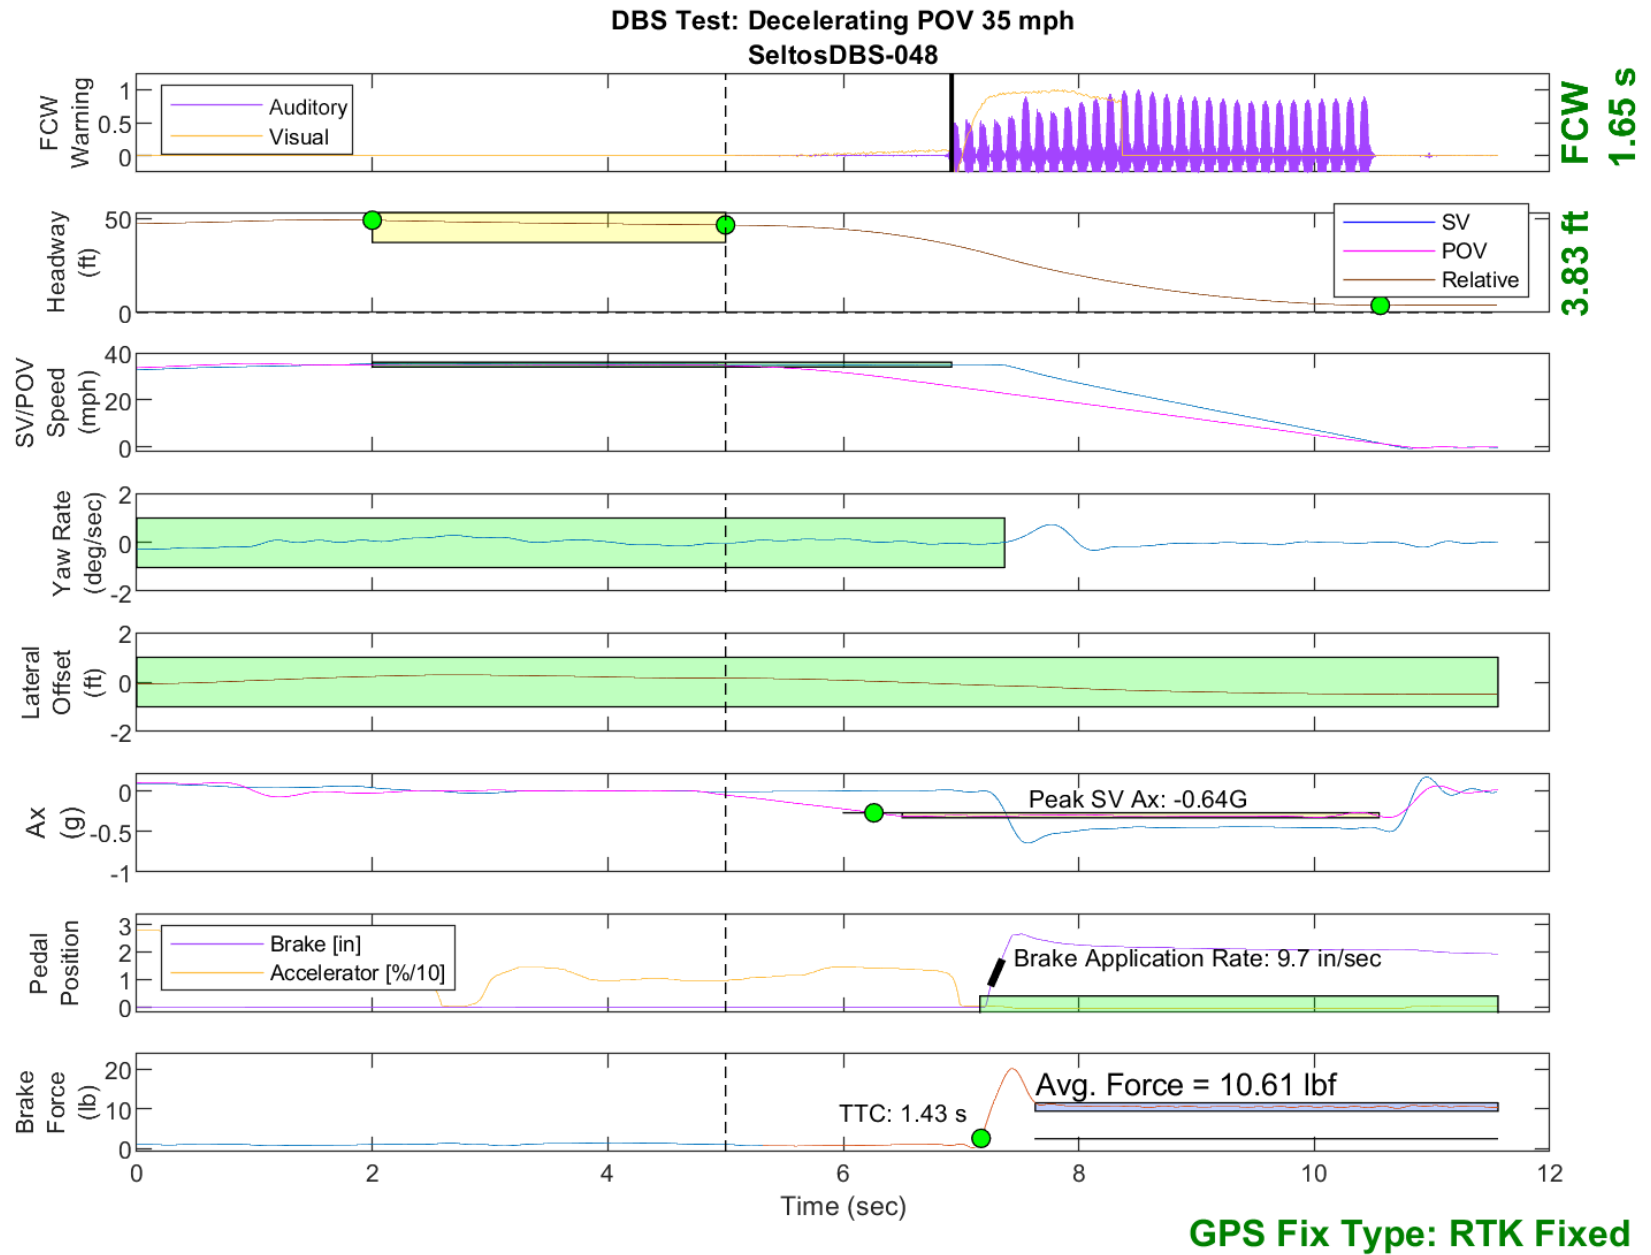


Figure E36. Time History for DBS Run 48, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

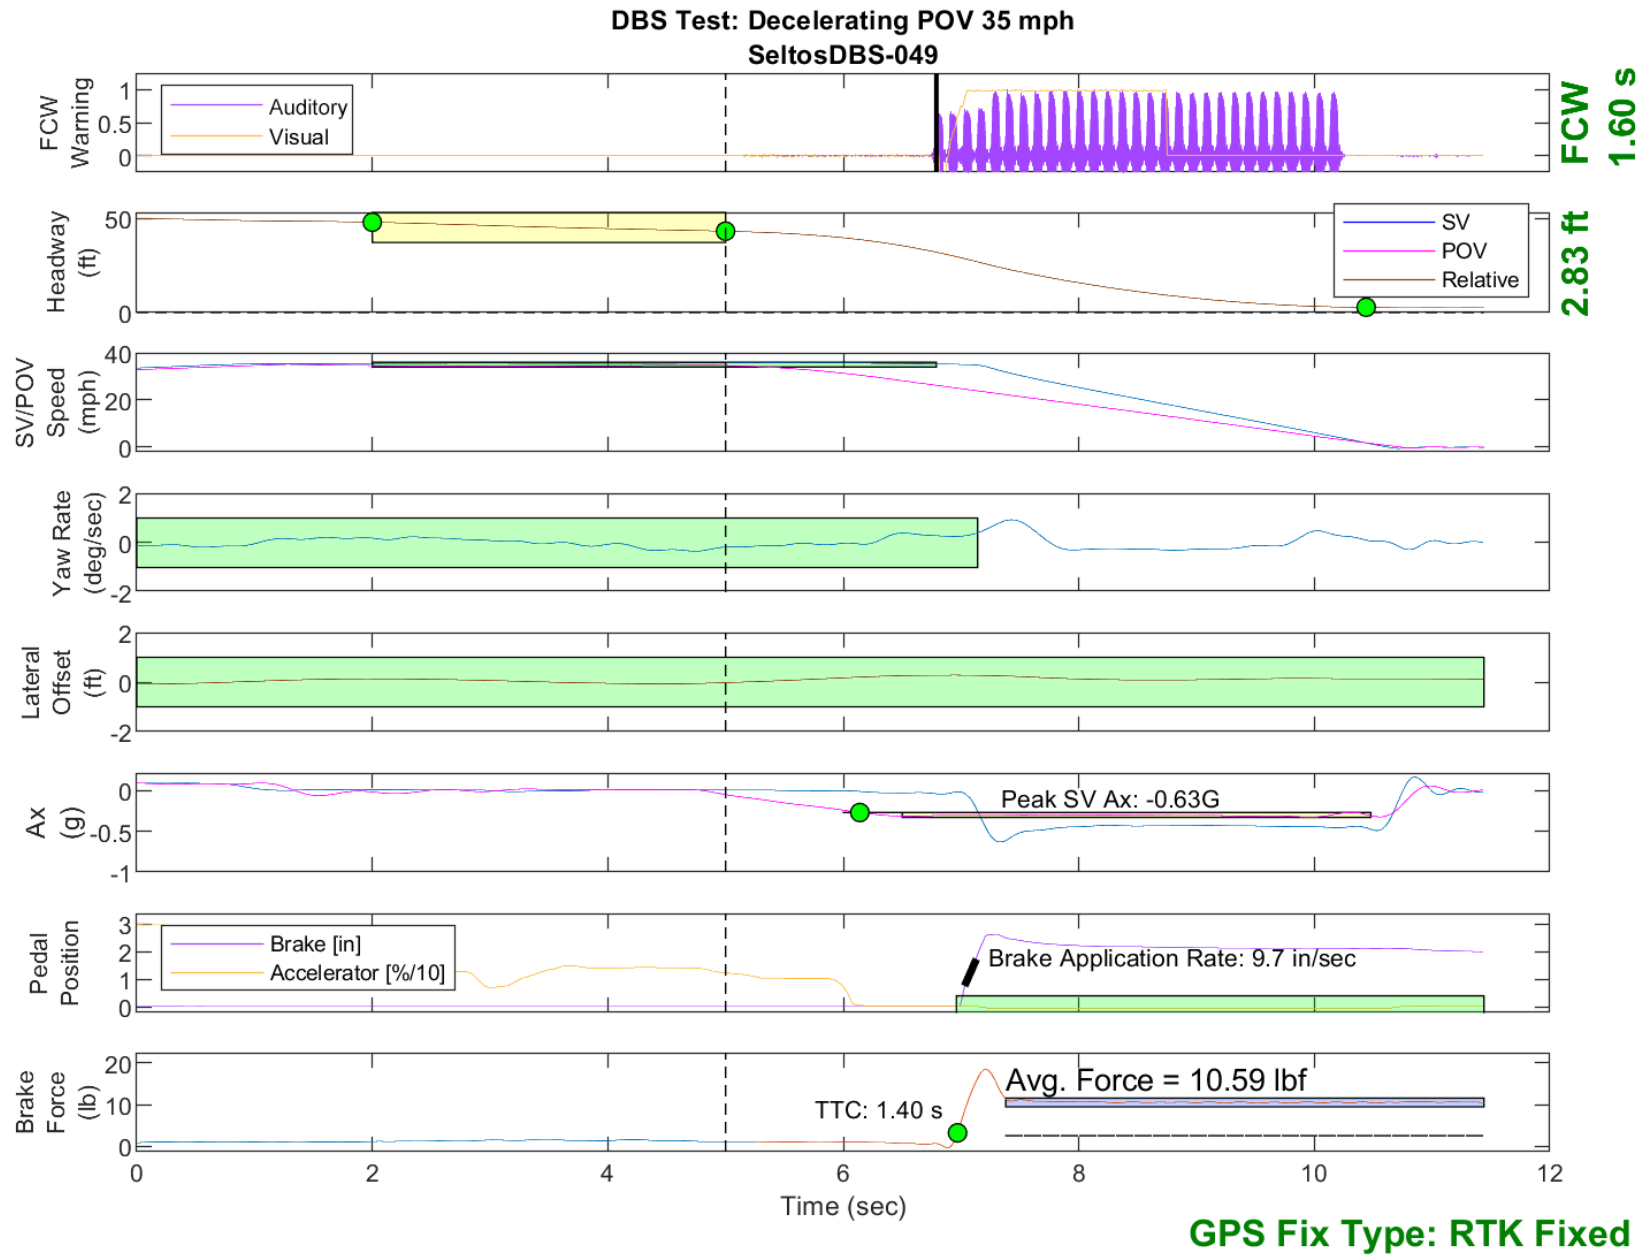


Figure E37. Time History for DBS Run 49, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

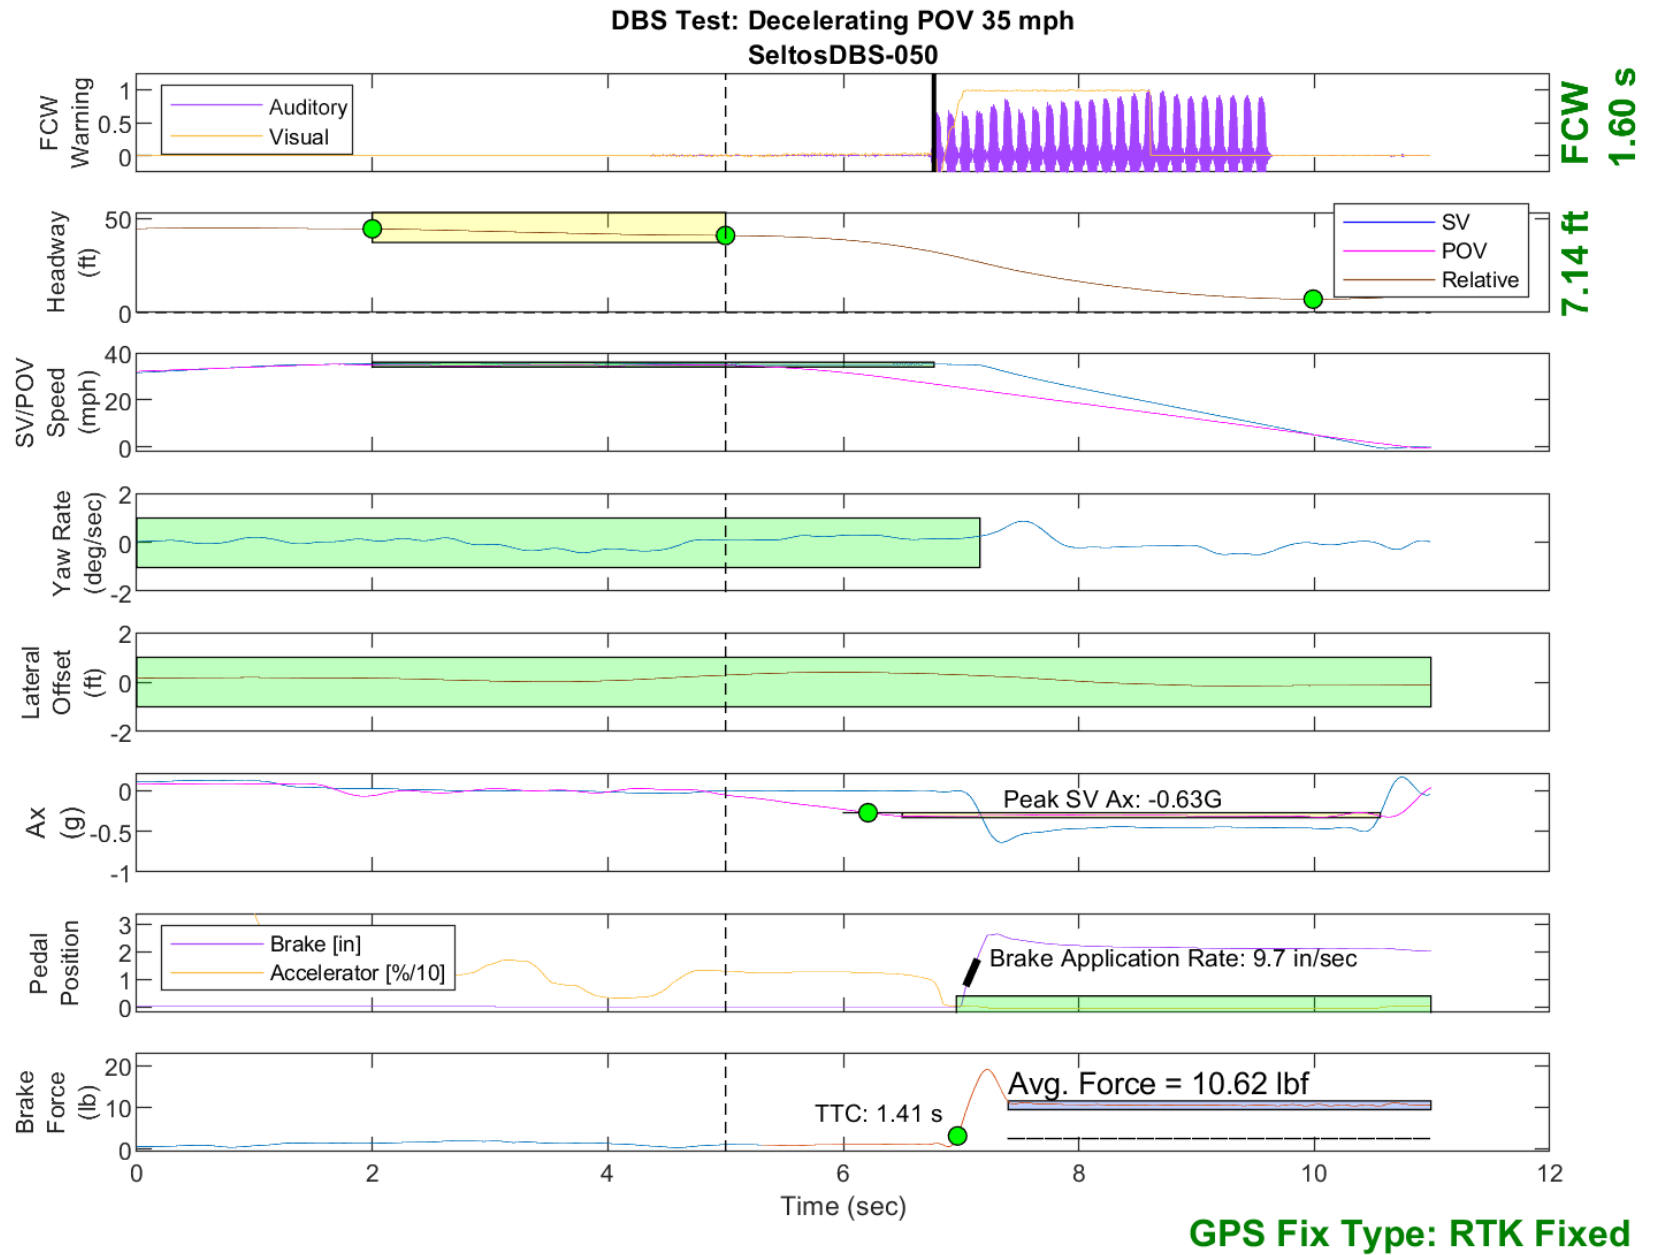


Figure E38. Time History for DBS Run 50, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

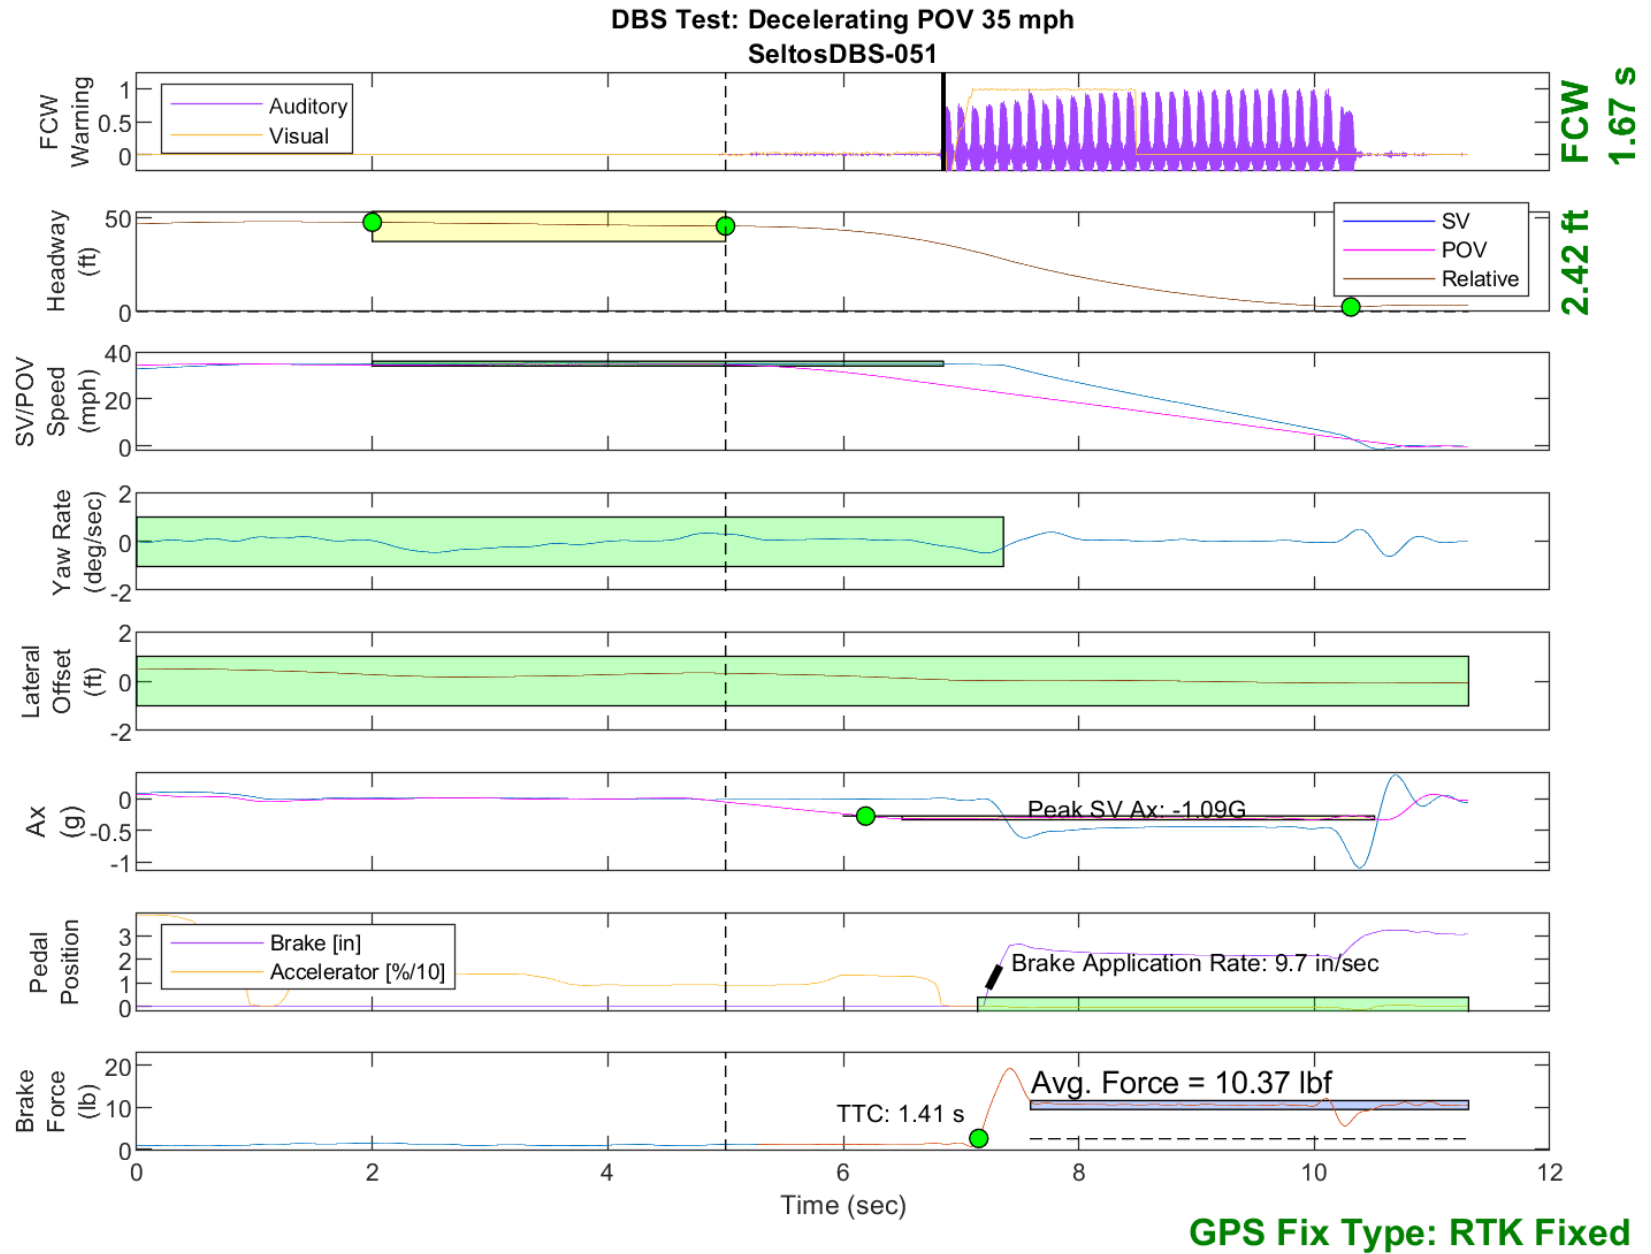


Figure E39. Time History for DBS Run 51, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

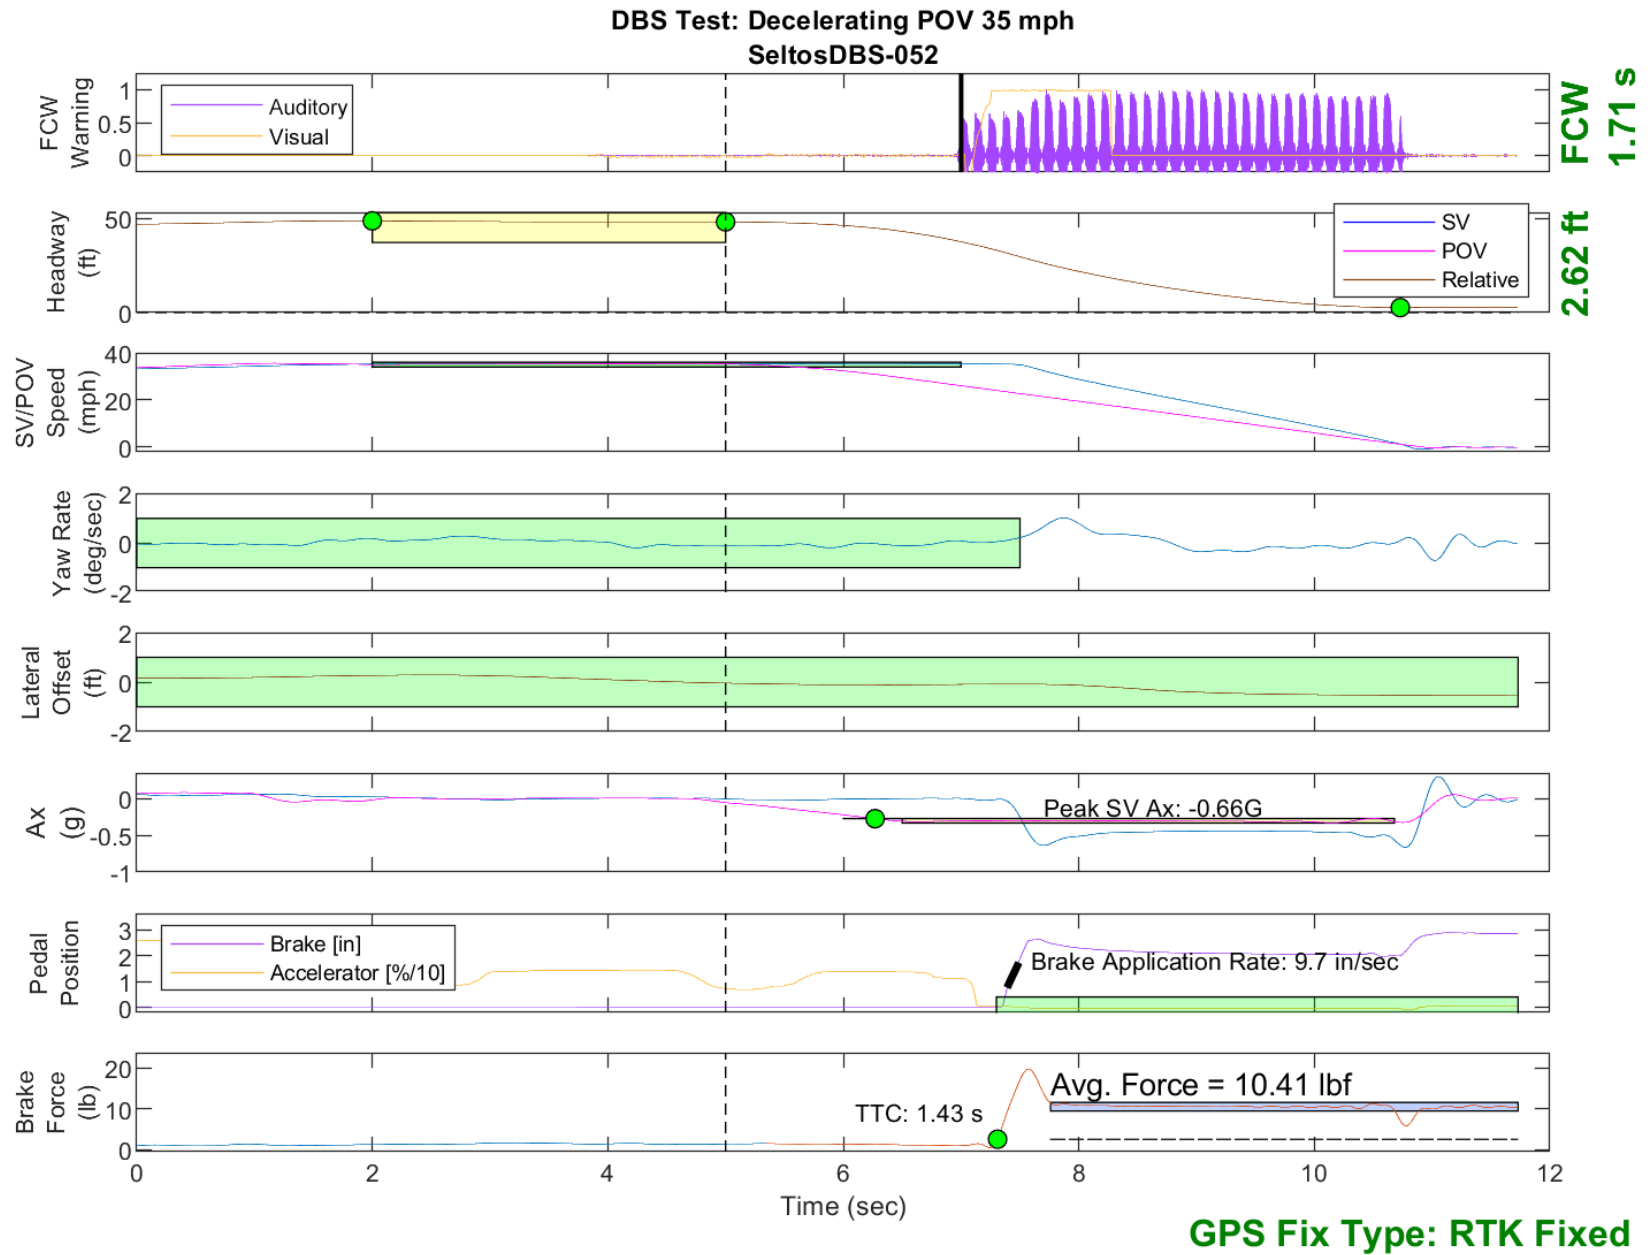


Figure E40. Time History for DBS Run 52, SV Encounters Decelerating POV, SV 35 mph, POV 35 mph

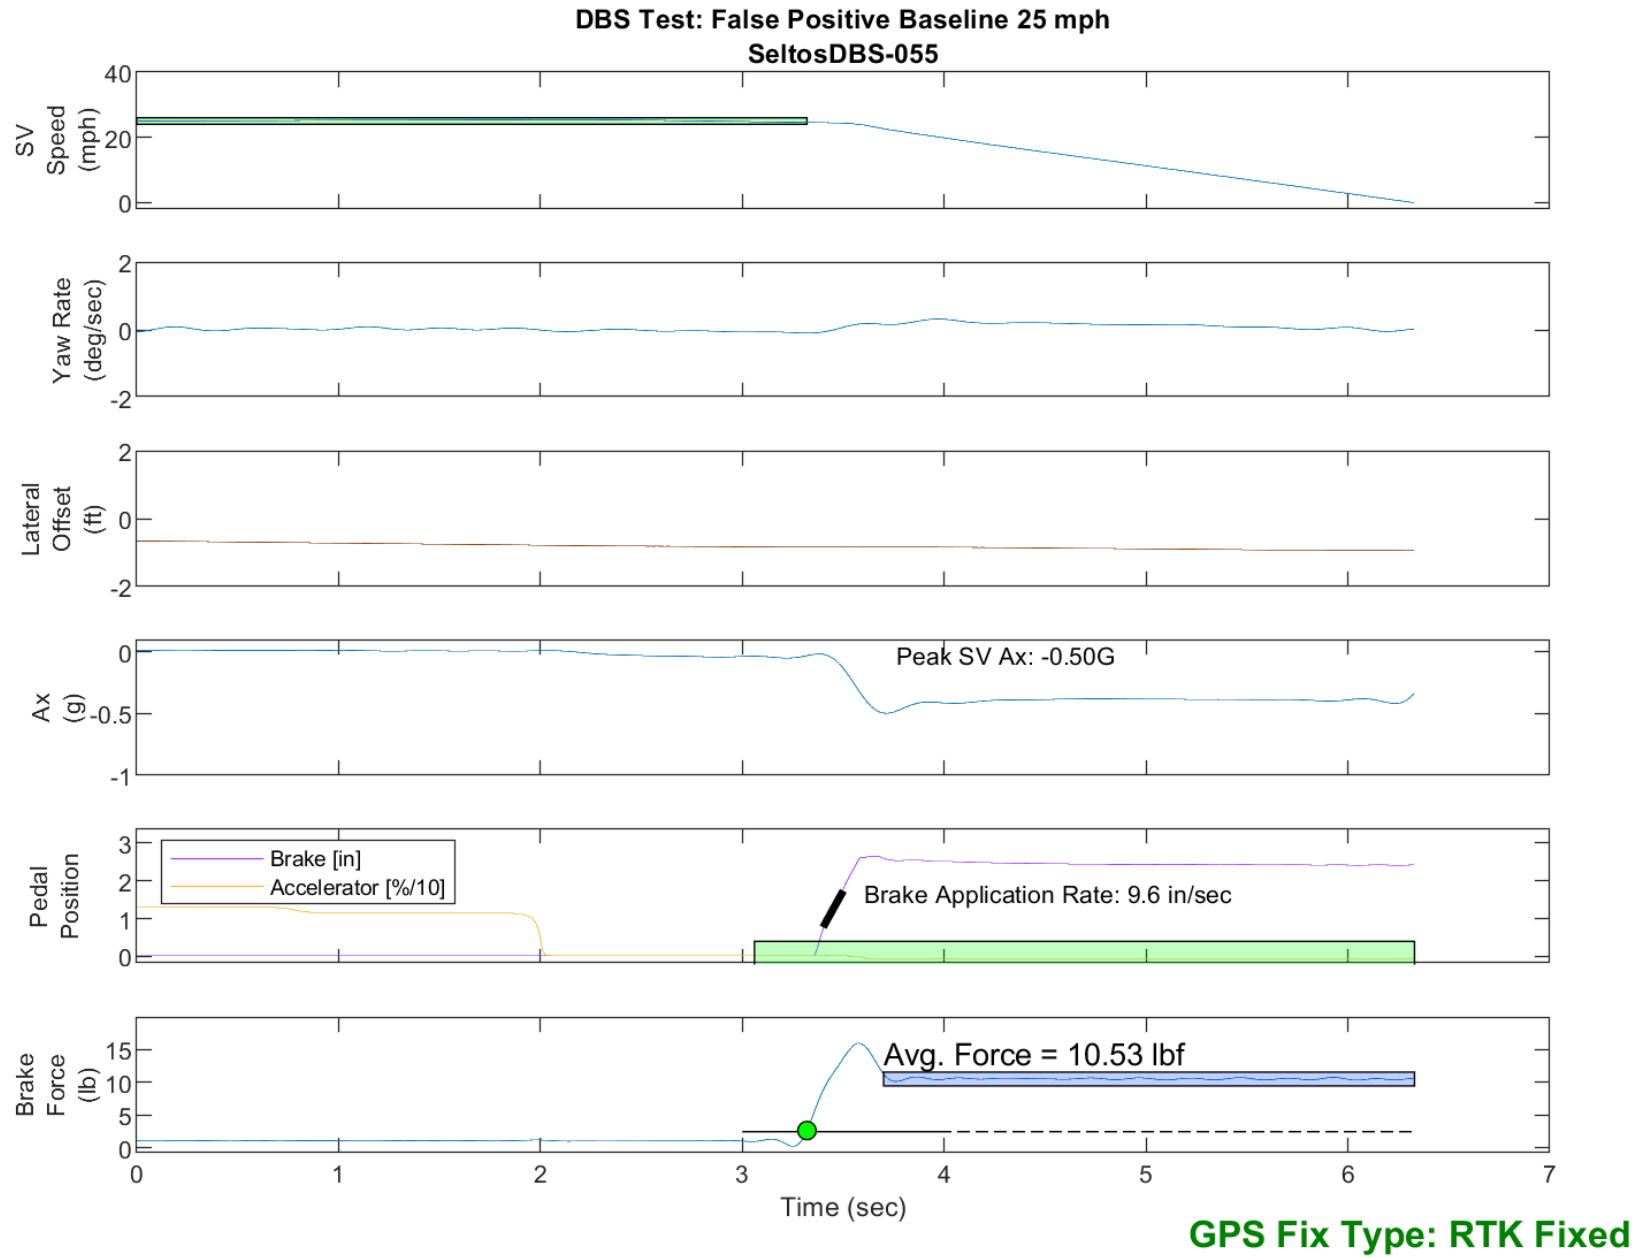


Figure E41. Time History for DBS Run 55, False Positive Baseline, SV 25 mph

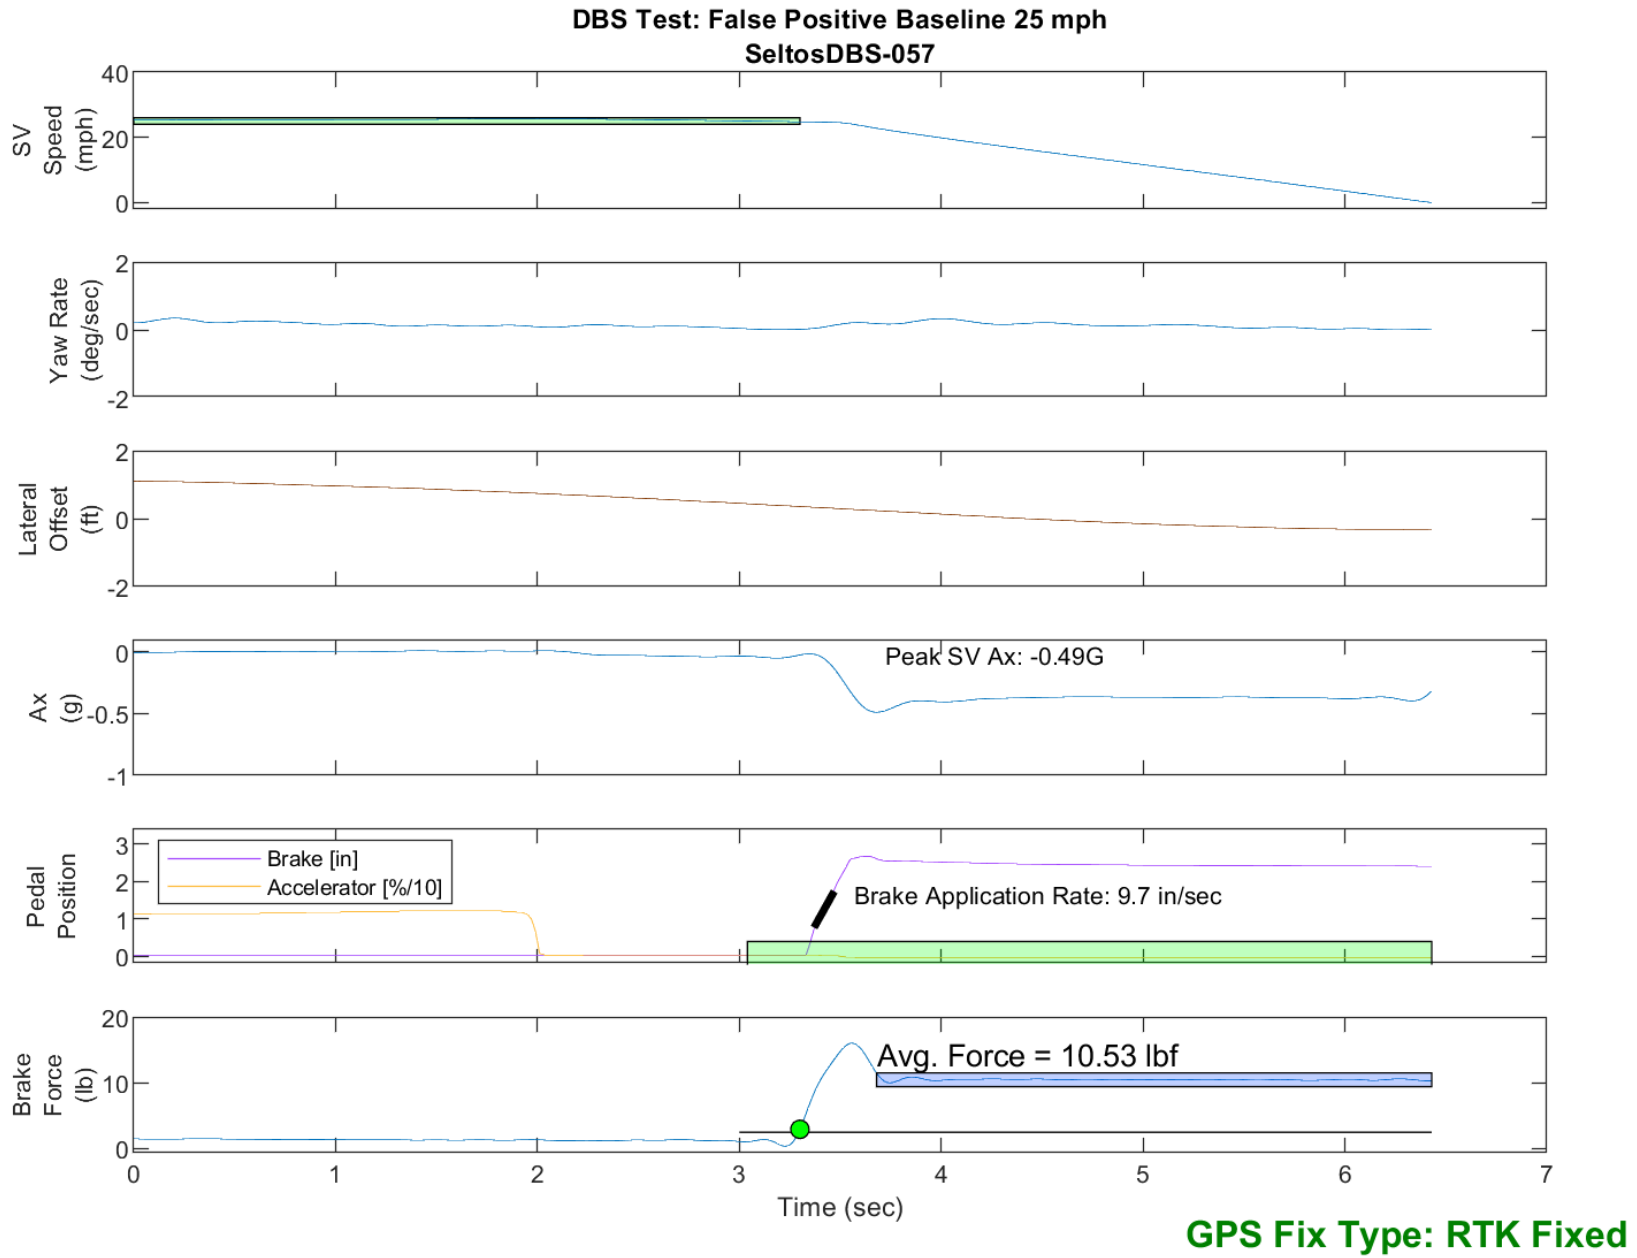


Figure E42. Time History for DBS Run 57, False Positive Baseline, SV 25 mph

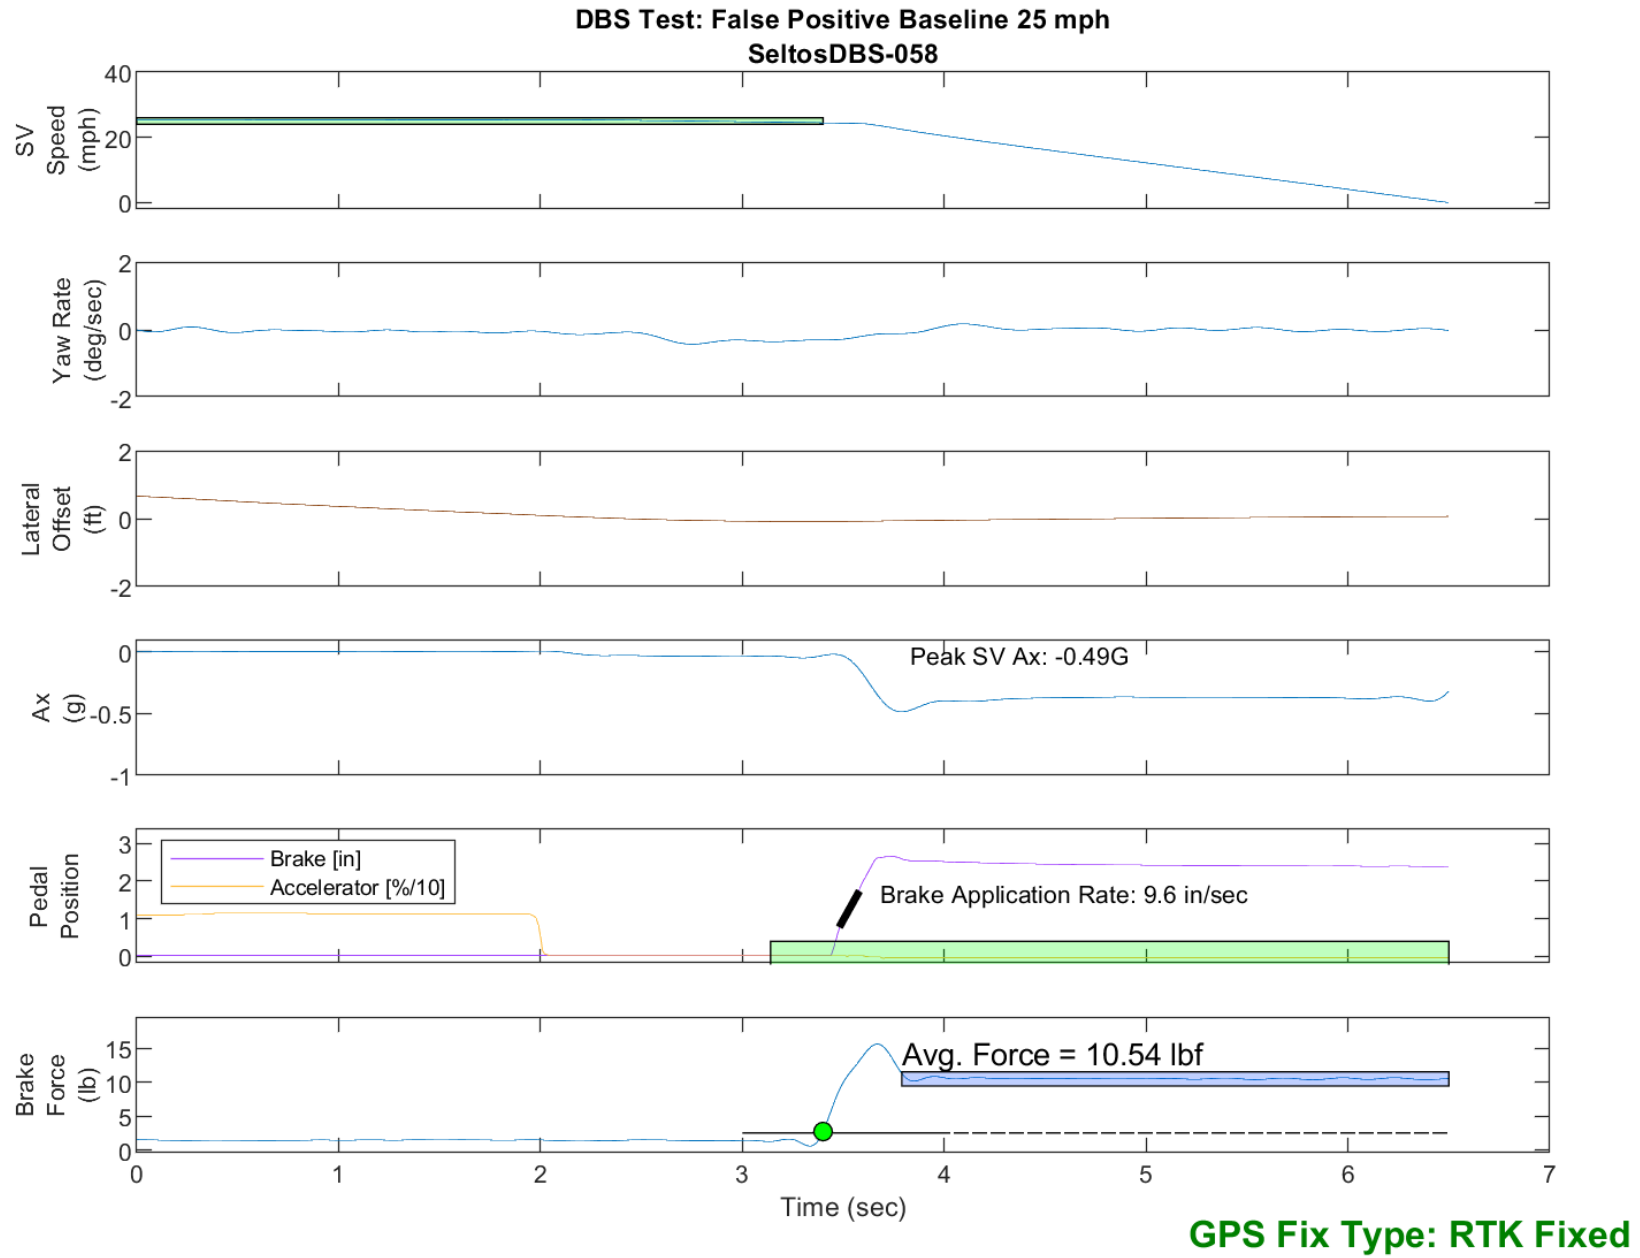


Figure E43. Time History for DBS Run 58, False Positive Baseline, SV 25 mph

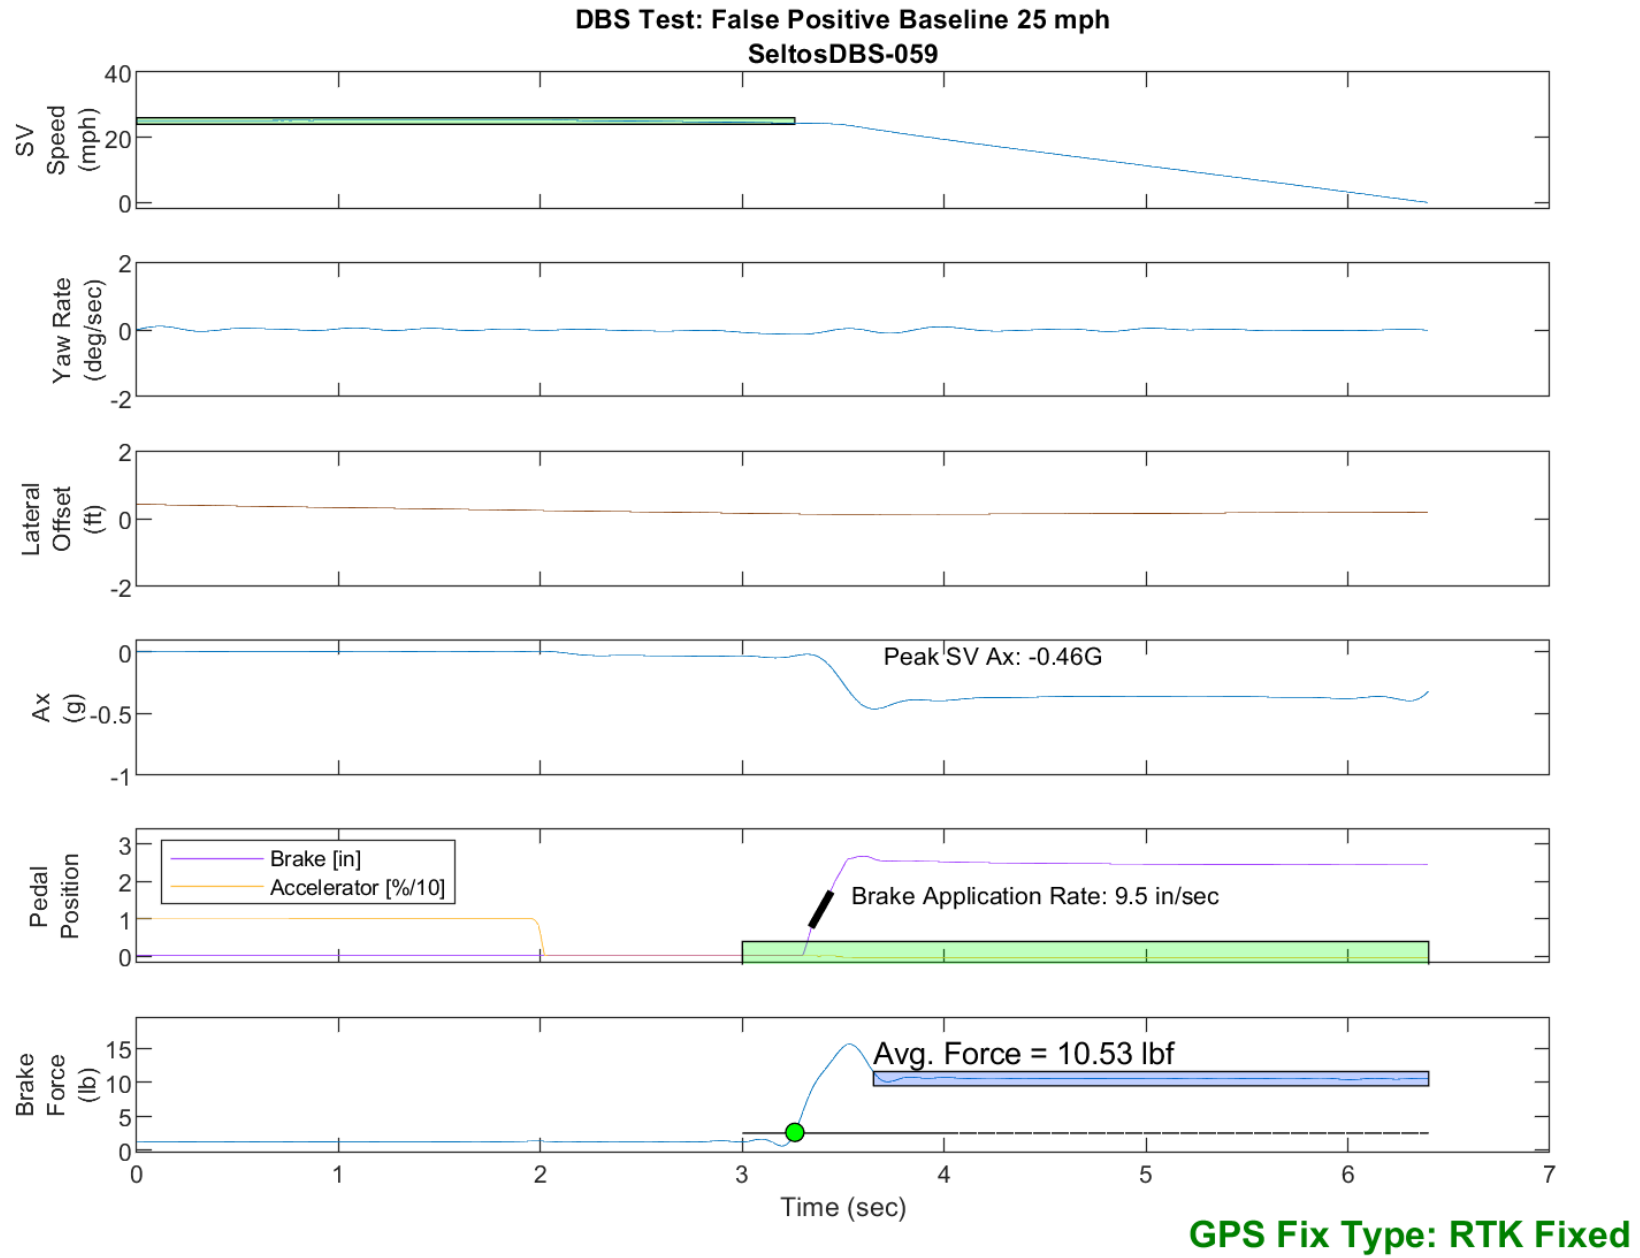


Figure E44. Time History for DBS Run 59, False Positive Baseline, SV 25 mph

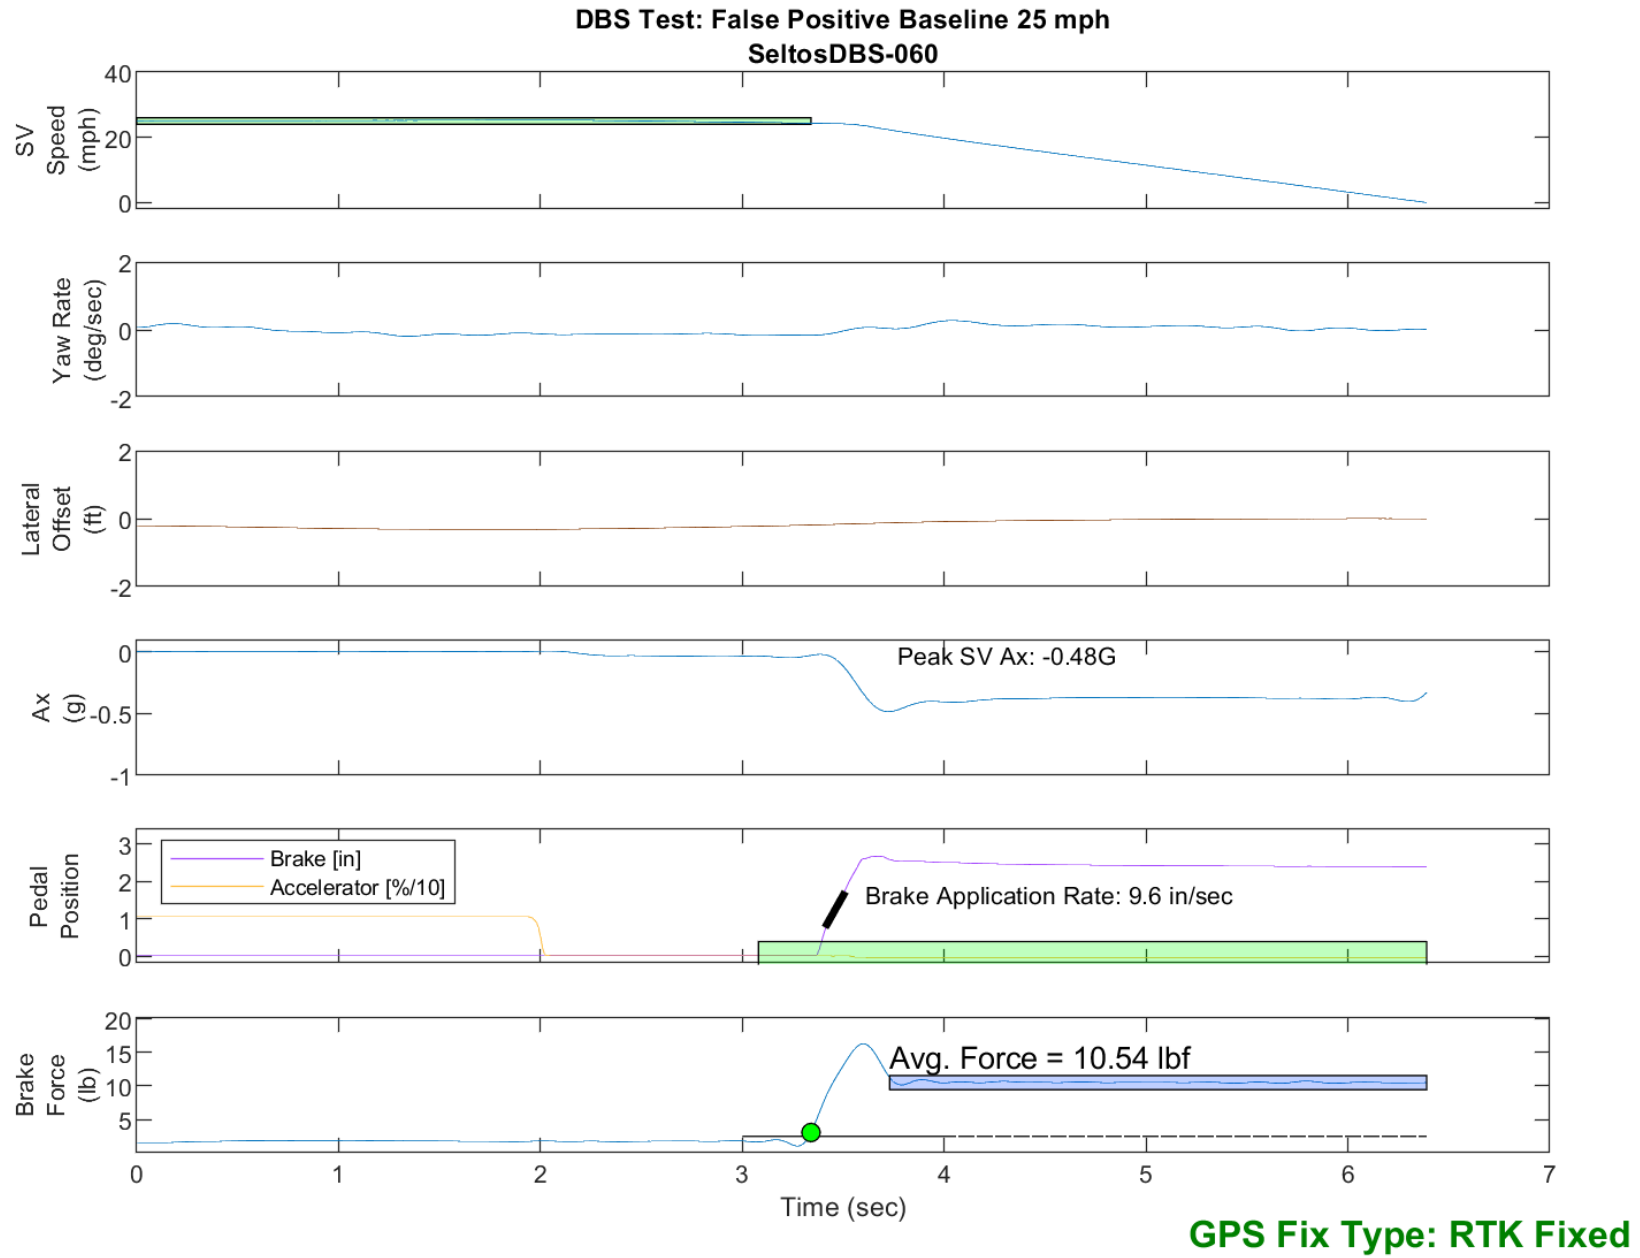


Figure E45. Time History for DBS Run 60, False Positive Baseline, SV 25 mph



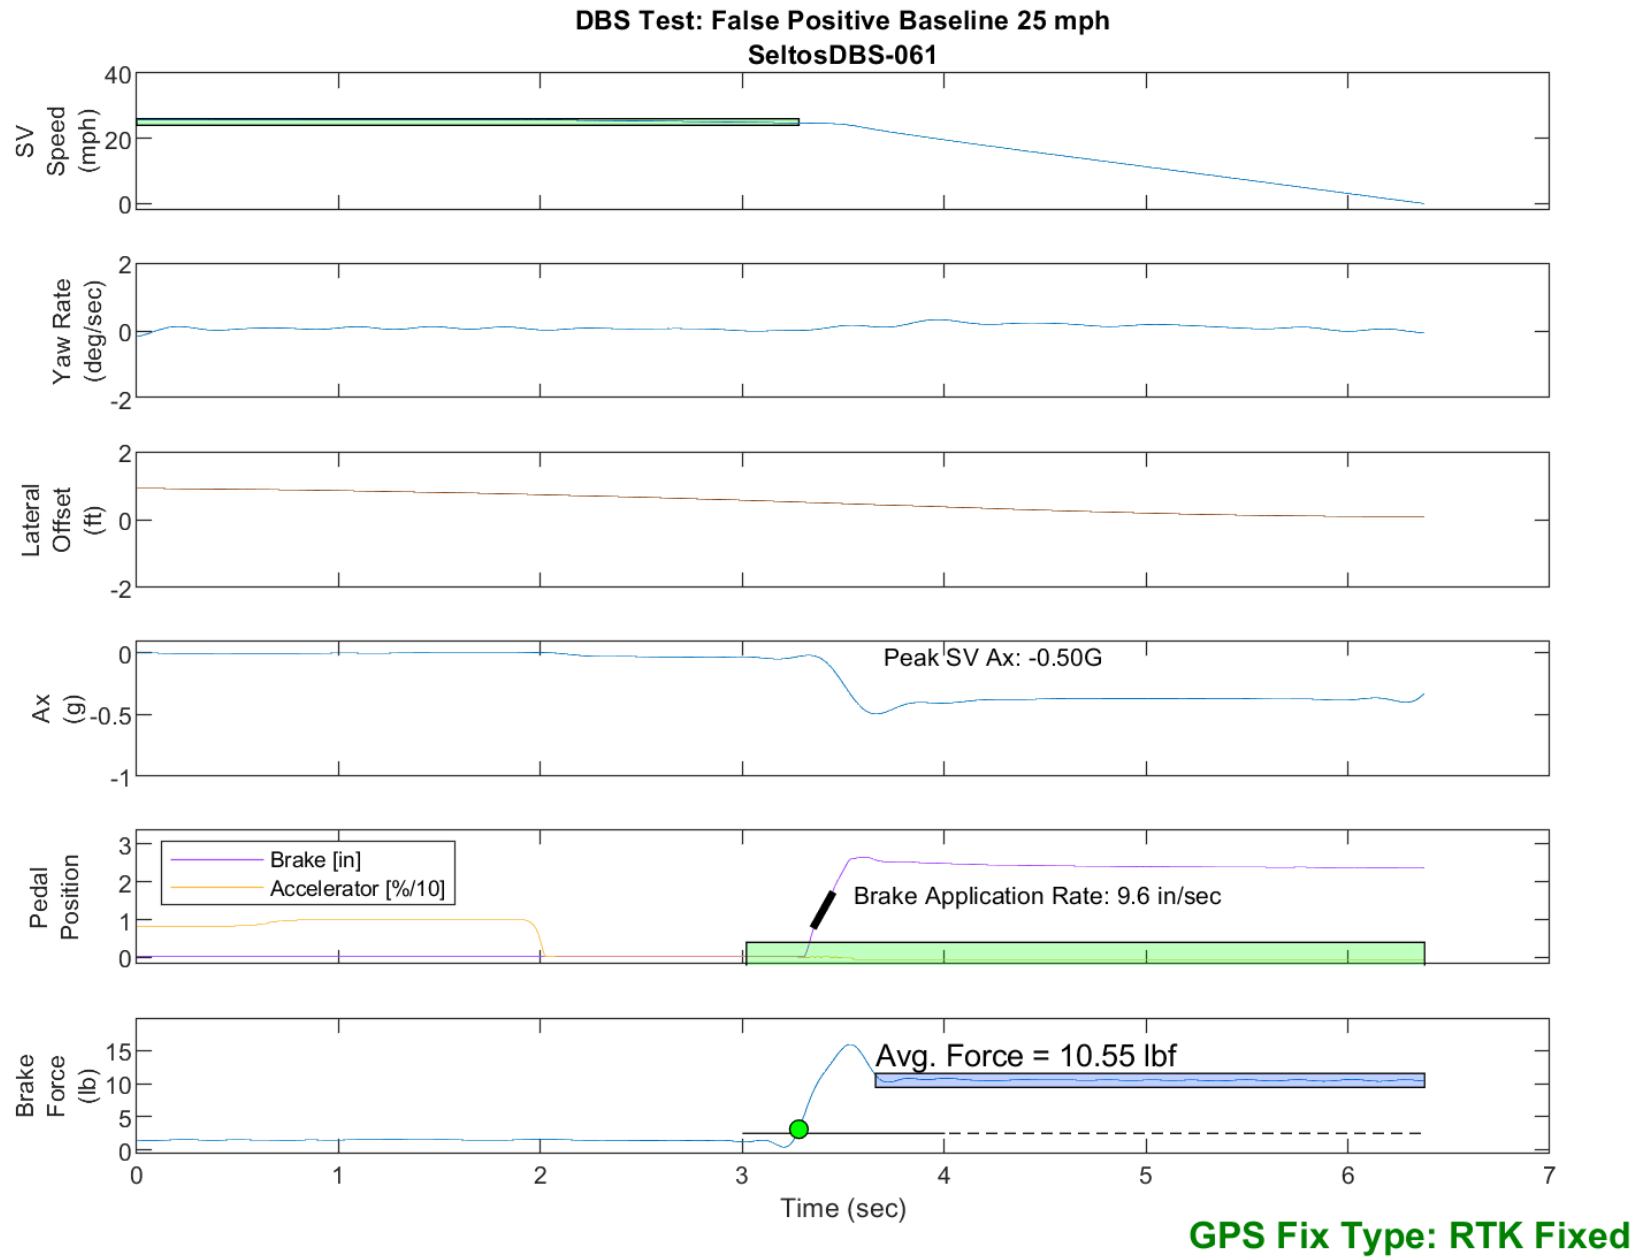


Figure E46. Time History for DBS Run 61, False Positive Baseline, SV 25 mph

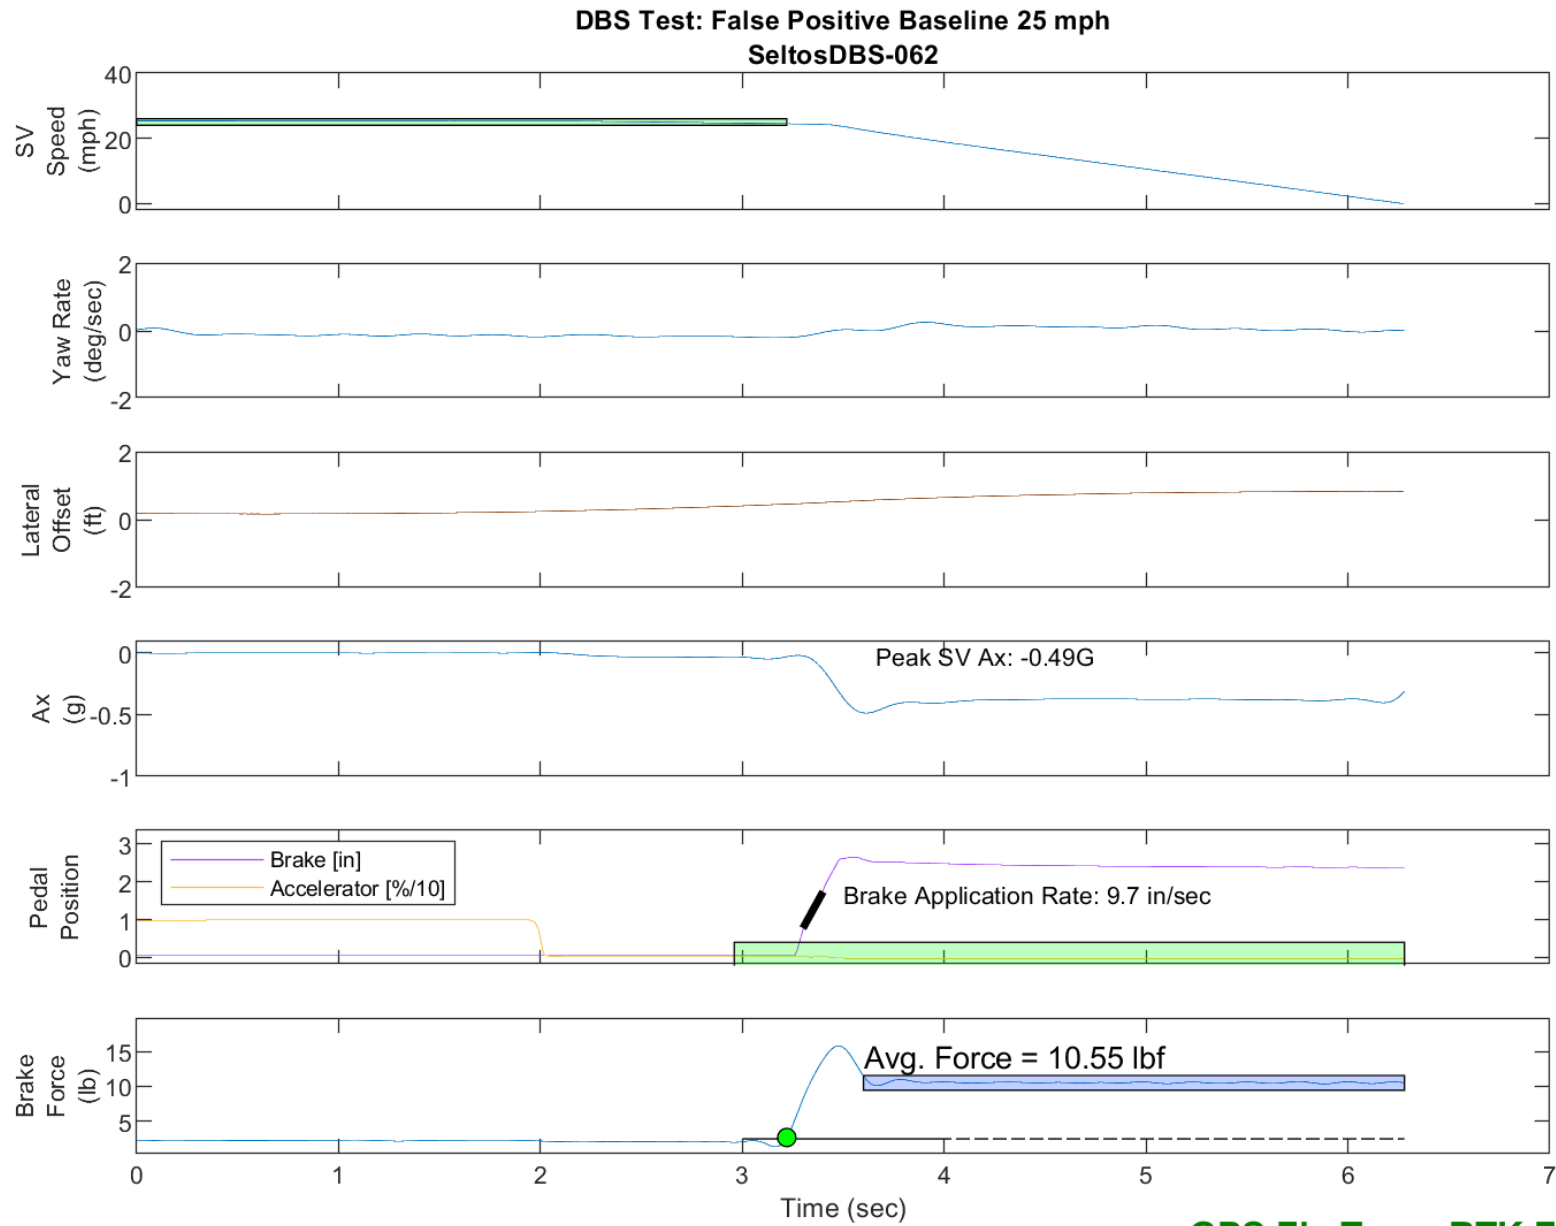


GPS Fix Type: RTK Fixed

Figure E47. Time History for DBS Run 62, False Positive Baseline, SV 25 mph

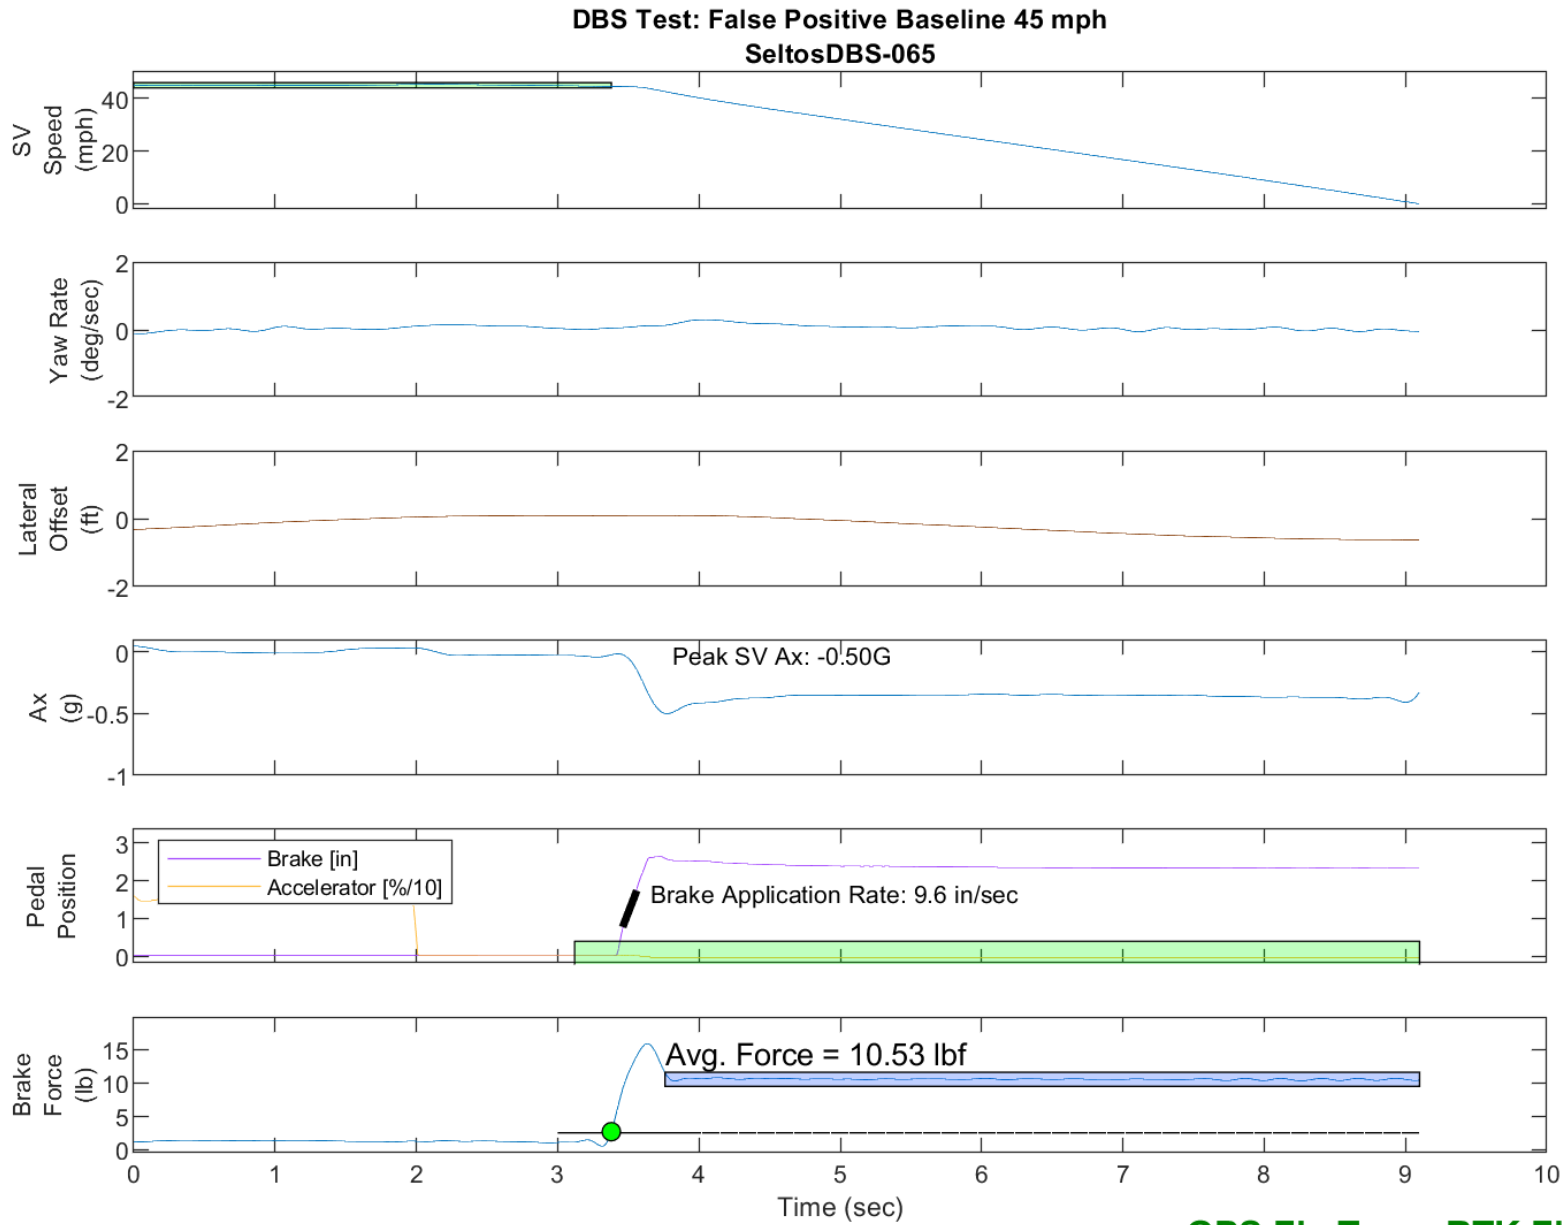

GPS Fix Type: RTK Fixed

Figure E48. Time History for DBS Run 65, False Positive Baseline, SV 45 mph

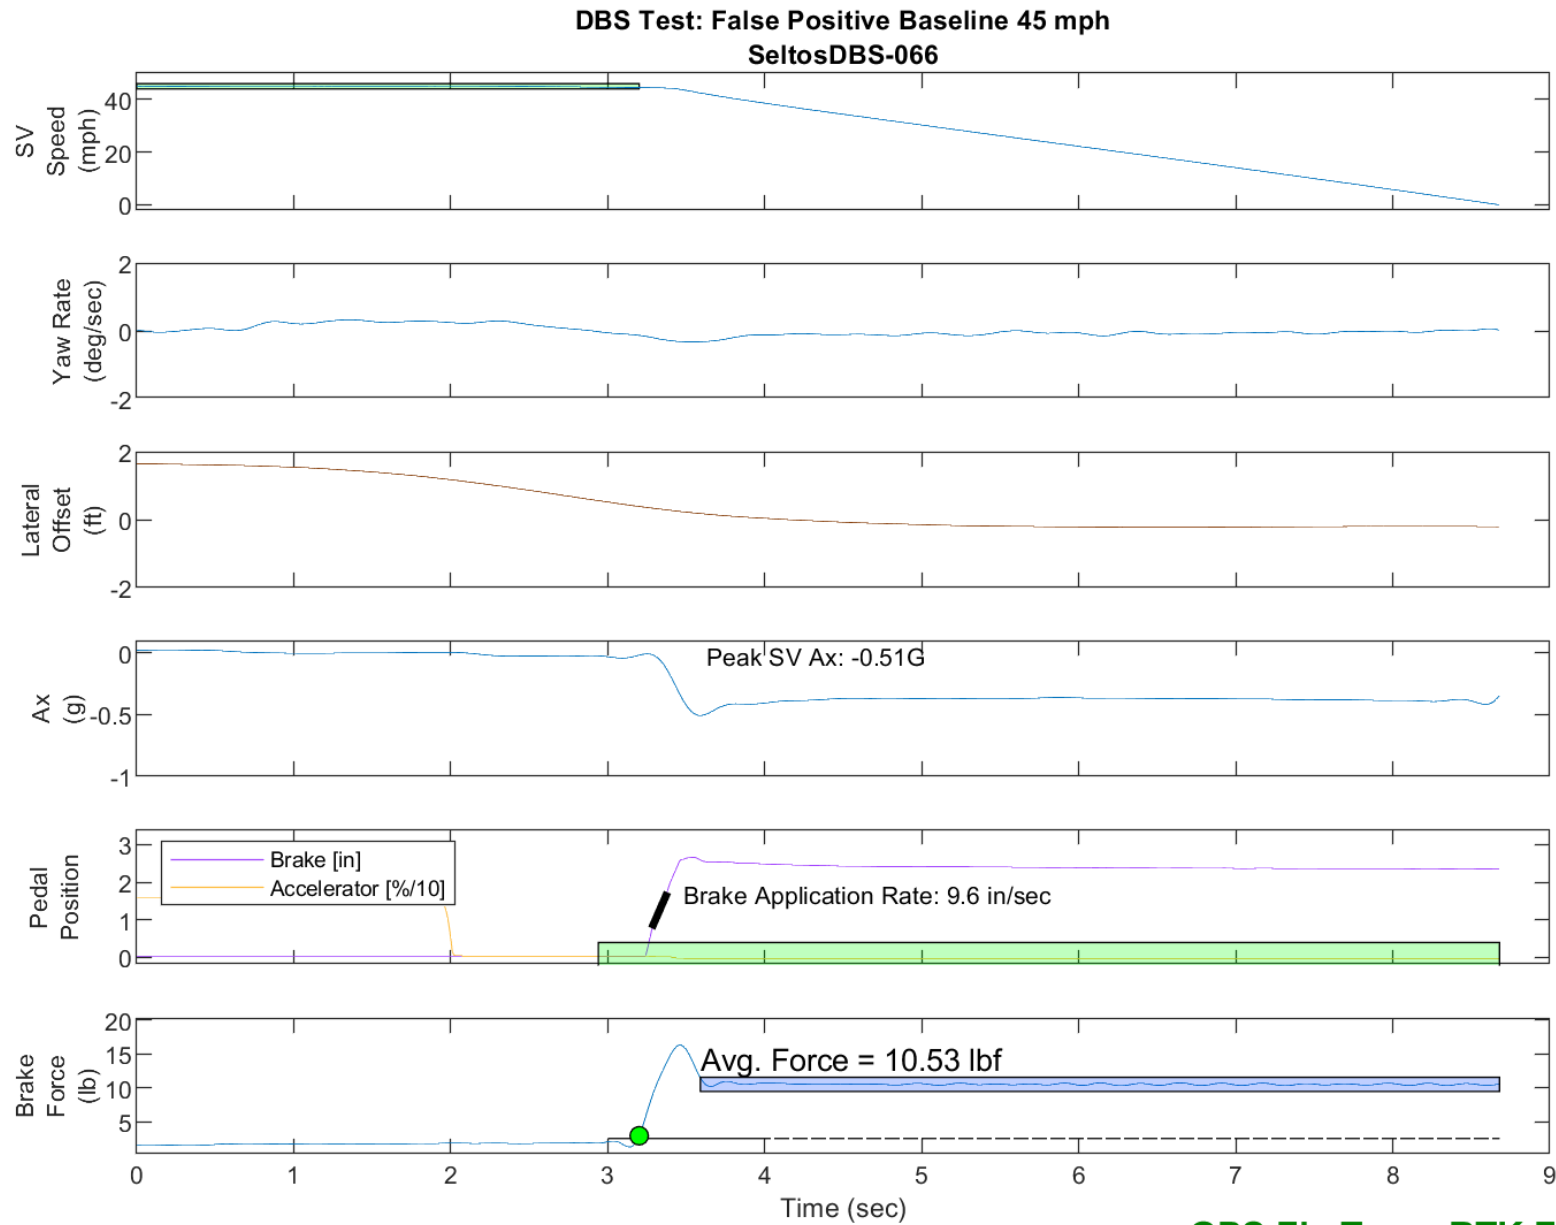

GPS Fix Type: RTK Fixed

Figure E49. Time History for DBS Run 66, False Positive Baseline, SV 45 mph

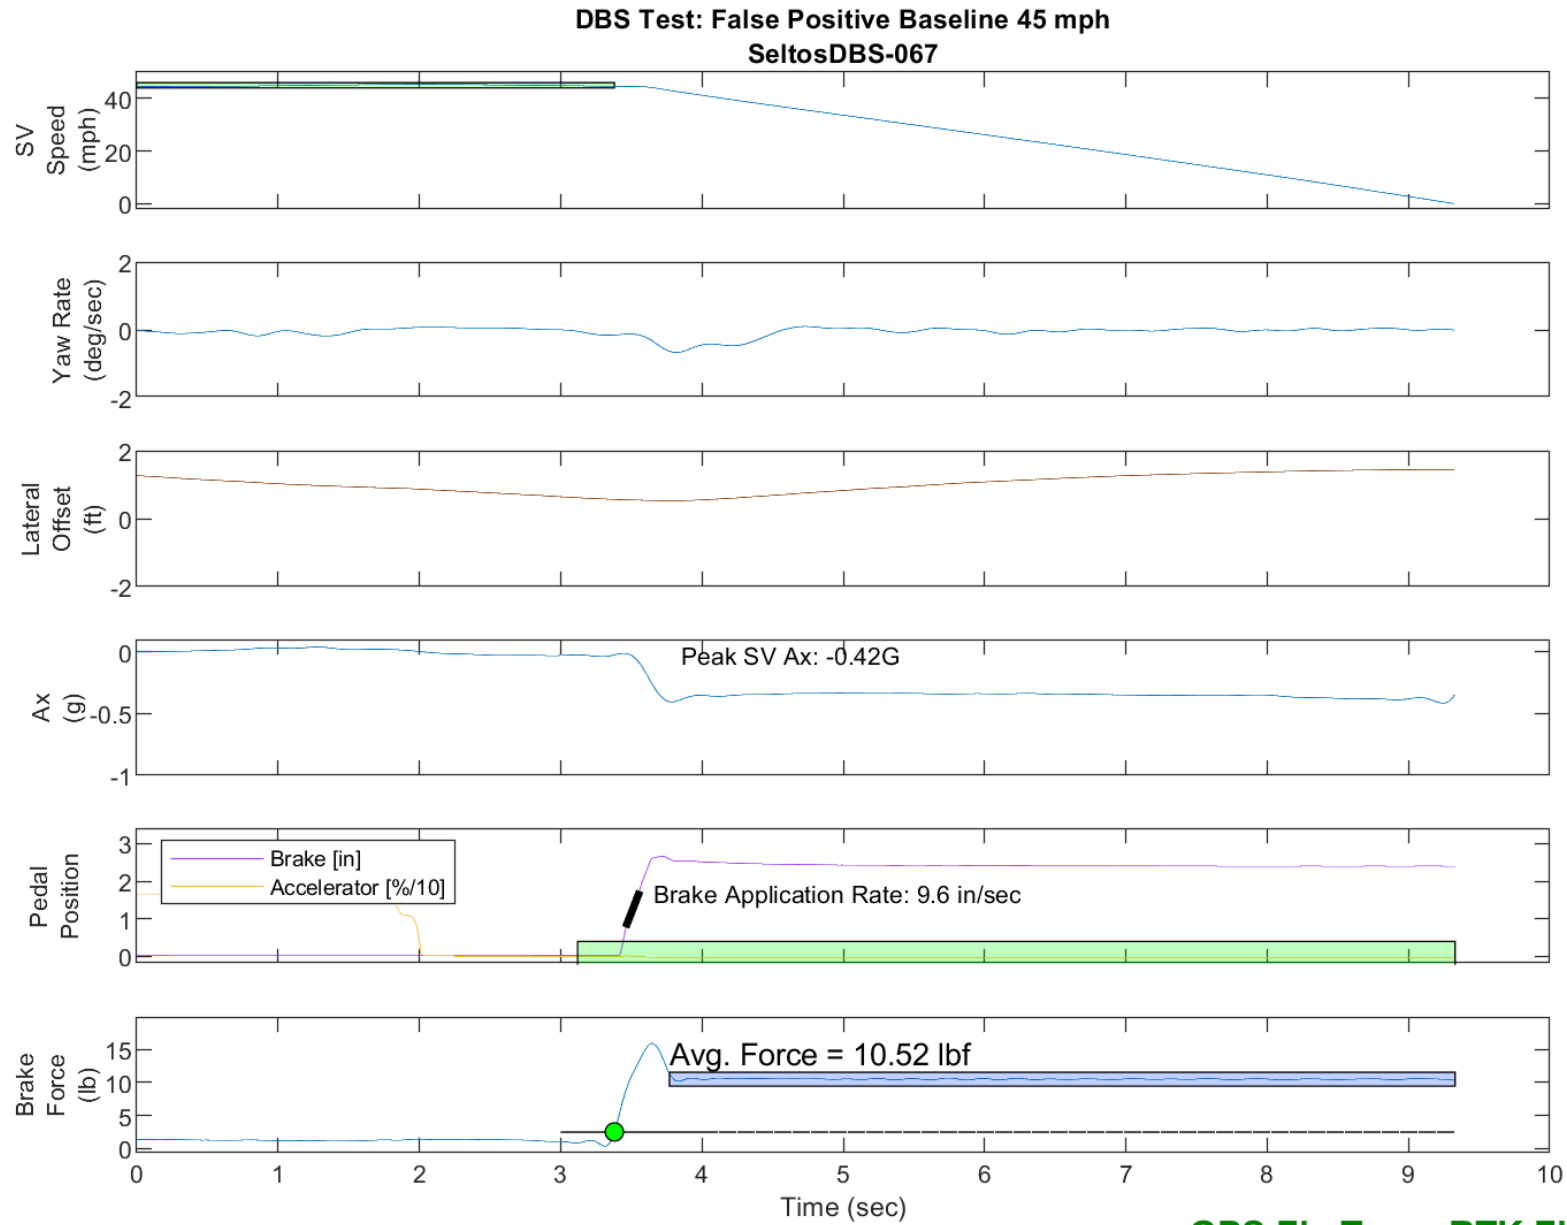


Figure E50. Time History for DBS Run 67, False Positive Baseline, SV 45 mph

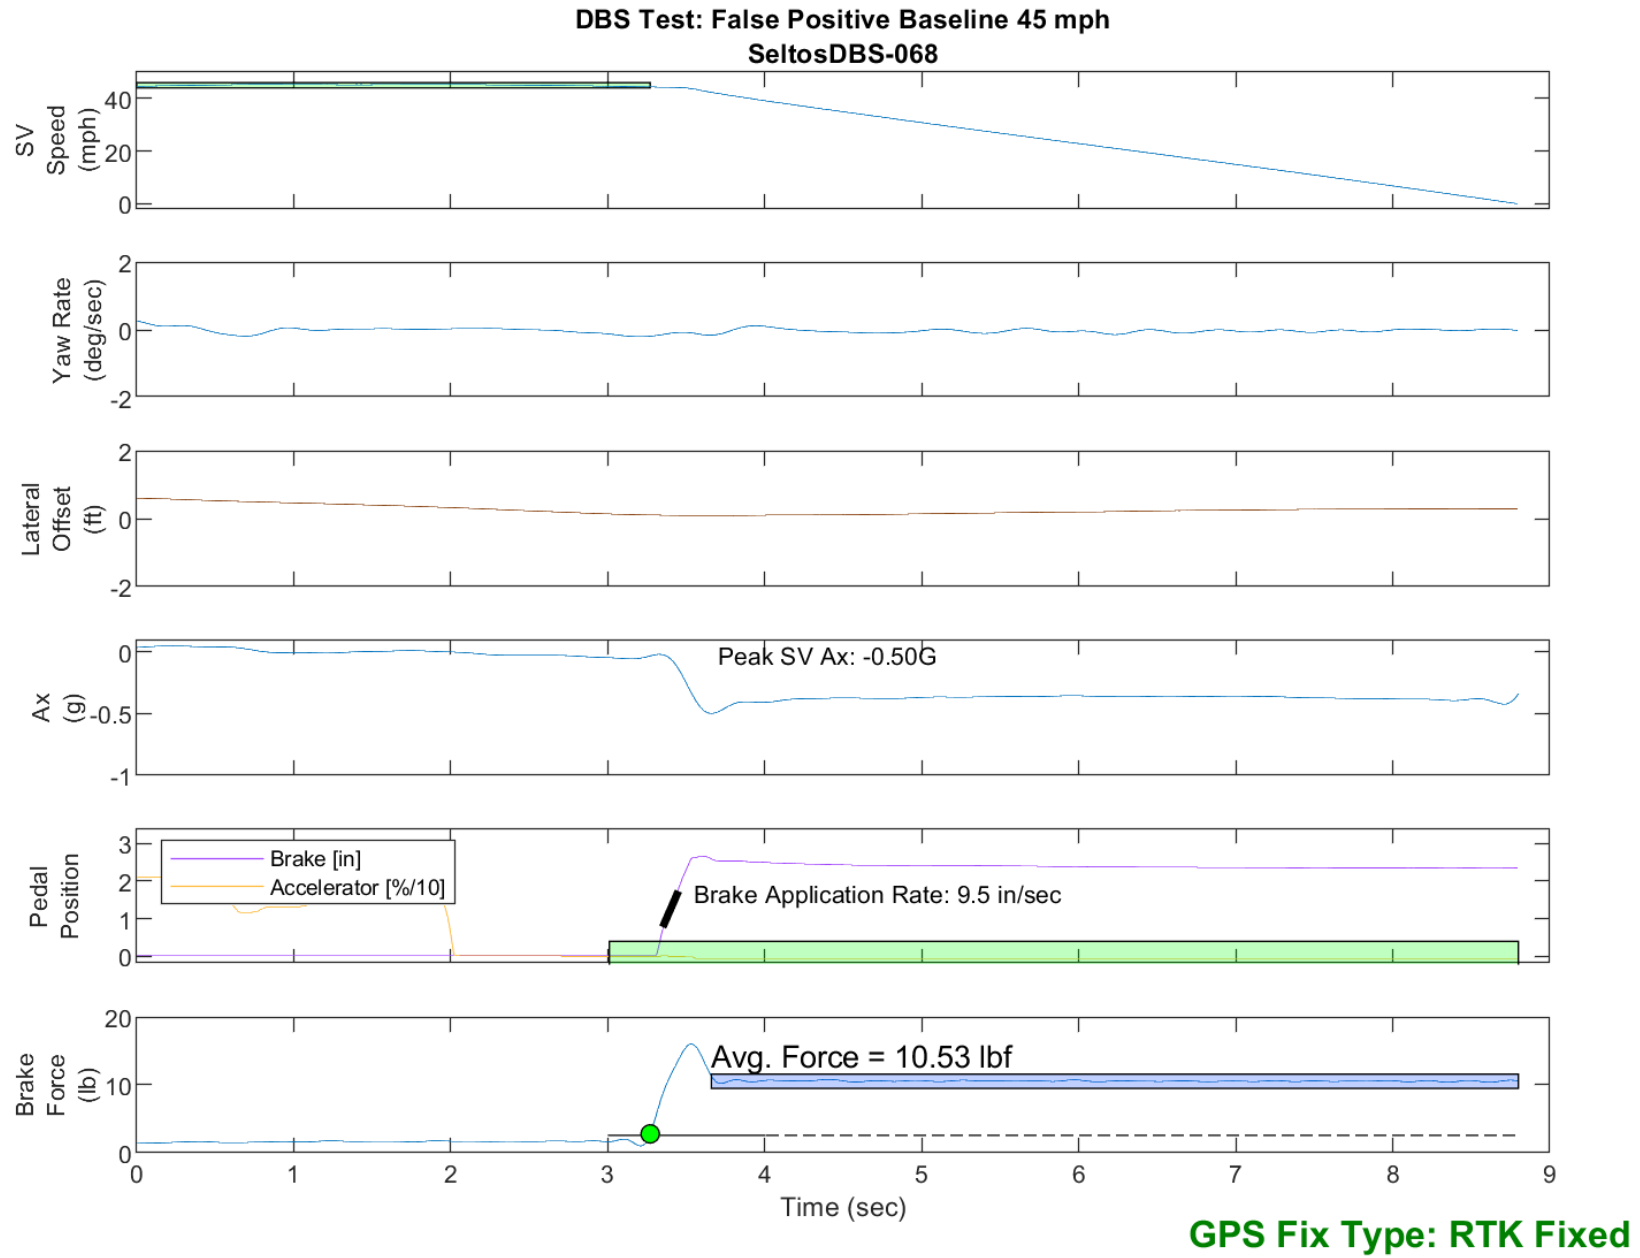


Figure E51. Time History for DBS Run 68, False Positive Baseline, SV 45 mph

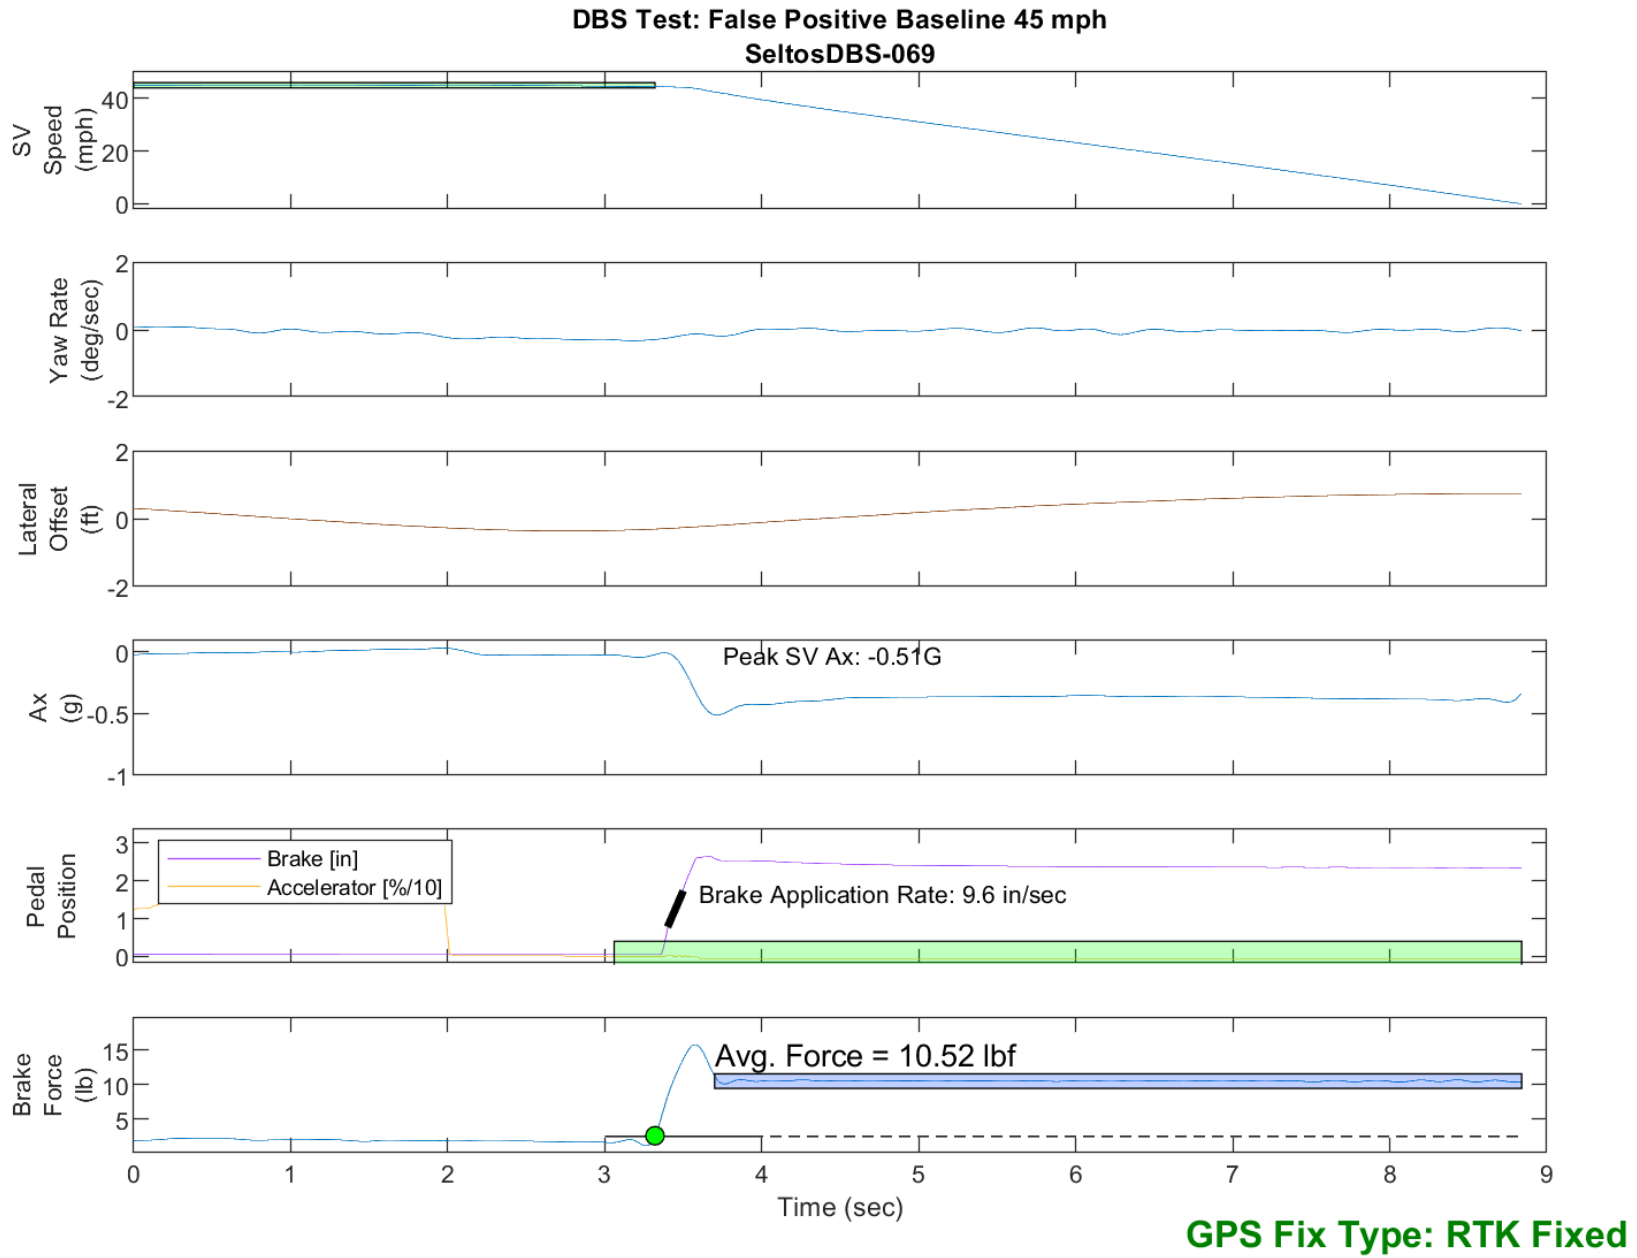


Figure E52. Time History for DBS Run 69, False Positive Baseline, SV 45 mph


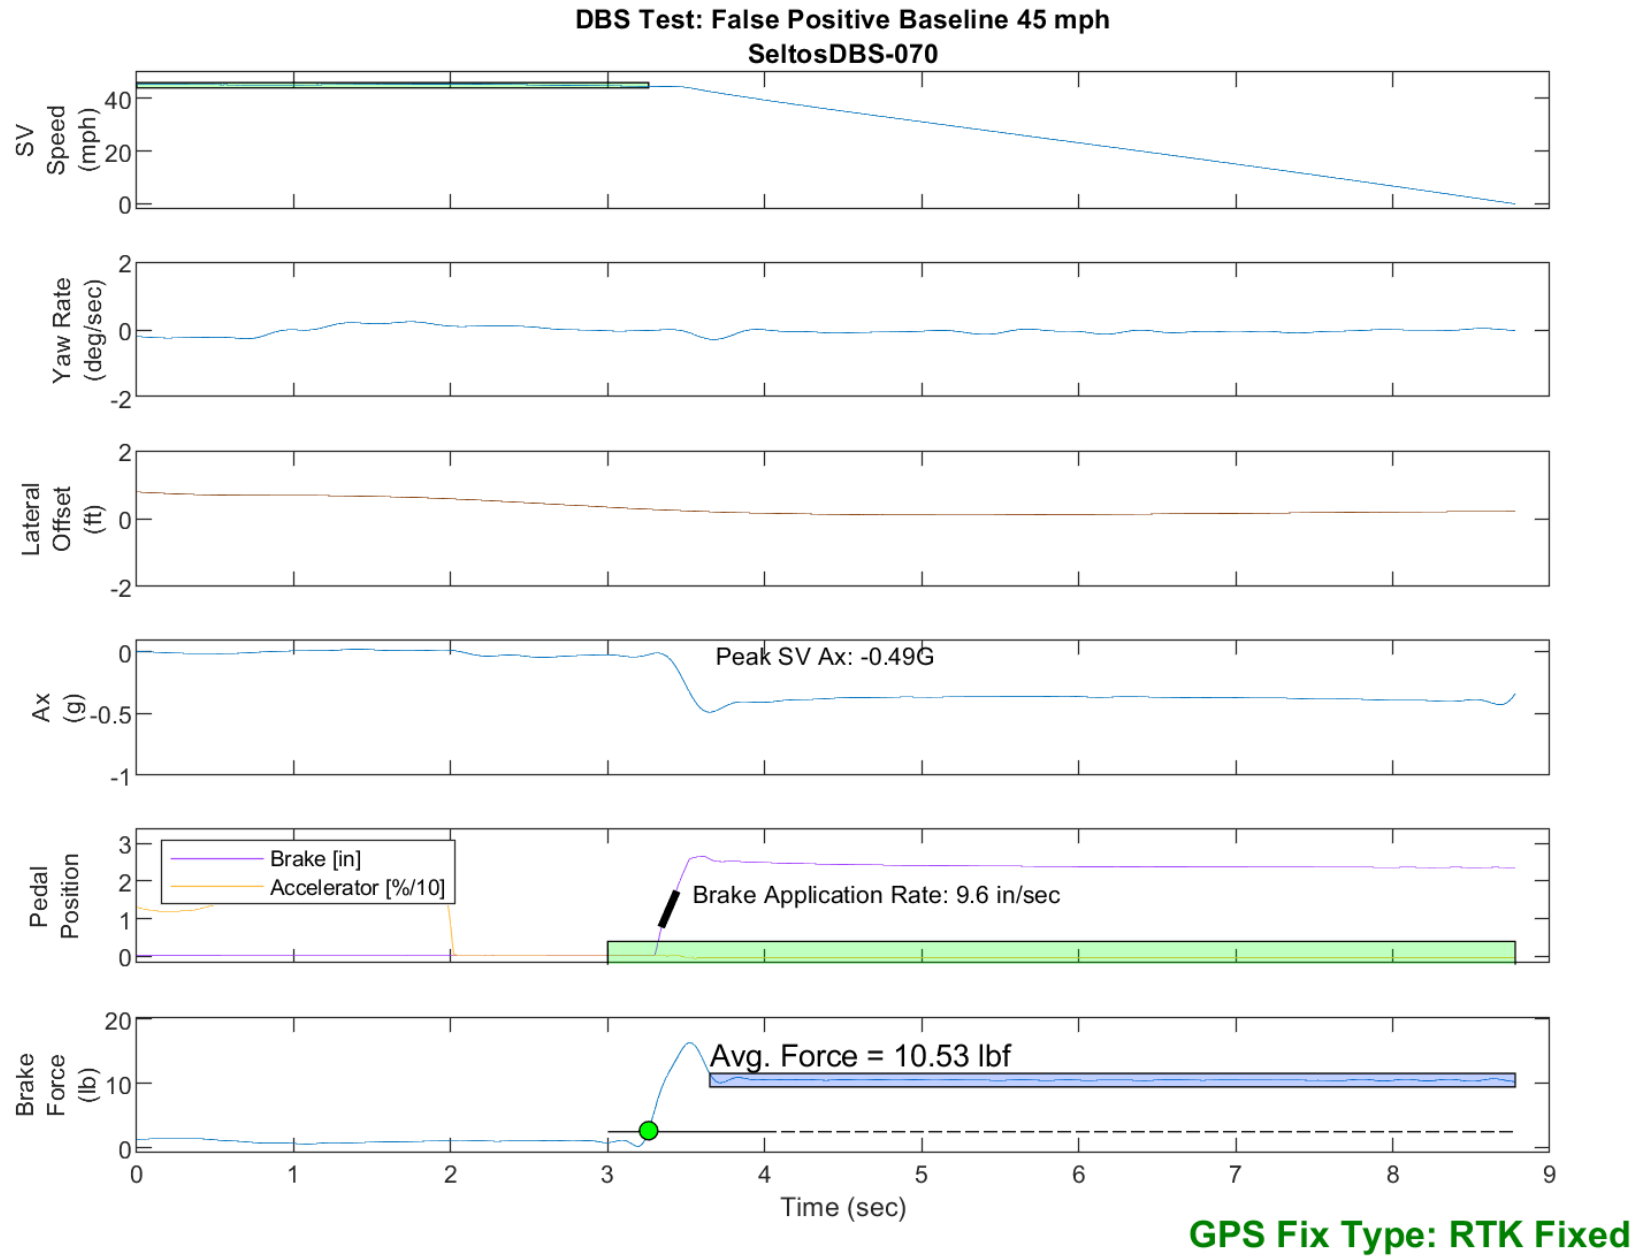


Figure E53. Time History for DBS Run 70, False Positive Baseline, SV 45 mph

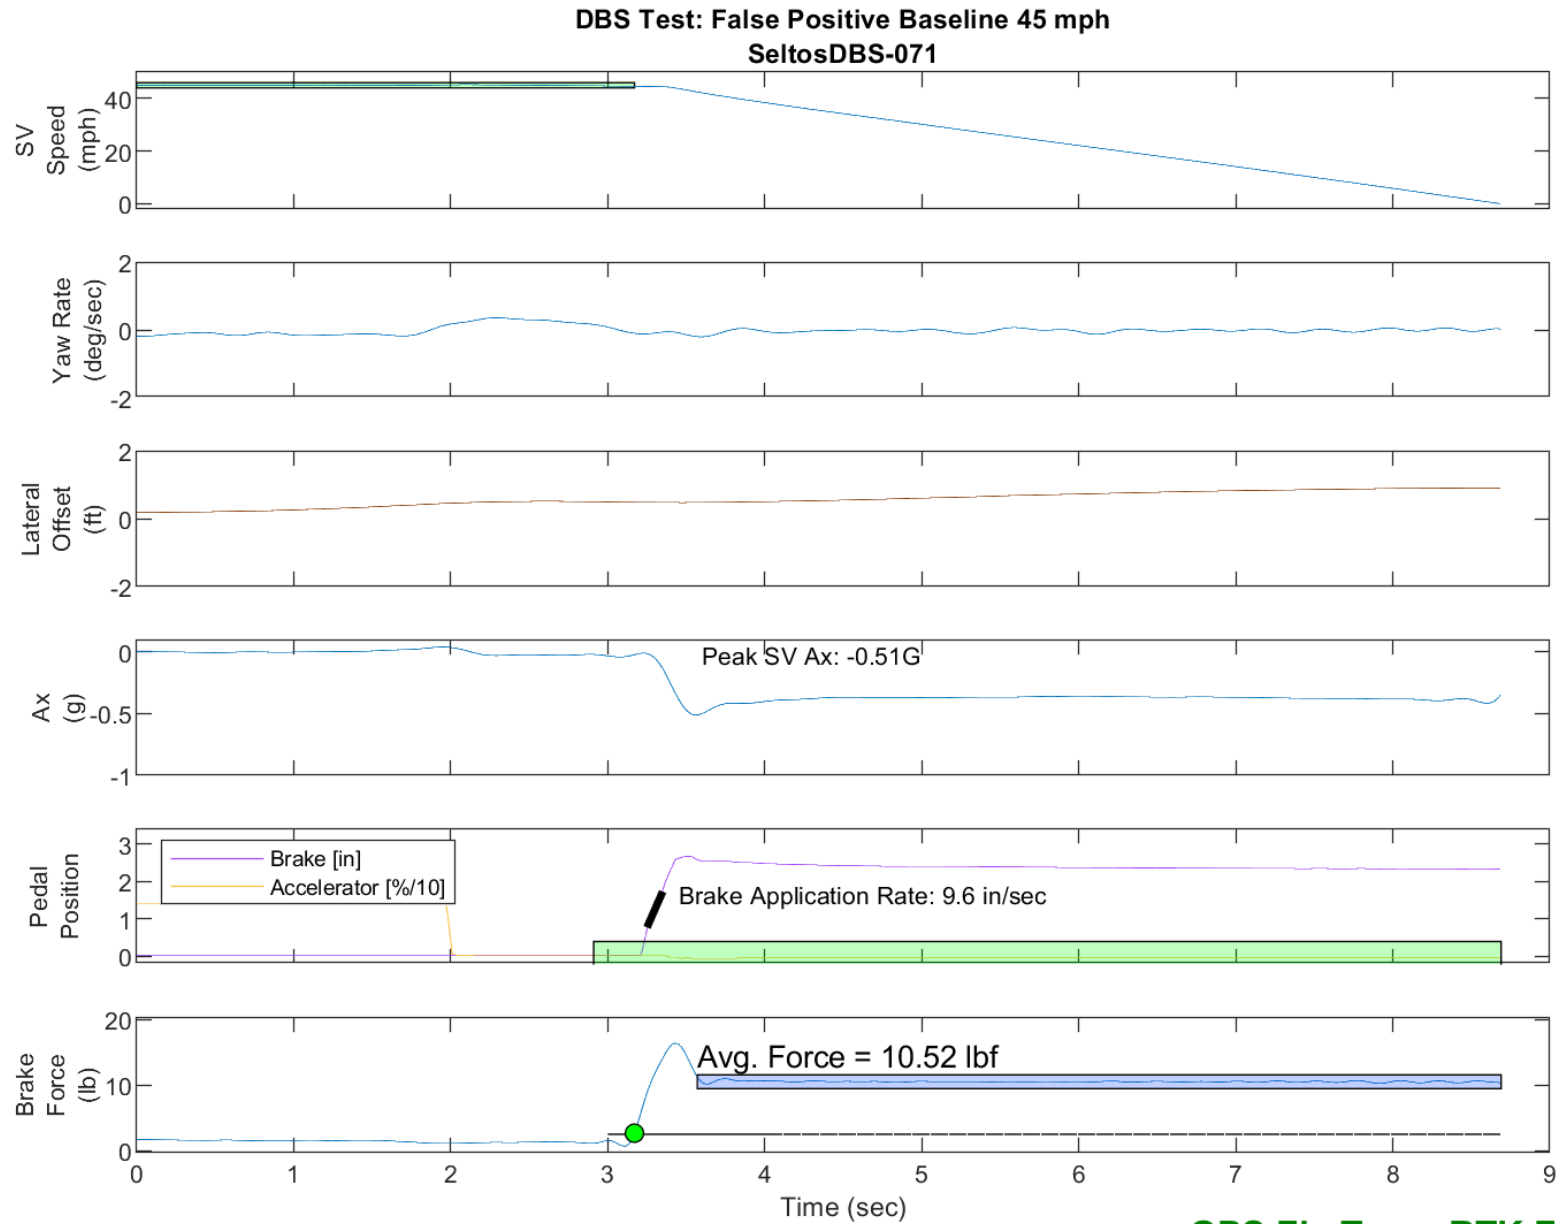

GPS Fix Type: RTK Fixed

Figure E54. Time History for DBS Run 71, False Positive Baseline, SV 45 mph

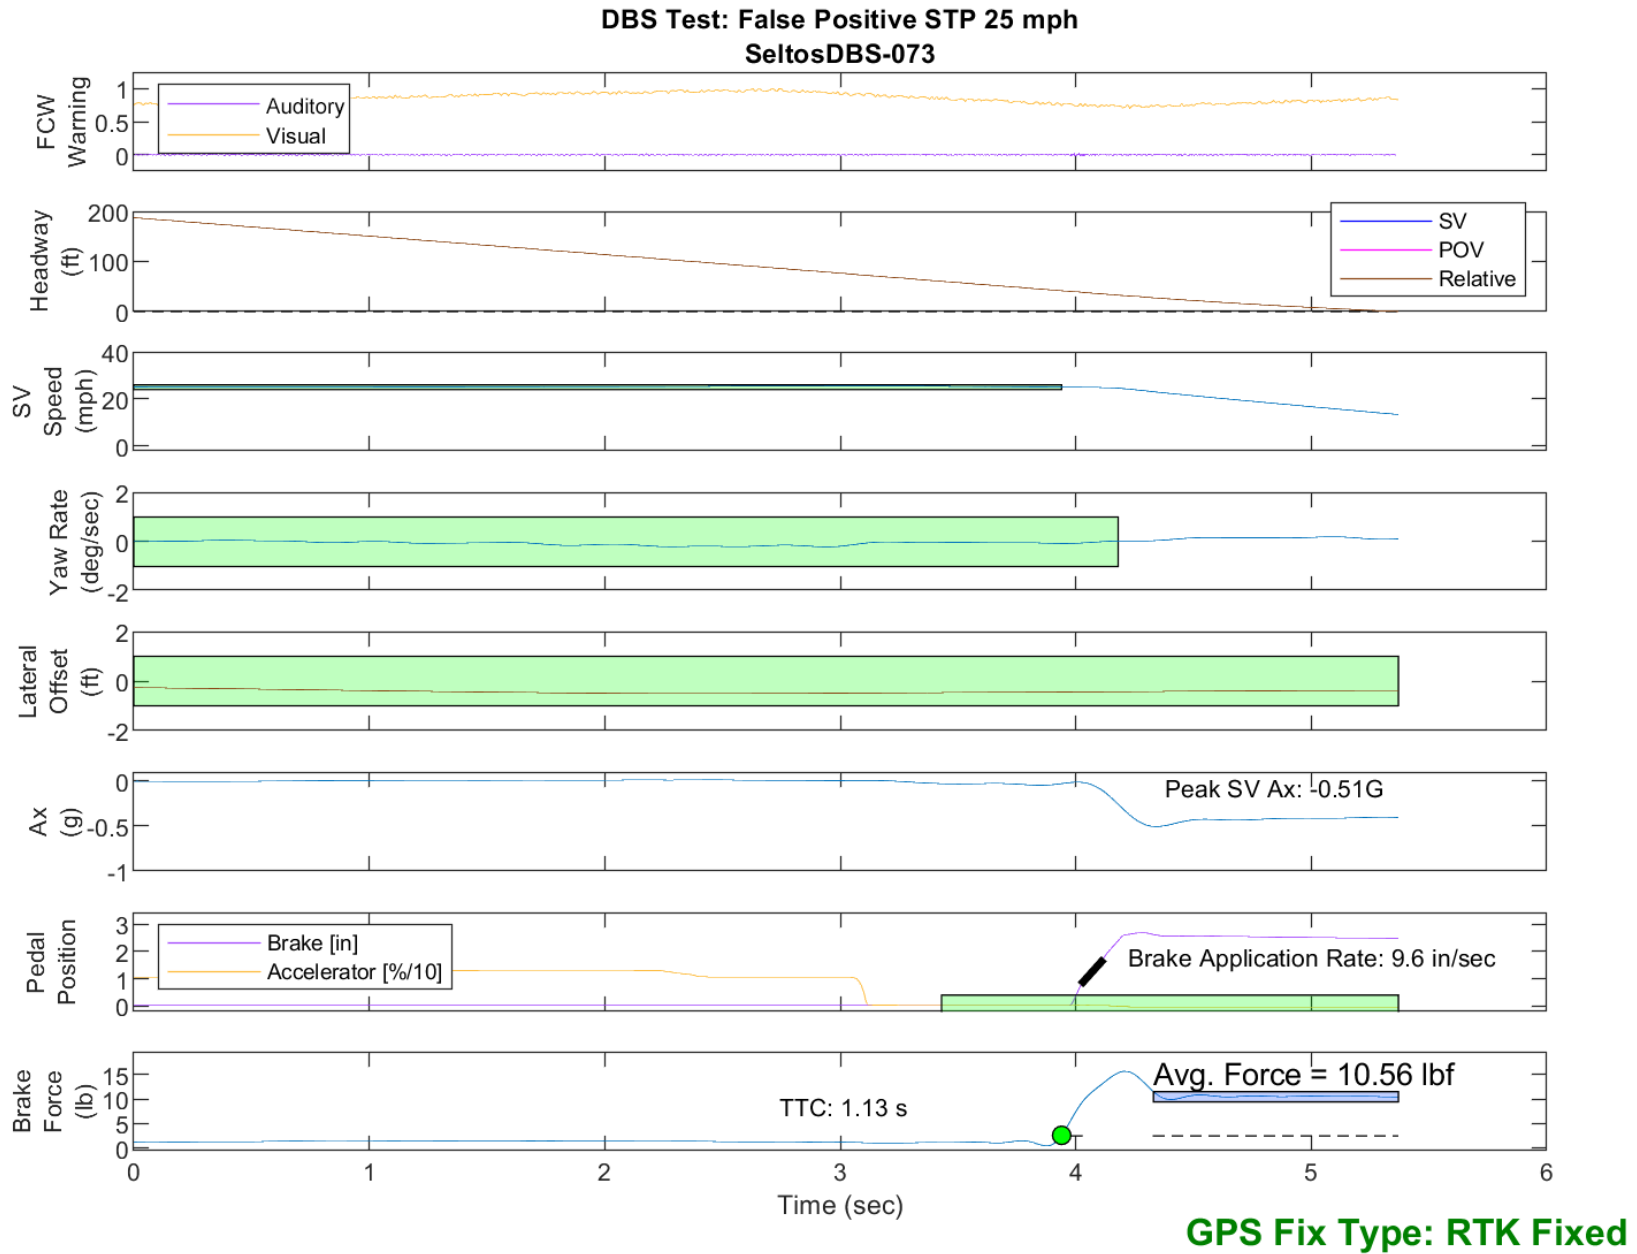


Figure E55. Time History for DBS Run 73, SV Encounters Steel Trench Plate, SV 25 mph

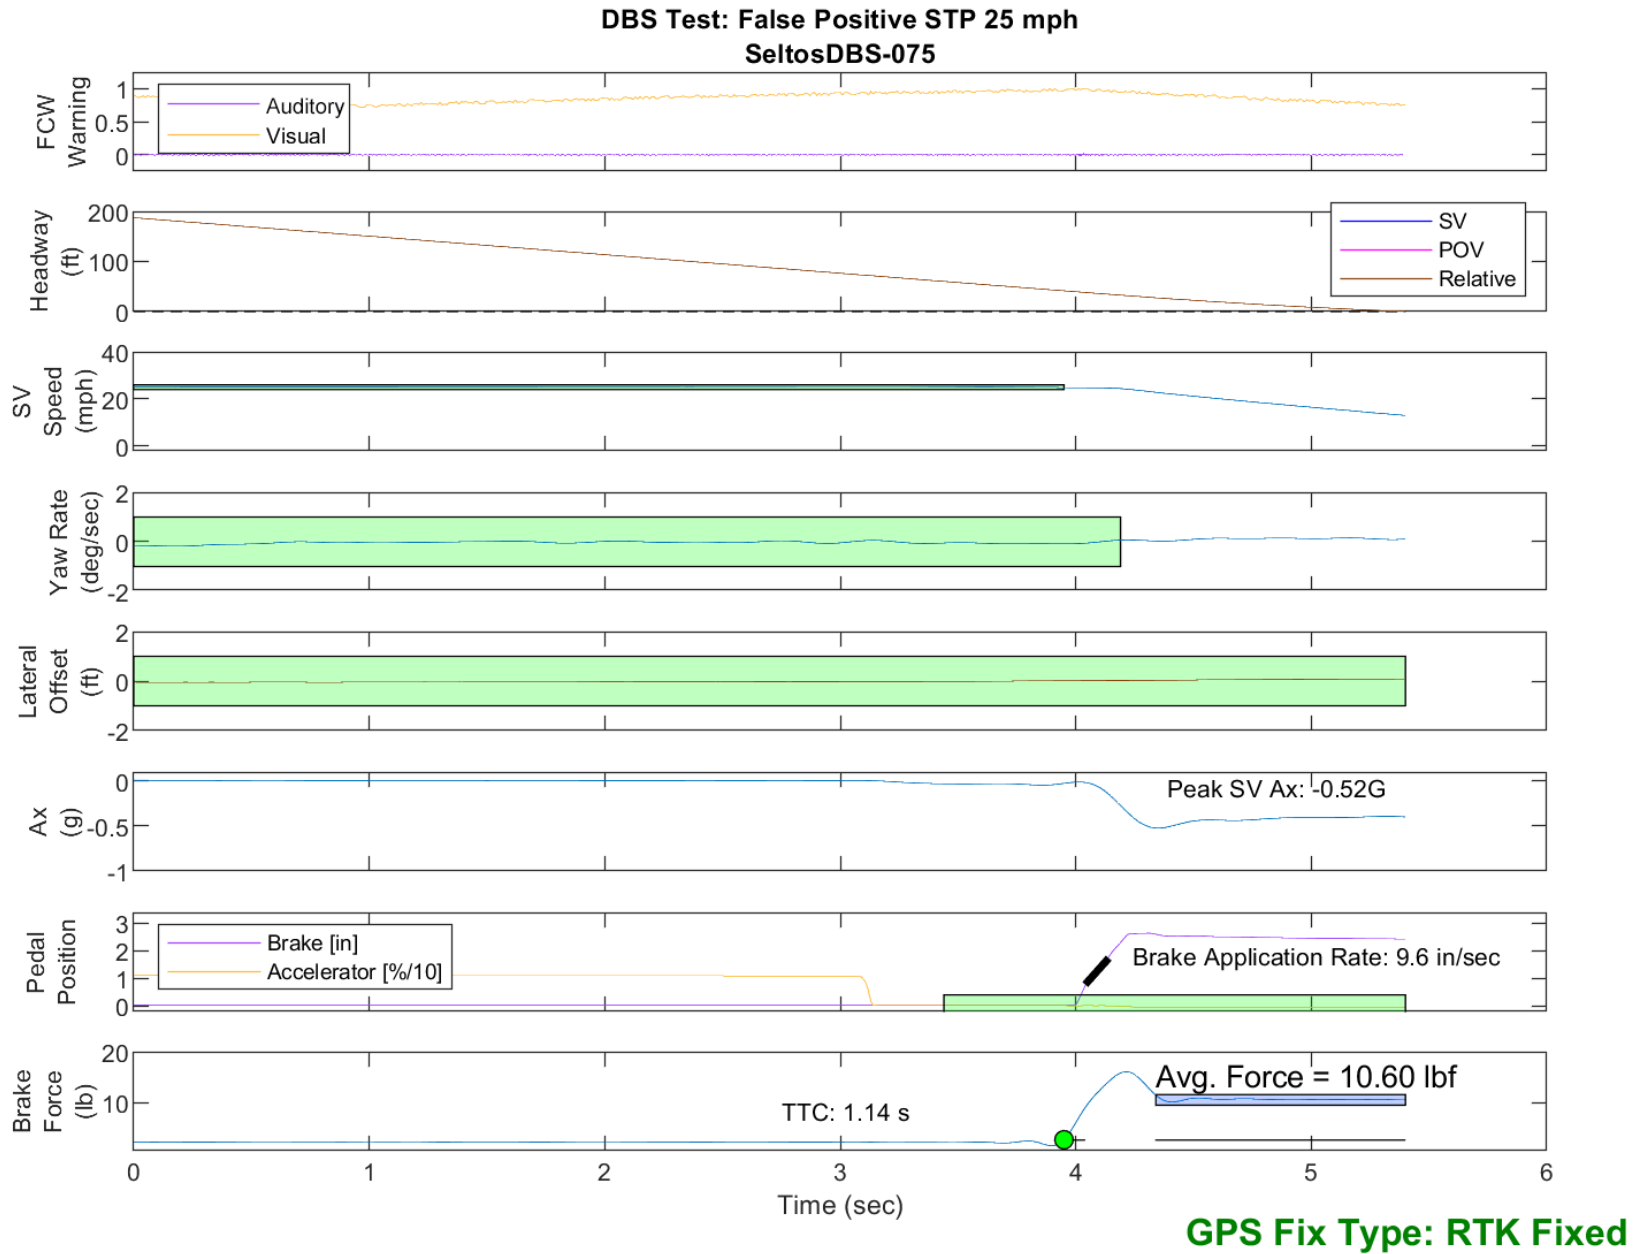


Figure E56. Time History for DBS Run 75, SV Encounters Steel Trench Plate, SV 25 mph

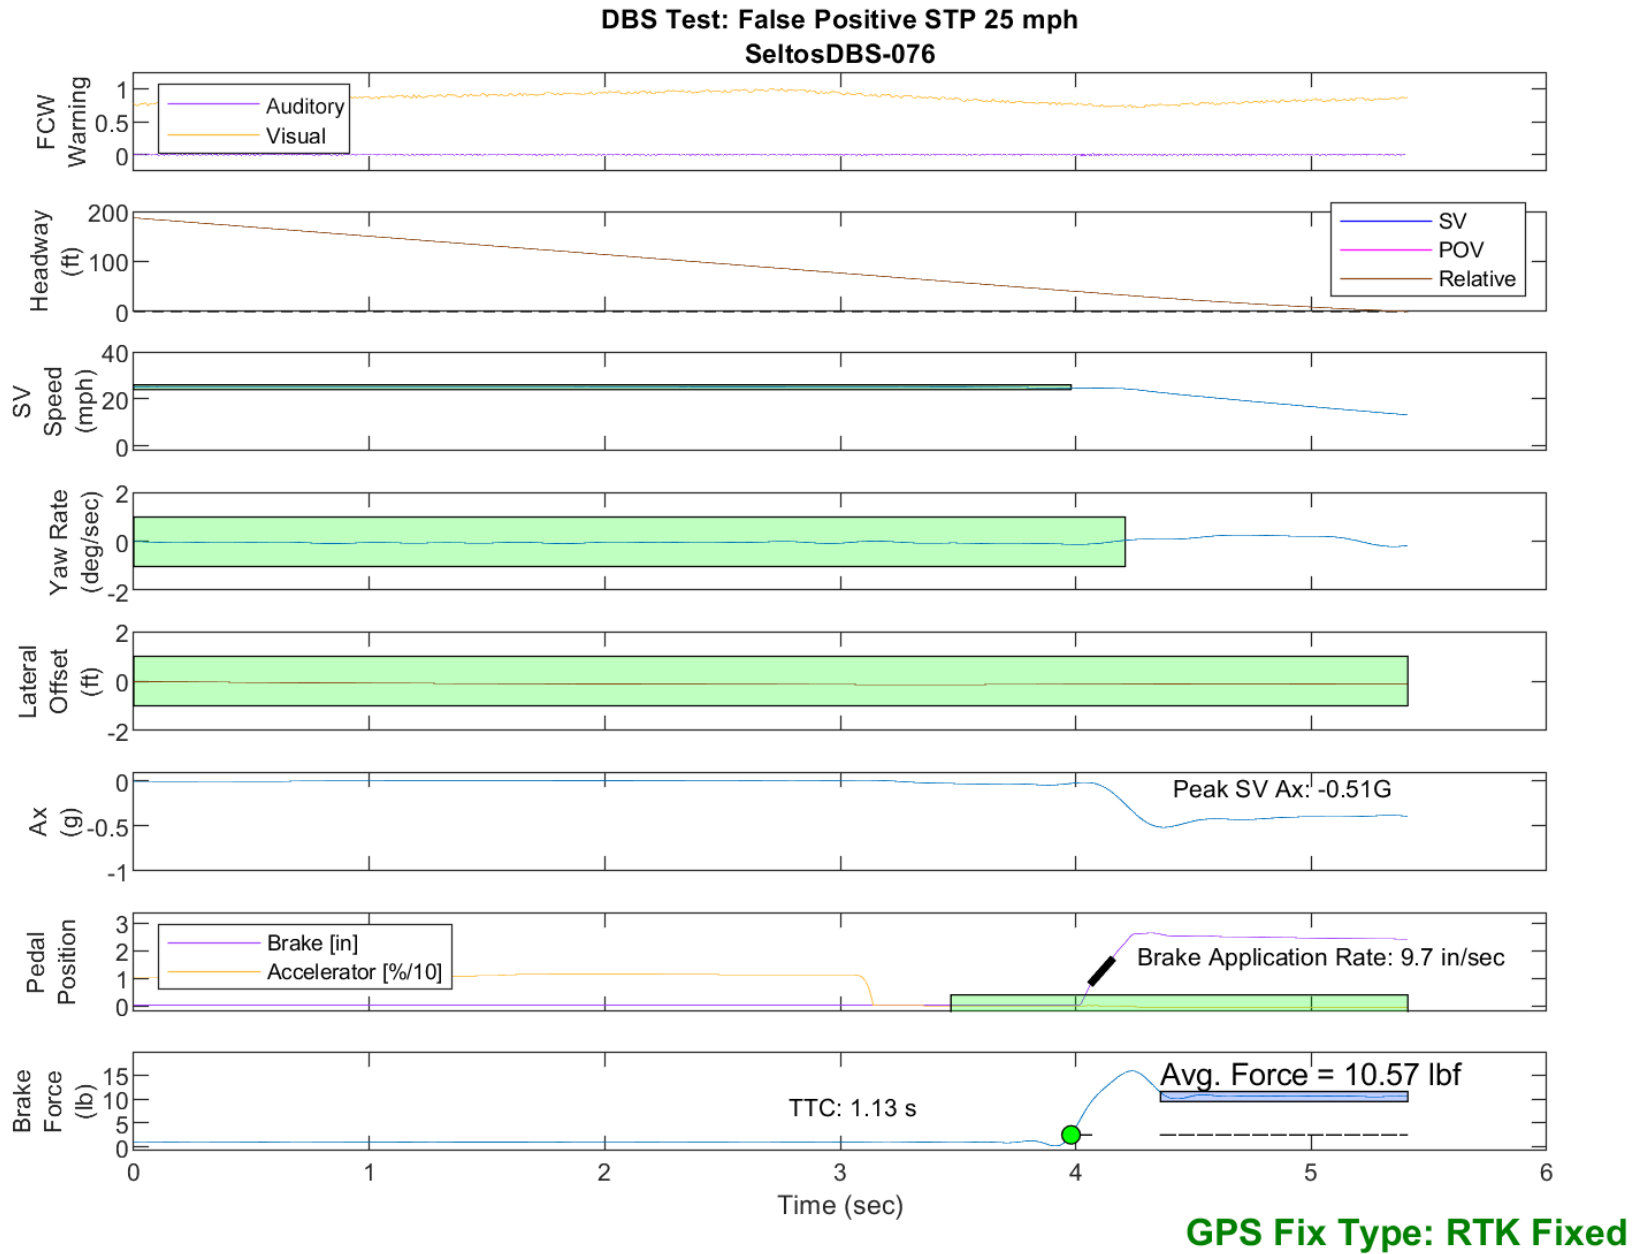


Figure E57. Time History for DBS Run 76, SV Encounters Steel Trench Plate, SV 25 mph

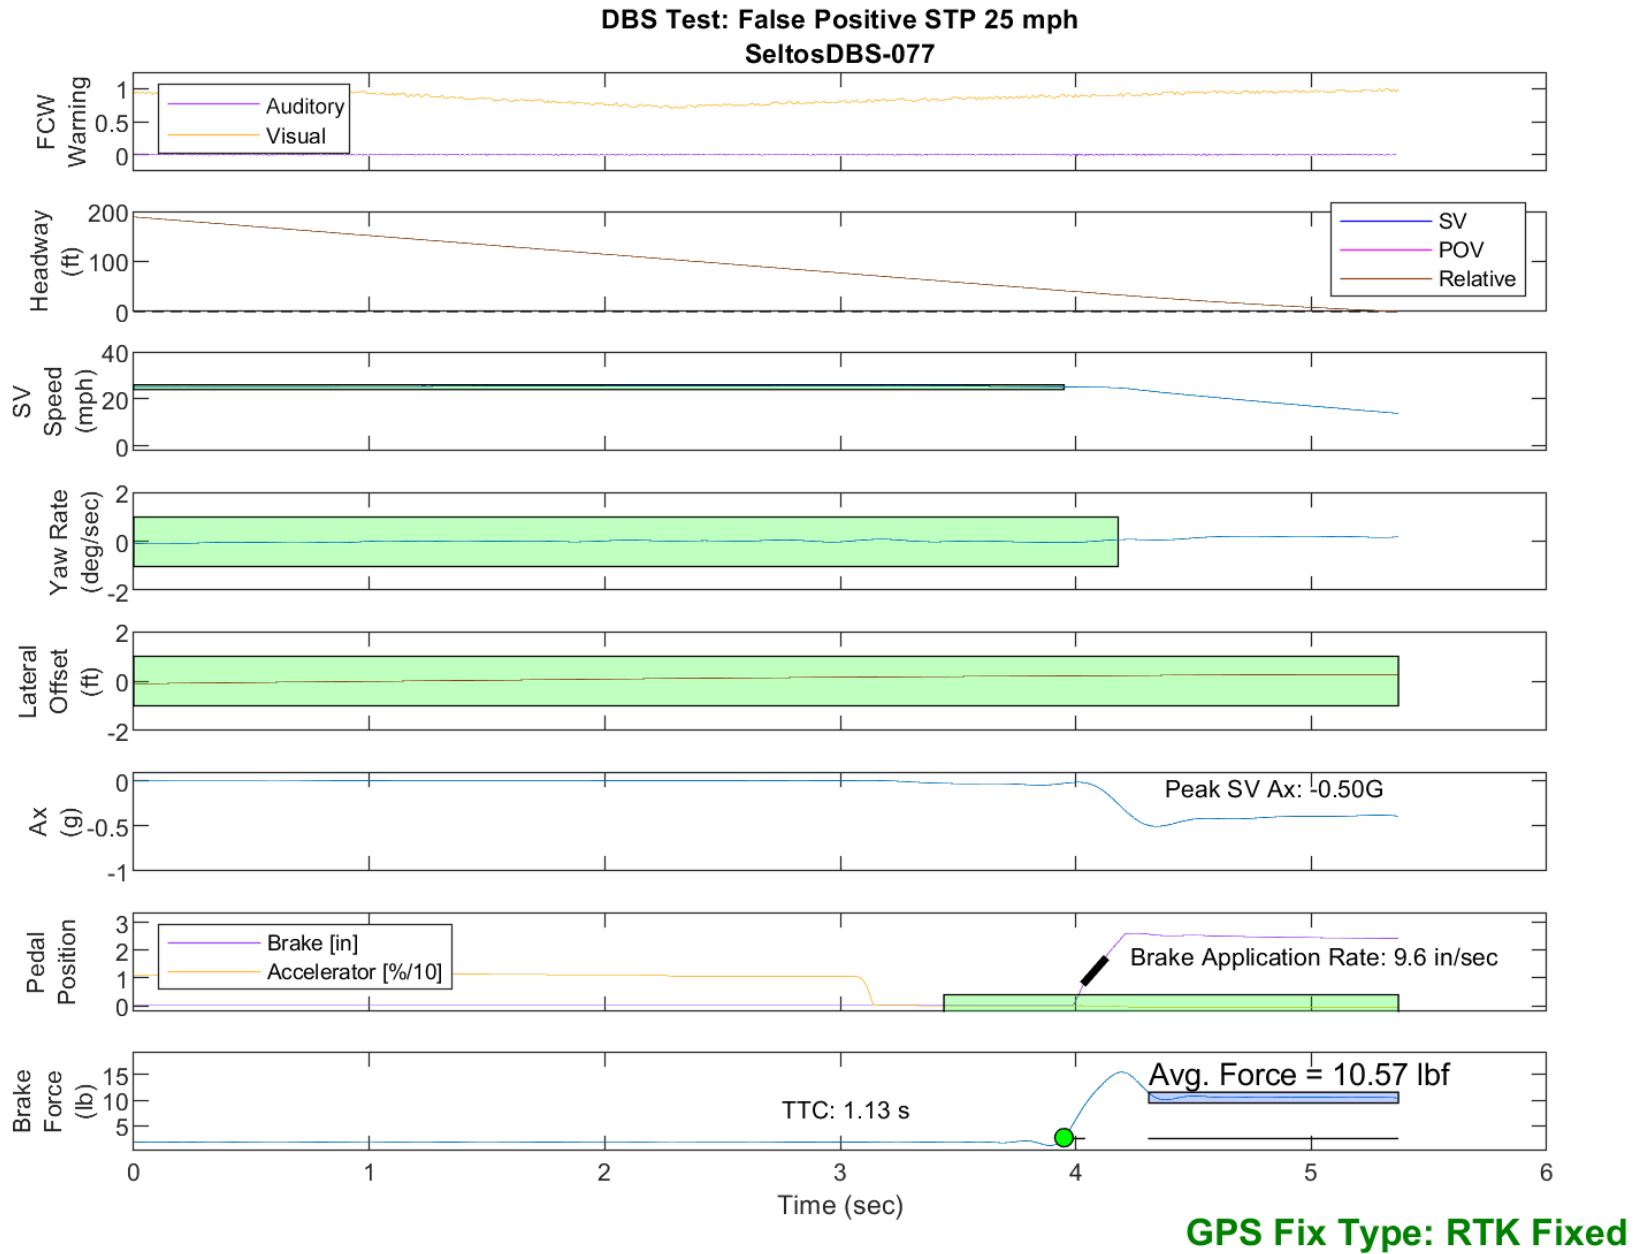


Figure E58. Time History for DBS Run 77, SV Encounters Steel Trench Plate, SV 25 mph

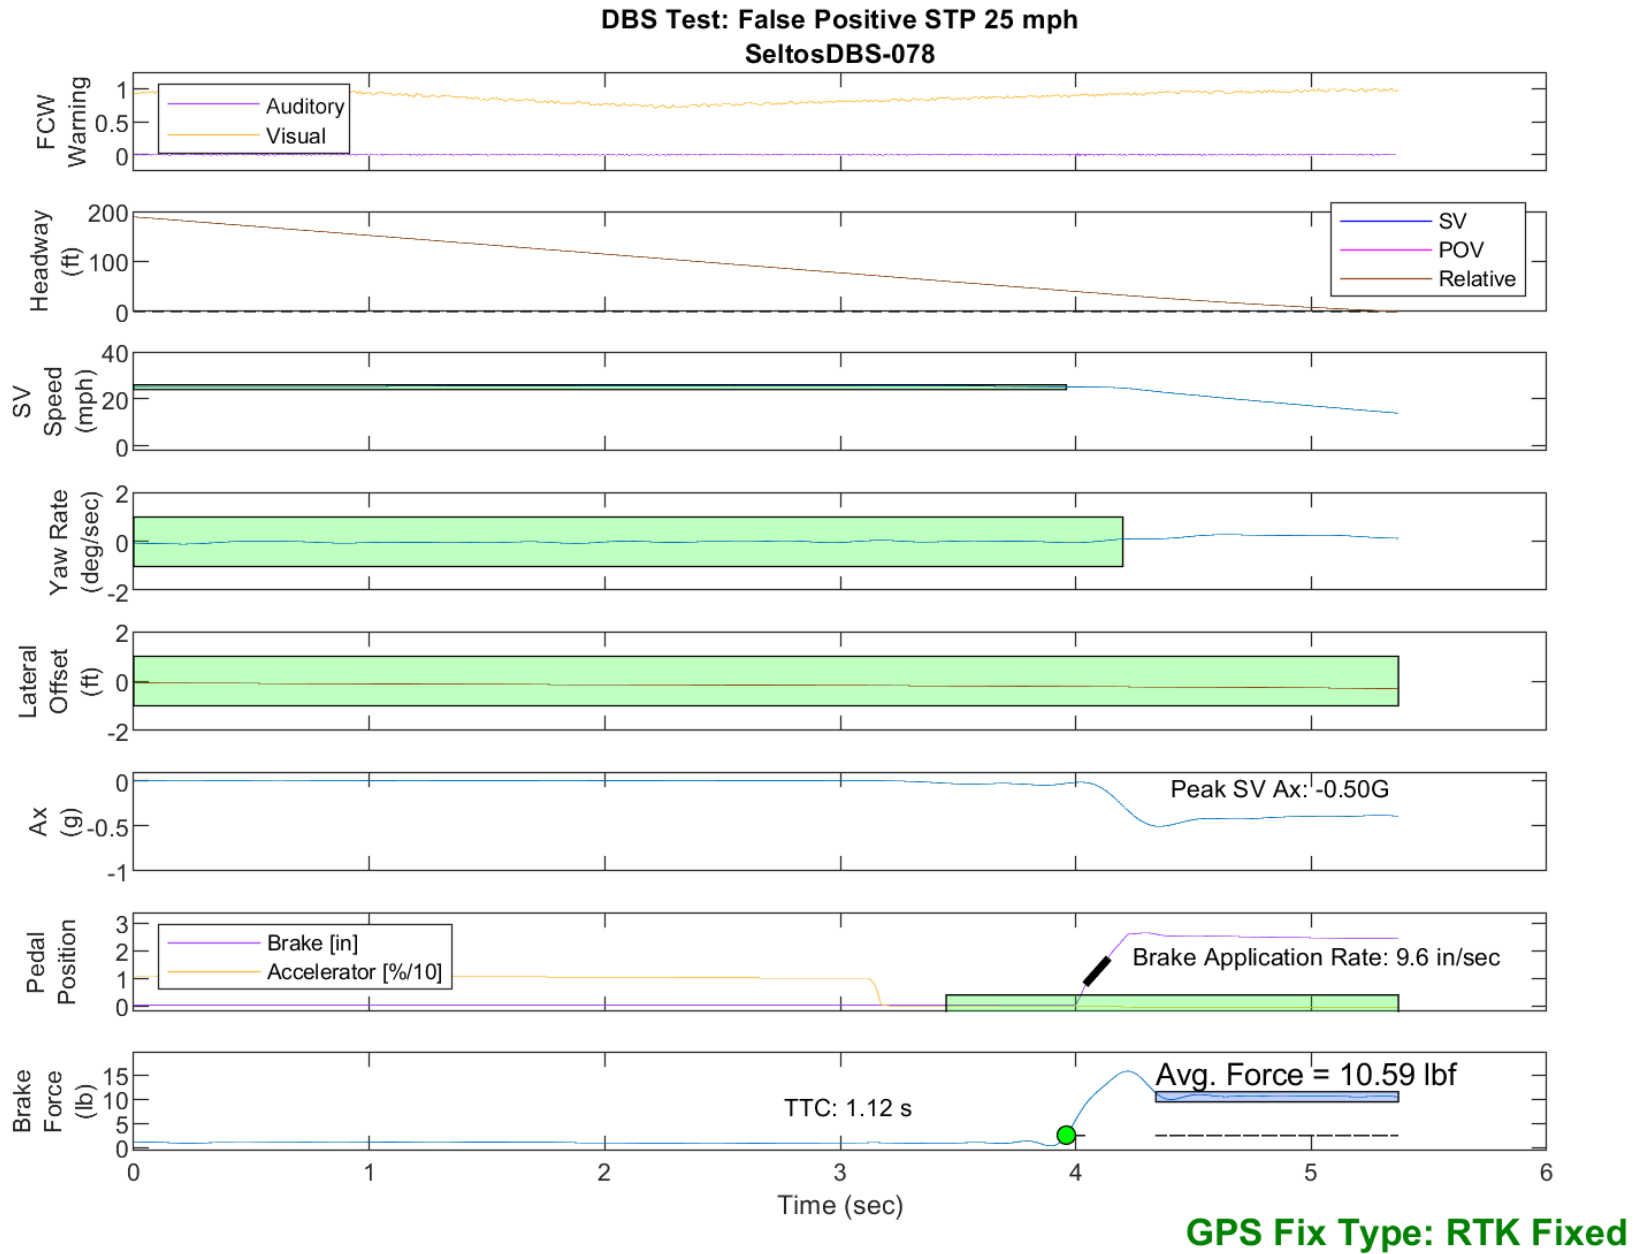


Figure E59. Time History for DBS Run 78, SV Encounters Steel Trench Plate, SV 25 mph

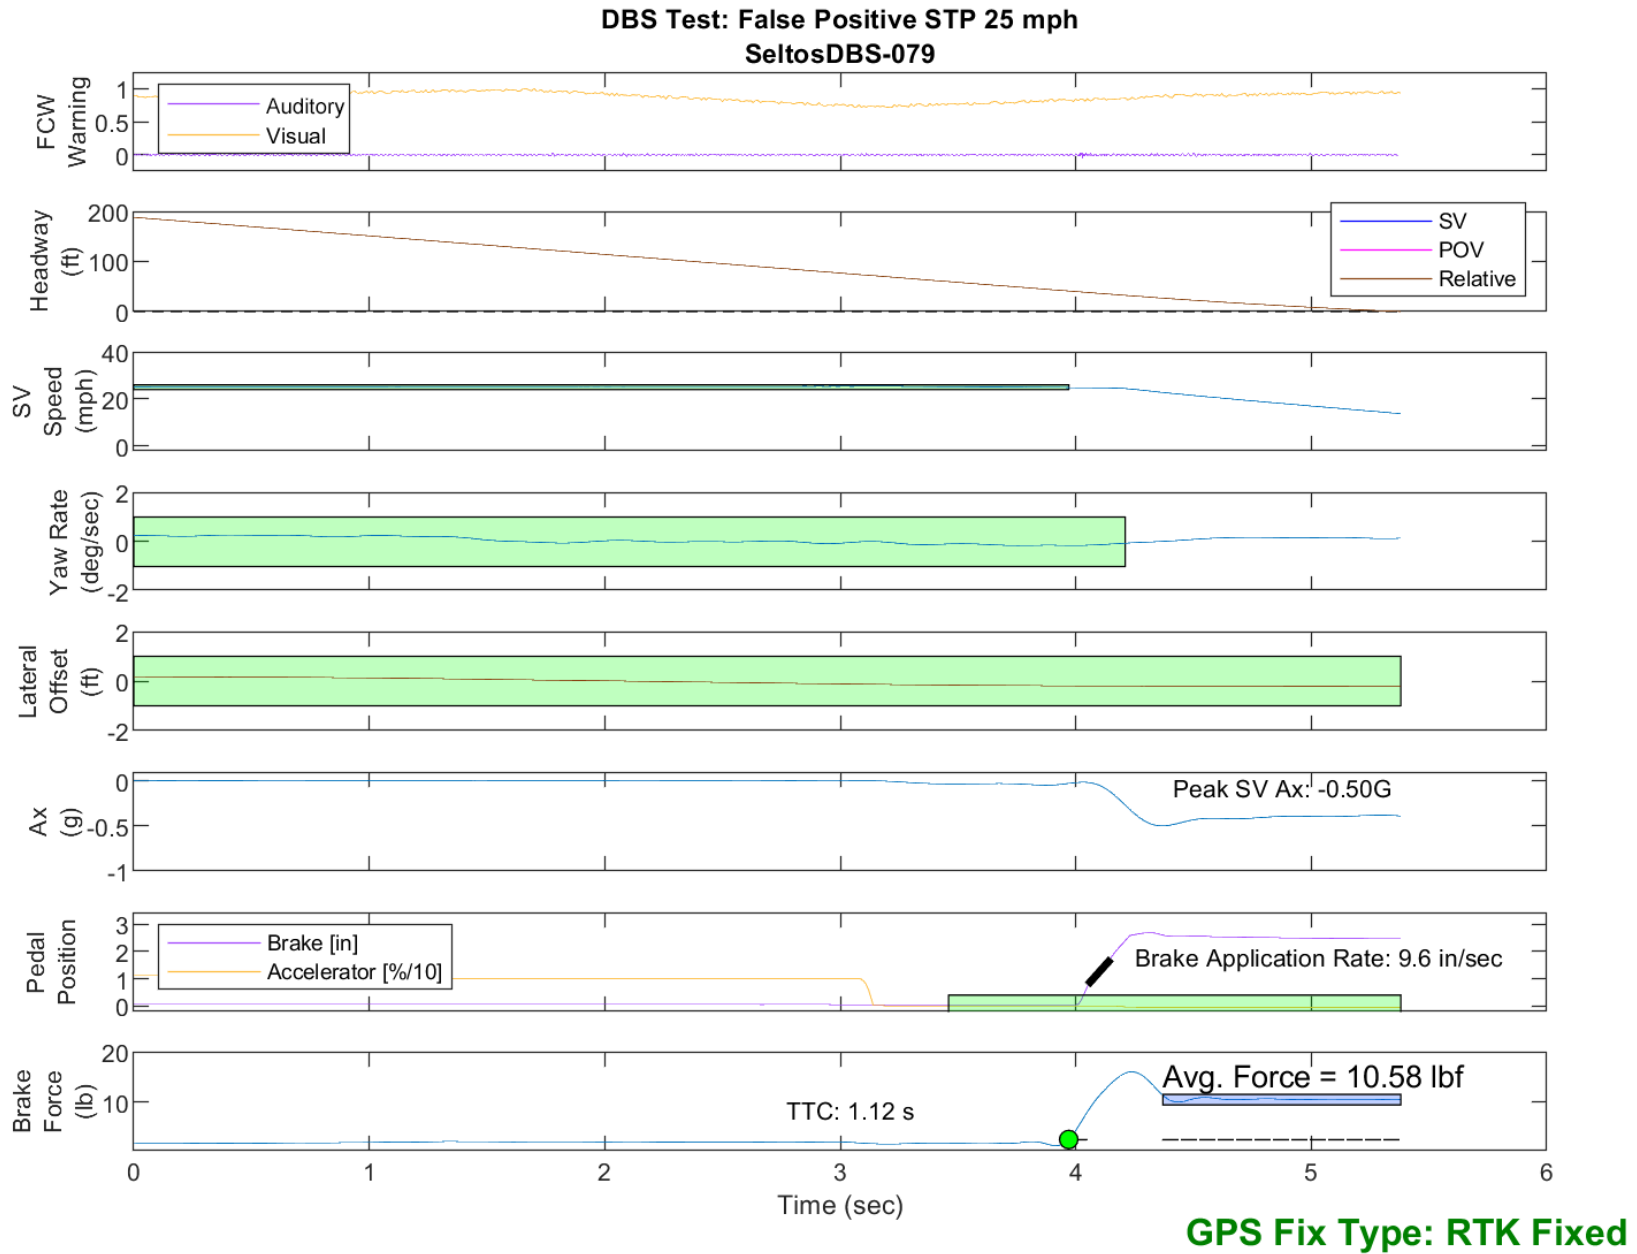


Figure E60. Time History for DBS Run 79, SV Encounters Steel Trench Plate, SV 25 mph

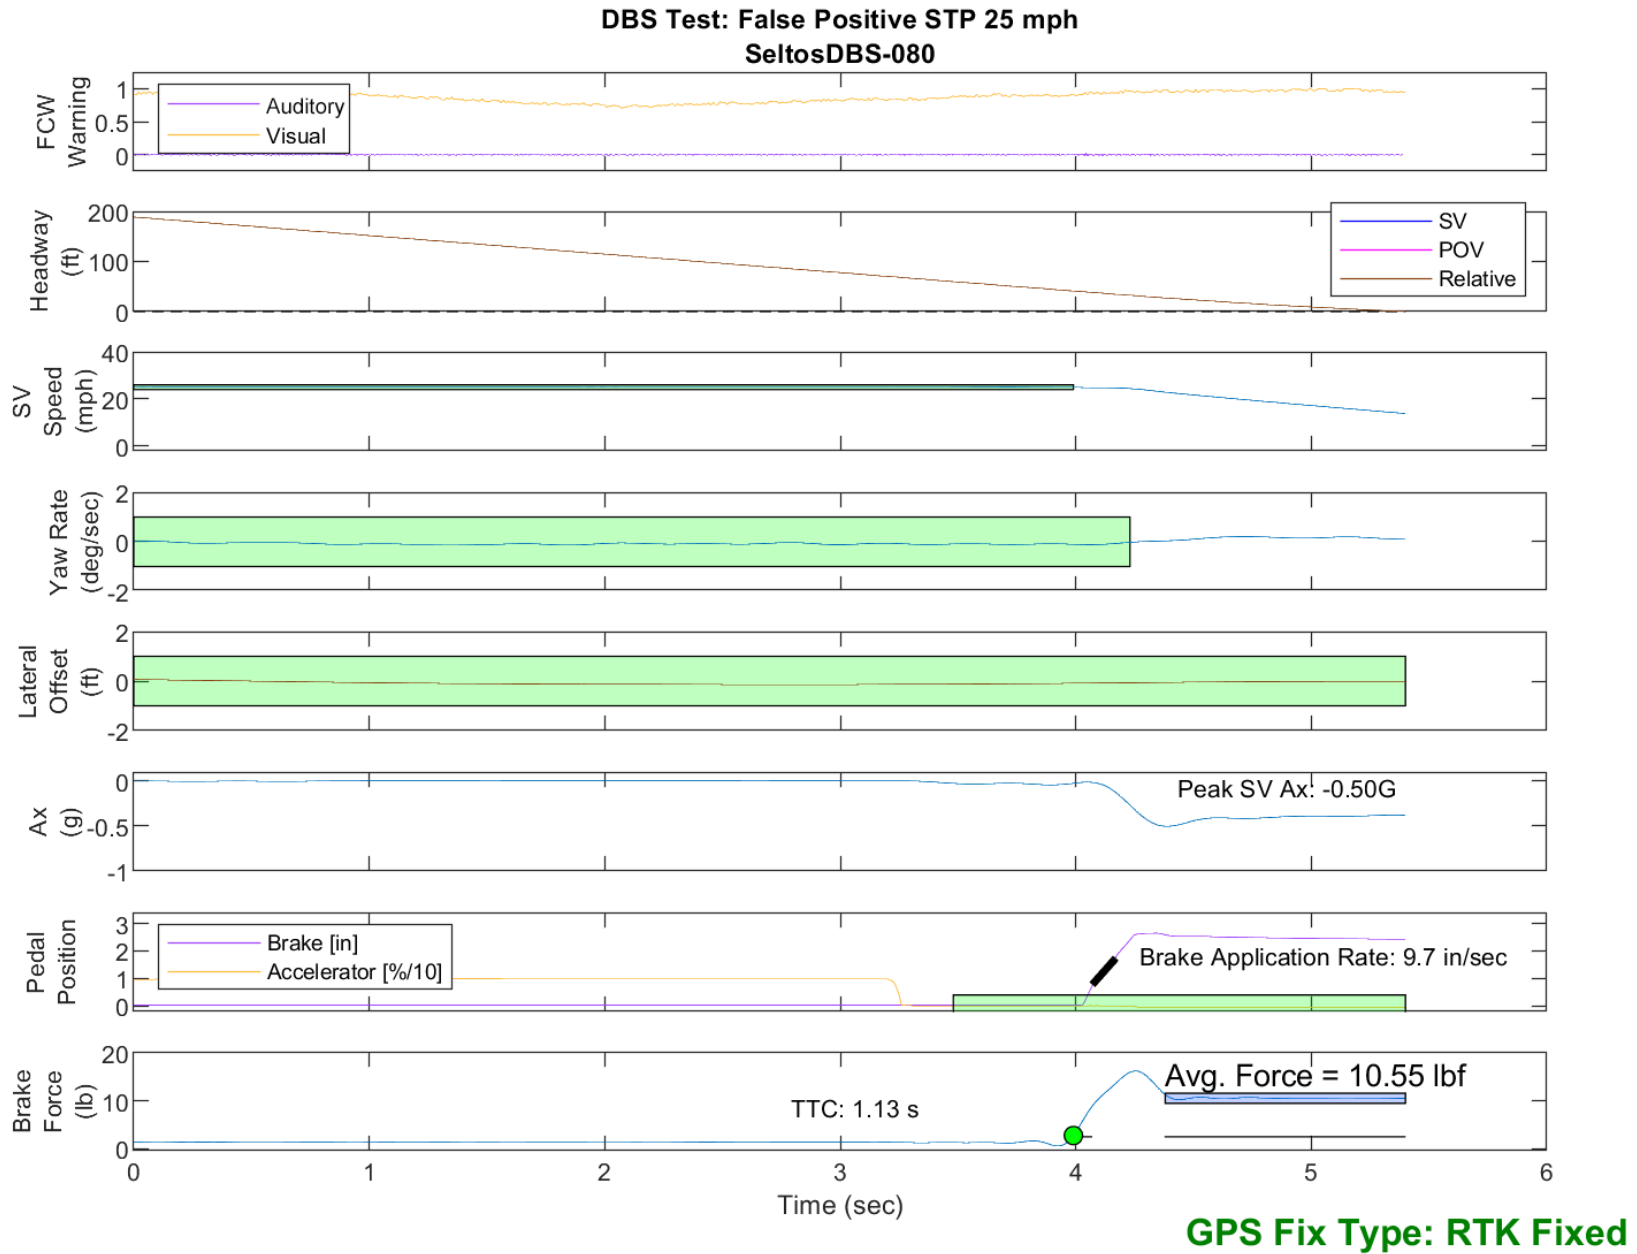


Figure E61. Time History for DBS Run 80, SV Encounters Steel Trench Plate, SV 25 mph

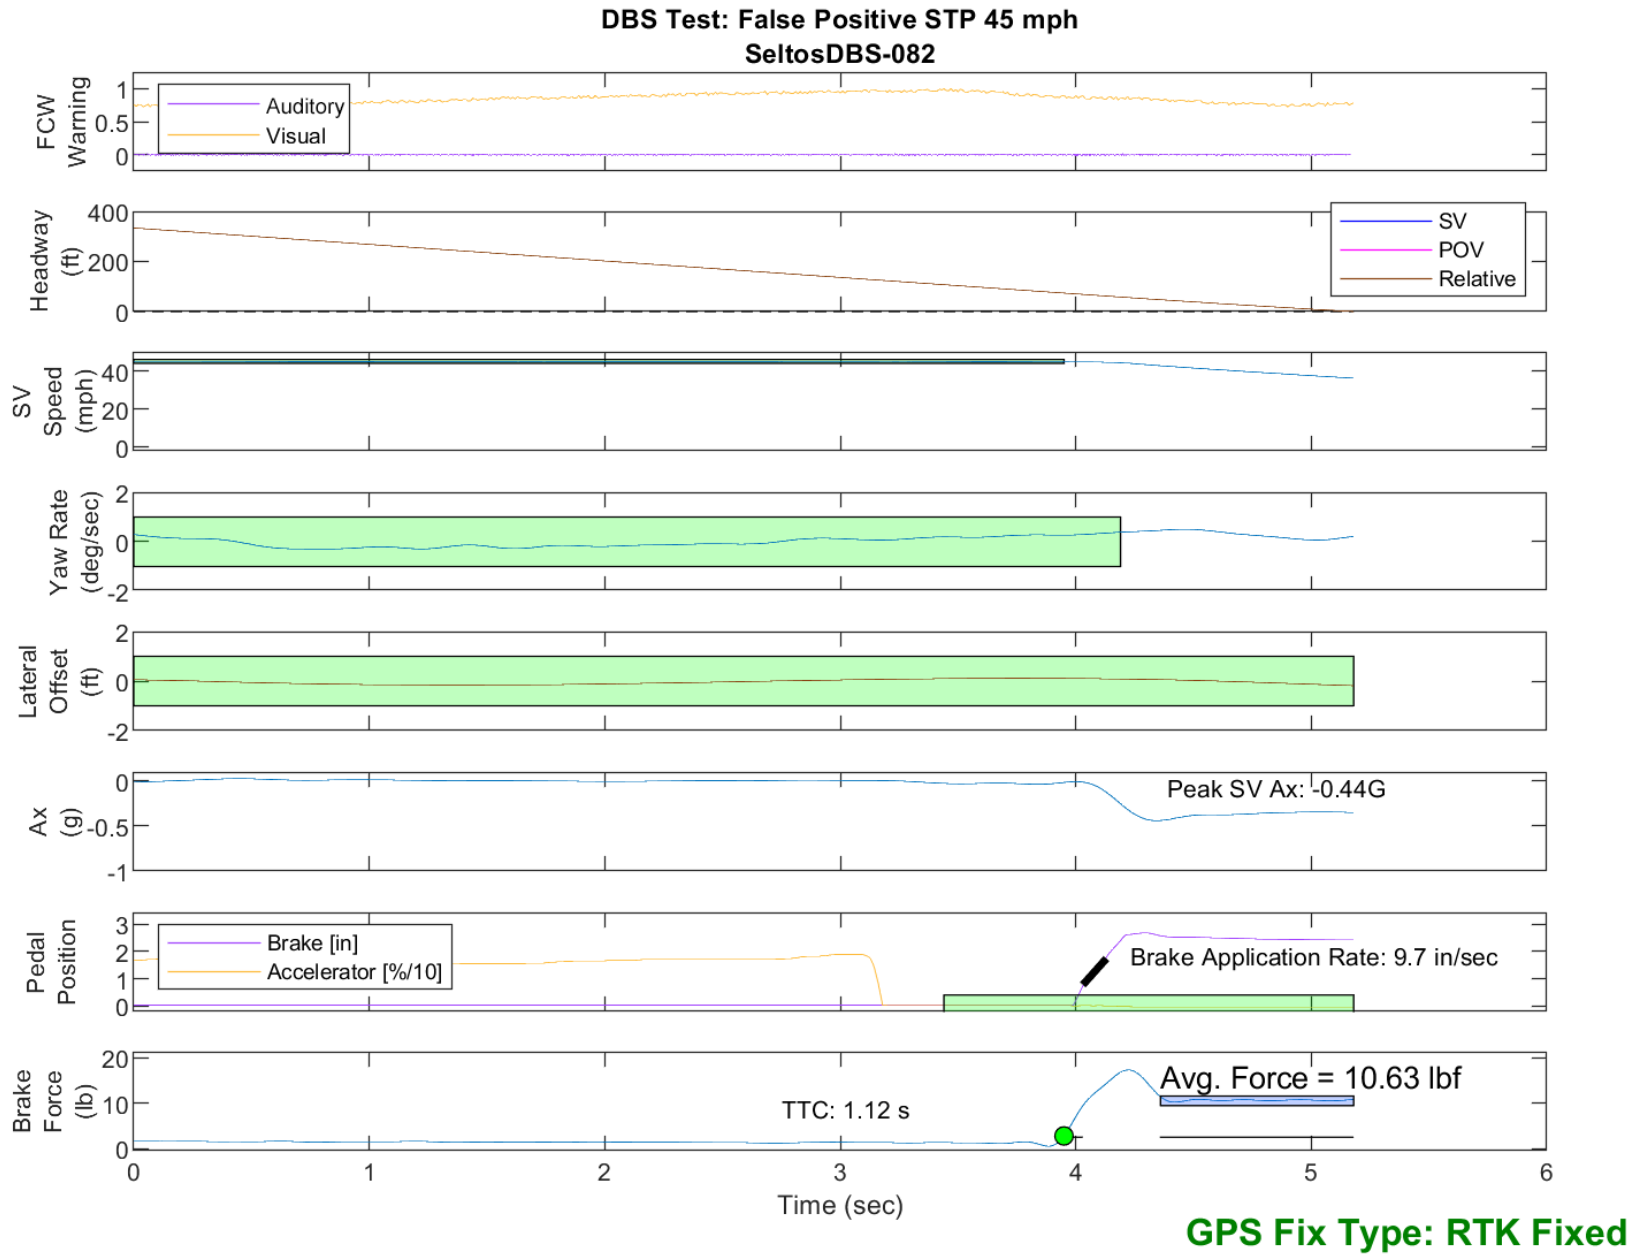


Figure E62. Time History for DBS Run 82, SV Encounters Steel Trench Plate, SV 45 mph

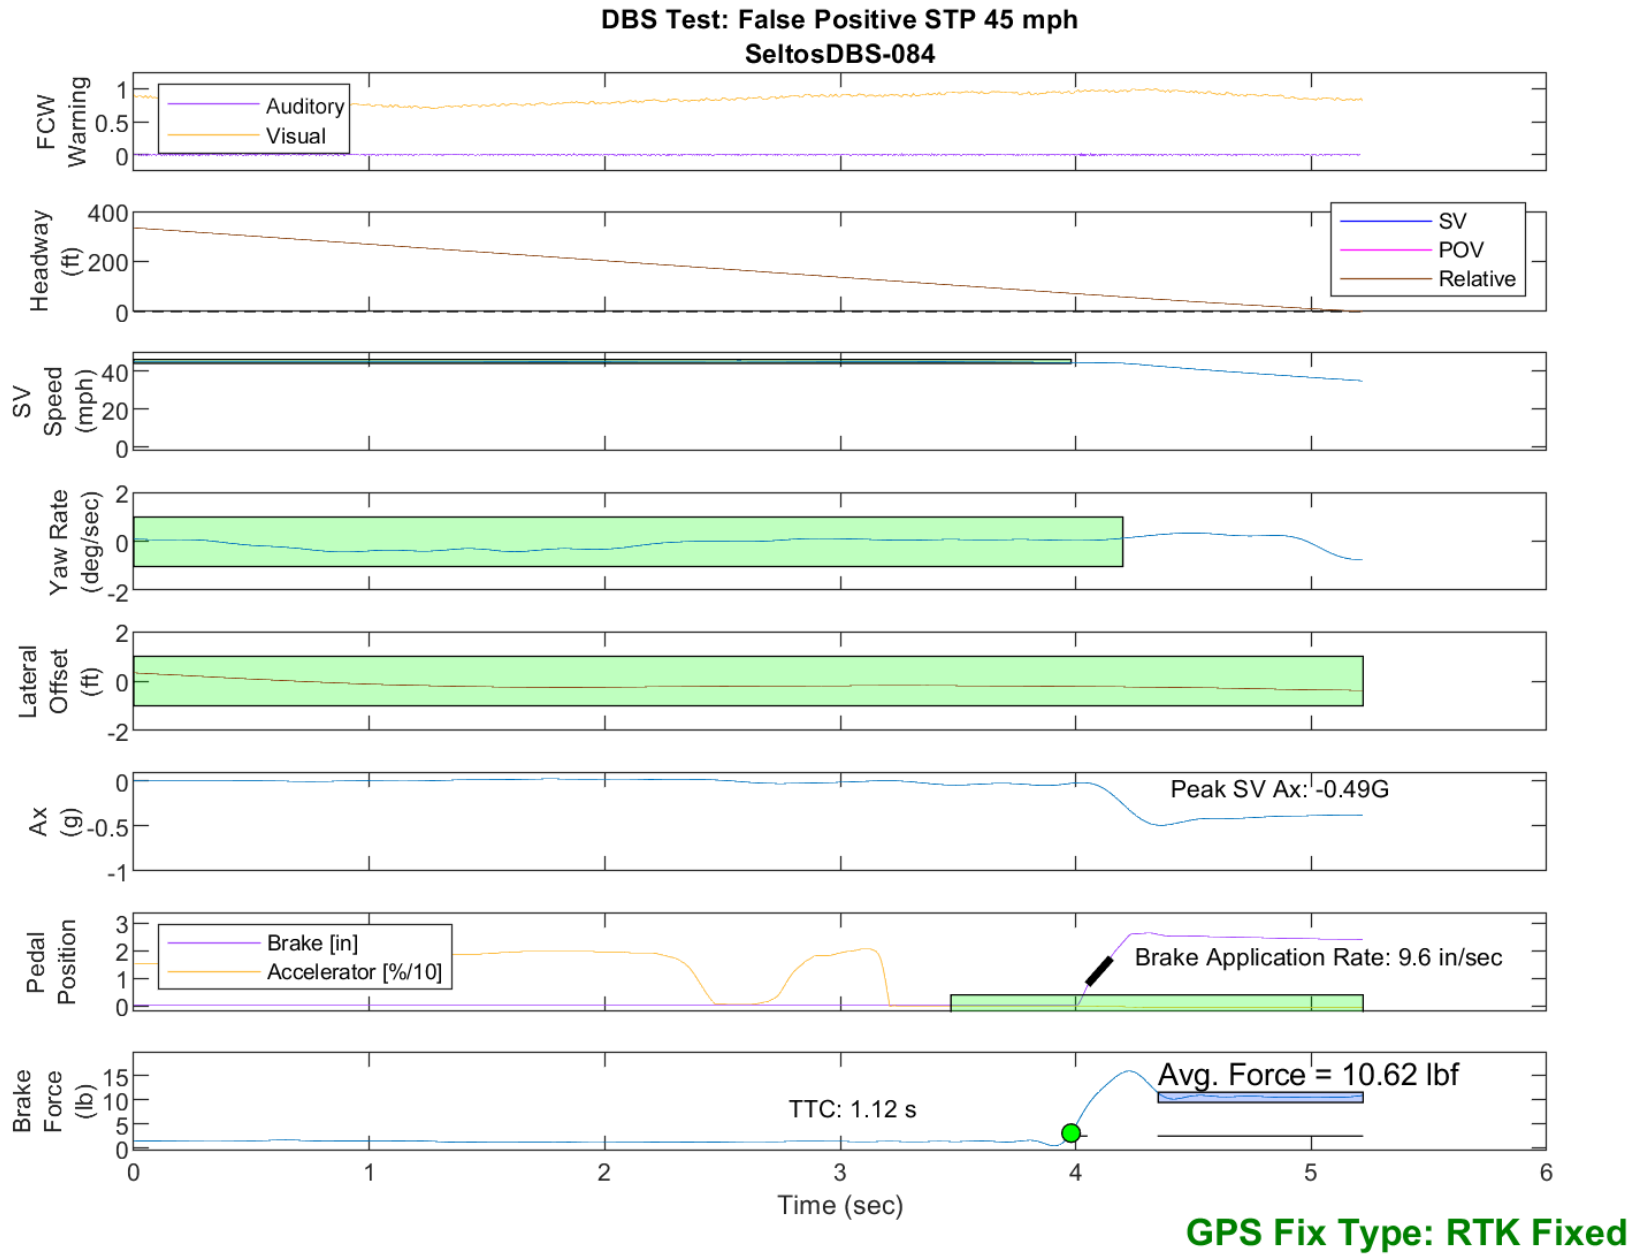


Figure E63. Time History for DBS Run 84, SV Encounters Steel Trench Plate, SV 45 mph

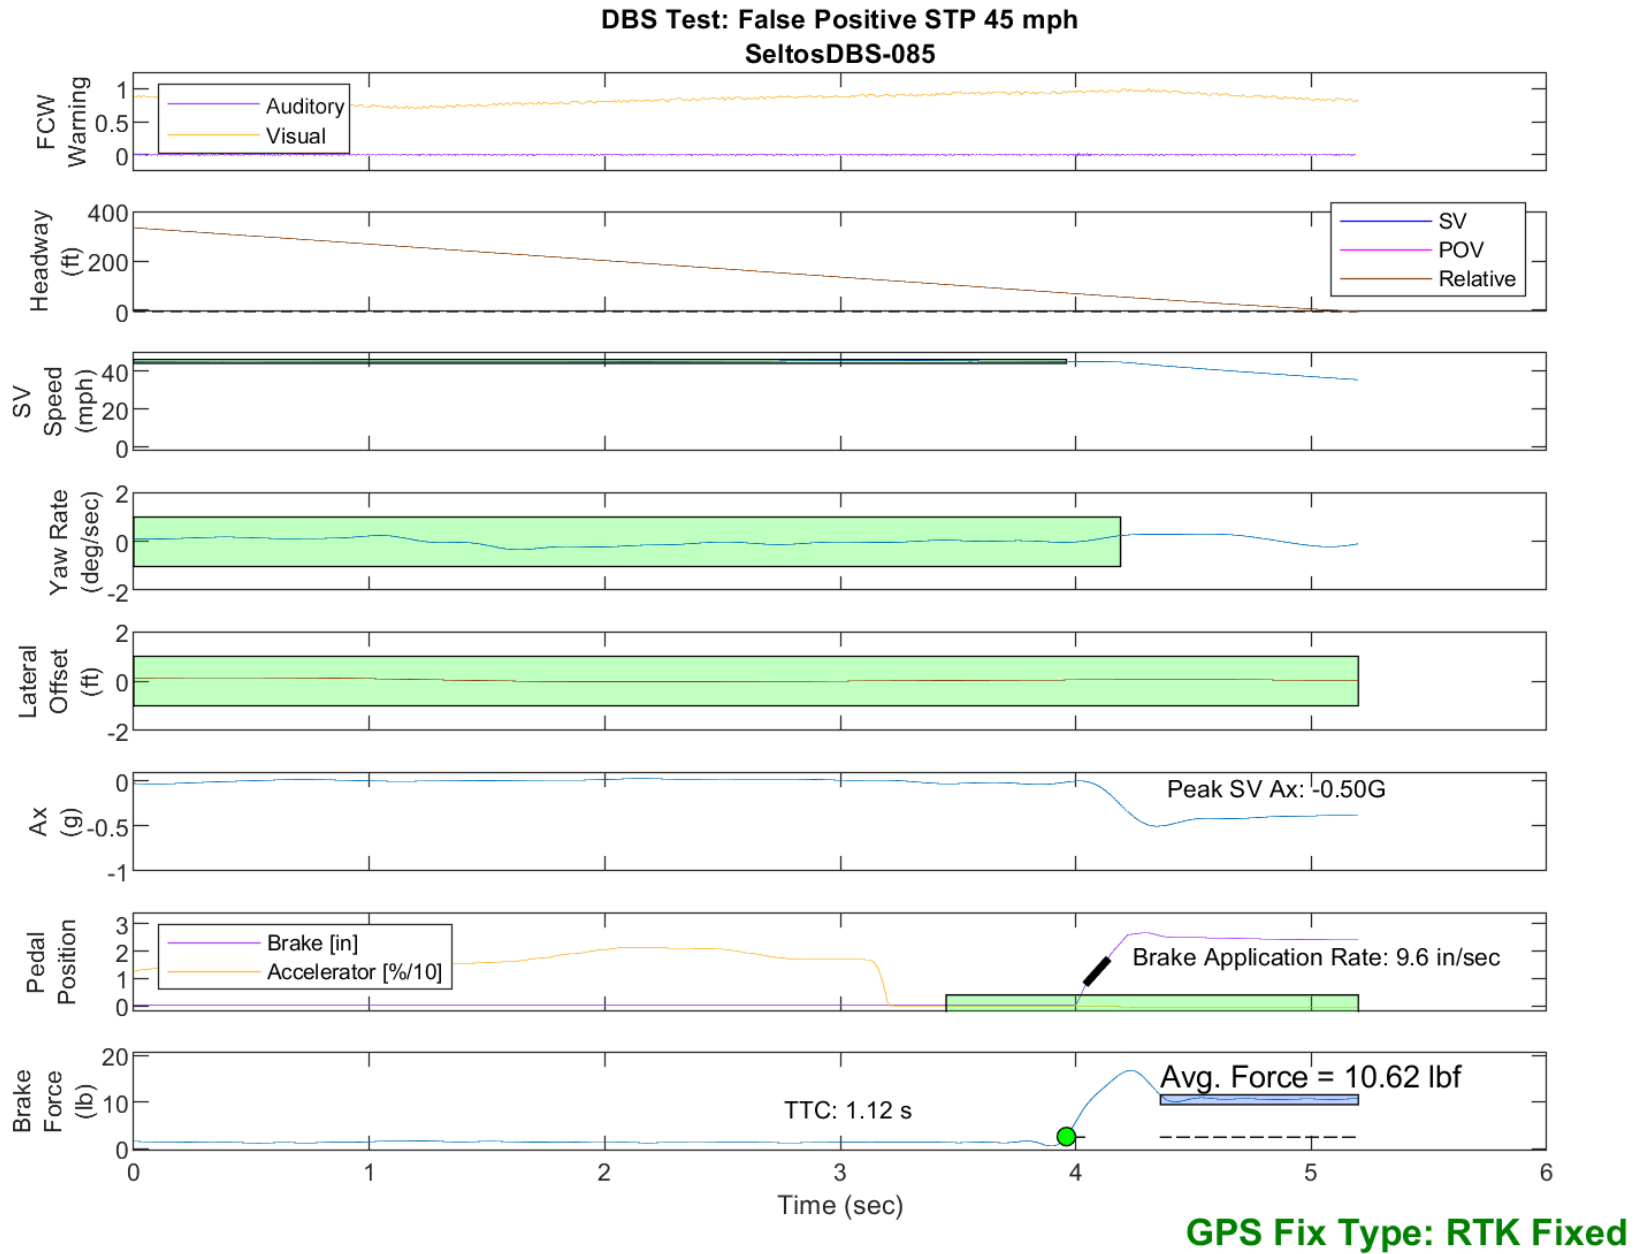


Figure E64. Time History for DBS Run 85, SV Encounters Steel Trench Plate, SV 45 mph

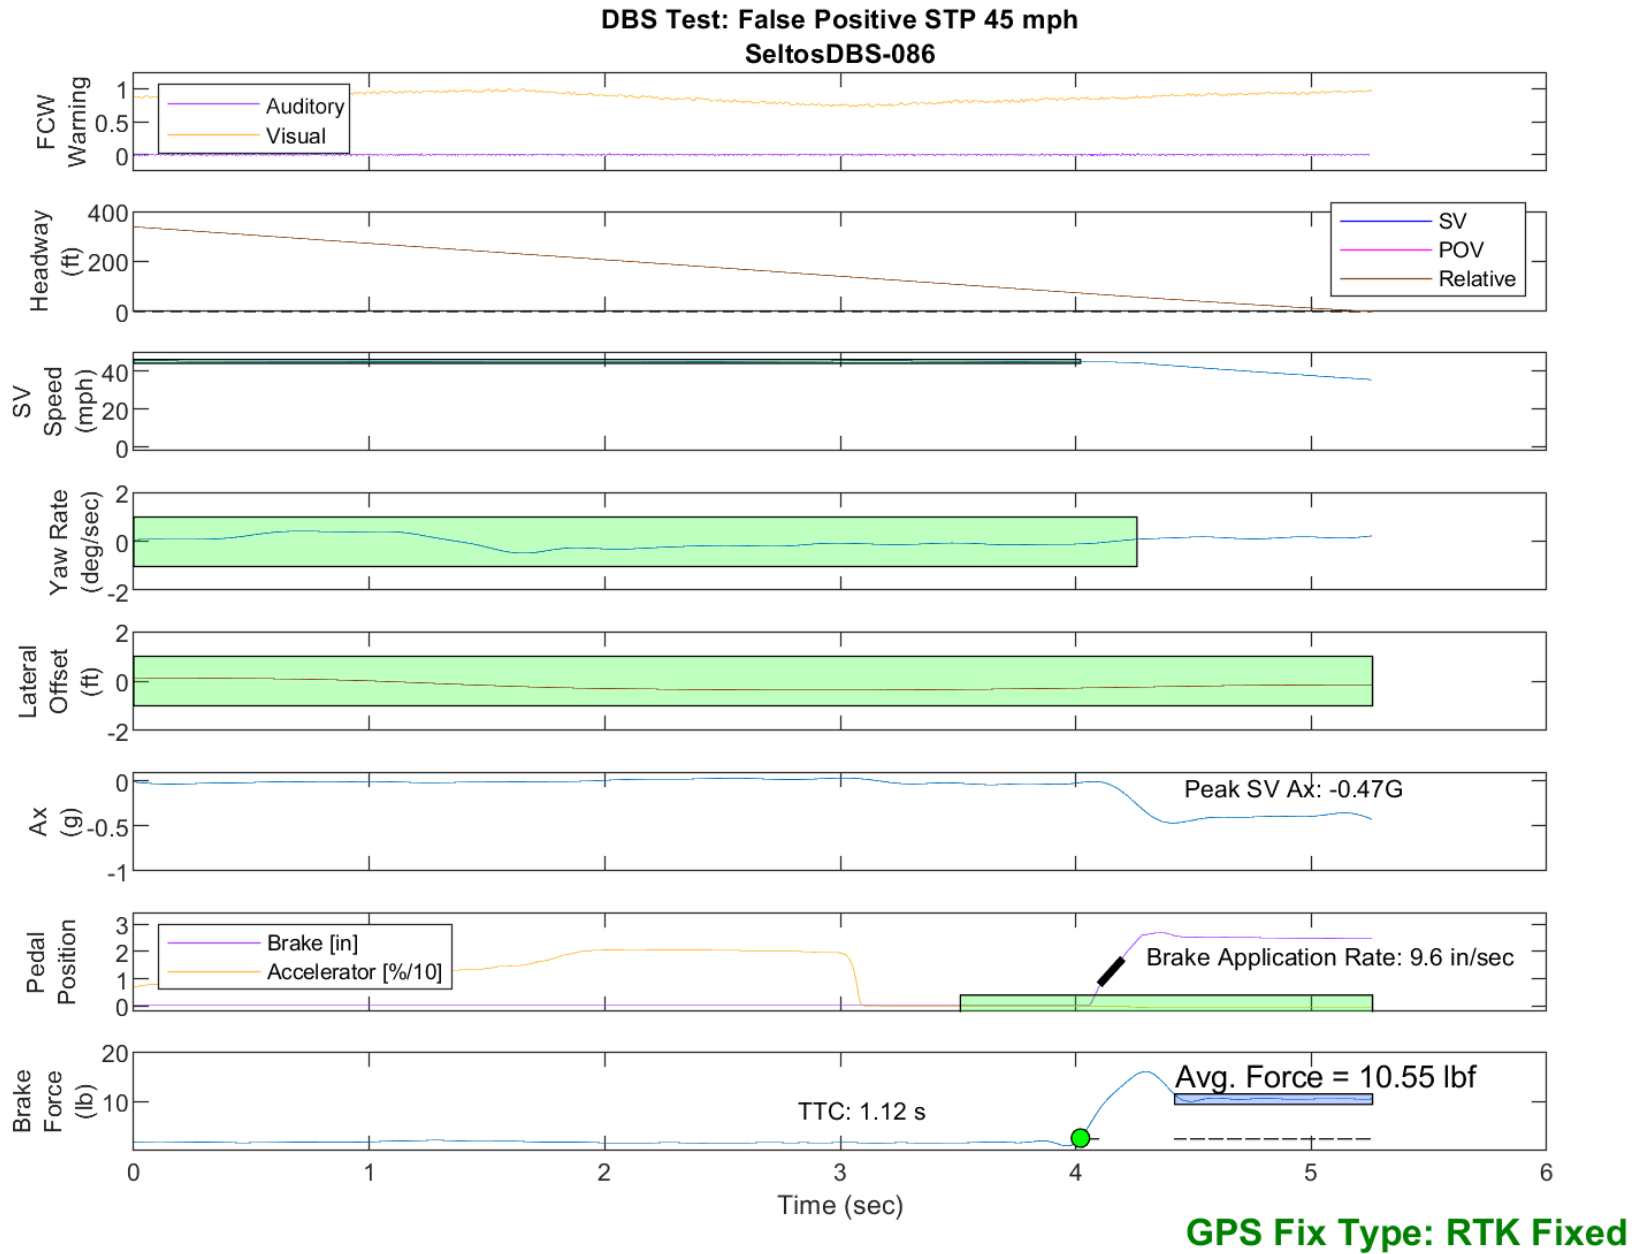


Figure E65. Time History for DBS Run 86, SV Encounters Steel Trench Plate, SV 45 mph

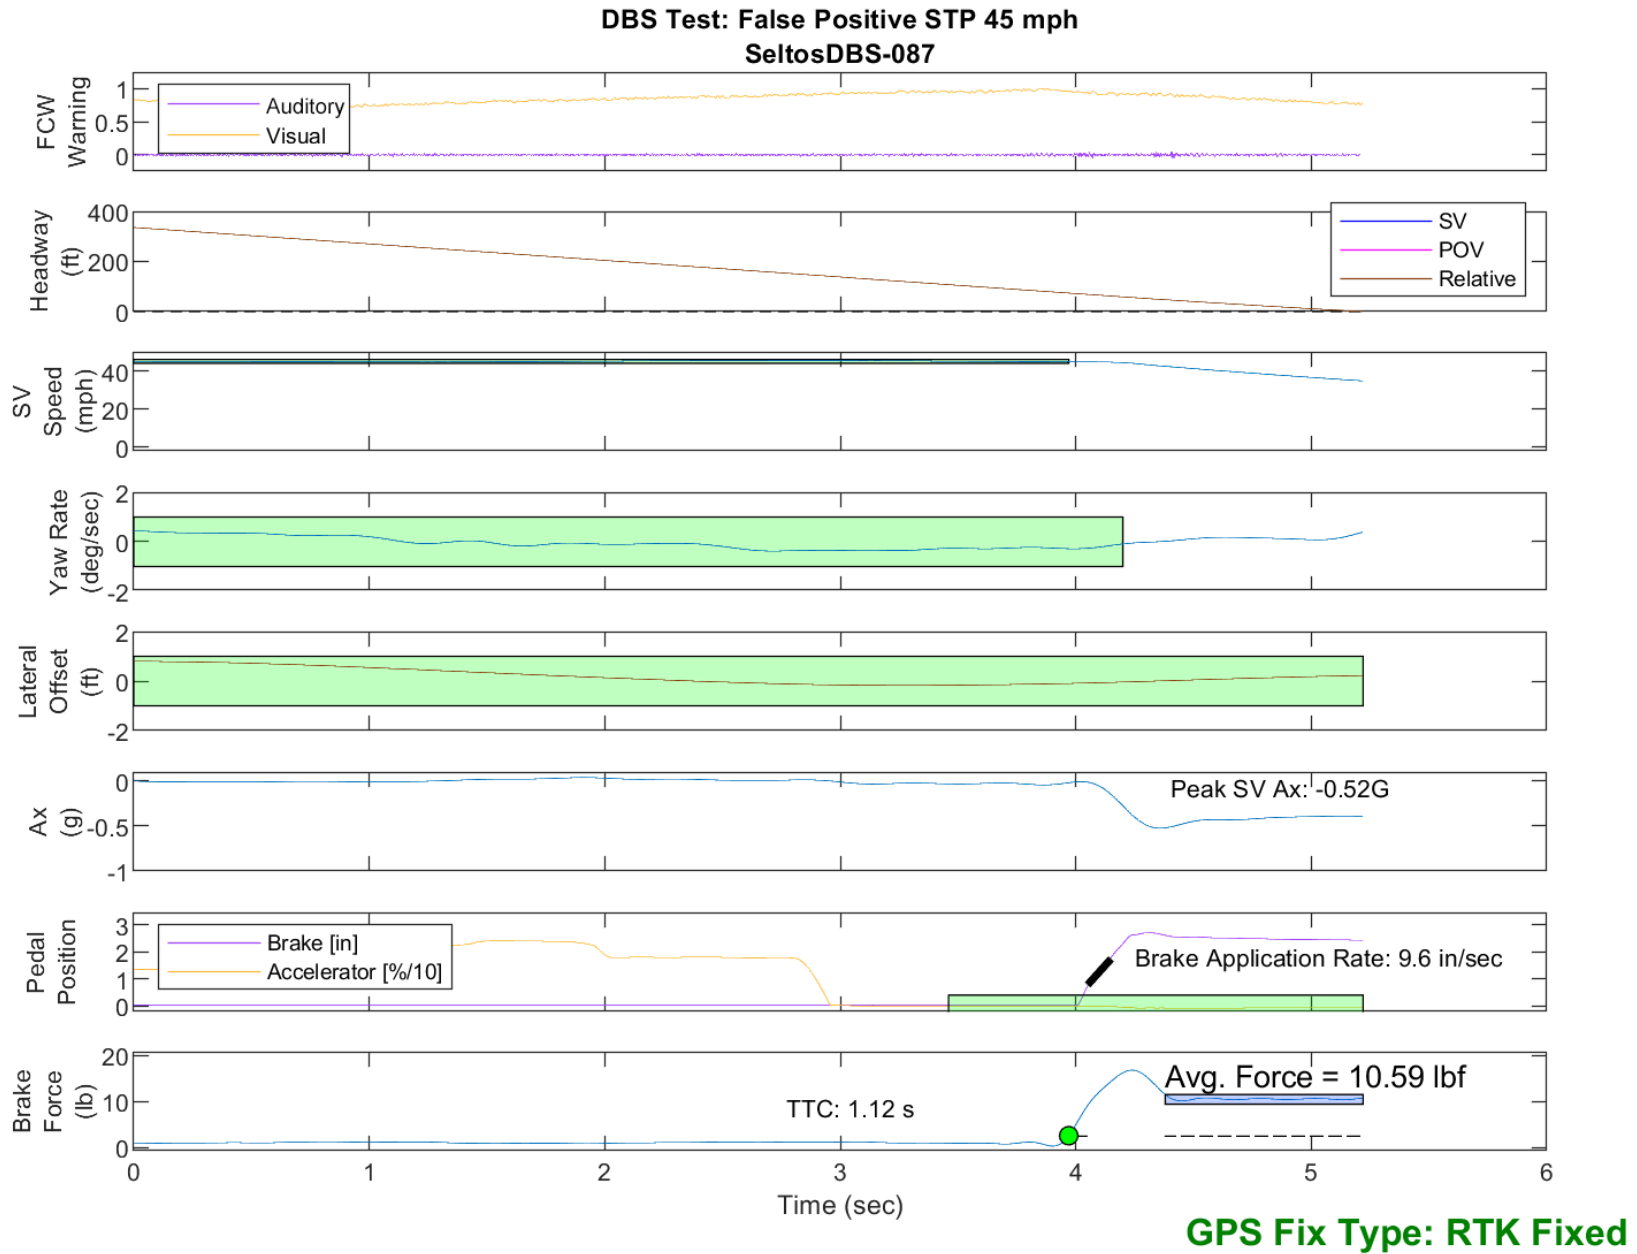


Figure E66. Time History for DBS Run 87, SV Encounters Steel Trench Plate, SV 45 mph

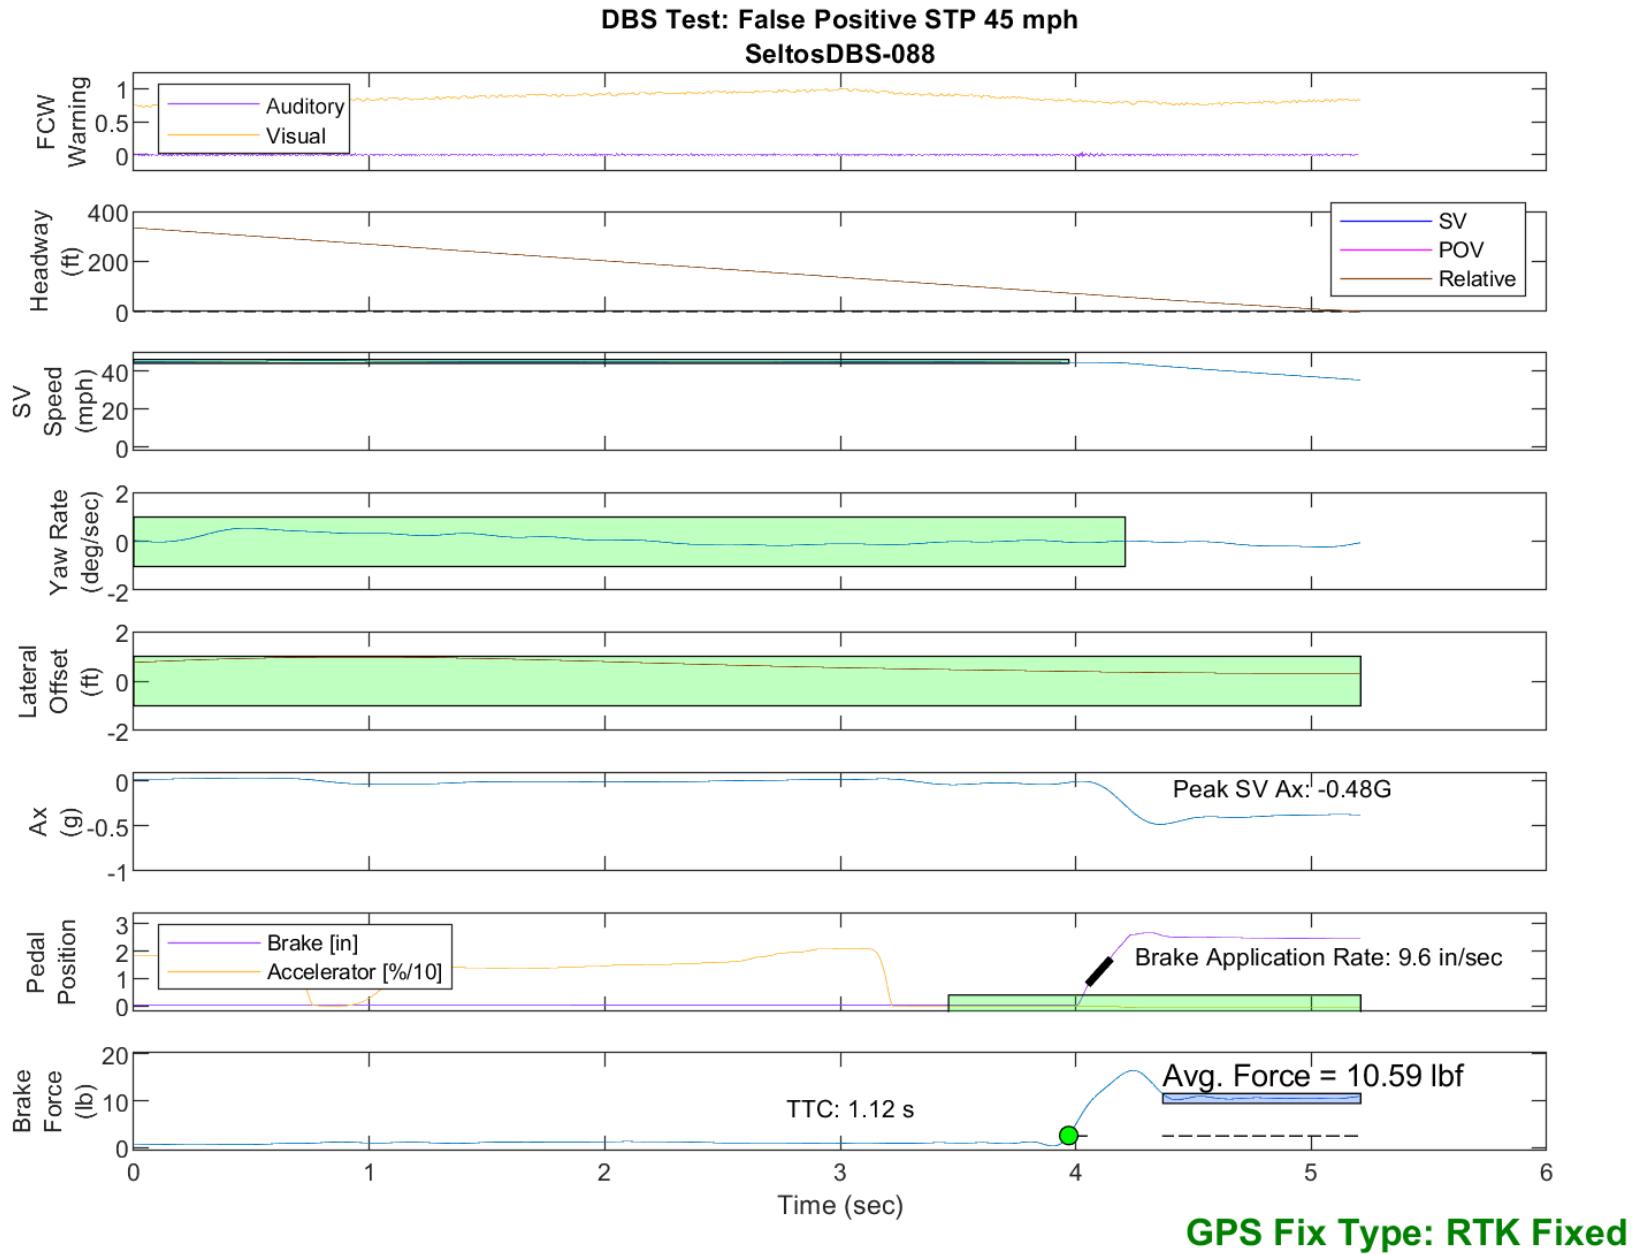


Figure E67. Time History for DBS Run 88, SV Encounters Steel Trench Plate, SV 45 mph

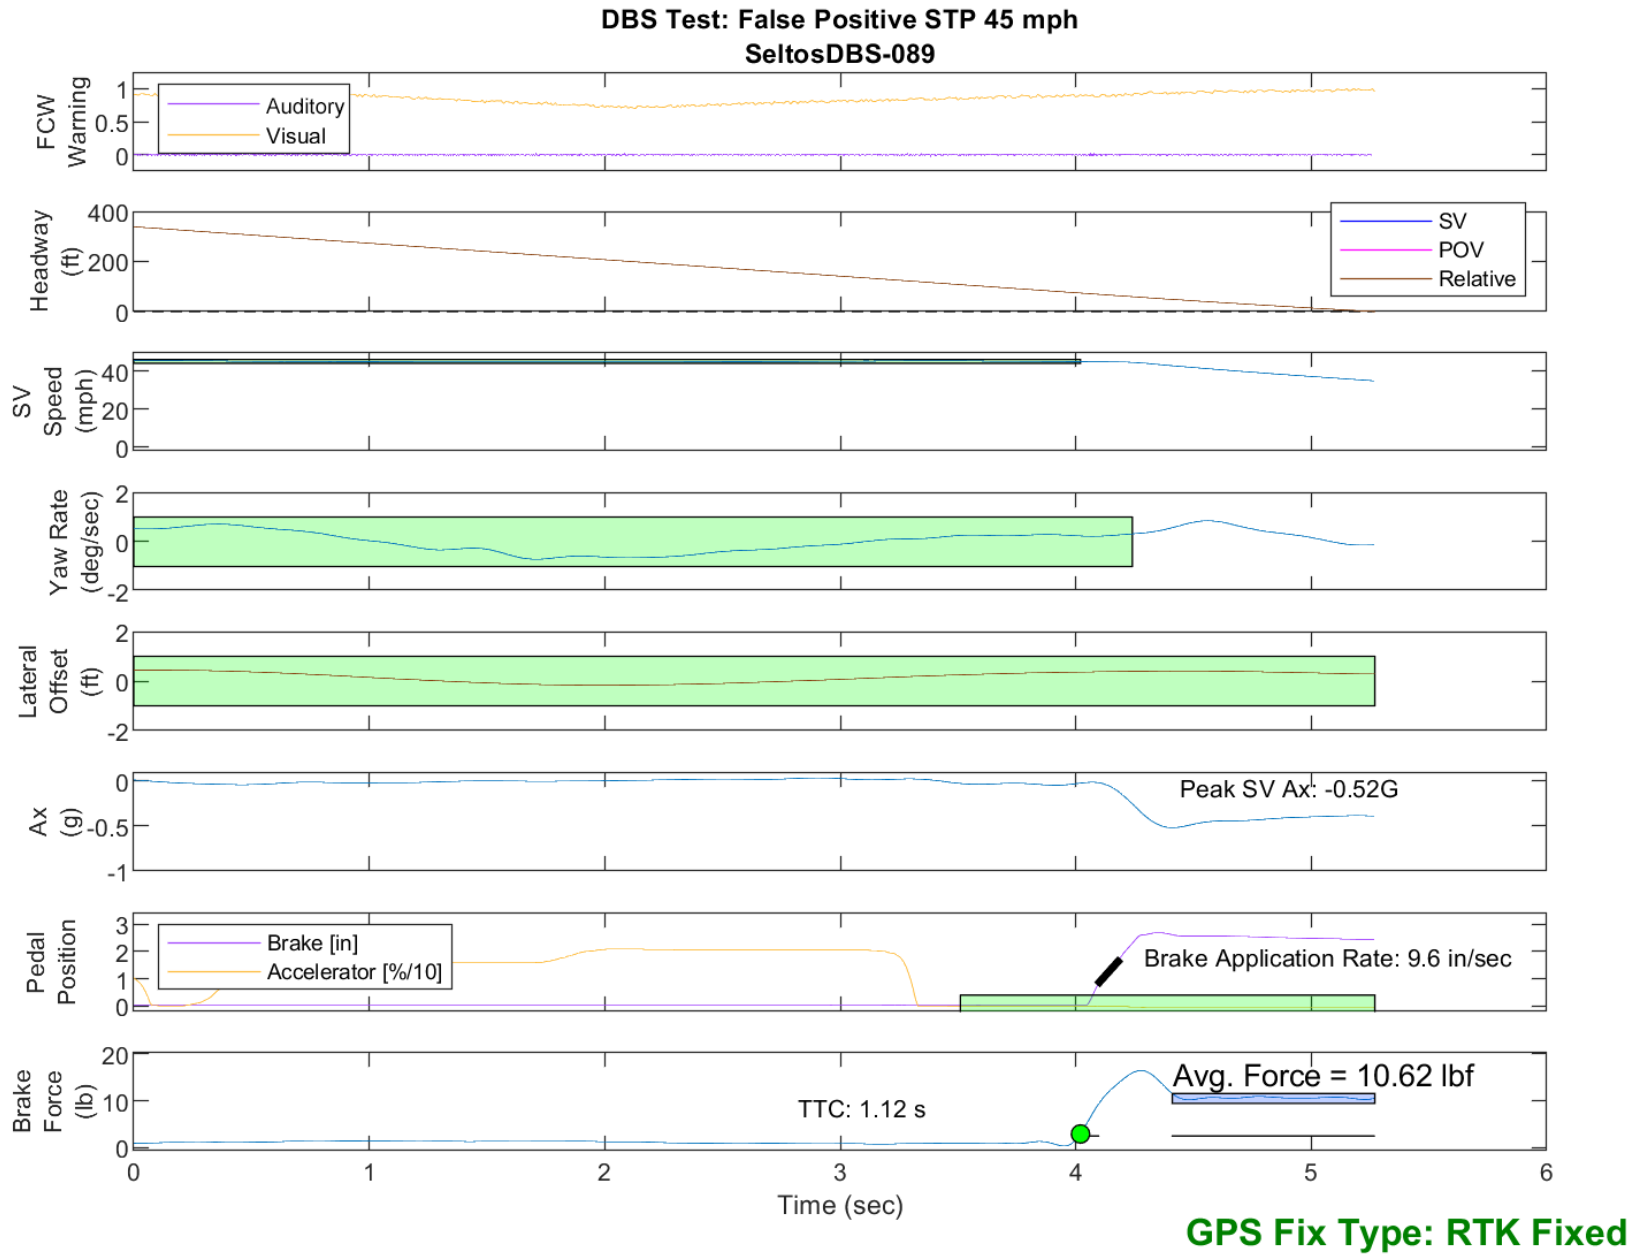


Figure E68. Time History for DBS Run 89, SV Encounters Steel Trench Plate, SV 45 mph

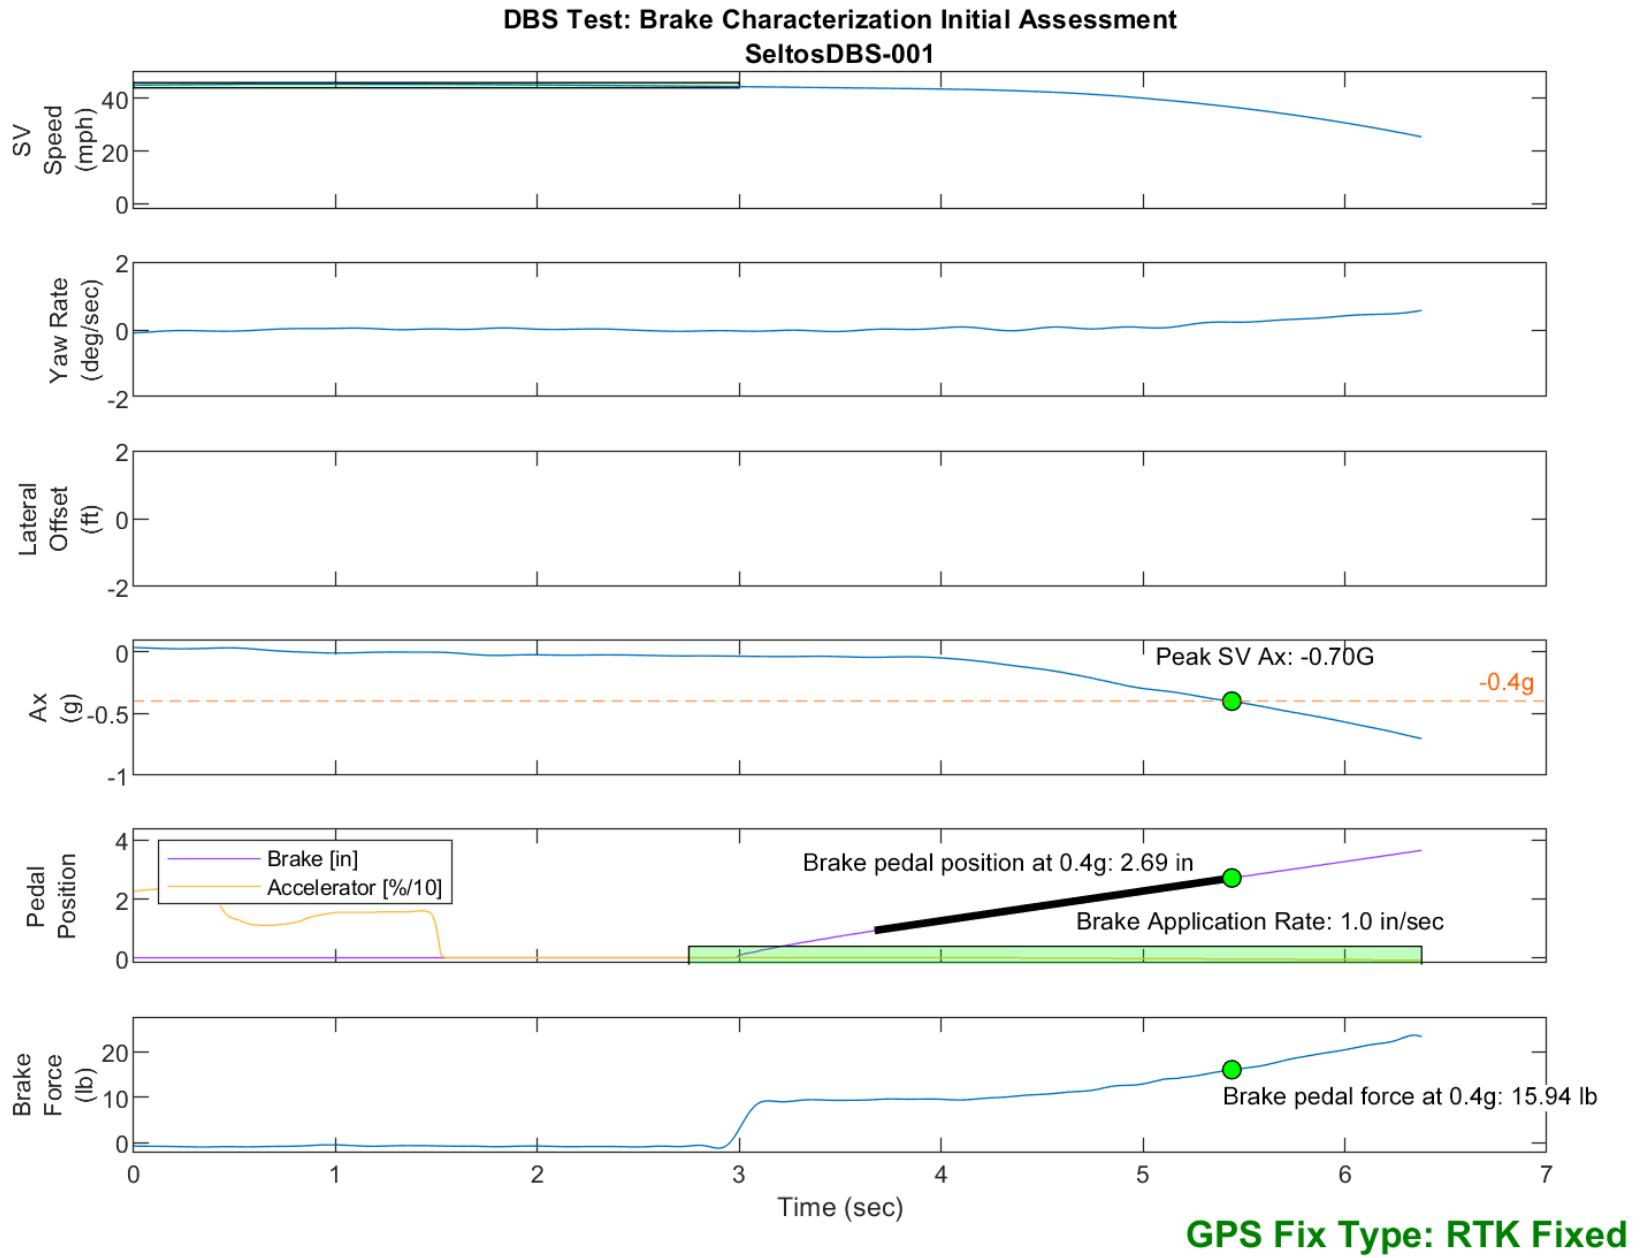


Figure E69. Time History for DBS Run 1, Brake Characterization Initial

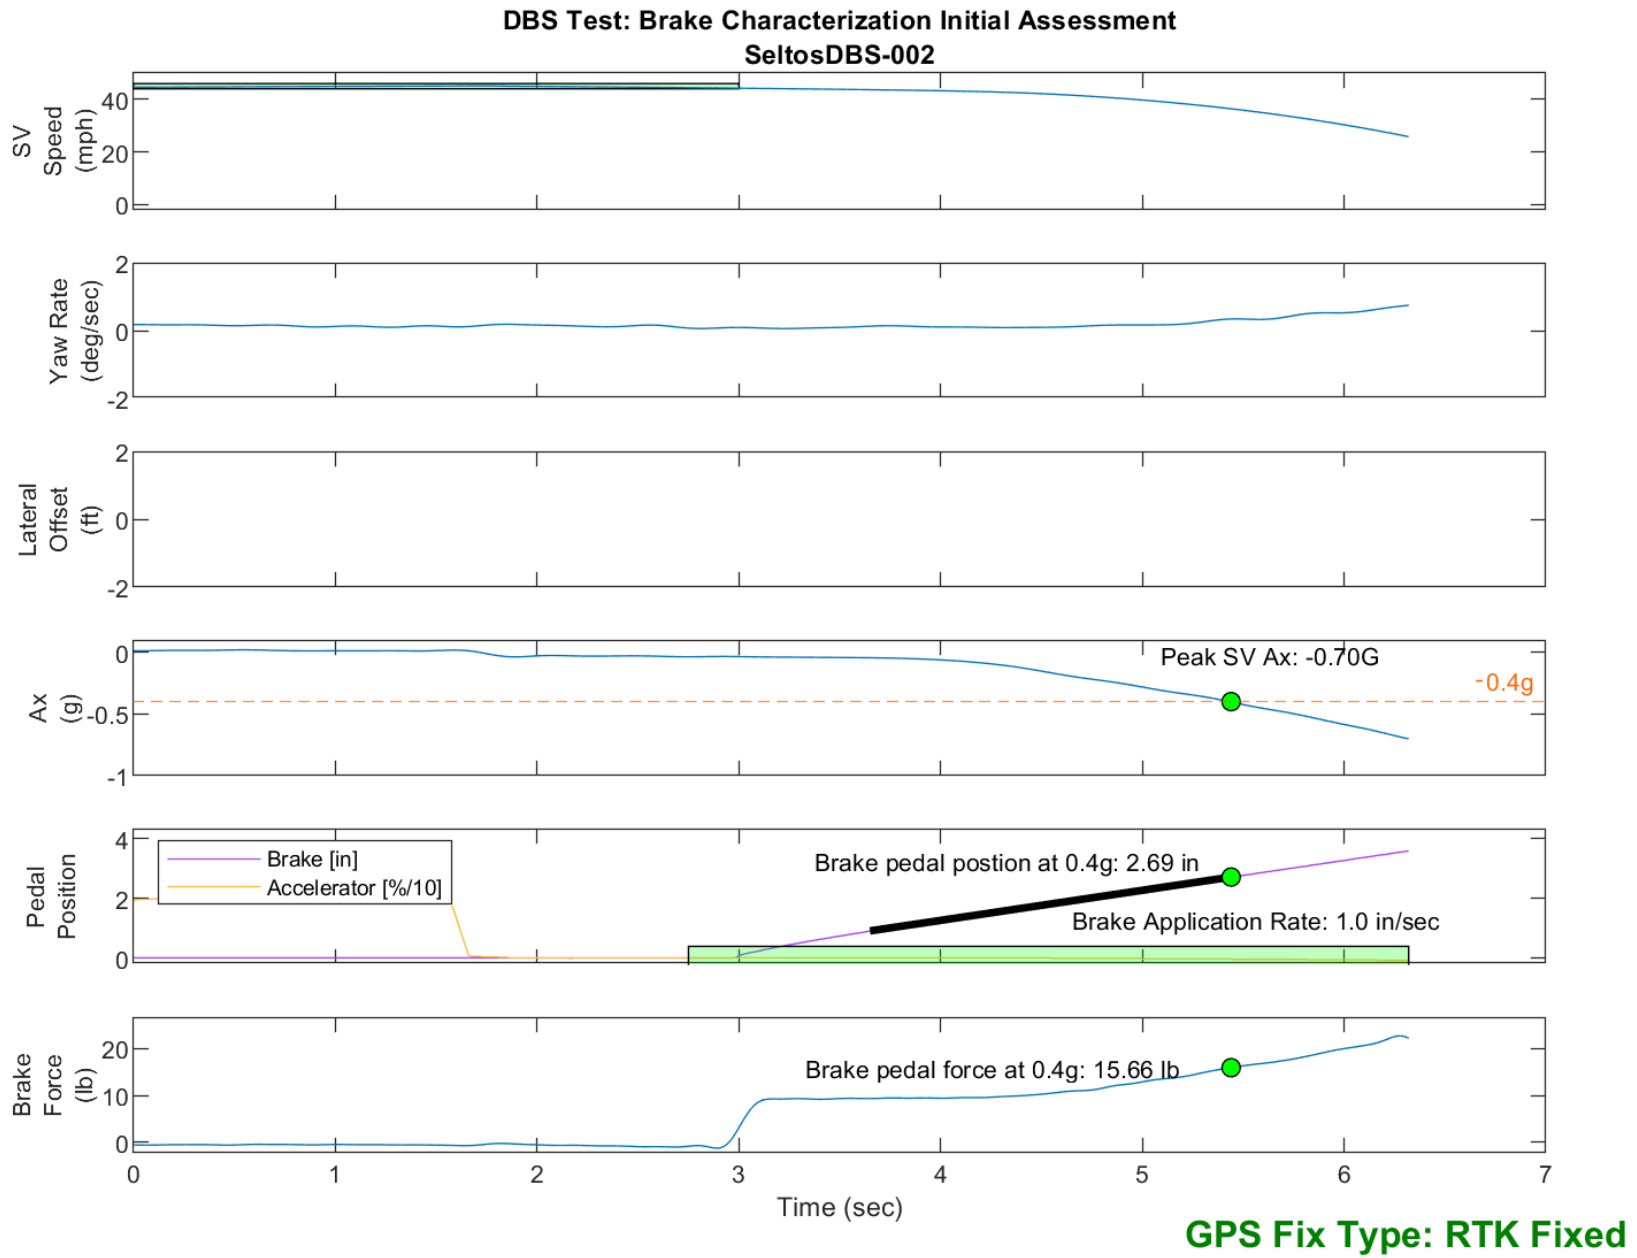


Figure E70. Time History for DBS Run 2, Brake Characterization Initial

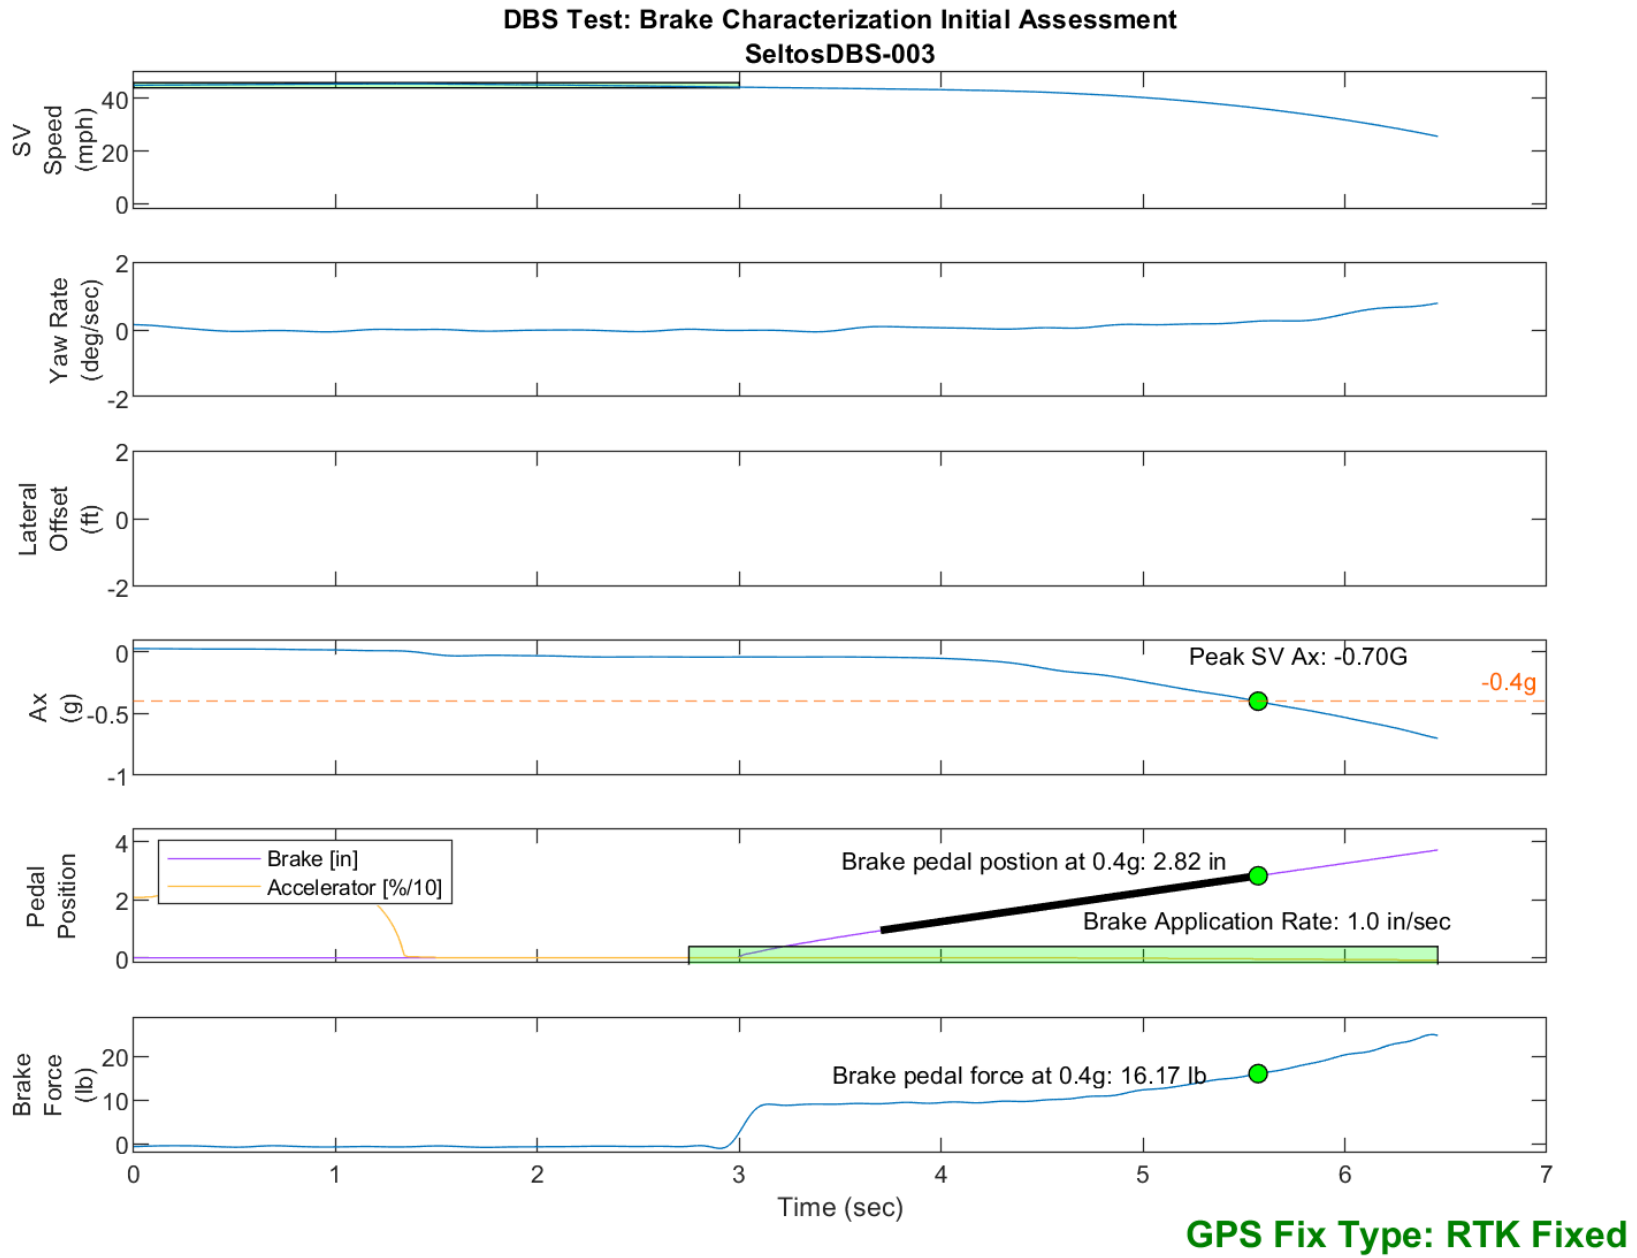


Figure E71. Time History for DBS Run 3, Brake Characterization Initial

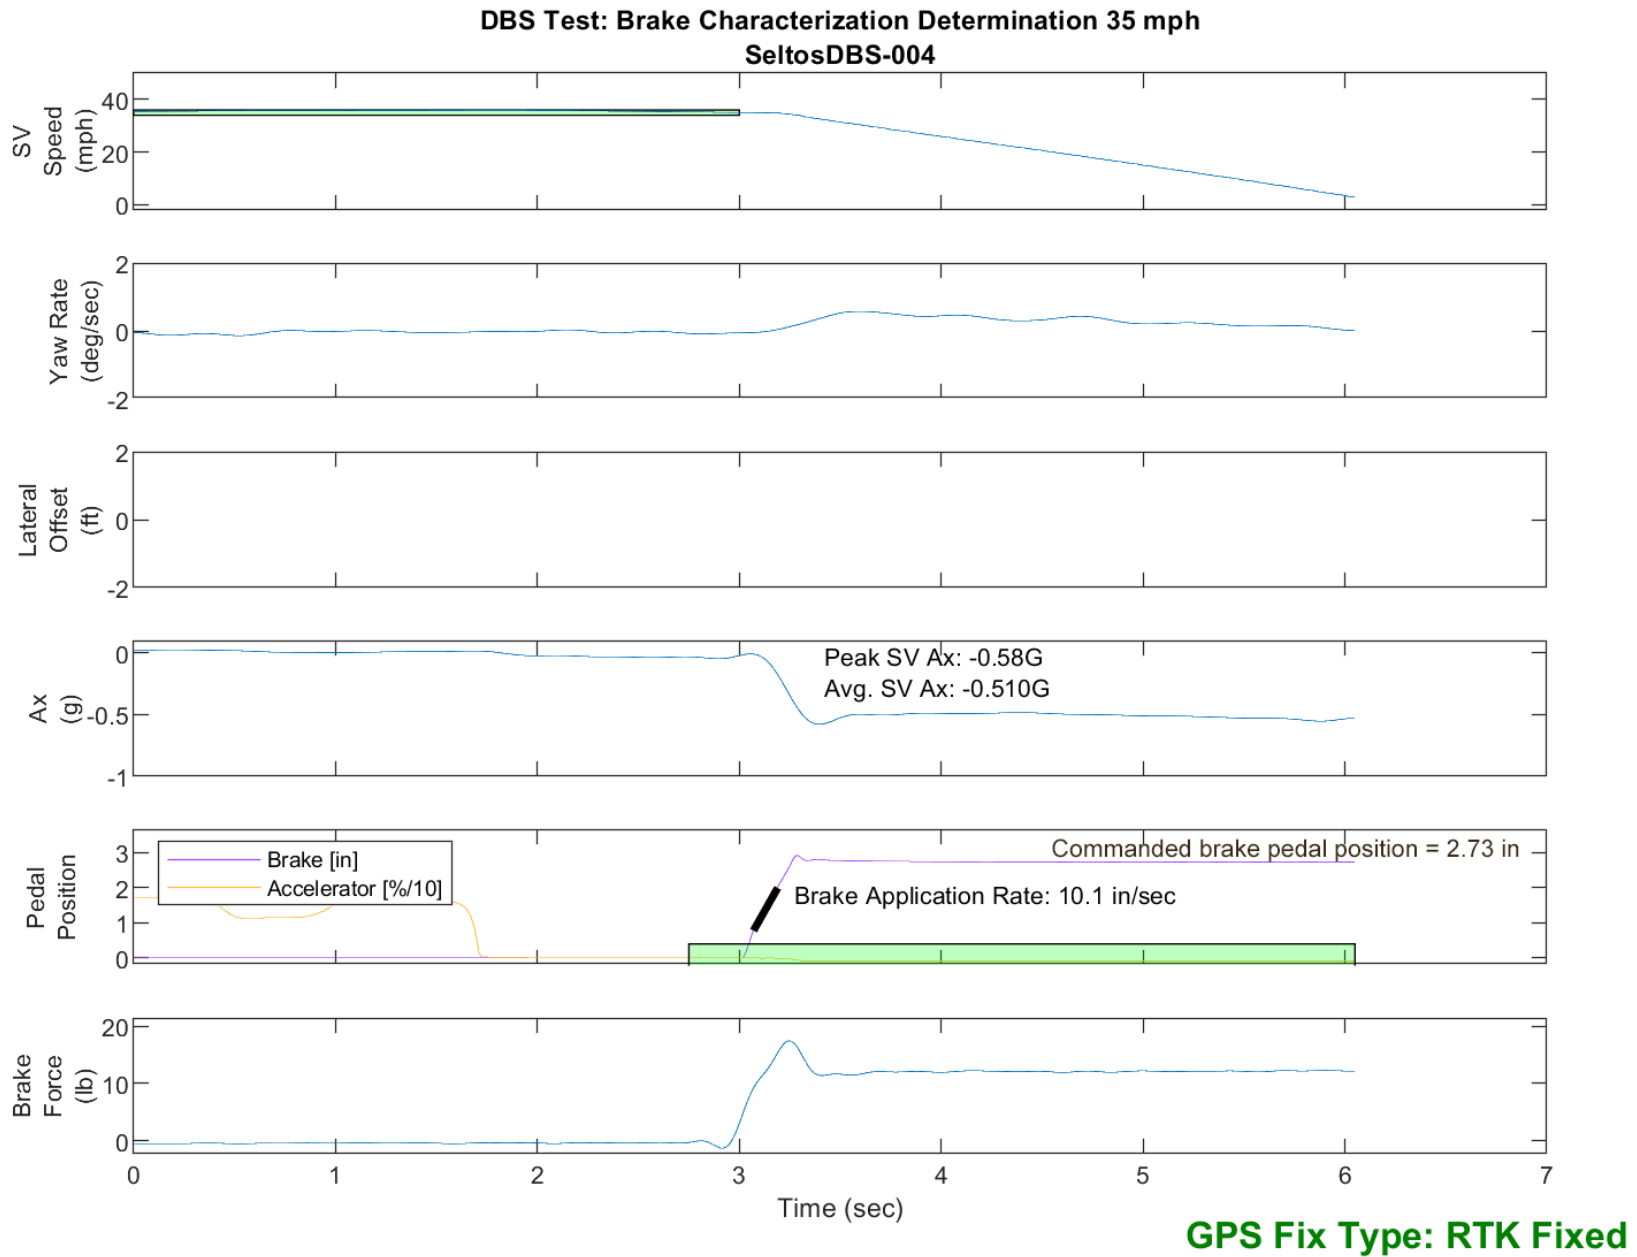


Figure E72. Time History for DBS Run 4, Brake Characterization Determination, Displacement Mode, 35 mph

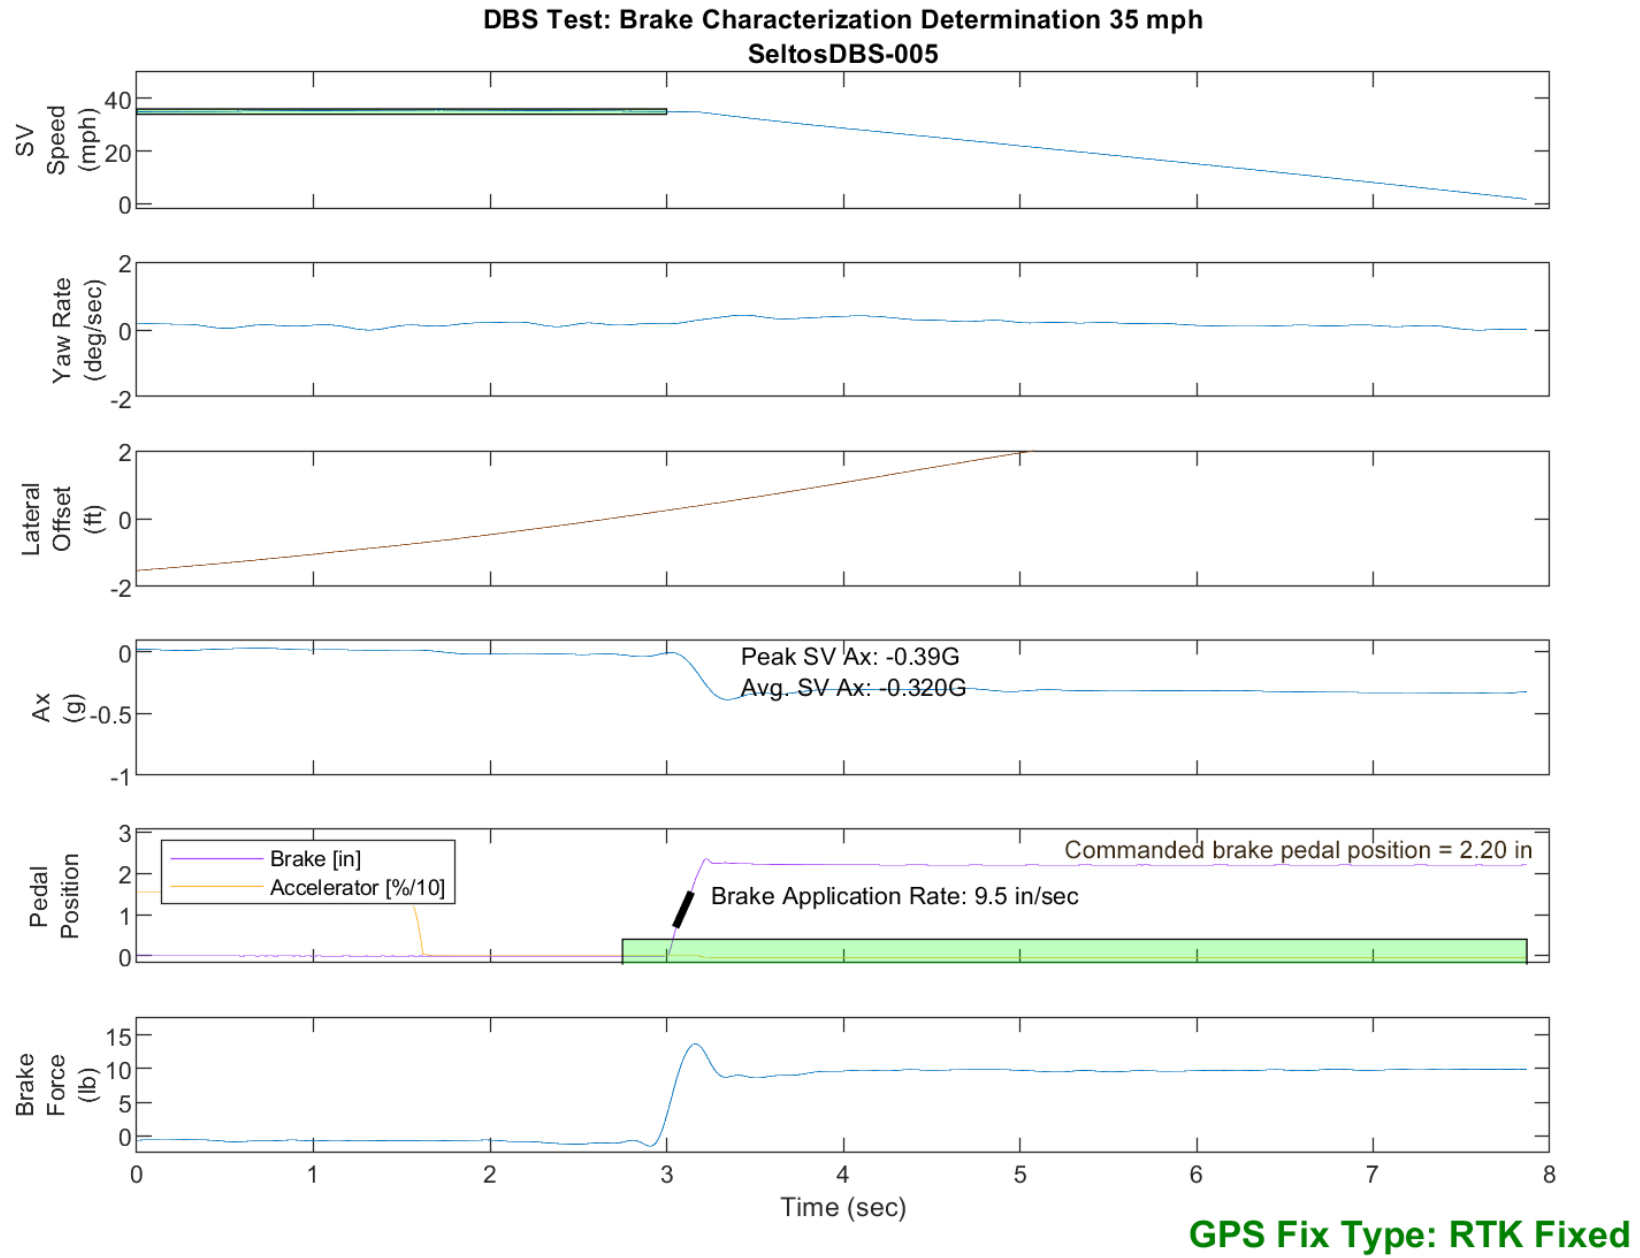


Figure E73. Time History for DBS Run 5, Brake Characterization Determination, Displacement Mode, 35 mph

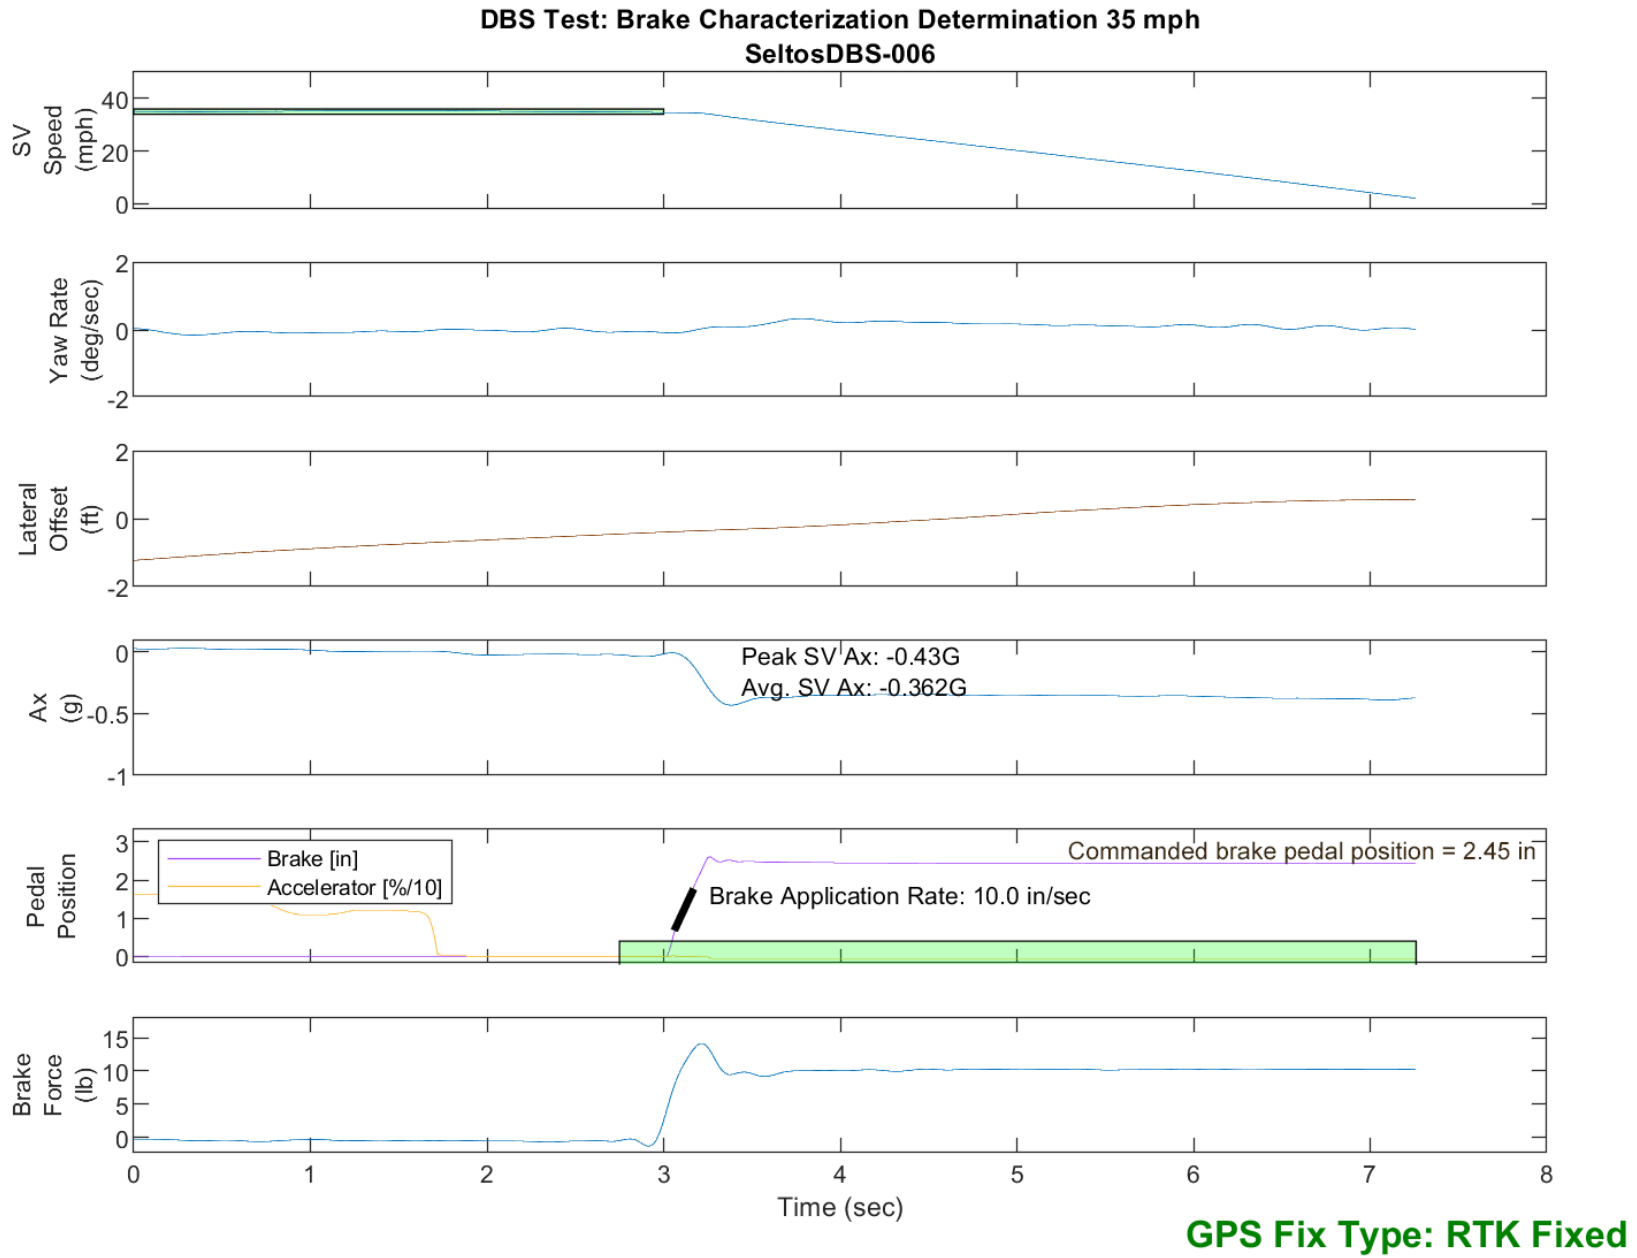


Figure E74. Time History for DBS Run 6, Brake Characterization Determination, Displacement Mode, 35 mph

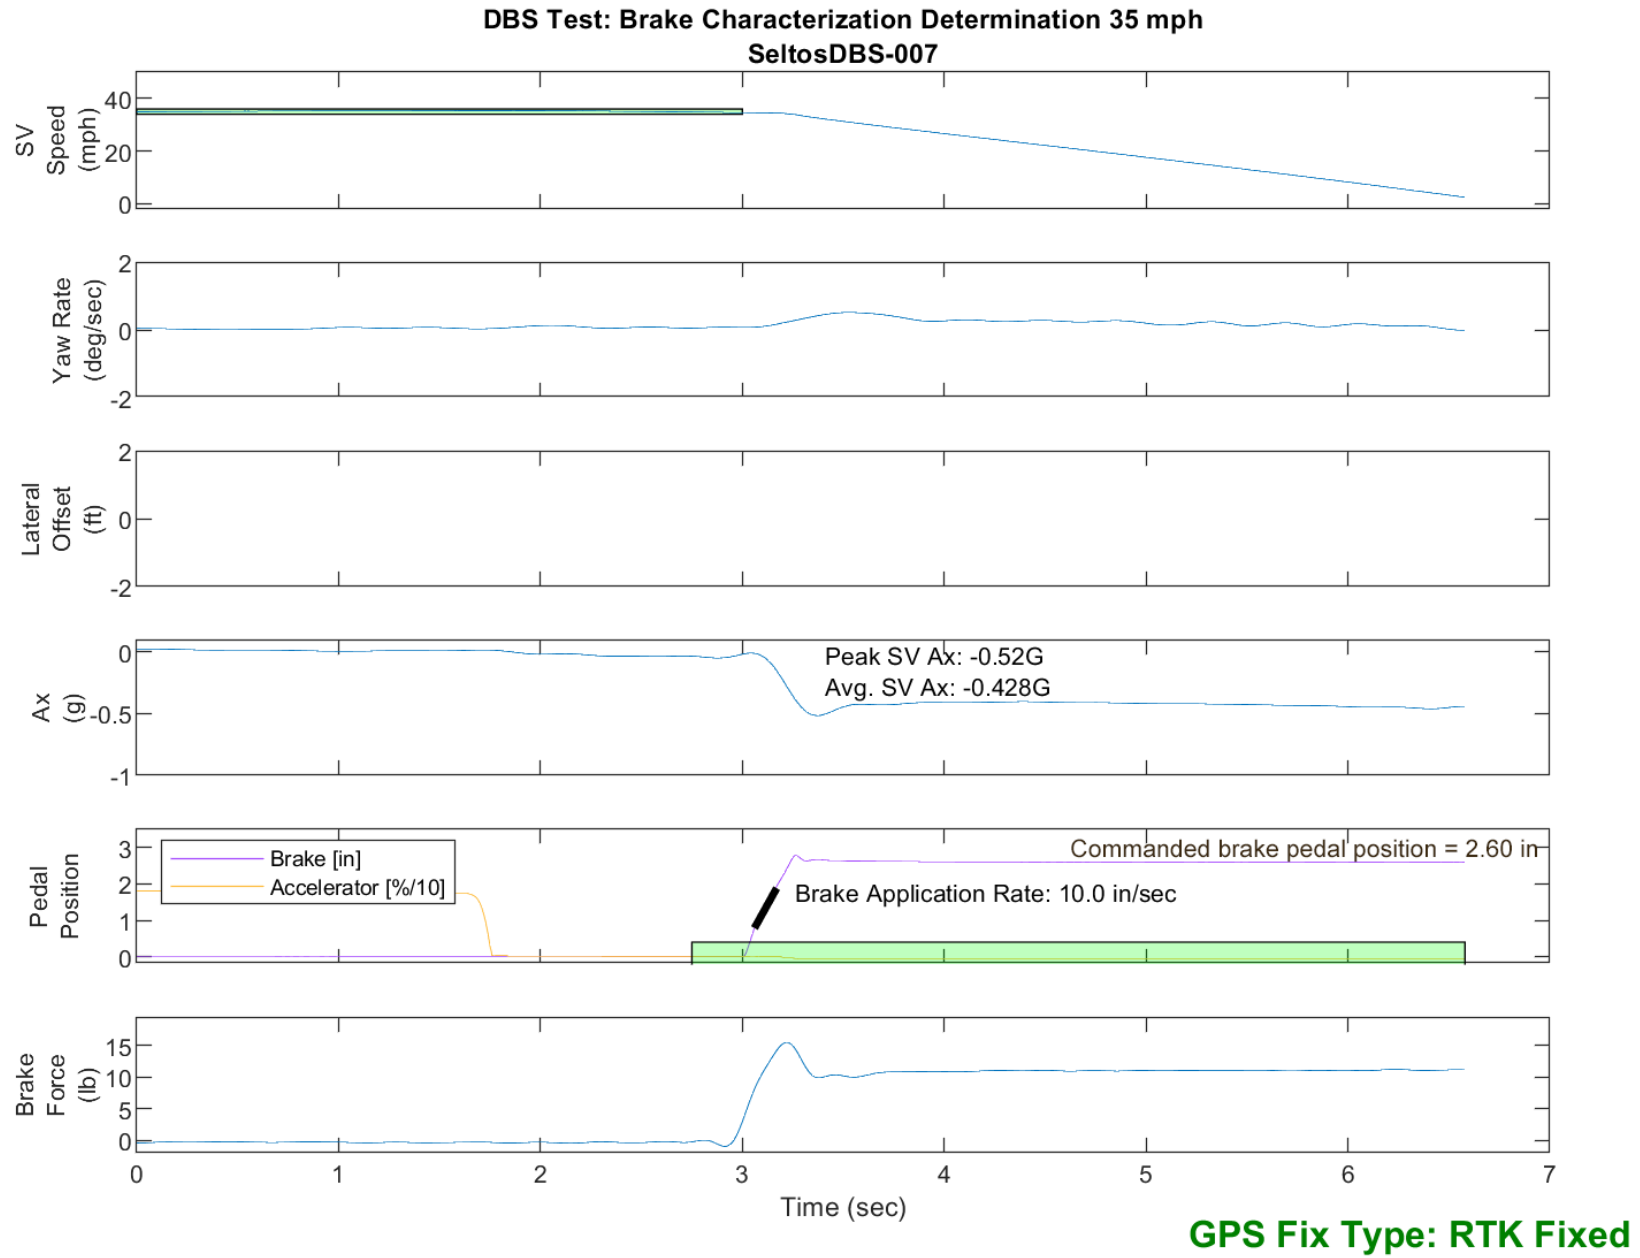


Figure E75. Time History for DBS Run 7, Brake Characterization Determination, Displacement Mode, 35 mph


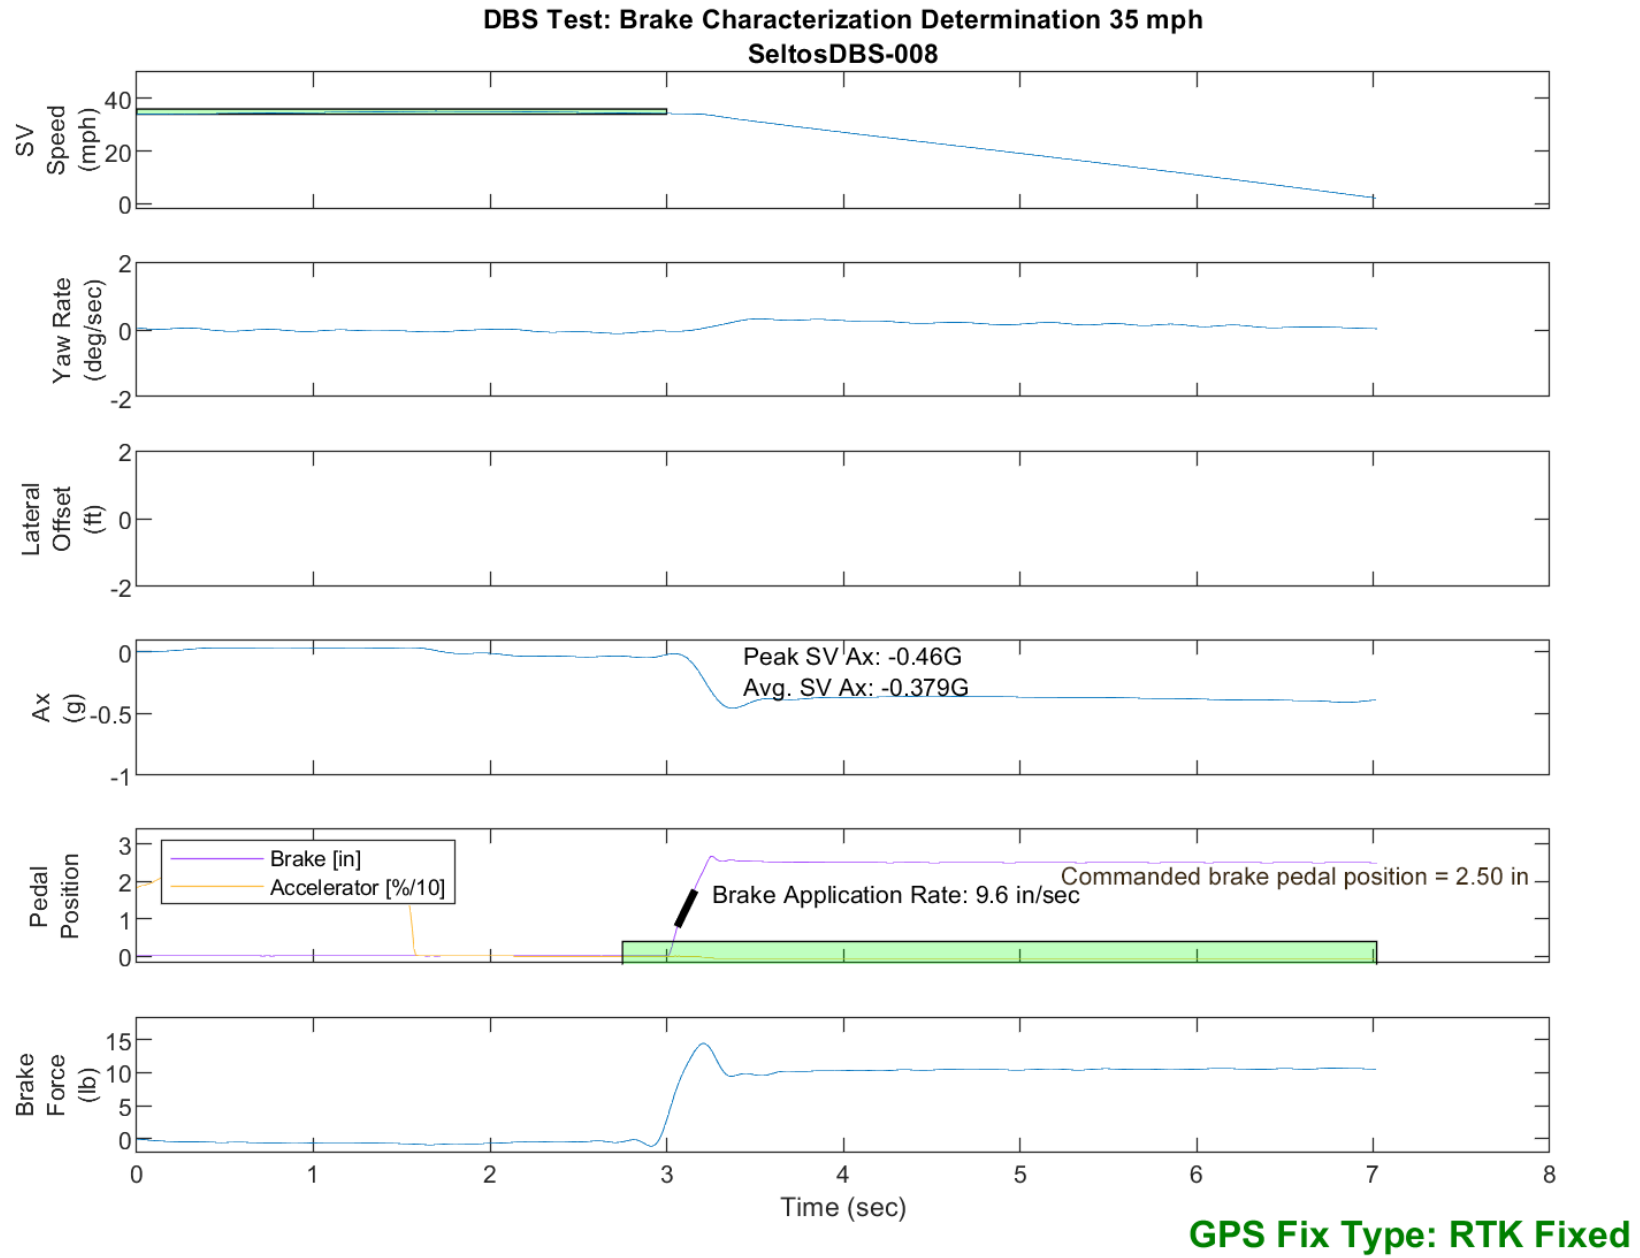



Figure E76. Time History for DBS Run 8, Brake Characterization Determination, Displacement Mode, 35 mph

DBS Test: Brake Characterization Determination 25 mph
SeltosDBS-009

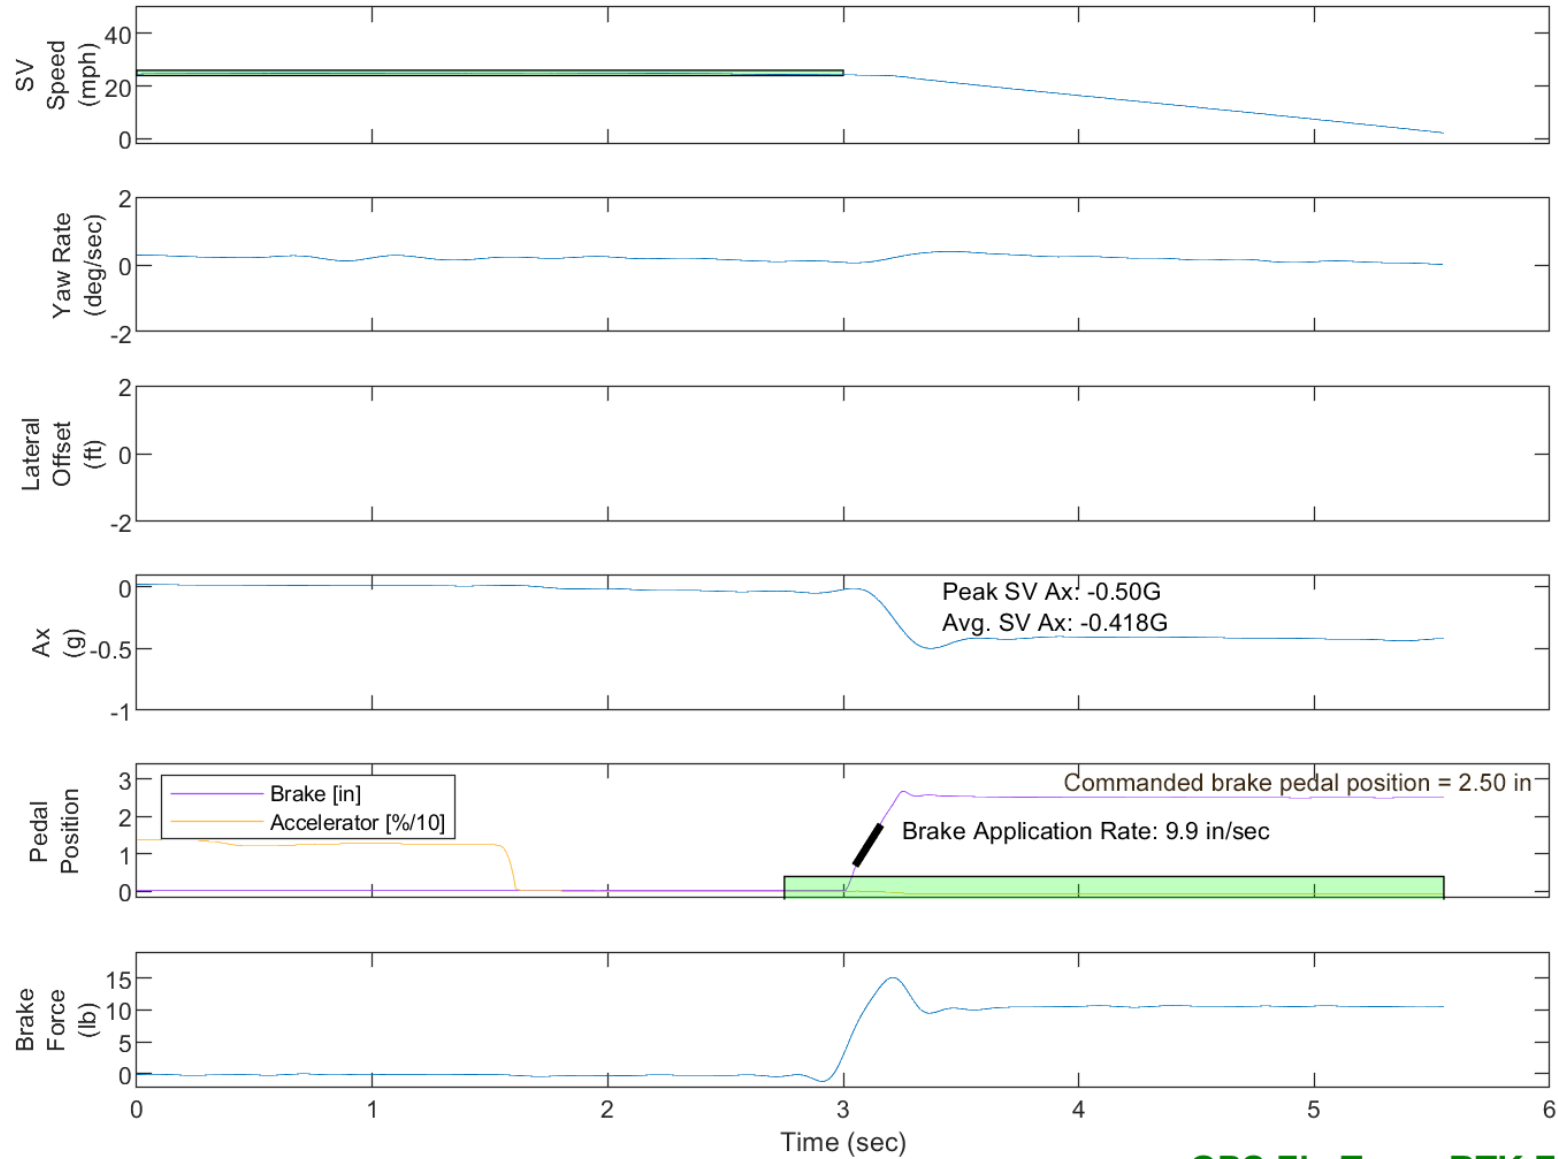

GPS Fix Type: RTK Fixed

Figure E77. Time History for DBS Run 9, Brake Characterization Determination, Displacement Mode, 25 mph

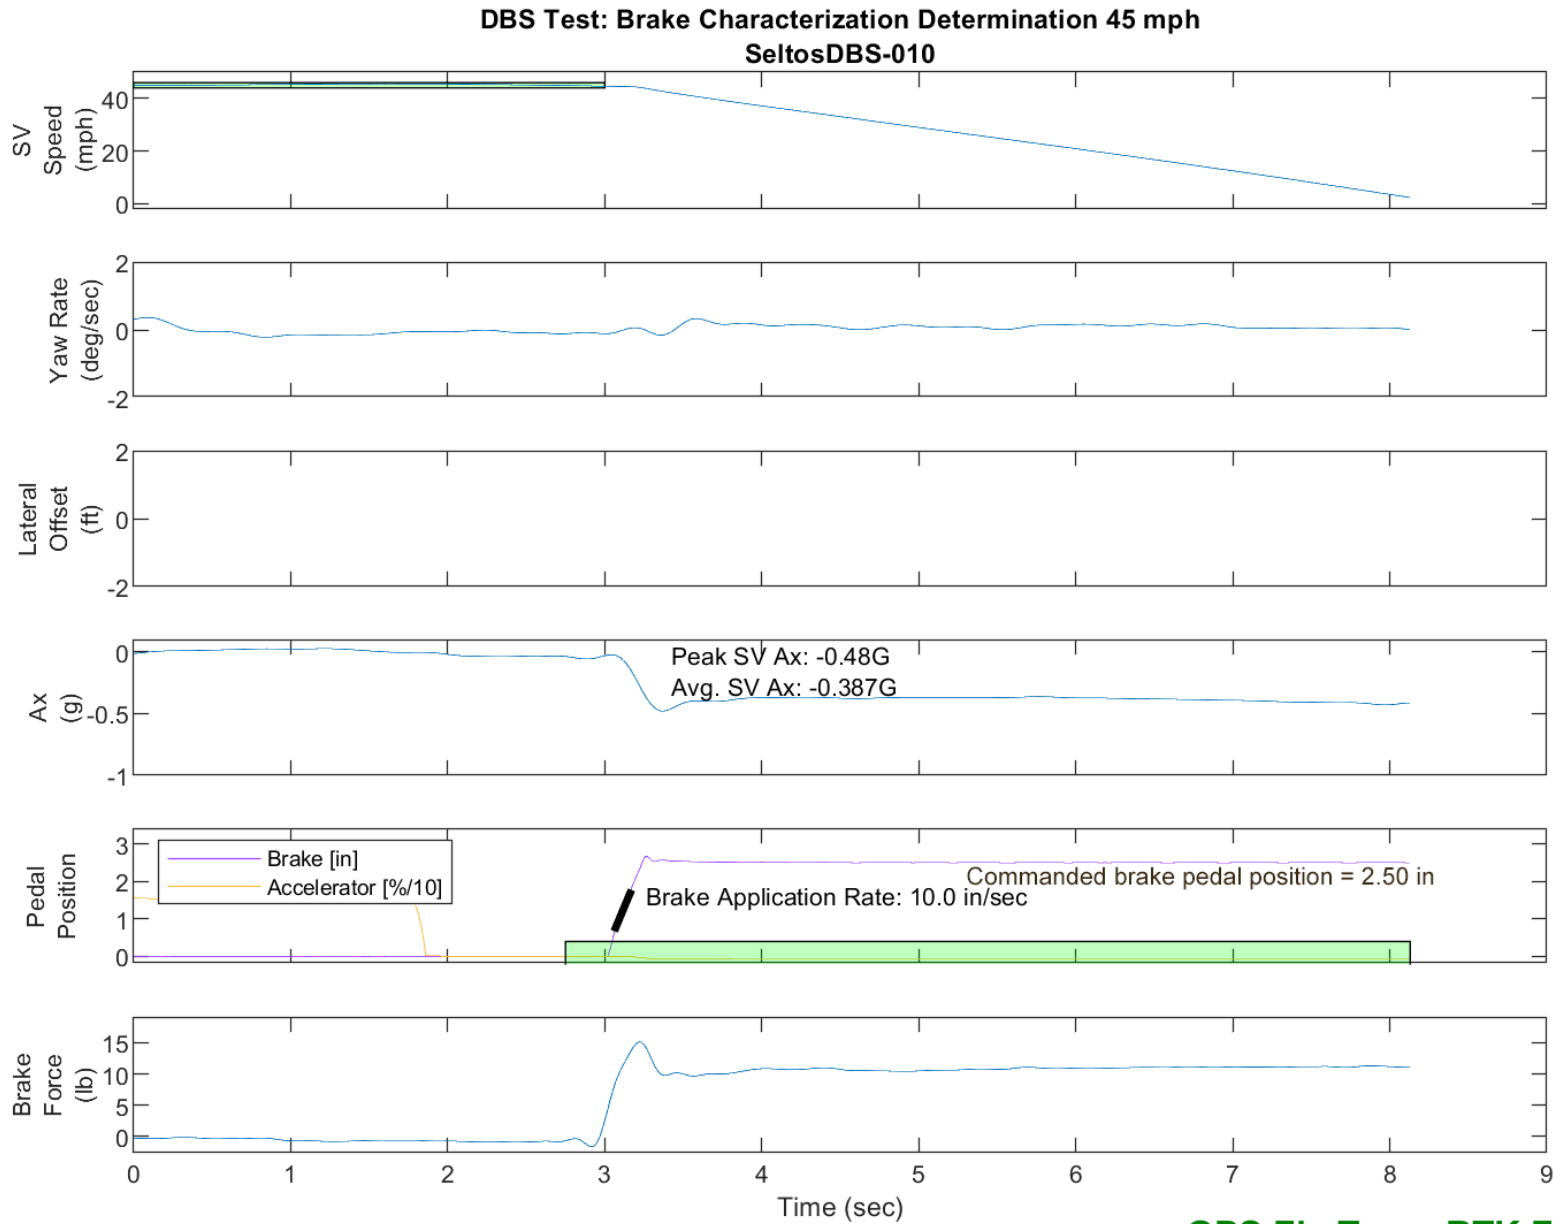

GPS Fix Type: RTK Fixed

Figure E78. Time History for DBS Run 10, Brake Characterization Determination, Displacement Mode, 45 mph

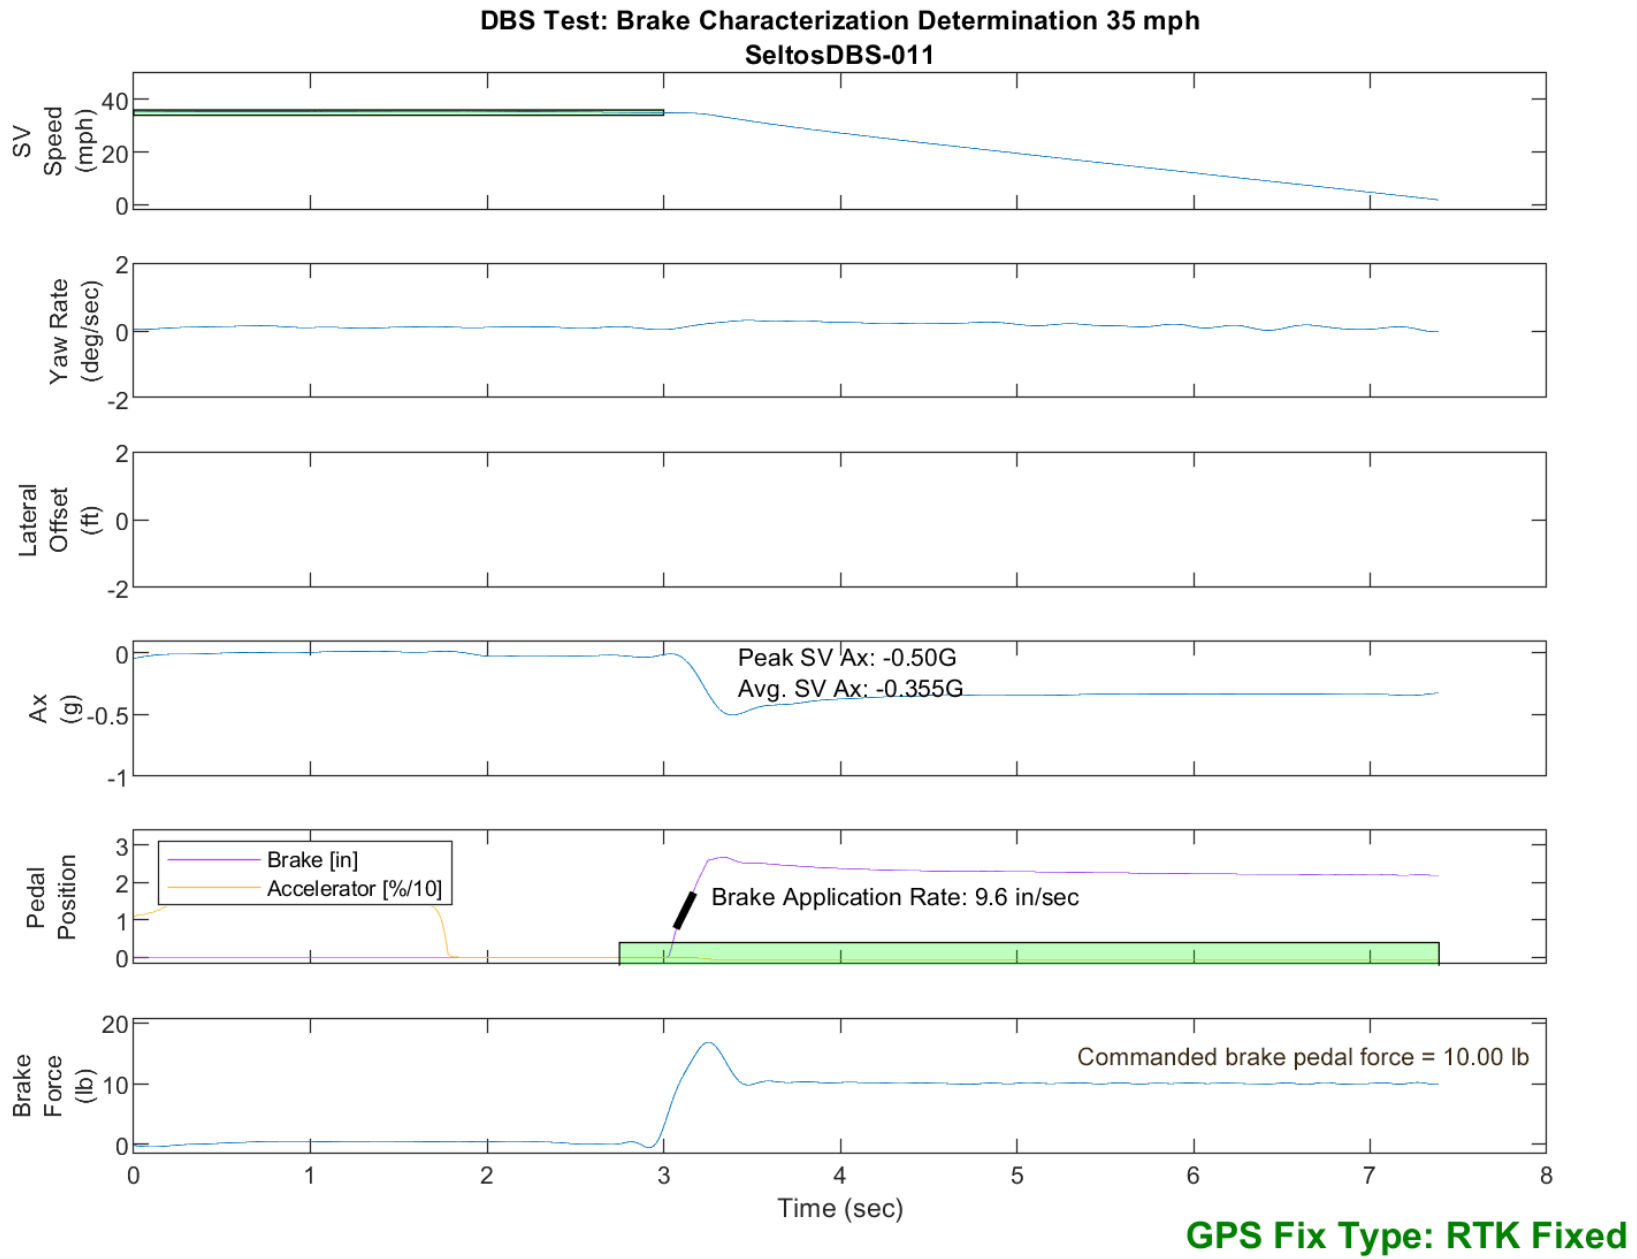


Figure E79. Time History for DBS Run 11, Brake Characterization Determination, Hybrid Mode, 35 mph

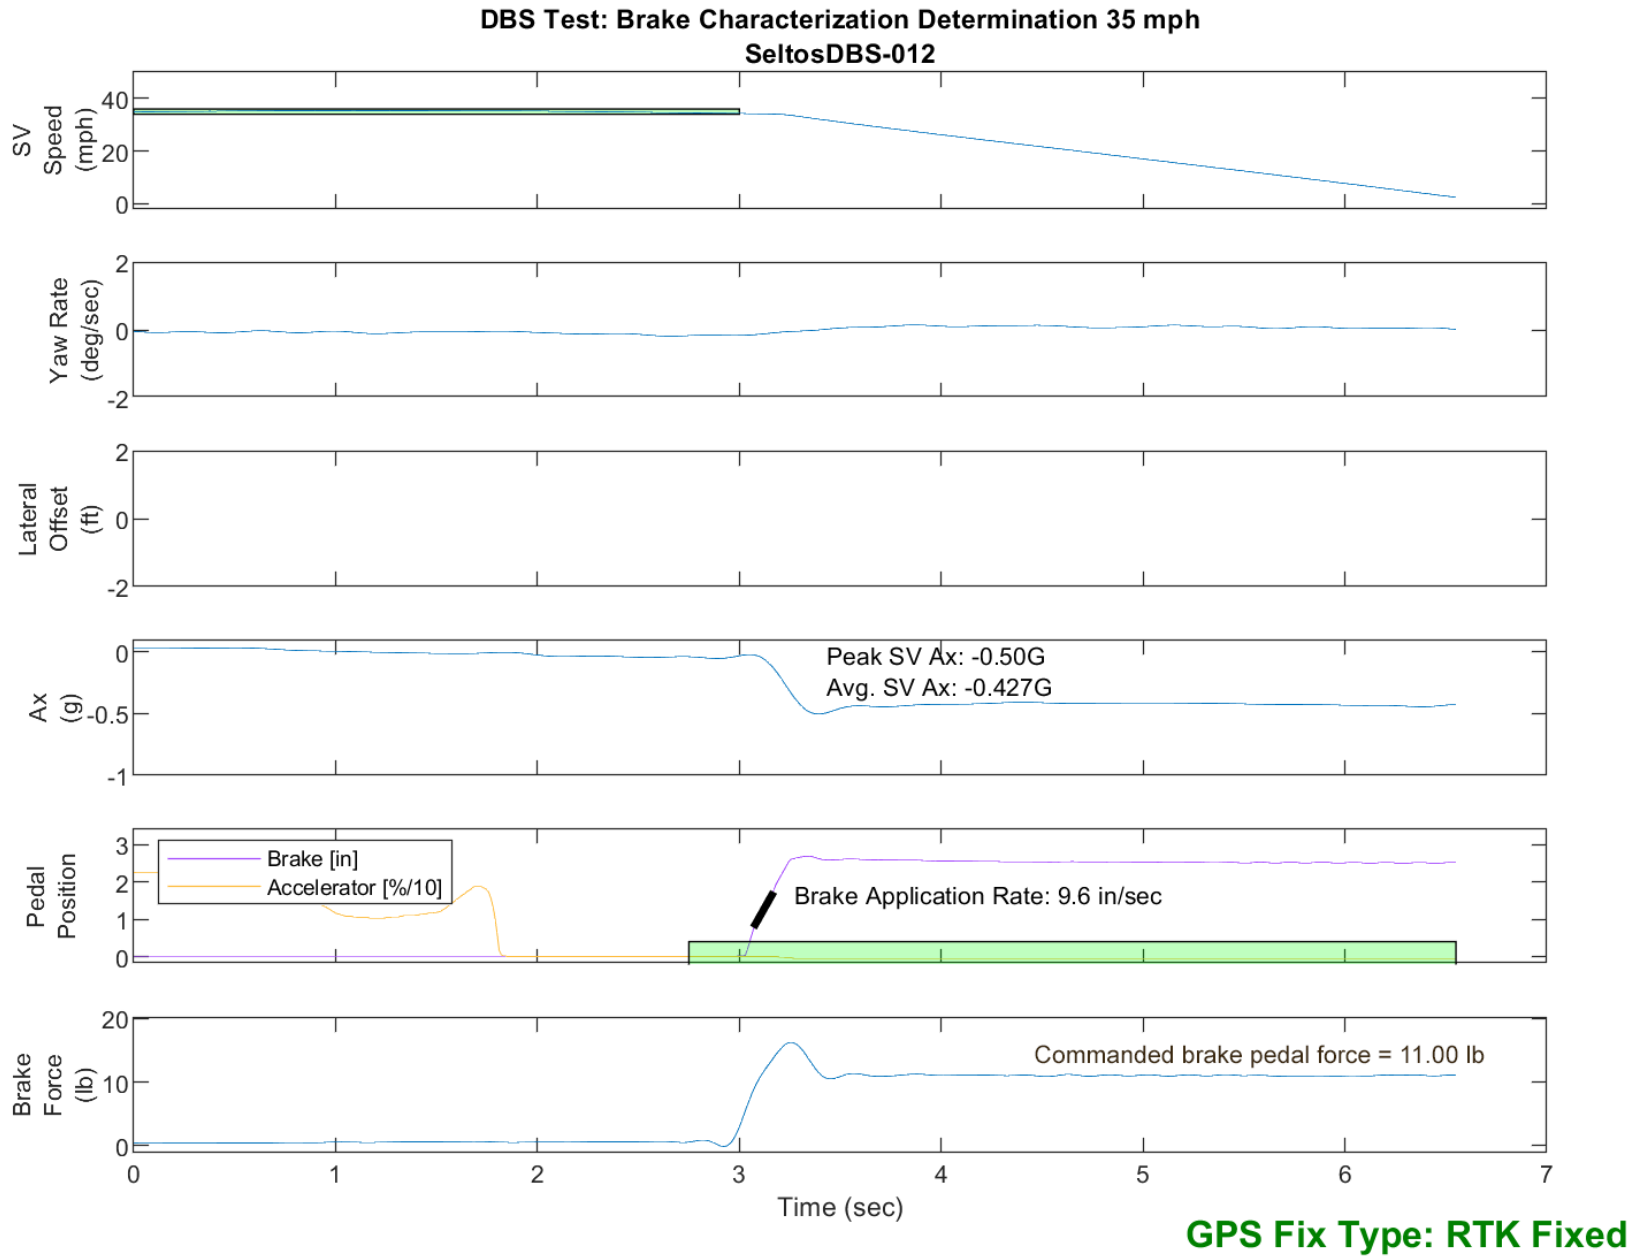


Figure E80. Time History for DBS Run 12, Brake Characterization Determination, Hybrid Mode, 35 mph


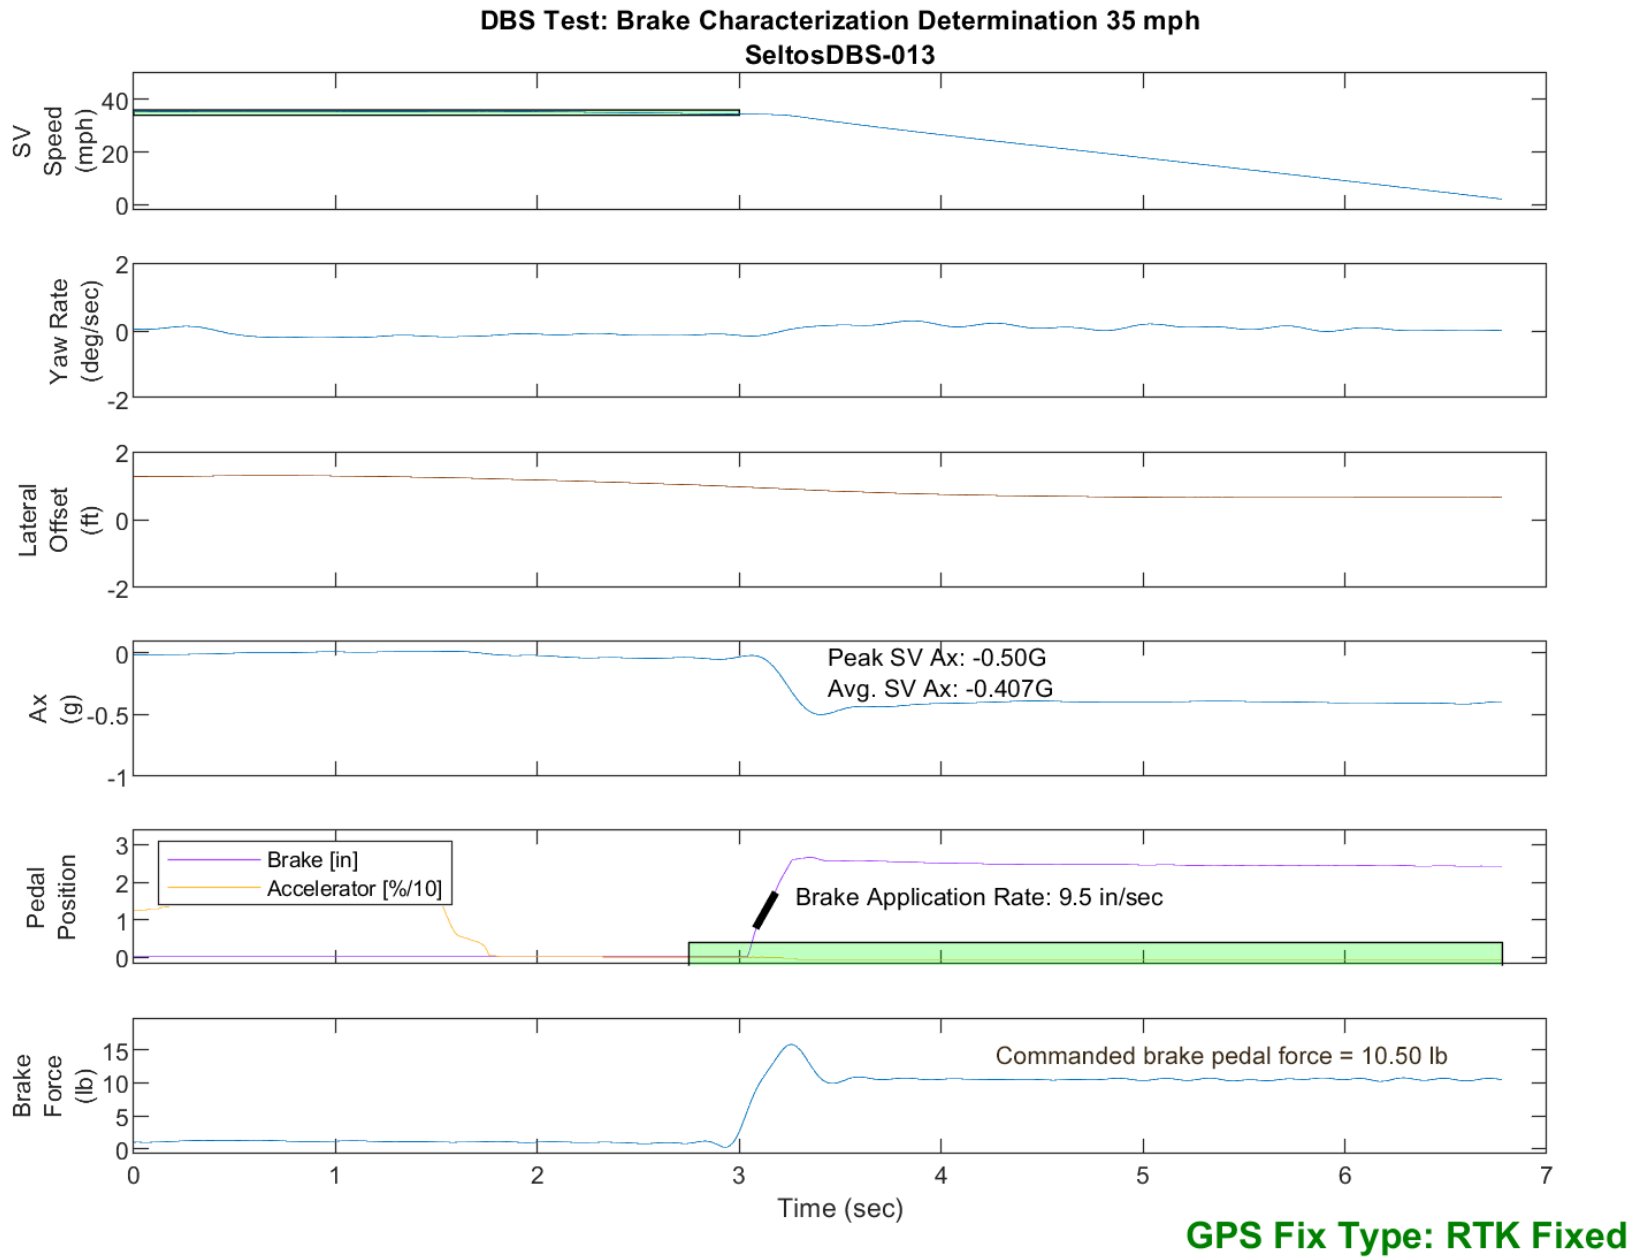


Figure E81. Time History for DBS Run 13, Brake Characterization Determination, Hybrid Mode, 35 mph

DBS Test: Brake Characterization Determination 25 mph
SeltosDBS-014

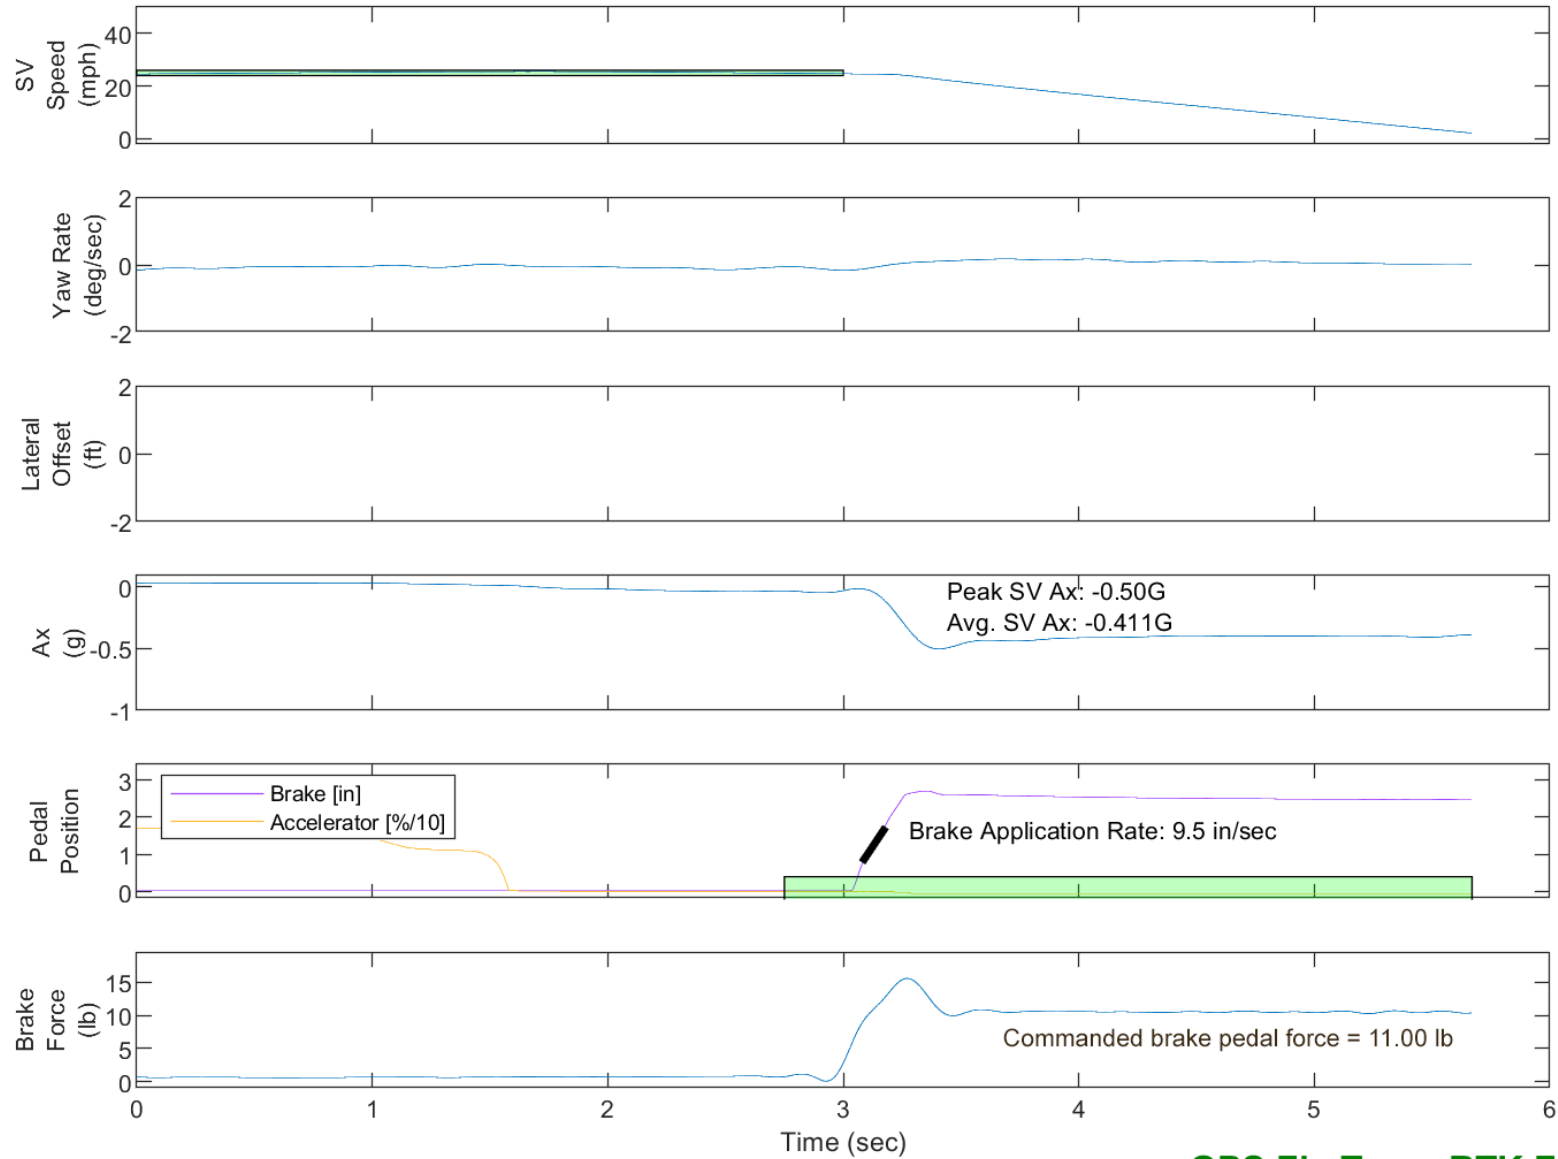

GPS Fix Type: RTK Fixed

Figure E82. Time History for DBS Run 14, Brake Characterization Determination, Hybrid Mode, 25 mph

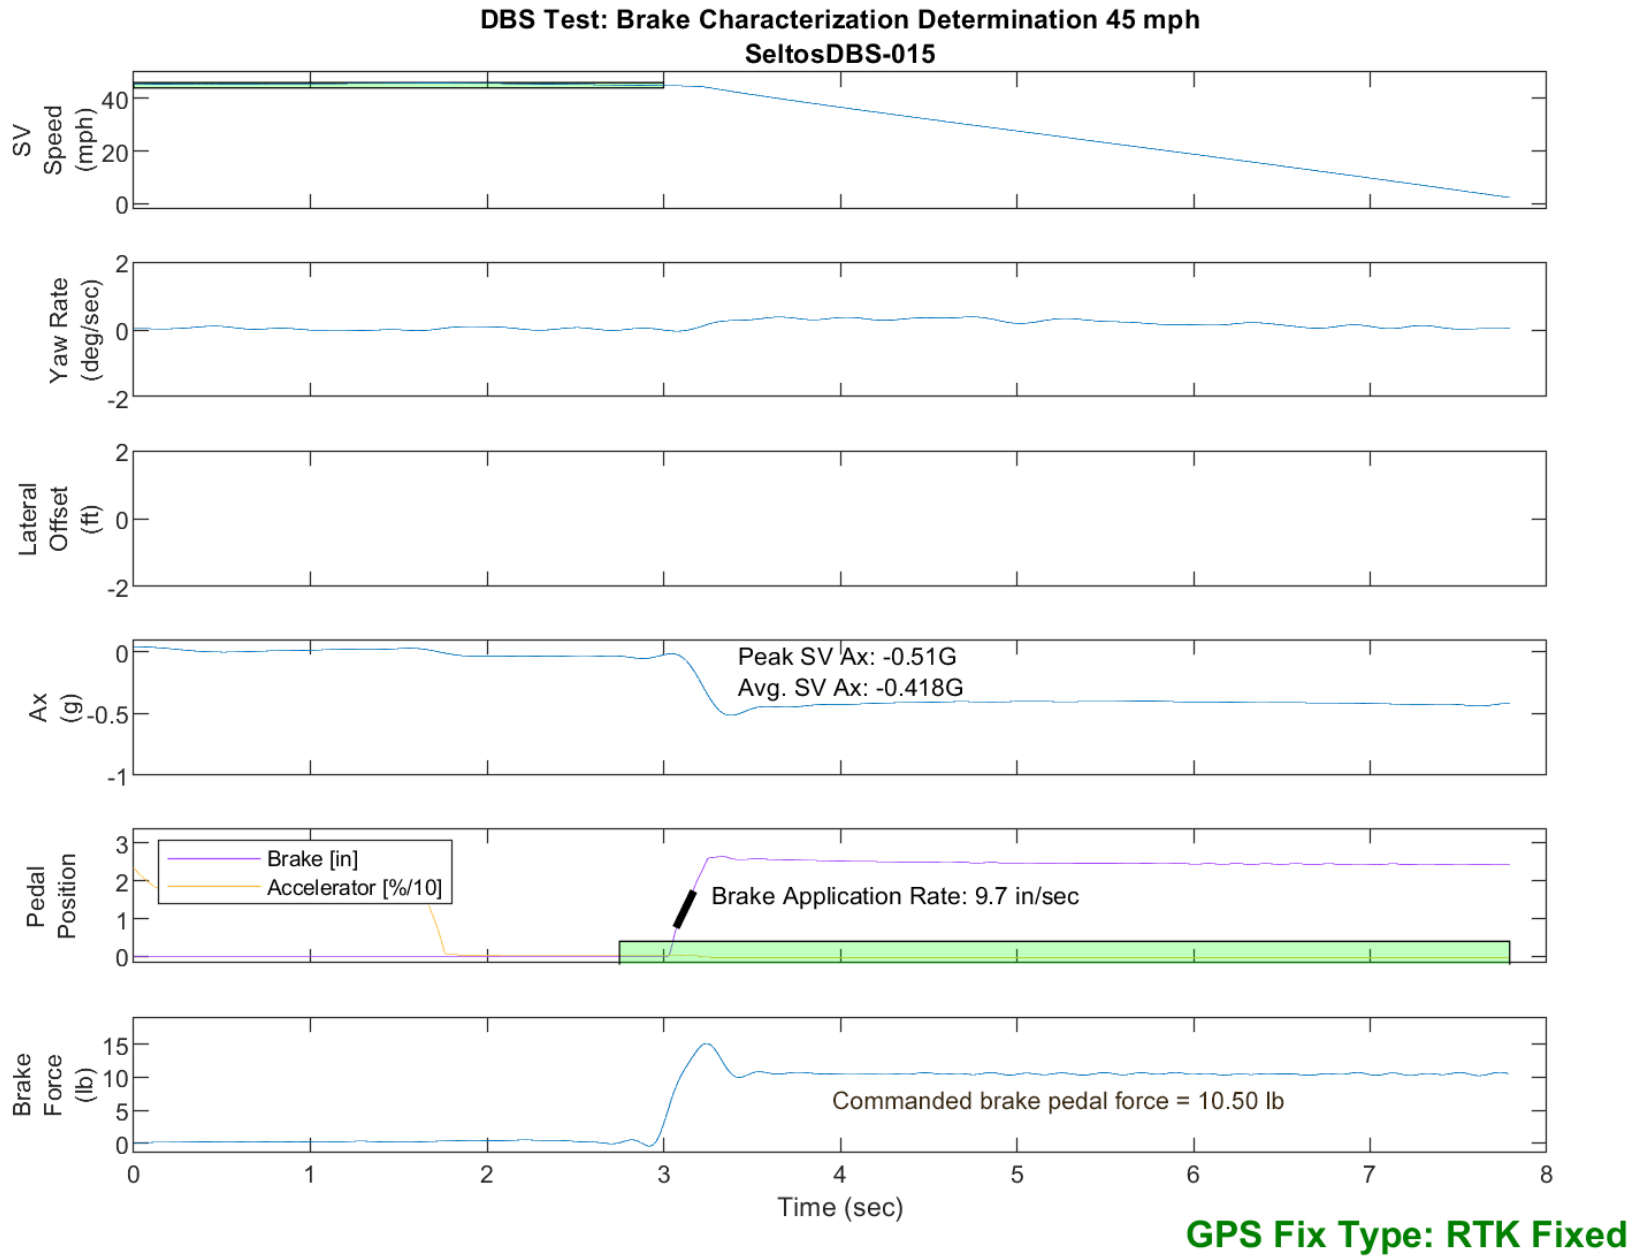


Figure E83. Time History for DBS Run 15, Brake Characterization Determination, Hybrid Mode, 45 mph